



AzureWave AW-HM662 802.11ah Module User Guide

[Home](#) » [AzureWave](#) » AzureWave AW-HM662 802.11ah Module User Guide 

Contents

- [1 AzureWave AW-HM662 802.11ah Module User Guide](#)
- [2 Specifications](#)
- [3 Overview](#)
- [4 Power Supply](#)
- [5 Standalone Mode Operation](#)
- [6 FAQs](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



AzureWave AW-HM662 802.11ah Module User Guide



Specifications

- Product Name: AW-HM662 802.11ah Module EVK
- Module Size: 18 x 24 mm (LGA Module)
- Operating Modes: Host Mode or Standalone Mode

Overview


Device supported

This document supports the AW-HM662 (18 x 24 mm LGA Module). The AW-HM662 test board can be operated in Host Mode or Standalone Mode. You can use Newracom Modem Test Tool for RF performance testing.

Basic Setup and Requirements for Host Mode RF Verification

This section provides detailed information about the settings for the AW-HM662 demo board. The overview of the AW-HM662 demo physical photo and PCB placement (TOP). The description of jumpers' functions and settings on the demo board is as follows:

Azurewave AW-HM662 test board physical photo and PCB placement

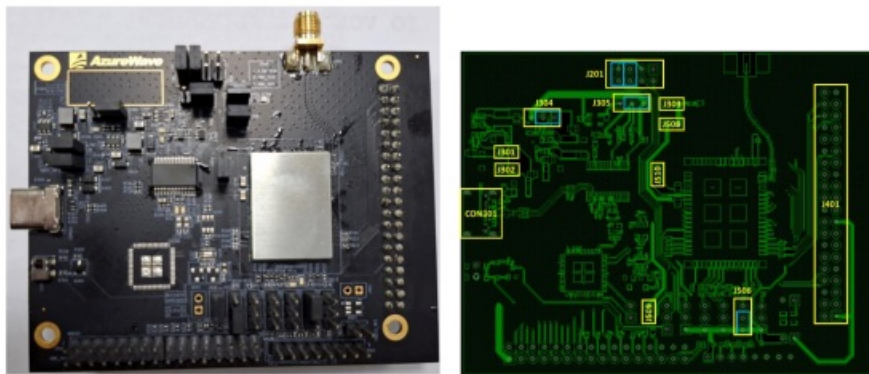

Operation Mode Configurations

AW-HM662 can be operated in Host Mode or Standalone Mode through the setting of jumper J506

Mode = L (Host Mode switch J506 to 2-3)




Mode = H (Standalone Mode switch J506 to 1-2)

Power Supply

- The 5.0V power supply can be provided by a USB Type-C connector (CON301) and short J301.
- The 4.0V power supply (short J304 pin.1 and pin.2) for AW-HM662 pin.5 VDD_FEM is converted from the 5.0V


power supply through the LDO on the demo board. You can measure the current of VDD_FEM by connecting an ammeter in series with J510.


- The 3.3V power supply (J508) for AW-HM662 pin.6 VBAT is converted from the 5V power supply through the LDO on the demo board. You can measure the current of VBAT by connecting an ammeter in series with J508.
- The 3.3V power supply (short J305 pin.2 and pin.3) for VDDIO of AW-HM662 pin.51 is converted from the 5.0V power supply through the LDO on the demo. You can measure the current of VDDIO by connecting an ammeter in series with J509.

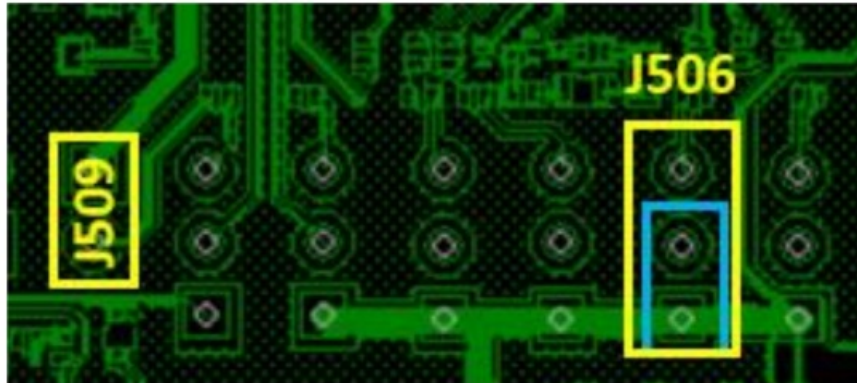

USB to UART (J201)

The USB to UART Bridge IC used in this demo board is FT232RL. Please download and install the FT232RL driver from the FTDI official website before use. Set the UART port (UART0) of AW-HM661 by short-circuiting J201 pin 5 to pin 6 and pin 7 to pin 8.


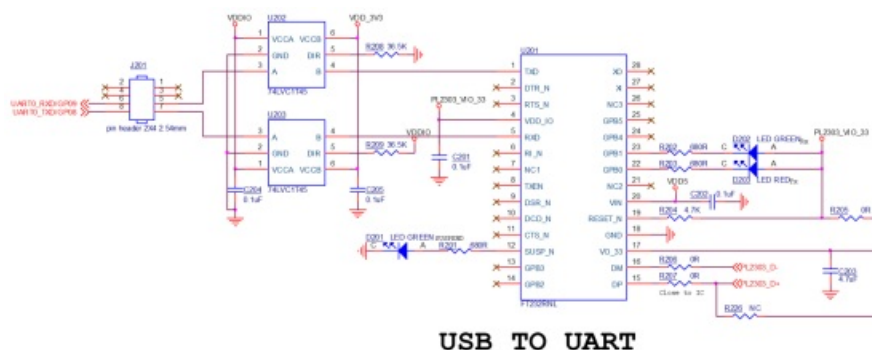


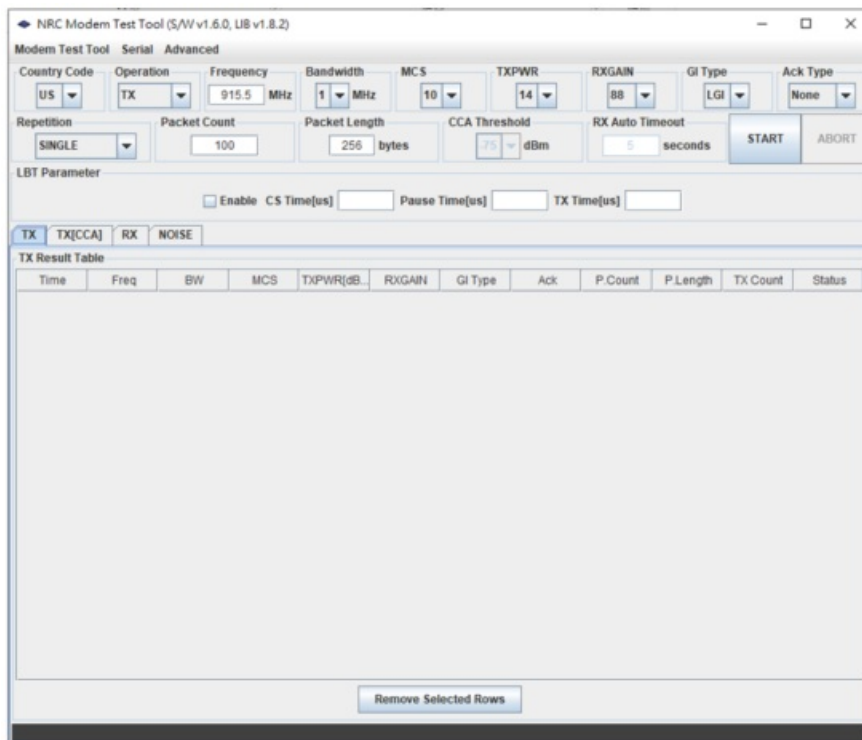

AW-HM662 Demo Board Offers Communication Interface to An External Host.

The 5.0V power supply can be provided by Raspberry Pi4 through connector J401 and short J301 and J302. AW-HM662 can be connected to the Host side via SPI interface. The picture below is a photo of AW HM662 demo board connected to Raspberry Pi4 via J401. Please note that the mode of J506, must be set correctly when operating in Host Mode.

Mode = L (Host Mode switch J506 to 2-3)

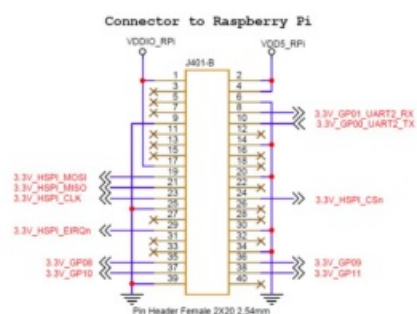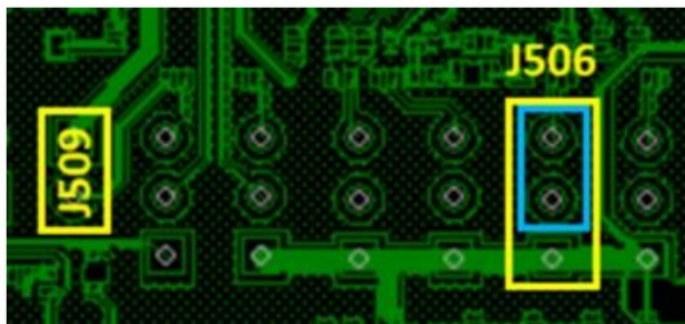


Standalone Mode Operation

This section provides detailed information on how to use AT commands to transmit and receive packets.

Download Standalone AT-CMD Firmware


Set the AW-HM662 demo board to download mode (switch J506 to 2-3). Connect the demo board to the PC using a USB cable, and then execute the Newracom Firmware Flash Tool.

Mode = L (Download Mode switch J506 to 2-3)

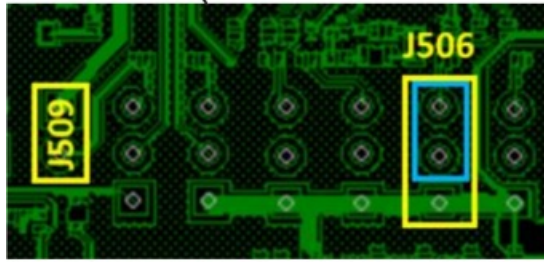

XIP BOOTLOADER PATH


Select nrc7394_standalone_xip_ATCMD_UART.bin and then press START to download the firmware.

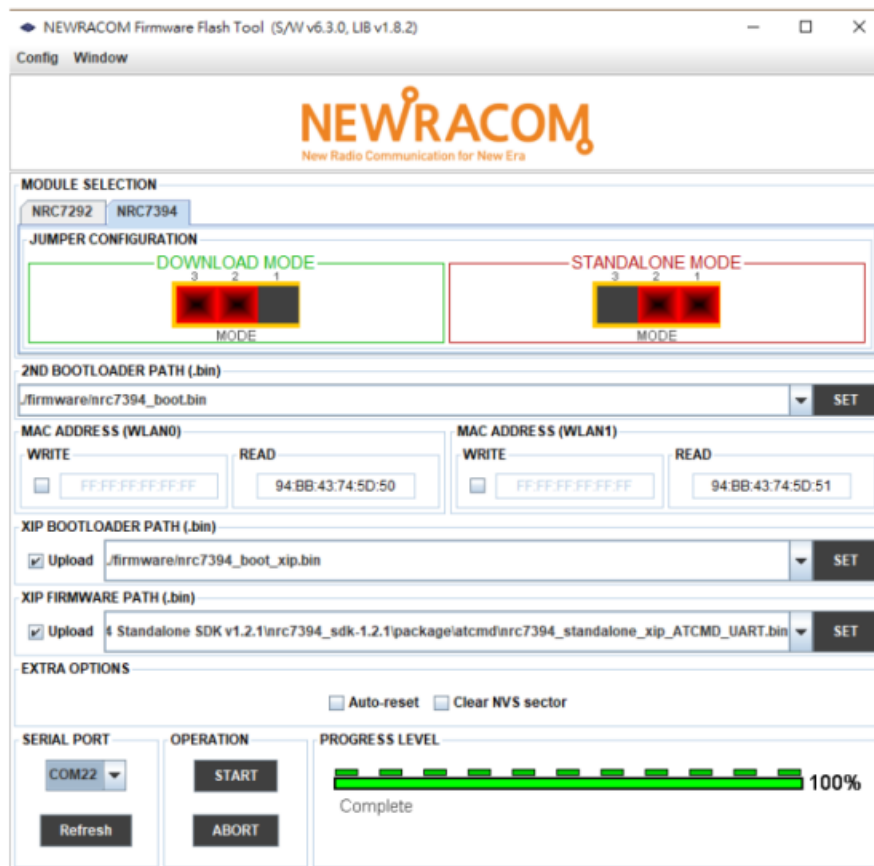


AT Command Application

Set the AW-HM662 demo board to standalone mode (switch J506 to 1-2), and use DuPont cable to connect J201 pin.5 to J502 pin.17, and connect J201 pin.7 to J502 pin.25. Then use a USB cable to connect the demo board to the PC, and the user can execute AT commands through UART1.


Mode = H (Standalone Mode switch J506 to 1-2)

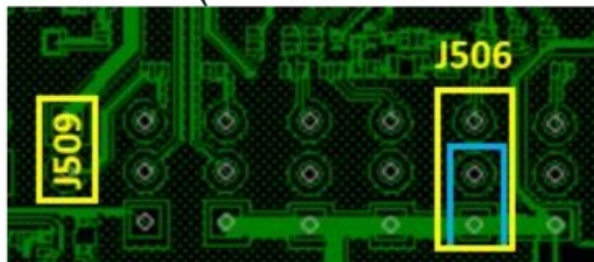

Connect J201 pin.5 to J502 pin.17, and connect J201 pin.7 to J502 pin.25

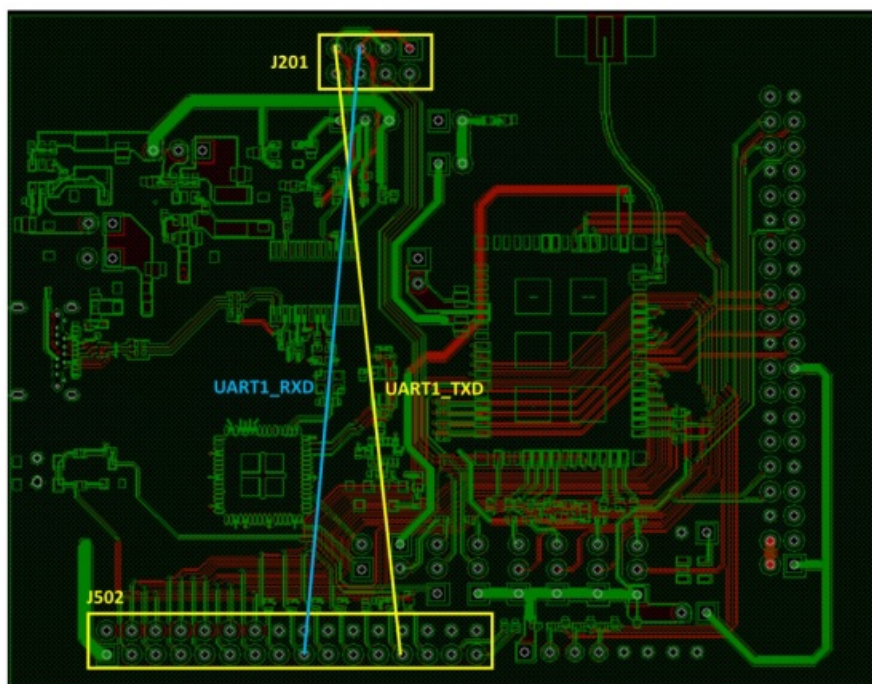

Use the Newracom AT-CMD Test Tool to execute AT command instructions.

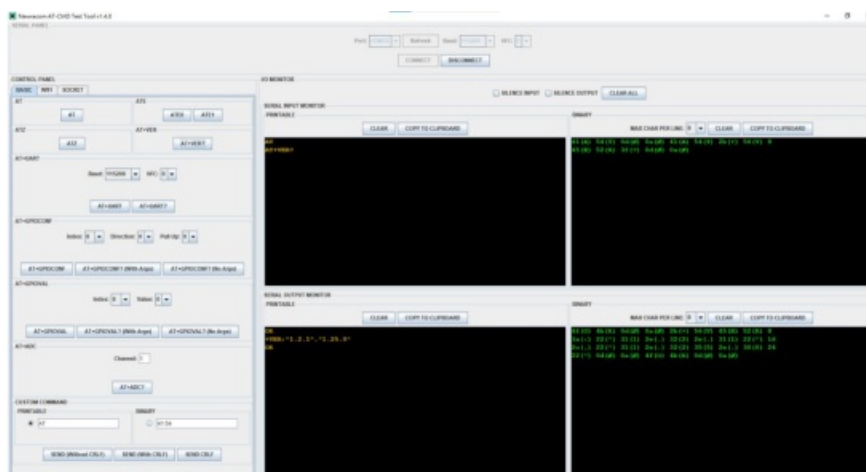


FAQs

Q: Can the AW-HM662 module be used in both Host Mode and Standalone Mode?

A: Yes, the AW-HM662 module can be operated in both Host Mode and Standalone Mode by configuring the jumper settings accordingly.

Documents / Resources

 AW-HM662 802.11ah Module EVK User Guide Rev. 0.1 (For Standard) <small>© 2018 AzureWave Technology Co., Ltd. All rights reserved. This document is the property of AzureWave Technology Co., Ltd. and is confidential. No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, without prior written permission from AzureWave Technology Co., Ltd.</small>	AzureWave AW-HM662 802.11ah Module [pdf] User Guide AW-HM662, AW-HM662 802.11ah Module, AW-HM662, 802.11ah Module, Module
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.