



BATMAIN S17+ Bitcoin Miner Mining Machine Installation Guide

[Home](#) » [BATMAIN](#) » BATMAIN S17+ Bitcoin Miner Mining Machine Installation Guide 

Contents

- 1 BATMAIN S17+ Bitcoin Miner Mining Machine
- 2 Overview
- 3 Specifications
- 4 Setting Up the Server
- 5 Configuring the Server
- 6 Monitoring Your server
- 7 Administering Your Server
- 8 Basic Environmental Requirements:
- 9 Other Environmental Requirements
- 10 FCC Notice (FOR FCC CERTIFIED MODELS):
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

ANTMINER

BATMAIN S17+ Bitcoin Miner Mining Machine



Overview

The S17+ server is Bitmain's newest version in the 17+ server series. Power supply APW9+ is part of S17+ server. All S17+ servers are tested and configured prior to shipping to ensure easy set up.

FRONT VIEW



RARE VIEW





Caution:

1. The equipment must be connected to an earthed mains socket-outlet. The socket-outlet shall be installed near the equipment and shall be easily accessible.
2. The equipment has two power inputs, only by connecting those two power supply sockets simultaneously can the equipment run. When the equipment is powered off, be sure to power off all power inputs.
3. Please refer to the layout above to place your goods in usage in case of any damage.
4. DO NOT remove any screws and cables tied on the product.
5. DO NOT PRESS the metal button on the cover.

S17+ Server Components

The main components and controller front panel of S17+ servers are shown in the following figure:

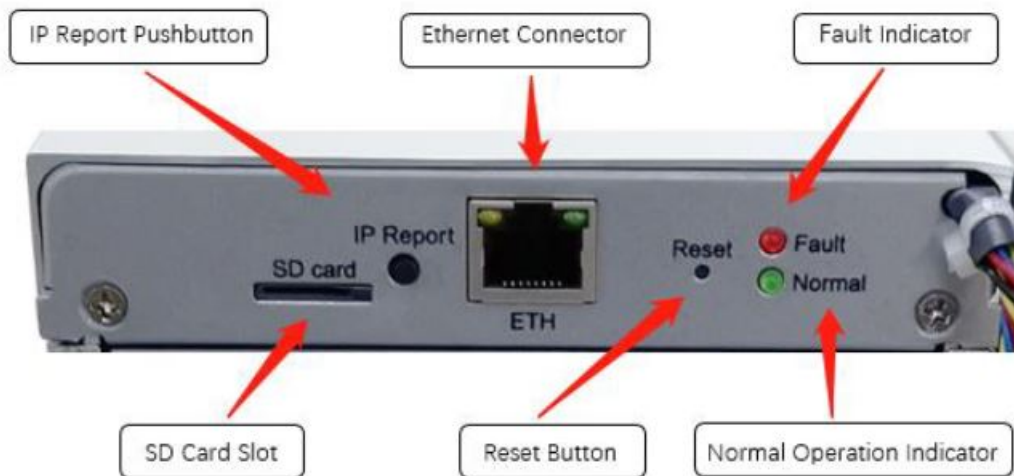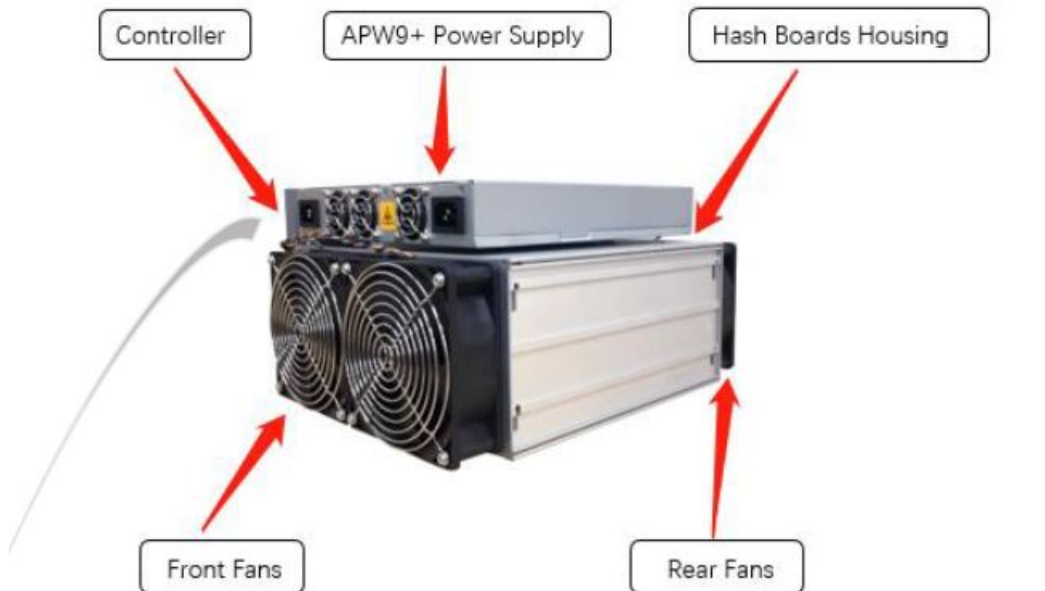

APW9+ Power Supply:



Note:

1. Power supply APW9+ is part of S17+ server. For detailed parameters, please refer to the specifications below.
2. Additional two power cords are needed.


Specifications

Product Glance	Value
Version Model No.	S17+ 266-Aa
Crypto Algorithm/Coins	SHA256/BTC/BCH
Hashrate, TH/s	73.00
Reference power on wall, Watt	2920
Reference power efficiency on wall @ 25°C , J/TH	40.00+10%
Hardware Configuration	
Miner Size (Length*Width*Height, w/o package), mm(1-1)	298.0*175.0*304.0
Net weight, kg (1-2)	10.00


Setting Up the Server

To set up the server:


1. Go to the following site: <https://shop.bitmain.com/support.htm?pid=00720160906053730999PVD2K0vz0693>
2. Download the following file: IPReporter.zip.
3. Extract the file.
4. Right-click IPReporter.exe and run it as Administrator.
5. Select one of the following options:
 1. Shelf, Step, Position – suitable for farm servers to mark the location of the servers.
 2. Default – suitable for home servers.
6. Click Start.

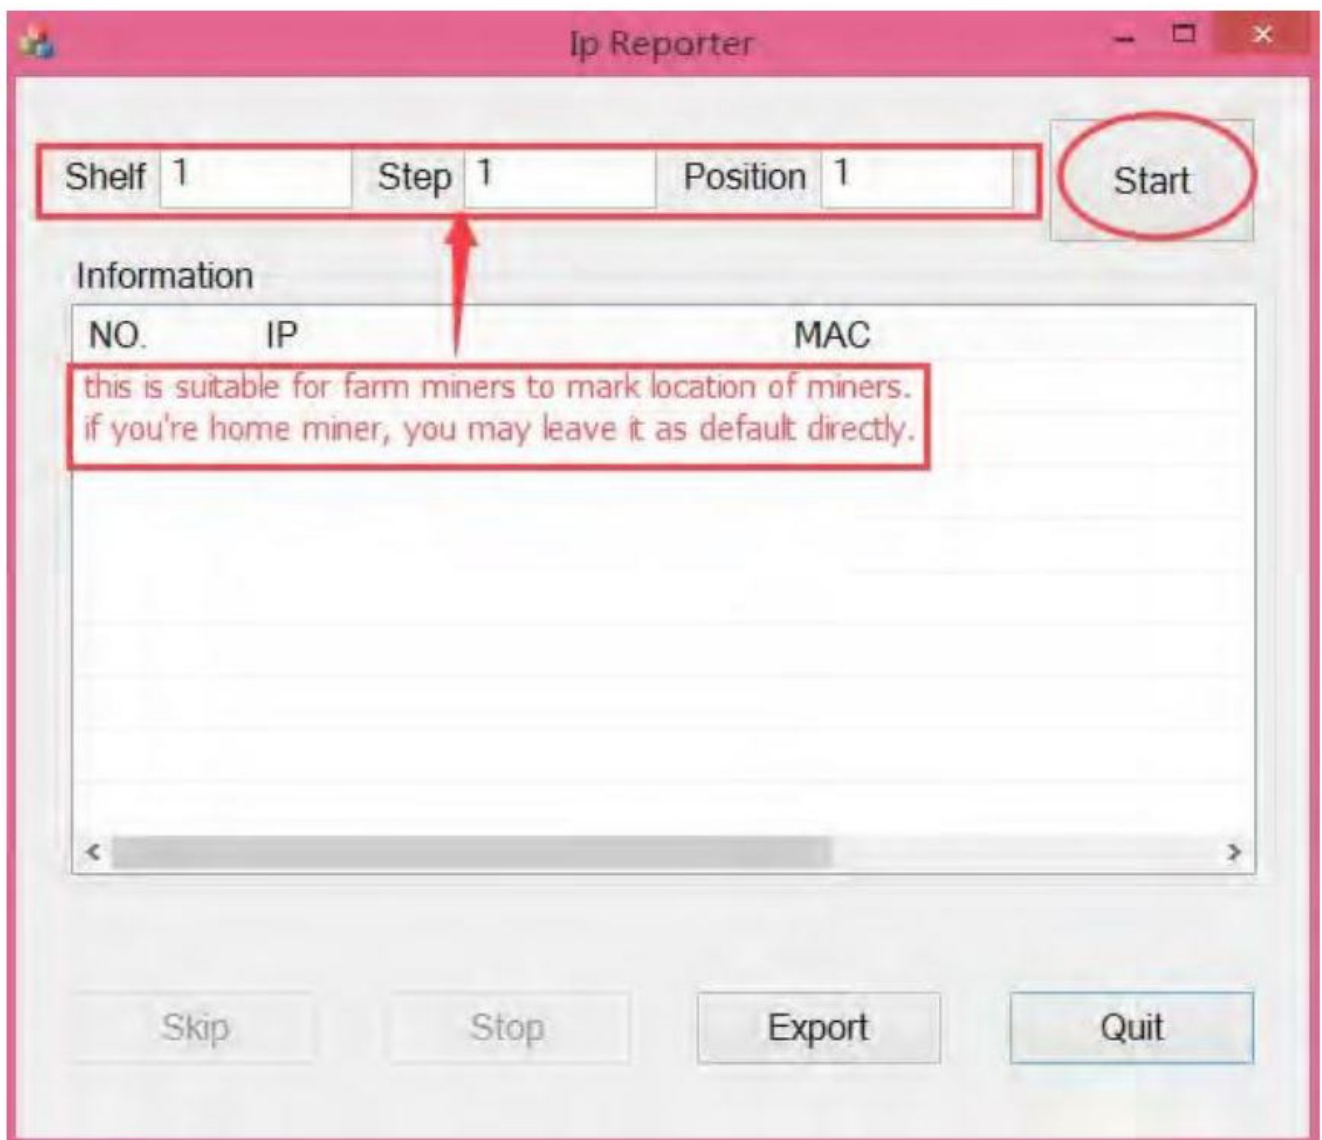


7. On the controller board, click the IP Report button. Hold it down until it beeps (about 5 seconds).

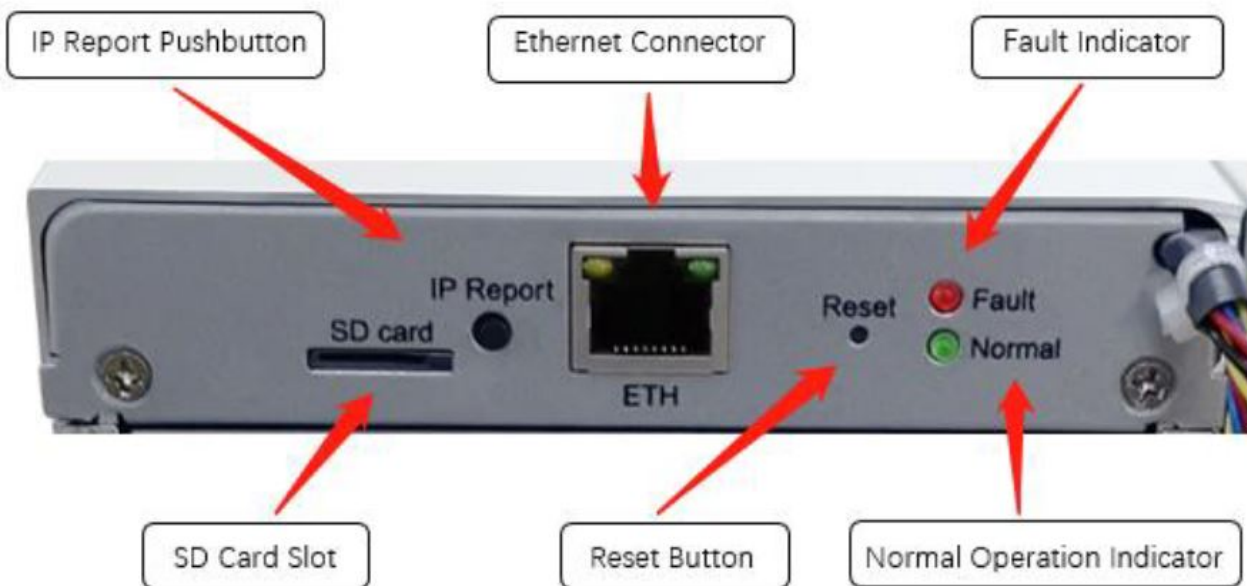

The IP address will be displayed in a window on your computer screen.

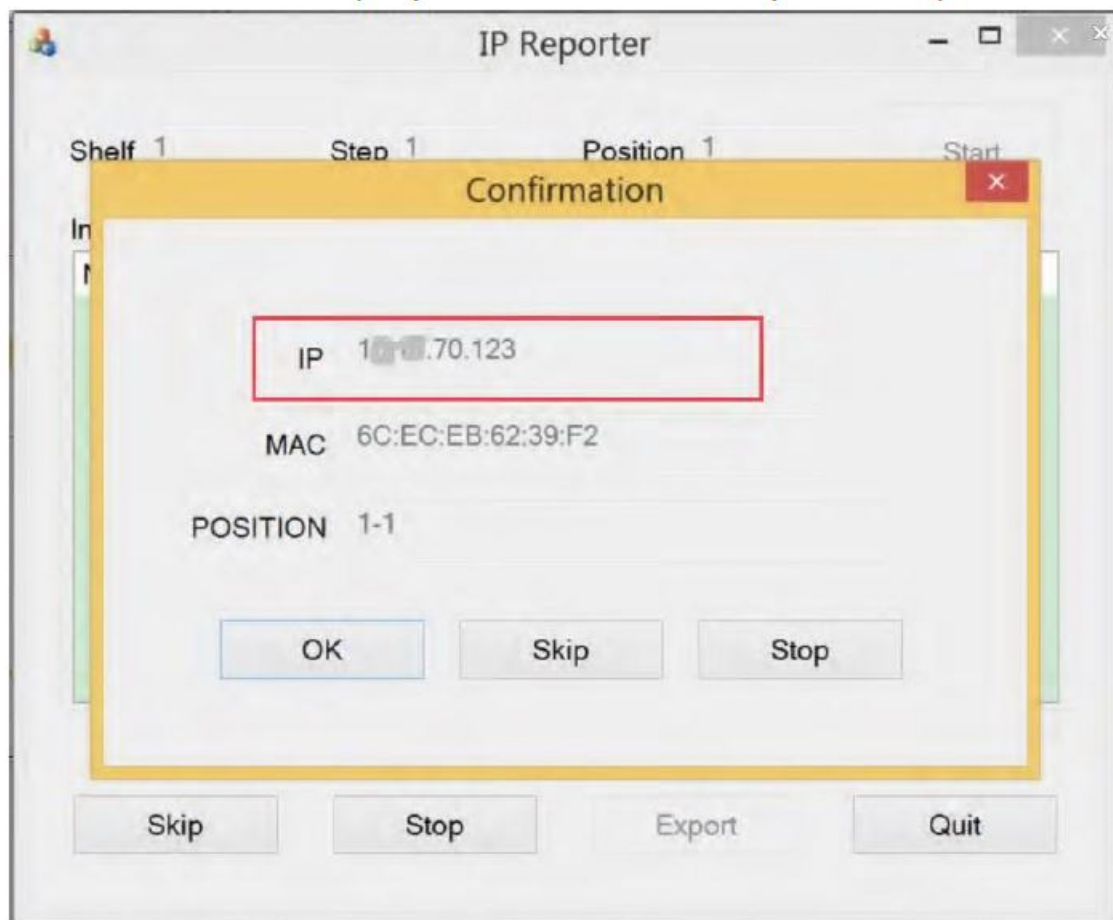

1. In your web browser, enter the IP address provided.
2. Proceed to login using root for both the username and password.
3. In the Network section, you can assign a DHCP IP address (optional).
4. Click Save & Apply.

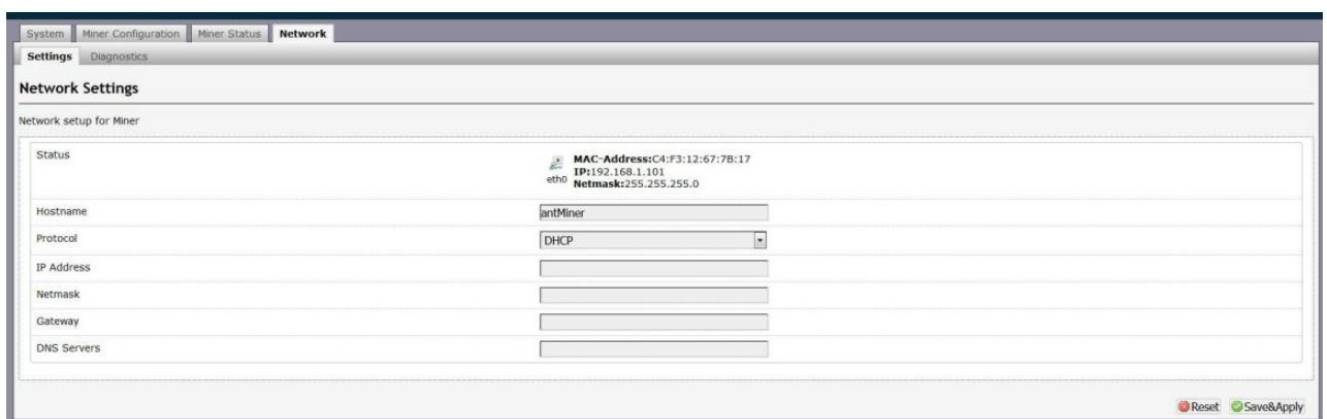


Configuring the Server

Setting Up the Pool

To configure the server:

1. click General Settings.



System

Miner Configuration

Miner Status

Network

Miner General Configuration

Pool 1

URL

Worker

Password

stratum+tcp://stratum.antpool.com:3333

antminer_1

P23

Pool 2

URL

Worker

Password

stratum+tcp://stratum.antpool.com:443

antminer_1

P23

Pool 3

URL

Worker

Password

stratum+tcp://stratum.antpool.com:25

antminer_1

P23

Reset

Save&Apply

2. Set the options according to the following table:

Option	Description
Pool URL	<p>Enter the URL of your desired pool.</p> <p>The S17+ servers can be set up with three mining pools, with decreasing priority from the first pool (pool 1) to the third pool (pool 3).</p> <p>The pools with low priority will only be used if all higher priority pools are offline.</p>
Worker	Your worker ID on the selected pool.
Password	The password for your selected worker.

3. Click **Save & Apply** to save and restart the server.

Monitoring Your server

To check the operating status of your server:

1. Click the status marked below.

[illegible]

2. Monitor your server according to the descriptions in the following table:


Option	Description
ASIC#	Number of chips detected in the chain.
Frequency	ASIC frequency setting.
GH/S(RT)	Hash rate of each hash board (GH/s).
Temp(PCB)	Temperature of each hash board (°C). (Applied only to server with fixed frequency).
Temp(Chip)	Temperature of the chips on each hash board (°C).
ASIC status	<p>One of the following statuses will appear:</p> <ul style="list-style-type: none"> ● O – indicates OK ● X – indicates error ● -- indicates dead

Administering Your Server

Checking Your Firmware Version

To check your firmware version:

1. In System, click the Overview tab.
2. File System Version displays the date of the firmware your server uses. In the examples below, the servers are respectively using firmware version 20191023.

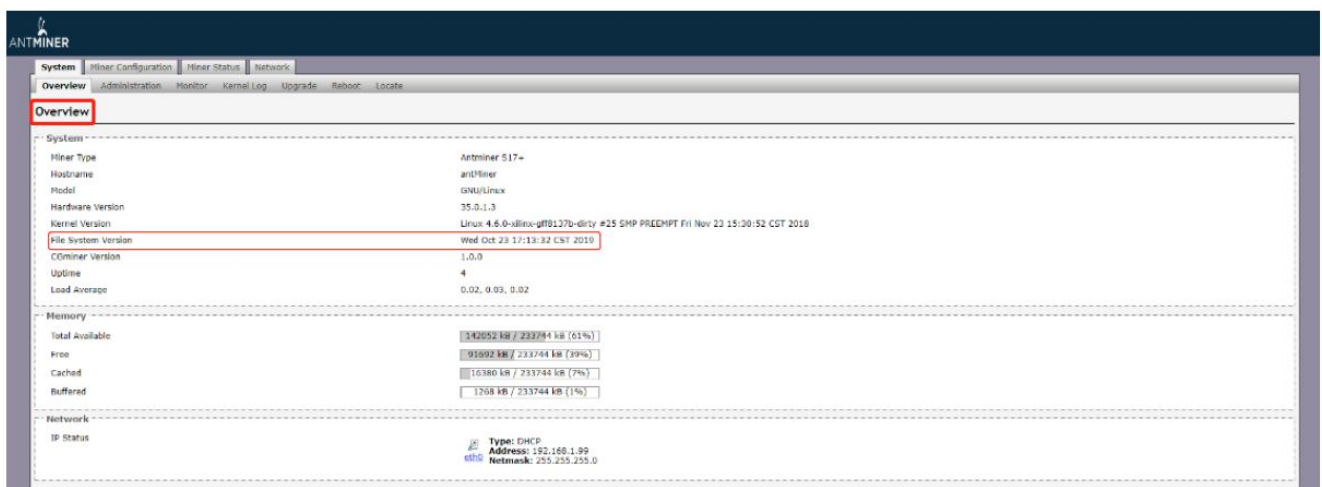

Upgrading Your System

Make sure that the S17+ server remains powered during the upgrade process. If power fails before the upgrade is completed, you will need to return it to Bitmain for repair.

To upgrade the server's firmware:

1. In System, click Upgrade.

The screenshot shows the 'System' tab with the 'Upgrade' sub-tab selected. The page is titled 'Upgrade' and contains two main sections: 'Backup / Restore' and 'Flash new firmware image'. In the 'Backup / Restore' section, there are buttons for 'Generate archive' and 'Perform reset'. Below this, there is a 'Restore backup' section with a file browser button and an 'Upload archive...' button. The 'Flash new firmware image' section has a 'Keep settings' checkbox (which is checked) and a 'Flash image...' button. The page also has a navigation bar at the top with 'System', 'Miner Configuration', 'Miner Status', and 'Network' tabs, and a sub-navigation bar with 'Overview', 'Administration', 'Monitor', 'Kernel Log', 'Upgrade', and 'Reboot'.

2. For Keep Settings:
 1. Select the check box to keep your current settings (default).
 2. Clear the check box to reset the server to default settings.
3. Click the(Browse) button and navigate to the upgrade file. Select the upgrade file, then click Flash image. A message appears notifying you if the S17+ firmware can be upgraded and if yes, will then proceed to flash the image.
4. When the upgrade is completed, the following message appears:

The screenshot shows the 'System' tab with the 'Upgrade' sub-tab selected. The page is titled 'System Upgrade' and displays a message: 'The upgrade installed successfully. Please restart Miner to activate.' Below the message are two buttons: 'Reboot' and 'Go Back'.

5. Click one of the following options:
 1. Reboot – to restart the server with the new firmware.
 2. Go Back – to continue mining with the current firmware. The server will load the new firmware next time when it is restarted.

Modifying Your Password

To change your login password:

1. In System, click the Administration tab.
2. Set your new password, then click Save & Apply.

The screenshot shows the 'System' tab with the 'Administration' sub-tab selected. The page is titled 'Password' and contains a form for changing the administrator password. The form has three input fields: 'Current Password', 'New Password', and 'Confirmation'. Below the form are two buttons: 'Reset' and 'Save&Apply'.

Restoring Initial Settings

To restore your initial settings

1. Turn on the server and let it run for 5 minutes.
2. On the controller front panel, press and hold the Reset button for 10 seconds.

Environmental Requirements

Please run your server in accordance with the following requirements

Basic Environmental Requirements:

Climatic Conditions:

Description	Requirement
Operating Temperature	0-40°C
Operating Humidity	10-90%RH (non-condensing)
Storage Temperature	-20-70°C
Storage Humidity	5-95%RH non-condensing
Altitude	<2000m

Site Requirements of the Server Running Room:

Please keep the server running room away from industrial pollution sources:

For heavy pollution sources such as smelters and coal mines, the distance should be more than 5km.

For moderate pollution sources such as chemical industries, rubber and electroplating industries, the distance should be more than 3.7km.

For light pollution sources such as food factories and leather processing factories, the distance should be more than 2km.

If unavoidable, the site should be chosen in the perennial upwind direction of the pollution source.

Please do not set your location within 3.7km from the seaside or the salt lake. If unavoidable, it should be built as airtight as possible, equipped with air conditioning for cooling.

. Electromagnetic Environmental Conditions:

Please keep your site away from transformers, high-voltage cables, transmission lines and high-current equipment, for example, there should be no high-power AC transformers (>10KA) within 20 meters, and no high-voltage power lines within 50 meters. Please keep your site away from high-power radio transmitters, for example, there should be no high-power radio transmitters (>1500W) within 100 meters.

Other Environmental Requirements

The server running room shall be free of explosive, conductive, magnetically conductive and corrosive dust. The requirements of mechanical active substances are shown below:

Requirements of Mechanical Active Substances

Mechanical Active Substance	Requirement
Sand	$\leq 30\text{mg/m}^3$
Dust (suspended)	$\leq 0.2\text{mg/m}^3$
Dust (deposited)	$\leq 1.5\text{mg/m}^2\text{h}$

Requirements of Corrosive Gas

Corrosive Gas	Unit	Concentration
H ₂ S	ppb	< 3
SO ₂	ppb	< 10
Cl ₂	ppb	< 1
NO ₂	ppb	< 50
HF	ppb	< 1
NH ₃	ppb	< 500
O ₃	ppb	< 2
Note: ppb (part per billion) refers to the unit of concentration 1ppb stands for the volume ratio of part per billion.		

Regulations:

FCC Notice (FOR FCC CERTIFIED MODELS):

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Note:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

EU WEEE: Disposal of Waste Equipment by Users in Private Household in the European Union

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Documents / Resources

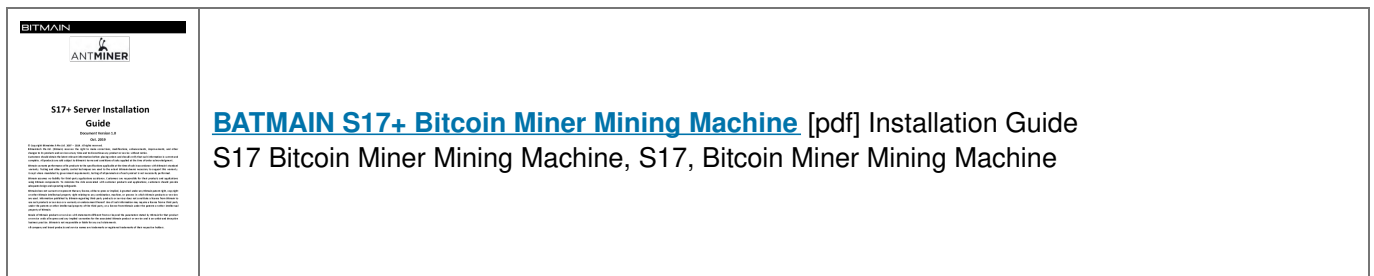

References

-  [BITMAIN](#)
-  [BITMAIN](#)
-  [BITMAIN](#)

Manuals+,