

Beijer
ELECTRONICS
**GT-5442 PWM
Output Module**




Beijer ELECTRONICS GT-5442 PWM Output Module User Manual

[Home](#) » [Beijer ELECTRONICS](#) » Beijer ELECTRONICS GT-5442 PWM Output Module User Manual 

Contents

- 1 [Beijer ELECTRONICS GT-5442 PWM Output Module](#)
- 2 [Product Usage Instructions](#)
- 3 [FAQ](#)
- 4 [About This Manual](#)
- 5 [Safety](#)
- 6 [About the G-series System](#)
- 7 [Specifications](#)
- 8 [Wiring Diagram](#)
- 9 [LED Indicator](#)
- 10 [Mapping Data Into the Image Value](#)
- 11 [Parameter Data](#)
- 12 [Hardware Setup](#)
- 13 [Documents / Resources](#)
 - 13.1 [References](#)
- 14 [Related Posts](#)

Beijer
ELECTRONICS

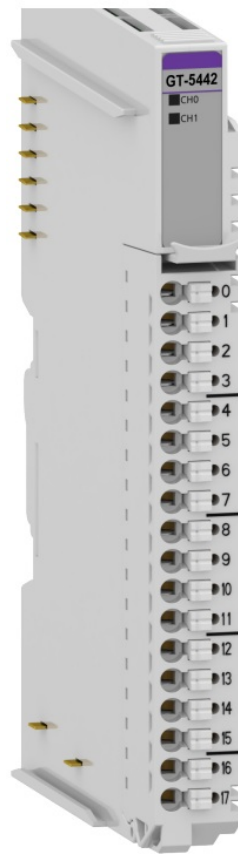

Specifications

- **Channels:** 2
- **Voltage:** 24 VDC
- **Current:** 0.5 A
- **Type:** Source
- **Connection:** Cage clamp
- **Terminal:** 18 pt removable terminal

Product Usage Instructions

About the G-series System

- The GT-5442 PWM Output Module is designed to work with the G-series system. It allows for IO process data mapping for efficient system operation.
- The module meets environmental specifications and has general and output specifications that ensure reliable performance.

Space Requirements

- Ensure adequate space around the module for ventilation and maintenance purposes.

Mounting

- Mount the module securely to a DIN rail using appropriate mounting hardware.

Connecting Cables

- Connect cables to the removable terminal block, following the provided instructions to ensure proper connections.

FAQ

Q: What do the symbols in the manual mean?

A: The symbols indicate different levels of importance and provide information on safety precautions and key details about the product.





Q: How should I handle electrostatic discharge?

A: Avoid touching conductive components and ensure proper grounding to prevent damage to electronic components.

About This Manual

This manual contains information on the software and hardware features of the Beijer Electronics GT-5442 PWM Output Module. It provides in-depth specifications, and guidance on the installation, setup, and usage of the product.

Symbols Used in This Manual

- This publication includes Warning, Caution, Note and Important icons where appropriate, to point out safety-related, or other important information.
- The corresponding symbols should be interpreted as follows.
-  **WARNING** The Warning icon indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury and major damage to the product.
-  **CAUTION** The Caution icon indicates a potentially hazardous situation that, if not avoided, could result in minor or moderate injury, and moderate damage to the product.
-  **NOTE** The Note icon alerts the reader to relevant facts and conditions.
-  **IMPORTANT** The Important icon highlights important information.

Safety

- Before using this product, please read this manual and other relevant manuals carefully. Pay full attention to safety instructions!
- In no event will Beijer Electronics be responsible or liable for damages resulting from the use of this product?
- The images, examples, and diagrams in this manual are included for illustrative purposes.
- Because of the many variables and requirements associated with any particular installation, Beijer Electronics cannot take responsibility or liability for actual use based on the examples and diagrams.

Product Certifications

The product has the following product certifications.



General Safety Requirements


WARNING

- Do not assemble the products and wires with power connected to the system. Doing so causes an “arc flash”, which can result in unexpected dangerous events (burns, fire, flying objects, blast pressure, sound blast, heat).
- Do not touch terminal blocks or IO modules when the system is running. Doing so may cause electric shock, short circuit, or malfunction of the device.
- Never let external metallic objects touch the product when the system is running. Doing so may cause electric shock, short circuit, or malfunction of the device.
- Do not place the product near inflammable material. Doing so may cause a fire.
- All wiring work should be performed by an electrical engineer.
- When handling the modules, ensure that all persons, the workplace and the packing are well grounded. Avoid touching conductive components, the modules contain electronic components that may be destroyed by electrostatic discharge.

CAUTION

- Never use the product in environments with temperatures over 60°C. Avoid placing the product in direct sunlight.
- Never use the product in environments with over 90% humidity.
- Always use the product in environments with pollution degree 1 or 2.
- Use standard cables for wiring.

About the G-series System

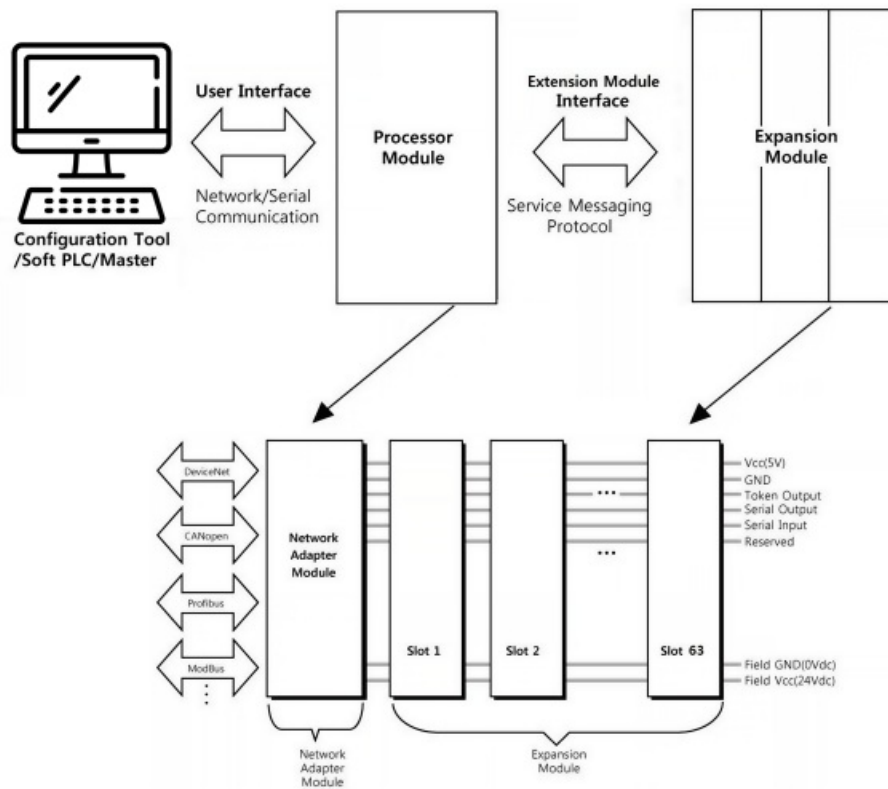


System Overview

- **Network Adapter Module** – The network adapter module forms the link between the field bus and the field devices with the expansion modules. The connection to different field bus systems can be established by each of the corresponding network adapter modules, e.g., for MODBUS TCP, Ethernet IP, EtherCAT, PROFINET, CC-Link IE Field, PROFIBUS, CANopen, DeviceNet, CC-Link, MODBUS/Serial, etc.
- **Expansion Module** – Expansion module types: Digital IO, Analog IO, and Special modules.
- **Messaging** – The system uses two types of messaging: Service messaging and IO messaging.

IO Process Data Mapping

- An expansion module has three types of data: IO data, configuration parameter, and memory register. The data exchange between the network adapter and the expansion modules is made via IO process image data by internal protocol.

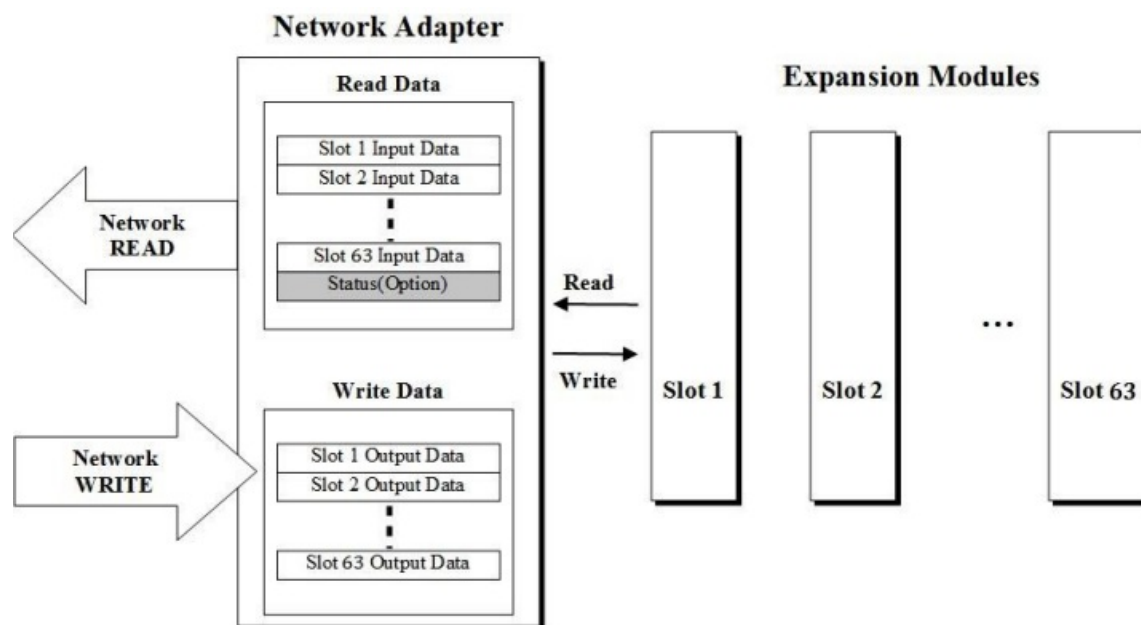

Data flow between network adapter (63 slots) and expansion modules

- The input and output image data depend on the slot position and the data type of the expansion slot.
- The ordering of input and output process image data is based on the expansion slot position. Calculations for this arrangement are included in the manuals for network adapters and programmable IO modules.
- Valid parameter data depends on the modules in use. For example, analog modules have settings of either 0-20 mA or 4-20 mA, and temperature modules have settings such as PT100, PT200, and PT500.
- The documentation for each module describes the parameter data.

Specifications


Environmental Specifications

Operating temperature	-20°C – 60°C
UL temperature	-20°C – 60°C
Storage temperature	-40°C – 85°C
Relative humidity	5% – 90% non-condensing
Mounting	DIN rail
Shock operating	IEC 60068-2-27 (15G)
Vibration resistance	IEC 60068-2-6 (4 g)
Industrial emissions	EN 61000-6-4/A11: 2011
Industrial immunity	EN 61000-6-2: 2019
Installation position	Vertical and horizontal
Product certifications	CE, FCC, UL, cUL

General Specifications

Power dissipation	Max. 75 mA @ 5 VDC
Isolation	I/O to Logic: Photocoupler isolation Field power: Non-isolation
UL field power	Supply voltage: 24 VDC nominal, Class 2
Field power	Supply voltage: 24 VDC nominal Voltage range: 15-30 VDC Power dissipation: Max. 10 mA @ 24 VDC except for load
Single wire	I/O Cable Max. 0.823mm ² (AWG18)
Weight	63 g
Module size	12 mm x 109 mm x 70 mm

Dimensions

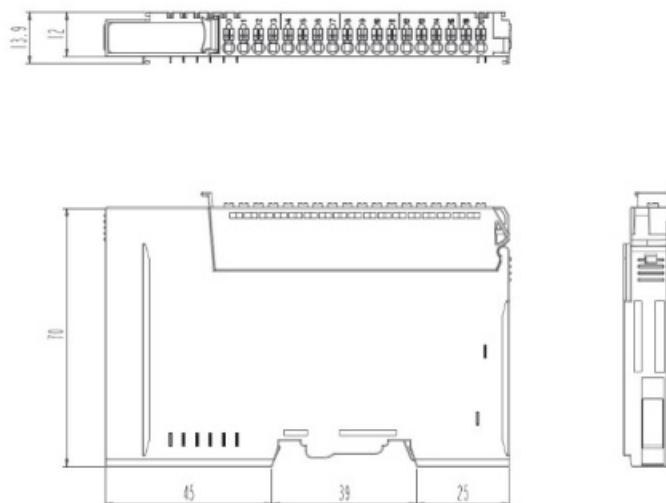


Module dimensions (mm)

Output Specifications

Number of channels	2 channels
Number of outputs	2 outputs, push-pull type
Indicators	2 green pulse output LEDs
Output voltage	Nominal 24 VDC (depends on field power)
Output current	0.5 A per channel, 1.0 A per module Automatically switch current (sink/source) according to external load Operating temperature: -40 – 45 °C: Max 0.5 A per channel 45 – 60 °C: Max 0.3 A per channel
Pulse output frequency	1-5 kHz \pm 0.5 %
Pulse output duty	0.0 – 100.0 % \pm 1.0 % (0.1 % / 1 LSB), Ton > 1 us, Toff > 1 us
Protection	Short protection
Common type	2 common (field power 0 V is common)

Wiring Diagram

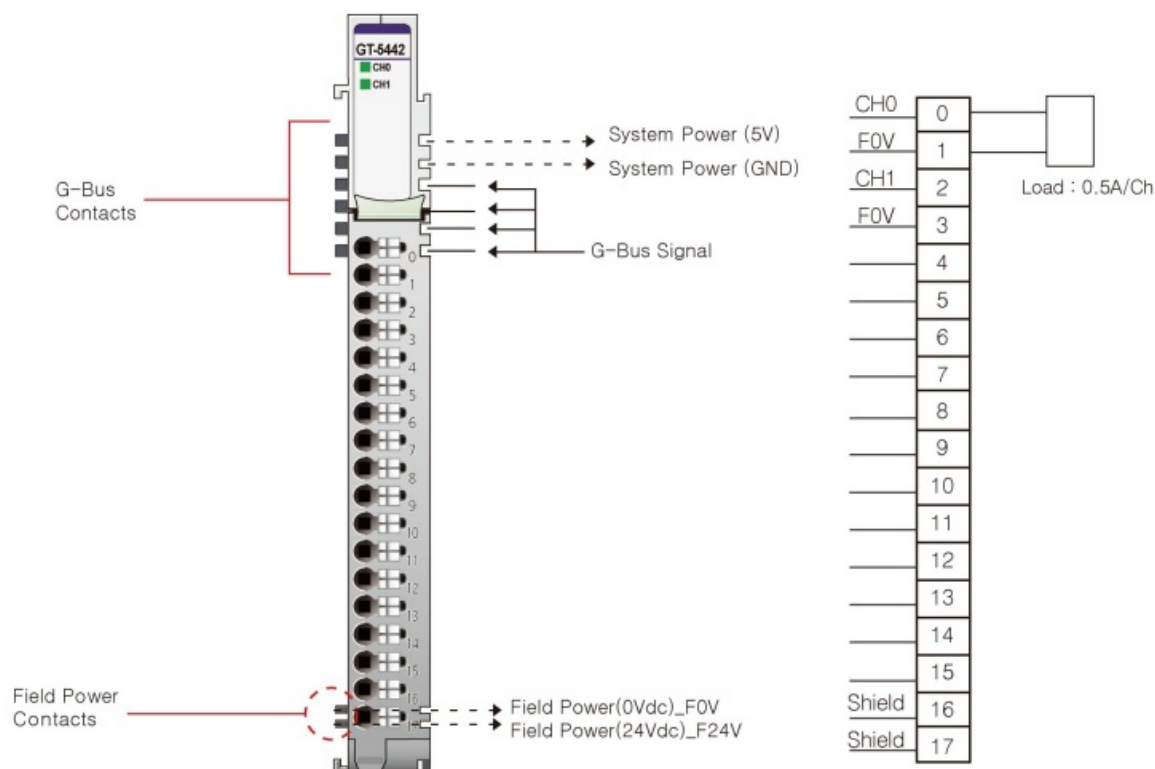

NOTE Automatically switch current (sink/source) according to external load.

Pin no.	Signal description
0	PWM output channel #0
1	Field Power 0 V, common
2	PWM output channel #1
3	Field Power 0 V, common
4	Not connected
5	Not connected
6	Not connected
7	Not connected
8	Not connected
9	Not connected
10	Not connected
11	Not connected
12	Not connected

Pin no.	Signal description
13	Not connected
14	Not connected
15	Not connected
16	Shield
17	Shield

LED Indicator



LED no.	LED function/description	LED color
0	PMW output channel #0	Green
1	PMW output channel #1	Green

Channel Status

Status	LED	Indicates
No signal	Off	No output signal
On signal	Green	Normal operation

Mapping Data Into the Image Value

Input image value

Bit no.	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Byte 0	Reserved							
Byte 1	Reserved							

Output image value

Bit no.	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Byte 0	Frequency CH#0, low byte							
Byte 1	Frequency CH#0, high byte							
Byte 2	Duty CH#0, low byte							
Byte 3	Duty CH#0, high byte							
Byte 4	Frequency CH#1, low byte							
Byte 5	Frequency CH#1, high byte							
Byte 6	Duty CH#1, low byte							
Byte 7	Duty CH#1, high byte							

NOTE Range of each Duty is 0 (0.0 %) – 1000 (100.0%). Ex. If the Duty value is 365, then the duty rate is 36.5 %.

Parameter Data

Valid parameter length: 2 Bytes

But no.	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Byte 0	Reserved							
Byte 1	Reserved							

Hardware Setup


- **CAUTION** Always read this chapter before installing the module!
- **CAUTION** Hot surface! The surface of the housing can become hot during operation. If the device is used in high ambient temperatures, always let the device cool down before touching it.
- **CAUTION** Working on energized devices can damage the equipment! Always turn off the power supply before working on the device.

Space Requirements


- The following drawings show the space requirements when installing the G-series modules. The spacing creates space for ventilation and prevents conducted electromagnetic interference from influencing the operation.
- The installation position is valid vertical and horizontal. The drawings are illustrative and may be out of

proportion.

- **CAUTION** NOT following the space requirements may result in damaging the product.

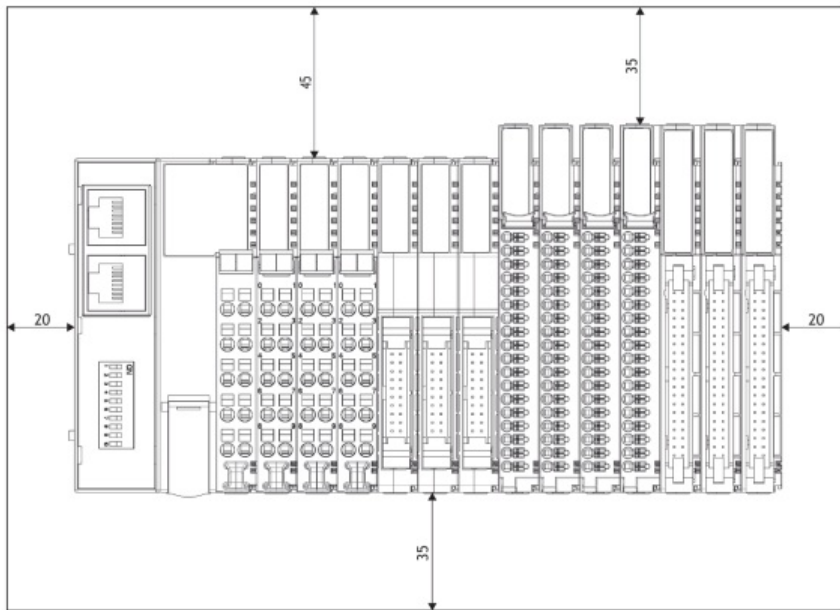

Vertical and horizontal space requirements

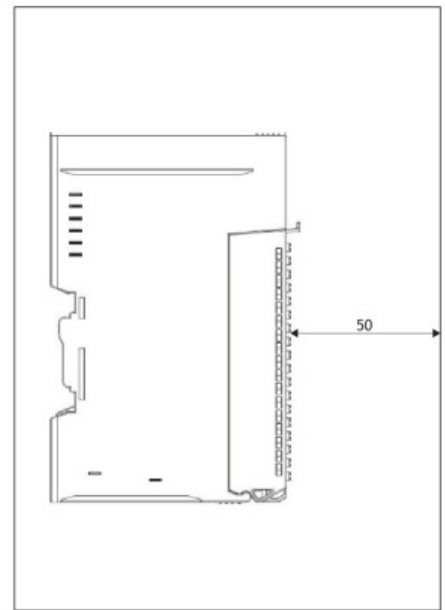

Required distance to door

Mount Module to DIN Rail

- The following chapters describe how to mount the module to the DIN rail.
- **CAUTION** The module must be fixed to the DIN rail with the locking levers.

Mount GL-9XXX or GT-XXXX Module

- The following instructions apply to these module types.
- GL-9XXX
- GT-1XXX
- GT-2XXX
- GT-3XXX
- GT-4XXX
- GT-5XXX
- GT-7XXX
- **NOTE** GN-9XXX modules have three locking levers, one at the bottom and two on the side. For mounting instructions, see the chapter Mount GN-9XXX Module below.




Mount to DIN rail




Dismount from DIN rail

Mount GN-9XXX Module

- To mount or dismount a network adapter or programmable IO module with the product name GN-9XXX, for example GN-9251 or GN-9371, see the following instructions.

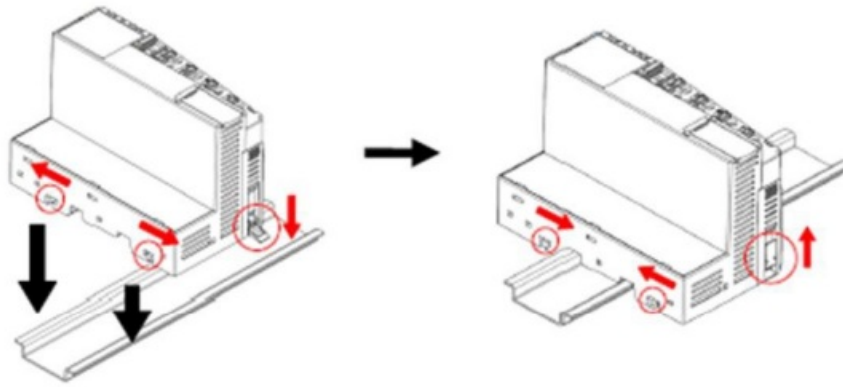


Mount to DIN rail

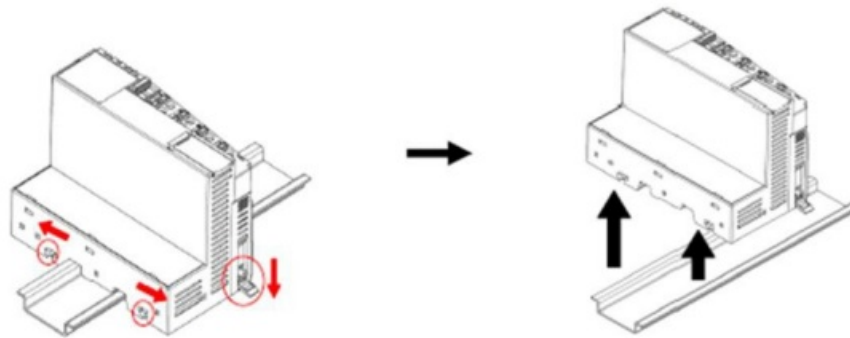


Dismount from DIN rail

Mount Removable Terminal Block

- To mount or dismount a removable terminal block (RTB), see the instructions below.

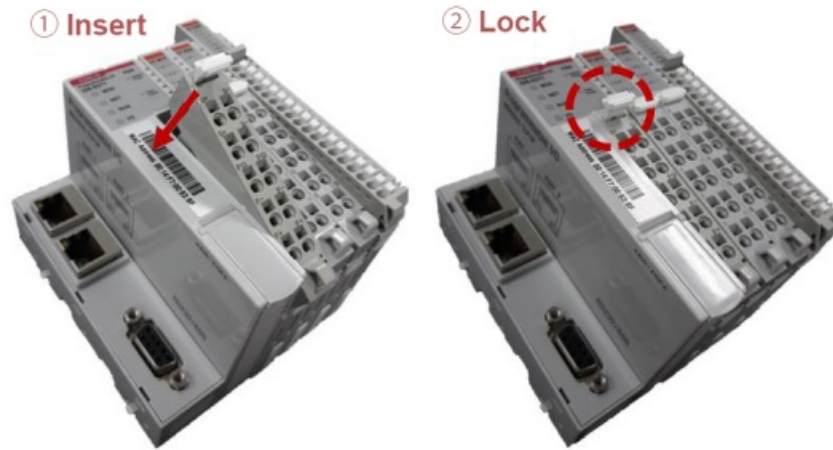

Mount a removable terminal block

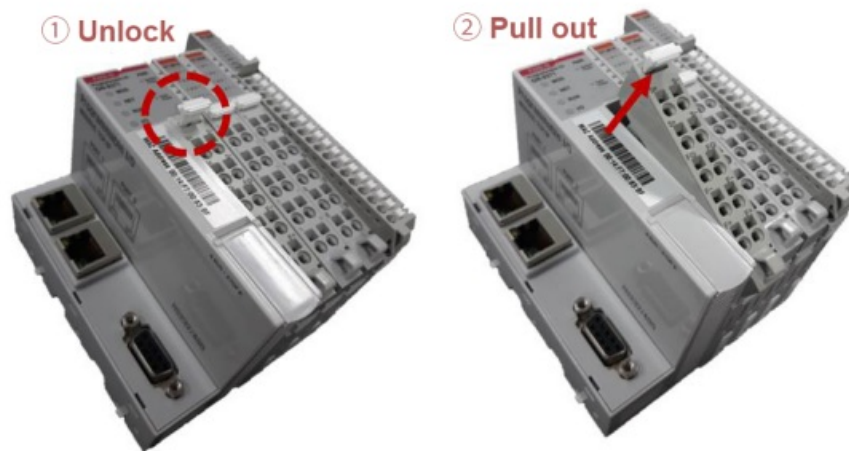


Dismount a removable terminal block

Connect Cables to Removable Terminal Block


- To connect or disconnect cables to/from the removable terminal block (RTB), see the instructions below.

WARNING

- Always use the recommended supply voltage and frequency to prevent damage to the equipment and ensure optimal performance.

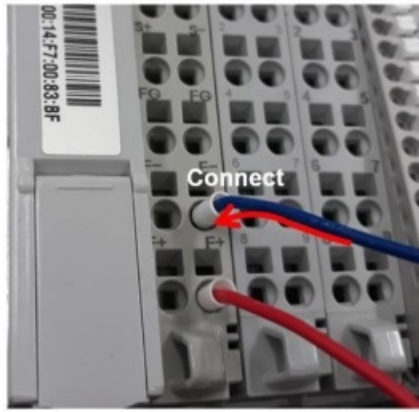

Connect cable

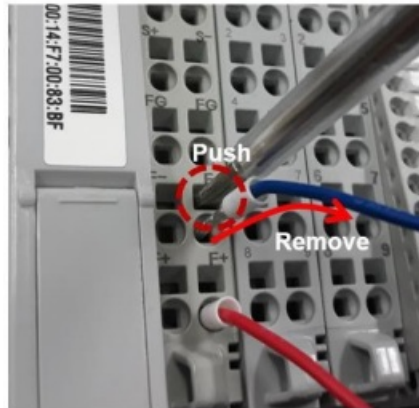


Disconnect cable

Copyright © 2023 Beijer Electronics AB. All rights reserved

- The information in this document is subject to change without notice and is provided as available at the time of printing. Beijer Electronics AB reserves the right to change any information without updating this publication.
- Beijer Electronics AB assumes no responsibility for any errors that may appear in this document. All examples in this document are only
- intended to improve understanding of the functionality and handling of the equipment. Beijer Electronics AB cannot assume any liability if these examples are used in real applications.
- Because of the wide range of applications for this software, users must acquire sufficient knowledge to ensure that it is correctly used in their specific application.
- Persons responsible for the application and the equipment must themselves ensure that each application complies with all relevant requirements, standards, and legislation for configuration and safety.
- Beijer Electronics AB will accept no liability for any damage incurred during the installation or use of equipment mentioned in this document. Beijer Electronics AB prohibits all modification, changes, or conversion of the equipment.
- **Head Office**
- **Beijer Electronics AB**
- **Box 426**
- **201 24 Malmö, Sweden**
- www.beijerelectronics.com / +46 40 358600
- **Beijer Electronics, Doc ID: 131631**

Documents / Resources

	<p>Beijer ELECTRONICS GT-5442 PWM Output Module [pdf] User Manual GT-5442 PWM Output Module, GT-5442, PWM Output Module, Output Module, Module</p>
---	--

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.