



ARIBBMPB Concealed Cistern Manconcis Push Button



better bathrooms ARIBBMPB Concealed Cistern Manconcis Push Button User Manual

[Home](#) » [Better Bathrooms](#) » better bathrooms ARIBBMPB Concealed Cistern Manconcis Push Button User Manual 

Contents

- [1 better bathrooms ARIBBMPB Concealed Cistern Manconcis Push Button](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Parts list](#)
- [5 Cistern dimensions](#)
- [6 Technical specifications](#)
- [7 Installation steps](#)
- [8 Trouble Shooting](#)
- [9 Maintenance](#)
- [10 Cleaning](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)



better bathrooms ARIBBMPB Concealed Cistern Manconcis Push Button



Product Information

Specifications:

- Model: Concealed Cistern MANCONCIS
- Push Button Models: ARIBBMPB, ARICHMPB, ARIMBMPB
- Version: V1 23.7.23

Product Usage Instructions

Installation of Push Button:

The push button can be installed on the top and front panel of the vanity excluding the marked square areas.

Flush Operation:

To initiate a half flush, press the small button area. For a full flush, press the big button area.

Maintenance:

For maintenance tasks, access the cistern tank by removing panels/tops on your WC unit. Turn off the water supply before proceeding.

Inlet Valve Adjustment:

- Twist the adjustment screw to adjust the inlet valve.

Inlet Valve Washer Cleaning:

- Unscrew the washer section, clean it under warm water using a small brush, and then reassemble.

Flush Valve Removal and Adjustment:

- To adjust water volume, move the slider on the flush valve.
- If needed, remove the flush valve to check or clean the washer following the provided steps.

Push Button Operation Failure:

If the push button does not bounce back after flushing, it may need replacement.

Cleaning:

Wipe the push button surface with a clean damp cloth. Avoid using abrasive cleaning agents. Rinse immediately if harsh chemicals come in contact.

- Multi-person assembly
- Tools required
- We always recommend using professional tradespeople to install your product

Congratulations on your purchase

And welcome to our growing gang of savvy shoppers

We're on a mission to bring you extraordinary bathroom products, for less. From modern to traditional style ceramics, plus the gorgeous fixtures, fittings, and furniture to match. So, you can fall in love with your space every single day.

As one of the UK's largest independent bathroom stores, we've received countless awards; including the National Business Awards UK, the Digital Entrepreneur Award,s and being placed on The Sunday Times Fast Track 100.

We hope your new product goes above and beyond your expectations. However, should any problems occur, please:

- log in to your account and contact our customer services team via your self-serve portal – betterbathrooms.com/CustomerAccount/Login
- contact us via betterbathrooms.com/content/contact-us


Important information

- Please read these instructions thoroughly and retain for future reference.
- Manufactured to BS EN14055 WC and urinal cisterns.
- All installation work must be carried out to comply with the Water Bylaw Regulations.
- The installation should be designed to allow maintenance access.


Parts list




Tank

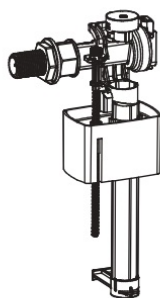

Inlet valve

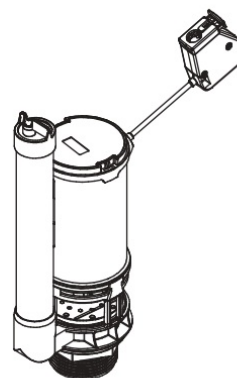



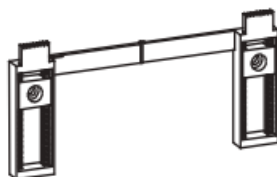



Cable flush valve




Wall bracket

Accessories list

Accessories list	Accessories name	Specification	Quantity	Accessories list	Accessories name	Specification	Quantity
	Flush bend nut		1		Wall Plug		2
	Seal		1		Cistern fixing screw	ST4, 2*35mm	2
	Flush bend		1		Pan seal cone		1

Cistern dimensions

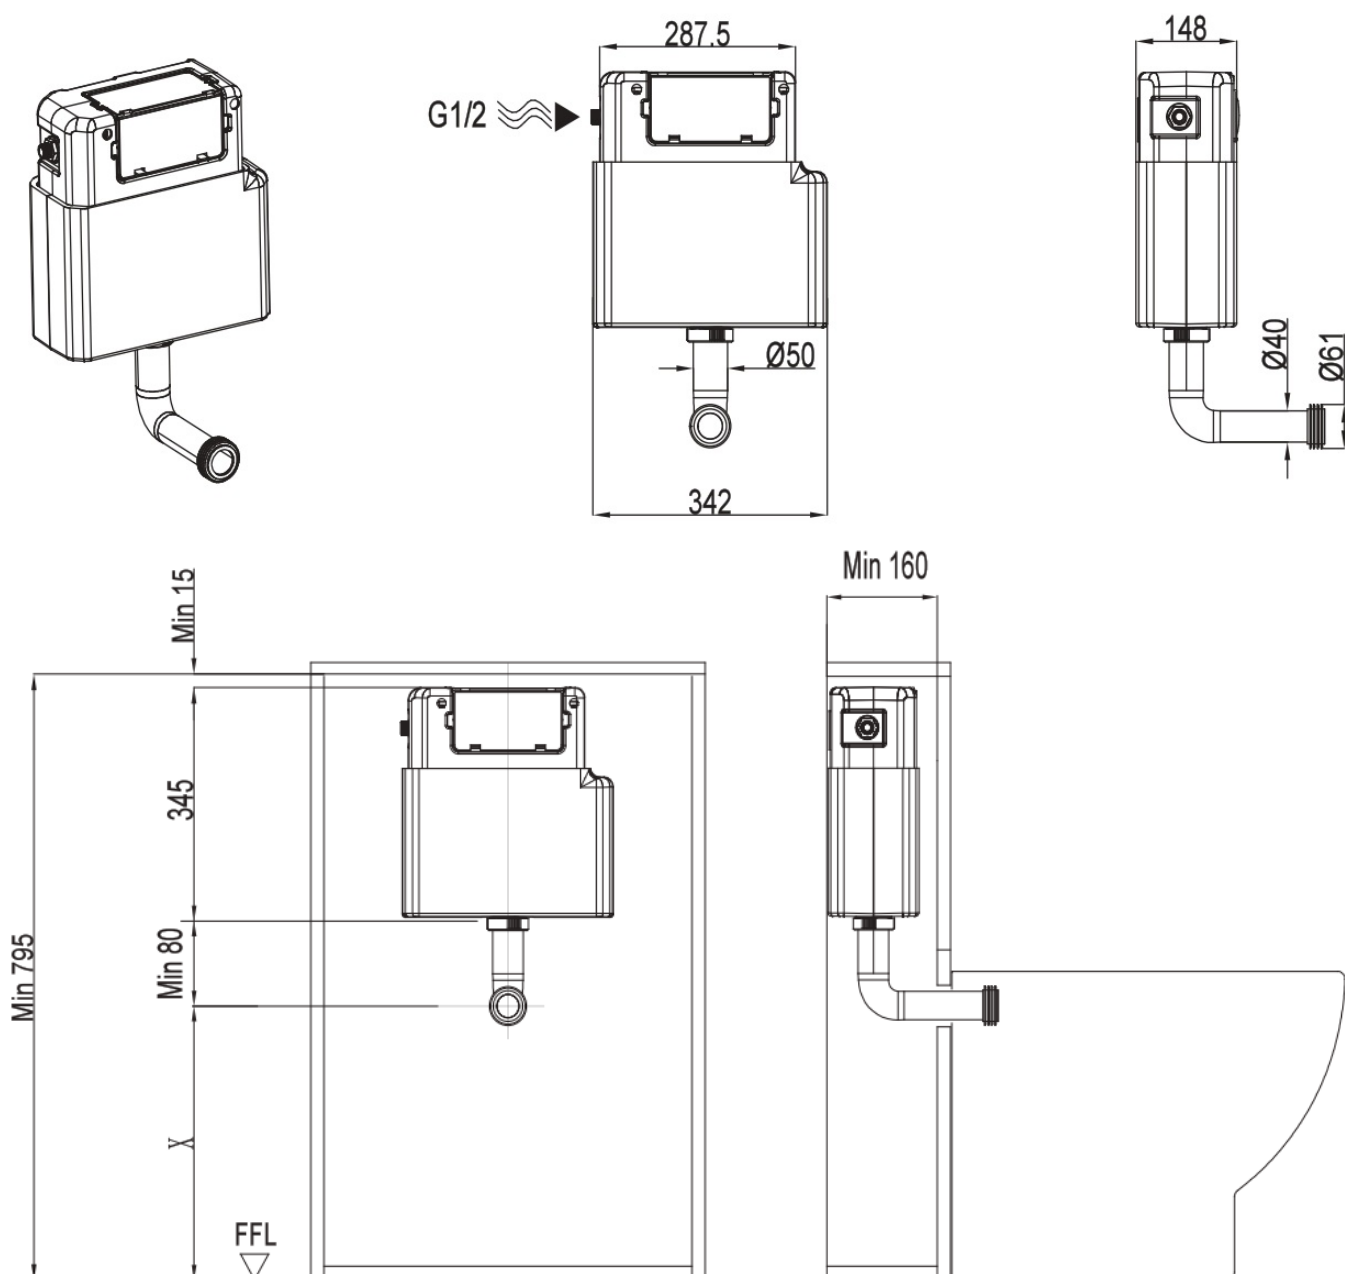


Technical specifications


Name	Manual Concealed Cistern	
Type	MANCONCIS	
Technical specifications	Ambient temperature	3-40°C
	Pressure of supply water	0.07-0.75Mpa
	Operating temperature	3-40°C
	Dimension	342*345*148 (Left hand inlet)

Installation steps


1. Installation of wall bracket.

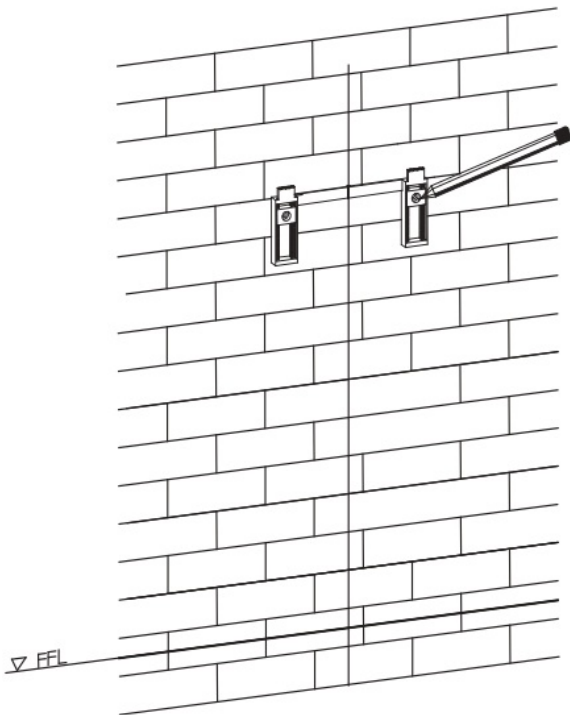

Mark fixing points of the wall bracket

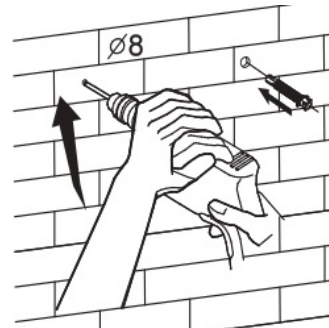


Drill holes using a 8mm drill bit (not supplied) and insert wall plugs. (Note: Before drilling always check for pipes ad cables) ↓

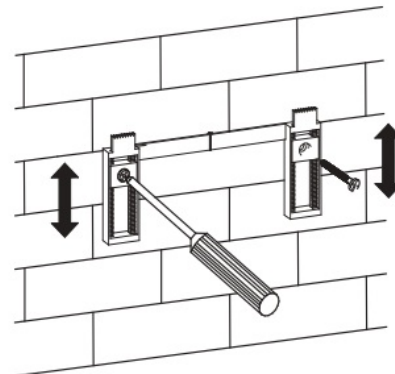


Slightly adjust the height of the wall bracket to horizontal position and lock it tightly

2. Installation of tank.

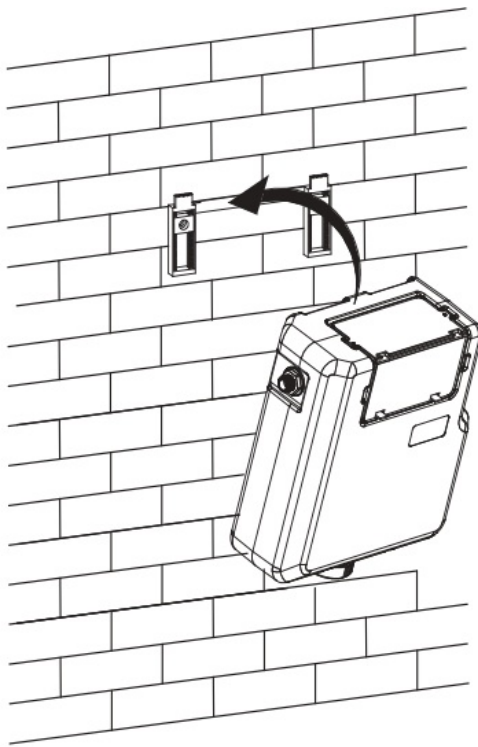


Hook the cistern tank onto the bracket via the slots located on the rear of the tank

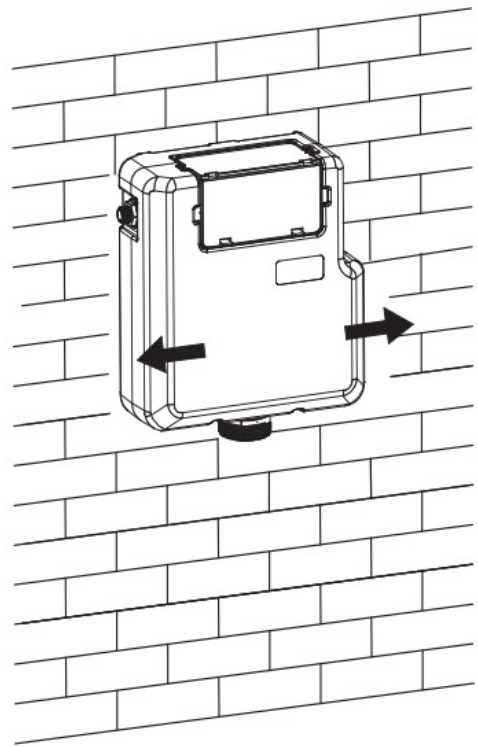


Slide the tank so that it is central with the unit space

3. Cutting of flush bend.

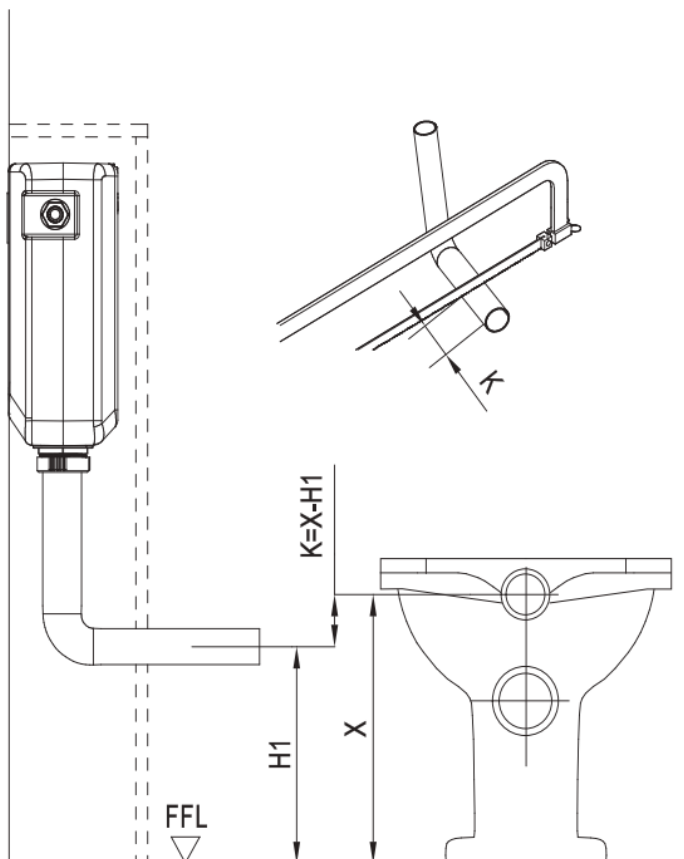


Cut the flush bend to size and attach to the cistern, using the appropriate fittings. Ensure alignment to pan from cistern tank is square both vertically and horizontally to allow seal to function correctly

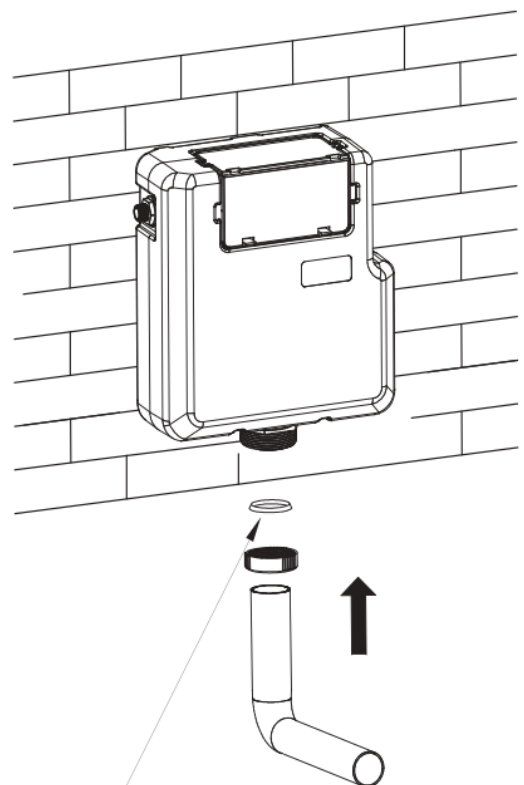


Tips: The seal needs to be installed in a horizontal position to avoid water leakage




4. Installation of water inlet connector.

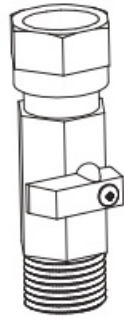



Note: The water supply pipe and the water inlet connector are not included.

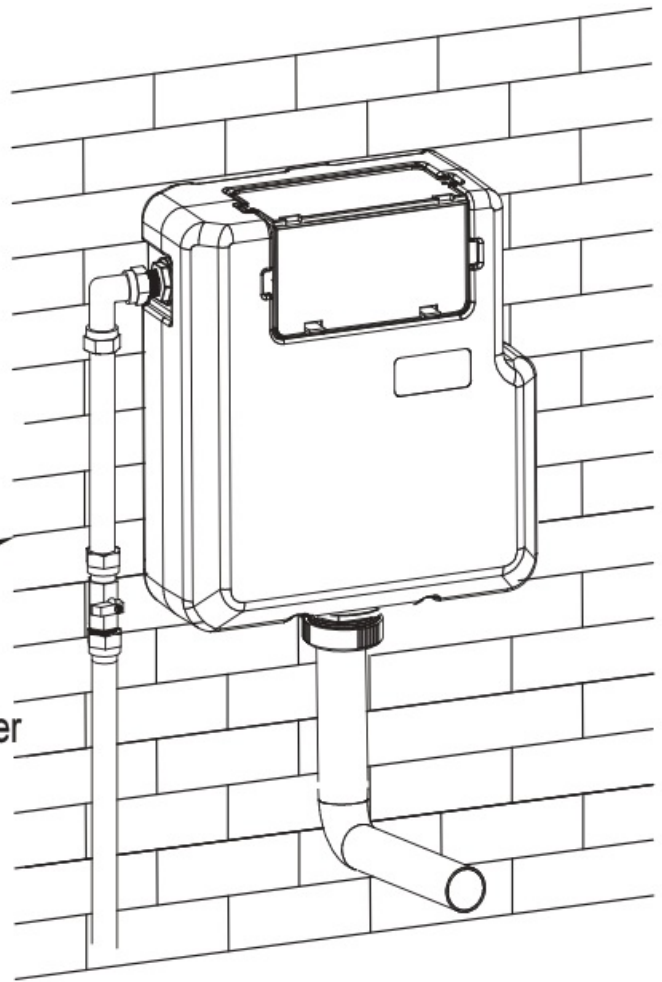

5. Installation with a front access panel.

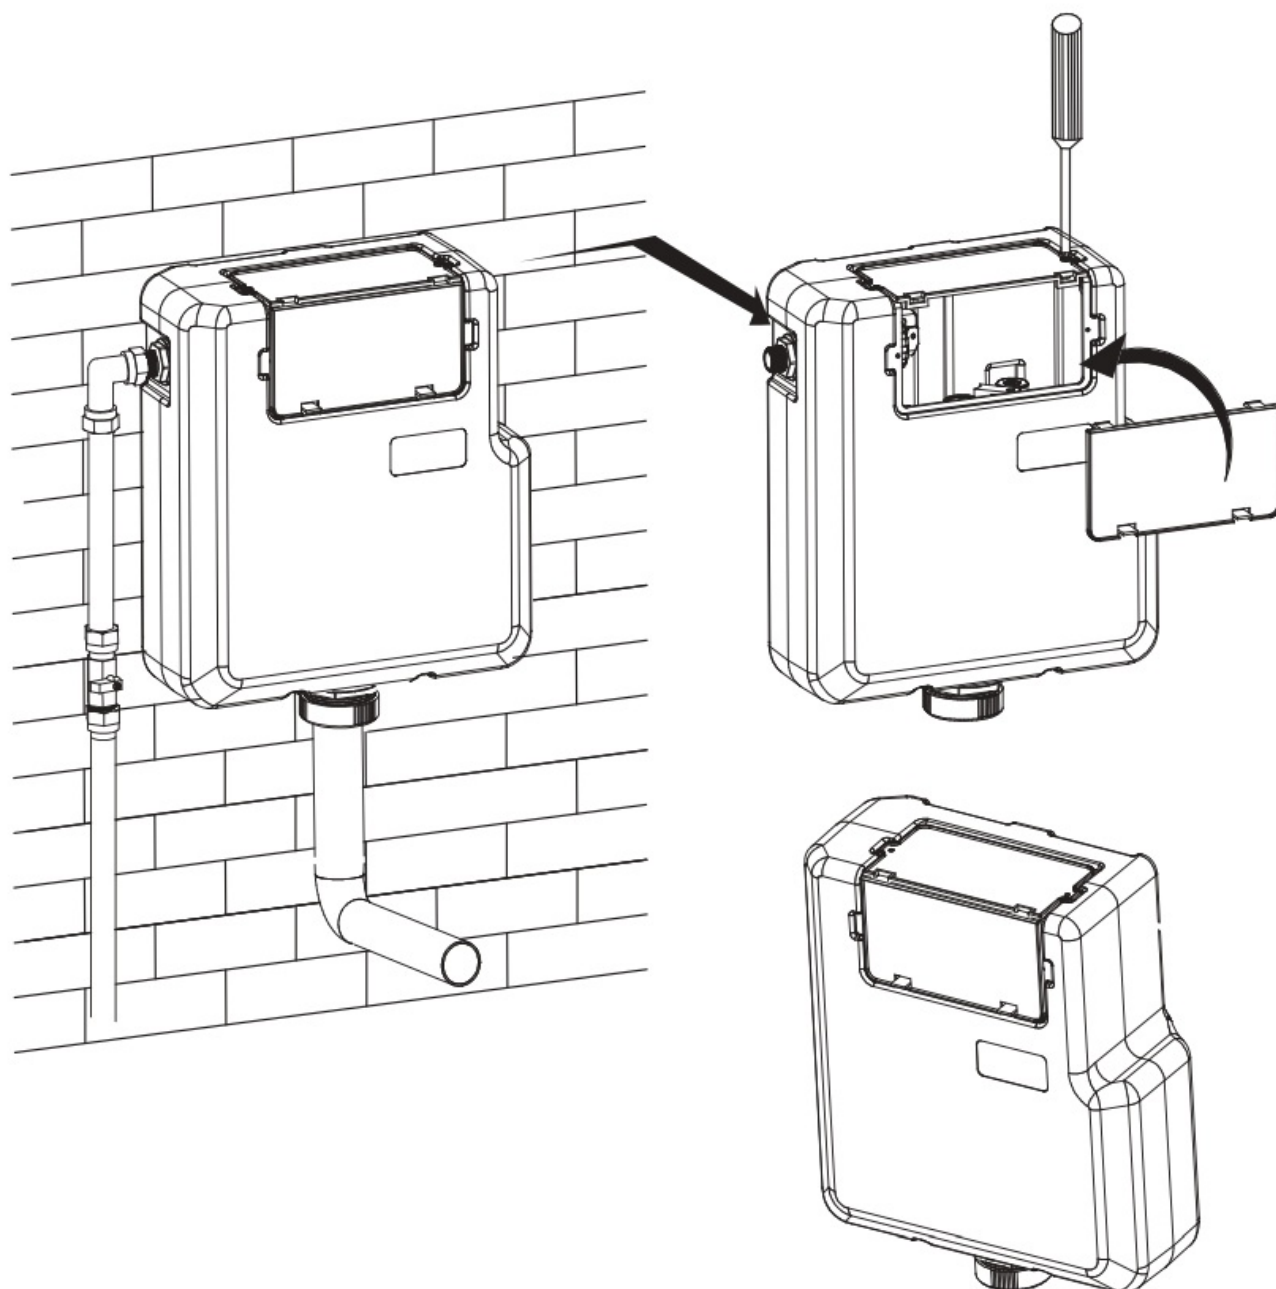

6. Installation with a top access panel.

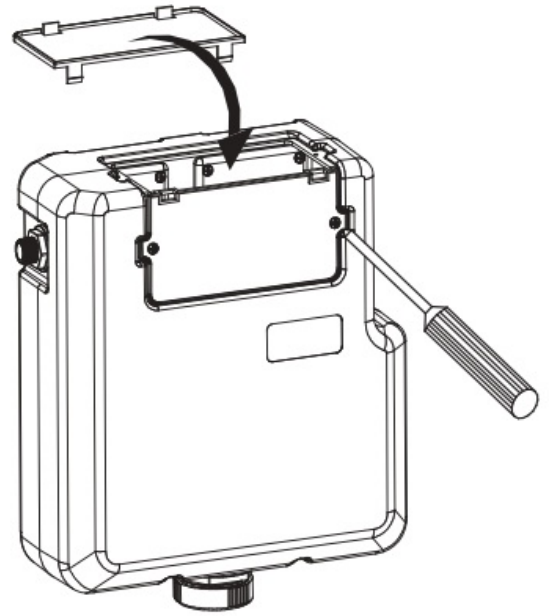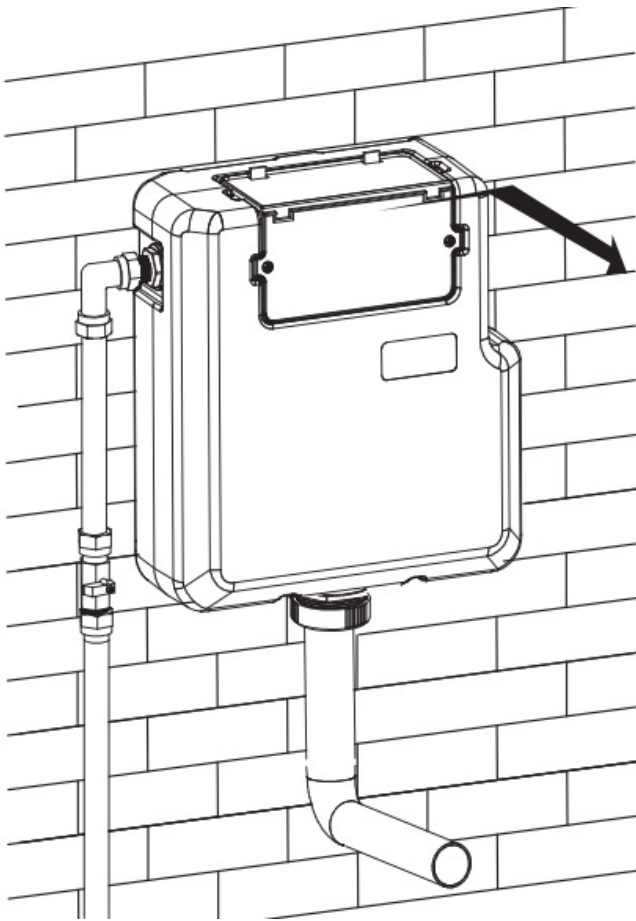


7. Installation of button.



Notice: The push button can be installed on the top and front panel of the vanity as shown picture except the square marked areas due to the space limitation.





Notice: The push button can be installed on the top and front panel of the vanity as shown picture except the square marked areas due to the space limitation.

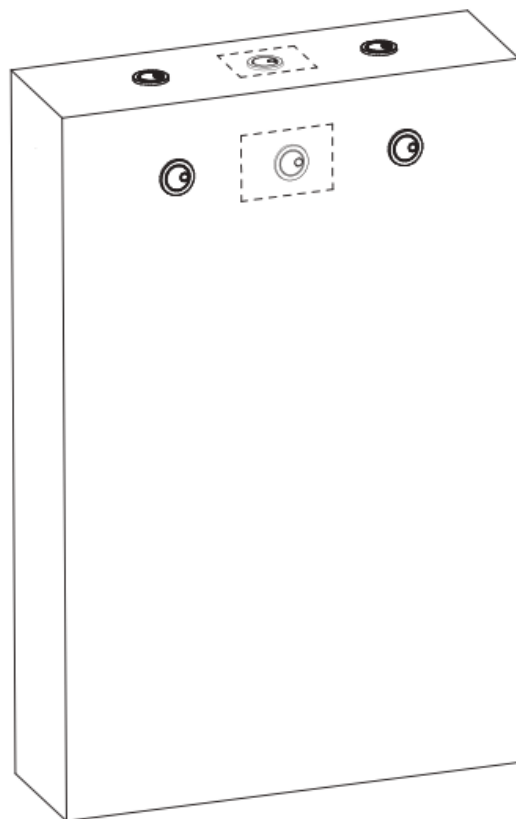



Two different installation methods

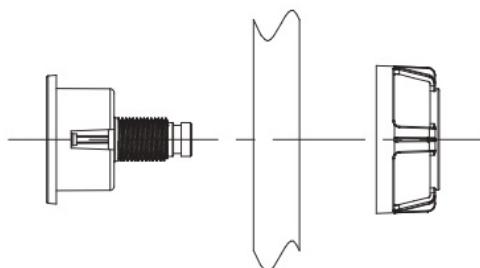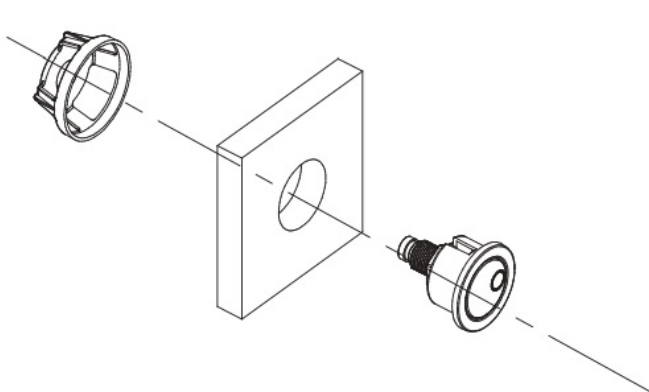


The maximum thickness of furniture is 17mm ;
hole diameter is Ø39mm

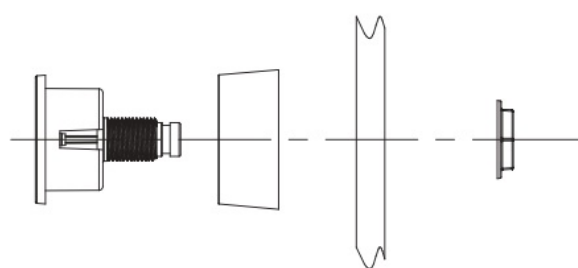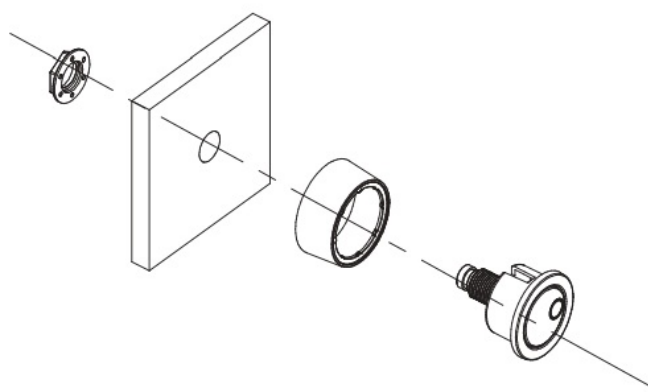


The maximum thickness of furniture is 12mm ;
hole diameter is Ø17mm

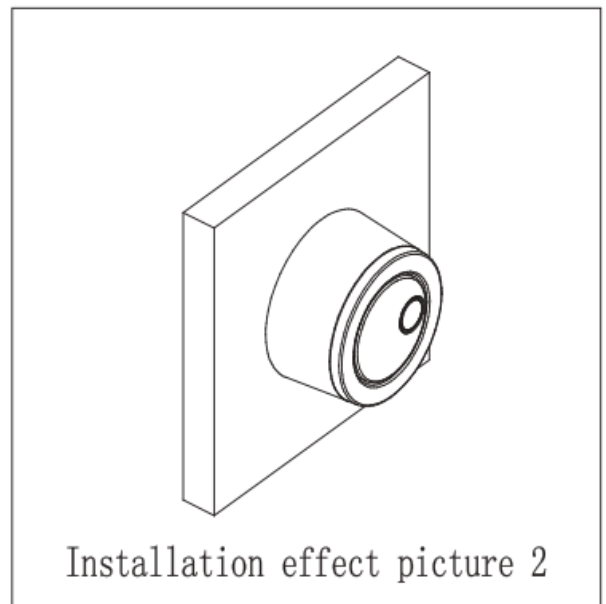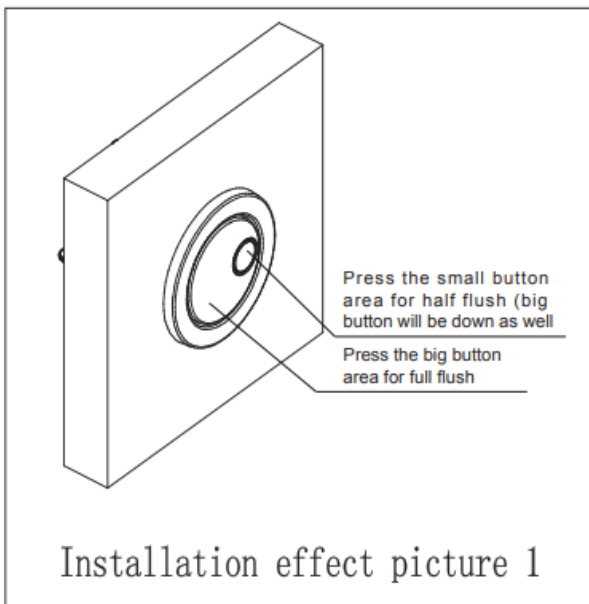

Installation of button box

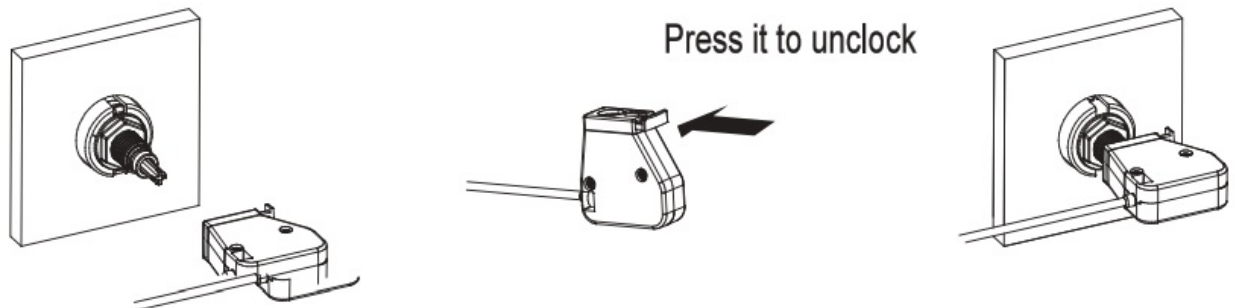

8. Installation of toilet.

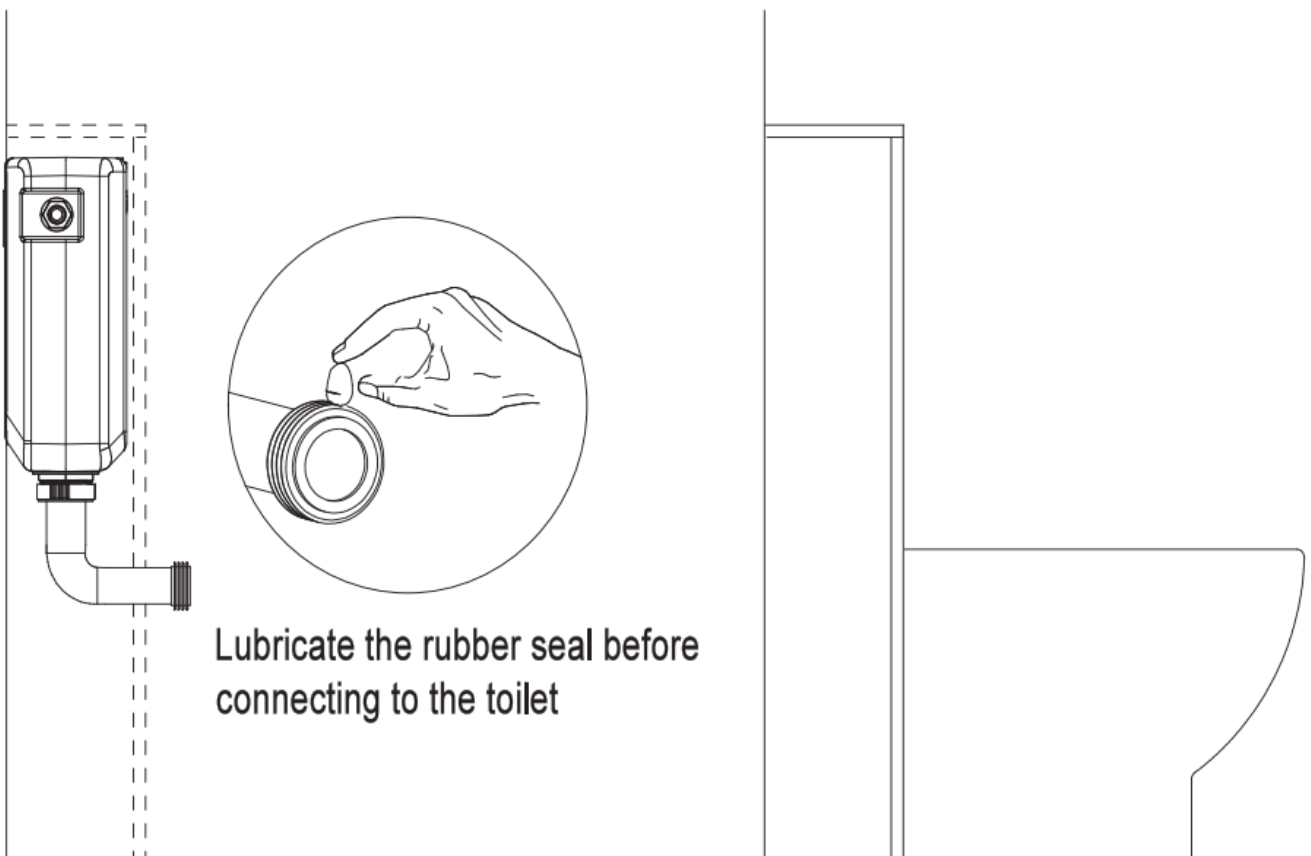

Trouble Shooting

For all troubleshooting solutions, please refer to the Maintenance section.

- **Insufficient or too much water entering the cistern tank**

1. Adjust the inlet valve using the adjustment screw.

- **Water filling into the cistern slowly**


1. If the water flows into the cistern slowly, the washer on the inlet valve could be blocked and may require cleaning.
2. Remove and run under warm water and clean using a small brush to remove any blockage, if this does not resolve the issue, check the water supply to the cistern.
3. If this is running freely, replace the inlet valve.

- **Tank fills correctly but insufficient water leaving the tank**

1. Adjust the flush valve volume.

- **Water running into the pan continually after flushing**


1. Establish if the water level in the cistern is reaching the overflow on the syphon, if yes, replace the inlet valve. If it doesn't, replace the upper section of the syphon.

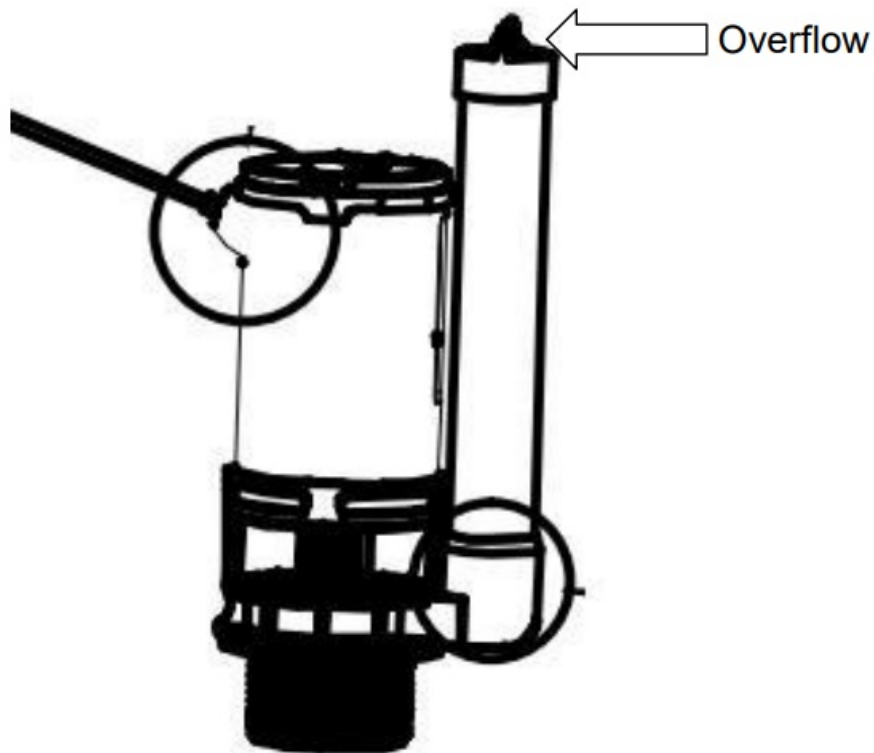

Maintenance


For all maintenance measures below, you will need to gain access to the cistern tank by removing panels/tops on your WC unit, (this access will differ depending on your WC unit), and for the water supply to be turned off.

Once you have gained access, remove the screws in the tank face/lid and this will release the second section of the face/lid by unclipping from the tank.

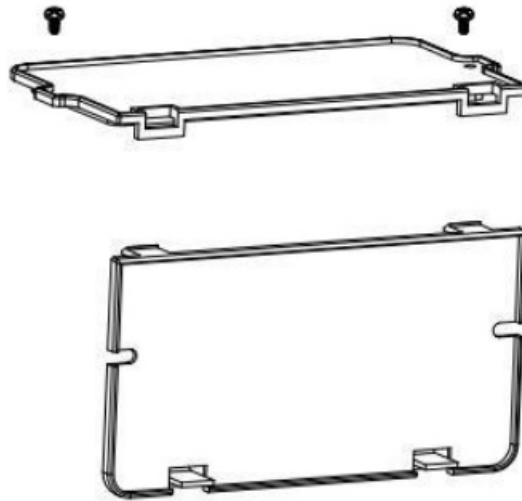


Inlet valve adjustment

Twist the adjustment screw as shown in the direction required.

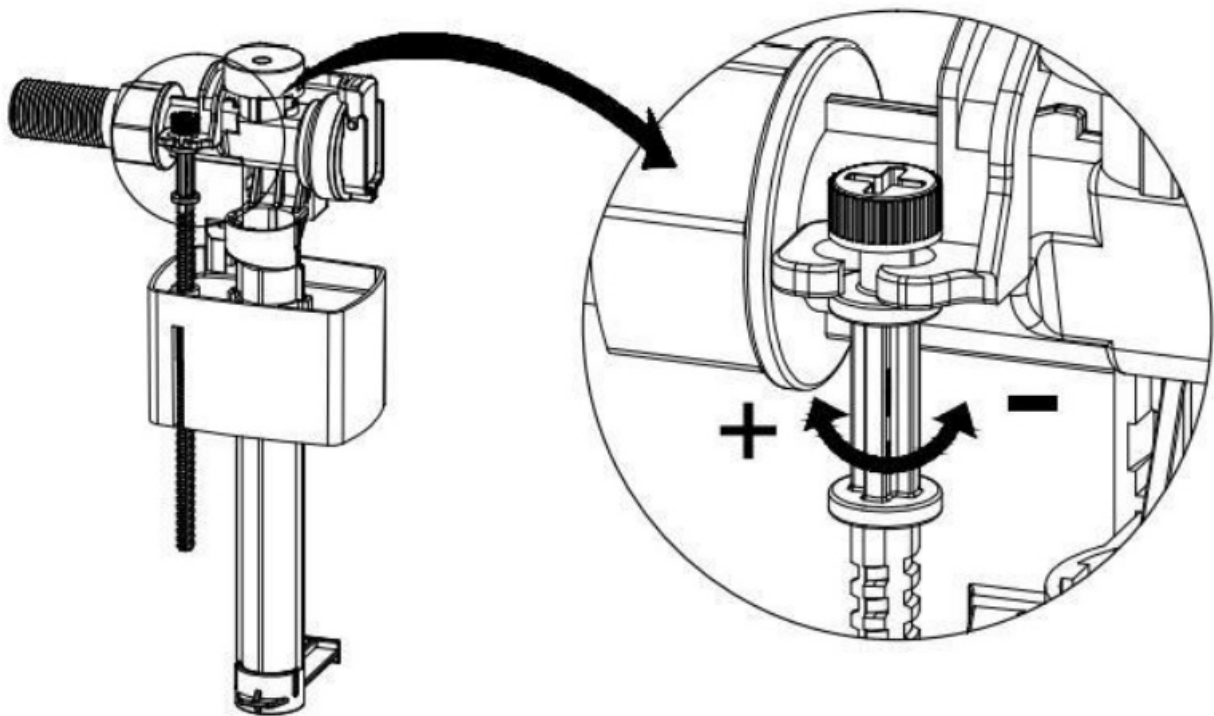


Inlet valve washer cleaning

- Unscrew the washer section from the inlet valve.
- Place the washer under warm running water and brush to remove any blockage.
- Then replace and tighten back into position.

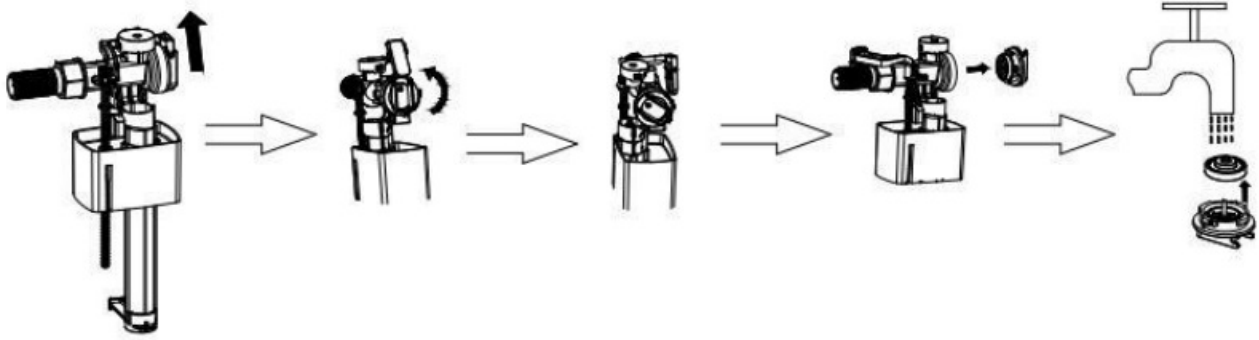


Flush valve removal and adjustment

- The flush valve is made of two parts, the bottom section which is secured to the cistern tank and the upper section which can twist and pull away from the bottom section.
- During this maintenance the bottom section can remain in position

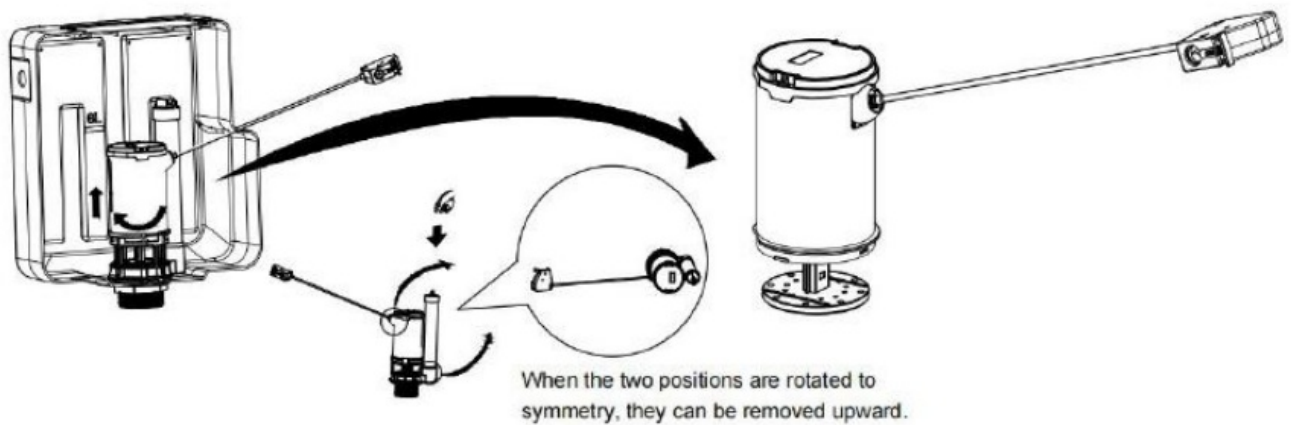

- To adjust the volume of water leaving the tank, move the slider as shown.
- If you need to remove the flush valve to check the washer or remove the washer for cleaning, take the flush valve out and take the washer down as the process showed below.

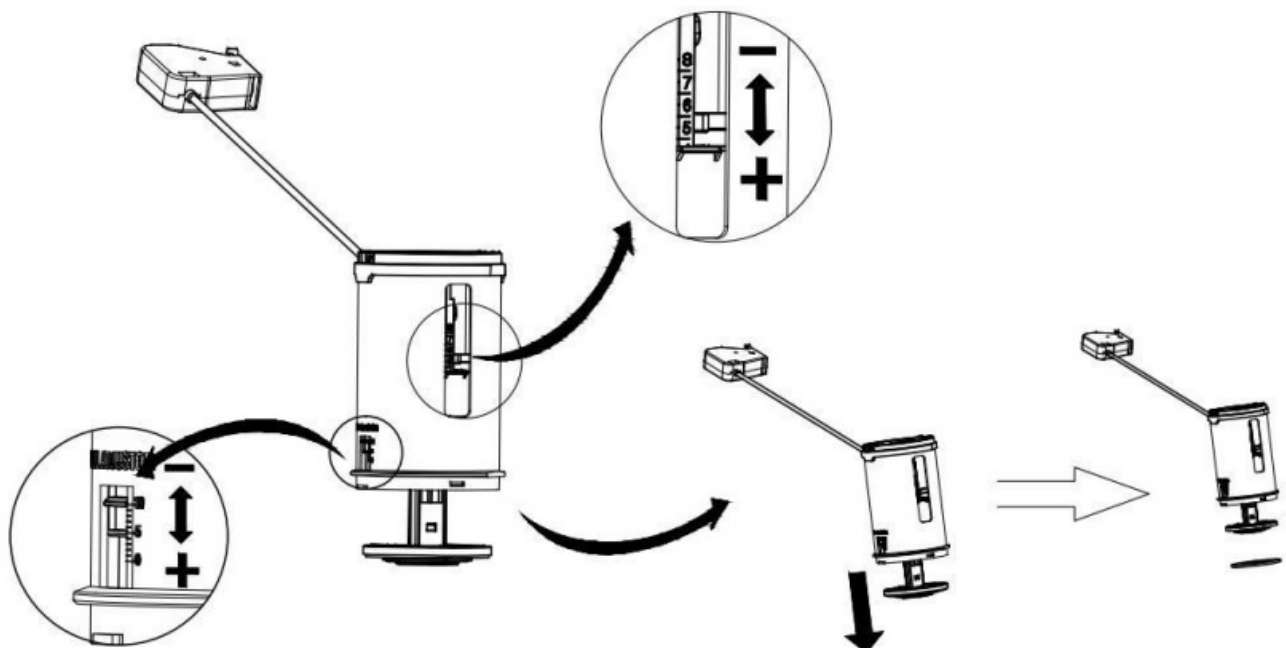

Push button operation failure

- Take the button down as the steps below, normally press the half flush & full flush, and observe whether the button can bounce back or not. If not, please replace the button.



Cleaning

To maintain the surface of the push button surface, wipe with a clean damp cloth and wipe dry, do not use any abrasive cleaning agents or materials.

If any harsh chemicals come into contact with the product's surface, rinse and wipe clean immediately.

For more information

- Visit betterbathrooms.com
- Email customerservices@buyitdirect.co.uk
- Call 0330 390 3062
- write to Trident Business Park, Neptune Way, Huddersfield, HD2 1UA

Documents / Resources

	<p>better bathrooms ARIBBMPB Concealed Cistern Manconcis Push Button [pdf] User Manual</p> <p>ARIBBMPB Concealed Cistern Manconcis Push Button, ARIBBMPB, Concealed Cistern Manconcis Push Button, Manconcis Push Button, Push Button, Button</p>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.