



# CHiQ CSF165NSS Upright Freezer User Manual

[Home](#) » [CHiQ](#) » CHiQ CSF165NSS Upright Freezer User Manual 

# CHiQ

UPRIGHT FREEZER  
USER MANUAL


MODEL  
**CSF166NW CSF165NSS**

Customer Service 1300 796 688  
[www.chiq.com.au](http://www.chiq.com.au)

## Contents

- [1 PART NAMES AND LOCATIONS](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 R600a WARNINGS](#)
- [4 Door reversal instruction](#)
- [5 INSTALLATION INSTRUCTIONS](#)
- [6 OPERATING INSTRUCTIONS](#)
- [7 GENERAL CARE AND MAINTENANCE](#)
- [8 TROUBLESHOOTING GUIDE](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

## PART NAMES AND LOCATIONS

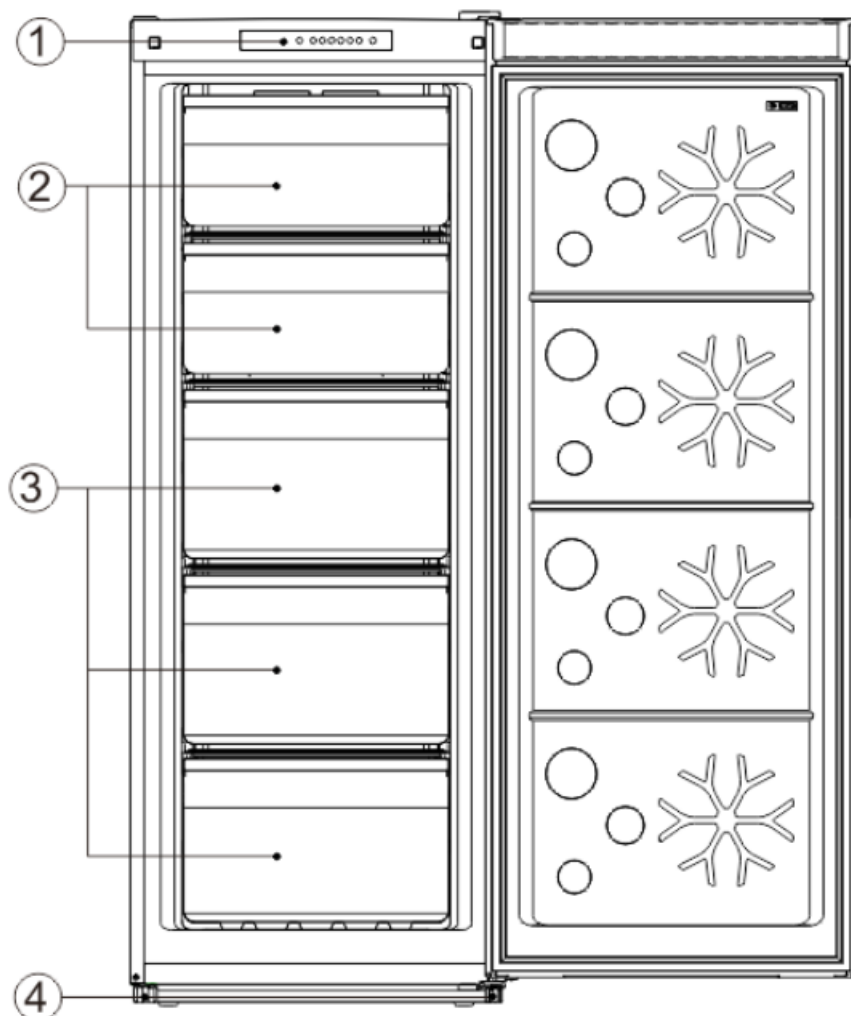

No	Description
1	Control panel
2	Flip cover
3	Freezer drawers
4	Adjustable Feet

**IN ACCESSORY BAG: USER MANUAL, WARRANTY CARD**

**As the manufacturer holds the authority to redesign or modify its products without notice: Any modifications or upgrades of our products will result in this Freezer varying slightly from this manual but the functionality will remain the same to that as set out within this manual.**

## IMPORTANT SAFETY INSTRUCTIONS

 <b>WARNING</b> 	Follow these basic precautions when operating the Freezer
--	---

- This product has been designed for use in a normal domestic environment. It is not intended for commercial use which will void warranty, such as supermarket,

food shop, pharmacy, commercial kitchen &, etc.

- Persons with lack of experience and knowledge, reduced physical or mental capabilities, need to be given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- It is critical use this appliance safely. Read all instructions before operating the Freezer and do not attempt to repair or modify this unit in any way as it can cause harm or void the warranty.
- Please ensure all persons using this appliance are also informed and comply with the details set out within this manual and the product Terms and Conditions.
- When unpacking the appliance for the first time, keep all cardboard and plastic packaging out of reach from children.
- Report any notable defects with the appliance to Chiq or retailer as soon as it is noted. Failure to do so can result in a non-warranty claim. Keep all packaging materials in a safe location until the unit has been installed properly.
- If the supplied power cord of this unit is damaged, it must be replaced by a qualified service agent or similarly qualified persons in order to avoid any risk of injury. It is recommended the power cord is situated in a safe location when operating or transporting the appliance to prevent any damage that may cause electrical shock or fire hazards.
- **DANGER or WARNING:**

#### **Service of this unit**

The installation or any service of the appliance is recommended by a qualified technician or service company.

#### **Ventilation Hazards**

Never clean the Freezer or Freezer parts with flammable fluids, or store gasoline or any other flammable vapors and liquids in the vicinity of this or any other Freezer as the gas and/or vapor can cause a fire hazard, explosion, or inhalation.

#### **Electrical Connection**

Make certain, when installing or moving the unit that the power outlet has been connected to, has been fitted by a qualified electrician and the ground wire has been connected properly to meet the Australian Electrical Standards.

### **R600a WARNINGS**

**NOTE:** This model uses R600a flammable refrigerant in its sealed system.

The following must be observed for your safety:

#### **R600a Refrigerant Warning**

- This appliance contains 0.043kg R600a refrigerant which is environmentally friendly, but flammable. It does not damage the ozone layer, nor does it increase the greenhouse effect.
- During transportation and installation, ensure that the tubing of the refrigerant circuit is not damaged.
- Leaking refrigerant can ignite and may damage the eyes.

- In the event, any damage does occur, avoid exposure to open fires and any device which creates a spark. Disconnect the appliance from the mains power.
- Thoroughly ventilate the room in which the appliance is located for several minutes.
- Notify Customer Service for necessary action and advice.
- The room for installing the appliance must be at least 1 cubic meter per 8 grams of refrigerant. The refrigerant quantity contained in this appliance is listed above in grams; it is also noted on the Rating Plate of the appliance.

\* Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

**It is hazardous for anyone other than an Authorised Service Person to carry out servicing or repairs to this appliance. In Queensland, the authorized person must hold a Gas Work Authorisation for hydrocarbon refrigerants, before carrying out servicing or repairs which involve the removal of covers.**

1. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
2. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
3. Do not damage the refrigerant circuit.
4. Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
5. Do not store explosive substances such as aerosol cans with a flammable propellant in the appliance.

## **Disposal**


The environment and personal safety must be considered when disposing of this appliance. Please ensure the appliance is taken to a recycling center for safe recycling. DO NOT dispose of the appliance in landfill as the insulation and refrigerant gas contained in these appliances are flammable.

## **Door reversal instruction**


**There are no spare parts required for the door reversal job.**

The following tool is required, flat screwdriver, Phillips screwdriver, adjustable spanner, socket wrench, and 8mm socket.


1. Make sure the power cable is unplugged.
2. Remove the hinge cover with a flat screwdriver, remove the three screws that hold the upper hinge on the door, then remove the upper hinge.

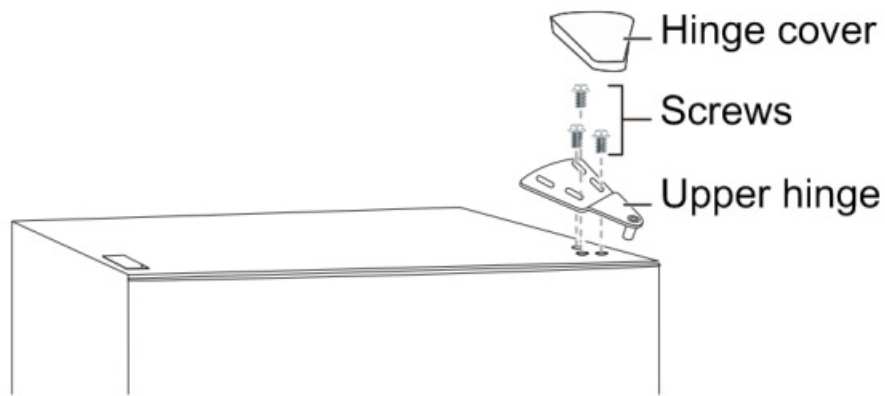


3. Lift up the door remove it from the cabinet, keep it in a stable position.
4. Remove the screws that secure the lower hinge, then remove the hinge.

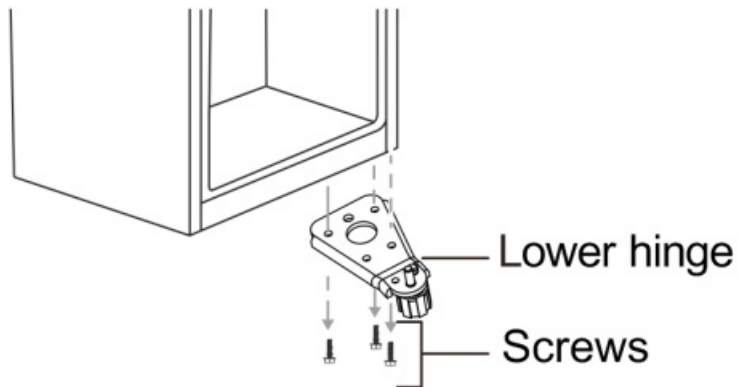


5. Remove the washer and nut that secures the pin shaft to the right hole on the lower hinge, then remove the shaft

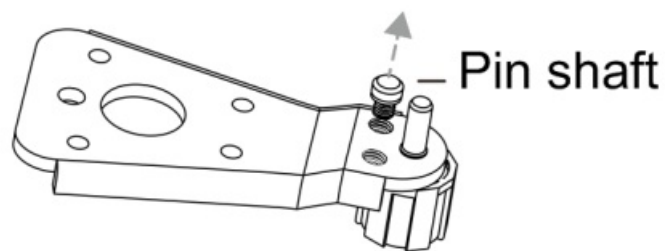


6. Insert the pin shaft into the left hole on the lower hinge, then secure the shaft with the washer and nut.

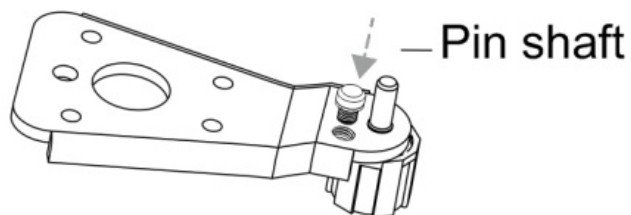


7. Install the lower hinge on the left side of the cabinet.
8. Remove the screw that secures the door stop from the bottom right of the freezer compartment door, then remove the door stop and install it to the bottom left side.

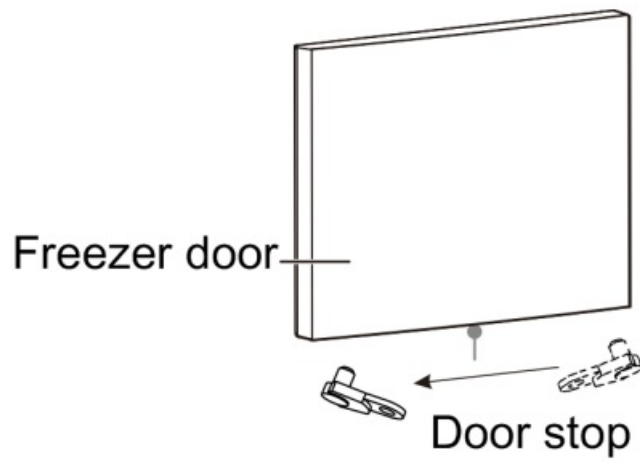

9. Install the freezer compartment door.
10. Move the door bushing from the top right side of the freezer door to the top left side of the door. And move the left hole cover to the right side.

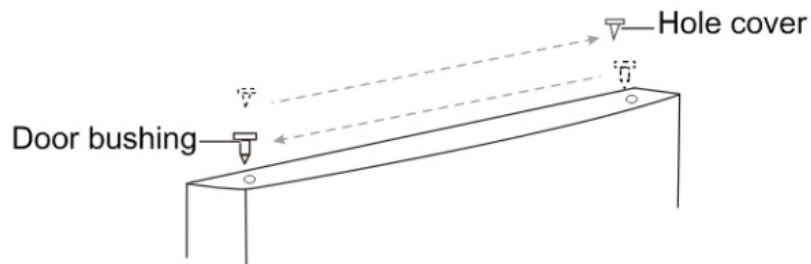


11. Remove the screw that secures the hinge screw hole cover from the top left side of the cabinet and put it on the right side.

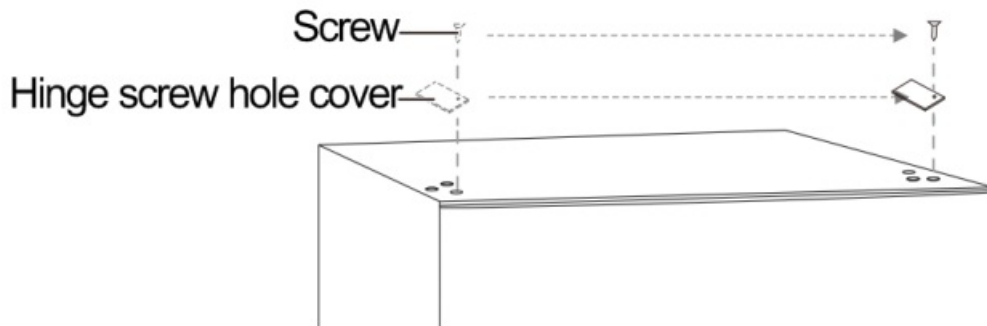


12. Secure the upper hinge with the three screws. Before you tighten the upper hinge screws, make sure the door is level with the cabinet, and the rubber gasket has a good seal.


13. Install the hinge cover over the hinge on the top left side of the cabinet.

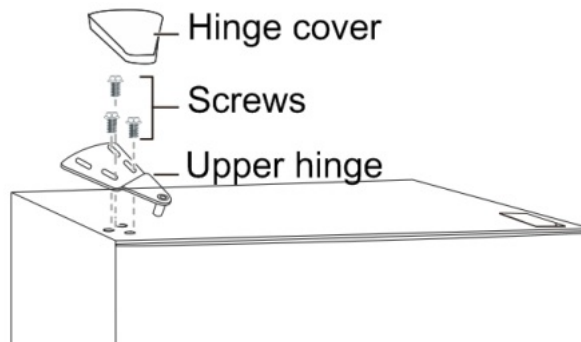

14. Remove the left screw caps and screws in the handle, remove the right hole plugs.

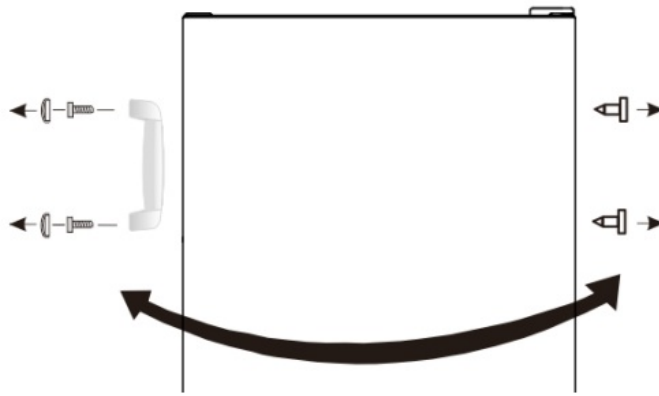

15. Install the right hole plugs on the left side, install the handle on the right, but screw caps back on.

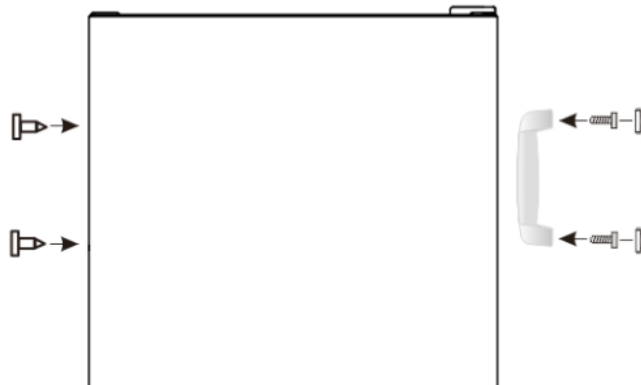

## INSTALLATION INSTRUCTIONS

### Before Using the Freezer

- Remove the exterior and interior packing.
- Before connecting the Freezer to a power source, let the unit stand upright for approximately 4 hours to mitigate the possibility of a malfunction in the cooling system from improper handling during transportation.
- Clean the interior surface with warm water using a soft cloth.

### Installing the Freezer

- This appliance is designed to be free-standing only, and should not be recessed or built-in.
- Allow at least 5cm of space between the back and sides of the Freezer to allow proper air ventilation. Insufficient space will result in cooling and working life issues and voiding warranty.
- Place the Freezer on a **leveled/even** floor surface that is strong enough to support the weight of the Freezer when it is fully loaded to prevent vibrations.
- **Place the Freezer on concrete, tile floor, or waterproof floor is recommended. The fridge will produce defrost water or condensation moisture, it might cause water damage in some extreme circumstances.**
- **The front feet can be adjusted to level the appliance properly.** Adjust the two front feet to keep the Freezer leveled or elevated.
- Situate the Freezer away from direct sunlight and sources of direct heat (stove, heater, radiator, etc.). Direct sunlight may also affect the acrylic coating and heat sources may cause an increase in power consumption.
- This unit is not designed for outside installation.
- Avoid situating the Freezer in moist OR **pest infestation**
- Plug the Freezer into a dedicated, properly installed-grounded wall outlet. Do not under any circumstances cut

or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized service center.

- After plugging the appliance into a wall outlet, turn the unit on and allow the unit to cool down for 4-6 hours before placing food in the Freezer.
- Do not place heavy items on the top of this appliance.


## ENERGY-SAVING TIPS

- Allow hot foods to cool to room temperature before placing them in the Freezer. Overloading the Freezer forces the compressor to work harder. Foods that freeze too slowly may lose quality or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the This cuts down on frost build-up inside the Freezer.
- Organize and label food to reduce door openings and extend searches. Remove as many items as needed at one time, and close the door as soon as possible.

## OPERATING INSTRUCTIONS

### TEMPERATURE CONTROL PANEL

The freezer has a temperature control panel on the top.

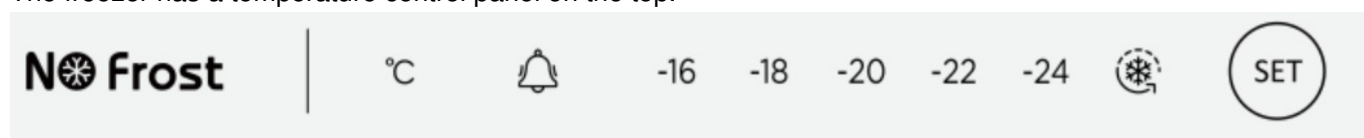


#### Temperature control key:

Press the **set** key to adjust the temperature setting. Keep pressing until it reaches desired temperature and the number will flash on the display panel. Wait for a few seconds, it will be light up stable and the setting is changed properly.


#### -18 is recommended for a normal use environment.

Temperature adjustment range:-16~-24

The digital display is cycled as follows: -16 → ... → -24 →  -16.

The number only shows the set temperature which might vary to the exact temperature inside the unit.

#### Fast freezing mode :

When the fast freezing mode is active, the  will show on the display area. Fast freezing mode is recommended for first-time use or food need to be frozen quickly. After the freezer runs in the fast freezing mode for 3 hours, it will quit the fast freeze mode automatically.

#### Notes

Large quantities of food stored in the appliance or directly in front of the air vent will affect the cooling efficiency and the airflow.

Please allow 6 hours for the temperature to stabilize between temperature setting changes.

Do not keep opening and closing the door which will increase the temperature in the unit.



**Please note different sections of the Freezer compartment may be warmer or cooler than others – typically the back wall and bottom lowest drawer will be the coolest area.**

### **Door open alarm**

If any door is opened for more than 3 minutes, the buzzer alarm will be continuously beeping. It can be stopped by pressing the key button, but it will be restored after 3 minutes if the door keeps opening. The alarm will stop when the doors are closed properly.

### **Fault alarm**

When the alarm indicator keeps flashing (with the corresponding indicator light of “-16, -20, -24, or fast freezing” flickering simultaneously), it indicates a fault with the refrigerator. Please contact the customer service center.

## **GENERAL CARE AND MAINTENANCE**

### **Cleaning the Freezer**

- Upon installation of your new appliance, it is recommended that it be cleaned thoroughly and properly maintained thereafter.
- Turn off the Freezer and then unplug the unit from the wall outlet.
- Remove all food content before washing the inside with a damp cloth soaked in lukewarm water and dishwasher liquid. Don't use any chemical detergent which **might damage the coating of the freezer.**
- Be sure to keep the door gasket (seal) clean to keep the unit running efficiently as improper cleaning can cause the seal to dislodge and tear.
- Dry the interior and exterior with a soft cloth.

### **Vacation Time**

- Turn off the Freezer first and then unplug the unit from the PowerPoint.
- Remove all food.
- Clean the Freezer.
- Leave the lid open slightly to avoid the possible formation of condensation, mold, or odors.
- Use extreme caution in the case of children. The unit should not be accessible to child's play.
- **Short vacations:** Leave the Freezer operating during vacations of less than three
- **Long vacations:** If the appliance will not be used for several months, remove all food and unplug the power cord. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly: blocking it open if necessary.

### **Repositioning and Relocating the Freezer**

- Unplug the power cord from the wall outlet.
- Remove all the food and drinks.
- Securely tape down all loose items inside your Freezer.
- Tape the doors to be closed securely.
- It is recommended that the Freezer stays in the upright position during transportation. But if it is laid down for transport purposes, please lift it up immediately after the job is done. Please wait for at least 24 hours before putting in the power.

## TROUBLESHOOTING GUIDE

Problem	Solution
<b>The freezer has no power</b>	<ul style="list-style-type: none"><li>• The power cord isn't plugged in properly.</li><li>• The circuit breaker tripped or a blown fuse.</li><li>• Try a different PowerPoint.</li></ul>
<b>Compressor runs all the time</b>	<ul style="list-style-type: none"><li>• The room temperature is hotter than normal.</li><li>• A large amount of food has been added to the Freezer. The door is opened too often.</li><li>• The door is not closed completely.</li><li>• The temperature control is not set correctly.</li><li>• The door gasket does not seal properly.</li><li>• The Freezer does not have the correct clearances.</li><li>• The Freezer has recently been disconnected for a period of time. 6+ hours are required for the Freezer to cool down completely pending on operating conditions.</li></ul>
<b>The temperature inside the freezer is too cold.</b>	<ul style="list-style-type: none"><li>• Temperature control is set too cold. Turn the control to a warmer setting and allow several hours for the temperature to stabilize.</li></ul>
<b>The temperature of the external Freezer side walls is warm.</b>	<ul style="list-style-type: none"><li>• The exterior Freezer walls can be as much as 15-20 degrees warmer than room temperature. This is normal while the compressor works to transfer heat from inside the Freezer cabinet to the condenser behind the Freezer sidewalls.</li></ul>
<b>Popping or cracking sound when compressor comes on.</b>	<ul style="list-style-type: none"><li>• Metal parts undergo expansion and contraction, as in hot water pipes. This is normal. Sound will level off or disappear as Freezer continues to run.</li></ul>
<b>Bubbling or gurgling sound, like water boiling.</b>	<ul style="list-style-type: none"><li>• Refrigerant (used to cool the Freezer) is circulating throughout the system. This is a normal operation.</li></ul>

<b>Vibrations.</b>	<ul style="list-style-type: none"> <li>• Check the Freezer is on a level/even surface.</li> <li>• Freezer rocks on the floor when it is moved slightly. Be sure the floor can adequately support the freezer.</li> <li>• Level the freezer by putting wood or metal shims under part of the Freezer.</li> <li>• The Freezer is touching the wall. Re-level the Freezer and move it from the wall. See "Installation Instructions".</li> </ul>
<b>Moisture forms on the outside of the Freezer.</b>	<ul style="list-style-type: none"> <li>• The door is slightly open, causing cold air from inside the Freezer to meet warm moist air from the outside.</li> </ul>
<b>The doors will not close properly.</b>	<ul style="list-style-type: none"> <li>• The Freezer is not on a level surface.</li> <li>• The gasket/s may be dirty or not properly maintained. Clean the seals and make sure they are dry before closing the door/s.</li> <li>• The storage basket and/or shelves are out of position.</li> </ul>

For any inquiries, please call the CHiQ Customer care on 1300 796 688


# CHiQ

Customer Service  
1300 796 688

[www.chiq.com.au](http://www.chiq.com.au)

© Changhong Electric (Australia) P/L all rights reserved.

## Documents / Resources

 <p>UPRIGHT FREEZER USER MANUAL MODEL CSF166NW CSF165NSS Customer Service 1300 796 688 www.chiq.com.au</p>	<p><a href="#">CHiQ CSF165NSS Upright Freezer</a> [pdf] User Manual CSF166NW, CSF165NSS, Upright Freezer, CSF165NSS Upright Freezer, Freezer</p>
---	--