

Danfoss AK-PC 782B IP Communication Enabled User Guide

March 13,
2024

[Home](#) » [Danfoss](#) » [Danfoss AK-PC 782B IP Communication Enabled User Guide](#) 

Danfoss AK-PC 782B IP Communication Enabled



Contents [[hide](#)]

- 1 [AK-PC 782B ST500 overview layout](#)
- 2 [AK-PC 782B wiring & addressing overview](#)
- 3 [AK-PC 782B analog input verification](#)
- 4 [AK-PC 782B analog input configuration](#)
- 5 [AK-PC 782B digital input verification](#)
- 6 [AK-PC 782B digital output verification](#)
- 7 [AK-PC 782B output input verification](#)
- 8 [AK-PC 782B stepper valve wiring](#)
- 9 [ICAD 600A/1200A quick start](#)
- 10 [AK-PC 782B high pressure valve settings](#)
- 11 [AK-PC 782B high ejector control settings](#)
- 12 [AK-PC 782B receiver bypass valve settings](#)
- 13 [AK-PC 782B low temp suction group settings](#)
- 14 [AK-PC 782B medium temp suction group settings](#)
- 15 [AK-PC 782B IT \(parallel compression\) suction group settings](#)
- 16 [AK-PC 782B oil reservoir setup](#)
- 17 [CUSTOMER SUPPORT](#)
- 18 [Documents / Resources](#)
 - 18.1 [References](#)
- 19 [Related Posts](#)

AK-PC 782B ST500 overview layout


Alarm = Red alarm bell when alarm is present

Value = Controlling sensor actual value

Ref. = Target set point


Act.% = Percent active capably or valve open %

Status = Condition of control sequence

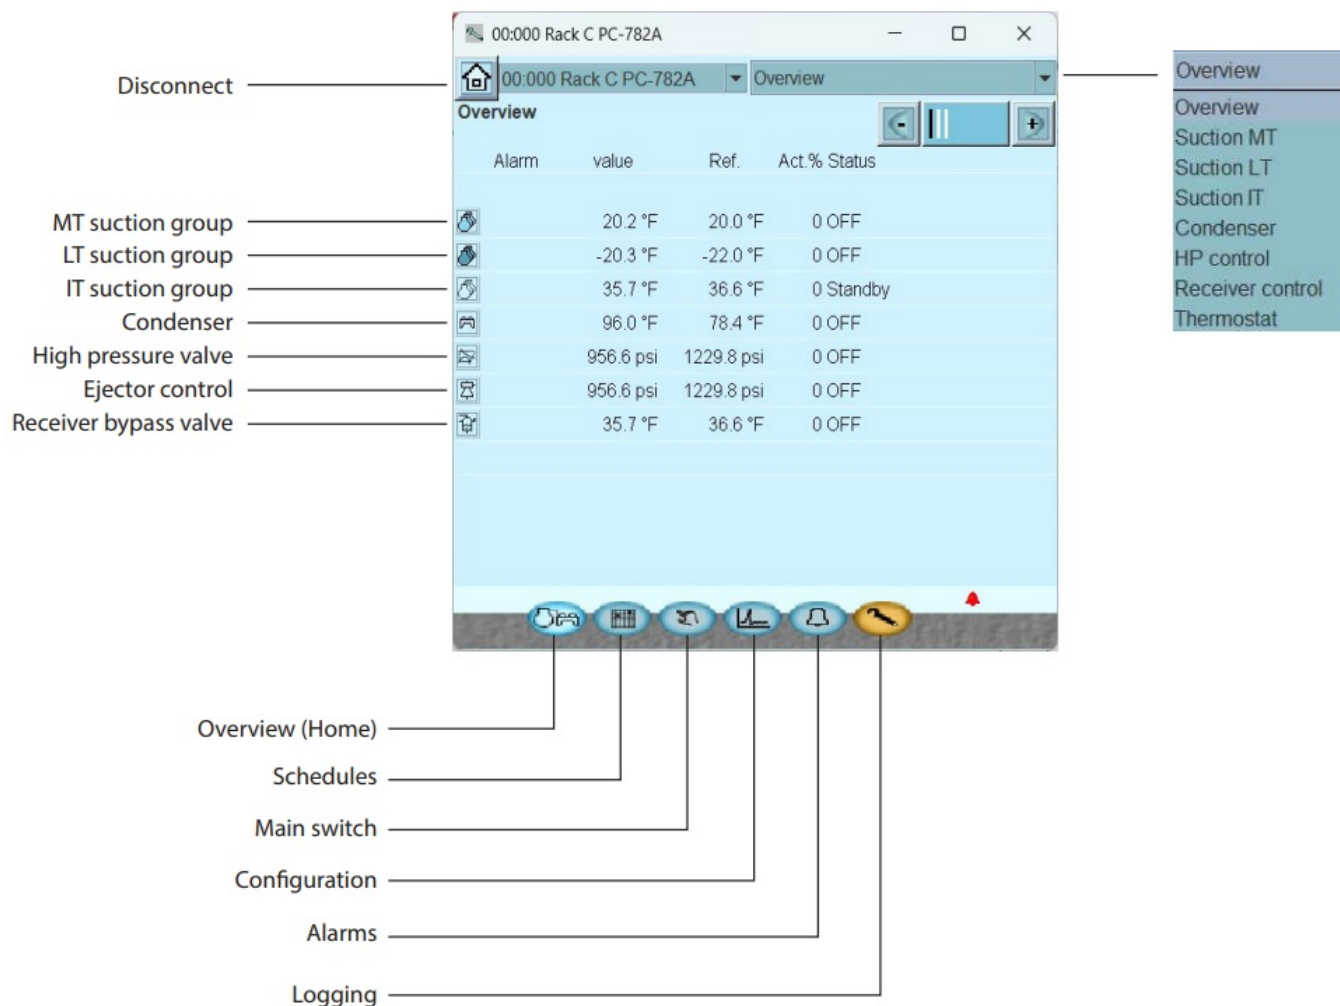


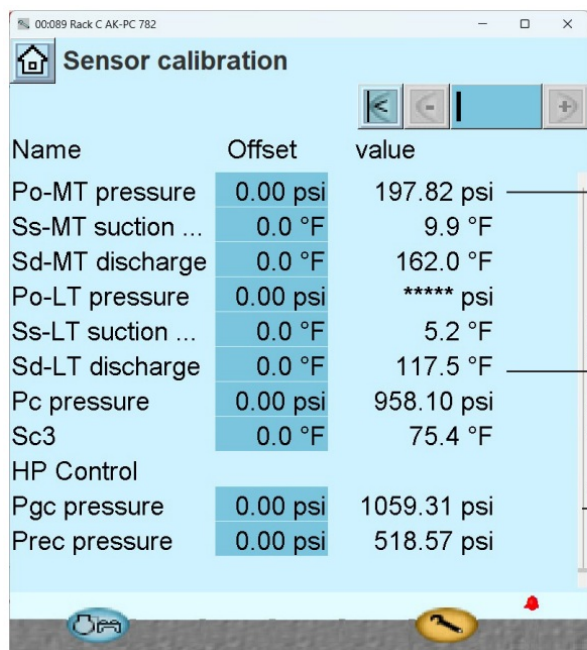
AK-PC 782B wiring & addressing overview

1. Represents board number assigned in pack controller using ST500
2. Represents communications module address to identify order of CM102's In the I/O extension loop. Has no relation to AK-PC 782B dial addresses.

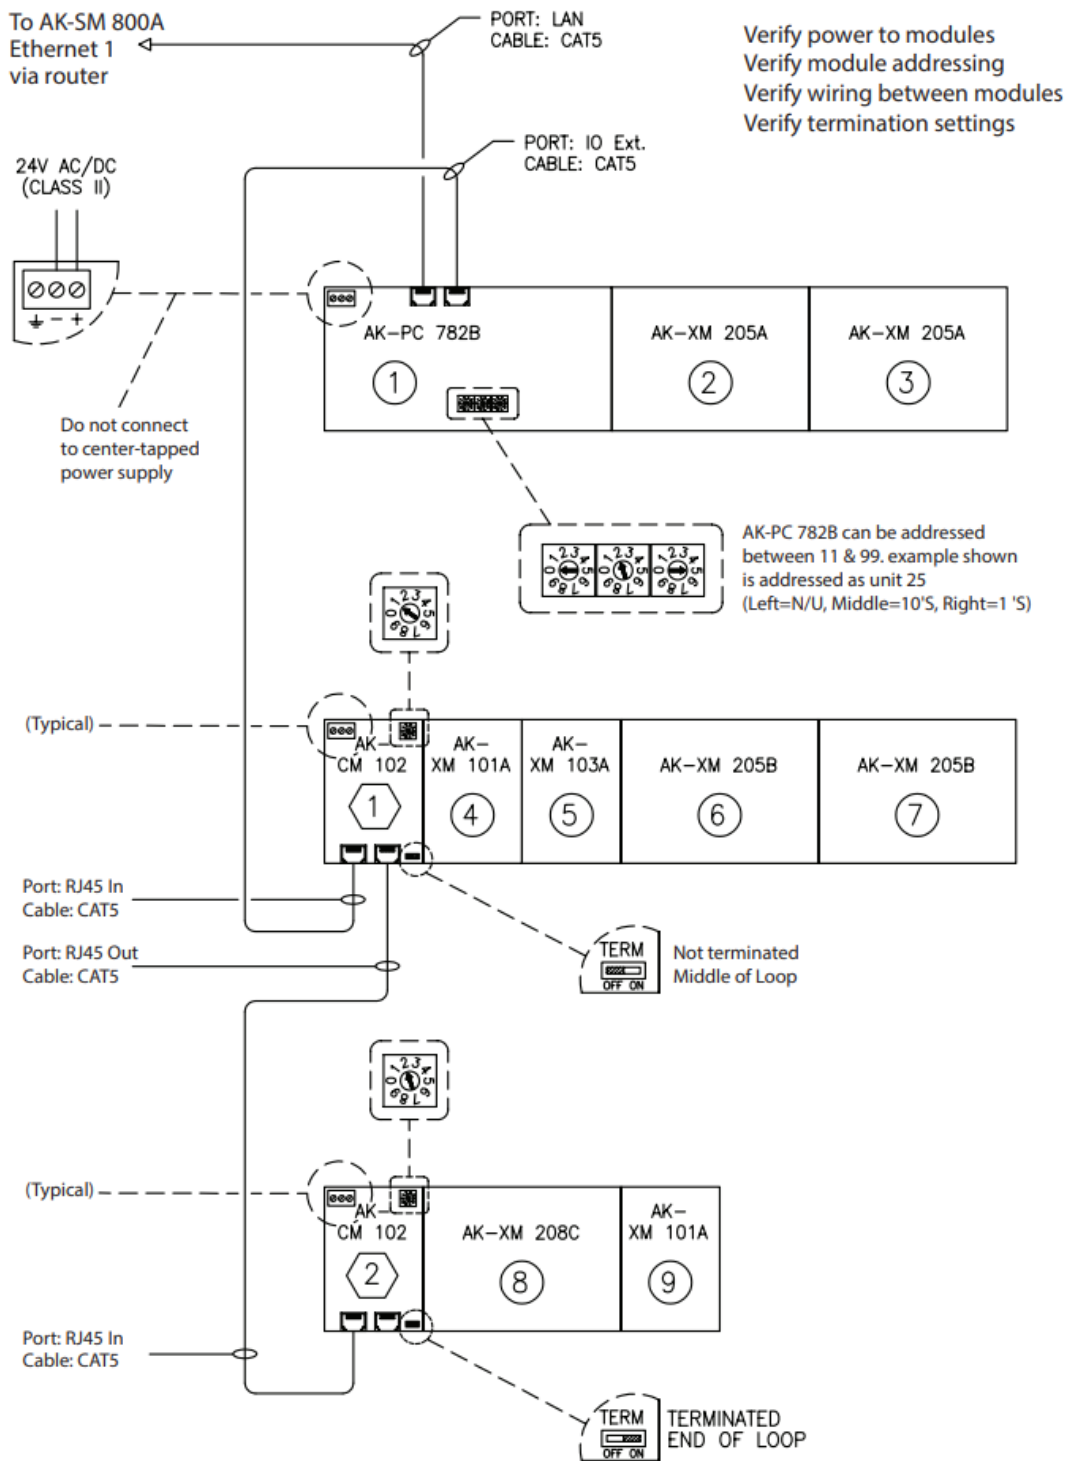

AK-PC 782B analog input verification

Open ST500, press  , then select "sensor calibration"



Verify transducer assignments by unplugging its connector at the transducer. The psi reading will change to "****" once unplugged.


Verify sensor assignments by spraying the physical probe with cold shot to see its temperature decrease

Be sure to scroll down the page to verify all transducers & sensors.

If there are issues with readings, first verify MOD/PT assignments.

AK-PC 782B point numbering layout.


The AK-PC 782B, as well as all modules connected to the pack controller, follow point numbering from top-left to bottom-right as shown below.

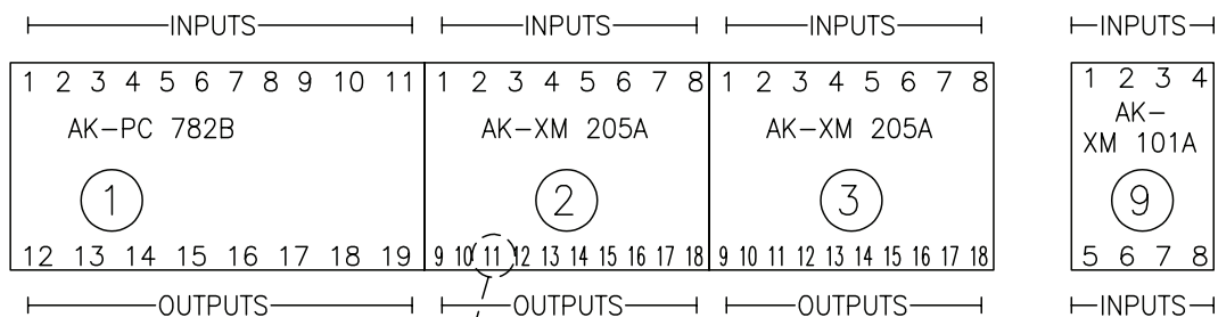


Example, a compressor contactor coil wired. To the third output point on module #2 would be defined as module #2, point 11.

AK-PC 782B analog input configuration


Open ST500, press  , then select "I/O configuration"

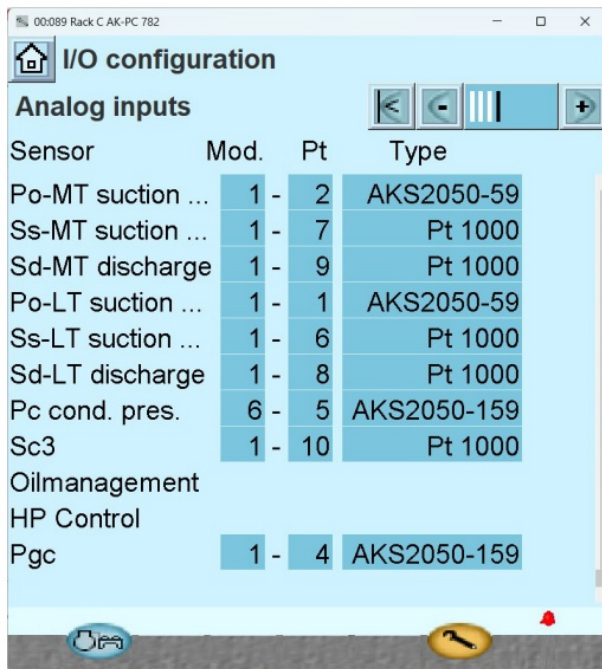

Example: "Pc cond. pres." assigned module #6, point #5 using the layout from page 2. We should find the transducer landed at this location on the middle row of modules

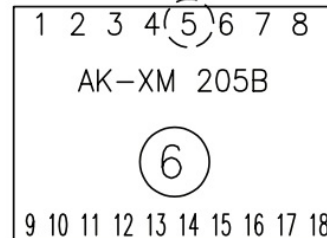


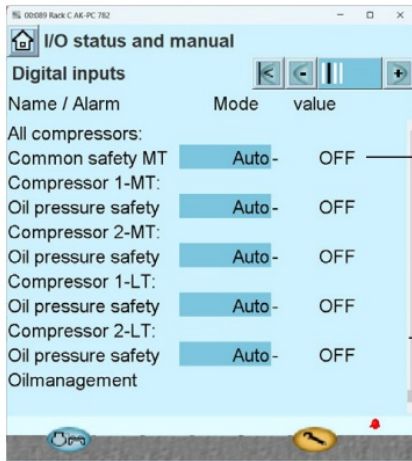
If MOD/PT assignments are accurate, verify sensor wiring Transducers should be AKS2050-59 or AKS2050-159 only

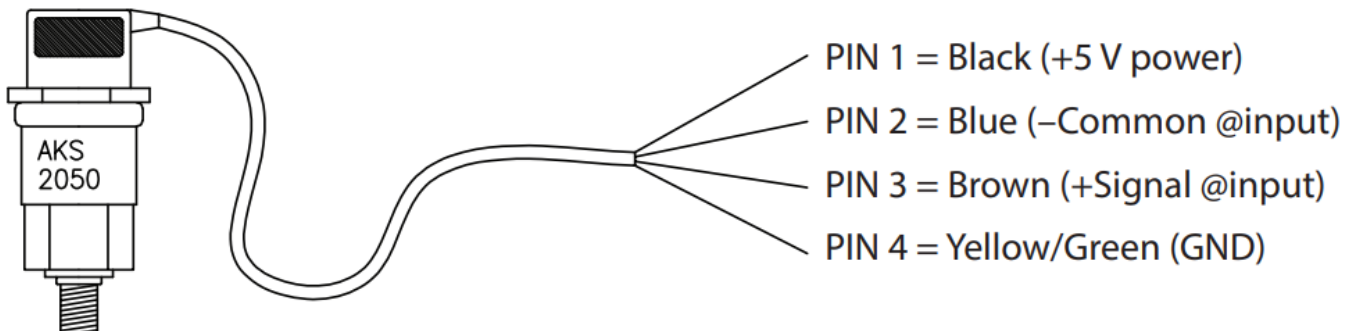

Danfoss temperature sensors are not polarity sensitive one wire to input (-), the other wire to input (+)

AK-PC 782B digital input verification


Open ST500, press , then select "I/O status and manual". Press the "+" icon to move to "Digital Inputs" page.



The status of each digital input is shown in the value column. Toggle each input to verify its operation.

Be sure to scroll down the page to verify all digital inputs

If issues are present, verify MOD/PT assignments and “Active at” selection.

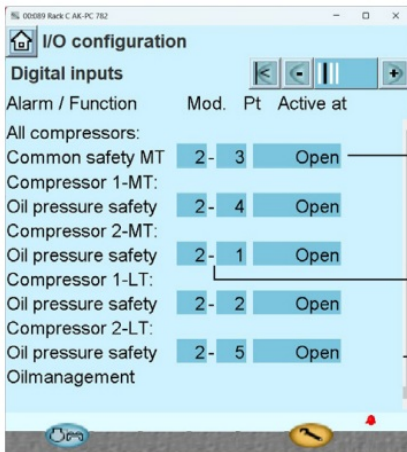


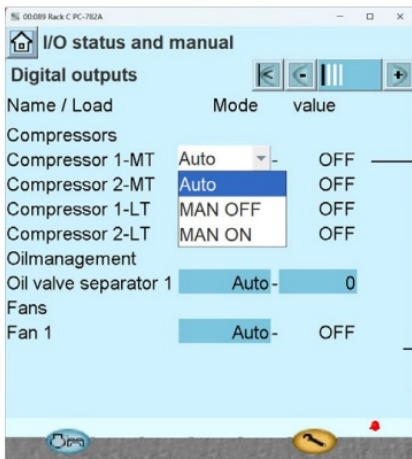
If "Active at" is set to open, it means the compressor safety is active with the input
In the open position. Compressor safeties are commonly setup to be active at closed (refer to manufacturer's drawings)

Verify MOD/PT assignments in the same fashion as described on pages 3 & 4.

Be sure to scroll down the page to verify all "Active at" selections.


AK-PC 782B digital output verification

Open ST500, press , then select “I/O status and manual”



The status of each digital output is shown in the value column. Toggle each output to Verify its operation.

Be sure to scroll down the page to verify all digital outputs.

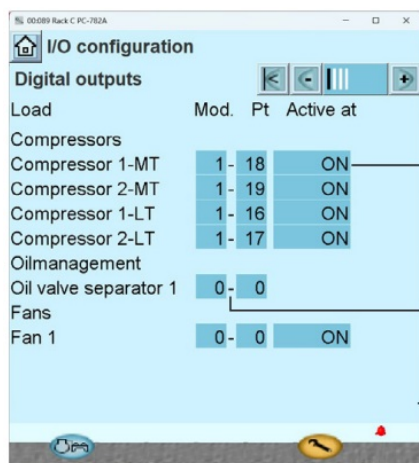


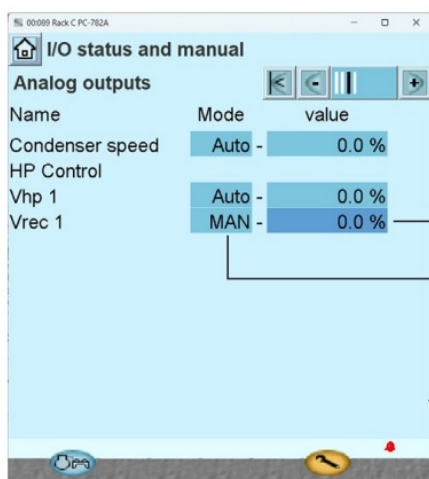
If "Active at" is set to ON, it means the relay is wired normally closed. The AK-PC782B will energize the relay to activate the compressor. If the device is wired normally open, select off.

Verify MOD/PT assignments in the same fashion as described on pages 3 & 4.

Be sure to scroll down the page to verify all "Active at" selections.

AK-PC 782B output input verification

Open ST500, press , then select "I/O status and manual". Press the "+" icon to move to "analog outputs" page




The status of each analog output is shown in the value column.

Toggle mode from Auto to MAN and set a manual valve percentage to verify operation.
Note: change mode back to auto for normal operation (Manual overrides stay forever).

Be sure to scroll down the page to verify all "Active at" selections.

If issues are present, verify MOD/PT assignments and "Type" selection.

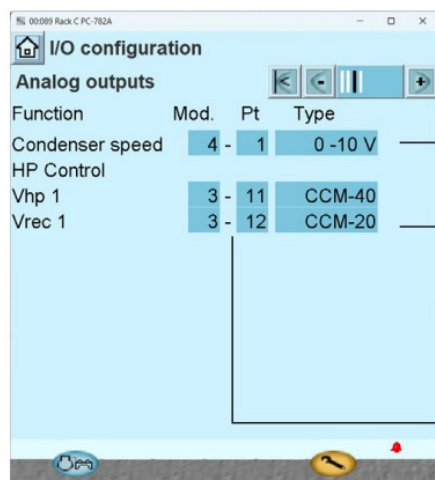

Analog voltage outputs can be defined as either
0 – 5 V
1 – 5 V
0 – 10 V
10 – 0 V
5 – 0 V


Select valve model listed on the valve name plate

Verify MOD/PT assignments in the same fashion as described on pages 3 & 4.

AK-PC 782B stepper valve wiring


Valves with integrated actuators example: CCM-40

AK-XM 208C REQUIRES
SEPARATE 24V AC/DC
POWER SUPPLY FOR VALVES


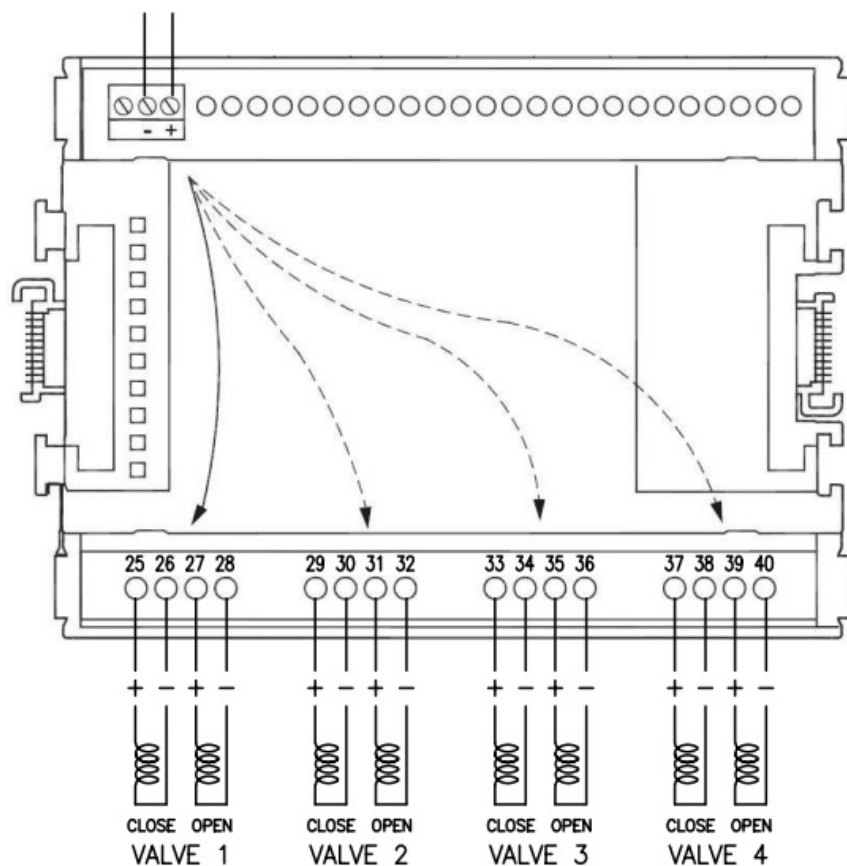


		TERMINAL ON XM 208C			
VALVE #	1	25	26	27	28
	2	29	30	31	32
	3	33	34	35	36
	4	37	38	39	40
ETS		WHITE	BLACK	RED	GREEN
CCM/CCMT					
CTR					
KVS 15					
KVS 42-54					

Valves with external ICAD actuators example: ICMTS-20

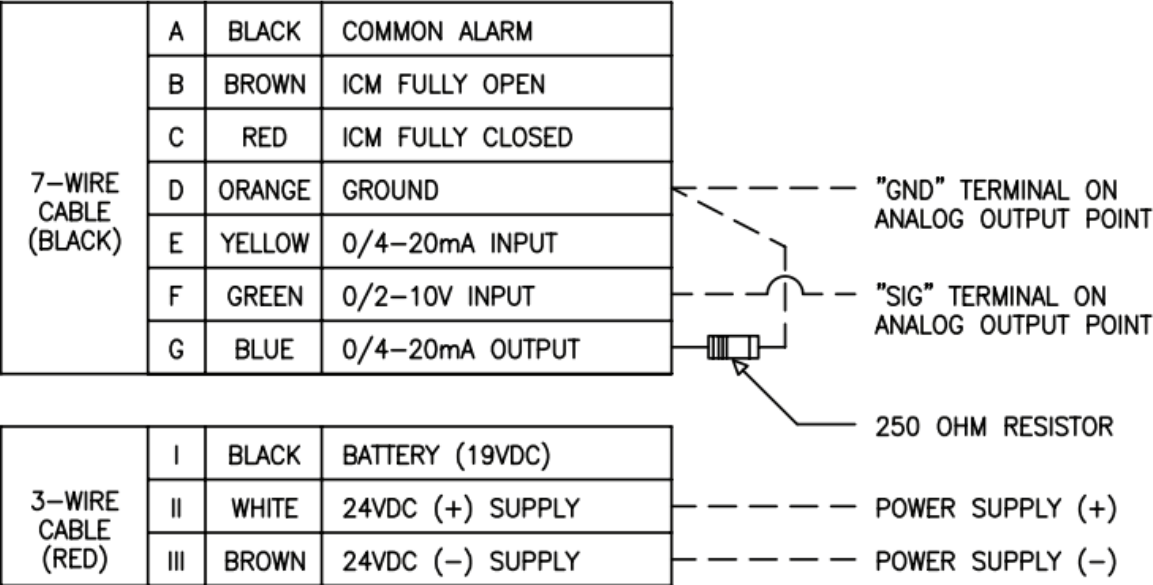

ICAD 600A/1200A quick start

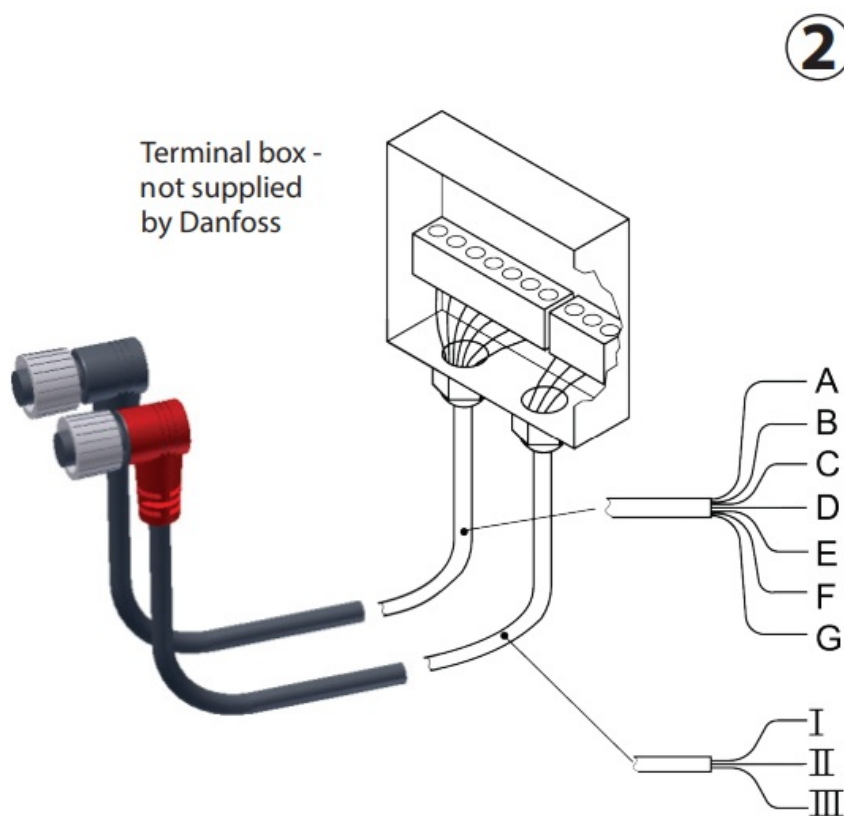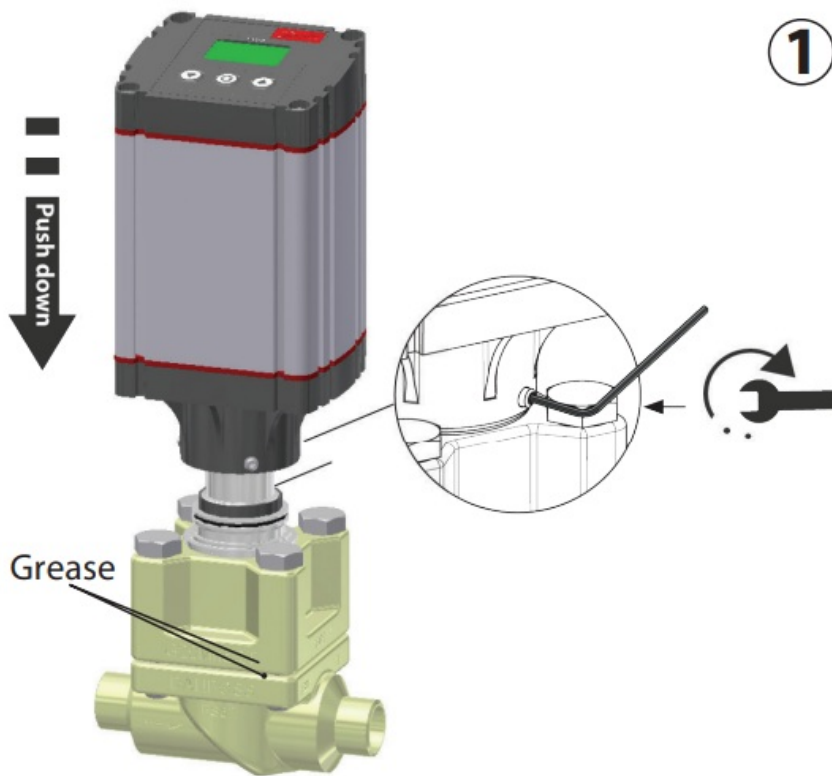

Note!

Cross tighten all 3 screws to ensure equal tightening. Max 3 Nm torque.

3



Please observe cable voltage drop Distance between the applied DC transformer and the ICAD terminal box may cause a voltage drop. Cross section of cables and size of DC transformer must be calculated so that the voltage at all time at the ICAD terminal box*, both during standstill and during operation of ICAD, is within this range:

Ref.	Colour		Description
A	Black	–	Common Alarm
B	Brown	–	ICM fully open
C	Red	–	ICM fully closed
D	Orange	–	GND ground
E	Yellow	+	0/4 – 20 mA In put
F	Green	+	0/2- 10V input or digital input for on/off control
G	Blue	+	0/4 – 20 mA Output

I	Black	+	Fail safe supply Battery/ UPS*19 V DC
II	White	+	Supply voltage 24 V DC
III	Brown		

* Uninterruptable Power Supply




Prefabricated ICAD cable length Code number		1.5m 027 H0426	3m 027H0438	10m 027 H0427	15 m 027 H043S
Voltage ICAD terminal (600N I 200A) (V DC]	Min.	21	22	23	24
	Max.	26.4			

* Do not measure inside the ICAD itself

Programming the ICAD


Note:


If the keypad is not operated within 20 seconds; time out will automatically exit programming mode.



-  Decrease value
-  Edit / Enter
-  Increase value


Valve size setup (mandatory)

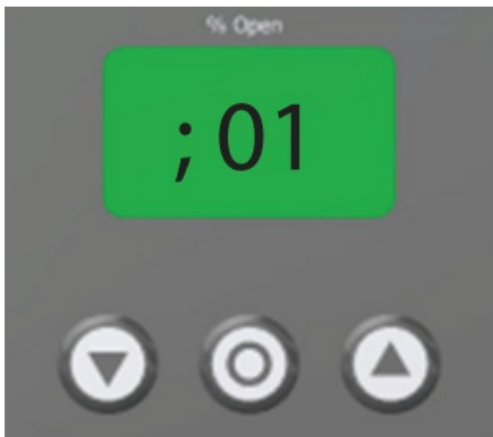

When powering up the ICAD, A1 will flash in the display


- Hold down  for 2 seconds to enter programming mode



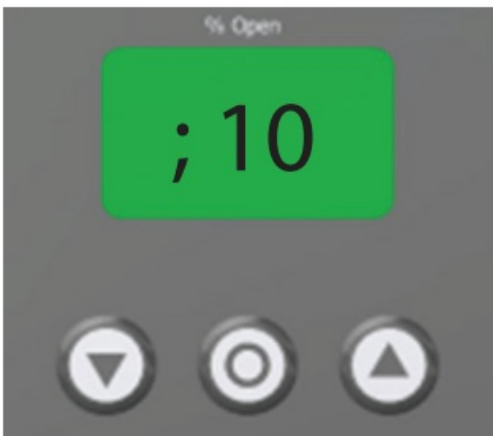


- Press  and go to parameter 10. Press 

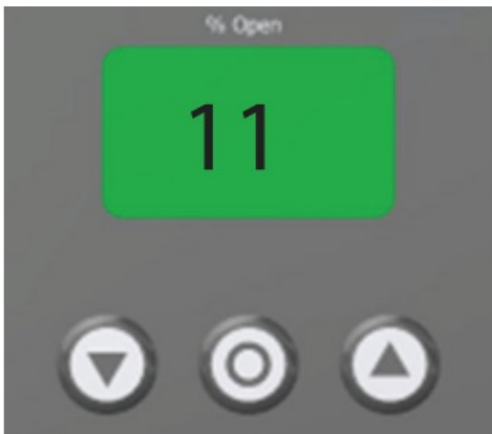


- Press  until you reach 11 (password). Press 



- Press  until you reach parameter 26 Press 

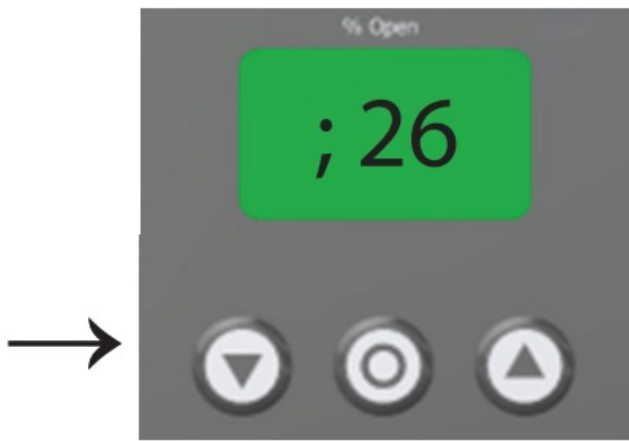



- Press  or  to select ICM size or CVE. Press 

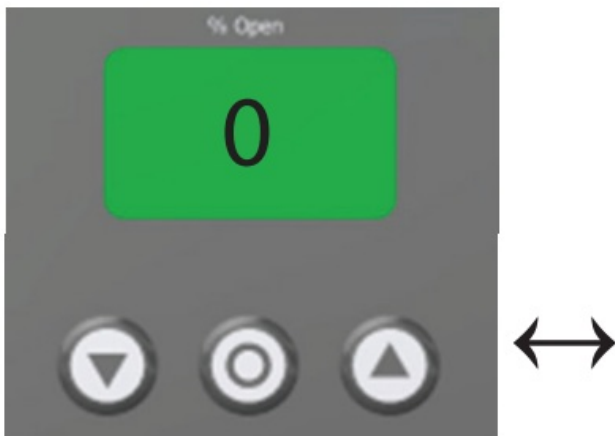


1. ICM 20 with ICAD 600A
2. ICM 25 with ICAD 600A
3. ICM 32 with ICAD 600A
4. ICM 40 with ICAD 1200A
5. ICM 50 with ICAD 1200A
6. ICM 65 with ICAD 1200A
7. ICM 100 with ICAD 1200A
8. ICM 125 with ICAD 1200A
9. ICM 150 with ICAD 1200A
10. CVE pilot with ICAD 1200A

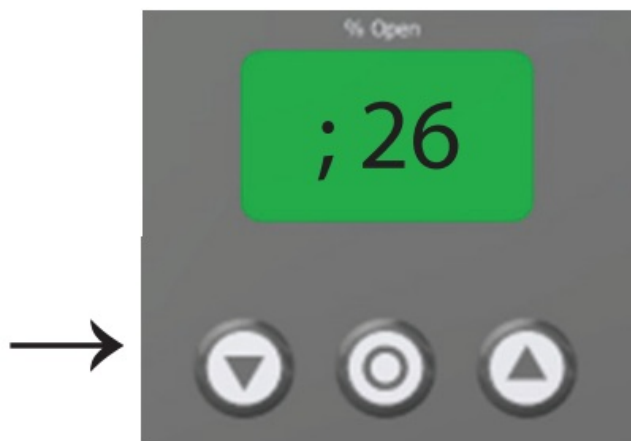


- ICM/CVE & ICAD is now calibrating

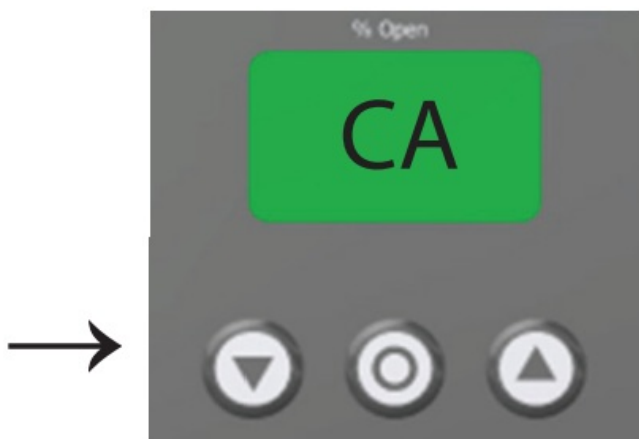

- Hold down  for 2 seconds to exit programming mode



Valve label ID:


ICM 20	ICM 25-65	ICM 100-150
		


NOTE !



If media temperature is lower than -30 °C (-22 °F) it is mandatory to set parameter i30 an i31.


See separate document attached in ICAD box: document number **AN285243155312**

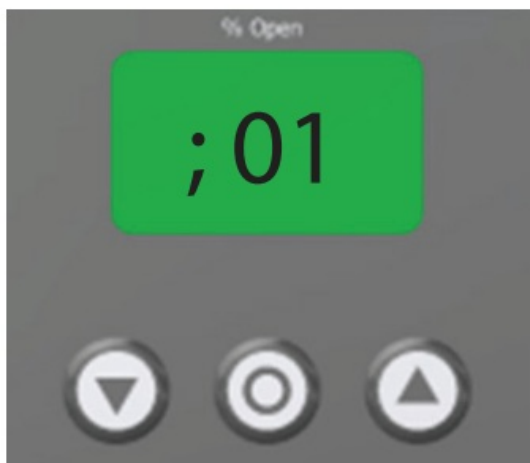

Changing analogue input signal (optional)


- Hold down  for 2 seconds to enter programming mode

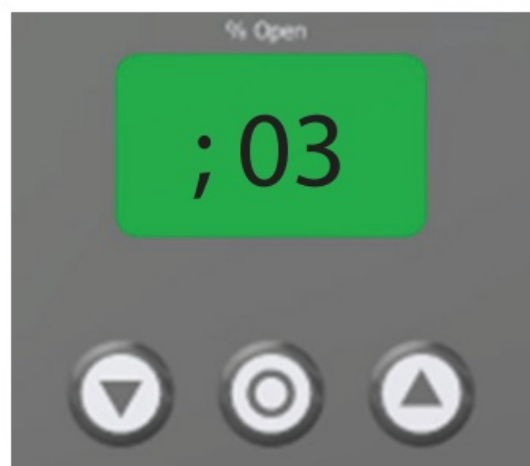

- Press  until you reach parameter 03. Press 




- Press  or  to select analogue input signal

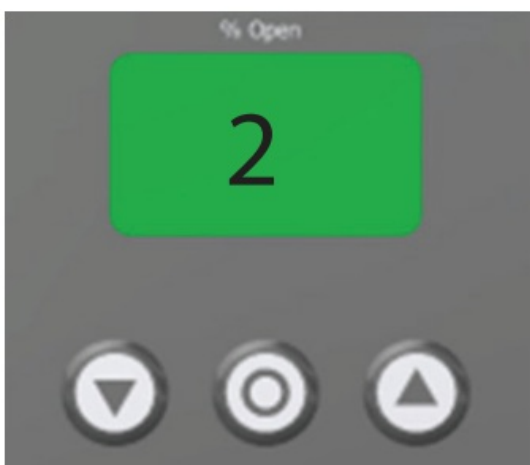


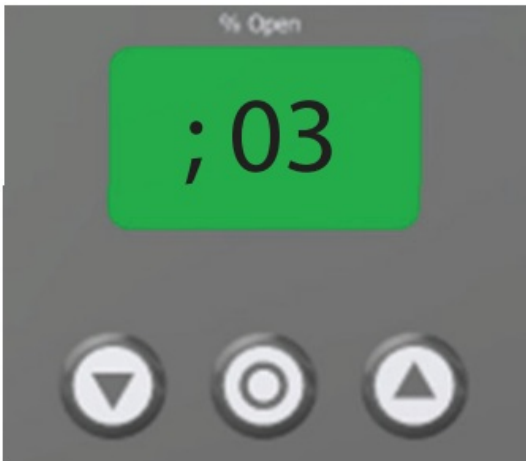
1. 1: 0 – 20 mA
2. 2: 4 – 20 mA*
3. 3: 0 – 10 V
4. 4: 2 – 10 V

* default factory setting

- Press 

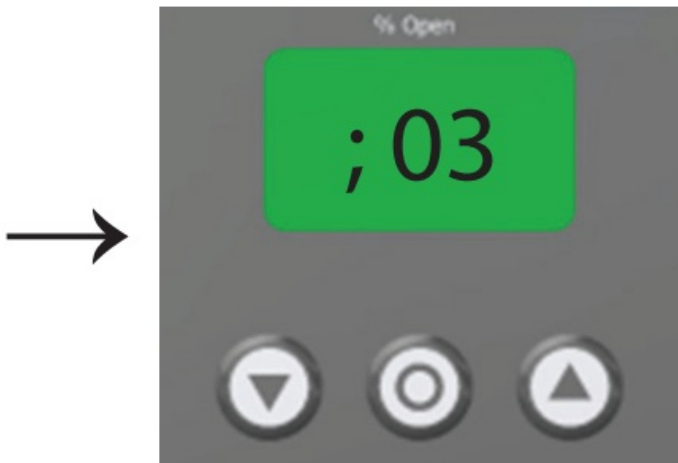

- Hold down  for 2 seconds to exit programming mode





- If A3 alarm occurs the analogue input signal is out of range



Factory reset of ICAD

Disconnect power 1

Press down  and  2
simultaneously while reconnecting power 1


Release  and  2




Note:

If factory reset has been performed the ICAD will start flashing A1 in the display.

AK-PC 782B high pressure valve settings

Open ST500, press  , then select “Setpoint management”. Press the “+” icon to move to “HP control” page.

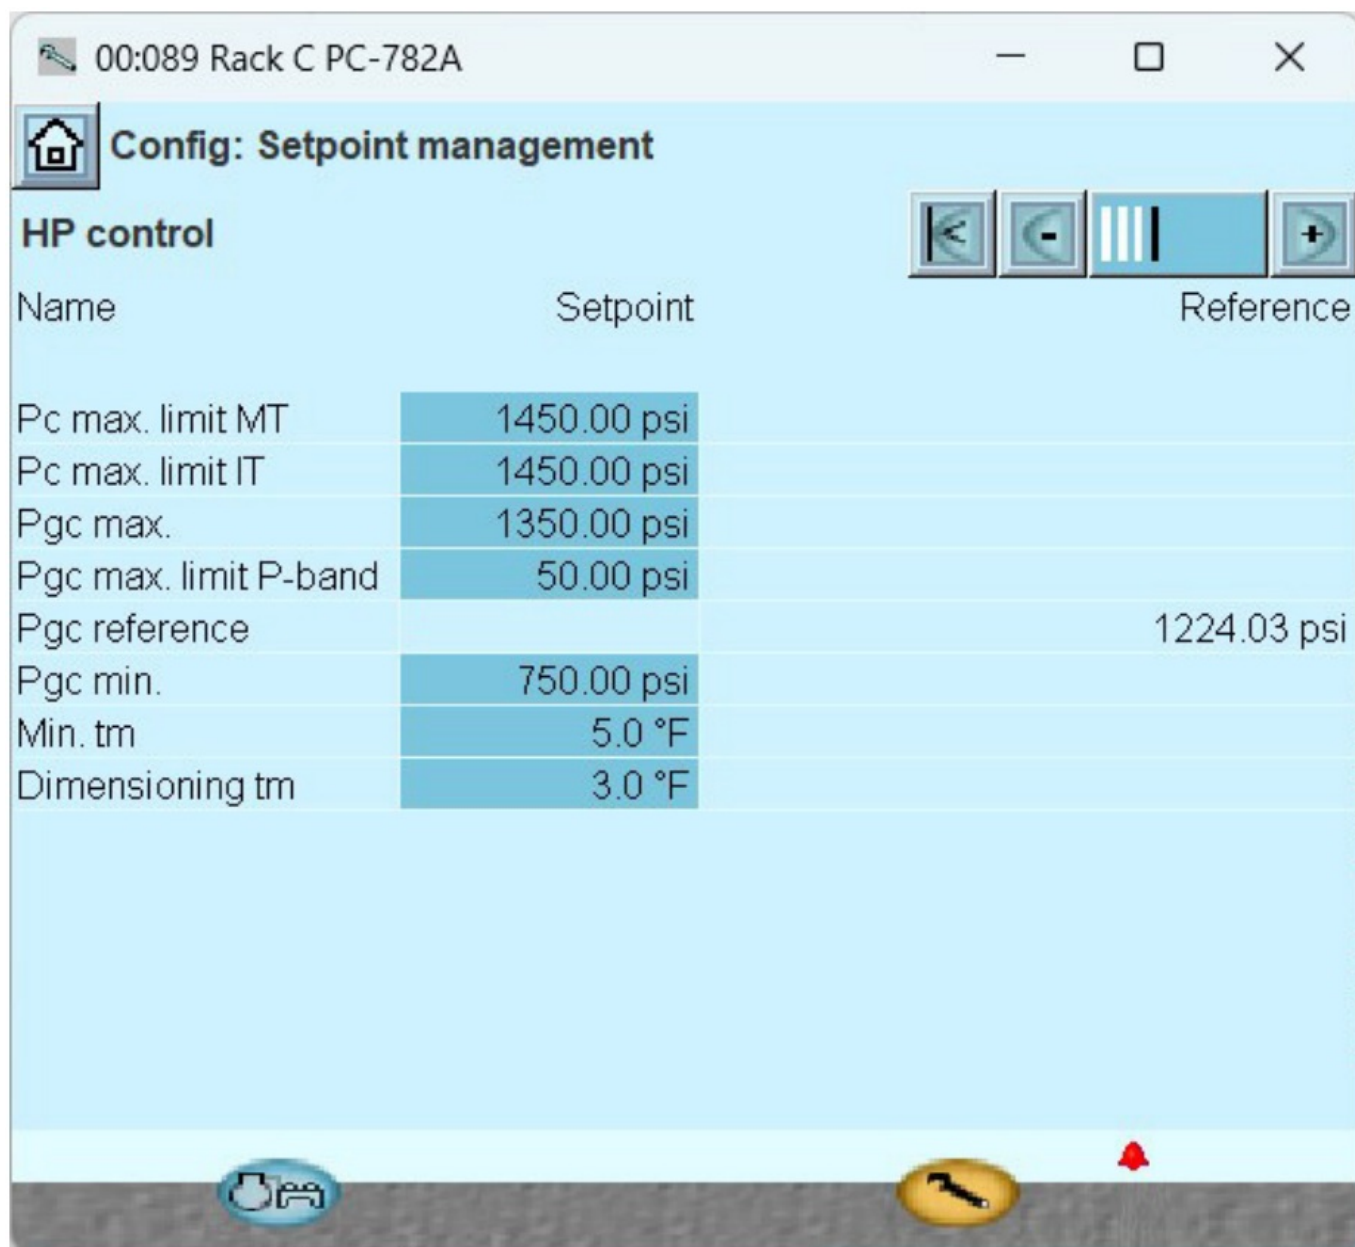

Pc max. limit MT = maximum allowable gas cooler psi. If pressure reaches pc max. limit MT minus Pgc

max. limit P-band, fans ramp to 100% and entire compressor capacity cuts off.

Example: 1450 psi – 50 psi = 1400 psi. If GC psi reaches 1400 psi, fans go to 100% and compressors are staged down until GC psi gets below pgc max. setting of 1350 psi. Pc max. Limit IT = same functionality as Pc max. limit MT

Pgc max. = maximum allowable gas cooler psi. Fan speed is used to maintain this setting. If fans alone do not reduce psi, the above setting is reached and compressors cut off


Pgc max. limit P-band = this value is subtracted from Pc max. limit setting to allow compressors to deactivate prior to reaching Pc max. limit setting Pgc min. = Minimum allowable gas cooler psi. (Low ambient setting)


Min. Tm = condenser fan speed setting for differential between Sc3 air probe and Sgc

gas cooler outlet probe. (This is the temperature delta setting for floating).

Dimensioning TM = similar to min. Tm setting. When all compressors are active the pack uses this setting in lieu of min. TM.

AK-PC 782B high ejector control settings

Open ST500, press  , then select “Setpoint management”. Press the “+” icon to move to “HP control” page.

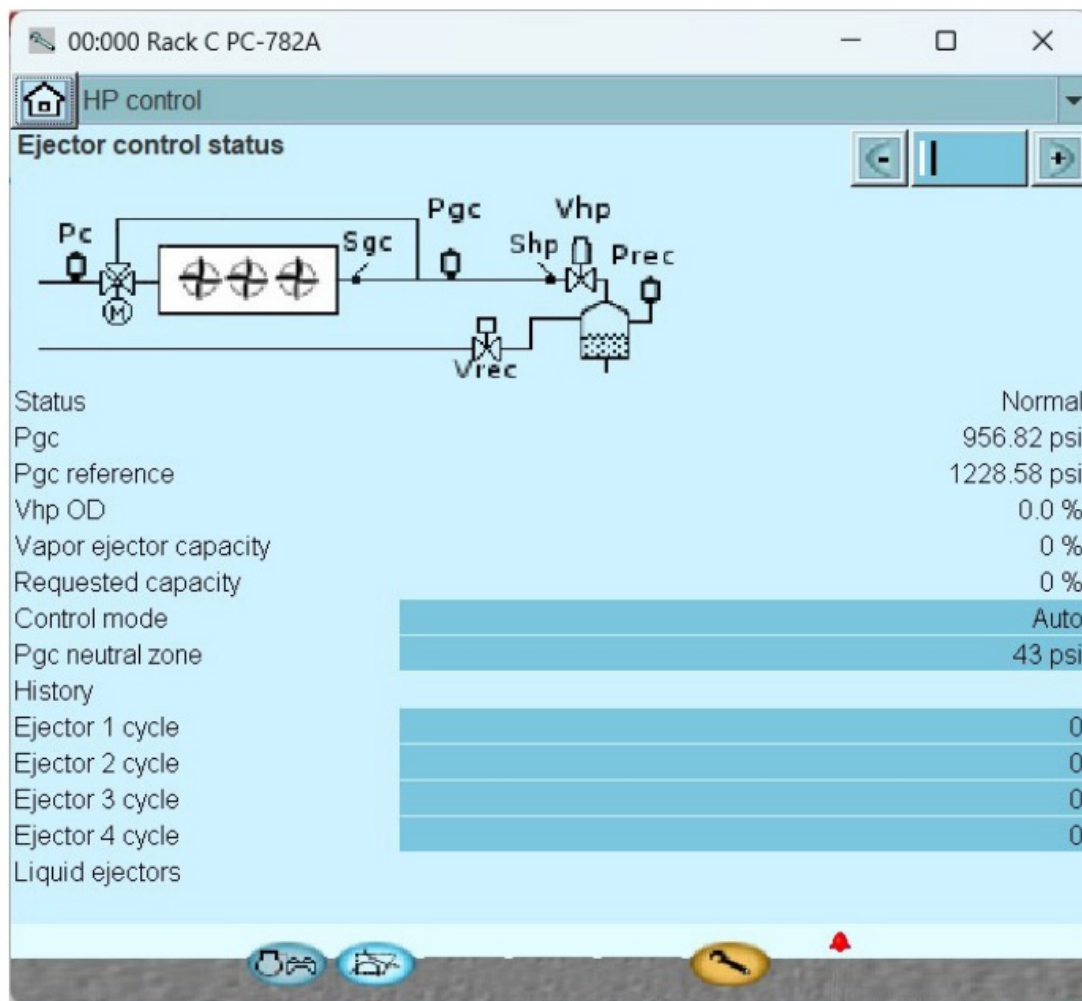

Control mode = auto means the pack controller is staging the ejectors. Man is mainly used for testing purposes and allows the user to define a percentage from 0 – 100 (remember to change this setting back to auto! The man settings remain forever).

Pgc neutral zone = this setting straddles Pgc max. Setting to determine when to activate and deactivate ejector stages. This prevents excessive cycling of ejector solenoids.

Example: Pgc max. = 1350 psi, Pgc neutral zone = 43 psi, ejectors staging will increase at 1371 psi and decrease at 1329 psi

Ejector 1 cycle = total number of time that ejector 1 has been activated since the last time the pack controller was power cycled.


Cycle rate: an ejector valve should not disconnect more than once/minute over. An

average of 24 hours. The setting Pgc neutral zone described above can be used to slow down ejector cycling. Increasing Pgc neutral zone reduces number of cycles

Wiring note: ejectors solenoids wire to solid state relay outputs. General operation: ejectors operate in a similar fashion as condenser fans. As the gas cooler psi increases, additional ejectors will activate. When the gas cooler psi decreases, ejectors will deactivate. The pack controller will stage ejectors in random order when needed to keep the cycle counts relatively close to each other.

AK-PC 782B receiver bypass valve settings

Open ST500, press , then select "Setpoint management". Press the "+" icon to move to "receiver control" page

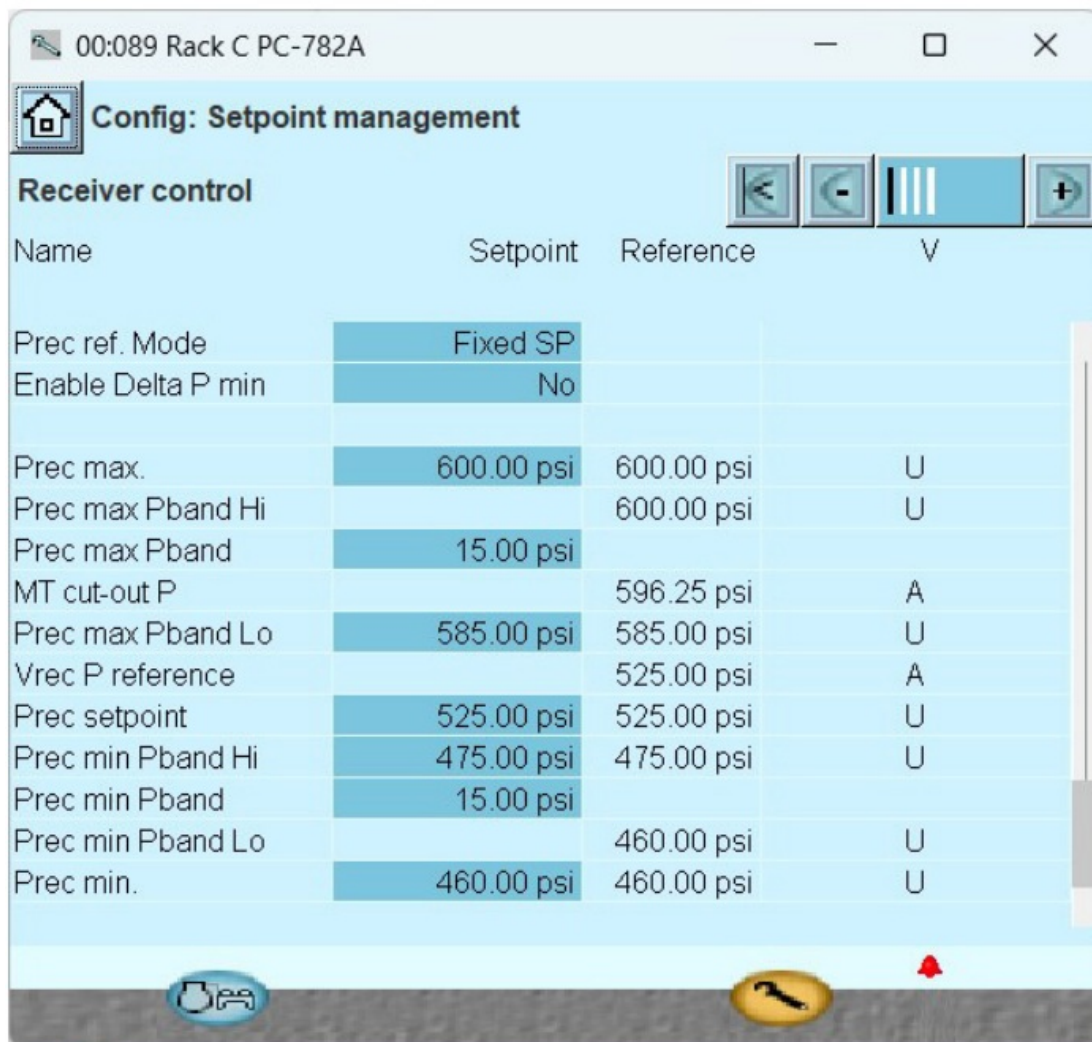

Name	Setpoint	Reference	V
Prec ref. Mode	Fixed SP		
Enable Delta P min	No		
Prec max.	600.00 psi	600.00 psi	U
Prec max Pband Hi		600.00 psi	U
Prec max Pband	15.00 psi		
MT cut-out P		596.25 psi	A
Prec max Pband Lo	585.00 psi	585.00 psi	U
Vrec P reference		525.00 psi	A
Prec setpoint	525.00 psi	525.00 psi	U
Prec min Pband Hi	475.00 psi	475.00 psi	U
Prec min Pband	15.00 psi		
Prec min Pband Lo		460.00 psi	U
Prec min.	460.00 psi	460.00 psi	U

P rec ref. Mode = leave this as fixed SP

Enable Delta P min = leave this as No

P rec max. = maximum allowable receiver pressure. Also P rec max P band Hi setting

P rec max P band = this value is subtracted from P rec max. Setting to arrive at P rec max P band Lo setting. once value is reached valve to drive to 100% open

P rec max P band Lo = safety value if reached will cause valve to open 100%


P rec setpoint = this setting defines the target receiver pressure


P rec min P band Hi = this value equals P rec min. Setting plus P rec min P band. Once this value is reached the valve will drive to the 100% closed position

P rec min P band = this value is added to P rec min. To close the receiver valve Prior to reaching P rec min. setting

P rec min. = going below this value will generate a low receiver pressure alarm

AK-PC 782B low temp suction group settings

Open ST500, press , then select "Setpoint management". Press the "+" icon to move to "LT control" page

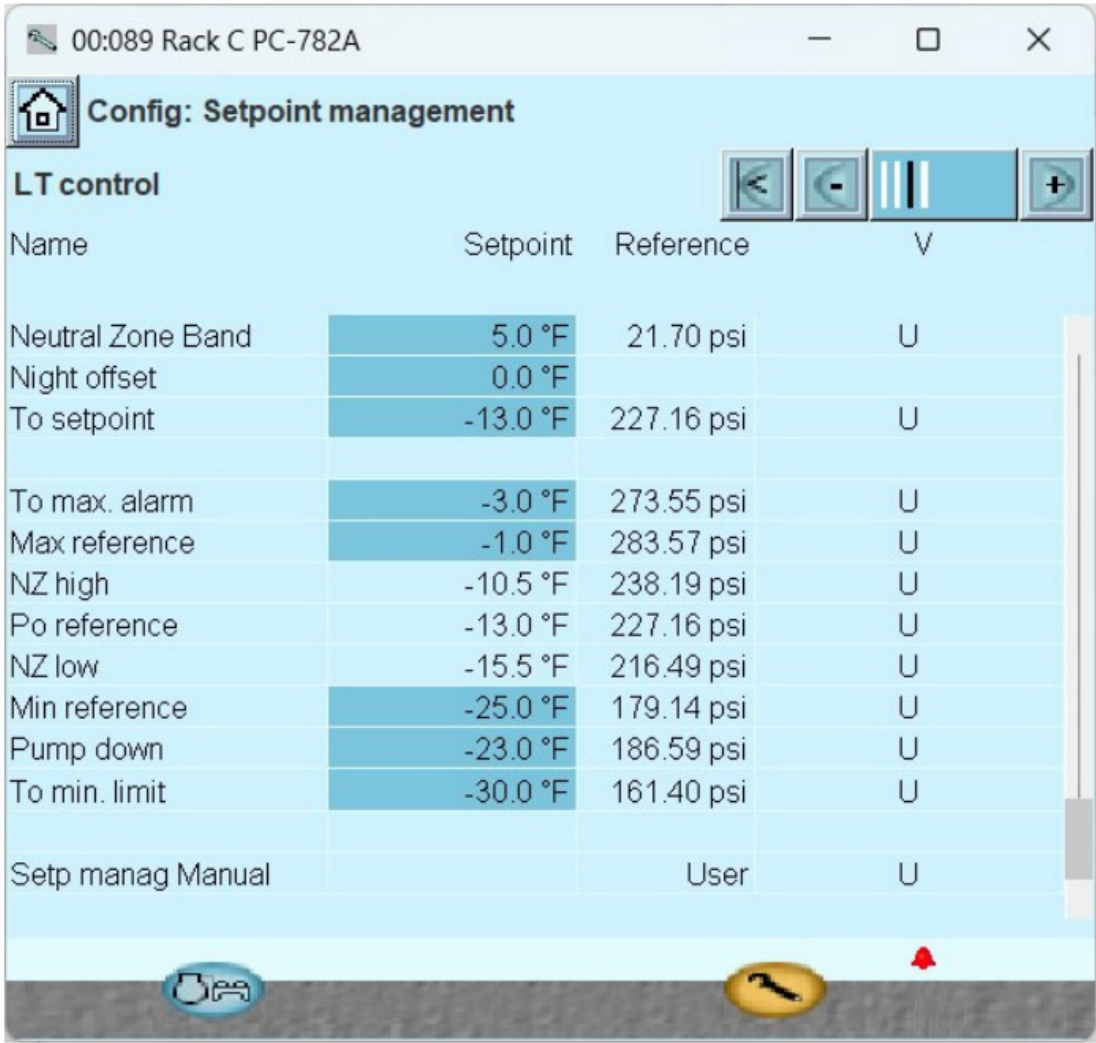

Name	Setpoint	Reference	V
Neutral Zone Band	5.0 °F	21.70 psi	U
Night offset	0.0 °F		
To setpoint	-13.0 °F	227.16 psi	U
To max. alarm	-3.0 °F	273.55 psi	U
Max reference	-1.0 °F	283.57 psi	U
NZ high	-10.5 °F	238.19 psi	U
Po reference	-13.0 °F	227.16 psi	U
NZ low	-15.5 °F	216.49 psi	U
Min reference	-25.0 °F	179.14 psi	U
Pump down	-23.0 °F	186.59 psi	U
To min. limit	-30.0 °F	161.40 psi	U
Setp manag Manual		User	U

Neutral zone band = this setting straddles to setpoint setting to determine when to activate and de active compressor stages. Inverter is used to stay within neutral zone.

Example: to setpoint = -13.0 °F, neutral zone band = 5.0 °F, compressor staging will increase at 15.5 °F and decrease at 10.5 °F

Night offset = a digital input can be used to increase to setpoint during non-trading hours

to reduce system energy usage

To setpoint = this setting defines the target suction temperature

To max. alarm = going above this setting will generate a high temperature alarm


Max. reference = maximum value of the pressure transducer


Min. reference = minimum value of the pressure transducer

Pump down = if this value is reached the compressors will be cut off

To min. Limit = if this setting is reached all compressor activity is lock off. This differs from pump down setting in that to min. Limit also disables the receiver valve

AK-PC 782B medium temp suction group settings

Open ST500, press  , then select “Setpoint management”. Press the “+” icon to move to “MT control” page.

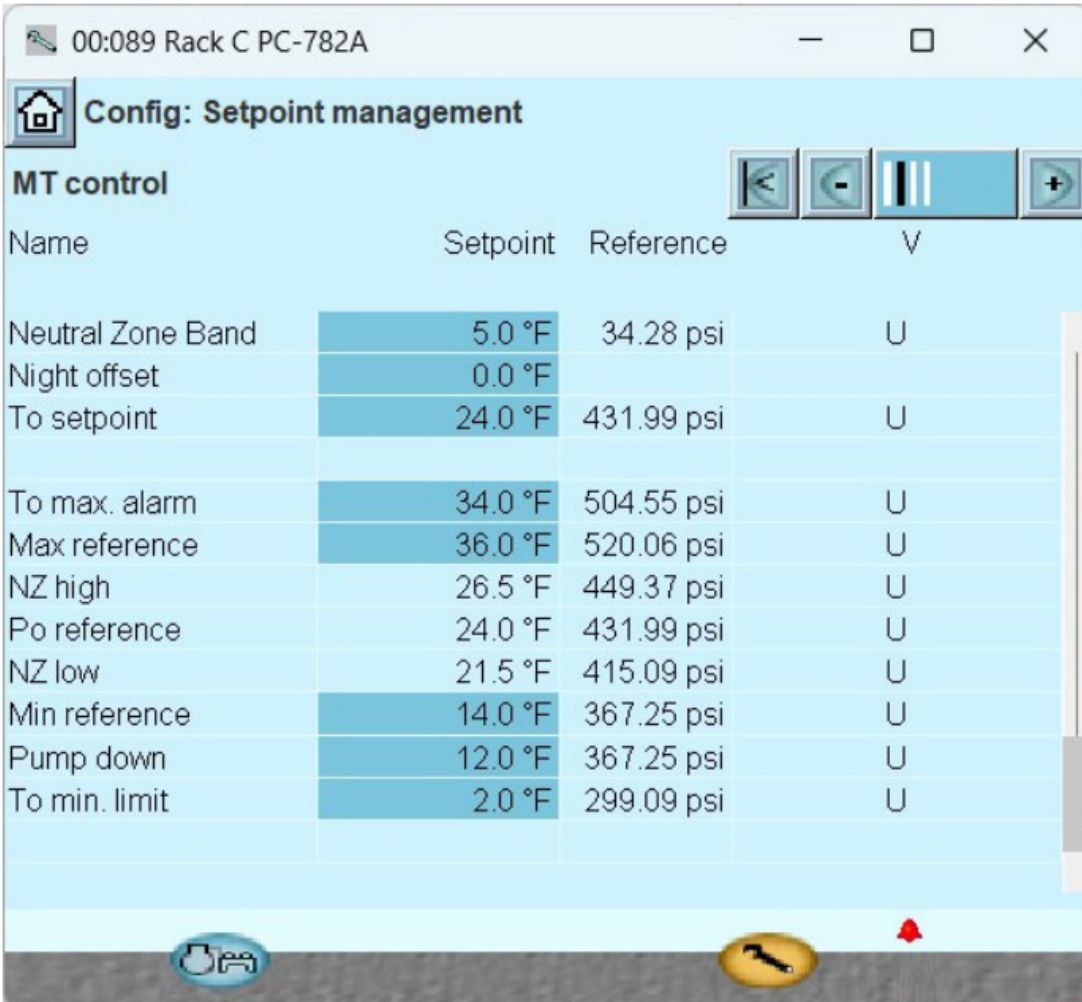

Name	Setpoint	Reference	V
Neutral Zone Band	5.0 °F	34.28 psi	U
Night offset	0.0 °F		
To setpoint	24.0 °F	431.99 psi	U
To max. alarm	34.0 °F	504.55 psi	U
Max reference	36.0 °F	520.06 psi	U
NZ high	26.5 °F	449.37 psi	U
Po reference	24.0 °F	431.99 psi	U
NZ low	21.5 °F	415.09 psi	U
Min reference	14.0 °F	367.25 psi	U
Pump down	12.0 °F	367.25 psi	U
To min. limit	2.0 °F	299.09 psi	U

Neutral zone band = this setting straddles to setpoint setting to determine when to activate and de active compressor stages. Inverter is used to stay within neutral zone.
Example: to setpoint = -13.0 °F, neutral zone band = 5.0 °F, compressor staging will increase at 15.5 °F and decrease at 10.5 °F

Night offset = a digital input can be used to increase to setpoint during non-trading hours to reduce system energy usage

To setpoint = this setting defines the target suction temperature

To max. Alarm = going above this setting will generate a high temperature alarm

Max reference = maximum value of the pressure transducer


Min reference = minimum value of the pressure transducer

Pump down = if this value is reached the compressors will be cut off.

To min. Limit = if this setting is reached all compressor activity is lock off. This differs from pump down setting in that to min. Limit also disables the receiver valve.

AK-PC 782B IT (parallel compression) suction group settings

Open ST500, press  , then select "Setpoint management". Press the "+" icon to move to "MT control" page.

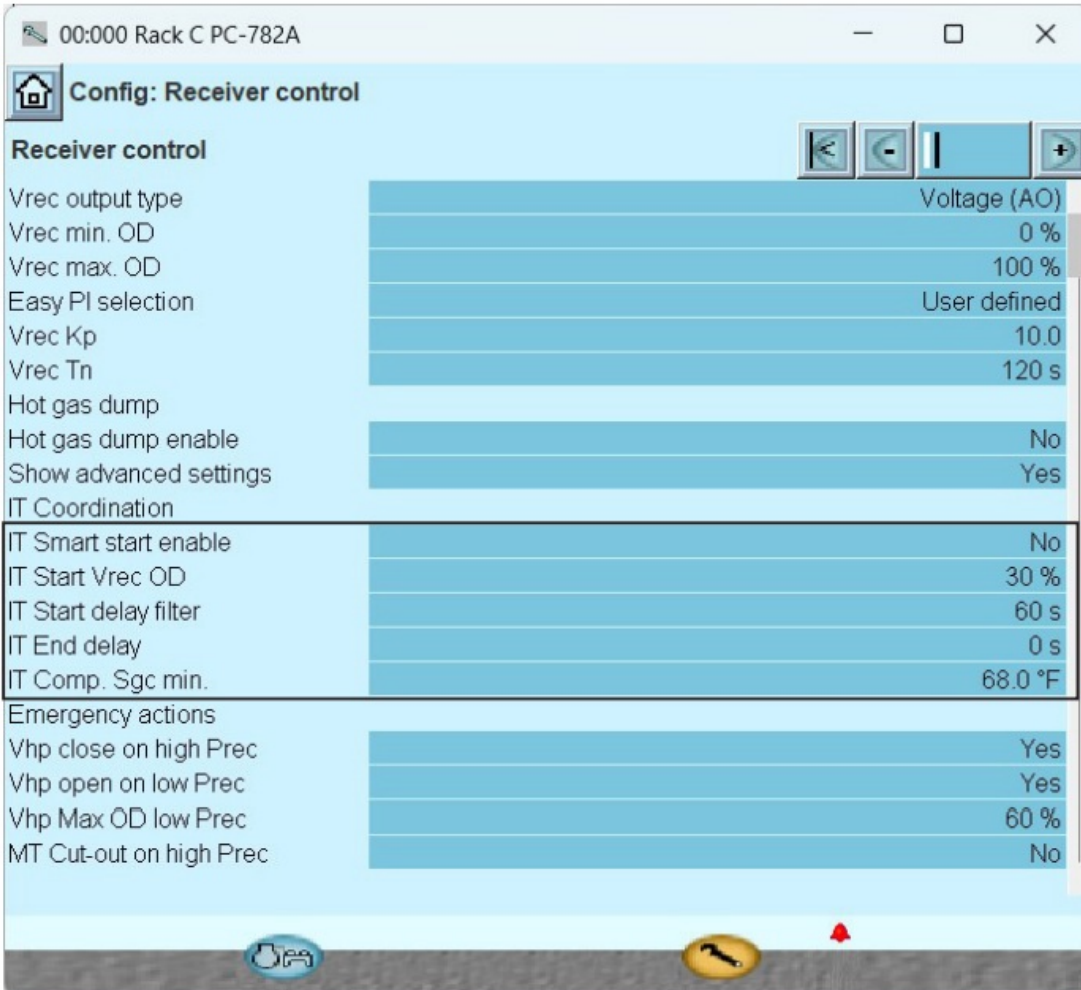

Config: Receiver control	
Receiver control	
Vrec output type	Voltage (AO)
Vrec min. OD	0 %
Vrec max. OD	100 %
Easy PI selection	User defined
Vrec Kp	10.0
Vrec Tn	120 s
Hot gas dump	
Hot gas dump enable	No
Show advanced settings	Yes
IT Coordination	
IT Smart start enable	No
IT Start Vrec OD	30 %
IT Start delay filter	60 s
IT End delay	0 s
IT Comp. Sgc min.	68.0 °F
Emergency actions	
Vhp close on high Prec	Yes
Vhp open on low Prec	Yes
Vhp Max OD low Prec	60 %
MT Cut-out on high Prec	No

Operation note: initial settings for when the it suction group is activated are located in the receiver control section of ST500. It is here that you define at what V rec % the IT suction group is activated.

IT smart start enable = the pack control can automatically calculate ideal IT start V rec

OD if this option is set to Yes. Otherwise the user defines IT start V rec OD.

IT start V rec OD = this is the % that V rec has to be open before the receiver gas load is shifted to the IT compressor group.

IT start delay filter = once V rec reaches it start v record, the number of seconds defined must expire

before the IT suction group activates. Basically an ON delay for IT group.

IT end delay = OFF delay for IT group before switching control back to V rec


IT Comp. Sg c min. = the gas cooler outlet temp must be above this value for the IT suction group to activate. This ensures enough load to the group to keep it running.

AK-PC 782B oil reservoir setup


Open ST500, press  , then select "Oil management"

There are three options for the oil Reservoir level switch:


None = a level switch is defined and the input has a physical jumper that remains in place. The emptying sequence repeats indefinitely as defined by the settings shown on the next page.

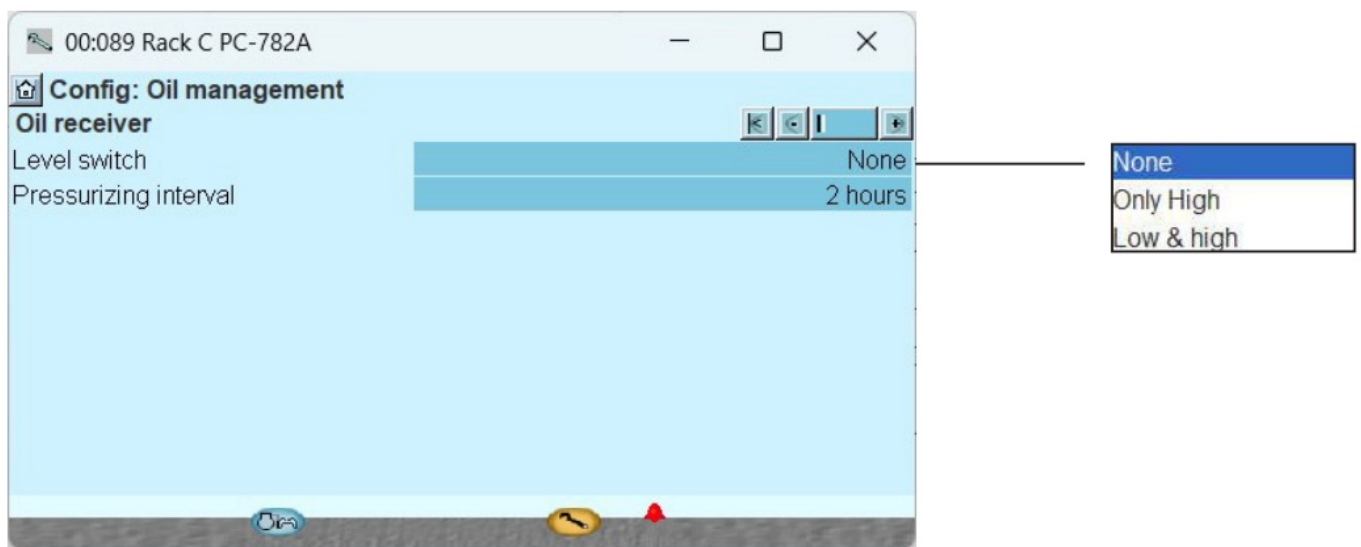


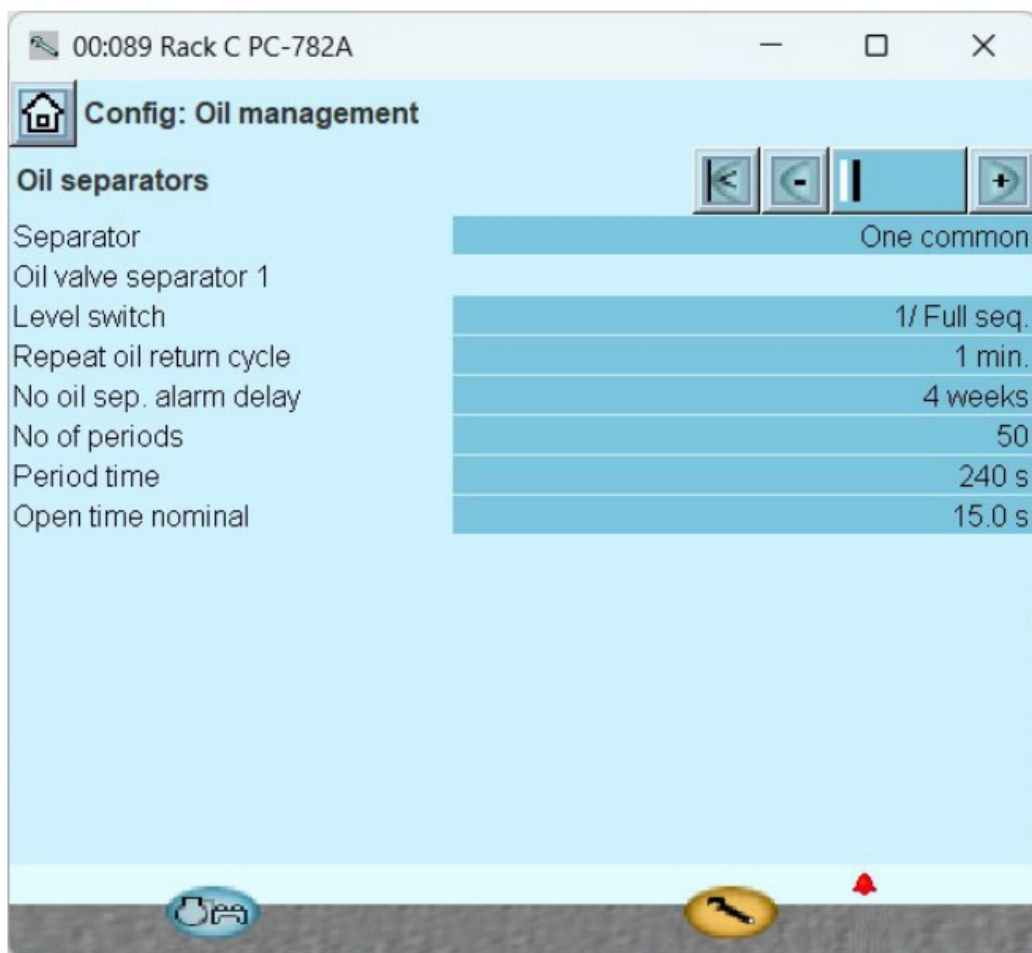
Only high = the level switch indicates the Reservoir is full and starts the emptying sequence. Once the level drops below the switch the sequence stops until the high level switch is activated again.

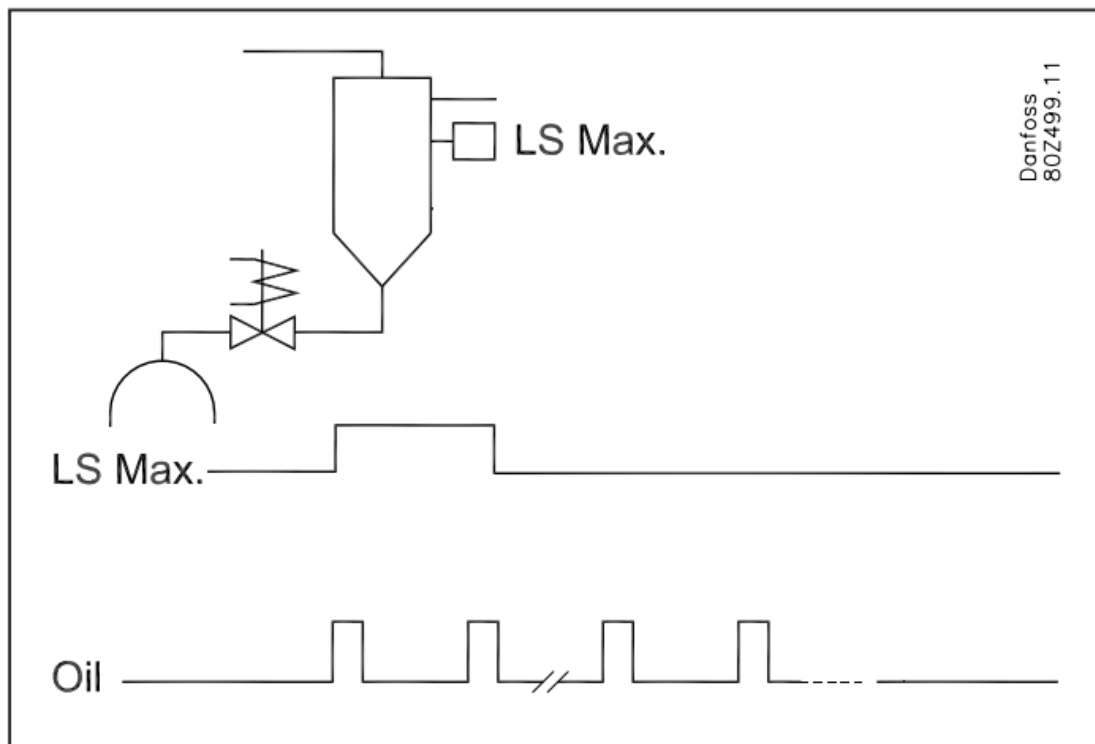

Low & High = the emptying sequence starts when the high level switch activates and continues until the low level switch is activated.

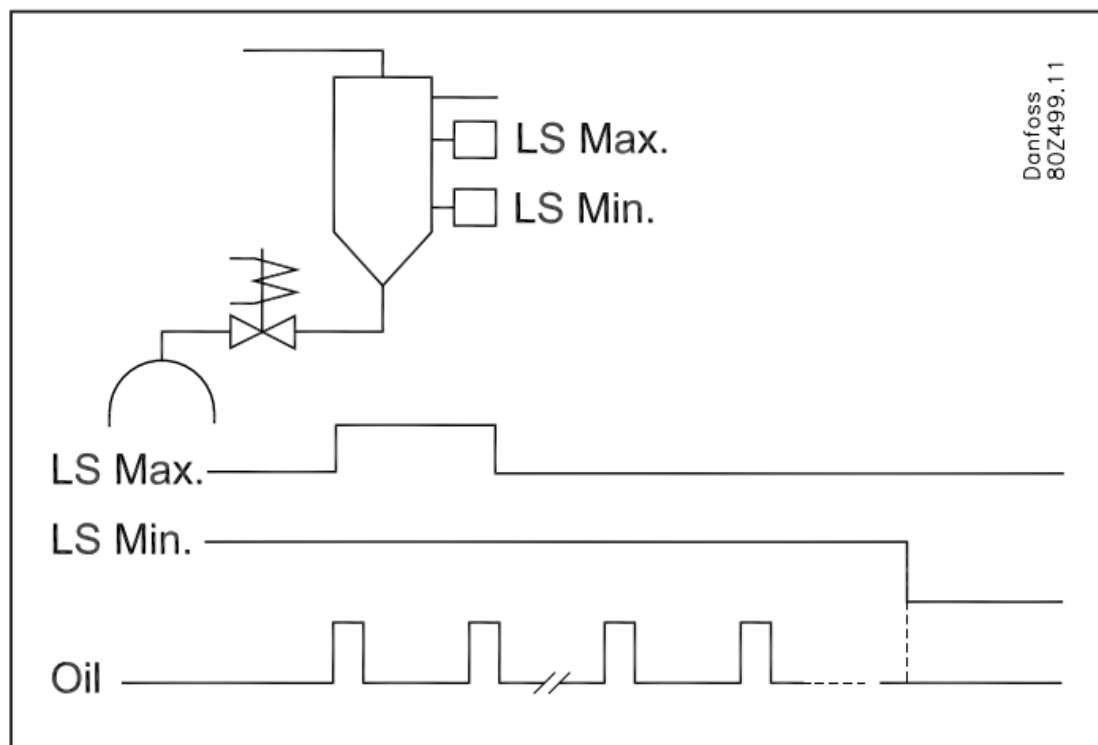

Open ST500, press , then select "Oil management". Press the "+" icon to move to next page



Separator = select the number of oil reservoirs

Level switch = 1 /Full seq. is used for both none and only High. Low & high is selected on systems with both a high and low level switch on the oil reservoir.

Repeat oil return cycle = time between emptying sequences

No oil Sep. alarm delay = alarm delay if high-level never activates

No of periods = times oil pulse valve should open during emptying sequence

Period time = time between valve openings

Open time nominal = time valve is open during the period

Example: based on the settings above, when the emptying sequence starts it will pulse the oil reservoir dump valve for 15 seconds every four minutes.

CUSTOMER SUPPORT

Danfoss A/S

- Climate Solutions
- danfoss.com
- +45 7488 2222


Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, on line or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.


www.danfoss.com



Documents / Resources

	Danfoss AK-PC 782B IP Communication Enabled [pdf] User Guide AK-PC 782B IP Communication Enabled, AK-PC 782B, IP Communicatio n Enabled, Communication Enabled, Enabled
---	---

References

-  [Engineering Tomorrow | Danfoss](#)
- [User Manual](#)

Related Posts

[Danfoss Pack Controller AK-PC 782B with USB-B Installation Guide](#)

Danfoss Pack Controller AK-PC 782B with USB-B Installation Guide Pack Controller,

⚠ WARNING: Ensure power is...



[Danfoss AK-PC 781B Pack Controller Installation Guide](#)



ENGINEERING TOMORROW Installation Guide Pack Controller, type AK-PC 781B with USB-B AK-PC 781B Pack Controller -20°C<tamb , <55°C...



[Danfoss AK-OB55 Modbus TCP IP Communication Module Installation Guide](#)

Danfoss AK-OB55 Modbus TCP IP Communication Module Product Information Specifications Product Name: Danfoss 84B8263 Communication Module: AK-OB55 Modbus...



[Danfoss AK-PC 651A Pack Controller Installation Guide](#)

Installation Guide Pack controller Type AK-PC 651A Identification IP 20 CE: -20 – +60 °C, UL: 0 –...

■ Danfoss

🔍 AK-PC 782B, AK-PC 782B IP Communication Enabled, Communication Enabled, Danfoss, Enabled, IP Communication Enabled

—Previous Post

[Danfoss Large Commercial Compressor Instructions](#)

Next Post—

[Danfoss PC 78xA IDCM Programming Software User Guide](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment



Search

Search ...

Search

@manualsplus YouTube

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.