



Danfoss RT 1AL Pressure Switch Installation Guide

[Home](#) » [Danfoss](#) » Danfoss RT 1AL Pressure Switch Installation Guide 



ENGINEERING
TOMORROW
Installation guide
Pressure switch
RT 1AL, RT 5AL, RT 110L, RT 117L, RT 200L




017R9317

Contents

- [1 RT 1AL Pressure Switch](#)
- [2 Technical data](#)
- [3 Fitting](#)
- [4 Mains connection](#)
- [5 Setting](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

RT 1AL Pressure Switch

Info for UK customers only: Danfoss Ltd., 22 Wycombe End, HP9 1NB,

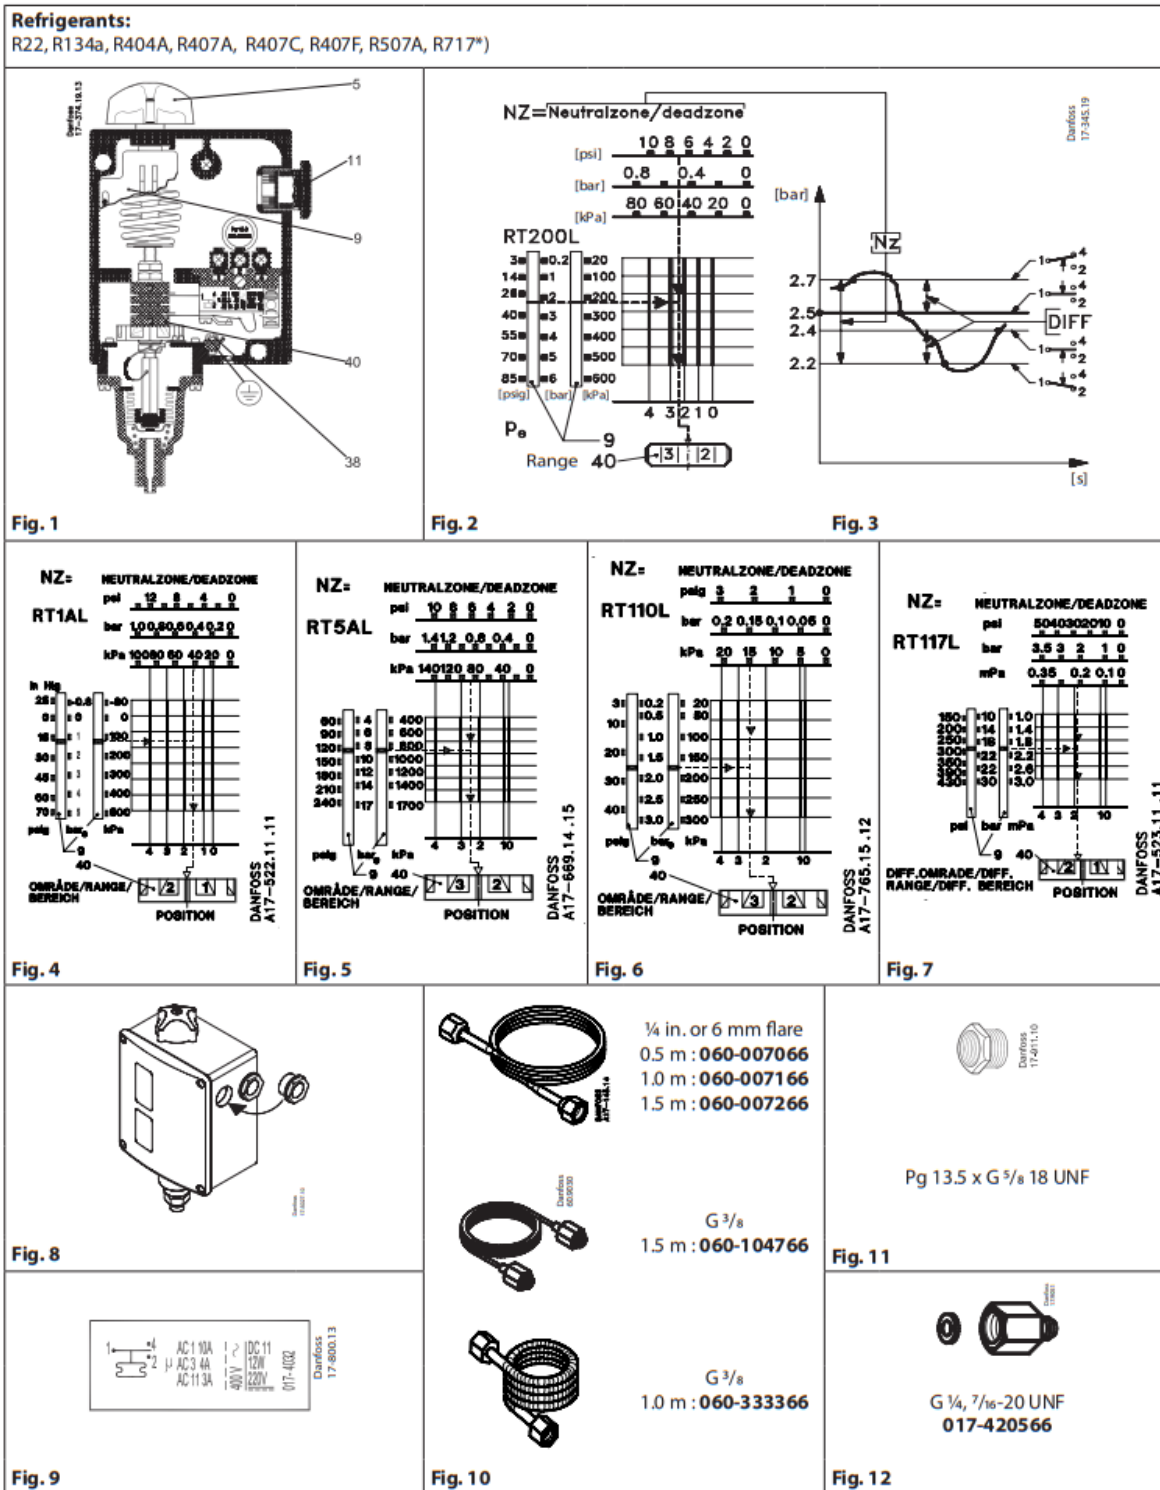

Pressure switch (with the neutral zone)

*) Only for RT 1AL, RT 5AL

For a complete list of approved refrigerants, visit www.products.danfoss.com and search for individual code numbers, where refrigerants are listed as part of technical data.

Technical data

Reference list

- 5. Knob
- 9. Main scale
- 38. Earth terminal
- 40. Setting disc
- Regulating range

As shown on the main scale (9), figs. 2, 4, 5 and 7.

Contact differential (DIFF)

0.08 bar for RT 110L

0.2 bar for RT 1AL

0.25 bar for RT 200L

0.35 bar for RT 5AL

1.0 bar for RT 117L

Contact load

See contact cover or fig. 9.

The rating, e.g. 10 (4) A, 400 V~ AC, indicates that the maximum load is 10 A ohmic and 4 A inductive at 400 V ~ AC.

The maximum start current at the cut-in of a moto(L.R.) is seven times the inductive load.

Ambient temperature: -50 °C – 70 °C.

Max. test pressure

RT 1AL, RT 200L : 25 bar (pe)

RT 110L: 8 bar (pe)

RT 5AL : 25 bar (pe)

RT 117L: 47 bar (pe)

Neutral zone (NZ)

As shown on the NZ scale, figs. 2, 4, 5, 6 and 7

Fitting

A set of Pg13.5 cable glands is attached to the RT in a separate bag. To ensure IP66 (units with automatic reset) or IP54 (units with external reset) grade of RT enclosure it is necessary to assemble this gland as shown in the fig. 8. If this gland is not used with a cable, a metal blinding should be also assembled.

The pressure controller should be fitted with the knob (5) facing upwards.

Mains connection

Cable connection Pg 13.5

Cable diameter 6 – 14 mm.

When a rigid cable conduit is used, the connection should be to the screwed cable entry shown in fig. 11.

Earth connection to earth terminal (38).

Fit the protective cap.

Setting

The pressure required (= cut-out pressure for contacts 1 – 4) is set by turning the knob (5), and reading the main scale (9) at the same time.

The neutral zone (NZ) required is found on the diagram for the controller in question. The value for which the setting disc (40) is to be set, can be read on the lower scale of the diagram.

Example: RT 200L

Required pressure: 2.5 bar (pe)

Required neutral zone (NZ) : 0.5 bar

Set the pressure controller at 2.5 bar (pe) by turning the knob (5).

As it can be seen from the diagram, the required neutral zone of 0.5 bar is obtained by setting the setting disc (40) at the value of 2.4.


When DIFF = 0.2 bar, the cut-in and cut-out pressures of the switch (fig. 3) are: Cut-in pressures for contacts 1-4: $2.5 + 0.2 = 2.7$ bar (pe).

Cut-out pressures for contacts 1 – 4: pressure setting = 2.5 bar (pe).

Cut – in pressure for contacts 1 – 2: $2.7 - 0.5 = 2.2$ bar (pe).

Cut – out pressure for contacts 1 – 2: $2.2 + 0.2 = 2.4$ bar (pe).

Documents / Resources

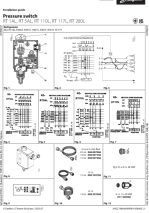	<p>Danfoss RT 1AL Pressure Switch [pdf] Installation Guide RT 1AL, RT 5AL, RT 110L, RT 117L, RT 200L, RT 1AL Pressure Switch, RT 1AL, Pressure Switch, Switch</p>
---	---

References

-  [Danfoss - Engineering Tomorrow | Danfoss](#)
-  [Danfoss Global Product Store | Homepage](#)