



DAVIS LIGHTING KWIK-E2 Series LED Exit Light Instruction Manual

[Home](#) » [DAVIS LIGHTING](#) » DAVIS LIGHTING KWIK-E2 Series LED Exit Light Instruction Manual 



KWIK-E2 Series LED Exit Light

210617

Installation Instructions

This installation guide is valid for the following models: KWIK-E2LI (C0: D2.5 / C90: D2.0)

Contents

- [1 PRIOR TO INSTALLATION](#)
- [2 INSTALLATION](#)
- [3 BATTERY REPLACEMENT](#)
- [4 EMERGENCY CLASSIFICATION](#)
- [5 DIMENSIONS](#)
- [6 OPERATION & TESTING](#)
- [7 MAINTENANCE](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

PRIOR TO INSTALLATION



- Read all instructions to prevent injury, electric shock, or damage due to fire or mechanical hazards
- See product label for supply specifications
- Suitable for surface mounting



Open the carton and check that it contains the following:

1 x KWIK-E2 LED Exit Light

4 x Running man pictograms (1 x left arrow, 1 x right arrow, 2 x no arrow)

1 x Installation instructions (this document)

Inspect the luminaire and associated parts for any signs of defect, in particular fasteners, cables, and the diffuser or glass lens


DO NOT INSTALL THE LUMINAIRE IF IT APPEARS IN ANY WAY FAULTY

Consult with the supplier/sales office for details regarding replacement




- Before commencing installation or maintenance, turn off and isolate the electrical supply
- Electronic control equipment must not be subjected to high voltages. DO NOT MEGGER between Live and Neutral
- All cable/conduit terminations must be installed in accordance with the designated IP rating of this product
- Suitable installation fastening methods should be employed to ensure the mounting points are not damaged when subjected to vibration and/or movement
- This luminaire must be installed by a qualified electrician in accordance with local rules and codes
- This luminaire cannot be disassembled by non-professional persons
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similarly qualified person in order to avoid a hazard
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced
- Prior to installation, products are to be stored in cool dry conditions


INSTALLATION

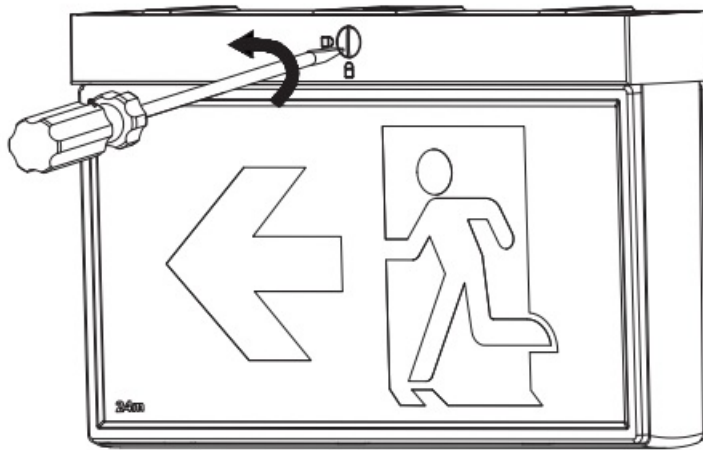



1. Loosen the locking screw

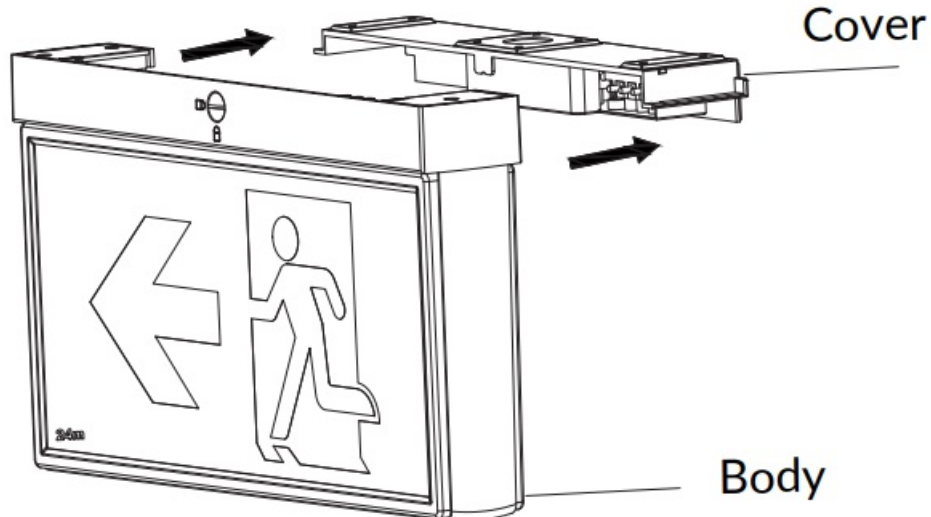


2. Remove the top cover

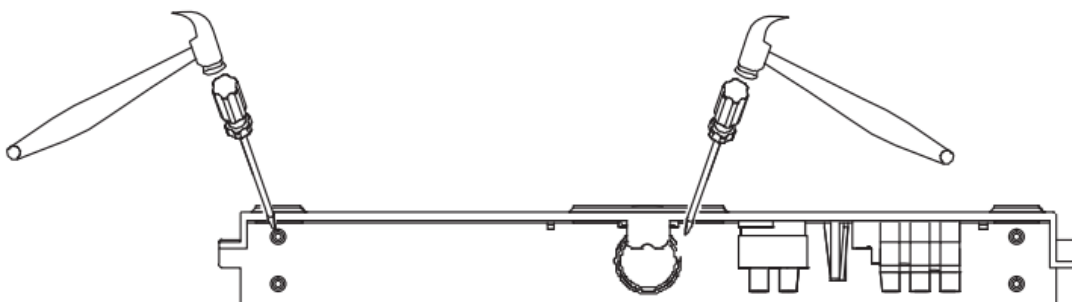


3. WALL MOUNT ON! entry

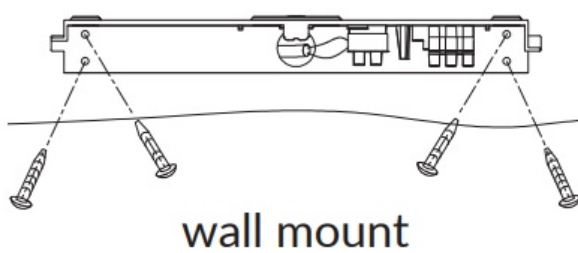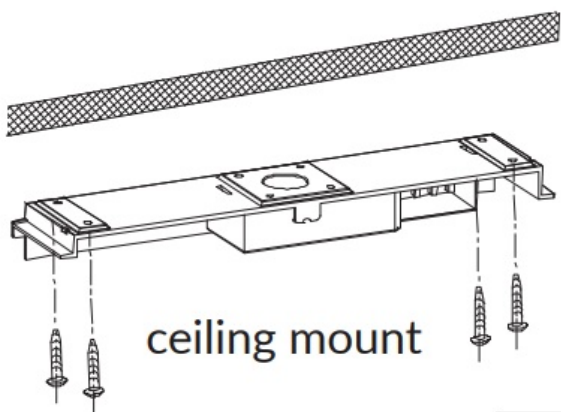


4. Mount cover on fixing

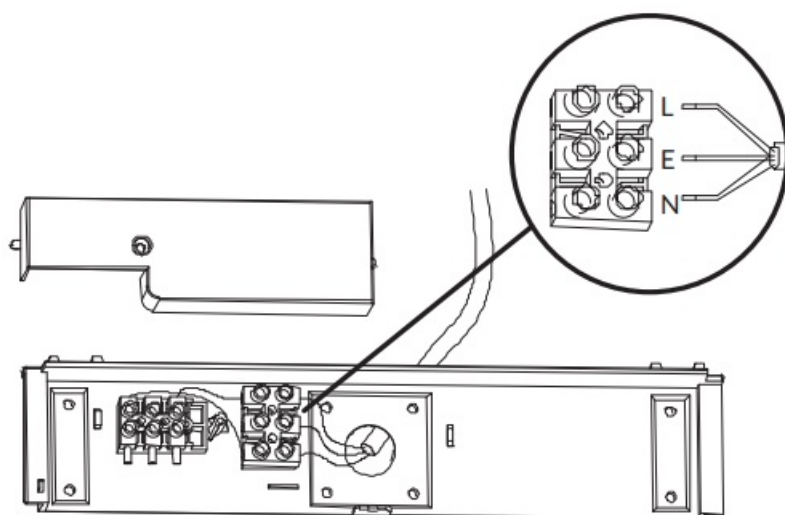


5. Connect the mains supply

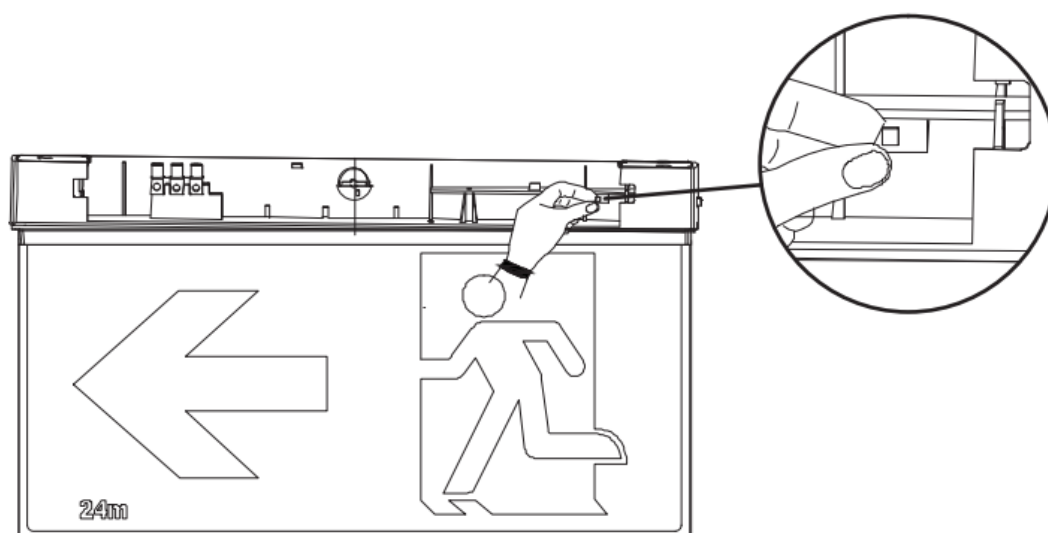

6. Move the slide switch

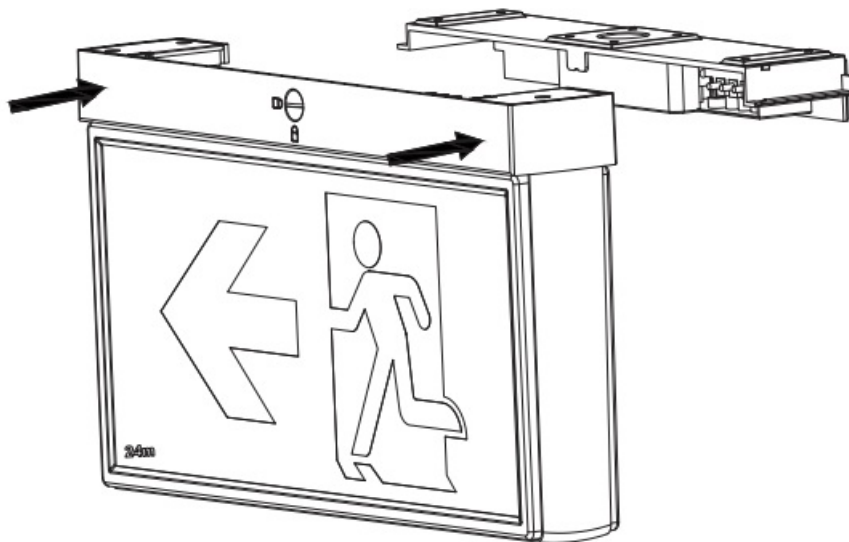


7. Slide the body onto



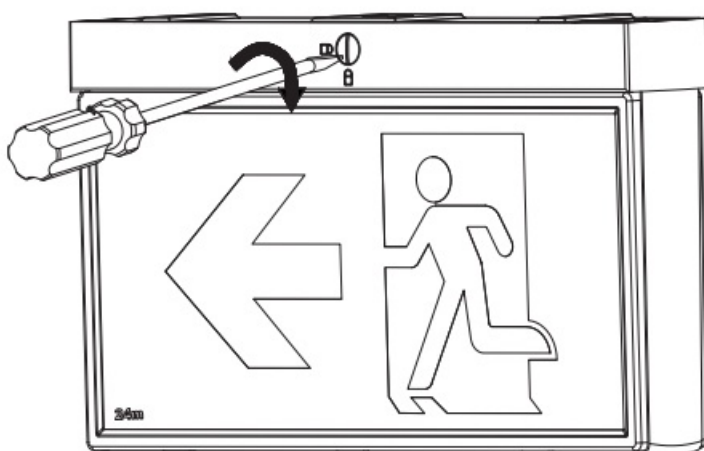


8. Tighten the locking :

BATTERY REPLACEMENT

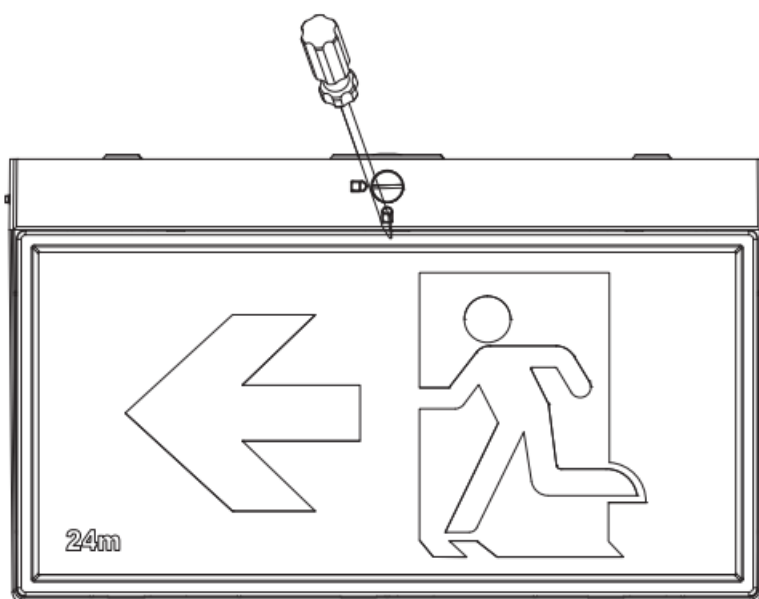

1. Insert a flat screwdriver

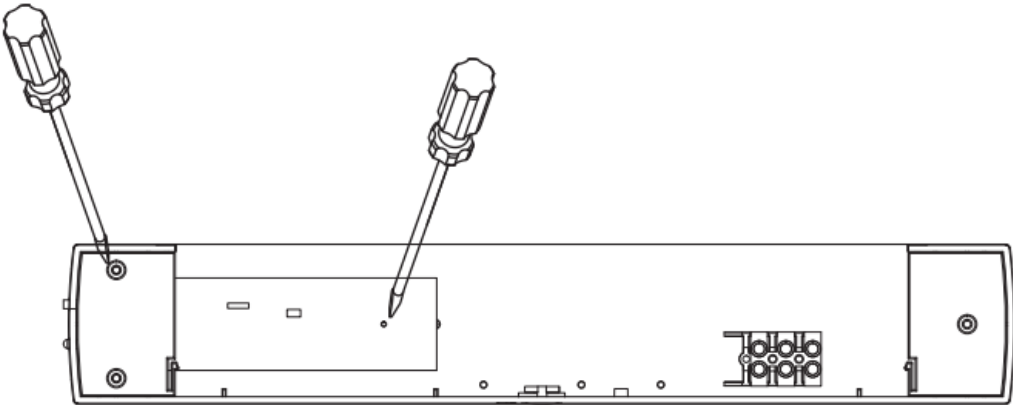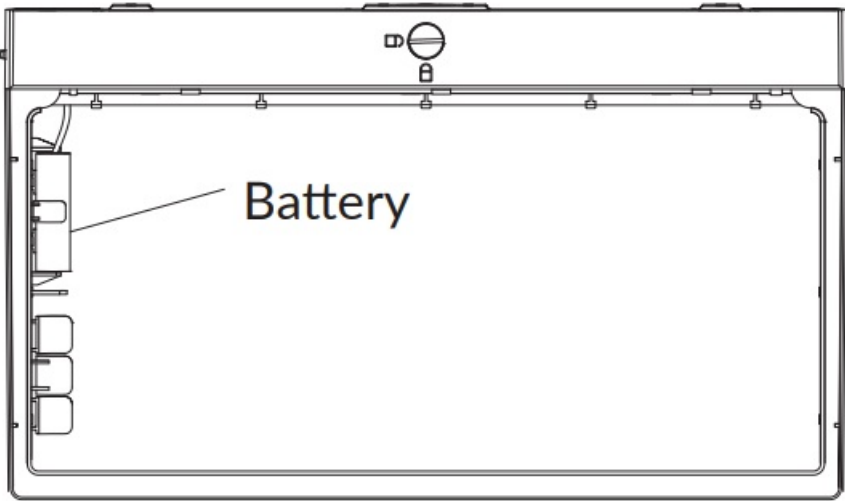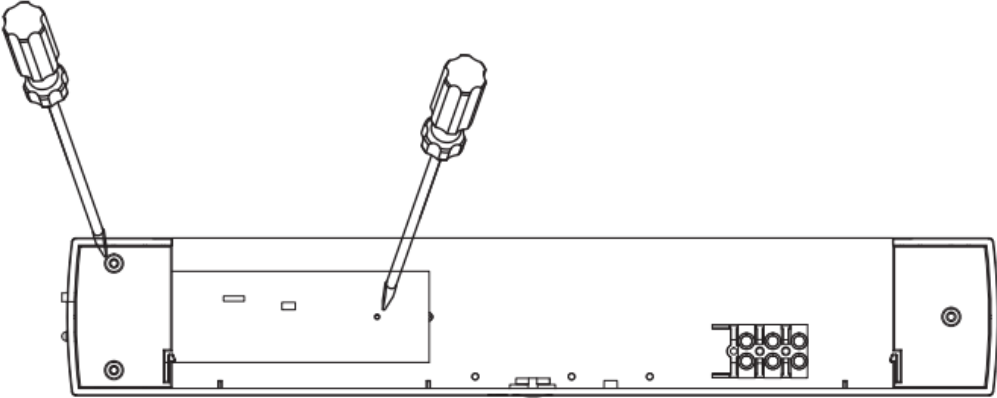
 <p>A line drawing of a rectangular device with a central rectangular cover. Two screwdrivers are shown: one is unscrewing a screw on the left side of the cover, and the other is positioned to unscrew a screw on the right side of the cover. The device has various ports and connectors on its right end.</p>	<p>2. Unscrew and remove the cover and gently detach the PCB</p>
 <p>A line drawing of the device with the cover removed, revealing the internal battery compartment. The word "Battery" is written in the center of the compartment with a line pointing to the battery pack on the left side. The battery pack consists of several cells connected in series.</p>	<p>3. Disconnect the battery from the PCB</p>
 <p>A line drawing of the device with the cover being reattached. Two screwdrivers are shown: one is screwing a screw into the left side of the cover, and the other is screwing a screw into the right side of the cover. The device has various ports and connectors on its right end.</p>	<p>4. Replace the PCB and set the slide switch is set to "C" Replace the side plate</p>

The new battery will require 16 hrs to reach full charge

EMERGENCY CLASSIFICATION

Mounting Height (m)		2.1	2.4	2.7	3.0	3.3	3.6	4.0	4.5	5.0	6.0	7.0	8.0	9.0	10.0	15.0
Classification	spacing between luminaires (m)															
Plane CO	D2.5	L	5.8	5.8	5.7	5.6	5.3									
Plane C90	D2.0	L	5.2	5.1	5.0	4.7										
Classification	spacing between luminaire & wall (m)															
Plane CO	D2.5	W	2.9	2.9	2.85	2.8	2.65									
Plane C90	D2.0	W	2.6	2.55	2.5	2.45										
Based on AS/NZS2293.1-2018 (minimum 0.2 lux)																

DIMENSIONS

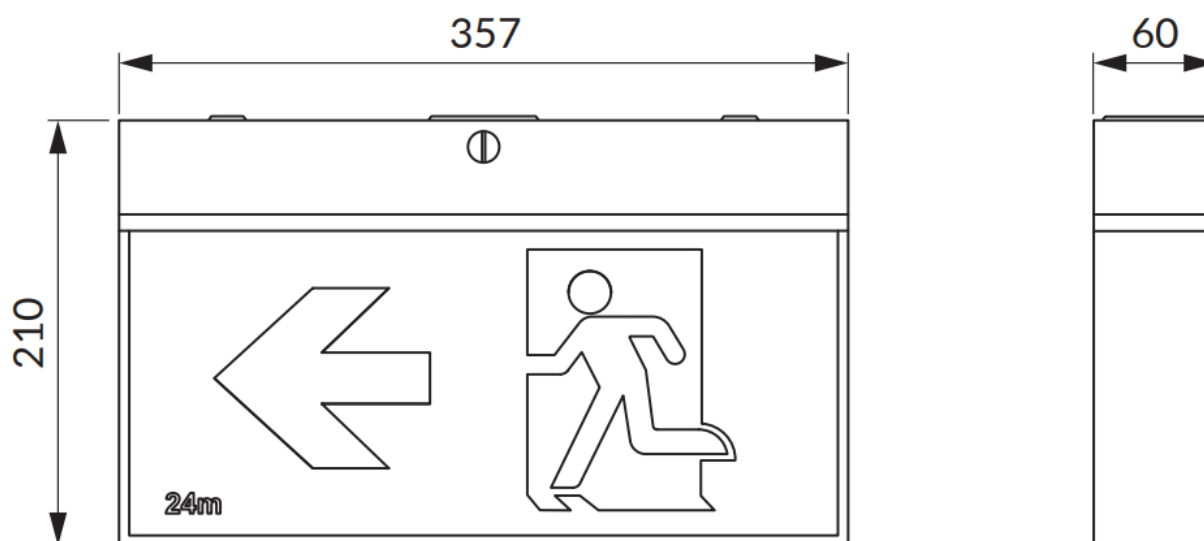

OPERATION & TESTING

LED Indicator		Operating Mode	Function
Green	On	Normal	Battery charging or fully charged
	Off	Normal	Battery disconnected
Green	On → Off	Emergency	Battery discharged

Test Procedure:

Ensure the supply is connected and the battery is fully charged Press and hold the test switch
The LED indicator will extinguish and the luminaire will go into emergency mode Release the switch to return to normal operating mode

MAINTENANCE

The supply must be isolated before opening or accessing the luminaire. Product maintenance is critical to the product's designed performance. Davis Lighting is not responsible for any product not maintained in accordance with the recommended procedure or intervals. It is recommended that a bi-annual cleaning cycle is implemented. Inspect optical surfaces for damage or cracks. Products supplied with visors or covers must not be operated with a damaged visor or cover; it is recommended damaged visors or covers be replaced by a competent person immediately. Seals and electrical components such as wiring should be checked for deterioration.



All photometric and electrical data published are of $\pm 10\%$ tolerance. Characteristics and specifications may change without notice. All electrical installations/connections should be carried out by a suitably qualified person. Application images are indicative only and may not contain actual Davis products. The information contained in this publication is typical and must not be interpreted as a guarantee of individual product performance.



<https://qrs.ly/kjcqsif>

This product may contain substances that can be hazardous to the environment if not disposed of correctly. Electrical and electronic equipment should never be discarded along with general waste but should be separated for correct treatment and recovery. Packaging and waste materials should be recycled wherever possible.

Contact:

HEAD OFFICE: : +61 (7) 3712 8988

SALES OFFICES: 1300 851 001

Email: australia@davislighting.com



Fax: +61 (7) 3272 8988

Web: www.davislighting.com.au

