

# DEPSTECH DW49 Webcam Multi Language User Manual


[Home](#) » [DEPSTECH](#) » DEPSTECH DW49 Webcam Multi Language User Manual 

## Contents

- [1 DEPSTECH DW49 Webcam Multi Language](#)
- [2 Introduction](#)
- [3 Specification](#)
- [4 Packing List](#)
- [5 Product Description](#)
- [6 Camera Installation Guide](#)
- [7 Tripod Installation Guide](#)
- [8 How to connect the camera to the computer?](#)
- [9 Safety Info](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)

# DEPSTECH

**DEPSTECH DW49 Webcam Multi Language**

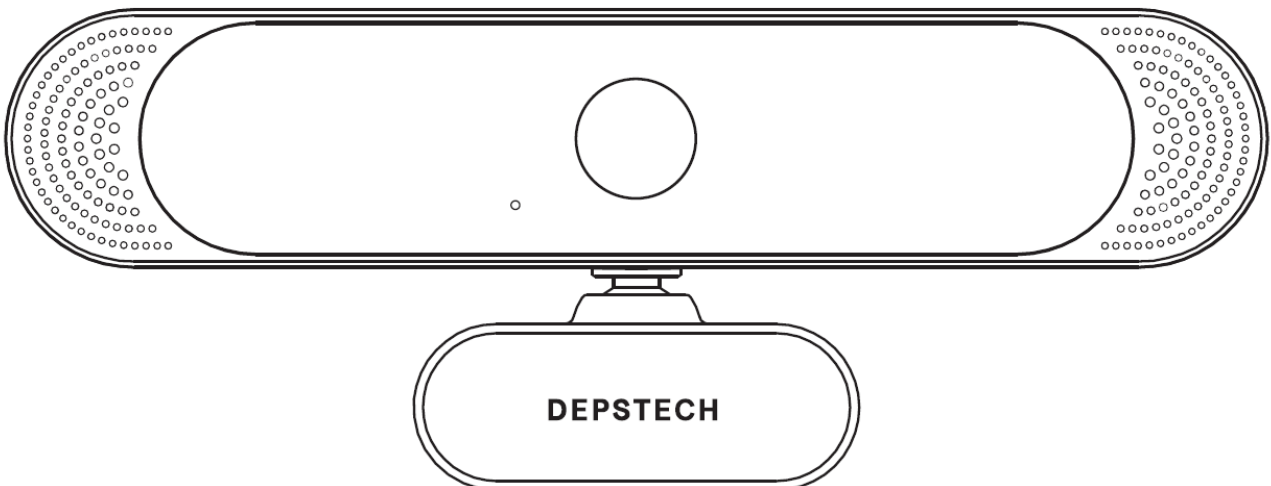

## Introduction

Dear user,

Thank you for purchasing the DW49 / DW40 4K camera.

The is a 4K resolution camera with an B00W pixel Sony sensor, the maximum resolution is 3840×2160 and comes with an autofocus function.

It is also equipped with a tripod, you can easily place the camera on the desk.

This product not only has dual microphones but also has an automatic noise reduction function, which can automatically eliminate background noise, suitable for various meeting scenarios.






DEPSTECH DW49 / DW40 webcam is compatible with a variety of operating systems, including Windows Vista/7/8/10/11, Mac OS, and so on. Plug and play, perfect for Zoom, Skype, Facetime, Facebook, YouTube, Microsoft Teams and other multi-party applications.

## Specification


Model	DW49/DW40
<i>USB Cable Length</i>	<i>1.8m (5.91 ft)</i>
<i>Sensor</i>	<i>8MP Sony Sensor</i>
Resolution	<i>3840.2160 px</i>
<i>Frame ate</i>	<i>30 FPS</i>
<i>Focus Way</i>	<i>Auto Focus</i>
<i>Focus Range</i>	<i>30mm-oo</i>

View Angle	80°
Microphone	Dual Mics
Power Supply	USB 2.0 (SV = 0.5A)
Operate System	Windows XP (SP2 / SP3), Windows Vista/7/8/10/11, Mac OS

## Packing List

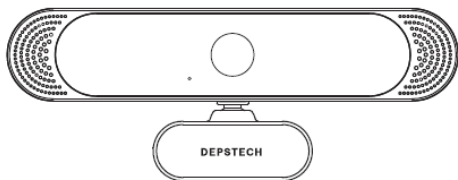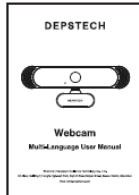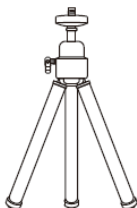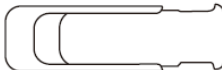
 <p>Webcam</p>	 <p>User Manual</p>	
 <p>Tripod</p>	 <p>privacy cover</p>	 <p>USB-A to USB-C adapter</p>

## Product Description

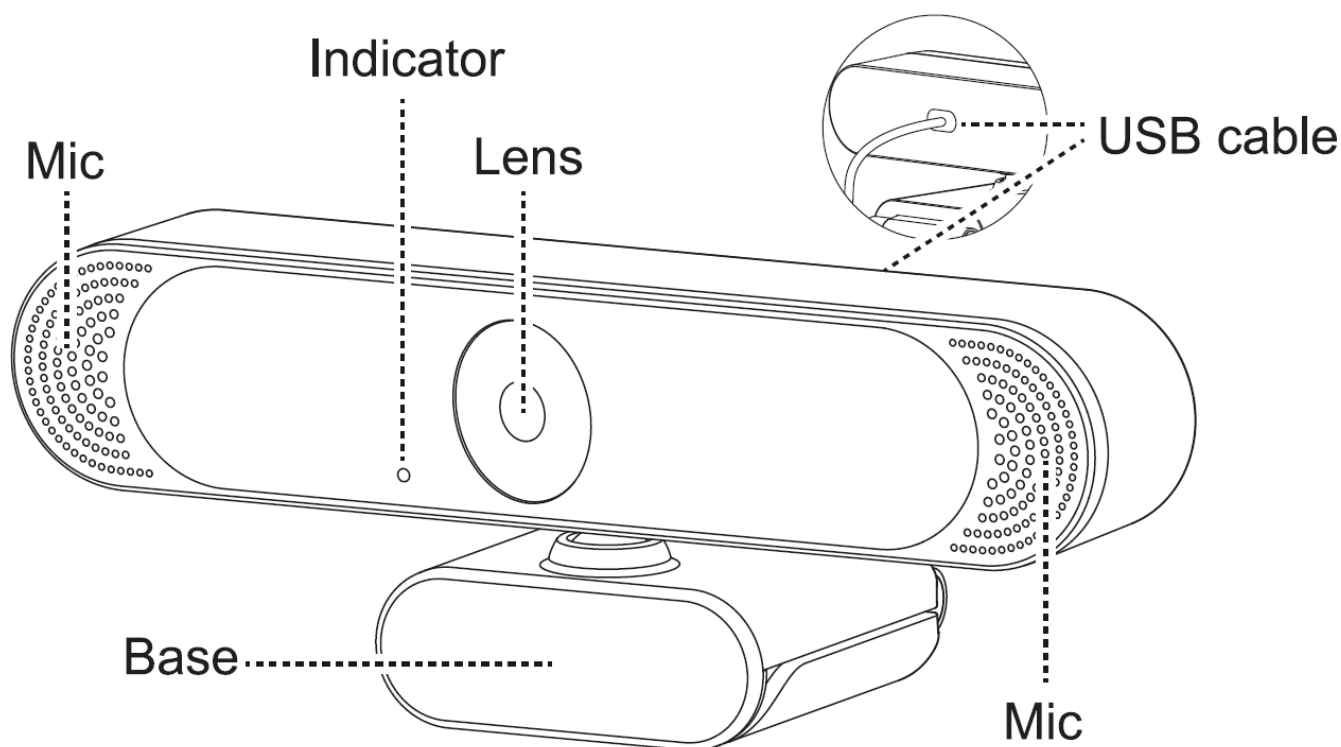


## Camera Installation Guide

- Open the camera bracket and find a suitable installation position on the computer screen.
- Adjust the angle of the anti-skid bracket to ensure that the anti-skid bracket and the back of the display are close to each other.
- Manually adjust the camera angle to achieve the best, make sure the lens is aimed at the subject.

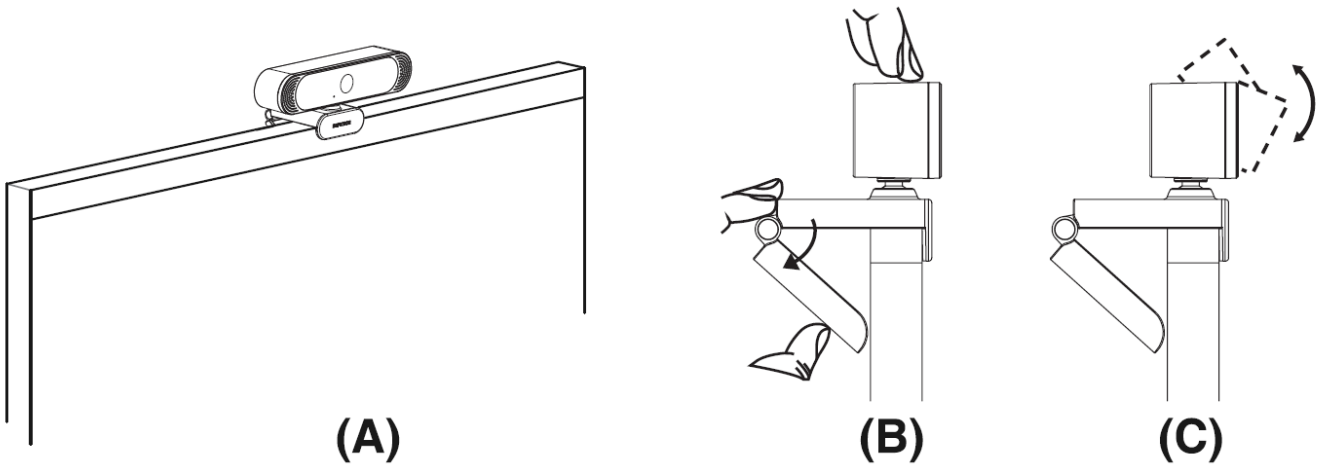

## Tripod Installation Guide

- (A) There are 1/4 screw holes at the bottom of the camera bracket.  
 (B) Screw the top screw column of the accessory tripod into the 1/4 screw hole and tighten it clockwise.  
 (C) Turn on the tripod, place it on the desk and adjust the best angle for shooting.

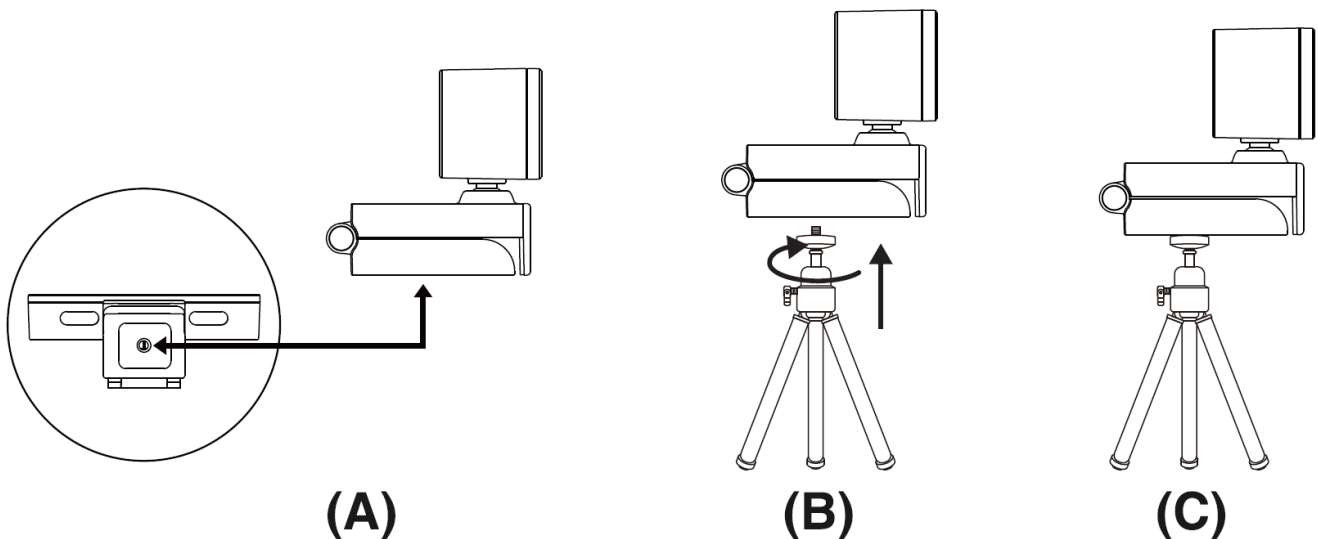


## How to connect the camera to the computer?

- Turn on the computer and make sure the computer is configured with a USB port.
- If your computer only has a USB-C interface, then you can use our USB-A to USB-C adapter to transfer directly. Plug the webcam cable into the USB-A port of the adapter to complete the transfer.
- Insert the camera into the computer USB port.
- Open an application, such as OBS Studio.
- Select the camera named Depstech Camera in the interface options.
- Set the resolution to 3840×2160 px.
- Turn on the camera, once the DW49 / DW40 indicator light is on, the connection is successful.

## Warm tips:

- If there are some Windows/ Macbook notebooks that only have Type-C interface or Thunderbolt interface, please use the USB port for docking.

- After inserting the USB interface, if it cannot be recognized, please confirm whether the interface is occupied due to the repeated opening of multiple video applications.

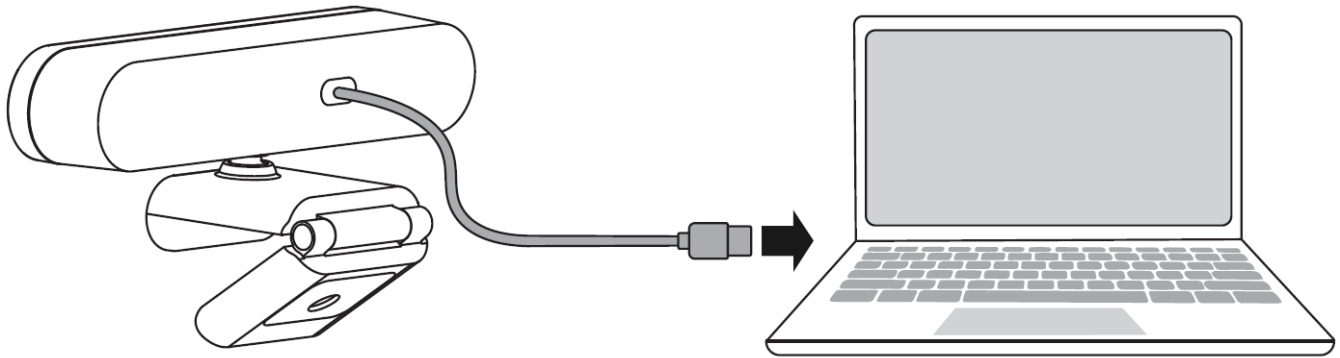

## Safety Info

### Usage environment and storage environment

- The working environment of the camera is maintained at a temperature of 32 -113 degrees Fahrenheit (0°C -45 °C).
- There are precision lens module components in the camera. Please do not knock or drop it. This operation may cause the camera to work abnormally.
- Please keep away from fire, humidity, liquid, strong acid and alkali environment, the temperature does not exceed -50 degrees Fahrenheit to 158 degrees Fahrenheit (-10°C -70°C).
- The use of this device by children needs to be carried out under the guidance of an adult.
- These actions help extend equipment life and improve equipment safety.

1. Q1: When the camera is connected to the computer and is not recognized, how to check whether the driver has been Installed?

A 1: Please follow the steps below to check.

Right-click on My Computer→ Select Properties → Select Device Manager→ Confirm DEPSTECH Webcam exists in Camera → Confirm whether there is “Microphone (Depstech webcam MIC)” in “Audio Input and Output”.

2. Q2: Why does the color of the camera picture fluctuate between warm and cool colors?

A2: The camera adopts automatic white balance. When the brightness of the picture changes, the white balance of the camera will be adjusted adaptively.

3. Q3: What should I do when the camera suddenly fails to focus or is on the wrong subject?

A3: The focus point of the camera is in the center of the screen.

When it is not in focus, try to move the focus subject several times. If it is still not in focus, you can unplug and plug the USB cable, and turn on the camera again.

4. Q4: What if microphone volume is too low or has no sound?

A4: If the microphone volume is too low, please adjust the distance from the microphone. The optimal pickup distance of microphone is between 1.97-2.62ft.

5. Q5: What if the image is unclear?

AS: The camera's optimal focusing distance is between 0.49-3.94ft. Please confirm that the shot target is within the optimal focusing distance.

Please use an alcohol cleaning cloth to clean the camera lens and gently wipe it to ensure that the lens surface is free of oil and dust. If the image is still blurred after cleaning, please contact the official email.

6. Q6: If there are obvious horizontal ripples on the screen?

A6: Generally, it is caused by the inconsistency between the frequency of the ambient light and the firmware of the camera. If you meet this problem, you can change the shooting environment, and try to use it in an environment with sufficient natural light.

7. Q7: The image is mirrored after turning on the camera, what should I do?

A7: Every application has a "Restore Mirror" function, which can be modified in the "Settings" of the application.

If the FAQ does not solve your problem, please contact us through the official email account.

Official email: [support@depstech.com](mailto:support@depstech.com)

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CE compliance:** This device complies with EN 60065 standard, which means this device will not do harm to the user or products as following situations:

1. Electric shock
2. High temperature
3. Radiation
4. Explosion from inner
5. Mechanical Harm
6. Fire Hazard
7. Chemical burns.


**EU Conformity Statement:** This product and – if applicable – the supplied accessories too are marked with "CE"

and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/35/EU, the RoHS Directive 2011/65/EU and Amendment (EU) 2015/863.

**WEEE Notice:** 2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: [www.recyclethis.info](http://www.recyclethis.info)

**2013/56/EU (battery directive):** This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point.

Documents / Resources

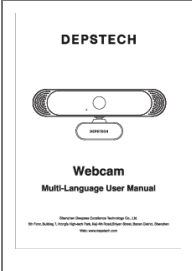	<p><a href="#">DEPSTECH DW49 Webcam Multi Language</a> [pdf] User Manual DW49 Webcam Multi Language, DW49, Webcam Multi Language, Multi Language</p>
--	--

References

- [User Manual](#)