



DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera User Manual

[Home](#) » [DJI](#) » DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera User Manual 

Contents

- 1 DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera
- 2 Using this Manual
- 3 Introduction
- 4 Overview
- 5 Charging Osmo Action
- 6 Operation
- 7 Settings
- 8 Status LED Descriptions
- 9 DJI Mimo App
- 10 Camera View
- 11 Updating Firmware
- 12 Maintenance
- 13 Specifications
- 14 Frequently Asked Questions
- 15 Video – Product Overview



DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera



Searching for Keywords

Search for keywords such as “battery” and “install” to find a topic. If you are using Adobe Acrobat Reader to read this document, press Ctrl+F on Windows or Command+F on Mac to begin a search.



Navigating to a Topic

View a complete list of topics in the table of contents. Click on a topic to navigate to that section.




Printing this Document

This document supports high-resolution printing.

Using this Manual

Legend

- Important
-  Hints and Tips

Read Before First Use

Read the following documents before using OSMOTM Action:

1. User Manual
2. Disclaimer and Safety Guidelines

It is recommended to watch all tutorial videos on the official DJITM website (www.dji.com/osmo-action) or in the DJI Mimo app and read the user manual and the disclaimer and safety guidelines before using for the first time.

Downloading the DJI Mimo App

Scan the QR code or search for “DJI Mimo” on the App Store or Google Play.




The Android version of DJI Mimo is compatible with Android v6.0 and later. The iOS version of DJI Mimo is compatible with iOS v10.0 and later.

Introduction

Osmo Action is a dual screen action camera equipped with DJI's latest RockSteady EIS technology and can shoot sharp 12MP photos, capture stable video at up to 4K/60fps, and is also able to record HDR video. The back screen is a hyper-responsive touchscreen that enables users to change settings while the front screen helps to take the perfect selfie. Complete with voice control, custom modes, a Quick Switch button and SnapShot feature, users can power on and take photos and record videos within a couple of seconds. Osmo Action is also waterproof, allowing it to be used at depths of up to 11 m. It is also compatible with several accessories so users can expand their creative possibilities using Osmo Action.

Overview

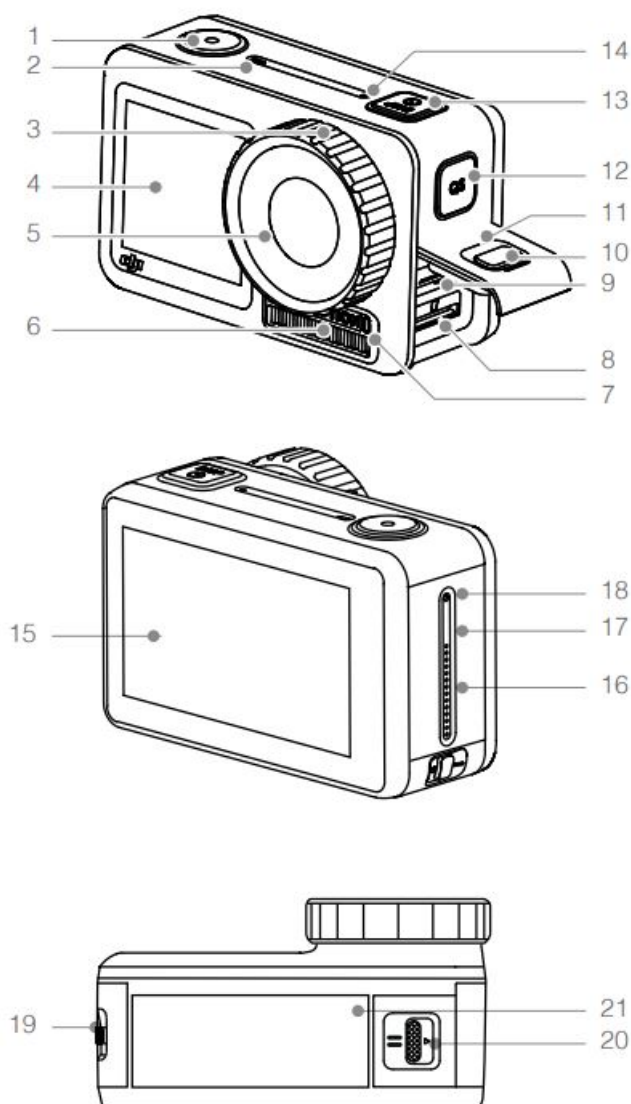

1. Shutter/Record Button

2. Status LED I
3. Lens Filter Cap
4. Front Screen
5. Lens
6. Ventilation Area
7. Status LED II
8. microSD Card Slot
9. USB-C Port
10. Cover Release Button
11. USB-C Cover
12. Quick Switch Button
13. Power Button
14. Microphone I
15. Touchscreen
16. Speaker
17. Air Pressure Balance Hole
18. Microphone II
19. Battery Release Button I
20. Battery Release Button II
21. Battery

Warning



The Lens filter cap and ventilation area may become hot during use. To avoid scalding, DO NOT touch. For the best waterproof performance, do not detach the lens filter cap unless necessary.

Attaching the Battery



The camera frame is mounted by default and must be removed before attaching the battery.



Insert the battery as shown. Press both sides of the battery to make sure it is properly inserted. Note that if the battery is properly inserted, the orange marks on either side of the battery are not visible.

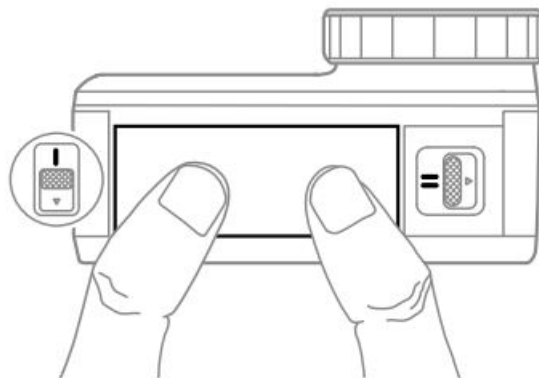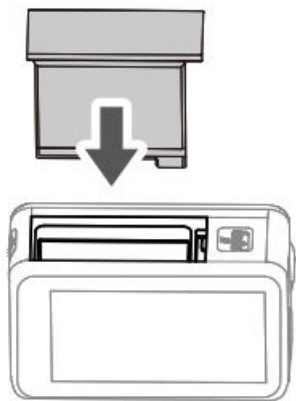

Activating Osmo Action

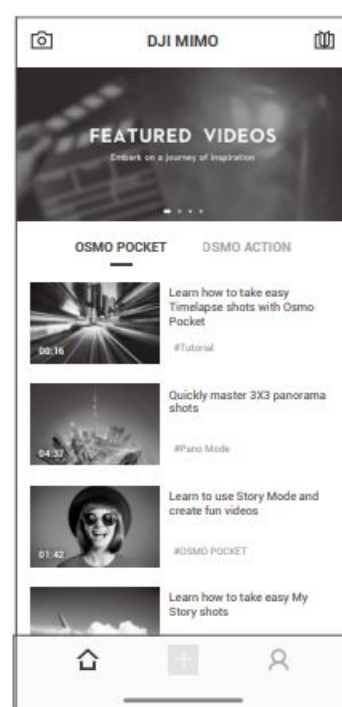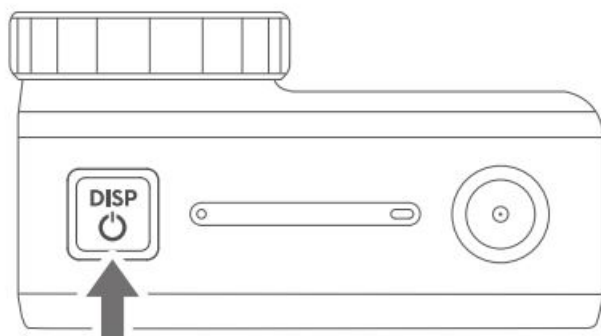


When using Osmo Action, activation is required through DJI Mimo. Follow the steps below to activate.


1. Press and hold the power button to power it on.
2. Enable Bluetooth on your mobile device.
3. Launch DJI Mimo and tap the camera in the top-left corner, and follow the instructions to activate Osmo Action.

Charging Osmo Action

Press the cover release button on the USB-C cover and slide the cover down.

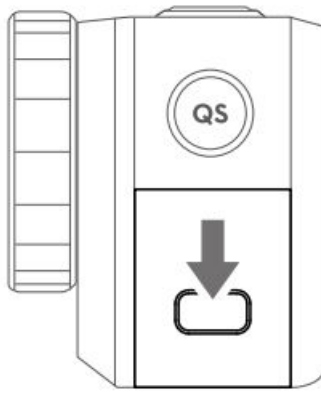

To charge Osmo Action, connect a USB adapter (not included) to the USB-C port using the power cable (included). The status LEDs are solid red while charging. The battery is fully charged when the status LEDs turn off.

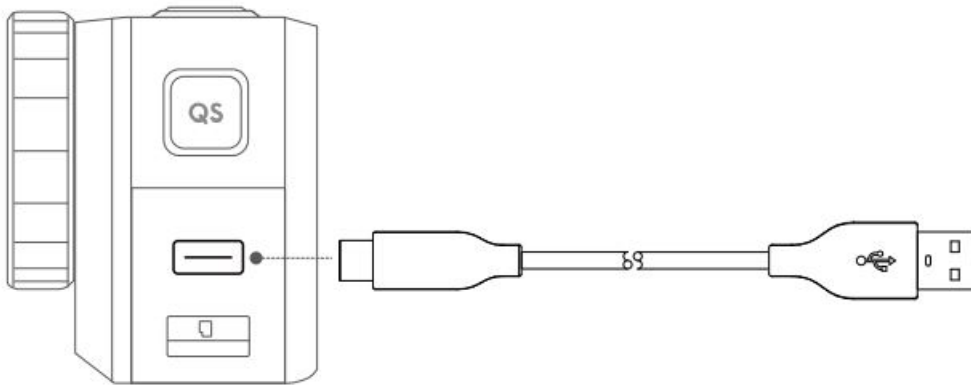


Charging time: approx. 1 hour 30 minutes (using a USB adapter of 5 V/2 A) If charging Osmo Action with the camera frame-mounted, it is recommended to detach the USB-C cover for convenience. To remove it, pull the USB-C cover towards the Quick Switch button until it detaches.

The charging time is for reference only.

Operation


Button Features

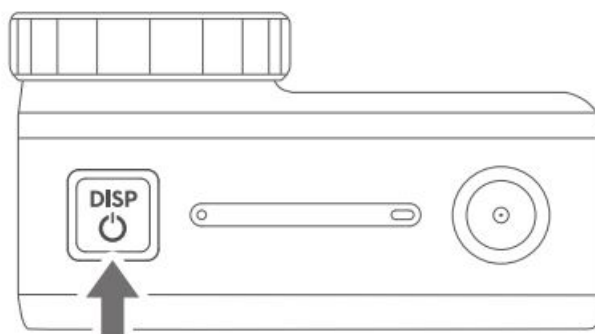

Power Button

Power Button

- When Osmo Action is powered off, press the power button to power on.
- When Osmo Action is recording or connected to DJI Mimo, press the power button to turn off the touchscreen. Press again to turn on the touchscreen. Note that if Osmo Action is recording when the touchscreen is turned off, it will continue to record.
- When Osmo Action is idle while powered on and not connected with DJI Mimo, press the power button to enter sleep mode. Press again to exit sleep mode.
- When Osmo Action is powered on, press and hold the power button to power off.

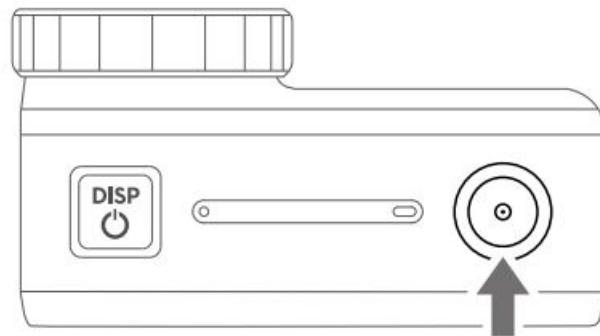


Shutter/Record Button

Shutter/Record Button

Press to take photos or to start or stop recording.

SnapShot

Available when the device is powered off or in sleep mode. SnapShot mode can be set in SnapShot settings. Refer to the Operating the Touchscreen section for more information.

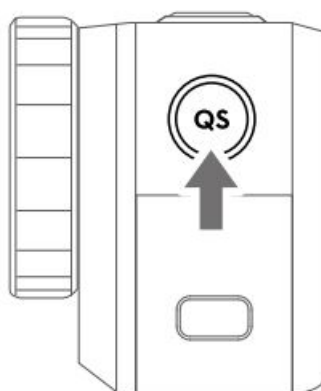

Quick Switch Button


Quick Switch Button

- In camera view, press to select the shooting mode and the Quick Switch menu will appear. Tap an icon to select a shooting mode.
- In setting pages or playback, press to return to the camera view.
- Press and hold to switch between the front screen and the touchscreen camera view.

If the screen is switched while recording a video, the video will stop recording and a new video recording will begin.

Operating the Touchscreen

The following instructions are only applicable to the touchscreen. They will not work on the front screen.

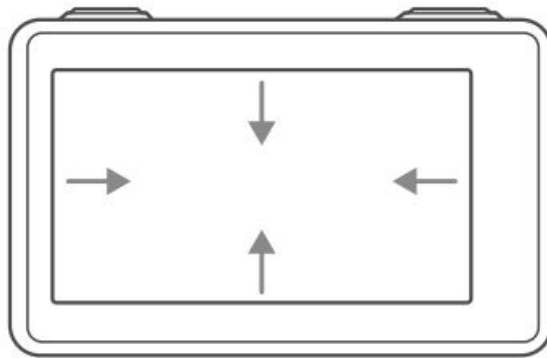

Swipe Down

Create/Manage Custom Mode

Tap and tap the icon again to save the current configuration as a custom mode. Up to five custom modes can be saved. Swipe left and right to choose a saved custom mode. Tap Delete in the bottom-right corner to delete a mode.

Brightness

Tap and move the slider to adjust the brightness.

Screen Lock

Tap to lock the screen. To unlock the screen, tap on the screen and move the slider.

Settings

Quick Actions

1. Voice Control: enable voice control to use Osmo Action with voice commands. Voice commands include Start Recording, Stop Recording, Take Photo, Screen Switch, and Shut Down. English and Chinese Mandarin are supported.
2. SnapShot: when Osmo Action is powered off or in sleep mode, use SnapShot to quickly power on and begin shooting. Supported shooting modes include Video, Photo, Slow Motion, HDR Video, Burst, Timed, AEB, Custom mode, and Timelapse.
3. Quick Switch: use Quick Switch to quickly swap between modes and custom settings. Shooting modes supported include Video, Photo, Slow Motion, HDR Video, Burst, Timed, AEB, Custom mode, and Timelapse.

General

1. Wireless Connection: tap to check the camera name and password in Wireless Info, set the Wi-Fi Frequency, and reset the Wi-Fi password and all connections in Reset Connection.
2. Wind Noise Reduction: tap to enable or disable wind noise reduction.
3. Sounds: choose from high, medium, low, and off.

4. Grid: tap to enable or disable the grid.
5. Face-Oriented Exposure: when a face is detected, exposure on the face is prioritized.
6. Anti-Flicker: prevent the flickering of lights by selecting the frequency according to local regulations.
7. Screen Auto Sleep: tap to set the time before Osmo Action enters sleep mode.
8. Auto Power Off: tap to set the time before Osmo Action powers off automatically.
9. LED: turn the two status LEDs on Osmo Action on or off.
10. Language: set the language to English, Simplified Chinese, Traditional Chinese, Japanese, Korean, German, or French.
11. Date/Time: tap to set the date and time.
12. Format SD Card: tap to format the microSD card.
13. Factory Reset: tap to reset default settings.
14. About: tap to view name, serial number, firmware version, and regulatory info.

Screen Flip

Tap AUTO to switch the screen orientation to up, down, or automatic.

Spot Metering

Tap to enable or disable spot metering. Tap and hold the screen to use spot metering. Tap again to enable the AE lock, and tap and hold the screen to disable the AE lock.

Voice Control



Tap to enable or disable voice control.

Front Screen Settings



Tap to switch between full screen and letterbox display.

Swipe Up

Swipe up and then swipe left or right to set parameters such as photo ratio, countdown time, and resolution. In Video mode, tap RockSteady* to enable or disable electronic image stabilization. Note that the parameters depend on the shooting mode and that RockSteady is unavailable in certain resolutions.

RockSteady requires a firmware update.

Swipe Left



Exposure Parameter Settings

In Auto mode, the EV and Max. ISO value can be set. The ISO value is adjusted automatically within the setting range during use. In Manual mode, the shutter speed and ISO value can be set. Note that the Max. ISO value can only be set when the ISO value is set to auto.



Image/Video Settings

Set white balance, select the color mode between Normal and D-Cinelike*, turn Dewarp on or off, and choose format.

D-Cinelike provides greater data retention of color and brightness, which allows for more flexibility in post-production.


Swipe Right

Swipe right and then swipe left or right to scroll through photos and videos. Tap to playback videos. Tap the



corresponding icon to add favorites or delete photos or videos. Tap the top left top to view photos and videos by category. When viewing a photo, move the slider on the left side of the screen up or down to adjust the brightness. Tap the icon 16:9 in the bottom-middle to view timed and burst photos. When viewing a video, move the slider on the left side of the screen up or down to adjust the brightness and move the slider on the right side to adjust the volume. Drag the progress bar to watch the video.

Tap

Tap the icon  on the bottom-left corner of the camera view to select shooting modes.


Double Tap with Two Fingers

Double tap the touchscreen on the camera view with two fingers to switch between the front and the touchscreen.

Storing Photos and Videos

The footage shot on Osmo Action can be stored on a microSD card (not included). A UHS-I Speed Grade 3 rating microSD card is required due to the fast read and write speeds necessary for high-resolution video data. Refer to the recommended microSD card list at www.dji.com/osmo-action for more information.

Insert the microSD card into the microSD card slot as shown.

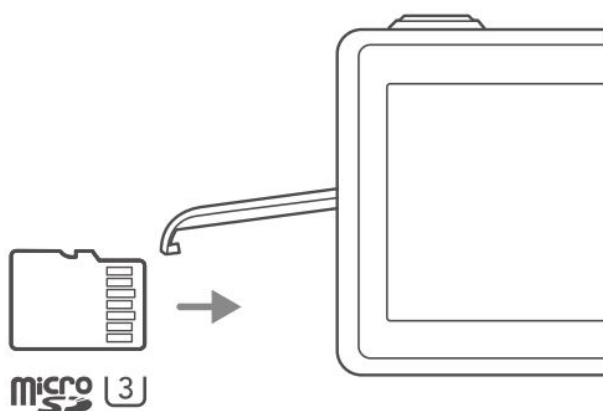


Status LED Descriptions

There are two status LEDs on Osmo Action, which indicate the same information. The status LEDs can be turned on and off. 10 © 2019 DJI OSMO All Rights Reserved.

Blinking Patterns	Descriptions
Solid green	Ready to use.
Off	No microSD card detected or insufficient microSD card storage. Osmo Action is powered on while charging.
Solid red	A USB is connected to Osmo Action or Osmo Action is powered off while charging.
Blinks red twice quickly	High-temperature warning, low battery level warning, battery abnormality, or microSD card abnormality (no microSD card detected, microSD card storage is full, or microSD card error.)
Blinks red and green alternatively	Updating firmware.
Blinks red for one second	Battery inserted, USB-C port connected, or Osmo Action is powering on or off.
Temporarily off	While taking photo.
Blinks once every second (Countdown: 10 s – 4 s) Blinks twice every second (Countdown: 3 s – 2 s) Solid red (Countdown: 1 s – 0 s) Temporarily red (After countdown)	Osmo Action is counting down to take a photo.
Blinks once every second	Osmo Action is recording a video or taking a timed photo.


DJI Mimo App

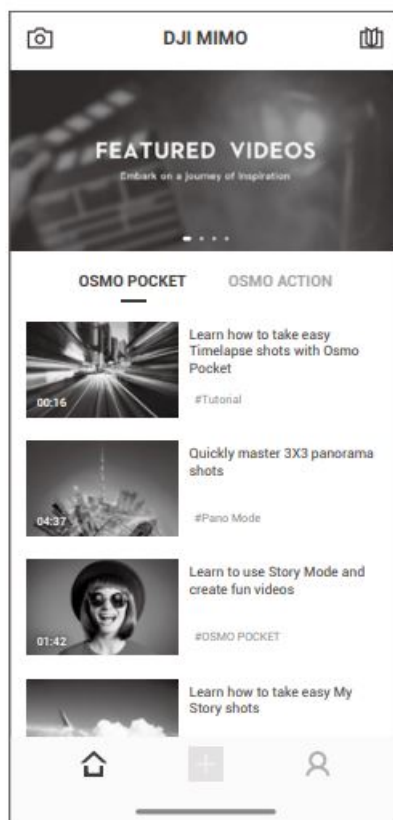



- Camera View: tap to connect to Osmo Action. Once connected, DJI Mimo enters the camera view.
- Home: tap to return to Home.
- Edit: tap to edit photos or video from Osmo Action or import and edit from a mobile device.
- Profile: register or log in to a DJI account. View works and settings, check likes and followers, send messages to other users, and connect with the DJI Store.
- Academy: tap to watch tutorials and manuals.

Camera View

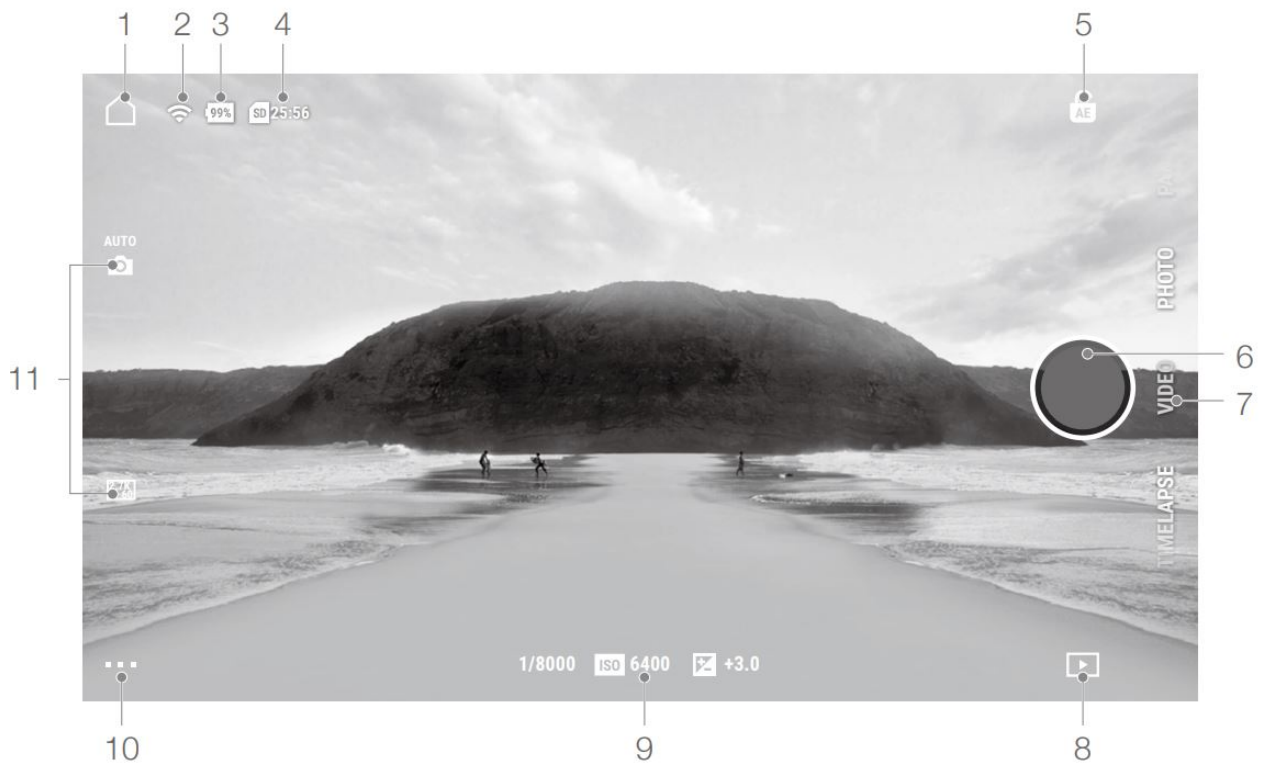

1. Home



tap to return to the home page.

2. Wi-Fi




displays a Wi-Fi connection.

3. Battery Level



displays the current battery level of Osmo Action.

4. MicroSD Card Information



according to the shooting mode, displays either the remaining number of photos that can be taken or the duration of the video that can be recorded.

5. AE Lock:



tap to enable or disable AE lock after enabling spot metering.

6. Shutter/Record Button



tap to take a photo or to start or stop recording video.

7. Shooting Mode

Scroll to select the shooting mode. Choose between Timelapse, Slow Motion, HDR Video, Video, and Photo.

8. Playback



tap to preview photos and videos.

9. Shooting Mode Settings



3.0: display the shooting mode settings.

10. Settings



Shooting Mode	Settings
Timelapse	Dewarp, Format, White Balance, ISO Max, Anti-Flicker, Grid, Overexposure Alert, and Histogram
Slow Motion	Video Format, White Balance, ISO Max, Color, Grid, Overexposure Alert, and Histogram
HDR Video	Dewarp, Video Format, White Balance, Grid, Overexposure Alert, and Histogram
Video	Dewarp, RockSteady*, Video Format, White Balance, ISO Max, Color, Anti-Flicker, Grid, Overexposure Alert, and Histogram
Photo	Dewarp, Photo Format, Photo Ratio, Metering, White Balance, ISO Max, Color, Anti-Flicker, Grid, Overexposure Alert, and Histogram

RockSteady requires a firmware update.

General Settings

Device Management, SD Card Capacity, Format SD Card, Screen Flip, Noise Reduction, Voice Control, Voice Language, Command List, Wi-Fi Settings, Switch Wi-Fi Frequency, Firmware Version, and About.

Camera Settings

Shooting Mode	Settings
Timelapse	Resolution and FPS, Video Frame Rate, ISO, Shutter, and EV
Slow Motion	Resolution and FPS, Speed, ISO, Shutter, and EV
HDR Video	Resolution and FPS and Video Frame Rate
Video	Resolution and FPS, Video Frame Rate, ISO, Shutter, and EV
Photo	AEB, Single Shot, Burst, Timed, ISO, Shutter, and EV

Updating Firmware

The firmware of Osmo Action can be updated by using DJI Mimo or a microSD card.

Using DJI Mimo

An alert appears in DJI Mimo when new firmware is available. Follow the instructions to update the firmware.

Using a microSD Card

Download the latest firmware on the official DJI website to the root directory of a microSD card.

1. Insert the microSD card and power on Osmo Action. The update starts automatically once a new firmware is detected.
2. During the update, the status LED indicators blink red and green alternatively and a reminder will remain on the screen. No operation is required.
3. Osmo Action restarts automatically once the update is complete.

Warning

- A microSD card is required to update the firmware.
- Make sure the battery level of Osmo Action is at least 15% before updating firmware.

Maintenance

Underwater Usage Notes

1. Make sure the battery and battery compartment are dry and clean before inserting the battery. Otherwise, it may affect the battery contacts and waterproofing. Make sure the battery is properly inserted during use. Note that if the battery is properly inserted, the orange marks on either side of the battery cannot be seen.
2. Make sure the USB-C cover is clean and closed before using. Otherwise, it will affect the device's waterproofing ability.
3. Make sure the lens filter cap is in good condition and undamaged. If there is any damage, replace it immediately. Make sure the lens filter cap and lens are dry and clean. Sharp or hard objects may damage the lens and affect the waterproofing. Make sure the lens filter cap is properly tightened during use.
4. Osmo Action is not waterproof unless the battery is properly inserted, the USB-C cover is closed, and the lens filter cap is attached.
5. Osmo Action can be used underwater at depths of up to 11 m. When using a waterproof case, the maximum depth underwater is 60 m.

6. DO NOT jump into the water with Osmo Action.
7. DO NOT use Osmo Action in a hot spring.
8. Clean Osmo Action with water after using underwater. Allow it to dry naturally before using it again.

Clean Notes

1. Clean the lens filter cap with water, a lens cleaning pen, a lens air blower, or a lens cleaning cloth.
2. Clean the lens with a lens cleaning pen, a lens air blower, or a lens cleaning cloth.
3. Clean the holes on the camera and ventilation area with water if there is any object inside before usage. DO NOT poke the holes. Contact DJI support if they cannot be cleaned.
4. Clean the battery and battery compartment with a clean, dry cloth.
5. All the holes on Osmo Action have built-in waterproof material. DO NOT remove the waterproof material or poke the holes. Otherwise, Osmo Action will no longer be waterproof.

Specifications

Model	AC001
Wi-Fi	
Operating Frequency	2.400-2.4835 GHz, 5.725-5.850 GHz* (FCC/CE/SRRC) 2.400-2.4835 GHz (MIC)
Transmitter Power (EIRP)	2.4 GHz: ≤19 dBm (FCC/CE/SRRC/MIC) 5.8 GHz: ≤13 dBm (CE), ≤19 dBm (FCC/SRRC)
Protocol	802.11a/b/g/n/ac
Bluetooth	
Operating Frequency	2.400-2.4835 GHz
Transmitter Power (EIRP)	4 dBm
Protocol	BLE 4.2
Battery	
Capacity	1300 mAh
Voltage	3.85 V
Charging Limit Voltage	4.4 V
Type	LiPo 1S
Energy	5.005 Wh

5.8 GHz is not supported in some regions. Observe local laws and regulations.

After-Sales Information

Visit <https://www.dji.com/support> to learn more about after-sales service policies, repair services, and support.



For online support, please scan this code with Facebook Messenger

This content is subject to change.

Download the latest version from

www.dji.com/osmo-action

OSMO is a trademark of DJI.

Copyright © 2019 DJI OSMO All Rights Reserved.

Frequently Asked Questions

What is the battery life of the DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera?

The user manual does not provide information on the battery life of the camera.

How deep can the DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera be used underwater?

The camera is waterproof and can be used at depths of up to 11 m.

How do I activate the DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera?

Press and hold the power button to power it on. Enable Bluetooth on your mobile device. Launch DJI Mimo and tap the camera in the top-left corner, and follow the instructions to activate Osmo Action

How do I charge the DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera?

To charge the camera, connect a USB adapter (not included) to the USB-C port using the power cable (included). The status LEDs are solid red while charging. The battery is fully charged when the status LEDs turn off.

How long does it take to charge the DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera?

The charging time is approximately 1 hour 30 minutes (using a USB adapter of 5 V/2 A). However, the user manual notes that the charging time is for reference only.

How do I attach the battery to the DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera?

To attach the battery, first remove the camera frame. Then, insert the battery as shown and press both sides of the battery to make sure it is properly inserted. Note that if the battery is properly inserted, the orange marks on either side of the battery are not visible.

What is the SnapShot feature on the DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera?

SnapShot mode can be set in SnapShot settings and allows you to quickly power on and begin shooting when the device is powered off or in sleep mode. Supported shooting modes include Video, Photo, Slow Motion, HDR Video, Burst, Timed, AEB, Custom mode, and Timelapse.

How do I create/manage custom modes on the DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera?

To create/manage custom modes, swipe down on the touchscreen and tap the icon to create a custom mode. Tap the icon again to save the current configuration as a custom mode. Up to five custom modes can be saved. Swipe left and right to choose a saved custom mode. Tap Delete in the bottom-right corner to delete a mode.

What is RockSteady EIS technology on the DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera?

RockSteady EIS technology is DJI's latest electronic image stabilization technology that enables stable video recording at up to 4K/60fps.

What shooting modes are supported on the DJI CP.OS.00000020.01 4K Action Cam 12MP Digital Camera?

The camera supports shooting modes such as Video, Photo, Slow Motion, HDR Video, Burst, Timed, AEB, Custom mode, and Timelapse.

Video – Product Overview



[Download PDF Link: DJI-CP.OS.00000020.01-4K-Action-Cam-12MP-Digital-Camera.mp4](#)

[Manuals+.](#)