



Elechelf IM2200-UL Ice Maker User Manual

[Home](#) » [elechelf](#) » Elechelf IM2200-UL Ice Maker User Manual 

Contents

- [1 Elechelf IM2200-UL Ice Maker](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Before You Start](#)
- [5 IMPORTANT SAFETY INSTRUCTIONS](#)
- [6 KNOW YOUR ICE MAKER](#)
- [7 CONTROL PANEL](#)
- [8 BEFORE FIRST USE](#)
- [9 USING YOUR ICE MAKER](#)
- [10 CLEANING AND MAINTENANCE](#)
- [11 TROUBLESHOOTING](#)
- [12 TECHNICAL PARAMETERS](#)
- [13 LIMITED WARRANTY](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)

elechelf

Elechelf IM2200-UL Ice Maker



Product Information

Specifications

- Refrigerant: R600a
- Materials: Non-metallic
- Flammability: Flammable

Product Usage Instructions

Safety Precautions

Before using the product, please read and follow these safety precautions:

- Do not place any flammable materials near the appliance.
- Avoid exposing the appliance to open flames or high temperatures.
- Keep the appliance away from direct sunlight.
- Ensure proper ventilation around the appliance.
- Do not block the air vents of the appliance.
- Always unplug the appliance before cleaning or maintenance.
- If you detect any unusual odors or sounds, immediately turn off the appliance and contact customer service.

Installation

Follow these steps to install the product:

1. Select a suitable location for the appliance, away from heat sources and direct sunlight.
2. Ensure there is enough space around the appliance for proper ventilation.

3. Place the appliance on a level surface.
4. Plug the appliance into a grounded electrical outlet.

Operation

To use the product, follow these instructions:

1. Turn on the appliance by pressing the power button.
2. Set the desired temperature using the temperature control knob.
3. Wait for the appliance to reach the set temperature before placing any items inside.
4. Do not overload the appliance with too many items, as it may affect its performance.
5. Close the door firmly after placing items inside.

Cleaning and Maintenance

Regular cleaning and maintenance will ensure optimal performance of the product. Follow these steps:

1. Unplug the appliance before cleaning.
2. Remove all items from the appliance.
3. Use a mild detergent and a soft cloth to clean the interior and exterior surfaces.
4. Wipe dry with a clean cloth.
5. Do not use abrasive cleaners or solvents.
6. Clean the condenser coils at least once a year to remove dust and debris.

FAQ

Q: Can I place flammable materials near the appliance?

A: No, it is not recommended to place any flammable materials near the appliance due to its flammability.

Q: What should I do if I detect unusual odors or sounds?

A: If you detect any unusual odors or sounds, immediately turn off the appliance and contact customer service for assistance.

Q: How often should I clean the condenser coils?

A: It is recommended to clean the condenser coils at least once a year to remove dust and debris.

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP IT FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!
Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped.

Follow Elechelf

Visit us: www.Elechelf.com

Contact Us!

Contact our friendly customer service department for help first.

Before You Start

Please read all instructions carefully.

Retain instructions for future reference.

Separate and count all parts and hardware.

Read through each step carefully and follow the proper order.

We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.

Always place the product on a flat, steady and stable surface.

Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, explosion, electric shock, or injury when using your ice maker, follow these important safety instructions:

1. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
2. Do not remove any safety, warning, or product information labels from your ice maker.
3. Plug the ice maker into an exclusive grounded power outlet. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the receptacle.
4. This appliance must be grounded. It is equipped with a power cord having a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.
5. Avoid the use of an extension cord because it may overheat and cause a risk of fire. However, if it is necessary to use an extension cord:
 1. Use only extension cord with grounding plug.
 2. The marked rating of an extension cord must be equal to or greater than the rating of this appliance.
6. It should be positioned such that it does not drape over the counter or tabletop where it can be pulled on by children intentionally. Do not operate any appliance with damage cord or plug or after the appliance malfunction or has been damaged in any manner, Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
8. Do not let cord hang over edge of table or counter.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Place power cord in such a way it cannot be pulled on by children or cause a tripping hazard.
11. Place power cord in such a way that it is not in contact with hot surfaces.
12. The use of attachment not recommended or sold by manufacturer may cause fire, electric shock or injury.
13. Do not touch the evaporator when using the ice maker or making ice to avoid being suffer from frostbite.
14. Do not immerse any part of the product in water.
15. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
16. Do not plug or unplug product with wet hands.
17. Unplug the product before cleaning, maintaining and when not in use.
18. Do not use with water that is microbiologically unsafe or of unknown quality.

19. Do not clean your ice maker with any flammable fluids. The fumes may create a fire hazard or explosion.
20. Do not overturn the ice maker. If the ice maker is overturned accidentally, make it stand steadily for 2 hours before power it on again.
21. If the ice maker is brought in from outside in wintertime, do not use for a few hours, allowing the unit to warm up to the room temperature before operating.
22. Never put flammable, explosive and corrosive articles into the ice maker.
23. Never use the ice maker when there is flammable gas leakage.
24. Never store or use gas and other flammable articles near the ice maker to avoid any fire.
25. Unplug the ice maker before moving it to avoid damaging the refrigerating system.
26. Do not attempt to disassemble, repair, modify, or replace any part of your product.
27. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
28. Children shall not play with the appliance.
29. Cleaning and user maintenance shall not be made by children without supervision.
30. Close supervision is necessary when any appliance is used by or near children.
31. Do not leave the appliance unattended while in use.
32. Do not use the appliance for other than intended use.
33. Please abandon the ice maker according to local regulators as it uses flammable blowing gas and refrigerant.
34. Please according to local regulations regarding disposal of the appliance for its flammable refrigerant and blowing gas.

This symbol indicates the refrigerant R600a and the non-metallic materials of the appliance are flammable. It's a warning symbol. Warning: Risk of fire/flammable materials.

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance. Children aged from 3 to 8 years are allowed to load and unload refrigerator-appliances. To avoid contamination of food, please respect the following instructions.

If opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.

If clean regular surfaces that can come in contact with food and accessible drainage systems.

If clean water tanks if they have not been used for 48 h flush the water system connected to a water supply if water has not been drawn for 5 days. If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance. Regarding the information pertaining to the use of the appliance, please refer to the below paragraph of the manual.



PROP. 65 WARNING FOR CALIFORNIA RESIDENTS

WARNING:


Cancer And Reproductive Harm





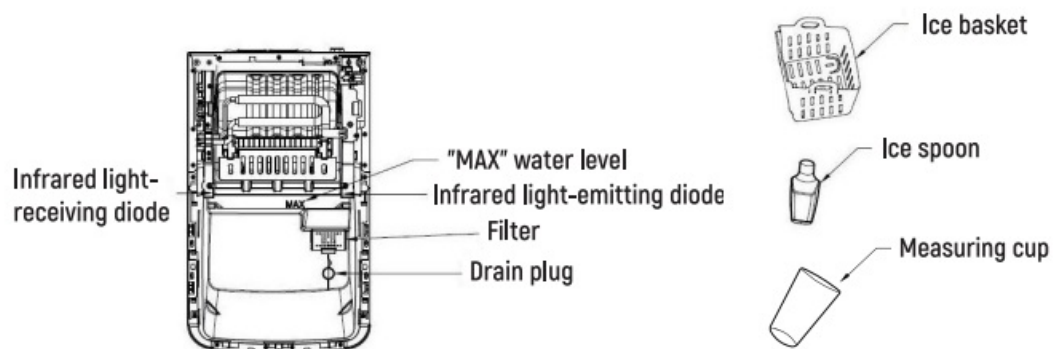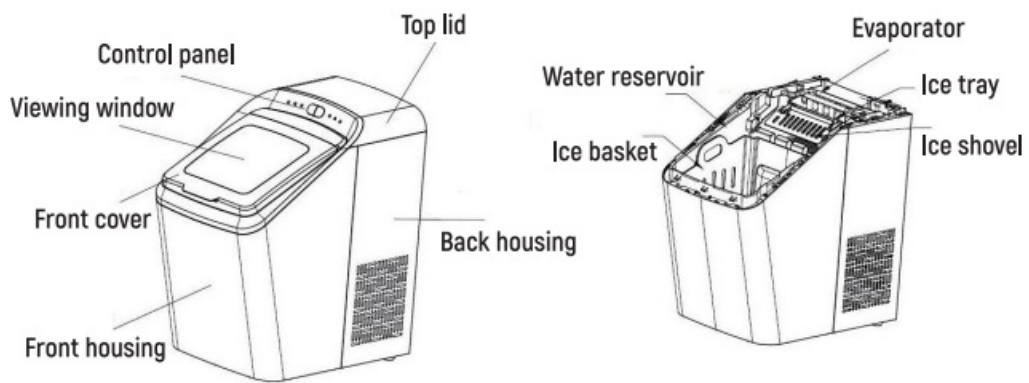



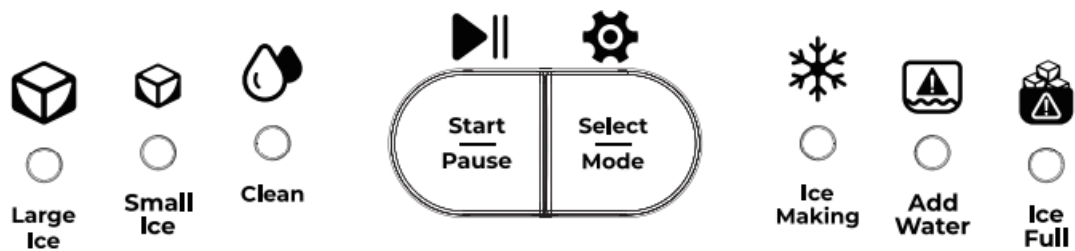





www.p65warnings.ca.gov

KNOW YOUR ICE MAKER



CONTROL PANEL



Key (with indicator)	Function
 	The indicator lights in green when select large ice.
 	The indicator lights in green when select small ice.
 	When the light is on, enter the automatic cleaning mode.
	Start or stop the appliance.
	Confirm choice of large ice mode, small ice mode, cleaning mode.
 	The indicator lights in green when making ice.
 	The indicator lights in red when the water reservoir is lack of water.
 	The indicator lights in red when the ice basket is full.


BEFORE FIRST USE

1. Unpack the appliance, then check and make sure that all the accessories including ice basket and ice scoop etc. are complete. Please contact with the client service department if some accessories are missed.
2. Please ensure the ice maker is level and on a stable table or platform to avoid malfunction.
3. The incline angle of the ice maker cabinet should not exceed 113°F/45°C during transportation or use. Do not turn the ice maker upside down. Doing so could cause the compressor or refrigerating system to operate incorrectly. Please allow time for the fluids in the compressor to settle after the ice maker is moved or transported. Before using the ice maker for the first time, please wait for 2 hours after the unit has been leveled and positioned in the proper place.
4. The appliance must be placed on a dry and level surface with sufficient ventilation, far from heat sources such as ovens, heaters and corrosive gases.
Leave an 6-inch [15cm] clearance on all sides of the ice maker for proper ventilation.
5. Do not fill the water reservoir with hot water. This may damage the ice maker.
It is best to fill the water reservoir with water of room temperature or lower.
6. Do not use the appliance at a very cold environment [lower than 41°F/5°C].
7. Clean the appliance by following the operation of “CLEANING AND MAINTENANCE” before operate.

USINO YOUR ICE MAKER

1. Ensure that the drain plug at the bottom of water reservoir is closed well.



2. Plug the ice maker into the wall outlet, the  indicator blinks.




NOTE: Please make the ice maker be rested for 30 minutes before plug if it has been moved.



3. Open the top lid and remove the ice basket.

4. **WARNING:** Fill the water reservoir with potable water only.

NOTE: Do not fill above the MAX water level mark.

5. Replace the ice basket and close the top lid.


6. Press "  key to select the ice size,  " means small ice while "  means large ice. ~ means cleaning function.



7. Press the "  key and the "  "indicator lights solidly.

8. The ice-making cycle will last approximately 7-15 minutes, depending on the ambient temperature and water temperature.

9. The ice-making cycle starts with water being pumped into the ice tray situated below the evaporator. Over the next 7-15 minutes ice forms on the evaporator.

Once this has completed, the ice tray will tilt backwards and the remaining water in the ice tray is drained back into the water reservoir. The ice cubes are then dropped from the evaporator and pushed forward into the ice basket by the ice shovel. The ice tray will automatically move back into position under the evaporator and start the next cycle.

10. The  indicator will light up when the ice basket is full and then the ice maker will stop the ice-making cycle automatically. Gently remove the ice from the ice basket with the ice scoop. About 5 seconds later, the ice maker will restart its ice making function automatically.

11. The  indicator will light up when the water reservoir is lack of water and the ice-making cycle will stop automatically. At that time, remove the ice basket and add water to the water reservoir, and then press  " key again to restart the ice-making cycle.

12. When you have got your desired amount of ice, stop the ice making cycle by pressing the "  " key and unplug the unit from the wall outlet.

13. Open the top lid and transfer the ice to a freezer.


NOTE: The ice will last in the ice maker for up to a 18s hour period, depending on the ambient temperature.

14. Allow the ice maker to wall up to room temperature.



15. Suggest replacing the water every month. Please empty the water reservoir if the ice maker is not used for a long time.

CLEANING AND MAINTENANCE

To keep your ice tasting fresh and your ice maker looking great, we recommend cleaning your ice maker once per week.




1. Stop the ice-making cycle by pressing the  " key, unplug the ice maker from the wall outlet and allow it to warm up to room temperature.
2. If residual water is found in the ice tray, gently push the ice tray back so that all water drains into the water

reservoir.





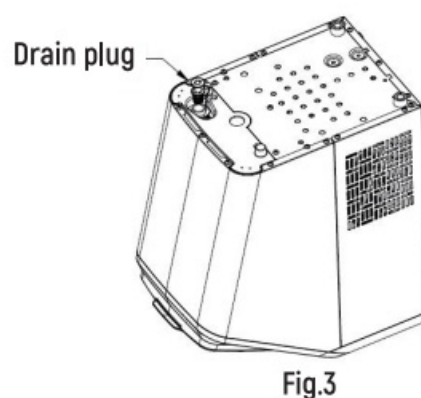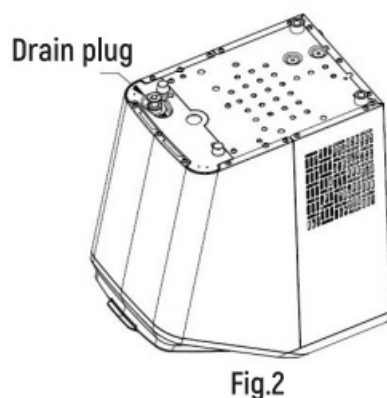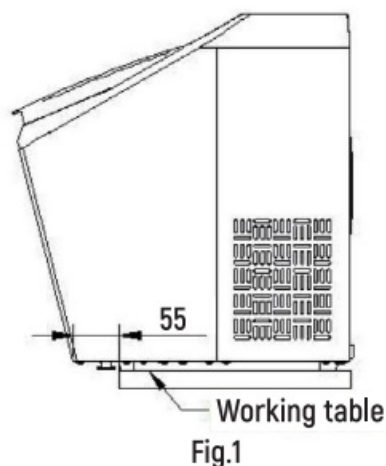


3. Move the appliance forward to a place 60mm away from the working table and open the drain plug to drain out excess water [see Fig.1, Fig.2 and Fig.3].
4. Check and make sure the drain plug must be closed well. Fill the water reservoir with clean water, press until the “ ”,  “indicator flashes, then press the “ ”,  key, the pump will start to pump water and keep running for 6 minutes, and it will enter into standby condition after running for 6 minutes, finally, open the drain plug and empty the water.
5. Remove the ice basket.
6. Clean the ice maker interior with a soft cloth soaked with warm water and vinegar, then rinse with clean water and then drain all the water.
7. Replace the drain plug well in position. Wash the ice basket and ice scoop in warm soapy water. Rinse and dry.
8. Clean the exterior of the ice maker with a soft damp cloth. Use a mild dishwashing soap, if necessary.



NOTE:

1. Do not use organic solvent, boiled water, detergent, strong acid and strong alkali etc. for cleaning.
2. Please empty the water reservoir and dry it for storage if the ice maker is not used for a long time.



TROUBLESHOOTING

Problem	Possible causes	Solution
  indicator turns on	1. Low water level or lack of water. 2. The water screen at the bottom of water reservoir is blocked. 3. Pump malfunction.	1. Stop making ice, refill water and then press  "key to restart ice-making cycle. 2. Do cleaning. 3. Send it to the authorized department for repair.
  indicator lights up	1. Ice basket is full and the infrared light is blocked by the ice. 2. Infrared light-emitting diode & light-receiving diode do not work.	1. Remove the ice from ice basket. 2a. Wipe up the foreign objects on the infrared light-emitting diode & light-receiving diode and restart the ice maker. 2b. Call Customer Service if the infrared light-emitting diode & light-receiving diode still can not work after wiping up the foreign objects on them and restarting the ice maker.
  indicator blinks	The ice shovel is blocked.	Please remove the ice if the ice shovel is blocked by ice, otherwise, call customer service for consultation.

The ice maker stops working.	The ice tray is not in the right position.	<p>1. Remove the ice in the ice  key to restart the appliance.</p> <p>2. Call Customer Service if the appliance still can not work after restart.</p>
<p>The ice basket is full but the “indicator does not illuminate.</p> 	The “ice full” condition can not be detected as the infrared light module is interfered by the sunlight.	Unplug the appliance and move it to a place which is not exposed to the sunlight, then plug the appliance and activate it again.
The ice collects together.	Making ice takes too much time.	Stop making ice and restart the ice-making cycle after the ice melts.
	The water in the water reservoir is of too low temperature.	Fill the water reservoir with water ranges between 46.4°F/8°C and 77°F/25°C.
The ice-making cycle seems normal but no ice is produced.	The ambient temperature or water temperature is too high.	Start the ice-making cycle at an environment with an ambient temperature less than 89.6°F/32°C and fill the water reservoir with some cold water.
	Refrigerating system leaks	Call customer service
	Refrigerating system blocks	Call customer service

Poor ice-making result	<p>1. Poor heat dissipation.</p> <p>2. The water temperature is too high.</p> <p>3. The ambient temperature is too high.</p>	<p>1. Leave an 6-inch [15cm] clearance on all sides of the ice maker for proper ventilation.</p> <p>2. Fill the water reservoir with water ranges between 46.4°F/8°C and 82.4°F/28°C.</p> <p>3. Operate the ice maker at an environment with an ambient temperature between 50°F/10°C and 89.6°F/32°C</p>
------------------------	--	---

TECHNICAL PARAMETERS

- Model: IM2200-UL
- Applicable climate: ST/SN/N/T
- Class: I
- Electrical Rating: AMPS 1.5A 120V AC 60HZ
- Ice-harvest current: 1.5A Max
- Rated power: 130W

- Refrigerant/Refrigerant amount: R600a/0.0605LBS
- Design Pressure: High Side: 290Psig
- Lower limit: 138Psig
- Foaming agent: C5H10
- Net weight: 24LBS
- Housing: SUS430
- Unit size(WXDHX): L 15.75xW 9.69xH 16.93 in

ENVIRONMENT-FRIENDLY DISPOSAL

You can help protect the environment

Please remember to respect the local regulations: Hand in the non-working electrical Equipments to an appropriate waste disposal center

LIMITED WARRANTY

This warranty applies to products purchased and used in the US and Canada.

This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in materials and workmanship for a period of one[1]year from the date of original purchase.

During this period, your exclusive remedy is replacement of this product or any component found to be defective at our option; However, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep your original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label[e.g, 115V-60 Hz).

We exclude all claims for special, incidental and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.

This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages,so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please visit: www.elechelf.com in the U.S.

For faster service, locate the model, type, and series number is on your appliance.

Welcome to visit our website and purchase our quality products!

Since freezimer has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers.

www.elechelf.com

GET IN TOUCH

Call our support team: 302-668-2538, +1(626)899-0757


(Monday-Friday 8:30am-5pm EST)

Email: Service@elechelf.com

Subscribe (Reply within 24 hours)

Entrusted manufacturer: Chuzhou Donlim Electrical Appliances Co,Ltd.

Documents / Resources

 <p>USER MANUAL ICE MAKER IM2200-UL</p> <p>THIS MANUAL IS THE PROPERTY OF ELECHELF. IT IS LOANED TO YOU BY ELECHELF. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. ELECHELF ASSUMES NO RESPONSIBILITY FOR ANY DAMAGE TO YOUR EQUIPMENT OR PERSONAL INJURY OR PROPERTY LOSS RESULTING FROM THE USE OF THIS EQUIPMENT. ELECHELF ASSUMES NO RESPONSIBILITY FOR ANY DAMAGE TO YOUR EQUIPMENT OR PERSONAL INJURY OR PROPERTY LOSS RESULTING FROM THE USE OF THIS EQUIPMENT.</p>	<p>Elechelf IM2200-UL Ice Maker [pdf] User Manual IM2200-UL, IM2200-UL Ice Maker, Ice Maker, Maker</p>
---	--

References

- [Elechelf Official Site - Buy Home & Kitchen Appliances Online](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.