

electriQ EIQ-15FHDPM-V2 Portable Display



electriQ EIQ-15FHDPM-V2 Portable Display User Manual

[Home](#) » [ElectriQ](#) » electriQ EIQ-15FHDPM-V2 Portable Display User Manual 

Contents

- 1 [electriQ EIQ-15FHDPM-V2 Portable Display](#)
- 2 [Product Information](#)
- 3 [SAFETY INSTRUCTIONS](#)
- 4 [PRODUCT OVERVIEW](#)
- 5 [OPERATION](#)
- 6 [CONNECTING A DEVICE](#)
- 7 [TROUBLESHOOTING](#)
- 8 [TECHNICAL INFORMATION](#)
- 9 [CLEANING AND MAINTENANCE](#)
- 10 [Documents / Resources](#)
 - 10.1 [References](#)
- 11 [Related Posts](#)



electriQ EIQ-15FHDPM-V2 Portable Display



Product Information

Specifications

- Product type: Portable Display
- Model No: eiQ-15FHDPM-V2
- Visual area: 349.63 (H) *196.67mm
- Screen Size: 15.8 inch
- Panel type: IPS
- Dimension: 368 * 225 * 9.0 mm
- Aspect ratio: 16:9
- Resolution: 1920*1080
- Display color: 16.7M
- Colour temperature: 6800K
- Visual angle:
- Contrast ratio: 8001
- Color gamut: 72%
- Input interface: Mini HDMI (Video signal), Type C (Video data, Power supply, ISDN), Type C power supply

Product Overview

The eiQ-15FHDPM-V2 is a portable display with a screen size of 15.8 inches. It features an IPS panel for vibrant and accurate colors. The display includes a built-in speaker and various input options including HDMI and USB Type C. It also has a headphone socket for audio output.

Operation

To turn the monitor on or off, press and hold the power button for 3 seconds. The display will enter power saving mode if there is no device connected. The brightness and volume can be adjusted using the rocker switch. Roll the switch up or down to adjust the settings. To switch between brightness and volume, press the switch.

Main Menu

The portable display has a full settings menu that can be accessed by pressing and holding the rocker switch for over 3 seconds. Inside the menu, use the rocker switch to navigate and select options. The available options include brightness, image settings, color temperature, OSD settings, reset, and miscellaneous settings.

Connecting a Device

To connect a compatible computer, use the supplied USB C cable and connect it to the Main USB socket on the left side of the display. The computer will provide power and signal to the monitor, allowing for extended display or duplicated display use.

When connecting other devices using HDMI, make sure to connect the power cable first and then connect the HDMI cable to ensure smooth signal transmission.

Troubleshooting

- **Problem:** No video/picture (LED not lit)
Solution: Check the input source and make sure it is selected correctly through the input source menu.
- **Problem:** No video/power/picture (LED lit)
Solution: Check the input source and make sure it is selected correctly through the input source menu.
- **Problem:** Missing pixels/spots and light leaks on the screen
Solution: Contact customer support for assistance.
- **Problem:** Display fails when switching picture is missing colors
Solution: Check the cables and connections for any loose or damaged cables. Make sure the input source settings are correct.
- **Problem:** Screen image is too small
Solution: Adjust the display settings on the connected device.
- **Problem:** OSD does not appear on the screen
Solution: Check the OSD settings and make sure it is enabled.
- **Problem:** No picture, indicator light is blue
Solution: Check the input source and make sure it is selected correctly through the input source menu.
- **Problem:** The picture does not fill the entire screen
Solution: Adjust the aspect ratio settings on the connected device.

Support

If you need further assistance or have any questions, please refer to the support section in the user manual or contact our customer support.

Cleaning and Maintenance

To clean the portable display, use a soft, lint-free cloth and gently wipe the screen. Avoid using harsh chemicals or abrasive materials that may damage the screen. Regularly dust off the display to prevent build-up.

FAQ

- **Q: How do I turn on/off the portable display?**

A: Press and hold the power button for 3 seconds to turn it on or off.

- **Q: How do I adjust the brightness and volume?**

A: Use the rocker switch to increase or decrease the volume and adjust the brightness. Roll the switch up or down to adjust the settings.

- **Q: How do I access the settings menu?**

A: Press and hold the rocker switch for over 3 seconds to enter the menu. Use the rocker switch to navigate and select options.

- **Q: How do I connect a computer to the portable display?**

A: Use the supplied USB C cable and connect it to the Main USB socket on the left side of the display.

Thank you for choosing electriQ

Please read this user manual before using this portable display and keep it safe for future reference


SAFETY INSTRUCTIONS

- Read these instructions – All the safety and operating instructions should be read before this product is operated.
- Keep these instructions – The manual should be retained for future reference.
- Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
- Do not use this equipment near water – The appliance should not be used near water or moisture e.g. in a wet basement or near a swimming pool.
- Clean only with a dry cloth. Do not use solvents or petroleum-based fluids.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as when liquid has been spilled or objects have fallen into the apparatus or it has been exposed to rain or moisture, it does not operate normally or has been dropped.
- Do not remove the safety covers. There are no user serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Only qualified personnel should service this apparatus.

WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on the apparatus.

PRODUCT OVERVIEW

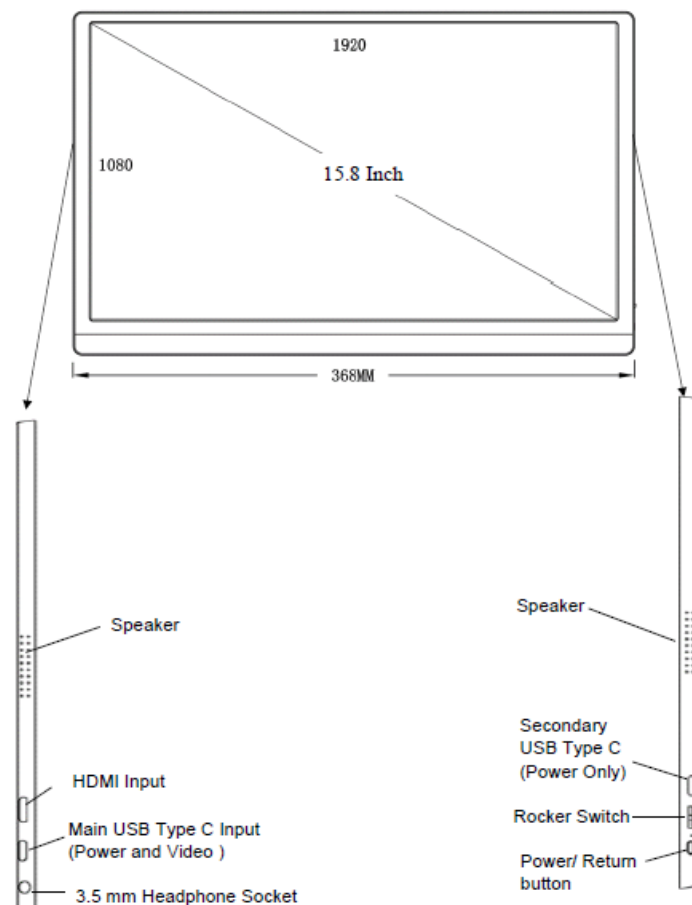

OPERATION

Press and hold the power button for 3 seconds to turn the monitor ON and OFF. The screen will enter power saving mode when turned on unless there is a suitable device connected.

The ROCKER SWITCH is used to increase or decrease the volume and adjust the brightness. Roll the switch up or down to adjust the settings. To change between brightness and volume press the switch.

MAIN MENU

The portable display also includes a full settings menu which is navigated using the rocker switch. Press and hold the rocker switch for over 3 seconds to enter the Menu. When inside the menu press the rocker switch up and down to highlight the desired option, and press the rocker switch to select it.

BRIGHTNESS

All options can be adjusted between 0 and 100.



IMAGE




- ECO – Can be changed between STANDARD, RTS, FPS, TEXT, MOVIE and GAME.
- DCR (Dynamic Contrast) – Can be turned on and off.
- ASPECT – Can change the aspect ratio between Wide and 4:3.

COLOR TEMP

COLOUR TEMP – Change between USER, WARM and COOL. In USER the individual RED, GREEN and BLUE values can be adjusted.




OSD SETTING

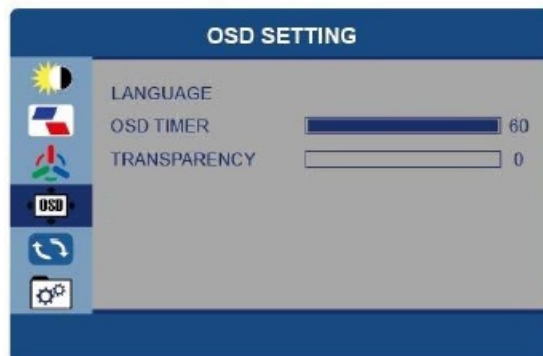

- LANGUAGE – Change the language of the Menus.
- OSD TIMER – Adjust the amount of time the menu is shown before the display returns to normal operation.
- TRANSPARENCY – Adjust how see through the menus are.

RESET

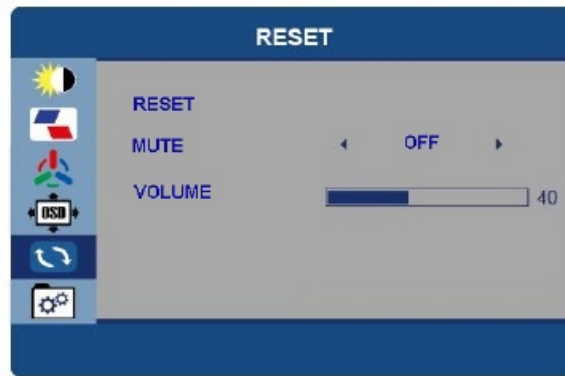

- RESET – Return the portable display to factory settings.
- MUTE – Turn the sound On or Off
- Volume – Adjust the volume level between 0 and 100.


MISC



- SIGNAL SOURCE – Change the signal source between USB Type C and HDMI.
- LOW BLUE LIGHT – Adjust the filtering of blue light from the screen.
- HDR MODE (High Dynamic Range) – Change the HDR mode settings.


CONNECTING A DEVICE

COMPUTER – VIA USB TYPE C

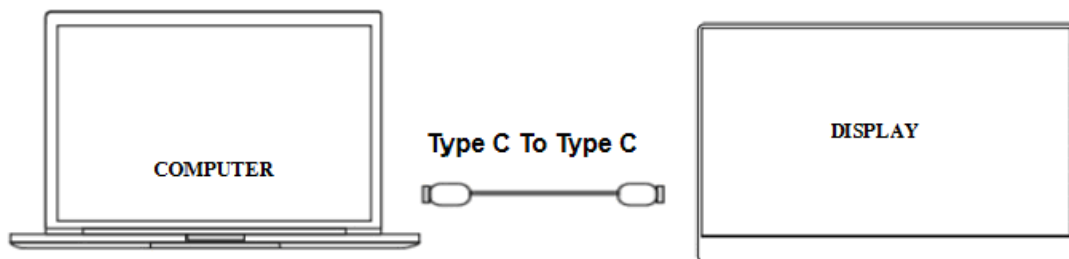


The portable display can be connected to a compatible computer using the supplied USB C cable. This must be connected to the Main USB socket on the left of the display. The computer will provide power and signal to the monitor and can be used for extended display or duplicated display use.

COMPUTER – VIA HDMI

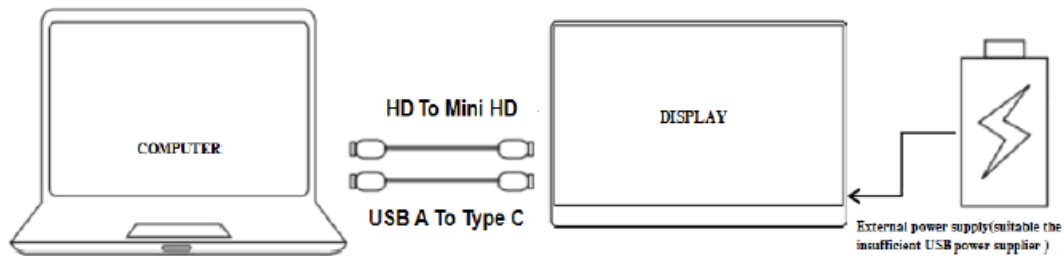


- When connecting to a compatible computer using the HDMI interface, you need to connect the supplied HDMI cable between the computer and the display. You should also connect the display to the computer via USB, using a USB to USB Type C cable (Not supplied), connected to the left-hand Main USB Type C socket on the left of the display.
- Depending on the power supplied by the USB port on the computer (Display required 5V/2A), additional power may need to be supplied to the monitor through the secondary Type C socket on the right of the portable display.

MOBILE PHONE – VIA USB TYPE C

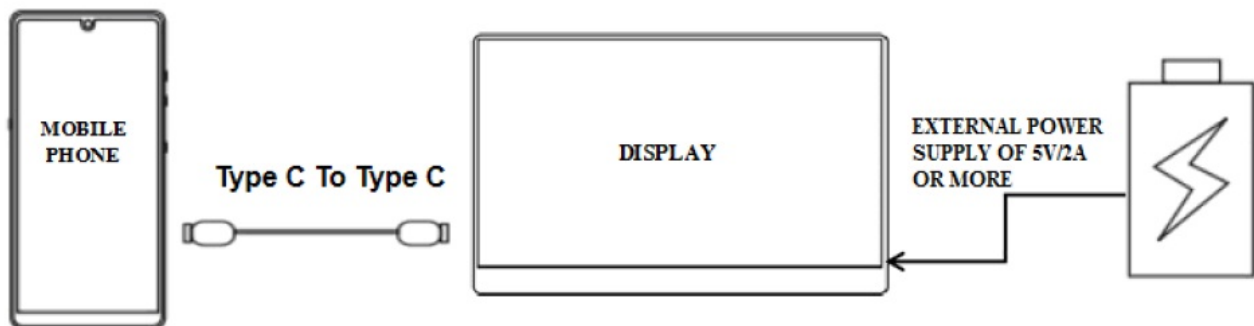

- When there is no external power supply connected to the secondary USB Type C socket on the right of the display, the mobile phone battery will supply power to the display. To reduce power usage the energy-saving mode will be activated and the display brightness will be reduced to 30%, and the user can adjust the brightness and volume of the display according to the output power of the mobile phone).
- When connected to an external power supply through the secondary Type C port, the display will provide power to the mobile phone through the external power supply. (To ensure that the display and the mobile phone can get enough working current, please use a 16W charger or power bank as the external power supply. See "Parameters" for information on compatible phone brands.

OTHER DEVICES

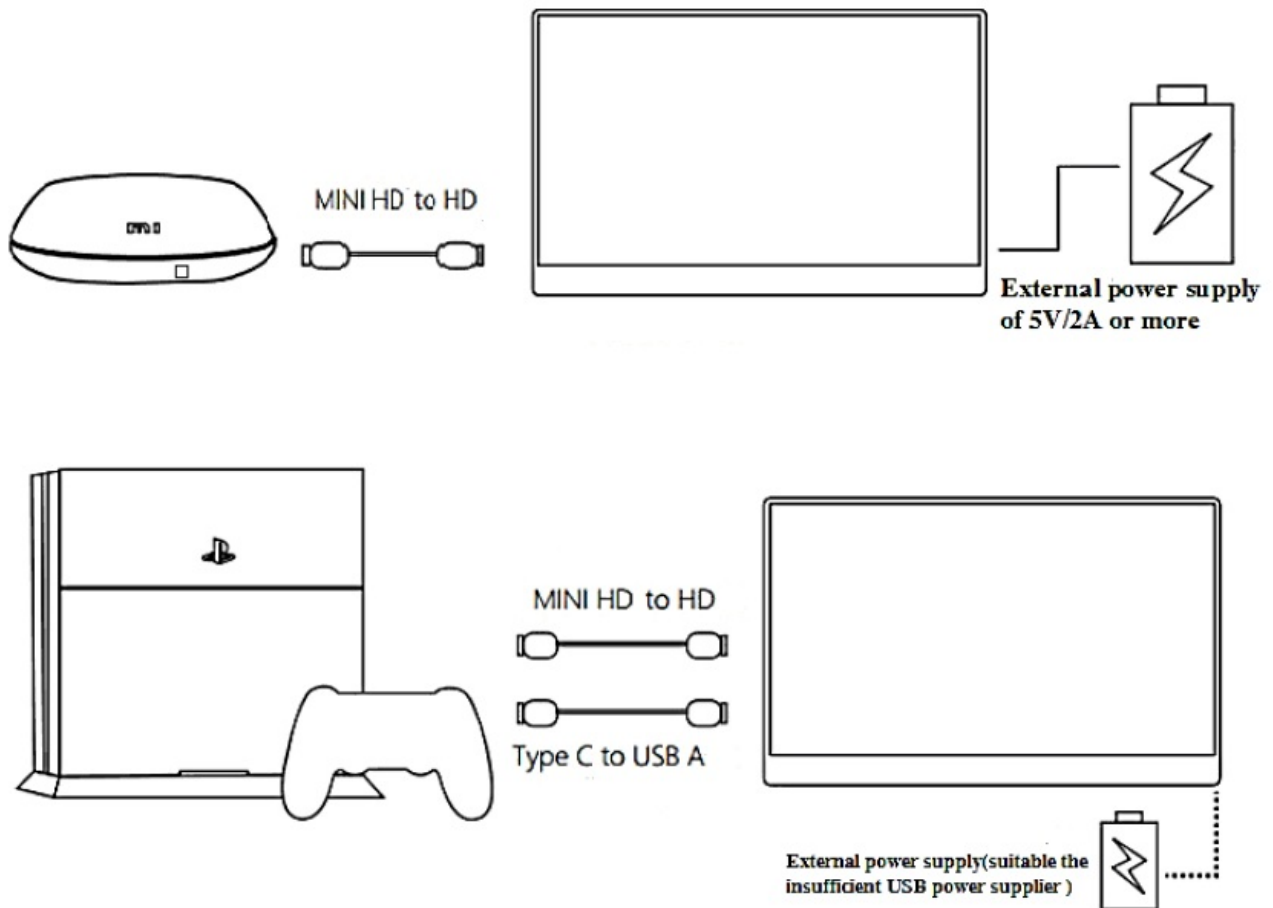

When connecting a device using HDMI, be sure to connect the power cable first, then connect the HDMI to ensure the smooth transmission of the signal.

TROUBLESHOOTING

PROBLEM	SOLUTION
No video/ picture (led not lit)	<ul style="list-style-type: none"> · Make sure the video cable between the monitor and computer is connected properly and securely. · Use other electrical equipment to confirm that the power outlet is working properly. · Make sure the power button is pressed correctly. · Make sure the correct input source is selected through the input source menu.
No video/ power/ picture (led lit)	<ul style="list-style-type: none"> · Improve brightness and contrast with OSD. · Check whether the indicators on the side are normal. · Check if the video cable connector pins are bent or broken. · Check whether the power adapter is properly connected. · Make sure the correct input source is selected through the input source menu.

Missing pixels/ spots and light leaks on the screen	<ul style="list-style-type: none"> · Turn off and on again. · Restore the monitor to factory settings. · Use OSD to adjust brightness and contrast. · Pixels that are permanently off are an inherent defect in LCD technology. · Contact us about monitor quality and pixel issues.
Display fails when switching	<ul style="list-style-type: none"> · Make sure that the video cables of the monitor and HDMI output device are properly connected. · Reset the monitor to factory settings.
Picture is missing colours	<ul style="list-style-type: none"> · Make sure the video cable connecting the monitor and the computer is properly connected. · Adjust custom r / g / b values. Colour in the colour menu of OSD. · In the advanced settings OSD, change the input color format to PCRGB or YPbPr.
Screen image is too small	<ul style="list-style-type: none"> · Check the aspect ratio setting in the monitor settings OSD · Restore the monitor to factory settings.
Osd does not appear on the screen	<ul style="list-style-type: none"> · Turn off the monitor, disconnect and reconnect the power cord, and turn on the monitor.
No picture, indicator light is blue	<ul style="list-style-type: none"> · Check the signal source. Make sure the computer or phone is not in sleep mode. · Check that the signal cable is properly inserted. Reconnect the signal cable if necessary. · Restart your computer or phone.
The picture does not fill the entire screen.	<ul style="list-style-type: none"> · Since the resolution of the same screen of the mobile phone can be re-scaled (aspect ratio), the display can be displayed in full screen. · Computer equipment can be set to 16: 9 resolution, the display can be full screen display · Play a video source with a 16: 9 video sources, and the monitor can display full screen.

TECHNICAL INFORMATION

Product type:	Portable Display	Model No:	eiQ-15FHDPM-V2
Visual area:	349.63 (H) *196.67mm	Screen Size:	15.8 inch
Panel type:	IPS	Dimension:	368 * 225 * 9.0 mm
Aspect ratio:	16:9	Resolution:	1920*1080
Display color:	16.7M	Colour temperature:	6800K
Visual angle:	H 85°/85°Min V 85°/85°Min		
Contrast ratio:	800 1	Brightness:	200-220 cd/m²
Color gamut:	72%		
Input interface:	Mini HDMI (Video signal) Type C Video data Power supply ISDN Type C power supply		
Output Interface:	3.5mm interface	headphone	Speaker: Built-in cavity speaker (1W*2)
System requirement:	devices with an HD output interface, computers with full Type C video output capability ;		

SUPPORTED MODELS (Phone)

Brand	Phone model
Huawei	Mate 10 Mate 10Pro Mate 20 Mate 20Pro Mate 20X P20 P20 Pro HonorNote10
Samsung	S8 S8+ S9 S9+ Note 8 Note 9
Smartisan	R1 Pro2S
OPPO	R17 Pro
More models	Updated continuously.....

Brand	Computer model
Huawei	MateBook MateBook X MateBook X Pro MateBook E
Apple	MacBook 12 MacBook Pro MacBook Air iPad Pro 2018
Honor	Magic
Mi	Air 12.5/13.3 inch Pro15.6-inch Millet Game Book
Lenovo	Yoga 5Pro ThinkPad X1 Carbon 2017 Miix 720
HP	Pavilion X2 EliteBook Folio G1
Dell	XPS13 XPS15
Google	Chromebook Pixels PixelBook Pen
ASUS	LingYao3 U306 U321 series U4100 ROG series
Microsoft	Surface Book2
Razer	Blade Stealth blade/blade sneak version
More models	Updated continuously...

SUPPORTED MODELS (Computer)

CLEANING AND MAINTENANCE

Before cleaning the monitor, unplug the monitor power cord from the electrical outlet

- When cleaning the antistatic screen, slightly moisten a clean, soft cloth with water. If possible, use a dedicated screen-cleaning tissue or solvent for electrostatic coating.
- Do not use benzene, thinner, ammonia, abrasives, or compressed air.
- If you find white powder when you unpack your monitor, wipe it off with a cloth.
- Be careful when operating the monitor, as dark monitors are easier to scratch and leave visible scratches than light monitors.

electriQ UK SUPPORT

www.electriQ.co.uk/support

Call: 0330 390 3061

Office hours: 9AM – 5PM Monday to Friday


www.electriQ.co.uk

Unit J6, Lowfields Business Park Lowfields Way, Elland
West Yorkshire, HX5 9DA

DISPOSAL:

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centers.

Documents / Resources

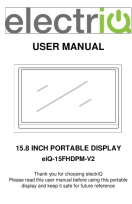	electriQ EQ-15FHDPM-V2 Portable Display [pdf] User Manual EQ-15FHDPM-V2 Portable Display, EQ-15FHDPM-V2, Portable Display, Display
---	---

References

- [Buy electriQ Appliances Online | TVs | Ovens | Dehumidifiers | Security](#)
- [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.