



## EPEVER MT11 Remote Meter User Manual

[Home](#) » [EPEVER](#) » EPEVER MT11 Remote Meter User Manual 

### EPEVER MT11 Remote Meter User Manual



#### Contents

- [1 Important Safety Instructions](#)
- [2 Overview](#)
- [3 Product Classification](#)
- [4 Installation](#)
- [5 Product Features](#)
- [6 Specifications](#)
- [7 Warranty](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

### Important Safety Instructions

Thank you for selecting the remote meter.

## General safety information

- Please contact our company or transportation if the product has been damaged.
- Please read this manual carefully before using the product and pay attention to the safety information.
- Keep the product away from rain, exposure, severe dust, vibrations, corrosive gas, and intense electromagnetic interference.
- Do not allow water to enter the product.
- There are no serviceable parts inside the product. Do not disassemble or attempt to repair it.

## Recommendations

- The MT11 is only allowed to connect with the DR-N series charge controller. Please confirm before purchase and installation.
- Please do not install MT11 in a situation with strong electromagnetic interference.

## Overview

The MT11 remote meter, matching with the DuoRacer series controllers, can monitor the controller's running data and working status.

### Features:

- Easy to install and operate
- Real-time display of fault alarms
- Locally readable of real-time parameters
- Powered by the controller directly

## Product Classification

### 1. MT11(include the 1.5m communication cable)

- Remote meter MT11
- 1.5m communication cable (Model: CC-RS485-RS485-3.81-4P-150)
- Base of MT11

### 2. MT11 (include the 5m communication cable)

- Remote meter MT11
- 5m communication cable (Model: CC-RS485-RS485-3.81-4P-500)
- Base of MT11

### 3. MT11 (include the 10m communication cable)

- Remote meter MT11
- 10m communication cable (Model: CC-RS485-RS485-3.81-4P-1000)
- Base of MT11


### 4. MT11(Do not include the communication cable)

- Remote meter MT11
- 1.5m communication cable (Model: CC-RS485-RS485-3.81-4P-150)
- Do not include Base of MT11

**NOTE:** The customers can purchase the product according to the requirement.


**Installation**


**Base of MT11 (Optional accessory)**

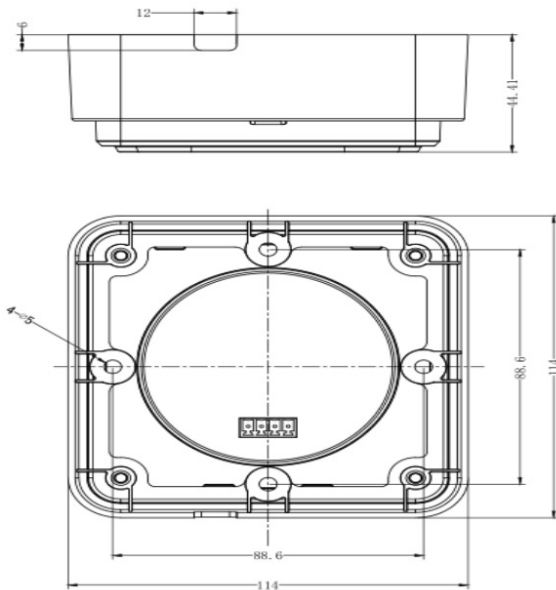

Mechanical parameter	Parameter
Dimension	114mm x 114mm x 44.41mm
Mounting size	88.6mm x 88.6mm
Mounting hole size	Φ5mm

**Wall Installation**

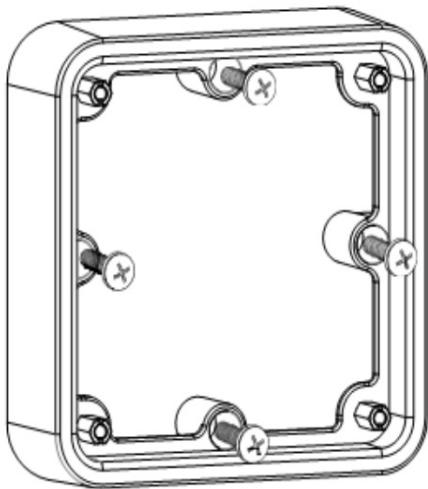

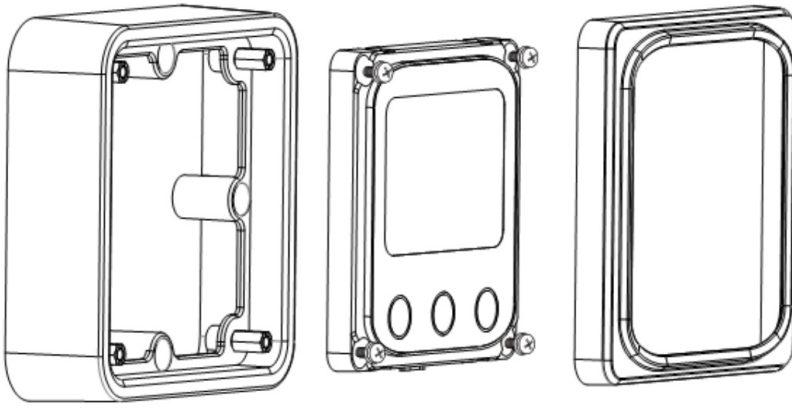

**Step1:** Locate and drill screw holes based on the Frame Mounting dimension of the base, and erect the plastic expansion bolts.


**Step2:** Use four PA4.2×32 self-tapping screws to fix the Frame.

**Step3:** Remove the decorative shell.

**Step4:** Use four M4×8 pan head screws to mount the MT11 surface on the Frame.

**Step5:** Install the decorative shell.

## Surface Installation

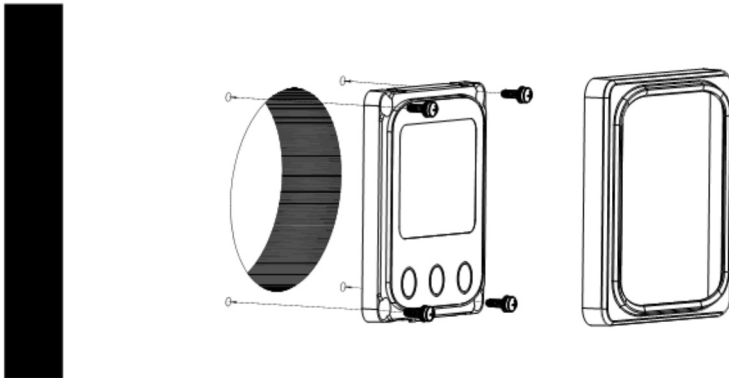

**Step1:** Locate and drill screw holes based on the installation size of the surface.

**Step2:** Remove the decorative shell.


**Step3:** Use four M4×8 cross recessed pan head screws with M4 nuts to mount the MT11 surface onto the panel.

**Step4:** Install the decorative shell.

**NOTE:** Take full consideration of the plugging/unplugging space of the communication cable and the cable length during installation.

## Product Features

### Front View

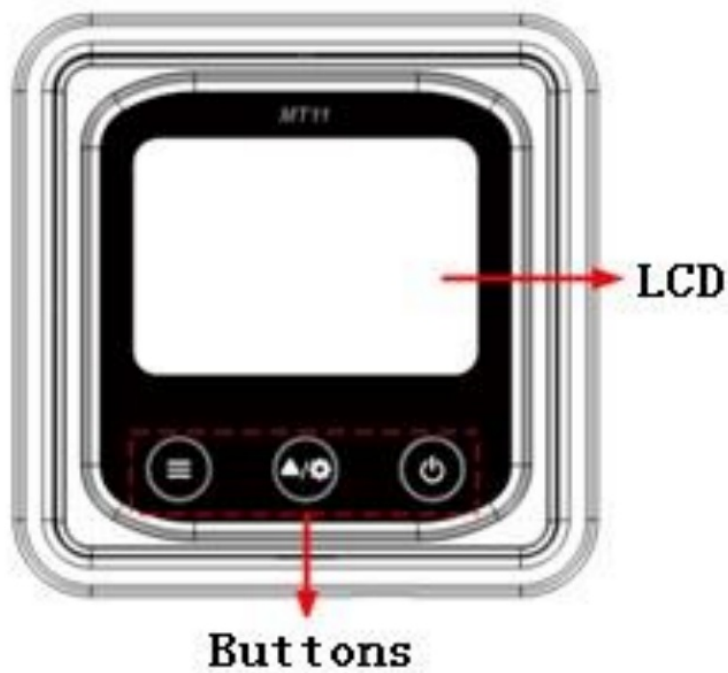




- **LCD screen**


Man-machine interaction operation interface. Refer to chapter 6, Display and operation.

- **Buttons**

The meter buttons include two function buttons and one switch button.

	Press the button	1. PV array parameters 2. Storage battery parameters 3. Browse the start battery parameters automatically ( <b>Auto</b> )
	Press the button	Browse the PV array parameters Browse the Storage battery parameters Browse the start battery parameters
	Press the button and hold on 5s	Temperature units Battery type
	Press the button	The meter is powered ON
	Press the button and hold on 5s	The meter is powered OFF

Rear View

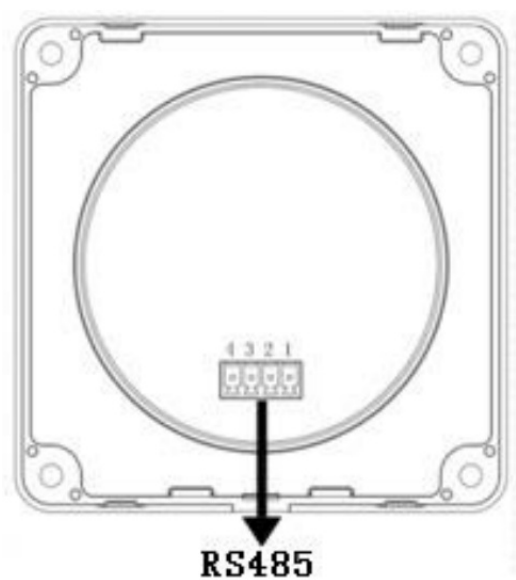


- **RS485communicationport**

It is used to connect the controller to supply power to the MT11.

- **Communication cable’s models**

- CC-RS485-RS485-3.81-4P-150(Included)
- CC-RS485-RS485-3.81-4P-1000(Optional)
- CC-RS485-RS485-3.81-4P-2000(Optional)


- **Pins definition**

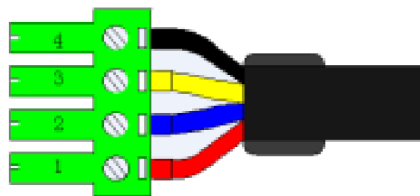







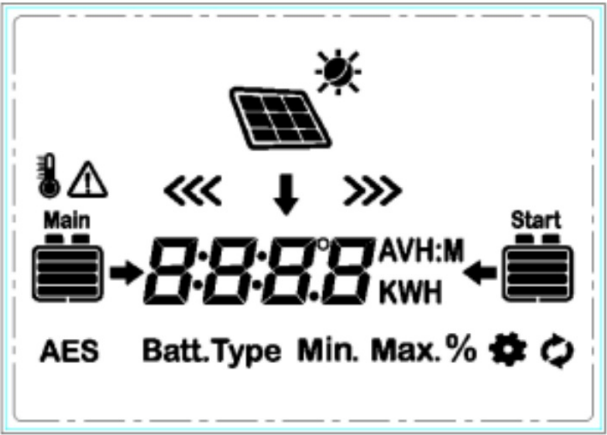















PIN	Definition
1	DC5V
2	RS-485-B
3	RS-485-A
4	GND

Display and operation

LCD



Icon	Instruction	Icon	Instruction
	BATT1 battery capacity level①0 12 %		BATT2battery capacity level ①0 12%
	BATT1battery capacity level①13% 35%		BATT2battery capacity level ①13% 35%
	BATT1battery capacity level①36% 61%		BATT2battery capacity level ①36% 61%
	BATT1battery capacity level①62% 86%		BATT2battery capacity level ①62% 86%
	BATT1battery capacity level① 87% 100%		BATT2battery capacity level ① 87% 100%
	Day		PV array

	Night		BATT1 charging icon
	Display the parameters of PV		BATT2charging icon
	Display the parameters of BATT1		BATT1temperature parameters
	Display the parameters of BATT2	<b>AES</b>	AES signal icon
	Setting icon	<b>Batt. Type</b>	Battery type icon
	Auto global view sign	<b>Min</b>	Minimum voltage icon
	Fault Icon	<b>Max.</b>	Maximum voltage icon

- (①) Battery power capacity is calculated by the linear relationship between the disconnect voltage of low voltage and float charging voltage.


### Auto Global-View Mode

#### Operation:

**Step1:** Press the  button, **Auto** is appear.


**Step2:** Press the  button and select the  .



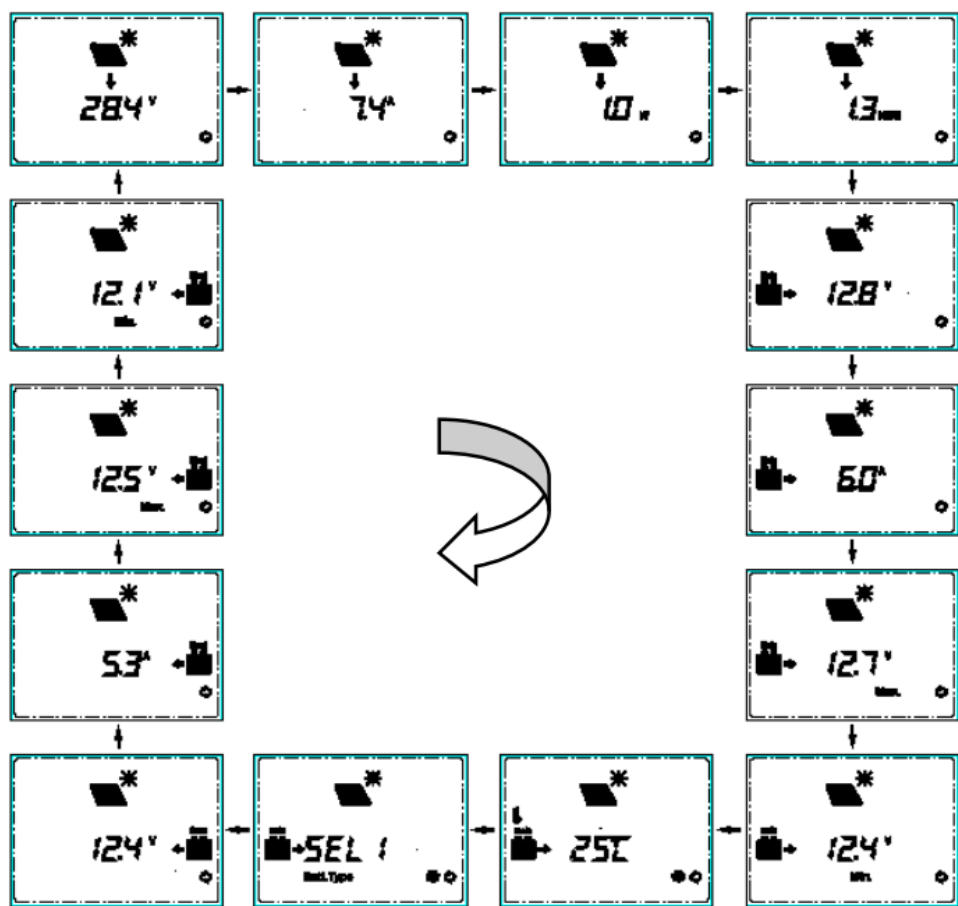



Echo Loop: PV voltage — PV current — PV power — Battery power — BATT1 voltage — BATT1 current — Max. BATT1 voltage — Min. BATT1 voltage — BATT1 temperature — BATT1 battery type — BATT2 voltage — BATT2 current — Max. BATT2 voltage — Min. BATT2 voltage — PV voltage
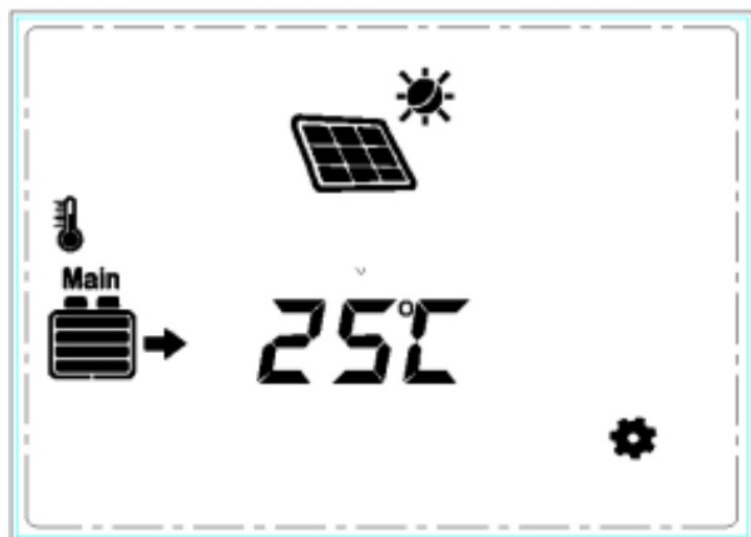
## Temperature Units




Operation:



**Step1:** Press the  button under the battery temperature interface.

**Step2:** Press the  button to select the temperature unit.


**Step3:** Press the  button to set successfully
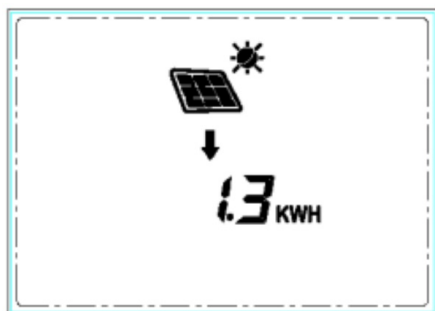
## Clear the Generated Energy





Press the  and  button and hold on 5s to clear the generated energy.

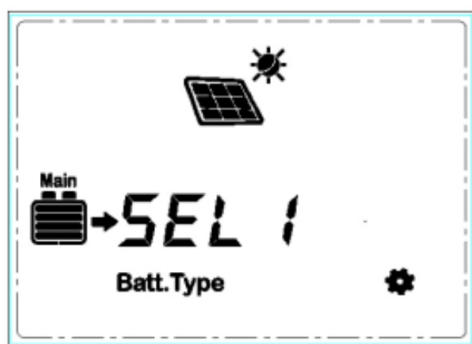
## Battery Type



### Operation:


**Step1:** Press the  button and hold 5s under the battery type interface.


**Step2:** Press the  button when the battery type interface is flashing.

**Step3:** Press the  button to confirm the battery type.

### Battery type

<b>SEL 1</b>	BATT112V Sealed	<b>SEL 2</b>	BATT124V Sealed
<b>GEL 1</b>	BATT112V Gel	<b>GEL 2</b>	BATT124V Gel
<b>FLD 1</b>	BATT112V Flooded	<b>FLD2</b>	BATT124V Flooded
<b>LI F4</b>	LiFePO4(4S)	<b>L1 F8</b>	LiFePO4(8S)
<b>L1 C3</b>	Li-NiCoMn (3S)	<b>L1 C6</b>	Li-NiCoMn (6S)
<b>USE</b>	User		

 **CAUTION:** The battery voltage is set as default and not changeable when selecting the default battery type. Please change to “User” battery type before adjusting the battery voltage.

 **CAUTION:** Set the voltage of the “User” battery type via PC software only.

**Lead-acid Battery Control Voltage Parameters**

The parameters are in the 12V system at 25 °C. Please double the values in the 24V system.

Battery type	Sealed	Gel	Flooded	User
Voltage parameter				
Over Voltage Disconnect Voltage	16.0V	16.0V	16.0V	9~17V
Charging Limit Voltage	15.0V	15.0V	15.0V	9~17V
Over Voltage Reconnect Voltage	15.0V	15.0V	15.0V	9~17V
Equalize Charging Voltage	14.6V	——	14.8V	9~17V
Boost Charging Voltage	14.4V	14.2V	14.6V	9~17V
Float Charging Voltage	13.8V	13.8V	13.8V	9~17V
Boost Voltage Reconnect Voltage	13.2V	13.2V	13.2V	9~17V
Low Voltage Reconnect Voltage	12.6V	12.6V	12.6V	9~17V
Under Voltage Reconnect Voltage	12.2V	12.2V	12.2V	9~17V

Under Voltage Warning Voltage	12.0V	12.0V	12.0V	9~17V
Low Voltage Disconnect Voltage	11.1V	11.1V	11.1V	9~17V
Discharge Voltage Limit Voltage	10.6V	10.6V	10.6V	9~17V
Equalize Duration (minute)	120	—	120	0~180
Boost Duration (minute)	120	120	120	10~180

**NOTE:**

- When the battery type is sealed, gel, flooded, the adjusting range of equalizing duration is 0 to 180 minutes, and boost duration is 10 to 180 minutes.
- The following rules must be observed when modifying the value of the parameter in user battery type (factory default value is the same as sealed type):

1. Over Voltage Disconnect Voltage > Charge Voltage Limit Voltage  $\geq$  Equalize Charging Voltage  $\geq$  Boost Charging Voltage  $\geq$  Float Charging Voltage > Boost Voltage Reconnect Voltage
2. Over Voltage Disconnect Voltage > Over Voltage Reconnect Voltage
3. Low Voltage Reconnect Voltage > Low Voltage Disconnect Voltage  $\geq$  Discharge Voltage Limit Voltage
4. Under Voltage Reconnect Voltage > Under Voltage Warning Voltage  $\geq$  Discharge Voltage Limit Voltage
5. Boost Voltage Reconnect Voltage > Low Voltage Disconnect Voltage

**Lithium Battery Control Voltage Parameters**

The parameters are in the 12V system at 25 °C; please double the values in the 24V system.

<b>Battery type</b>	LiFePO4 (4S)	Li-NiCoMn (3S)	User
<b>Voltage parameter</b>			
Over Voltage Disconnect Voltage	15.6V	13.5V	9 17V
Charge Voltage Limit Voltage	14.6V	12.6V	9 17V
Over Voltage Reconnect Voltage	14.5V	12.5V	9 17V
Equalize Charging Voltage	14.5V	12.5V	9 17V
Boost Charging Voltage	14.5V	12.5V	9 17V
Float Charging Voltage	13.8V	12.2V	9 17V
Boost Voltage Reconnect Voltage	13.2V	12.1V	9 17V
Low Voltage Reconnect Voltage	12.4V	10.5V	9 17V
Under Voltage Reconnect Voltage	12.5V	11.0V	9 17V
Under Voltage Warning Voltage	12.0V	10.5V	9 17V
Low Voltage Disconnect Voltage	11.0V	9.3V	9 17V
Discharge Voltage Limit Voltage	10.8V	9.3V	9 17V

The following rules must be observed when modifying the parameter values in User for the lithium battery.

1. Over Voltage Disconnect Voltage > Over Charge Protection Voltage (Protection Circuit Modules(BMS))+0.2V
2. Over Voltage Disconnect Voltage > Over Voltage Reconnect Voltage    Charge Voltage Limit Voltage ≥ Equalize

- Charging Voltage Boost Charging Voltage  $\geq$  Float Charging Voltage  $>$  Boost Voltage Reconnect Voltage
- Low Voltage Reconnect Voltage  $>$  Low Voltage Disconnect Voltage  $\geq$  Discharge Voltage Limit Voltage
  - Under Voltage Reconnect Voltage  $>$  Under Voltage Warning Voltage  $\geq$  Discharge Voltage Limit Voltage
  - Boost Voltage Reconnect Voltage  $>$  Low Voltage Reconnect Voltage
  - Low Voltage Disconnect Voltage  $\geq$  Over Discharge Protection Voltage (BMS)+0.2V)







**WARNING:** The lithium battery voltage parameters must be set according to the voltage parameters of the lithium battery BMS.



**WARNING:** The required accuracy of BMS shall be at least 0.2V. If the deviation is higher than 0.2V, the manufacturer will assume no liability for any system malfunction caused by this.

## Fault Indication

Fault	LCD	Instruction
BATT2 overvoltage		Battery level shows full, battery frame blink, fault icon blink.
BATT2 over-discharge		Battery level shows empty, battery frame blink, fault icon blink.
BATT2 over temperature		Battery level shows current capacity, battery frame blink, fault icon blink, the temperature icon blink, the temperature value blink, the temperature unit blink.
BATT2 system voltage error <sup>①</sup>		Battery level shows empty, battery frame blink.

- (①) No alarm for limited voltage fault when using Lithium batteries.

## Specifications

<b>Model</b>	<b>MT11</b>
Apply to model	DRN series
Self-consumption(Power on)	13mA/5Vdc
Self-consumption(Power off)	4mA
Communication way	RS485
Communication port	3.81-4P
RS485 cable	CC-RS485-RS485-3.81-4P-150(1.5m) CC-RS485-RS485-3.81-4P-500(5m) CC-RS485-RS485-3.81-4P-1000(10m)
Environment temperature	-20°C +70°C
Storage temperature range	-20°C +70°C
Enclosure	IP20
Dimension	98.4×98.4mm
Base cover dimension	114×114mm
Weight	0.11kg

## Warranty

Before maintenance, check the product by the user manual or the after-sales personnel to determine the problem. If it is necessary to return to the factory for maintenance, please express the product to our company, prepay the freight and provide the ticket related to the purchase.

The returned product must be marked with the model, working environment, and fault description for the quick repair guarantee. This information is important to resolve the problems quickly.

We are not responsible for damage to the product caused by improper usage or failure to follow this user manual!

The maintenance is carried out regarding the above process and will incur a certain maintenance cost.

HUIZHOU EPEVER TECHNOLOGY CO., LTD.

Beijing Tel: +86-10-82894896/82894112

Huizhou Tel: +86-752-3889706

E-mail: [info@epever.com](mailto:info@epever.com)

Website: [www.epever.com](http://www.epever.com)

## Documents / Resources

	<p><a href="#">EPEVER MT11 Remote Meter</a> [pdf] User Manual MT11, Remote Meter, MT11 Remote Meter, Meter</p>
---	--

## References

- [Home - EPEVER](#)