



EPH CONTROLS RFC-RF RF Room Cylinder Thermostat Instruction Manual

[Home](#) » [EPH CONTROLS](#) » EPH CONTROLS RFC-RF RF Room Cylinder Thermostat Instruction Manual 



RFC – RF Cylinder Thermostat Operating Instructions



Contents

- [1 RFC-RF RF Room Cylinder Thermostat](#)
- [2 Factory default settings](#)
- [3 Specifications & wiring](#)
- [4 Installation](#)
- [5 Button / symbol description](#)
- [6 Resetting the thermostat](#)
- [7 Boost function](#)
- [8 Lock function](#)
- [9 To connect the RF thermostat with the programmer](#)
- [10 To disconnect the RF thermostat with the programmer](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

RFC-RF RF Room Cylinder Thermostat



CAUTION!

Only qualified electricians or authorised service staff are permitted to open the thermostat.

Ensure that this wireless enabled thermostat is installed 1 metre from any metallic object, television, radio or wireless internet transmitter.

Factory default settings

Temperature indicator: °C

Switching differential: 2.5°C

In built frost protection: 5°C

Keypad lock: Off

Specifications & wiring

Power Supply:	2 x AAA Alkaline Battery
Power consumption:	50 uA
Battery replacement:	Once per year
Temp. Control Range:	10...90°C
Dimensions:	84 * 84* 30mm
Temp. sensor:	NTC 10K Ohm @ 25°C – 1.5m probe type
Temp. indication:	°C

a Mounting of temperature sensor

ON CYLINDER: To ensure accurate control of your cylinder, the temperature sensor should be mounted on the bottom 1/3 of the cylinder. It is essential that the sensing element is in direct contact with the cylinder and that there is no insulation between it and the cylinder. 60°C is the temperature level required in order to prevent the build up of legionella bacteria. The temperature sensor can be fixed to the cylinder using the provided foil tape.

ON PIPEWORK: To ensure accurate control, the temperature sensor should be mounted on the pipework as tightly as possible. It is essential that the sensing element is in direct contact with the pipework and that there is no insulation between it and the pipework. The temperature sensor can be fixed to the pipework using the provided foil tape. !

b Mounting of thermostat

The thermostat should be mounted in a position that will make reading the display convenient.
The thermostat can be fitted to:

1. Recessed conduit boxes
2. Surface mounting boxes
3. Directly on walls !

Installation

Press the button on the bottom of the thermostat.


The front housing will detach from the baseplate.

Insert the batteries (provided) into the thermostat.

Mount the unit as described in section 3. Ensure the cable sensor is connected to terminals Con 3 and Con 4.

Offer the baseplate up to the thermostat. Snap it into position to close.

Button / symbol description

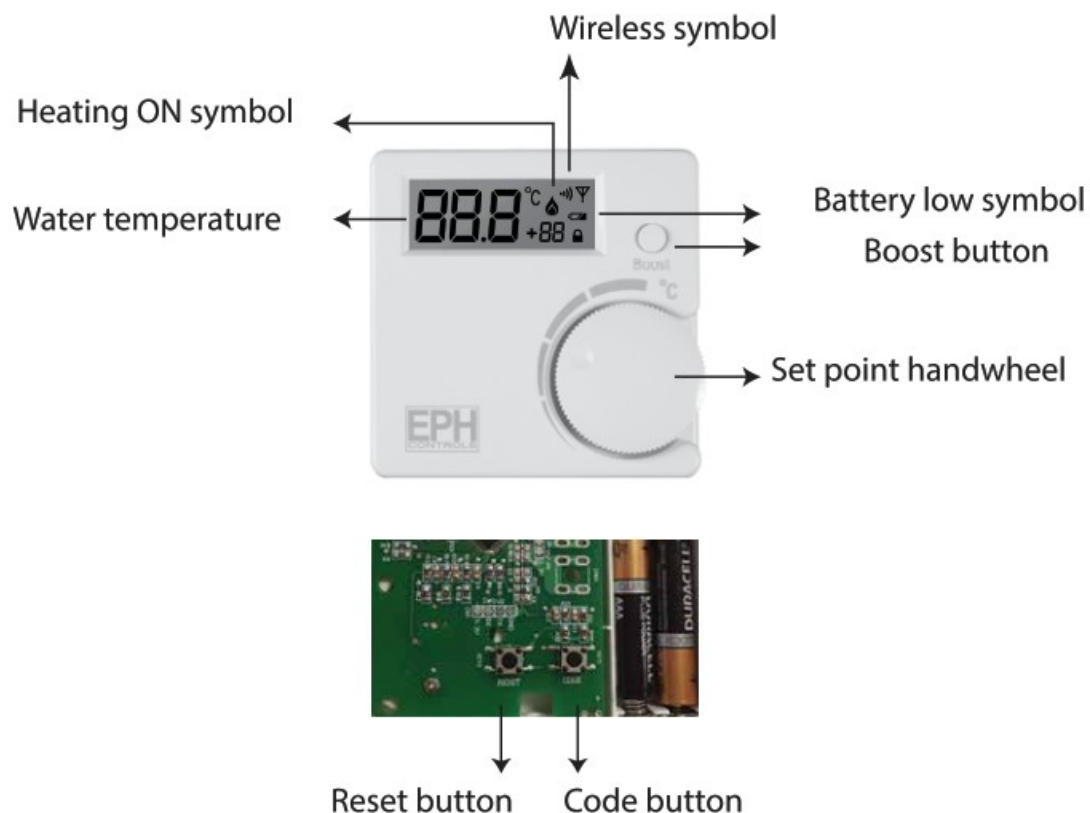

Resetting the thermostat

Press the  button on the bottom of the thermostat, the front housing will detach from the baseplate.

Insert the batteries into the thermostat.

Press the reset button on the PCB, 'NO' will flash on the screen.

Rotate the hand wheel clockwise until 'YES' appears on the screen.

Press the hand wheel once to confirm the setting.

The thermostat has now been reset and the current temperature will appear on the screen.

Boost function

Press the boost button once, twice or three times to boost the heating for 1, 2 or 3 hours respectively. +1H, +2H or +3H will appear on the screen.


The boost function will override the programmer if the programmer is timed to be Off.

Lock function

To lock the thermostat, press the hand wheel for 10 seconds. The keypad symbol will appear on the screen.
To unlock the thermostat, press the hand wheel for 10 seconds. The keypad symbol will disappear from the screen.

To connect the RF thermostat with the programmer


Lower the cover on the front of the time switch / programmer. Move the selector switch to the RUN position.

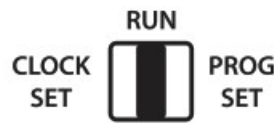

On the timeswitch / programmer, press the  button for 5 seconds.

Wireless Connect will appear on the screen.

On the RFR wireless room thermostat or RFC wireless cylinder thermostat, press the Code button. This is located inside the housing on the Printed Circuit Board.

On the timeswitch / programmer, the available zones will begin to flash. Press the  button for the zone you wish to connect the thermostat to.

The wireless symbol  appears on the screen.

The thermostat will count upwards to the number of the zone that it is paired with. When it reaches the number of the zone that it is paired with press the hand wheel on the thermostat.


The timeswitch / programmer is now operating in the wireless mode.

The temperature of the wireless thermostat is now displayed on the programmer. Repeat this process for the second, third and fourth zone if required.

To disconnect the RF thermostat with the programmer

Lower the cover on the front of the timeswitch / programmer. Move the selector switch to the RUN position.




On the timeswitch / programmer, press the  button for 5 seconds.

This will take you into the Wireless Connect screen.

Press the  button for 3 seconds.

This will clear all RF connections thereby disconnecting all thermostats from the timeswitch / programmer.

Press the  button.



EPH Controls Ireland

Sitecast Industrial Estate, Pouladuff, Cork, T12 W665, Ireland

sales@ephcontrols.com www.ephcontrols.com

EPH Controls UK


Unit E4, Welland Business Park, Valley Way, Market Harborough,

Leicestershire, LE16 7PS, United Kingdom

sales@ephcontrols.co.uk www.ephcontrols.co.uk

<https://manual-hub.com/>

Documents / Resources

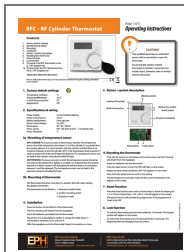

[EPH CONTROLS RFC-RF RF Room Cylinder Thermostat](#) [pdf] Instruction Manual
RFC-RF RF Room Cylinder Thermostat, RFC-RF, RF Room Cylinder Thermostat, Cylinder
Thermostat, Thermostat

References

-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.