



EUHOMY WC-C Bottom Loading Water Cooler Dispenser User Manual

[Home](#) » [Euhomy](#) » EUHOMY WC-C Bottom Loading Water Cooler Dispenser User Manual 

EUHOMY®

WATER
DISPENSER
USER MANUAL



Model: WC-C

Email:support@euhomy.com

Facebook:euhomy.official

Congratulations on your new Euhomy product. To ensure proper operation, please read this Instruction Manual carefully before using this product. Keep this manual in a safe place for future reference.

Congratulations

Dear Customer, So lucky to meet you guys !!!

Thanks for making a purchase on Euhomy!

We hope to provide you with sincere service. If there is anything missing or wrong with your order, If you have any question about using our Water Dispenser. PLEASE reach out to us. Email-(support@euhomy.com) or Facebook-([@euhomy.official](https://www.facebook.com/euhomy.official)).

Euhomy team will answer your doubts online for 24 hours. Your satisfaction is our ultimate goal.

We'd appreciate it if you could share your experience with other shoppers on Amazon and euhomy.com. We'd love to make it right for you! If you just want to see the problem description, you can directly see the tenth page, Or contact us directly.

Email:support@euhomy.com

Our Mission: To be the most trusted appliance brand, Create compact, and practical appliances to better your life. Don't forget to register your product at <https://www.euhomy.com>. for updates, warranty, and other relevant information.

Contents

- 1 SAFETY PRECAUTIONS
- 2 WARNING
- 3 SET UP & USE
- 4 INDICATOR LIGHTS
- 5 INSTALLING AND REMOVING THE DRIP TRAY
- 6 INSTALLING THE WATER BOTTLE
- 7 DRAINING AND CLEANING
- 8 CLEANING INSTRUCTION
- 9 TROUBLESHOOTING
- 10 WARRANTY AND SERVICE
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

SAFETY PRECAUTIONS

SAFETY INFORMATION



DANGER

- Immediate hazards which WILL result in severe personal injury or death



WARNING

- Hazards or unsafe practices which COULD result in severe personal injury or death



CAUTION

- Hazards or unsafe practices which COULD result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS



WARNING

When using electrical appliances basic safety precautions should be followed, including the following:

1. This machine is suitable for households and must be used indoors
2. The machine should be stably placed on the floor, to avoid damage because of the slide. Meanwhile, the backside of the water cooler should keep at least 10CM spare to the door, for ventilation and health radiation.
3. The machine should be placed in a dry, cool, ventilated place, also should avoid the sunlight's irradiation and liquid's splashing. Don't be close to other expensive furniture and electric equipment, never should be placed in the woods.
4. Never change the power cord and never extend the length of the power cord.

5. If the water can't flow out because of stuck, please turn off the cold water switch back inside until 4 hours.
6. Before connecting with the power supply, press the hot spout and let some water comes out to protect the thermostat.

WARNING

SAFETY INFORMATION

1. The plug base should be three-hole grounded with electricity leakage protection.
2. The children are not allowed to play with water spouts to avoid accidental burns.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance
4. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance.
5. Cleaning and user maintenance shall not be made by children without supervision.
6. Never use organic liquid to clean the machine. Strictly prohibit splashing water to the body.
7. You should use the ON/OFF switch to turn on or off the machine. It is prohibited that turn on or off the machine by plugging or unplugging the power cord. Never extend the length of the power supply cord to avoid fire.
8. For this model dispenser (with compressor), never turn the machine upside down or lean it more than 45°.
9. Since the thermostat of this model dispenser has been adjusted, please do not adjust it by yourself.
10. This machine should not be turned on until 3 minutes later when turning off the cooling switch.
11. The power cord or other parts must be replaced by a professional person when it is damaged.

OPERATING CONDITION



This machine is suitable for bottles of 3 or 5 gallons. Don't use unhealthy hard water.

This machine should work under the environment of temperature from 10°C- 38°C, relative humidity not higher than 90%.

If this machine worked under the environment of temperature below 0°C or the thermostat did not work, the water will become ice in the cold water tank and block the pipe.

1. The first time to use a water cooler must connect water first when the water comes out from the water spout, then it can connect the electricity. In any case, connecting the dispenser to electricity without water is forbidden.

SET UP & USE

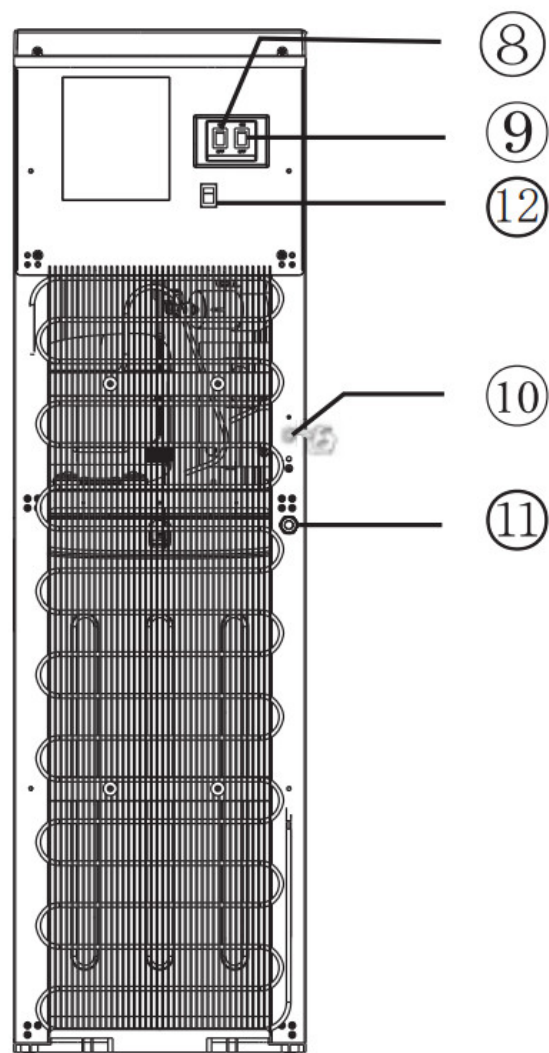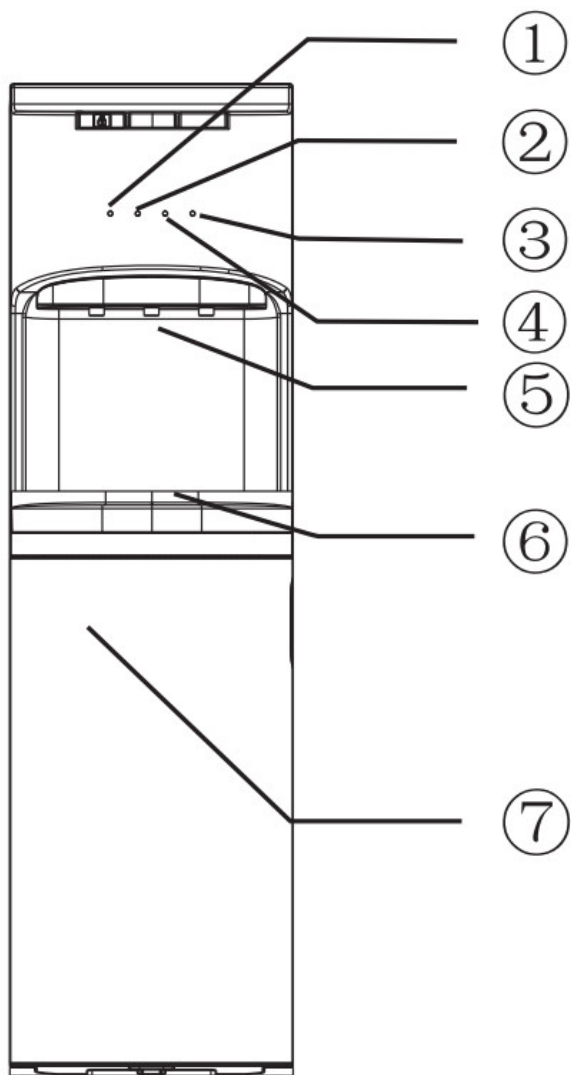

NO	Name	NO	Name
1	Power indicator	8	Cooling switch
2	Heating indicator	9	Heating switch
3	Cooling indicator	10	Power cord
4	UV light	11	Tank drain valve
5	Tap	12	night light switch
6	Water tray		
7	Door		

OPERATING INSTRUCTIONS

Before using the water cooler for the first time, remove all packaging material, including the plastic bag.

Before first-time use: To prevent any internal damage, it is very important to keep the refrigeration units (like this

one) upright throughout their journey. Please leave it standing upright and outside the box for 24HOURS before plugging it in.

INDICATOR LIGHTS



Power Light

The light will illuminate when plugged into the water cooler. It will keep lighting up until pull off the power cord.



Heating Indicator

This light will illuminate when the water is heating. The light will remain on while the water is heating and will turn to be green when it has reached the temperature of 185°F. As the water is dispensed, the hot tank will refill and the water will heat. This indicator light will turn to be red when the water reheats.



Cooling Indicator

This light will illuminate when the water is cooling. The light will remain on while the water is cooling and will turn to be green when it has reached the correct temperature of 50°F. As the water is dispensed, the cold tank will refill and the water will cool. This indicator light will turn to be blue when the water cools.




UV Indicator

This light will indicate when the water cooler is sanitizing the water. It automatically operates for twenty (20) minutes every two (2) hours. The UV indicator will work silently, and if the UV indicator is not illuminated, the function is not operating properly.

Empty bottle notice

When the water in the bottle is running out, the heating light and cooling light will flash at the same time. The lights will keep flashing until the user opens the door to replace a newly filled water bottle.

Note: please must close the door tightly every time after replacing the water bottle.



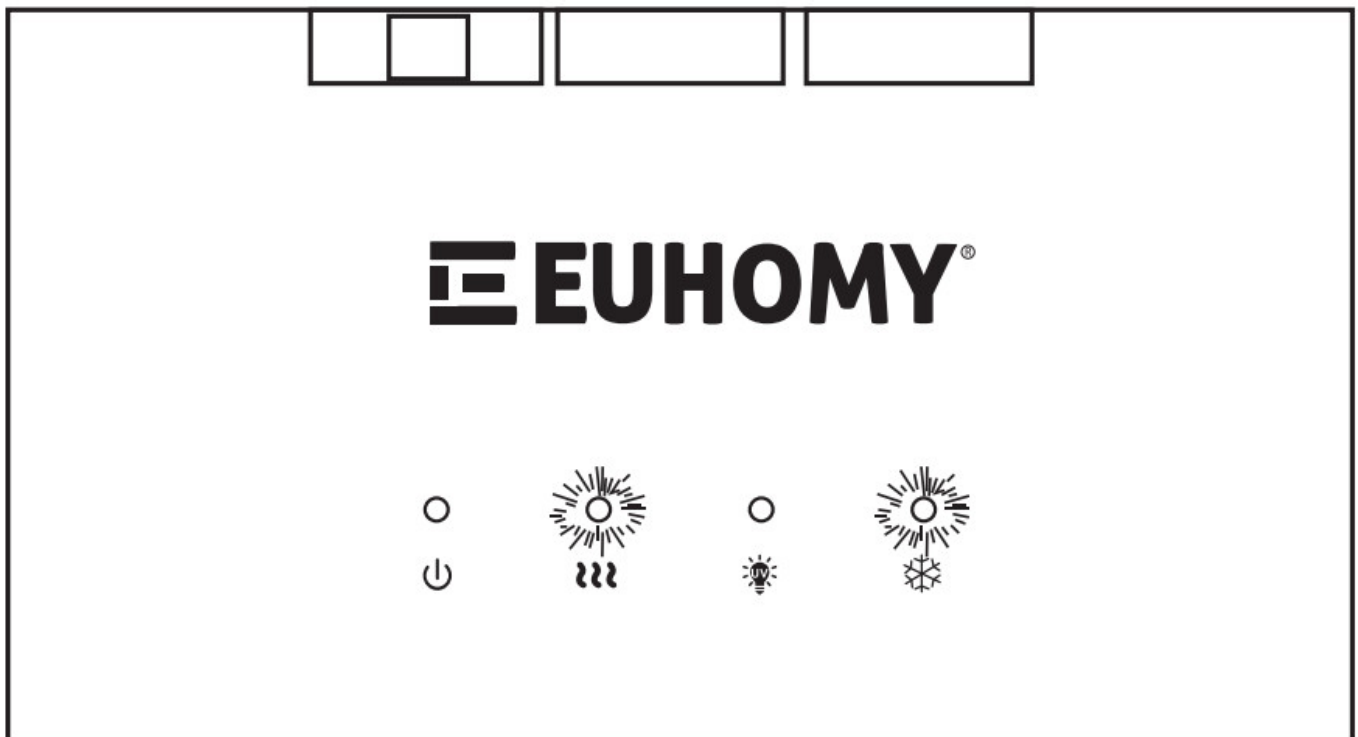


INSATLLING AND REMOVING THE DRIP TRAY

No external drain is needed, the overflow will collect here.

1. To install the drip tray, simply put it down into the area at the top of the door until it snaps into place.




2. To remove the drip tray, place your fingers in the grid of the drip tray.
3. Gently pull the drip tray upward to remove the drip tray from the door of the cooler to empty the water.

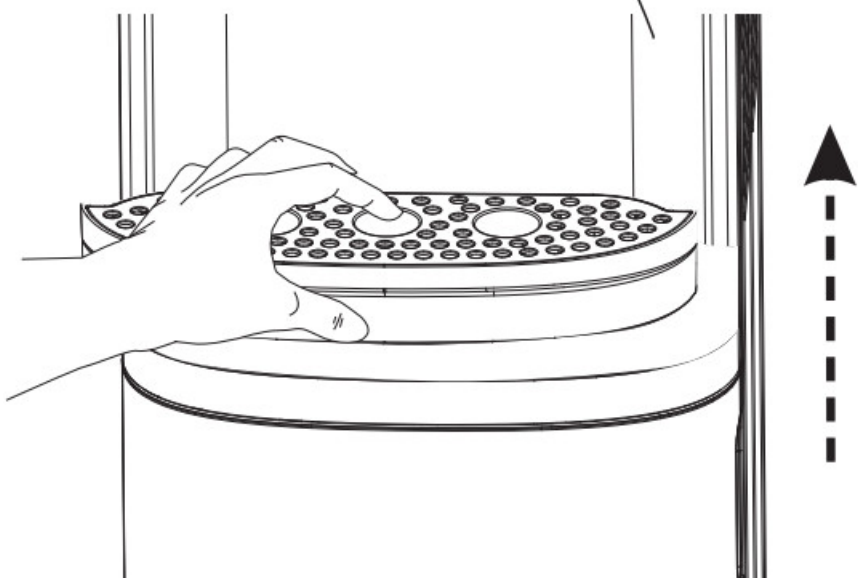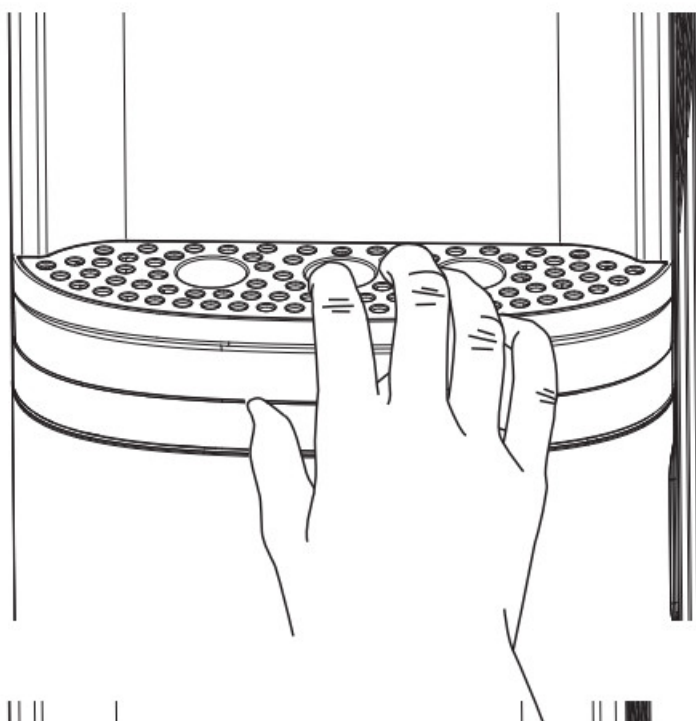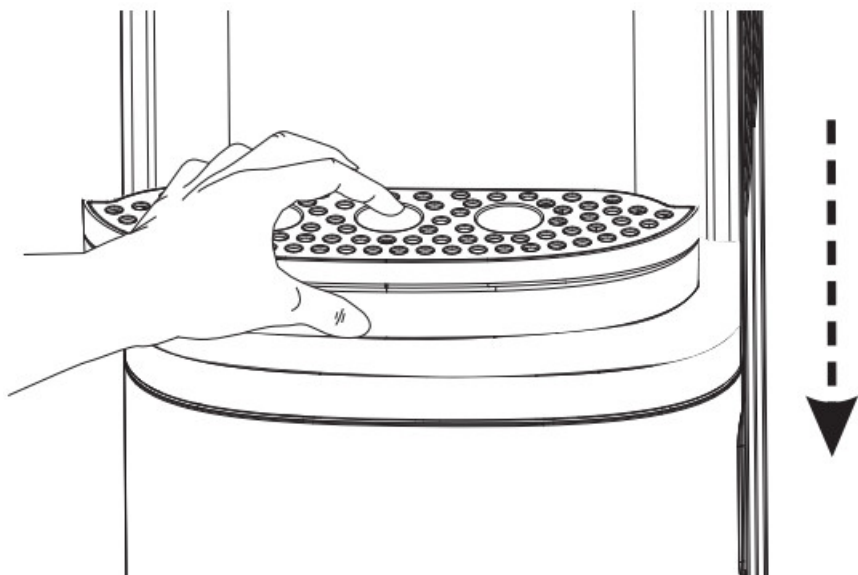


Note: The drip trap is not dishwasher safe.


INSTALLING THE WATER BOTTLE

1. Make sure the lower door is open. Open the lower door by pulling on the right side of the door. **Note:** the lower door is covered by a thin layer of plastic film used to protect the door during shipment. Please remove the plastic layer prior to first use.
2. Place fresh water bottle outside of the bottle storage area.
3. Clean outside of the new bottle with a cloth.
4. Remove the entire plastic cap and paper seal from the top of a brand-new water bottle.
5. Bend the water straw. See the pic below.
6. Place the water straw into the water bottle, lower the straw to the bottom of the bottle and clasp the bottle cap down onto the neck of the water bottle so that the bottle cap is tightly secured to the bottle.
7. Make sure the weighted end of the water straw reaches the lowest part of the water bottle. See fig.3 **Note:** this method is for 3-5 gallon water bottles. Most standard-shaped water bottles have a raised center at the very bottom. For maximum efficiency, make sure the water straw reaches the side of the bottle at its lowest point to ensure all of the water can be utilized. See fig.3
8. Slide bottle into the storage area and close the lower door. Make sure that the door is closed tightly.

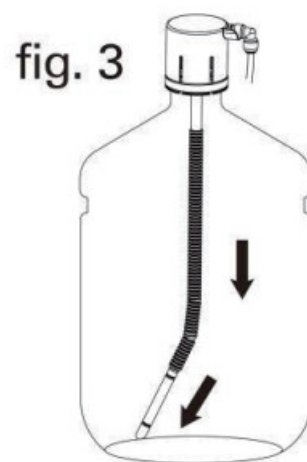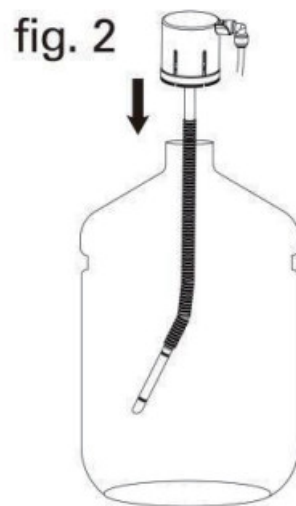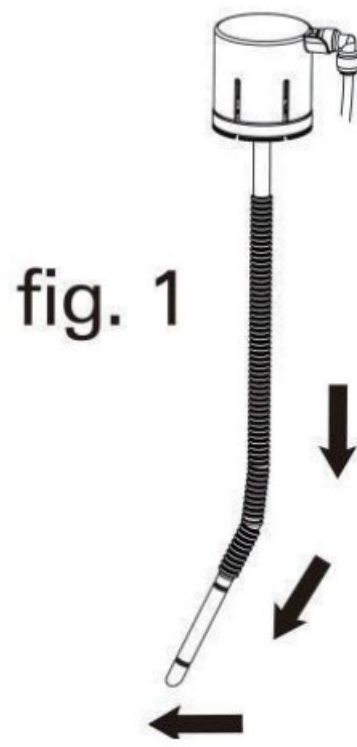

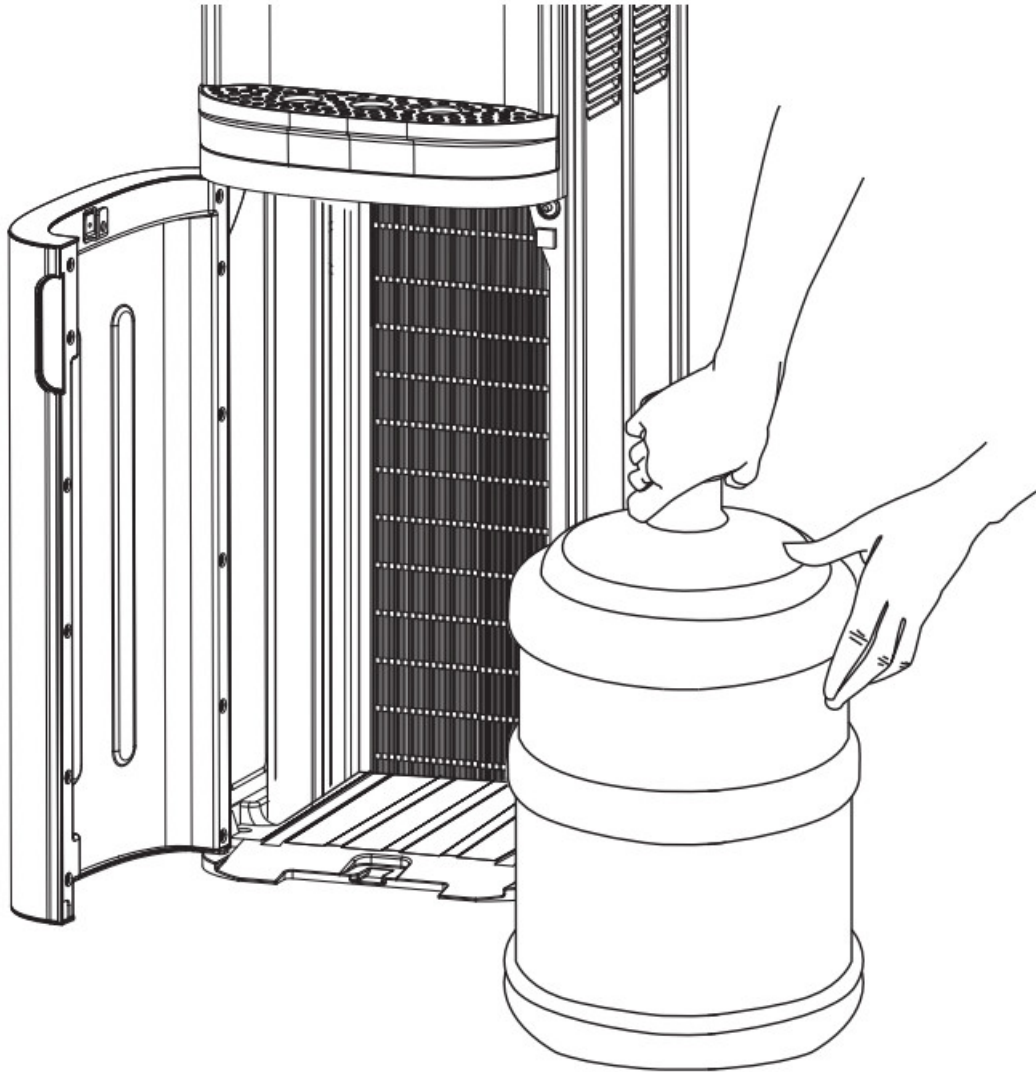


9. Plug cord into a properly grounded wall outlet. At this time, the pump will begin to move water from the bottle to the hot and cold tanks. It will take up to 5 minutes to fill the tanks for the first time. During this period the pump will run continuously. This is normal. The pump will stop automatically when the tanks are completely filled.

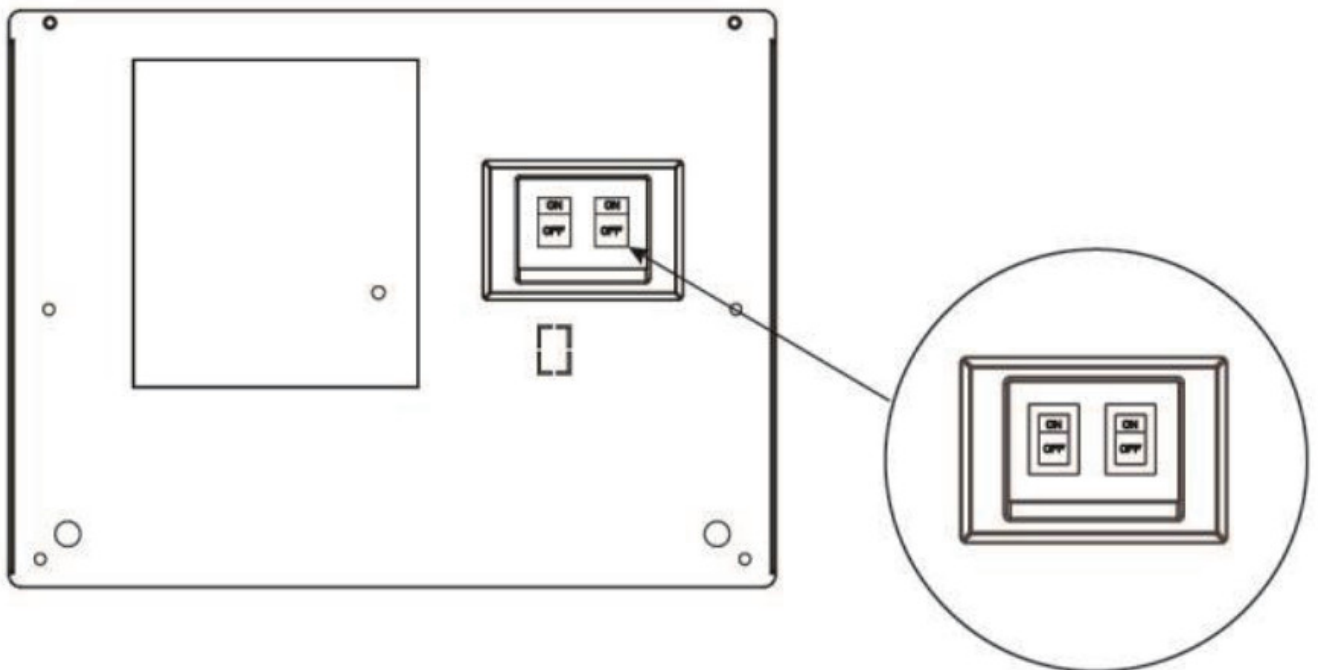

10. When the pump has stopped running and the water tanks are full, turn the hot water and cold switches to the on position. The hot and cold water indicator light will illuminate. **Note:** allow up to 1 hour for heating and cooling

cycles to complete and water to reach the proper hot and cold temperatures. The hot and cold water indicator lights will shut off when each cycle is complete

11. Place a glass under the water cooler spout.
12. For cold water, press down the button and hold it until the desired amount of water has been dispensed, then release.
13. The hot water button features a child safety lock. To dispenser hot water, push the button forward and depress the hot water push button downward to begin the flow of water. You must hold the child safety lock and push the button at the same time until the desired amount of water has been dispensed and then release. The child safety lock will reset to locked condition automatically once you release the button.
Push the child safety lock forward and then press the button downward at the same time to get the water.
14. For room temperature water, press down the button and hold it until the desired amount of water has been dispensed, then release.

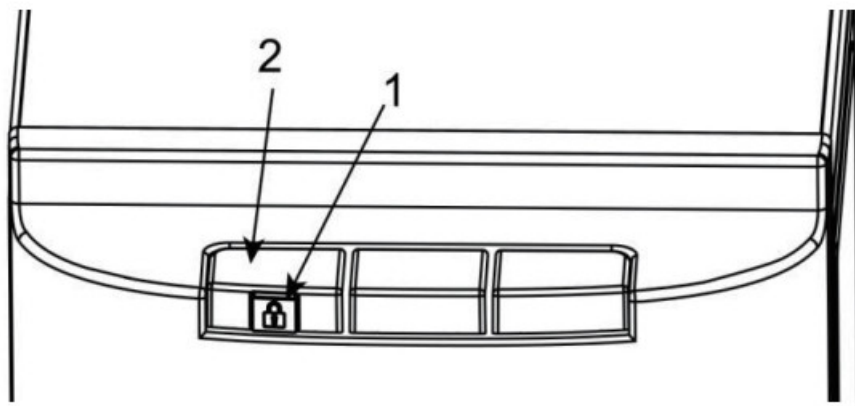

DRAINING AND CLEANING


To avoid accidents, cut off the power supply before operation according to the following instruction. It is recommended that the unit be cleaned and sanitized manually about every six months to prolong the lifetime of the machine.

To clean the outside of the unit


1. The machine had been disinfected before shipping from the factory. Before using this machine, clean the machine by pushing the hot water button and cold water button, letting about 1-liter water flow out.
2. The machine should be cleaned with the citric acid scale remover available from drugstore or markets place according to the instruction manual of the citric acid scale remover, and then clean with water.
3. Use any neutral & nonfiction cloth to wash the surface of the machine. The cloth does not come with this unit. It can be purchased separately from a local store.

Draining instruction:

1. Press the switch to off position. Cut off the electric supply.

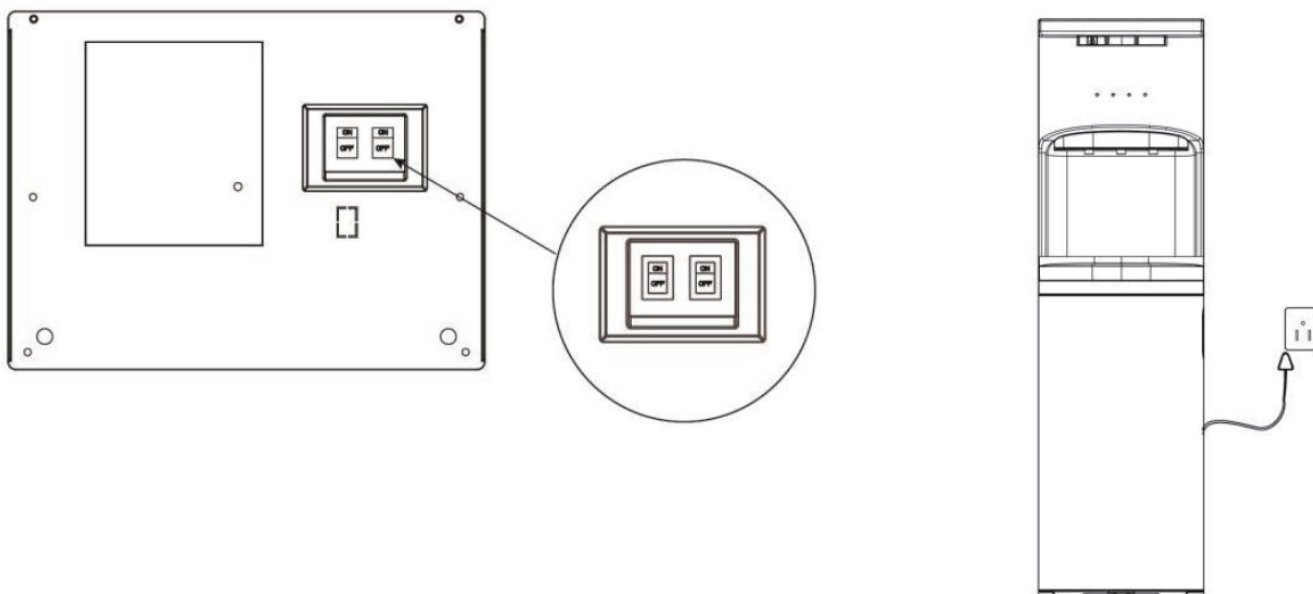


2. Open the lower door and remove bottle from the water cooler.

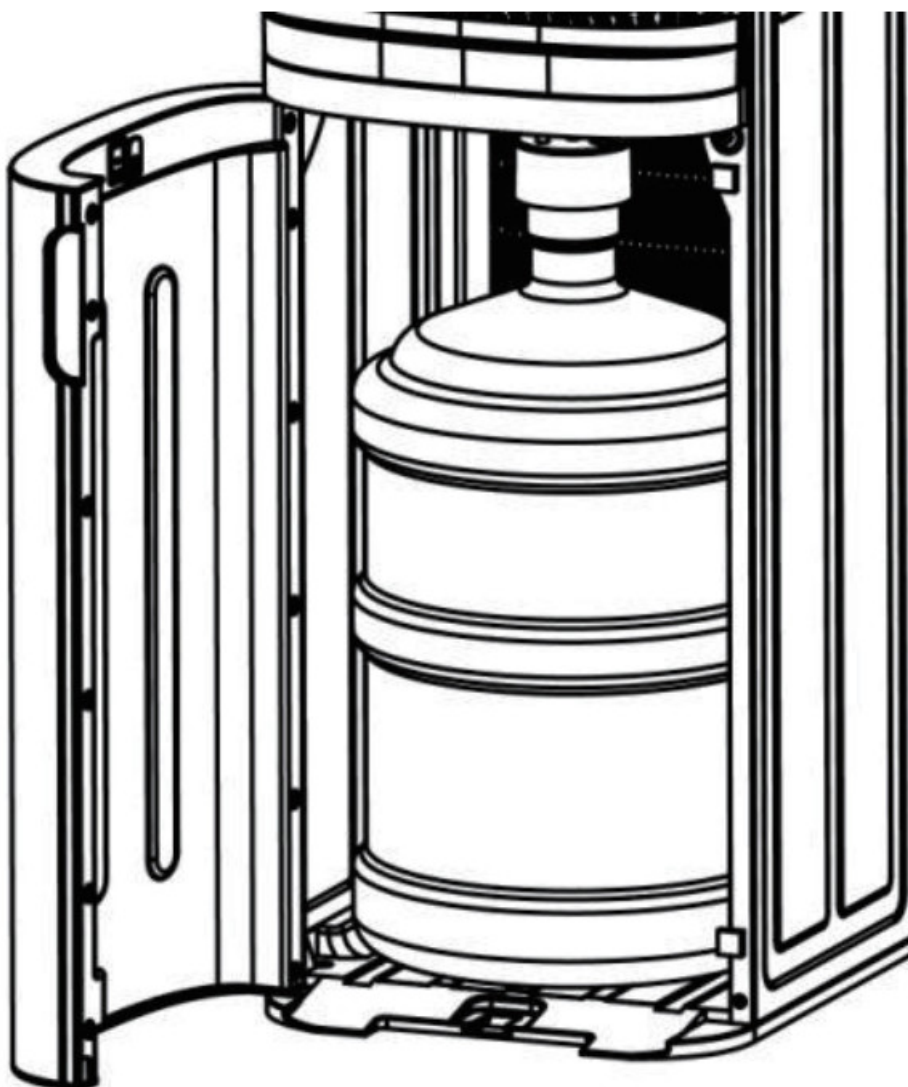


3. Remove the water straw from the water bottle.

4. Place a container under the drain valve and drain valve plug which is located on the back panel. Remove the drain cover and allow the water to drain out from the water cooler. Let the water flow into the container.

Caution: Because the hot water can reach approximately 185F, it can cause severe burns if not handled carefully. Please be cautious while operating and cleaning. Before draining out the water, please wait at least 1 hour to let the water cool down.

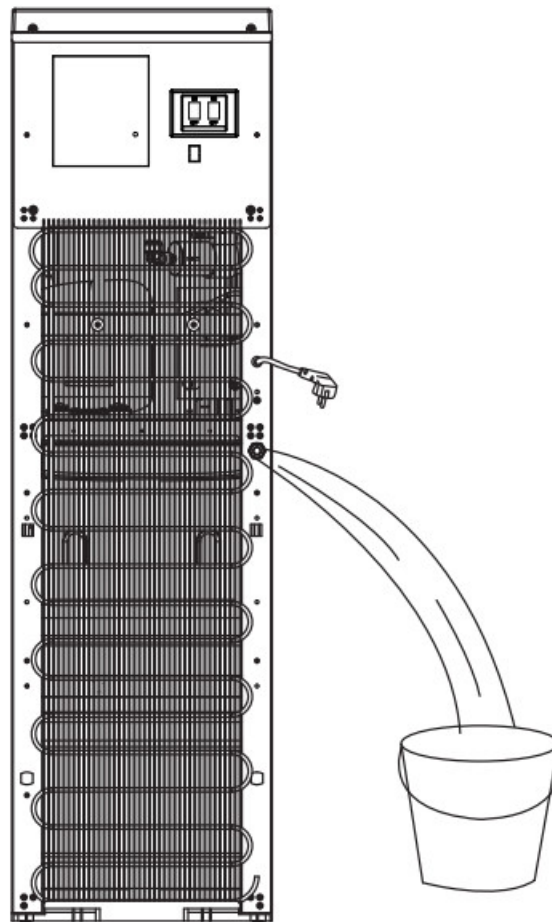


5. After finishing the water drains out, Reinstall the drain valve cap and plug.

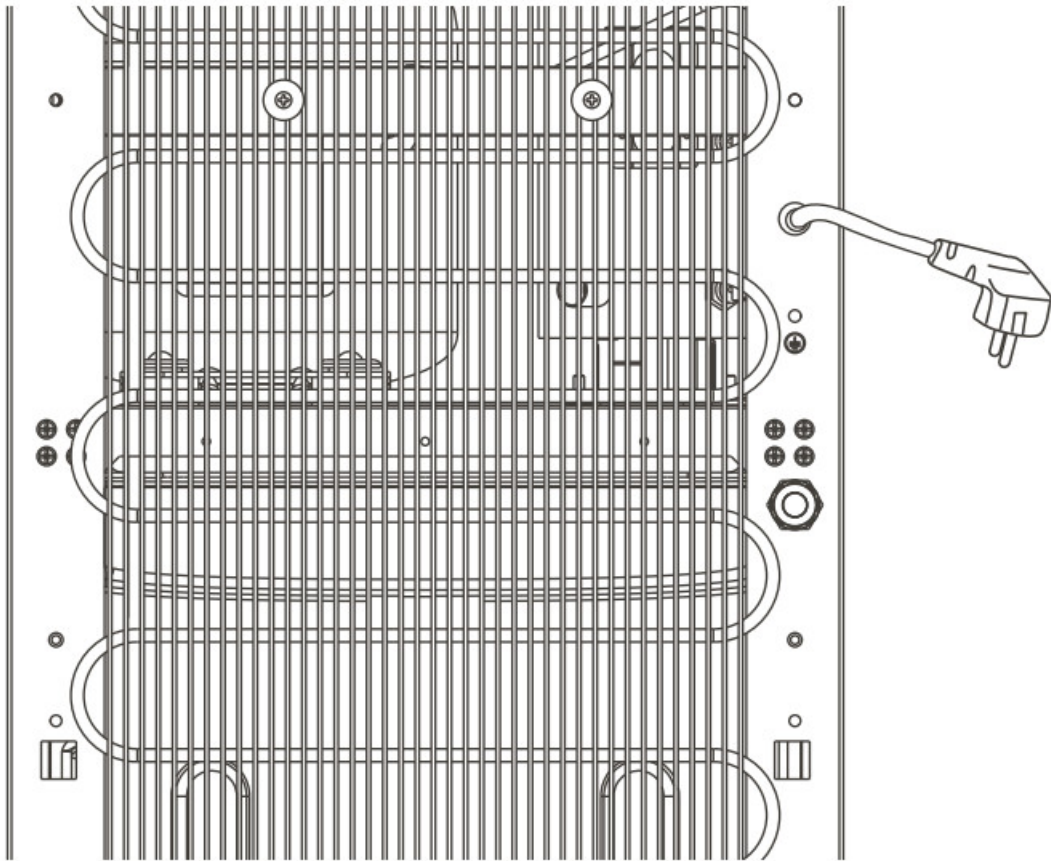


CLEANING INSTRUCTION

Periodically the water cooler tanks must be sanitized to prevent unpleasant tastes in the water and cleaned to remove mineral deposits that can impair flow.


1. Unscrew the top cover and take out the cold tank lid.

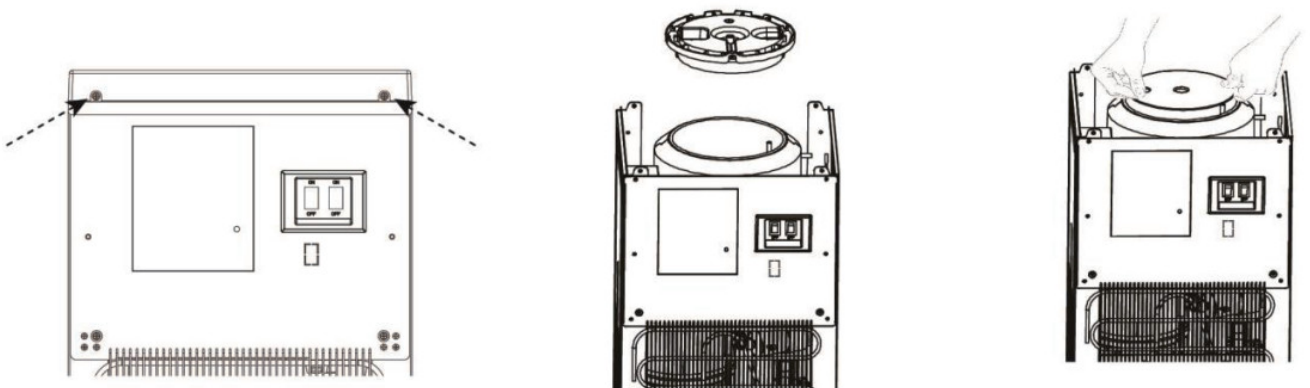


2. Put the citriacid scale remover into the machine's cold tank and make sure the water can flow out of the waterspout.

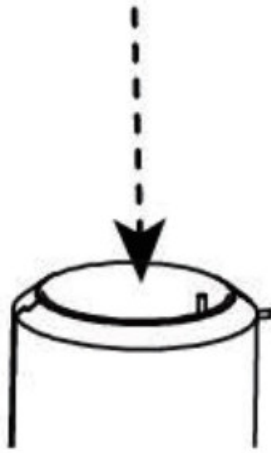

3. Plug in the power cord and turn on the heating switch. Allow the water to heat for 15 minutes.

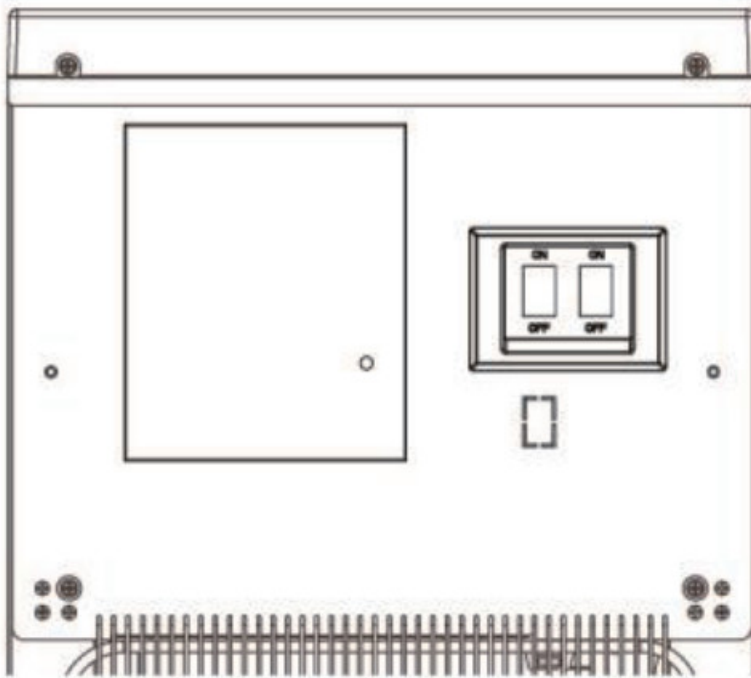


4. Turn off the heating switch and allow the citric acid scale remover to cool down for 20 minutes.

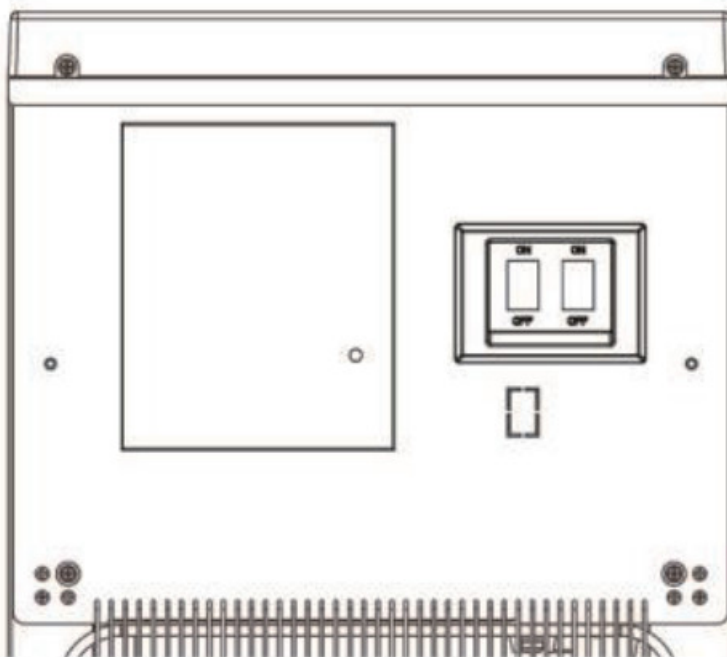

5. Using a container, drain the remaining cleaning solution from the internal water tanks from the drain valve by

removing the drain cap and removing the drain plug. Discard the cleaning solution. Reinstall the drain plug and drain cap on the water cooler. Flush the system using clean water using the same procedure outlined in steps 1 through 4above. When the rinse water stops flowing replace the drain plug and drain cap and tighten.The cleaning process is now complete.

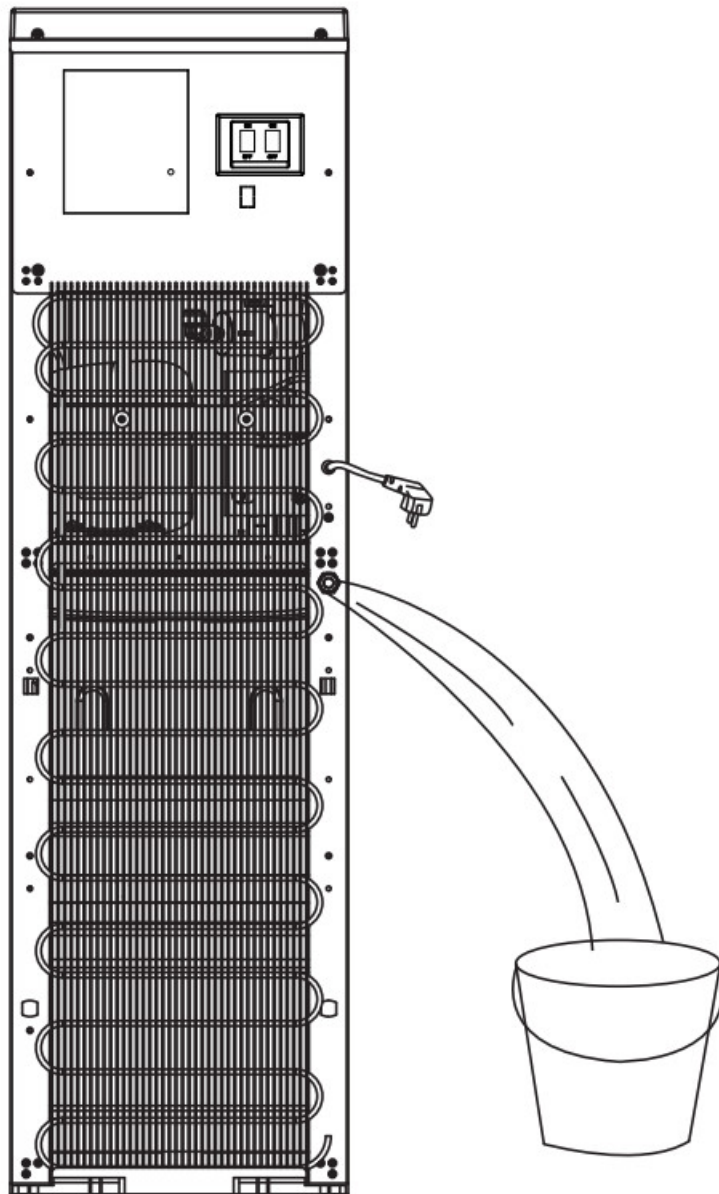

TROUBLESHOOTING

Please check the following before having the machine repaired.

PROBLEM	POSSIBLE CAUSES	SOLUTIONS
No hot or cold water	1. Over consumption of hot or cold water in a short time. 2. No power supply.	1. Just wait a moment, and then hot or cold water is available again. 2. Connect the plug to the socket, turn on the heating or cooling switch.
No water running out from taps	1. Empty bottle. 2. Inlet of bottle supporter blocked by bottle seal.	1. Replace it with another bottle. 2. Clean out wasted paper & bottle seal, install bottle again.
Noisy operation	Did not set up the water cooler on the even ground	Place the water cooler on the even and solid ground or surface.


WARRANTY AND SERVICE

This product is covered with Euhomy product and labor warranty for 12 months from the date of its original purchase.


If any problems occur, please contact the Euhomy Customer Care Centre via the contact information listed in this User Guide.

We can only provide after-sales service for products that are sold by Euhomy or Euhomy authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.




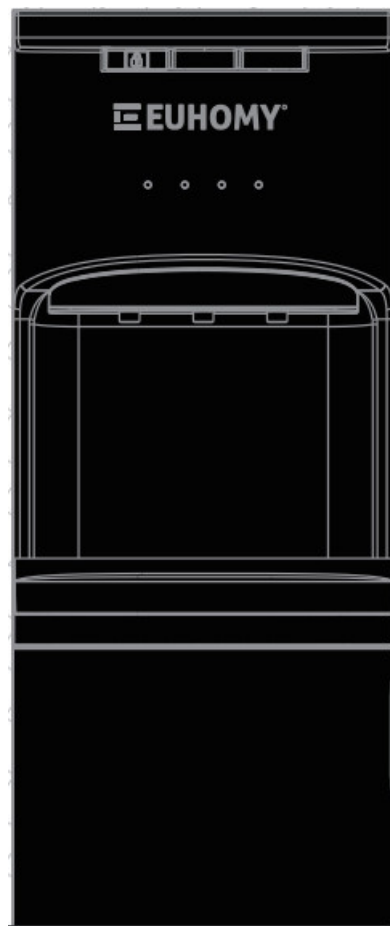

**WATER
DISPENSER
USER MANUAL**

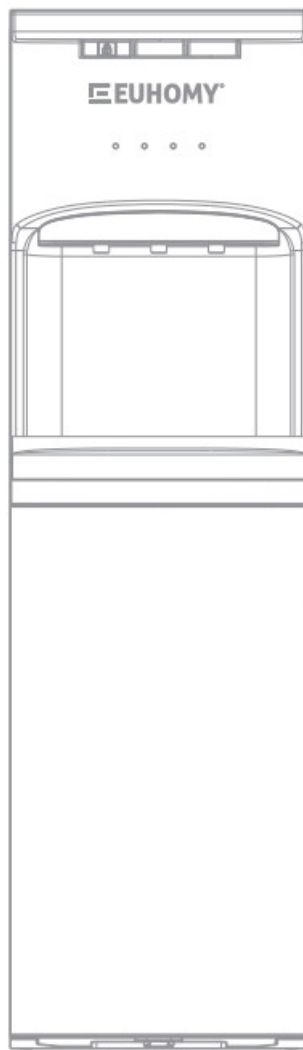

Documents / Resources

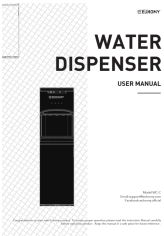	<p>EUHOMY WC-C Bottom Loading Water Cooler Dispenser [pdf] User Manual</p> <p>WC-C, Bottom Loading Water Cooler Dispenser, WC-C Bottom Loading Water Cooler Dispense r</p>
---	--

References

- [Compact Ice Makers, Mini fridge and Freezers | Free Shipping](#)
- [Compact Ice Makers, Mini fridge and Freezers | Free Shipping](#)