



HGLRC Dual Gyro Flight Controller User Manual

[Home](#) » [HGLRC](#) » HGLRC Dual Gyro Flight Controller User Manual



Contents [[hide](#)]

1 HGLRC Dual Gyro Flight Controller User Manual

- 2 1. Product Specifications
- 3 2. Interface Description
- 4 3. Check the flight control drive
- 5 4. Calibration accelerometer
- 6 5. URAT serial port use
- 7 6. Select aircraft model
- 8 7. Choose ESC/Motor protocol
- 9 8. Voltage and current parameters setting
- 10 9. Setting up the receiver
- 11 10.VTX uses OSD smart audio
- 12 11.GPS parameters setting
- 13 12. Check receiver signal
- 14 13. Select flight mode startup mode
- 15 14. OSD settings
- 16 15. LED settings
- 17 16. Switching gyro
- 18 17. Troubleshooting
- 19 Product daily problems
- 20 Documents / Resources
- 21 Related Posts

HGLRC Dual Gyro Flight Controller User Manual




Package Included

- HGLRC FD765 STACK*1
- Accessory Package*1

1. Product Specifications

Product parameters	
Model	HGLRC FD765 STACK
Usage	for 180mm-1000mm Frame Kit
Input Voltage	3-6S Lipo
Flight Controller	Forward F7 Dual Gyro Flight Controller
ESC	FD65A L431 4in1 ESC
Support Neceiver	SBUS .PPM .DSMX
Product Size	46*45*25mm 30.5mm mounting holes(M3)
Weight	41.7g (Including Receiver)

2. Interface Description

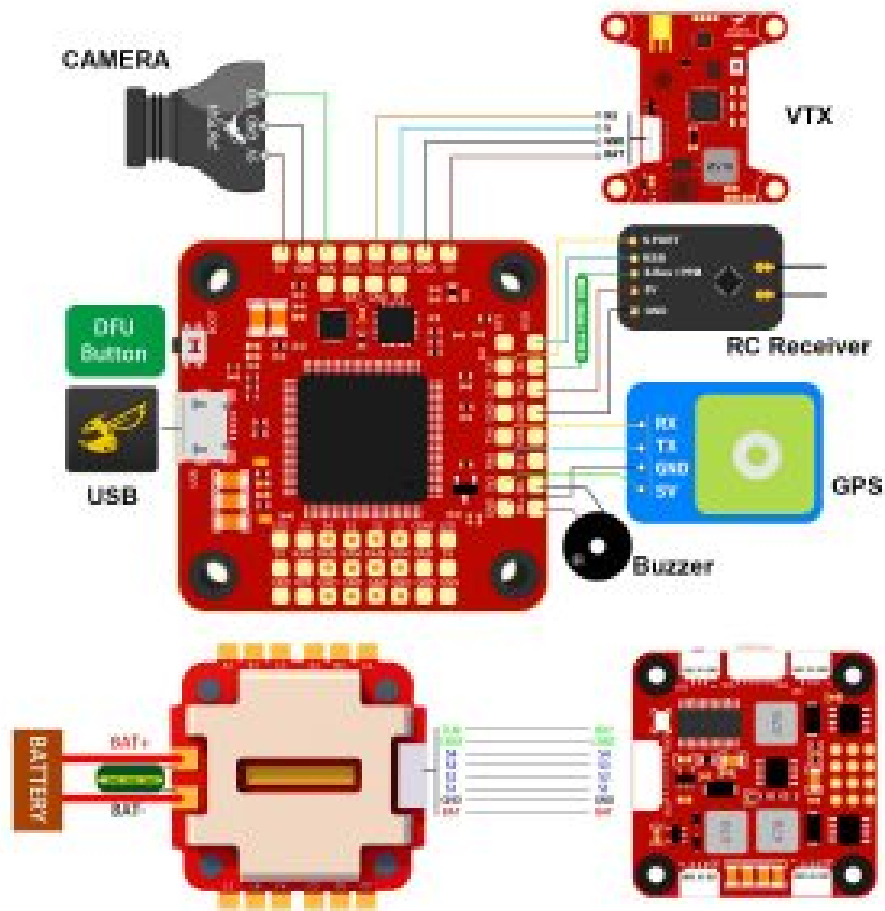

3. Check the flight control drive

1. Long Press BOOT buttons.connect USB.The system automatically install the driver




2. Driver cannot be installed, please download Impulse RC_Driver_Fixer




3. Double-click on the run(Plug in the flight controller to automatically install the driver)




3. Double-click on the run(Plug in the flight controller to automatically install the driver)

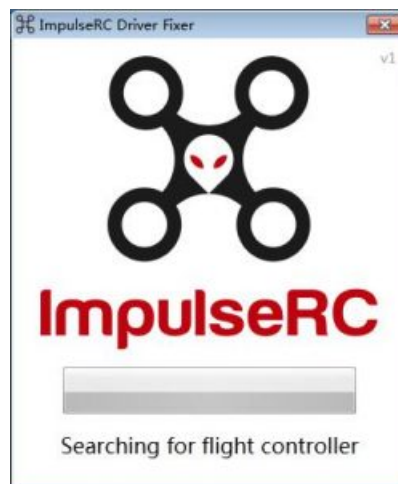

4. open betafight configurator  enter DFU mode It is recommended to use the latest Betaflight version



5. Click **Firmware Flasher** Select firmware version Dual 8K is recommended. Betaflight 4.0 firmware does not support 32K

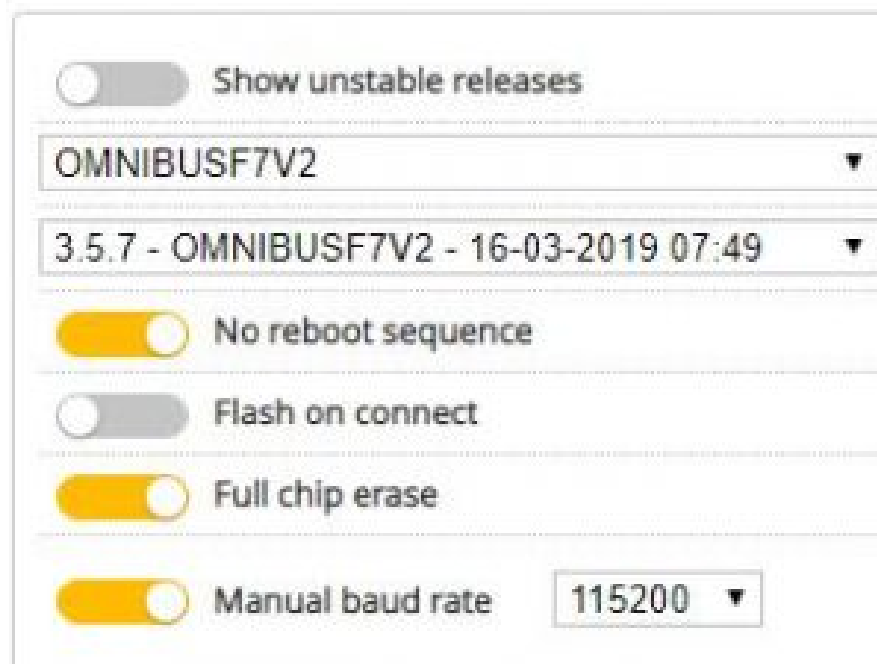

6. Click **Load Firmware (Online)** Load firmware. **Flash Firmware** Waiting for completion **Erasing...** It will be prompted upon completion **Programming SUCCESSFUL**

7. open betaflight configurator **Betaflight** . Controller plugged into the computer. Betaflight Automatically assigned port. click “Connect” Enter setup interface (Different computer COM)



4. Calibration accelerometer

1. Put the aircraft horizontal and click “Reset Z axis” Click again **Calibrate Accelerometer**





5. URAT serial port use

URAT1 uses receiver telemetry
 URAT2 uses the receiver
 URAT3 uses VTX image transmission
 URAT6 uses GPS
 URAT7 uses ESC telemetry


6. Select aircraft model

1. Click  Configuration Select model

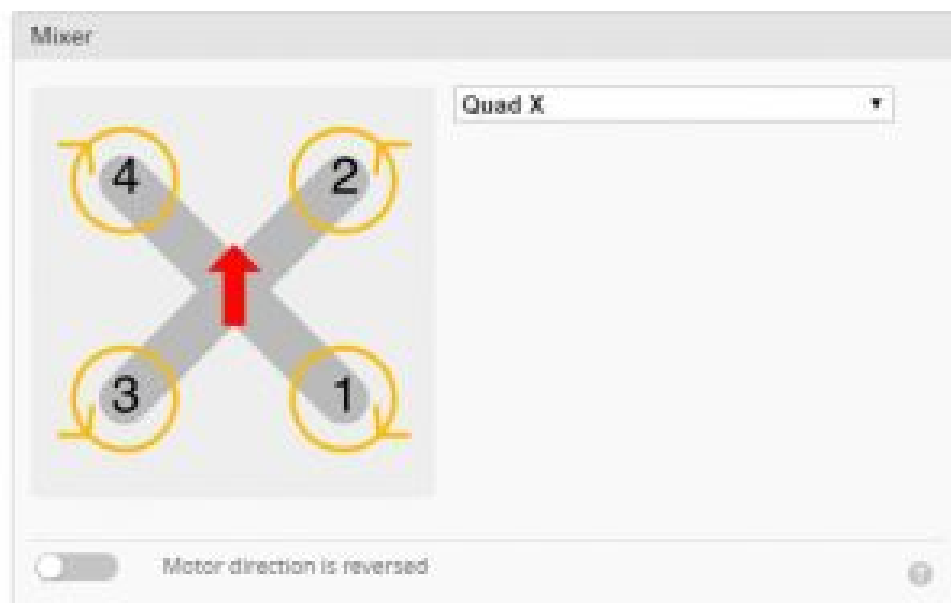

2. Click  Motors Click "I understand the risks" Push Master to check motor steering "Master" Steering can be changed at BLHeliSuite



1. Click  Power & Battery Setting parameters

Battery

Onboard ADC

Voltage Meter Source

Onboard ADC

Current Meter Source

3.3

Minimum Cell Voltage

4.3

Maximum Cell Voltage

3.5

Warning Cell Voltage

0

Capacity (mAh)

Voltage Meter

Battery

0 V

110

Scale

10

Divider Value

1

Multiplier Value

Amperage Meter

Battery

0.00 A

179


Scale [1/10th mV/A]

0

Offset [mA]

9. Setting up the receiver

1. Receiver connection diagram

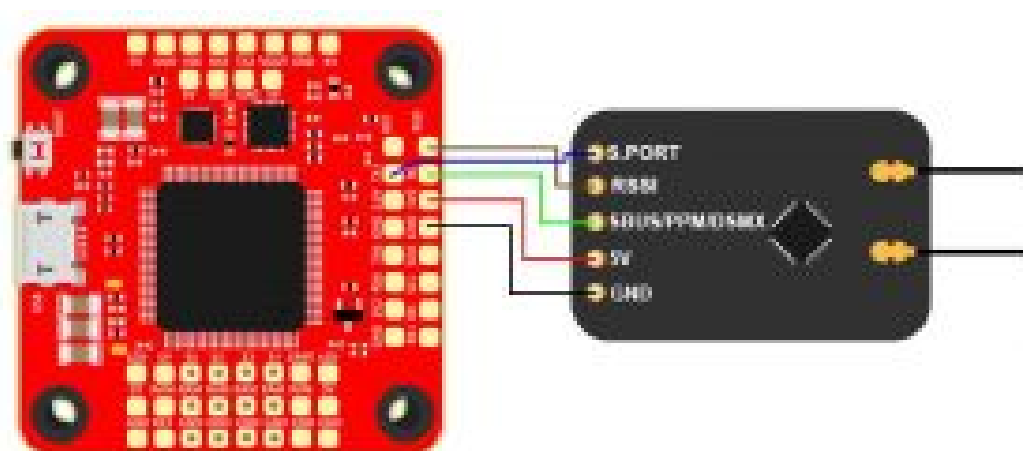

2. Click  Ports .have found“UART2”Open the receiver serial port

Receiver	Configuration/Port	Serial Rx	Steering Output	Serial Input	Steering Input	
USER01	115200		Disabled	AUTO	Disabled	AUTO
USER1	115200		SmartPort	AUTO	Disabled	AUTO
USER2	115200		Disabled	AUTO	Disabled	AUTO
USER3	115200		Disabled	AUTO	Disabled	AUTO
USER4	115200		Disabled	AUTO	GPS	MODE
USER5	115200		Disabled	AUTO	ESC	AUTO

3. Set the SBUS receiver

Receiver

Serial-based receiver (SPEKSAT, S) Receiver Mode

Note: Remember to configure a Serial Port (via Ports tab) and choose a Serial Receiver Provider when using RX_SERIAL feature.

SBUS Serial Receiver Provider

4. Set the PPM receiver

Receiver

PPM RX input Receiver Mode

5. Set the DSMX receiver

Receiver

Serial-based receiver (SPEKSAT, S) Receiver Mode


Note: Remember to configure a Serial Port (via Ports tab) and choose a Serial Receiver Provider when using RX_SERIAL feature.

SPEKTRUM2048 Serial Receiver Provider

6. Turn on the receiver telemetry serial port Function on


SOFTSERIAL Enable CPU based serial ports

Device	Configuration	Serial Rx	Telemetry Output	Serial Tx	Protocol
USB VCP	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO
UART1	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO
UART2	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO
UART3	 115200		Disabled • AUTO	Disabled • AUTO	VTX (RC Tx) • AUTO
UART4	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO
UART5	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO
UART6	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO
SOFTWARE	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO



10.VTX uses OSD smart audio

1.VTX connection diagram

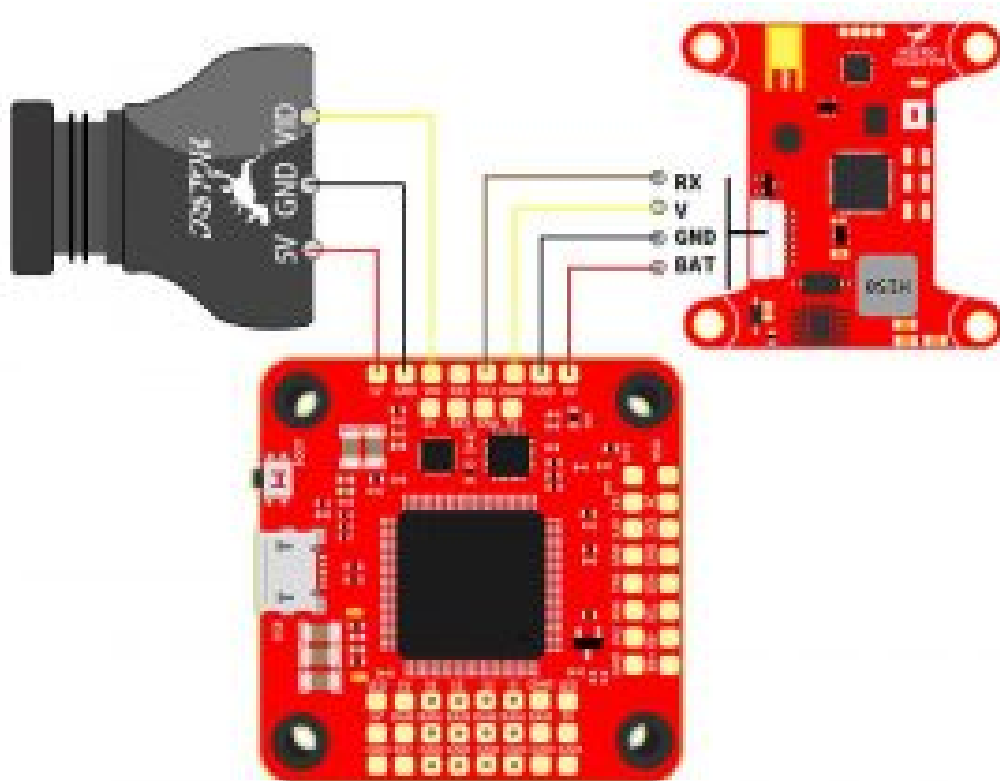


2. VTX serial port opens. The protocol is selected according to its own VTX protocol.


Device	Configuration	Serial Rx	Telemetry Output	Serial Tx	Protocol
USB VCP	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO
UART1	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO
UART2	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO
UART3	 115200		Disabled • AUTO	Disabled • AUTO	VTX (RC Tx) • AUTO
UART4	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO
UART5	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO
UART6	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO
SOFTWARE	 115200		Disabled • AUTO	Disabled • AUTO	Disabled • AUTO

3. Use OSD to adjust VTX


which displays information like battery voltage and mAh consumed while you fly. In addition, the Betaflight OSD can be used to configure the quadcopter, making in-field adjustments and tuning more convenient.

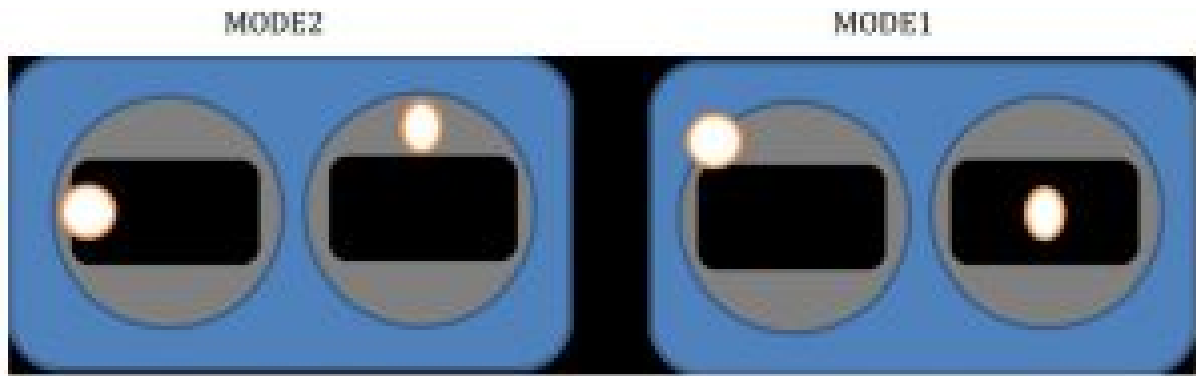

The graphics above show the stick command to bring up the OSD menu. The stick command is: throttle centered, yaw left, pitch forward. The exact stick command therefore depends on which mode your transmitter sticks are in. In the OSD menu, use pitch up/down to move the cursor between menu items. When a menu option has a > symbol to the right of it, this indicates that it contains a sub-menu. Roll-right will enter the sub-menu. For example, in the screen to the right, moving the cursor to “Features” and then moving the roll stick to the right will enter the “Features” sub-menu.

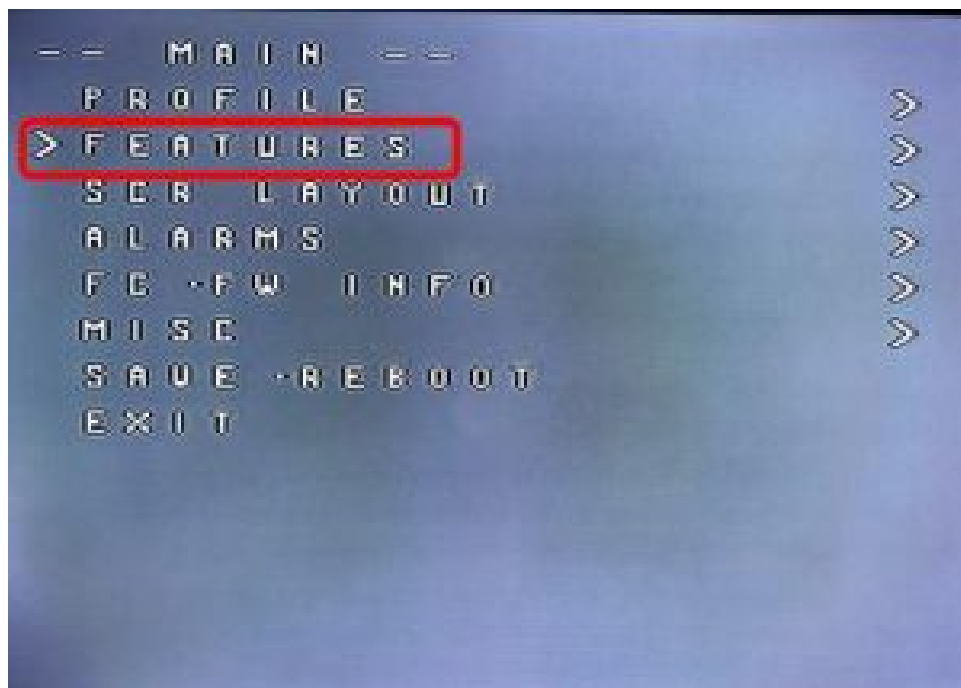


If you are using a video transmitter that supports remote configuration, enter the “Features” menu to configure the vTX. From there, enter either “VTX SA” if you are using SmartAudio (TBS Unify) or “VTX TR” if you are using IRC Tramp Telemetry.

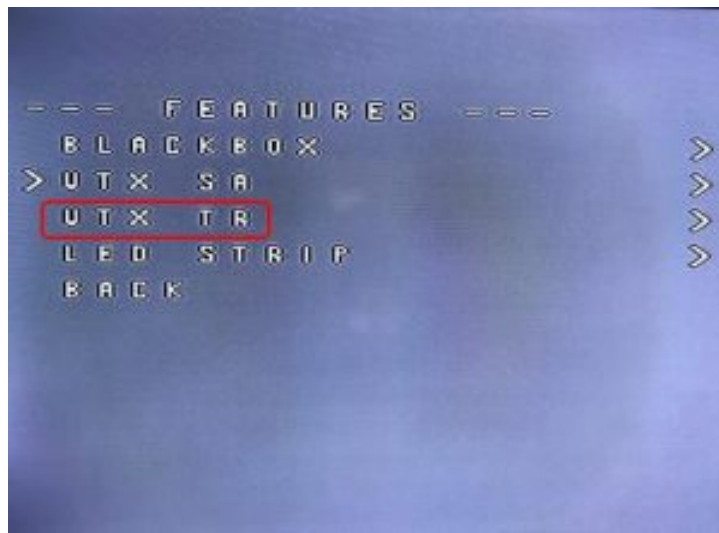

To adjust PIDs, rates, and other tuning-related parameters, enter the “Profile” sub-menu. In the “Scr Layout” sub-menu, you can move the OSD elements (like battery voltage, mAh, and so forth) around on the screen.

The “Alarms” sub-menu lets you control when the OSD will try to alert you that battery voltage is too low or mAh consumed is too high.


When a parameter can be modified, the parameter’s current value will be shown on the right-hand side of the screen. In this case, roll left/right will adjust the parameter up and down.

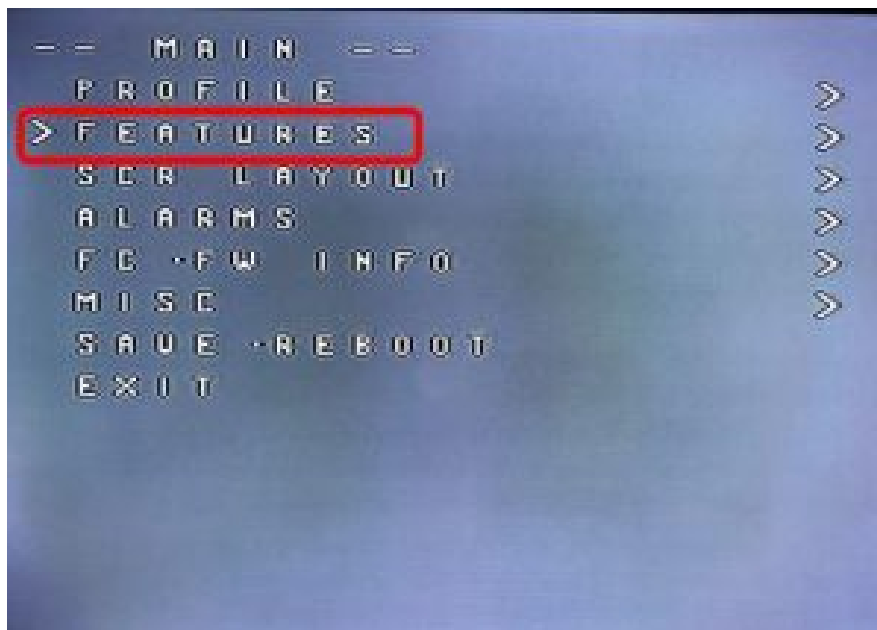

The screen to the right shows the current vTX settings. From here, you can change the frequency band, channel, and power level of the video transmitter. After making the changes, move the cursor to “Set” and press roll-right to confirm the settings.

11.GPS parameters setting

1. GPS connection diagram

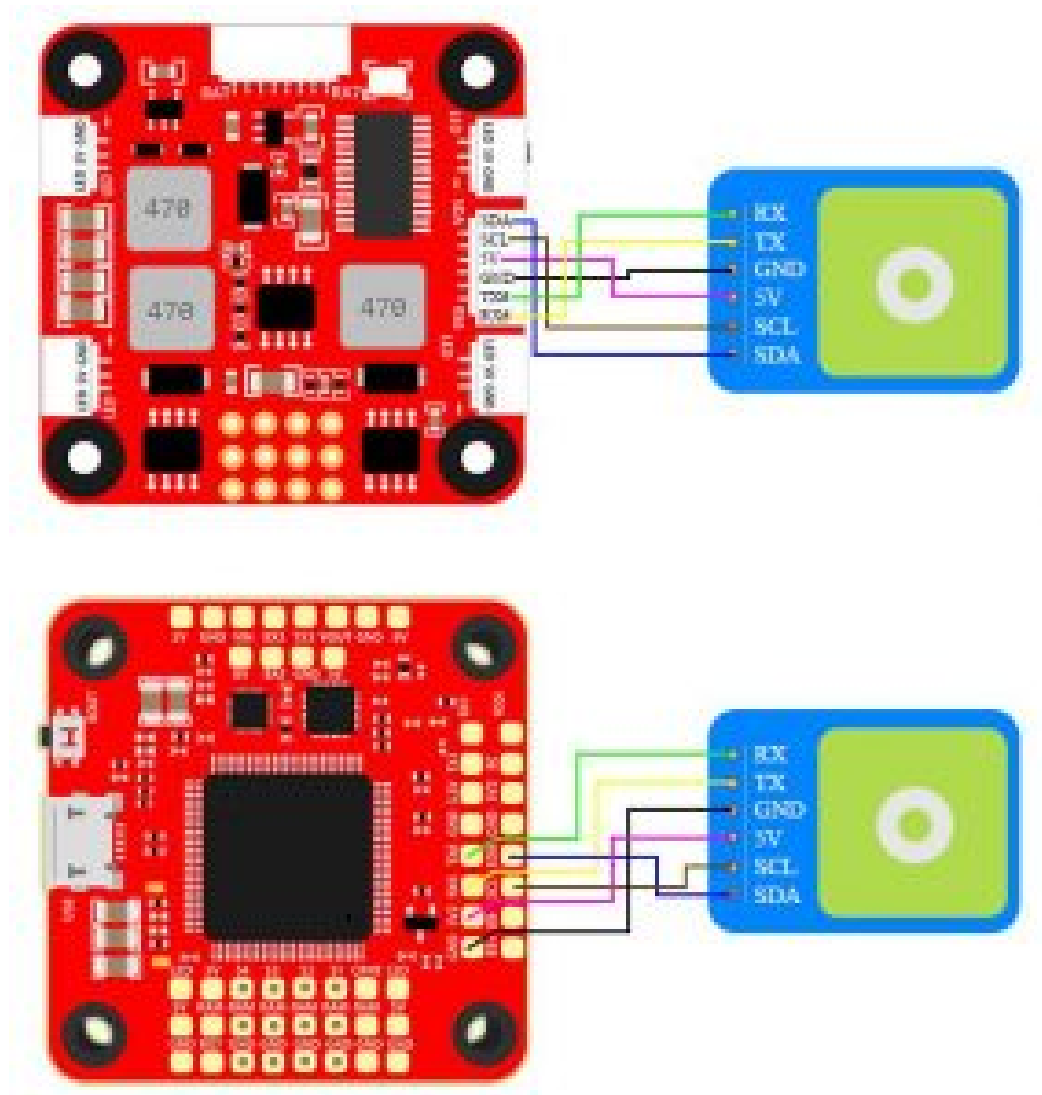

2. Open the GPS serial port

Module	Configuration	Serial ID	Primary-Device	Serial Speed	High-Speed
UART0	<input checked="" type="checkbox"/> 115200	<input type="checkbox"/>	Disabled	Disabled	Disabled
UART1	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled	Disabled	Disabled
UART2	<input type="checkbox"/> 115200	<input checked="" type="checkbox"/>	Disabled	Disabled	Disabled
UART3	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled	Disabled	9600bps
UART4	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled	GPS	Disabled
UART5	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled	I2C	Disabled

3. When using the GPS function, remember to configure the serial port (via the Ports tab).

GPS

☒ GPS GPS for navigation and telemetry

Note: Remember to configure a Serial Port (via Ports tab) when using GPS feature.

UBLOX Protocol

☐ Auto Baud


☒ Auto Config

Auto-detect Ground Assistance Type

0.00 Magnetometer Declination [deg]


12. Check receiver signal

1. Click **Receiver** Check the remote control output signal

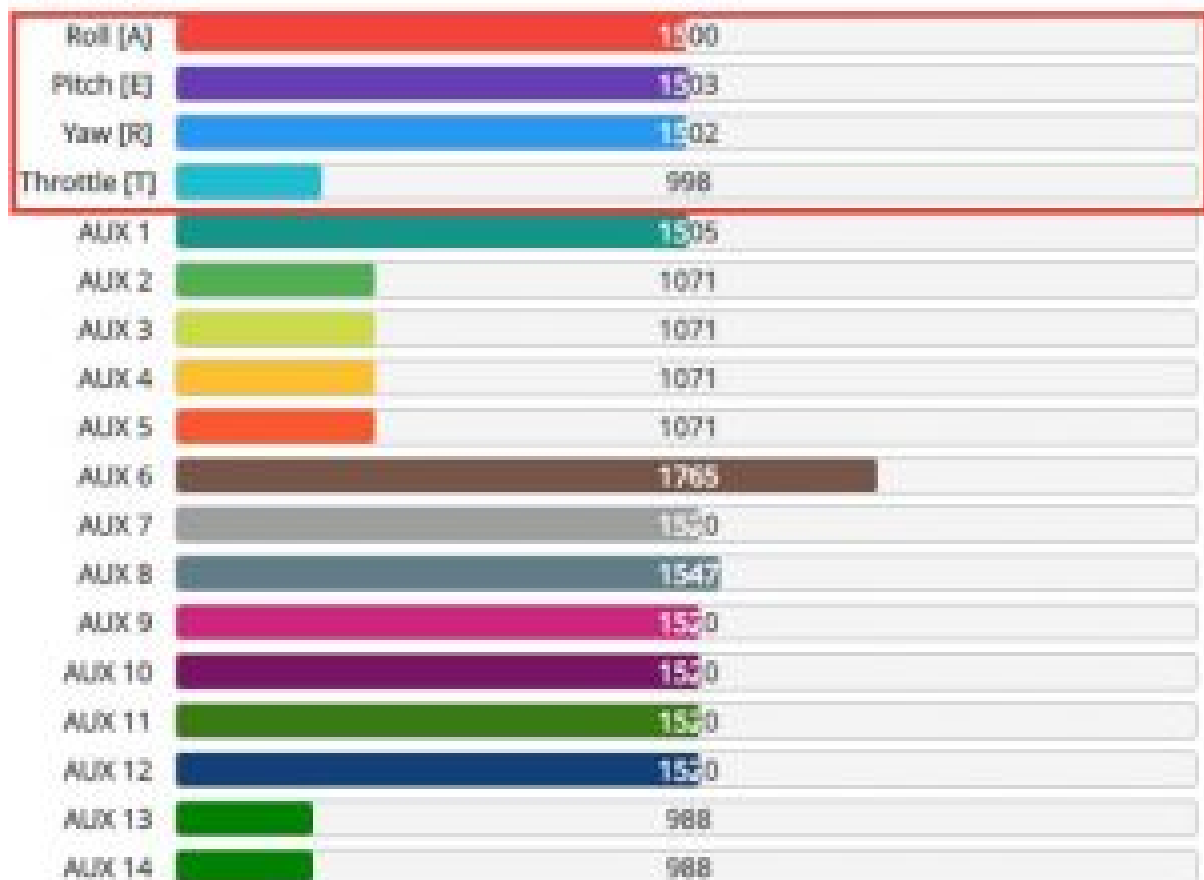

13. Select flight mode startup mode

1. Click **Modes** set up the function of remote control switch across the channel (below are for reference only)

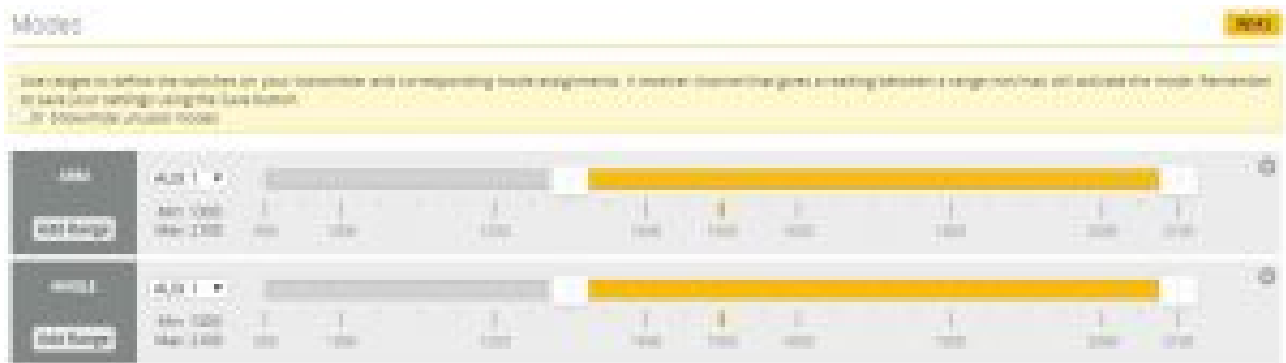

14. OSD settings

1. Click **OSD** the OSD Settings, according to the need to choose, drag the OSD schematic diagram of the parameters can be adjusted.




15. LED settings


1. Click **Configuration** Turn on LED support



2. Click **LED Strip** Click **Wire Ordering Mode** set according to need

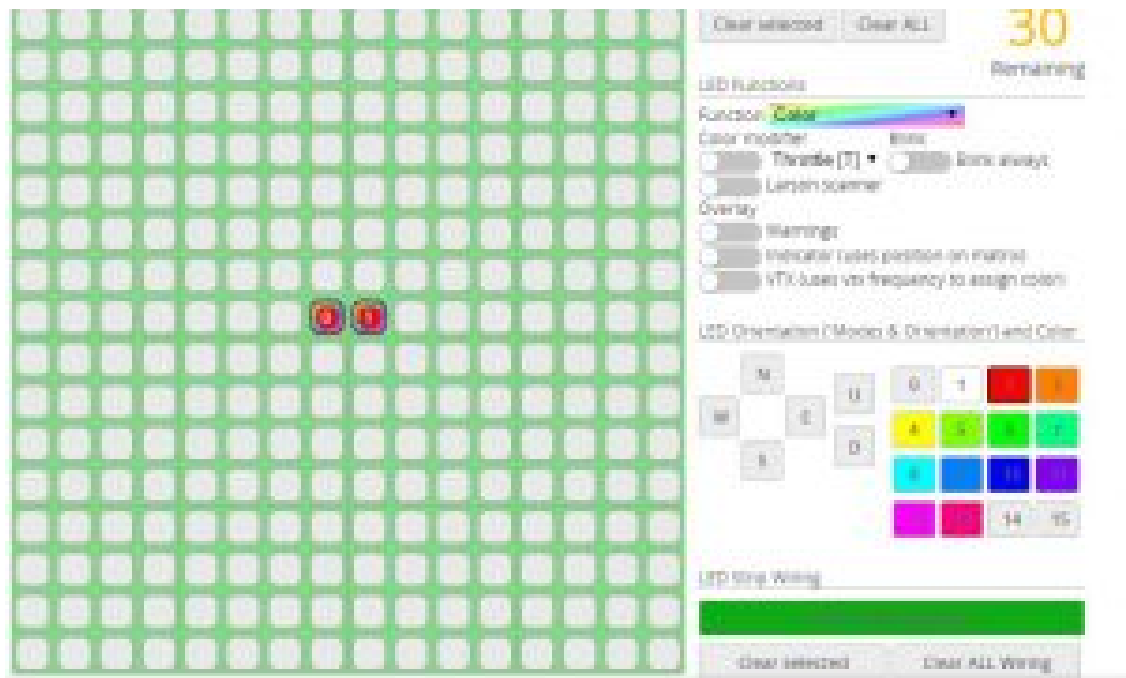

16. Switching gyro

1. After connecting to the Betaflight ground station, open the  CLI page and enter "get gyro_to_use" and press Enter to view the currently used gyroscope. First is MPU6000. SECOND is ICM20608 Set the MPU6000 input: gyro_to_use = FIRST Set the ICM20608 input: set gyro_to_use = SECOND

17. Troubleshooting

Warning:

Please read the cautions as follows, otherwise stability of your flight controller cannot be ensured, your flight controller will even get damaged.

- Keep focus on the polarity. Check carefully before power supply.
- Cut off the power when you connect, plug and pull anything.
- The refresh rate of PID and Gyroscope is up to 32K/16K.

after sales question:

1. After receiving the goods, it is found that the product can not be used normally. If the return to the factory is a quality problem, the repair service will be provided free of charge.
2. If the product is damaged due to improper operation, the repair service may be provided under the condition that the inspection can be repaired.
3. For domestic customers, please contact the after-sales service personnel. For overseas customers, please contact the official website for after-sales service.

Product daily problems

1. OSD garbled:
If you find garbled characters, please open Betaflight, click “OSD” .and click “Font Manager” clicks on “Upload Font” to update
2. When plugged in the battery, the aircraft does not pass the self-test without “BBB” sound. There is only one sound. Please check if the ESC agreement is correct.
3. The spin of the aircraft keeps spinning
 1. Please check if the propeller is correct
 2. Please check if the motor direction is correct

www.hglrc.com

Read More About This Manual & Download PDF:

Documents / Resources

	<p>HGLRC Dual Gyro Flight Controller [pdf] User Manual Dual Gyro Flight Controller FD765 STACK</p>
--	--