



---

[Home](#) » [ICERIVER](#) » **ICERIVER KAS KS 3 ASIC Mining Machine User Manual** 

## Contents [ [hide](#) ]

- 1 ICERIVER KAS KS 3 ASIC Mining Machine
- 2 Specifications
- 3 Product Overview
- 4 Indicator Description
- 5 Function
- 6 Precautions
- 7 Check before start-up
- 8 Boot
- 9 Access Machine
- 10 Access Machine
- 11 Language Switch
- 12 Change Password
- 13 Configuring mining pools and wallets
- 14 Remove
- 15 View Hashrate Chart
- 16 Network Settings
- 17 Firmware Upgrade
- 18 Factory Reset
- 19 Shutdown/Reboot
- 20 Shutdown
- 21 Reboot
- 22 Common Faults and Solutions
- 23 Faults Solutions
- 24 Network
- 25 High Temperature
- 26 FAQs
- 27 Documents / Resources
  - 27.1 References







## Specifications

- Model: KS3&3L&3M
- Power Input: 200V-250V, 50-60Hz
- Interface: Ethernet Port, TF card slot, Reset Button, Power Button, Power Supply, IP Button

## Product Overview

### Appearance

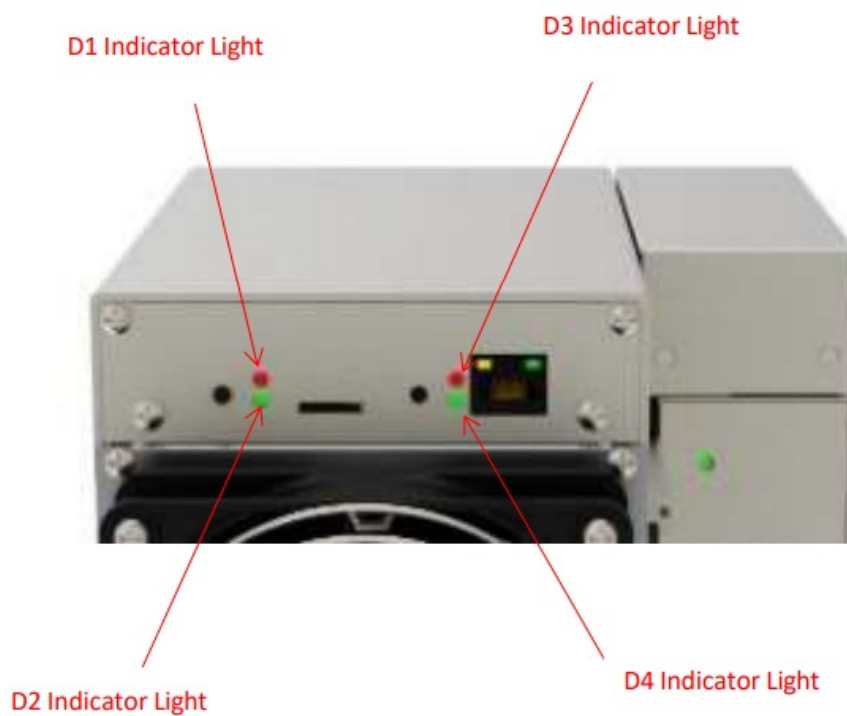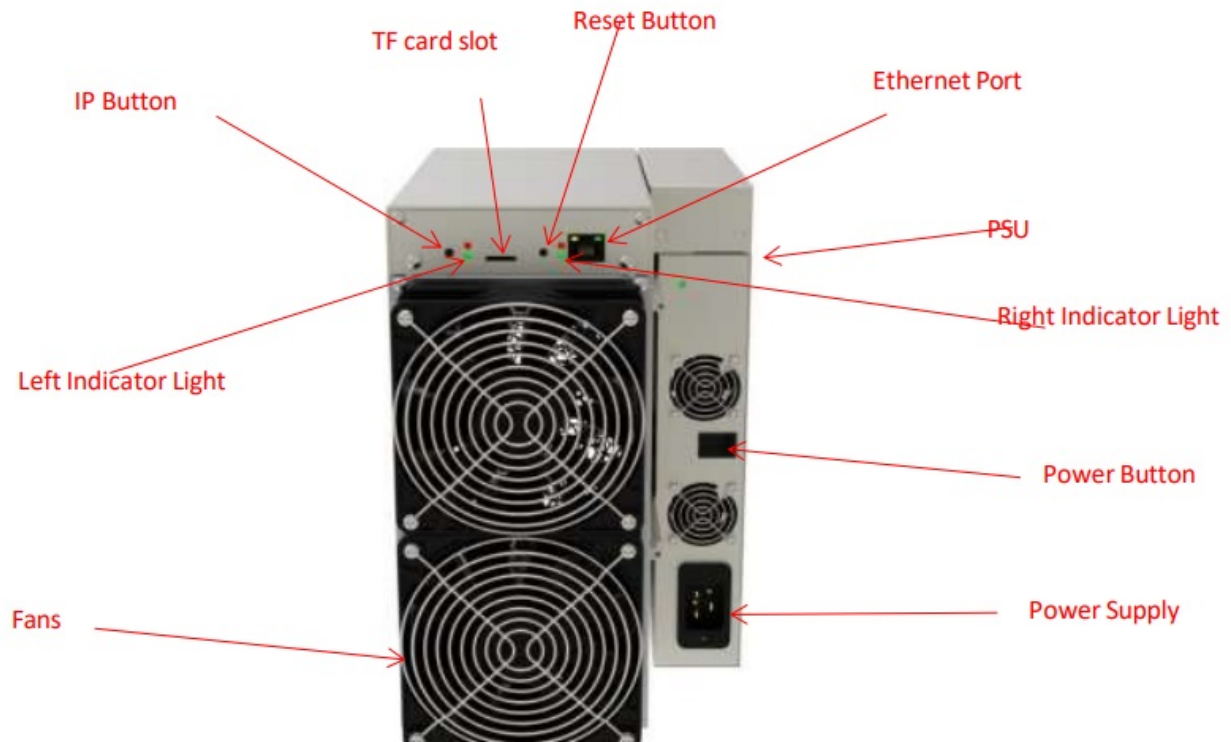

## Indicator Description

Machine Status	Indicator light status
Running Normally	D2 light blinks, D1, D3, D4 lights are off.
Fan Abnormality	D1, D3 lights blink, D2, D4lights are off.
Network Issues	D1, D2 lights blink, D3, D4 lights are off.
High-temperature Alarm	D2, D3 lights blink, D1, D4 lights are off.

## Interface specification

Power interface	AC power input: 200V--250V      50-60HZ
-----------------	--

## Function

## Start up

## Precautions

- Check whether there is physical interference causing damage to the machine, and beware of electric shock.
- Please check if the cable connection is firm before powering on, and pay attention to the safety of electricity.
- Keep the hash board and other parts away from water or exposed to moisture.
- Please make sure the ambient temperature is between 0-40°C.
- Please avoid covering the surface of the machine due to the high temperature of the machine surface during operation.
- Do not place flammable and explosive substances around the machine during operation.
- Please make sure the humidity of the environment is below 90%.
- Please keep the environment clean to prevent dust, hair, willow, and other foreign objects from entering the machine and causing damage to the machine.
- Use a stable voltage.
- The machine, hash board, or board parts being crushed or burned due to improper environment are not covered by the warranty.
- Customers should not disassemble the machine by themselves without permission from the ICERIVER after-sales team.

## Check before start-up

Preliminary inspection of the miner before operation:

- Check the appearance of the package for deformation.
- Check the appearance of the machine for deformation and breakage. Also, check the fan and cable.

- Check if there is any strange sound in the machine and observe if the heat sink is off.

**Note:** Please do not disassemble the machine by yourself. The machine will not be covered by the warranty if the user disassembles the machine without permission.


## Boot

- Please connect the miner to the Ethernet first, and then plug in the power cord. Turn on the machine, and during the boot process, the red and green indicator lights on both sides will remain steady. Wait until the D2 indicator light blinks (if it doesn't blink for more than 10 minutes, please check the network), and the D1, D3, and D4 indicator lights all go off. This indicates that the miner has started successfully.

## Access Machine

### Obtain Machine IP

1. Obtain the IP address of the machine by downloading and unzipping the batch processing tool provided by our company (please refer to the official website to download:  
<https://iceriver.eu/pages/product-manuals-tools>
2. Click the [Detect IP] button and long-press the machine's IP button for 1-2 seconds after the pop-up window to get the machine IP.

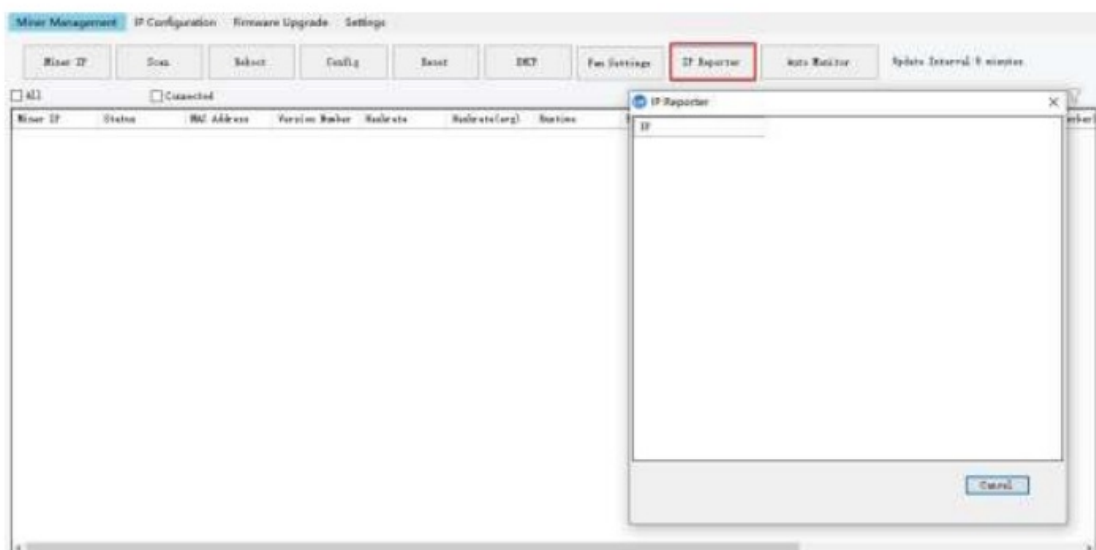

## Access Machine

1. Open your web browser (Chrome browser is recommended) and enter the machine's IP address in the address bar. You will see the following interface.
2. Use the default username “admin” and the default login password “12345678” to log in to the machine.



## Language Switch

1. Click [Language] in the upper right corner of the page to switch between Chinese and English.



## Change Password

To protect your property security, please change the miner password after the first time you turn on the machine.

1. Click [User Settings], enter the current password and the new password as shown below, and click the [Save] button.




2. After the password change is completed, you need to log in again with the new password.

## Configuring mining pools and wallets

### Add

1. Go to the [Mining Setting] page and find [Pool Configuration].

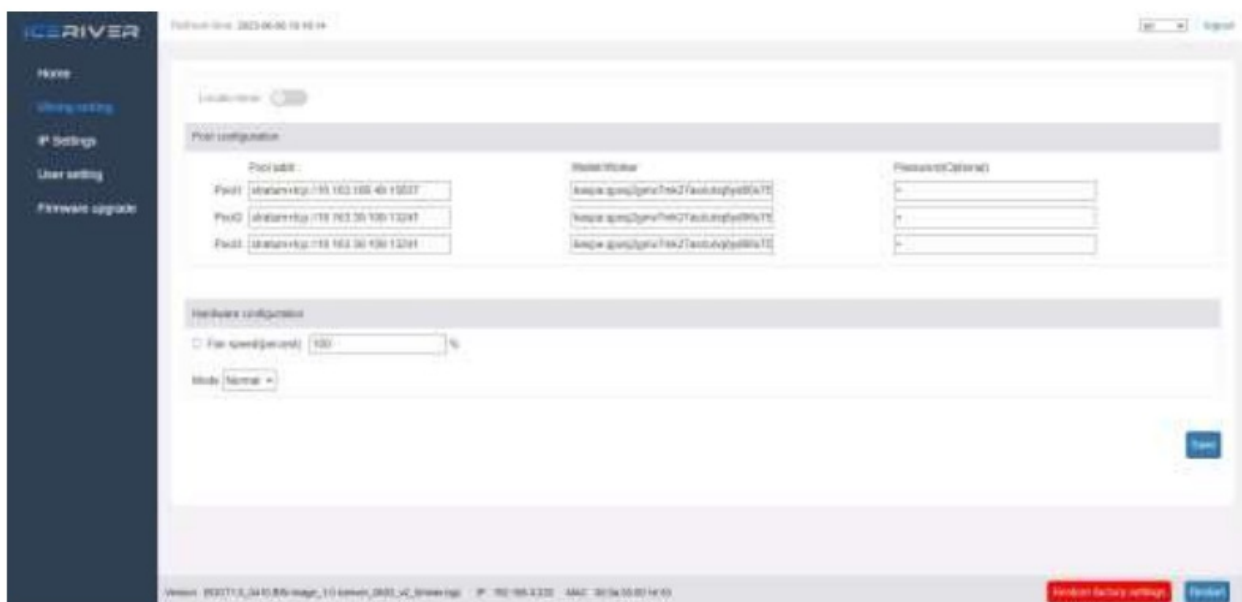

You can configure three mining pools with the following reference example:

Pool1: [stratum+tcp://kas.eu1.whalepool.com:15121](http://stratum+tcp://kas.eu1.whalepool.com:15121)


### Wallet/Worker

kaspa:ndm9tlsgdmrcha4pg83lwwrka0gjya38teh0g5qc4prapavmh7rkyxuzd6w2w.worker

- Wallet address



- Worker name
2. Click Save, and a configuration success window will pop up.
  3. After successful configuration, click [Reboot] and wait for the machine to reboot (do not power off during the reboot process).
  4. The information on the home page shows that the pool is "connected", which means the pool is successfully connected.

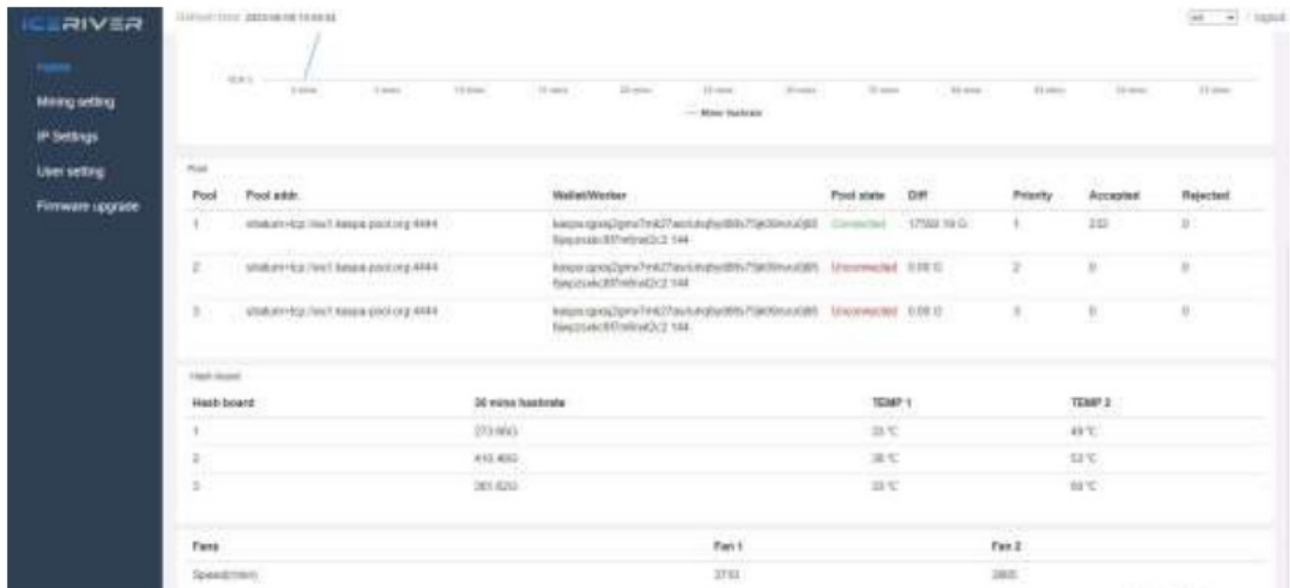

- The default pool configuration is the configuration of our company. When testing, please configure your own mining wallet address before you start mining. Please do not use the default configuration.
- If pool 1 is not connected, the machine will automatically connect to pool 2. If pool 2 is not connected, the machine will automatically connect to pool 3.
- If the configuration fails, you can configure it again and restart it.

The following mining pools are known to be compatible, and will be continuously updated: KS0,1,2,3L,3M compatible mining pools:

Whalepool	PPLNS	stratum+tcp://kas.eu1.whalepool.com:15121
Humpool	PPLNS	stratum+tcp://kas.eu1.humpool.com:18083
Kaspa-pool	PPLNS	stratum+tcp://eu1.kaspa-pool.org:4444
	SOLO	stratum+tcp://eu1.kaspa-pool.org:4441
Woolypooly	PPLNS	stratum+tcp://pool.eu.woolypooly.com:3112
	SOLO	stratum+tcp://pool.eu.woolypooly.com:3113
Herominers	PPLNS	stratum+tcp://ru.kaspa.herominers.com:1208
	SOLO	stratum+tcp://ru.kaspa.herominers.com:1208
K1pool	PPLNS	stratum+tcp://eu.kaspa.k1pool.com:23112
	SOLO	stratum+tcp://eu.kaspasolo.k1pool.com:23114
Accpool	PPLNS	stratum+tcp://acc-pool.pw:16061
F2pool	PPLNS	stratum+tcp://kas-euro-f2pool.com:1400
Kryptex	PPLNS	stratum+tcp://kas.kryptex.network:7777/6666
	PPLNS	stratum+tcp://stratum.tw-pool.com:10005
tw-pool.com	PPLNS	stratum+tcp://stratum2.tw-pool.com:10005
2miners	PPLNS	stratum+tcp://kas.2miners.com:2121
NiceHash		stratum+tcp://kheavyhash.auto.nicehash.com:9200

KS3 compatible mining pools:

Whalepool	PPLNS	stratum+tcp://kas.eu1.whalepool.com:15121
Humpool	PPLNS	stratum+tcp://kas.eu1.humpool.com:18083
Kaspa-pool	PPLNS	stratum+tcp://eu1.kaspa-pool.org:4444
F2pool	PPLNS	stratum+tcp://kas-euro.f2pool.com:1400
tw-pool.com	PPLNS	stratum+tcp://stratum.tw-pool.com:10005
	PPLNS	stratum+tcp://stratum2.tw-pool.com:10005


- The above mining pool information is the mining pool address we used for testing purposes. Before connecting to the mining pool, please log in to the respective mining pool's official website and check if the mining pool address has changed.

## Remove

1. Clear the information in [Pool Configuration] and click [Save] to remove the mining pool.

## Adjusting fan speed

1. Find [Hardware Configuration] in [Mining Setting].
2. Check [Fan Speed].
3. Select the operating mode or manually adjust the fan speed (Note: After manually adjusting the fan speed, the automatic speed control function will be disabled; be cautious of high temperatures). After making the changes, click on "Save."

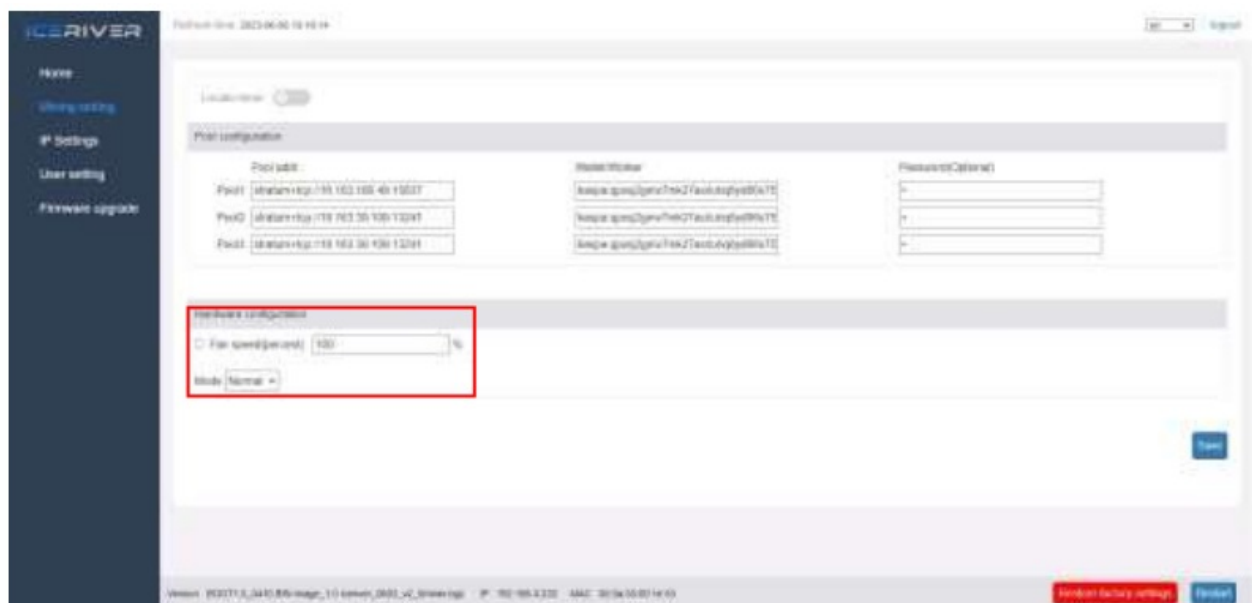

- After powering on, the fan will operate at a low speed. Only after the self-check process, the fan starts running at full speed. The default fan speed is set to maximum. If the self-check detects any fan abnormalities, the mining process will not begin.

- The machine will stop mining in sleep mode.

## View Hashrate Chart

Click [Home] to view the Hashrate Chart.

- After 5 minutes of connecting to the pool, you can view the miner's hashrate and the hashrate chart. The chart is updated every 5 minutes.
- Under the Hash board, you can view the machine temperature and fan speed, which can monitor the working status of the machine in real time.



## Network Settings

The factory default is DHCP mode; users can set the IP mode according to their needs.

Set static IP:

1. Click [IP Settings], select Static in [Protocol], fill in the IP information according to the user, and then click the [Save] button.
2. After saving the configuration, click [Reboot] and wait for the machine to reboot (do not power off during the reboot).



## Firmware Upgrade

When the official website releases a new upgrade package, download it and upgrade it via the Web.

1. Click [Firmware Upgrade], select the official upgrade package, and click [Upgrade].
2. Wait for the pop-up window to show success and then click [Reboot] and wait for the machine to reboot (do not power off during the reboot process).
3. After reboot, the firmware upgrade is successful.



## Factory Reset

When the machine has abnormal conditions, you can restore the factory settings

through the Rest Button on the machine.

1. Press and hold the reset button for 5 seconds until the D3 and D4 lights start flashing simultaneously. After that, wait for the D3 and D4 lights to stop flashing and remain steady, indicating that the machine is in a reboot-ready state (Do not power off the machine during the reboot process).
2. After the machine reboots, reconfigure the mining pool and wallet to resume mining.

## Shutdown/Reboot

### Shutdown

Turn off the machine via the miner power button.

### Reboot

1. Click [Reboot] in the bottom right corner of the home page, then click [OK] to confirm, then reboot the machine.

**Note** Do not power off the machine during the reboot process.



## Common Faults and Solutions

### Faults Solutions

#### Power Supply

- Cannot turn on the machine after connecting the power and turning on the power button:
  1. Check whether the power connector is loose or off, and whether the power cord is inserted tightly.
  2. Verify that the power supply input voltage is within the specified operating voltage range (AC 180V – 285V).

## **Network**

- Network port light does not light up:
  - Check if the network port is plugged in.

## **Fan**

- The fan does not turn on after power is applied:
  1. Check the appearance of the fan and whether the metal mesh is extruded and deformed.
  2. Check if the mining pool is successfully connected.

## **High Temperature**

Machine temperature is too high:

1. Check that the machine is not covered with.
2. Check if the machine is placed in an environment with air convection.

## **Hashrate does not up to the target hashrate**

Hashrate is not up to the target hashrate:

1. Check whether the machine fan is working properly. If the fan speed is abnormal, it will cause the machine temperature to be too high will triggering high-temperature protection.
2. Short-term hashrate fluctuations, please observe the 12-hour average hashrate.

The difference between the Web hashrate and the mining pool hashrate is large:

- Check whether the network connection is normal.

Unable to enter the Web operation page

- The browser displays 404 after entering the miner’s IP:
  - Reboot the machine and re-enter the Web operation page.

Miner power reduces to around 150W-200W


- The miner’s power will drop after the network abnormality. Please check the indicator light blinking condition, as well as the network condition.

FAQS

What should I do if the indicator lights do not show a successful startup?

If the D2 indicator light does not blink within 10 minutes of booting up, please check the network connection.

Documents / Resources

	<p><a href="#">ICERIVER KAS KS 3 ASIC Mining Machine [pdf]</a> User Manual</p> <p>KAS KS 3, KAS KS 3 ASIC Mining Machine, ASIC Mining Machine, Mining Machine</p>
---	---

References

- [User Manual](#)

🔍 ASIC Mining Machine, ICERIVER, KAS KS 3, KAS KS 3 ASIC Mining Machine, Mining Machine

📁 ICERIVER Machine

Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.