



# Inverterk Drives OPT-2-ENCOD-IN OPTIDRIVE Encoder Interface User Guide

[Home](#) » [Inverterk Drives](#) » Inverterk Drives OPT-2-ENCOD-IN OPTIDRIVE Encoder Interface User Guide 

## Contents

- 1 Inverterk Drives OPT-2-ENCOD-IN OPTIDRIVE Encoder Interface
- 2 Product Information: OPTIDRIVE Encoder Interface
- 3 LED Status Indication
- 4 Error Code Definitions
- 5 Compatibility
- 6 Specifications
- 7 Error Code Definitions
- 8 Product Usage Instructions
  - 8.1 Mechanical Installation
  - 8.2 Electrical Installation
  - 8.3 Connection Examples
  - 8.4 Operation and Commissioning
- 9 Compliance
- 10 Option Module Connections
- 11 Operation
  - 11.1 Parameter Settings
- 12 Commissioning
- 13 Warranty
- 14 Documents / Resources
  - 14.1 References



**Inverterk Drives OPT-2-ENCOD-IN OPTIDRIVE Encoder Interface**




## Product Information: OPTIDRIVE Encoder Interface

The OPTIDRIVE Encoder Interface is an option module designed for use with Optidrive P2 and Optidrive Elevator drives. It provides LED status indication for easy monitoring and is compatible with various encoder types.

### LED Status Indication

The encoder module has 2 LEDs – LED A (Green) and LED B (Red).

- LED A (Green): Indicates the status of the encoder operation.
- LED B (Red): Indicates fault codes related to the encoder operation.

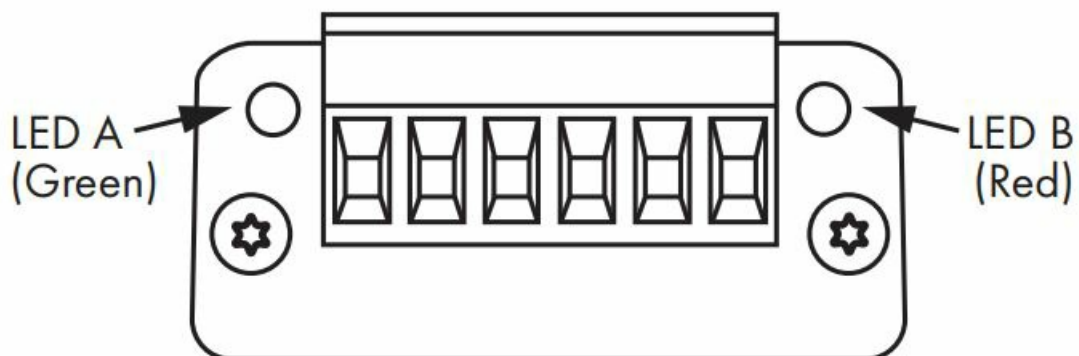

The fault code is indicated on the drive display. Please see Error Code Definitions. For transient faults, the LED will remain illuminated for 50ms to notify a fault on the module.

### Error Code Definitions

The following error codes are related to the encoder operation:

State	Indication	Indication
<i>Enc-01</i>	Communication loss	No communication between the encoder module and the drive. Please check the module is properly fitted into the slot.
<i>SP-Err</i>	Speed feedback error exceeds level set in P6-07	The estimated motor speed differs from the measured motor speed. Check encoder connection, wire shielding, and values set in P6-07.
<i>Enc-03</i>	Encoder PPR motor speed mismatch	The encoder used must have a PPR value of at least 60. Motor nameplate RPM must be entered in P1-10.
<i>Enc-04</i>	Encoder Channel A Fault	Error normally caused by encoder wiring error. Check encoder wiring and commissioning guidelines.
<i>Enc-05</i>	Encoder Channel B Fault	
<i>Enc-06</i>	Encoder Channels A & B Faults	

## Compatibility

The OPTIDRIVE Encoder Interface is compatible with the following product ranges:

- Optidrive P2 (ODP-2-.... Drives)
- Optidrive Elevator (ODL-2-.... Drives)

### Model Code

OPT-2-ENCOD-IN (5 Volt TTL Version)

OPT-2-ENCHT (8 – 30 Volt HTL Version)

### Compatible Encoder Types

TTL Version : 5V TTL – A & B Channel with Compliment

HTL Version 24V HTL – A & B Channel with Compliment

Note: +24V HTL encoder requires external supply voltage

## Specifications

- Power Supply Output: 5V DC @ 200mA Max
- Maximum Input Frequency: 500kHz
- Environmental: 0°C – +50°C
- Terminal Torque: 0.5Nm (4.5 lb-in)

## Error Code Definitions

The OPTIDRIVE Encoder Interface may display error codes related to the encoder operation. The fault code is indicated on the drive display. Please refer to the Error Code Definitions section in the user manual for more information.


## Product Usage Instructions

### Mechanical Installation

Follow these steps for mechanical installation:

1. Insert the Option Module into the Optidrive Option Module Port. Refer to the diagram in the user manual for guidance.


2. Ensure that no undue force is used while inserting the option module into the port.
3. Make sure the option module is fitted securely before powering on the Optidrive.
4. Before tightening connections, remove the terminal block header from the option module. Replace it after wiring is completed.
5. Tighten the connections to the torque setting provided in the Specifications section.

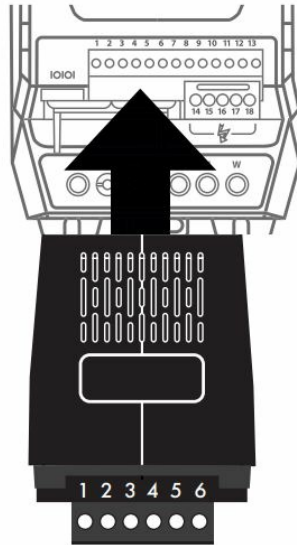

## Electrical Installation


### Follow these steps for electrical installation:

- Use an overall shielded twisted paired cable.
- Connect the shield to Ground (PE) at both ends.
- Do not connect the encoder cable shield to 0V of the drive or encoder module.
- Maintain a minimum distance of 500mm.
- Overall Shielded twisted paired cable to be used
- Shield should be connected to Ground (PE) both Ends

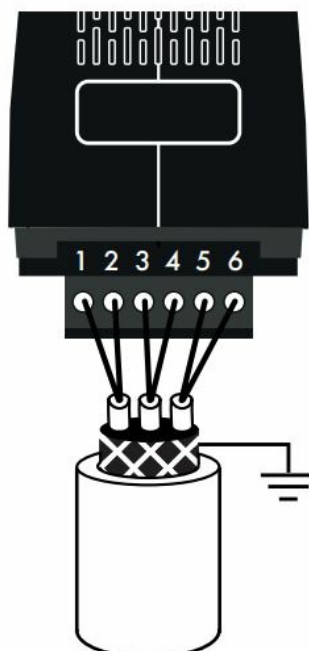


## Connection Examples

### 5V TTL Encoder – OPT-2-ENCOD-IN

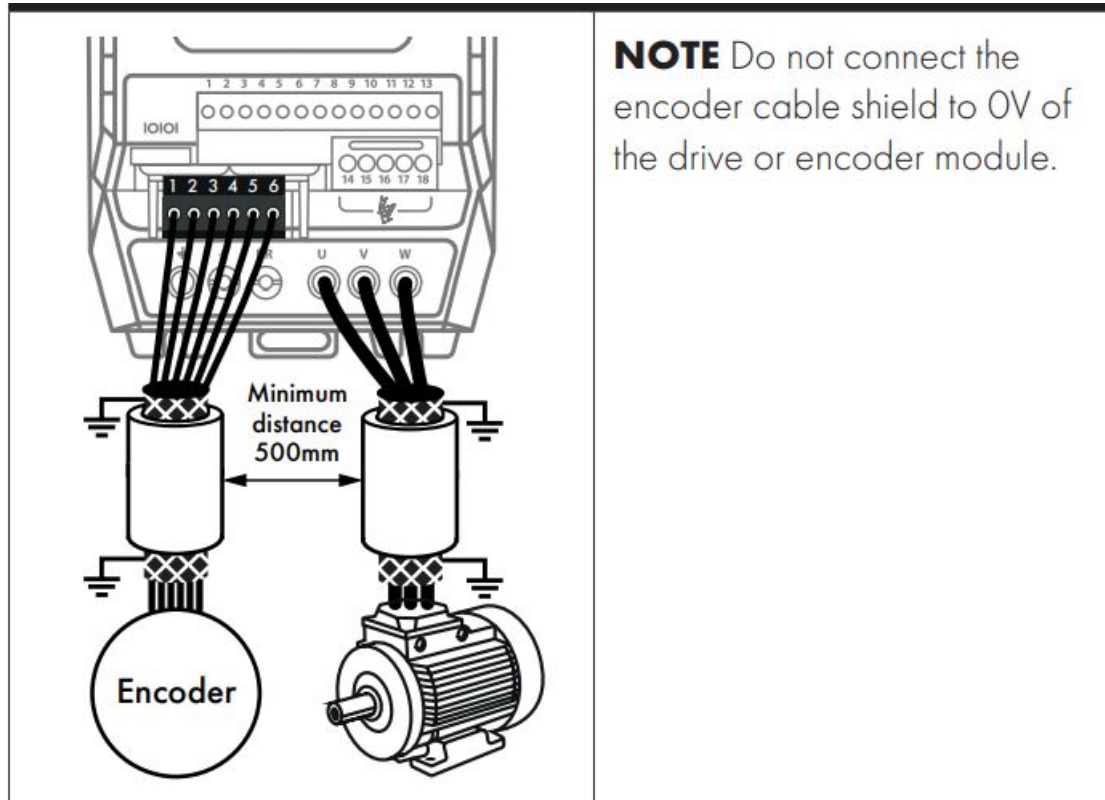

### 24V HTL Encoder – OPT-2-ENCHT

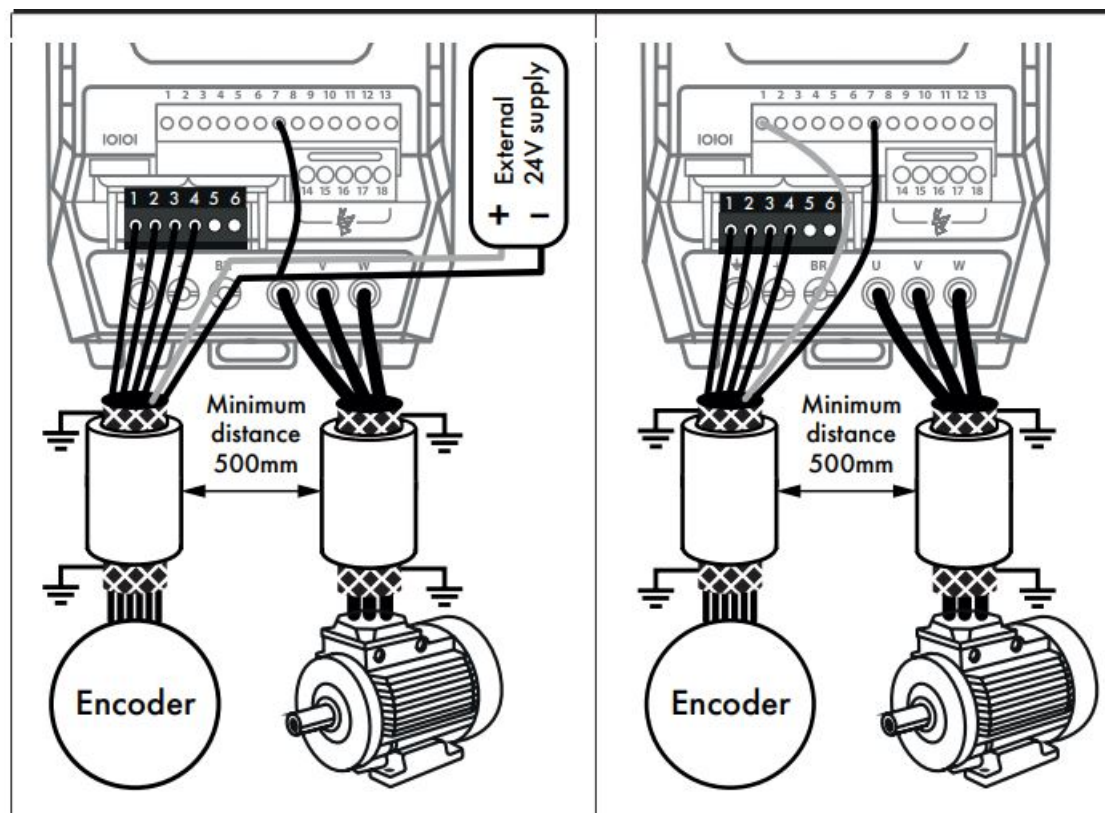

Alternatively (to External supply) the drives on-board 24V supply can be used (T1 (24V) and T7 (0V)) – Ensure total current consumption from T1 does not exceed 100mA.

**NOTE** 0V of encoder must also be connected to drive 0V (T7).

**NOTE** Do not connect the encoder cable shield to 0V of the drive or encoder module.

**Refer to the user manual for connection examples and follow these notes:**

- Ensure that the encoder cable shield is not connected to 0V of the drive or encoder module.
- The 0V of the encoder must be connected to drive 0V (T7).

### Operation and Commissioning

#### When commissioning, follow these steps:


1. Commission the Optidrive in Encoderless Vector Speed Control (P6-05 = 0) initially.
2. Perform a speed and polarity check to ensure that the feedback signal matches the speed reference in the drive.

### Compliance

Hereby, Invertek Drives Ltd declares that the Optidrive Encoder Interface. Model Code: OPT-2-ENCOD-IN and OPT-2-ENCHT is in compliance with Directive 2014/30/EU, 2014/35/EU, 2011/65/EU The EU declaration of conformity is available on request from your Invertek Drives Sales Partner.

#### Option Module Connections

Pin	Function
1	A Channel (A)
2	A Channel Inverse (/A)
3	B Channel (B)
4	B Channel Inverse (/B)
5	+5V DC Output
6	0 Volt

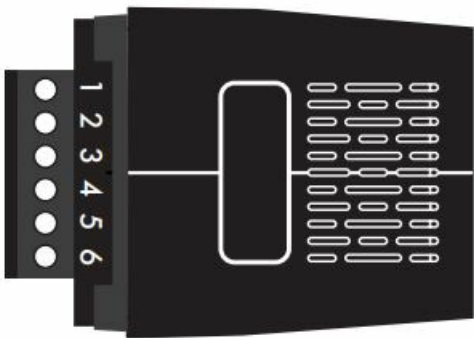

### Operation

#### Parameter Settings

#### When operating with an encoder, the following parameter settings are required as a minimum:

- P1-09: Motor rated frequency (found on the motor nameplate).
- P1-10: Motor rated speed (found on the motor nameplate).
- P6-06: Encoder PPR value (enter value for the connected encoder).

Closed Loop Vector speed provides full torque holding capability at zero speed and enhanced operation at frequencies below 1Hz. The drive, encoder module and encoder should be connected according to the voltage rating of the encoder as shown in the wiring diagrams. The encoder cable should be an overall shielded type, with the shield bonded to earth at both ends.

### Commissioning

When commissioning, the Optidrive should firstly be commissioned in Encoder less Vector Speed Control (P6-05 = 0), and a speed / polarity check should then be made to ensure that the sign of the feedback signal matches that of the speed reference in the drive. The steps below show the suggested commissioning sequence, assuming the encoder is correctly connected to the Optidrive.

**1. Enter the following parameters from the motor nameplate:**

- P1-07 – Motor Rated Voltage
  - P1-08 – Motor Rated Current
  - P1-09 – Motor Rated Frequency
  - P1-10 – Motor Rated Speed
2. To enable access to the advanced parameters required, set P1-14 = 201
  3. Select Vector Speed Control Mode by setting P4-01 = 0
  4. Carry out an Auto-tune by setting P4-02 = 1
  5. Once the Auto-tune is completed, the Optidrive should be run in the forward direction with a low speed reference (e.g. 2 – 5Hz). Ensure the motor operates correctly and smoothly.
  6. Check the Encoder Feedback value in P0-58. With the Optidrive running in the forward direction, the value should be positive, and stable with variation of + / – 5% maximum. If the value in this parameter is positive, the encoder wiring is correct. If the value is negative, the speed feedback is inverted. To correct this, reverse the A and B signal channels from the encoder.
  7. Varying the drive output speed should then result in the value of P0-58 changing to reflect the change of the actual motor speed. If this is not the case, check the wiring of the whole system.
  8. If the above check is passed, the feedback control function can be enabled by setting P6-05 to 1.

## Warranty

Complete Warranty Terms and Conditions are available upon request from your IDL Authorised Distributor.

Invertek Drives Ltd  
Offa's Dyke Business Park  
Welshpool  
Powys, UK  
SY21 8JF



[www.invertekdrives.com](http://www.invertekdrives.com)

Optidrive Encoder Interface Module User Guide  
Version 2.00



82-ENCOD-IN\_V2.00

## Documents / Resources





[Inverter Drives OPT-2-ENCOD-IN OPTIDRIVE Encoder Interface](#) [pdf] User Guide  
OPT-2-ENCOD-IN, OPT-2-ENCHT, OPT-2-ENCOD-IN OPTIDRIVE Encoder Interface, OPT-2-ENCOD-IN, OPTIDRIVE Encoder Interface, Encoder Interface, Interface

## References

- [Variable Frequency Drive Manufacturer | Variable Speed Drives | AC Drives | Inverter Drives](#)