



LANCOM SYSTEMS LANCOM 1803VAW-5G VoIP Gateway Installation Guide

[Home](#) » [LANCOM SYSTEMS](#) » LANCOM SYSTEMS LANCOM 1803VAW-5G VoIP Gateway Installation Guide 

Contents

- 1 LANCOM SYSTEMS LANCOM 1803VAW-5G VoIP Gateway
- 2 Specifications
- 3 Package contents
- 4 LEDs overview of the LANCOM 1803VAW-5G
- 5 Initial start-up
- 6 Safety instructions and intended use
- 7 Power supply
- 8 Applications
- 9 FAQs
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

LANCOM
SYSTEMS

LANCOM SYSTEMS LANCOM 1803VAW-5G VoIP Gateway




Specifications

- **Model:** LANCOM 1803VAW-5G
- **Manufacturer:** LANCOM Systems
- **Website:** Lancome-systems.com
- **Package Contents:**
 - 1 DSL cable for an IP-based line, 4.25 m
 - 1 Ethernet cable, 3m
 - 2 TAE adapters (RJ11 – TAE)
 - 4 5G / 4G antennas for 5G / LTE
 - External power adapter

Package contents

- **Cables:** 1 DSL cable for an IP-based line, 4.25 m; 1 Ethernet cable, 3m
- **Adapters:** 2 TAE adapters (RJ11 – TAE)
- **Antennas:** 4 5G / 4G antennas for 5G / LTE
- **Power adapter:** External power adapter

LEDs overview of the LANCOM 1803VAW-5G

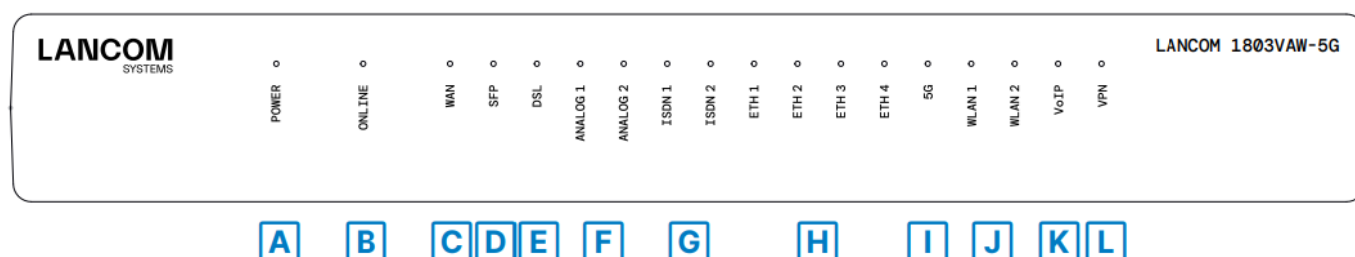

A Power

- **Off:** Device switched off
- **Blue, permanently:** Device ready for operation or device paired and LANCOM Management Cloud (LMC) accessible.
- **1x blue, inverse blinking:** Connection to LMC active, pairing OK, device not claimed
- **2x blue, inverse blinking:** Pairing error or LMC activation code/ PSK not present.
- **3x blue, inverse blinking:** LMC not reachable resp. communication error

B Online

- **Off:** WAN connection not active
- **Blue, blinking:** WAN connection in progress (e.g. PPP negotiation)
- **Blue, permanently:** WAN connection active

C WAN

- **Off:** No link available / interface switched off
- **Blue, permanently:** Link available, no data transmission
- **Blue, flickering:** Data transmission

D SFP

- **Off:** No link available / interface switched off
- **Blue, permanently:** Link available, no data transmission
- **Blue, flickering:** Data transmission

E DSL

- **Off:** Interface switched off
- **Blue, blinking / fast blinking:** DSL Handshake, DSL Training
- **Blue, permanently:** DSL Sync
- **Blue, flickering:** Data transmission
- **Blue, flashing:** Hardware error

F Analog 1 / Analog 2

- **Off:** Interface switched off
- **Blue, permanently:** Interface activated
- **Blue, blinking:** Active incoming or outgoing call

ISDN 1 / ISDN 2

- **Off**: Interface switched off
- **Blue, permanently**: D channel active
- **Blue, blinking**: Active incoming or outgoing call
- **Blue, flashing**: BUS faulty, no terminal device on

ETH1 – ETH4

- **Off**: No link available or interface switched off
- **Blue, permanently**: Link available, no data transmission
- **Blue, flickering**: Data transmission

5G

- **Off**: Cellular interface switched off
- **Blue, blinking**: Registration on the mobile radio system is in progress
- **Blue, permanently**: Logon to the mobile radio system successfully
- **Blue, flickering**: Data transmission
- **Blue, flashing**: Hardware error
- **Blue, fast flashing**: Marginal reception quality

WLAN 1 / WLAN 2

- **Off**: No Wi-Fi network defined or Wi-Fi module disabled. No beacons are sent from the Wi-Fi module.
- **Blue, blinking**: DFS Scanning or other scan process
- **Blue, permanently**: At least one Wi-Fi network defined and Wi-Fi module activated. Beacons are sent from the Wi-Fi module.

VoIP

- **Off**: No SIP accounts defined or VCM disabled
- **Blue, blinking**: Not all defined and active SIP accounts have been registered (possibly still being established)
- **Blue, permanently**: All defined and active SIP accounts (outgoing) have been registered successfully

VPN

- **Off**: No VPN connection active
- **Blue, blinking**: VPN connection in progress
- **Blue, permanently**: VPN connection active

Initial start-up

Setting up the required connections for device configuration

- Connect the power supply to a power socket using the enclosed or another suitable IEC cable or the enclosed external power supply unit. Observe the safety instructions on the right.
- **Only for devices with integrated DSL modem:** If available and required, connect the G.FAST / VDSL / ADSL interfaces to a TAE socket of your provider using suitable cables.
- Use suitable cables or modules to connect other required device interfaces to other components and, in the case of devices with mobile radio and/or Wi-Fi interfaces, connect any antennas supplied.
- Depending on the device equipment, choose one of the following configuration methods: a) or b)
 - **a) Configuration via the LANCOM Management Cloud (LMC):** The LMC automatically rolls out the configuration to your device, provided it has access to the Internet. If a router that establishes the Internet connection should be added to the LMC, it may first be necessary to configure a basic configuration and an Internet connection via the local network, as described under b).
 - **b) Configuration via the local network:** Connect one of the ETH or LAN interfaces of the device via an Ethernet cable either to a network switch or directly to the network device intended for configuration (e.g., notebook). The CONFIG or COM interface is not suitable for configuration via the network!

Options for initial start-up of the unconfigured device

- **Option 1: via the LANCOM Management Cloud (LMC)**

The LANCOM Management Cloud allows LANCOM partners to automate the commissioning, centralized management, and monitoring of LANCOM devices. Further information on commissioning and configuration via the LMC can be found at www.lancom-systems.com/lmc-access.

- **Option 2: via a web browser (WEBconfig)**

Configuration via a web browser is an easy and fast variant since no additional software is required on the computer used for configuration.

Note: If a certificate warning appears in your browser when trying to connect to your device, there is a button or link on the displayed browser page to connect to the device anyway (depending on the browser, usually under Advanced).

In the following, select the description a) or b) that applies to your setup for configuring the device.

- **a) Configuration in a network without an active DHCP server:** For configuration via TCP/IP, the IP address of the device in the local network (LAN) is required. After power-on, an unconfigured LANCOM device first checks whether a DHCP server is active in the LAN. The device can be accessed from any computer with the Auto DHCP function enabled using a web browser under the IP address 172.23.56.254. The given IP address can be modified at any time.
 - **b) Configuration in a network with an active DHCP server:** In this procedure, the DNS server used in your network must be able to resolve the hostname reported by the device via DHCP. When using a LANCOM device as a DHCP and DNS server, this is the default case. At <https://lancom-XXYYZZ.y>, you can access your device. Replace XXYYZZ with the last six digits of the MAC address of your device, which you can find on the enclosed document LANCOM Management Cloud or the nameplate of the device. If necessary, append the domain name of your local network (e.g., i Internet).
- When the computer is connected to an unconfigured LANCOM device, WEBconfig automatically starts the

setup wizard Basic settings.

- After the setup wizard has been run through, the initial commissioning of the device is complete.
- If necessary, make further configurations using the setup wizards available for selection.
- **Option 3: via the Windows software LANconfig (www.lancom-systems.com/downloads)**
 - Please wait until the booting process of the device is completed before starting LANconfig.
 - Unconfigured LANCOM devices are automatically found by LANconfig in the local network (LAN), and the setup wizard Basic settings are then started.
 - After the setup wizard has finished, the initial start-up of the device is complete.
 - If necessary, make further configurations using the setup wizards available for selection.

General safety instructions

- Under no circumstances should the device housing be opened and the device repaired without authorization. Any device with a case that has been opened is excluded from the warranty.
- If antennas are available, they may only be installed or replaced when the device is switched off. Mounting or demounting antennas while the device is powered on destroys the radio module.
- Mounting, installation, and commissioning of the device may only be carried out by qualified personnel.

Safety instructions and intended use

To avoid harming yourself, third parties, or your equipment when installing your LANCOM device, please observe the following safety instructions. Operate the device only as described in the corresponding documentation. Pay particular attention to all warnings and safety instructions. Use only those third-party devices and components that are recommended or approved by LANCOM Systems. Before commissioning the device, be sure to study the corresponding Hardware Quick Reference, which can be downloaded from the LANCOM website www.lancom-systems.com/downloads. Any warranty and liability claims against LANCOM Systems are excluded in the event of any use other than the intended use described below!

Environment

LANCOM devices should only be operated when the following environmental requirements are met:

- Ensure that you comply with the temperature and humidity ranges specified in the Quick Reference Guide for the LANCOM device.
- Do not expose the device to direct sunlight.
- Ensure that there is adequate air circulation and do not obstruct the ventilation slots.
- Do not cover devices or stack them on top of one another
- The device must be mounted so that it is freely accessible (for example, it should be accessible without the use of technical aids such as elevating platforms); a permanent installation (e.g. under plaster) is not permitted.
- Only outdoor equipment intended for this purpose is to be operated outdoors.

Power supply

Before start-up, the following points must be observed, as improper use can lead to personal injury and damage to property, as well as voiding the warranty: The

- The main plug of the device must be freely accessible.
- Operate the device only with a professionally installed power supply at all times freely

accessible socket.

- Only use the enclosed power supply / IEC cable or the one listed in the hardware quick reference.
- A high touch current is possible for devices with metal housing and grounding screw! Before connecting the power supply, connect the grounding screw to a suitable ground potential.
- Some devices support power supply via an Ethernet cable (Power over Ethernet – PoE). Please refer to the corresponding notes in the hardware quick reference of the device.
- Never operate damaged components.
- Only switch on the device when the housing is closed.
- The device must not be installed during thunderstorms and should be disconnected from the power supply during thunderstorms.
- In case of emergency (e.g. damage, ingress of liquids or objects, for example, through the ventilation slots), disconnect the power supply immediately.

Applications

- The devices may only be used with the relevant national regulations and under consideration of the legal situation applicable there.
- The devices must not be used for the actuation, control, and data transmission of machinery that, in case of malfunction or failure, may present a danger to life and limb, nor for the operation of critical infrastructures.
- The devices with their respective software are not designed, intended, or certified for use in: the operation of weapons, weapons systems, nuclear facilities, mass transportation, autonomous vehicles, aircraft, life support computers or equipment (including resuscitators and surgical implants), pollution control, hazardous materials management, or other hazardous applications where failure of the device or software could lead to a situation in which personal injury or death could result. The customer is aware that the use of the devices or software in such applications is entirely at the customer's risk.

Regulatory Notice

Regulatory compliance for devices with radio or Wi-Fi interfaces

This LANCOM device is subject to governmental regulation. The user is responsible for ensuring that this device operates by local regulatory guidelines, specifically for compliance with potential channel restrictions.

Channel restrictions in Wi-Fi operation for devices with Wi-Fi interfaces

When operating this radio equipment in EU countries, the frequency range of 5,150 – 5,350 MHz (Wi-Fi channels 36 – 64), as well as the frequency range of 5,945 – 6,425 MHz (Wi-Fi channels 1 – 93), is limited to indoor use.

Maximum transmission power for devices with radio interfaces

This LANCOM device may contain one or more radio interfaces using various technologies. The maximum output power per technology and used frequency band for use in EU countries is described in the following tables:

Technology	Frequency range (MHz)	Max. output power (dBm EIRP)
Wi-Fi	2,400 – 2,483.5	20
	5,150 – 5,350	20
	5,470 – 5,725	27
	5,945 – 6,425	23
LTE FDD (Band 1)	1,920 – 1,980	23
LTE FDD (Band 3)	1,710 – 1,785	
LTE FDD (Band 5)	824 – 849	
LTE FDD (Band 7)	2,500 – 2,570	
LTE FDD (Band 8)	880 – 915	
LTE FDD (Band 20)	832 – 862	
LTE: Power Class 3		
Technology	Frequency range (MHz)	Max. output power (dBm EIRP)
LTE TDD (Band 34)	2,010 – 2,025	24
LTE TDD (Band 38)	2,570 – 2,620	24.8
LTE TDD (Band 40)	2,300 – 2,400	24.8
LTE TDD (Band 42)	3,400 – 3,600	24.8
LTE: Power Class 3		
5G NR (n1)	1,920 – 1,980	24
5G NR (n3)	1,710 – 1,785	24
5G NR (n28)	703 – 748	24
5G NR (n41)	2,496 – 2,690	24
5G NR (n77)	3,300 – 4,200	24.5
5G NR (n78)	3,300 – 3,800	24.5
5G NR: Power Class 3		
UMTS (Band 2)	1,850 – 1,910	23
UMTS (Band 4)	1,710 – 1,755	
UMTS (Band 5)	824 – 849	

Declarations of Conformity

You will find all the Declarations of Conformity concerning our product portfolio at www.lancom-systems.com/doc. These documents contain all the tested standards and required guidelines in the area of EMC – SAFETY – RF, as well as proof of the guidelines concerning RoHS & REACH.

Simplified Declaration of Conformity

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen declares that this device complies with Directives 2014/30/EU, 2014/35/EU, 2014/53/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: www.lancom-systems.com/doc.

Documentation / Firmware

Current versions of the LCOS firmware, drivers, tools, and documentation for all LANCOM and AirLancer products are available for download free of charge from our website. You will also find explanations of all the functions of your LANCOM device in the LCOS Reference Manual: www.lancom-systems.de/docs/LCOS/Refmanual/EN/. All information on the interfaces and connection options of your device can be found under the following QR code in the Hardware Quick Reference:



Service & Support

The LANCOM Knowledge Base — with over 2,500 articles — is available to you at any time via the LANCOM website: www.lancom-systems.com/knowledgebase If you have any further questions, please submit your request via our Service & Support portal: www.lancom-systems.com/service-support Information on the lifecycle, in particular on End of Sale / End of Life and the supply of LANCOM devices with security updates can be found at: www.lancom-systems.com/lifecycle

All information on your device



LANCOM Device Functions and Resources

To access various resources related to your LANCOM device, you ? WAN can visit the following links:

- [LCOS Reference Manual](#)
- [LANCOM Knowledge Base](#)
- [Service & Support Portal](#)
- [Information on Lifecycle and Updates](#)

FAQs

Q: Where can I find detailed information on the LANCOM device interfaces and connection options?

A: You can refer to the Hardware Quick Reference available under the provided QR code for information on interfaces and connection options.

Q: How do I know if my LANCOM device is ready for operation?

A: The blue LED blinking status indicates that the device is ready for operation or paired with LANCOM Management Cloud (LMC).

Q: What does it mean when the WAN LED is flickering blue?

A: The WAN LED flickering blue indicates that the WAN connection is in progress, such as during PPP negotiation.

Documents / Resources



[LANCOM SYSTEMS LANCOM 1803VAW-5G VoIP Gateway](#) [pdf] Installation Guide
LANCOM 1803VAW-5G VoIP Gateway, LANCOM 1803VAW-5G, VoIP Gateway, Gateway

References

- [L DoC - LANCOM Systems GmbH](#)
- [L Confluence Mobile - LANCOM Wissensdatenbank](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.