GOODWE



User Manual

Rechargeable Li-ion Battery System

Lynx Home FH Series US



Copyright@GoodWe Technologies Co.,Ltd. 2023. All rights reserved.

No part of this manual can be reproduced or transmitted to the public platform in any form or by any means without the prior written authorization of GoodWe.


Trademarks

GOODWE

and other GOODWE trademarks are trademarks of GoodWe Technologies Co.,Ltd. All other trademarks or registered trademarks mentioned in this manual are owned by GoodWe Technologies Co.,Ltd.

NOTICE

The information in this user manual is subject to change due to product updates or other reasons. This quide cannot replace the product labels or the safety precautions in the user manual unless otherwise specified. All descriptions here are for guidance only.



Content

01 About This Manual	01
1.1 Applicable Model	01
1.2 Target Audience	01
1.3 Symbol Definition	01
1.4 Updates	01
2 IMPORTANT SAFETY INSTRUCTIONS	02
2.1 General Safety	02
2.2 Battery Safety	02
2.3 Emergency Measures	04
03 Product Introduction	05
3.1 Product Overview	05
3.2 Application Scenarios	06
3.3 Appearance	07
3.4 Dimensions	808
04 Check and Storage	09
4.1 Check Before Receiving	09
4.2 Deliverables	09
4.3 Storage	10
5 System Installation	
5.1 Installation Requirements	11
5.2 Installing the Battery System	12
6 Electrical Connection	16
6.1 Safety Precaution	16
6.2 Electrical Connection	17
6.2.1 Installing the Wiring Conduit	18
6.2.2 Connecting the Communication Cable	19
6.2.3 Connecting the Power Cable	
6.2.4 Connecting the Communication Cable	20
6.2.5 Connecting the Terminal Resistor	22
6.2.6 Installing the top cover of the PCU	22
07 System Operation	23
7.1 Check Before Power ON	23
7.2 Power ON the Battery System	23
7.3 Setting the Battery Parameters	25

7.4 Indicator Status	26
7.4.1 Normal Status	26
7.4.2 Alarming Status	27
7.4.3 Faulty Status	27
08 Maintenance	29
VO PROFITCE FOR THE PRO	
8.1 Power OFF the Battery System	29

01 About This Manual

This manual describes the product information, installation, electrical connection, commissioning, troubleshooting and maintenance. Read through this manual before installing and operating the product. All the installers and users have to be familiar with the product features, functions, and safety precautions.

This manual is subject to update without notice. For more product details and latest documents, visit https://en.goodwe.com.

1.1 Applicable Model

This manual applies to the listed models below:

- LX F9.6-30
- LX F12.8-30
- LX F16.0-30
- LX F19.2-30

1.2 Target Audience

This manual applies to trained and knowledgeable technical professionals. The technical personnel has to be familiar with the product, local standards, and electric systems.

1.3 Symbol Definition

Different levels of warning messages in this manual are defined as follows:

A DANGER(DANGER)

Indicates a high-level hazard that, if not avoided, will result in death or serious injury.

WARNING(AVERTISSEMENT)

Indicates a medium-level hazard that, if not avoided, could result in death or serious injury.

(CAUTION(MISE EN GARDE)

Indicates a low-level hazard that, if not avoided, could result in minor or moderate injury.

NOTICE(AVIS)

Highlight and supplement the texts. Or some skills and methods to solve product-related problems to save time.

1.4 Updates

The latest document contains all the updates made in earlier issues.

V1.0 2022-11-01

First Issue

V1.1 2023-02-15

- · Updates 3.4 Dimensions.
- Updates 4.3 Storage.
- Updates **5.2** Installing the Battery System.
- Updates 6.2.5 Connecting the Terminal Resistor.

V1.2 2023-03-20

· Updates 4.3 Storage.

2 IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

Please strictly follow these safety instructions in the user manual during the operation.

NOTICE(AVIS)

The products are designed and tested strictly to comply with related safety rules. Read and follow all the safety instructions and cautions before any operations. Improper operation might cause personal injury or property damage as the products are electrical equipment.

2.1 General Safety

NOTICE(AVIS)

- The information in this user manual is subject to change due to product updates or other reasons. This guide cannot replace the product labels or the safety precautions in the user manual unless otherwise specified. All descriptions here are for guidance only.
- Before installations, read through the user manual to learn about the product and the precautions.
- All operations should be performed by trained and knowledgeable technicians who are familiar with local standards and safety regulations.
- Use insulating tools and wear personal protective equipment (PPE) when operating the
 equipment to ensure personal safety. Wear anti-static gloves, cloths, and wrist strips when
 touching electronic devices to protect the equipment from damage.
- Strictly follow the installation, operation, and configuration instructions in this manual. The
 manufacturer shall not be liable for equipment damage or personal injury if you do not
 follow the instructions. For more warrant information, please visit: https://en.goodwe.com/warranty.

2.2 Battery Safety

⚠ DANGER(DANGER)

- The battery system exists high voltage during the equipment running. Please keep Power Off before any operations to avoid danger. Strictly follow all safety precautions outlined in this manual and safety labels on the equipment during the operation.
- The inverter used with the battery shall be approved by the battery manufacturer. The approved list of battery and the matched inverter can be obtained through the official website.
- Do not disassemble, modify, or replace any part of the battery or the power control unit without official authorization from the manufacturer. Otherwise, it will cause electrical shock or damages to the equipment, which shall not be borne by the manufacturer.
- Do not hit, pull, drag, squeeze or step on the equipment or put the battery into fire. Otherwise, the battery may explode.
- Do not place the battery in a high temperature environment. Make sure that there is no direct sunlight and no heat source near the battery. When the ambient temperature exceeds 60°C, it will cause fire.
- Do not use the battery or the power control unit if it is defective, broken, or damaged.
 Damaged battery may leak electrolyte.
- To protect the battery pack and its components from damage during transportation, please
 ensure that the transportation personnel are professionally trained. All operations during the
 transportation have to be recorded. The equipment shall be kept in balance, thus avoiding
 falling down.

DANGER(DANGER)

- · The battery equipment is heavy. Please equip the corresponding personnel according to its weight, so that the equipment does not exceed the weight range of the human body can carry, and cause personnel injury.
- Contact After Sale Service immediately if the battery is not able to be started. Otherwise, the battery might be damaged permanently.
- Do not move the battery system if it is connected with external battery modules. Contact after-sales service if the battery shall be replaced or added.

! CAUTION(MISE EN GARDE)

- Protect the battery system from damage during transportation and storage.
- The transportation must be carried out by trained professionals. All operations during the process have to be recorded.
- Keep the equipment stable to avoid dumping, which can result in equipment damage and personal injuries.
- Place the cables at least 30mm away from the heating components or heat sources, otherwise the insulation layer of the cables may be aging or broken due to high temperature.
- Tie the cables of the same type together, and place cables of different types at least 30mm apart. Do not place the cables entangled or crossed.

Label Description

	Potential risks exist. Wear proper personnel protective equipment before any operations.	S	Install the equipment away from fire sources.
A	HIGH VOLTAGE HAZARD High voltage exists during the equipment's running. Ensure the equipment is power off before any operations.		Keep the equipment away from children.
	Operate the equipment properly to avoid explosion danger.		It is forbidden to dismantle the equipment personally.
	The equipment contains corrosive electrolytes. In case of a leak in the equipment, avoid contact the leaked liquid or gas.		Do not short-circuit the positive and negative pole of the equipment. Otherwise it may cause damage to the cables.
	Batteries contain flammable materials, beware of fire.		Grounding point.
	Read through the user manual before any operations.	SGS 800923	SGS marking for United States and Canada

2.3 Emergency Measures

Battery Electrolyte Leakage

If the battery module leaks electrolyte, avoid contact with the leaking liquid or gas. The electrolyte is corrosive. It will cause skin irritation or chemical burn to the operator. Anyone contact the leaked substance accidentally has to do as following:

- Breath in the leaked substance: Evacuate from the polluted area, and seek immediate medical assistance.
- Eye contact: Rinse your eyes for at least 15 minutes with clean water and seek immediate medical assistance.
- Skin contact: Thoroughly wash the touch area with soap and clean water, and seek immediate
 medical assistance.
- Ingestion: Induce vomiting, and seek immediate medical assistance.

Fire

- The battery may explode when the ambient temperature exceeds 150°C. Poisonous and hazard gas may be released if the battery is on fire.
- In the event of a fire, please make sure that the carbon dioxide extinguisher or Novac1230 or FM-200 is nearby.
- The fire cannot be put out by water or ABC dry powder extinguisher. Firefighters are required
 to wear full protective clothing and self-contained breathing apparatus.

03 Product Introduction


3.1 Product Overview

Intended usage


The battery system, which consists of a power control unit (PCU for short) and battery modules, can store and release the electric energy according to the requirements of the solar energy storage system. The input and output ports of the energy storage system are high voltage direct current ports.

Usable energy description


The battery system supports capacity expansion. A maximum of 6 battery modules can be used to extend the usable energy of the battery system.

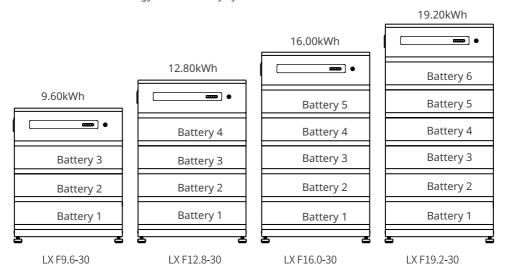

A max of eight battery systems can be parallel connected in one energy storage system. Ensure that the usable energy of each battery system is the same.

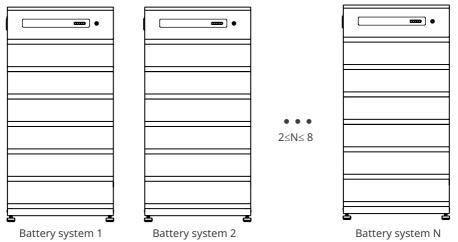

3.2 Application Scenarios

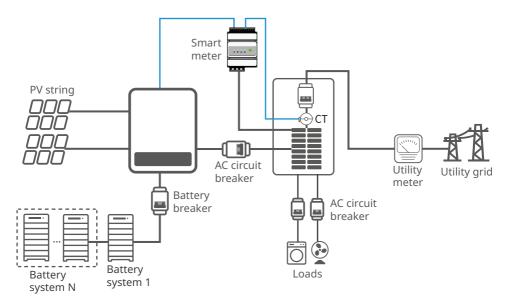

Approved inverter list

Scan the QR code below or visit the official website to get the Approved Inverter List matched with the Battery System.




GoodWe Inverter



GE Inverter

3.3 Appearance

Battery system appearance

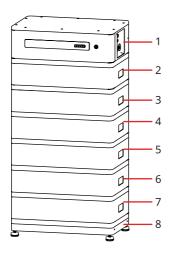


NOTICE(AVIS)

- Ensure that the PCU is installed above the battery modules. Do not install any battery modules above the PCU.
- This manual will show you the installation and electrical connection of 6 battery modules.


No.	Parts	
1	PCU	
2, 3, 4, 5, 6, 7	Battery	
8	Base	

Battery appearance

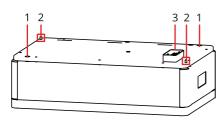


No.	Parts	
1	Spacing hole	
2	Positioning pin	
3	Rectangular connector	


Base appearance




No.	Parts	
1	Spacing hole	
2	Positioning pin	
3	Rectangular connector	
4	Adjustable feet	

Power control unit appearance

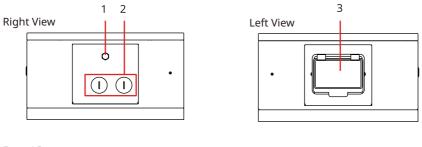






No.	Parts	
1	Ventilation valve	
2	Cable hole	
3	Air switch	
4	SOC indicator	
5	Button indicator	
6	Battery serial connection interface	

3.4 Dimensions

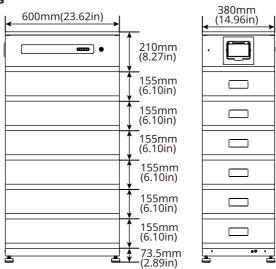

04 Check and Storage


4.1 Check Before Receiving

Check the following items before receiving the product.


- 1. Check the outer packing box for damage, such as holes, cracks, deformation, and other signs of equipment damage. Do not unpack the package and contact the supplier as soon as possible if any damage is found.
- 2. Check the product model. If the product model is not what you requested, do not unpack the product and contact the supplier.
- 3. Check the deliverables for correct model, complete contents, and intact appearance. Contact the supplier as soon as possible if any damage is found.

4.2 Deliverables

Power control unit

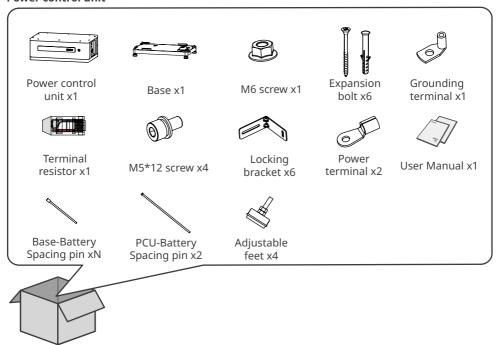

Battery module

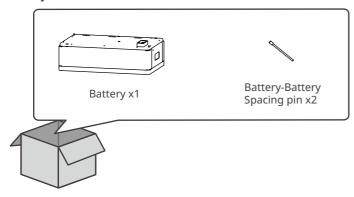

4.3 Storage

If the equipment is not to be installed or used immediately, please ensure that the storage environment meets the following requirements:


- 1. Do not unpack the outer packing box or throw the desiccant away.
- 2. Complete the equipment installation in three days after unpacking it. Pack and store the equipment using the original packing box if it is not installed.
- 3. Stack the equipment complying with the labels and requirements on the packing box.
- 4. The equipment must be stacked with caution to prevent them from falling.
- 5. Keep the equipment away from flammable, explosive, and corrosive matters.
- 6. Place the equipment in a cool place where away from direct sunlight.
- 7. Store the equipment in a clean place. Make sure the temperature and humidity are appropriate and no condensation.
- 8. Storage SOC: 25%~50% SOC. Circle the charge-discharge every 6 months.
- 9. Recommended storage temperature: 0° C~35°C (less than one year), -20°C~0°C or 35°C~45°C(less than one month).
- 10.Recommended storage humidity: 0%~95%RH (no condensation). Do not install the battery if there is any moisture or condensation.

5 System Installation

5.1 Installation Requirements

Installation Environment Requirements

- 1. Do not install the equipment in a place near flammable, explosive, or corrosive materials.
- 2. Do not install the equipment in a place that is easy to touch, especially within children's reach. High temperature exists when the equipment is working. Do not touch the surface to avoid burning.
- 3. Avoid thewater pipes and cables buried in the wall when drilling holes.
- 4. Install the equipment in a sheltered place to avoid direct sunlight, rain, and snow. Build a sunshade if it is needed.
- 5. Install the equipment in a well-ventilated place to ensure good dissipation. Also, the installation space should be large enough for operations.
- 6. The equipment with a high ingress protection rating can be installed indoors or outdoors. The temperature and humidity at the installation site should be within the appropriate range.
- 7. Install the equipment at a height that is convenient for operation and maintenance, electrical connections, and checking indicators and labels.
- 8. The altitude to install the equipment shall be lower than the maximum working altitude 3000m (9842ft).

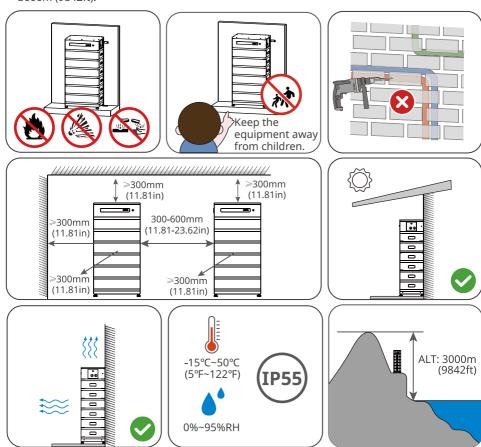

Mounting Support Requirements

- The mounting support shall be nonflammable and fireproof.
- Install the equipment on a surface that is solid enough to bear the product weight.
- Put the battery system near the wall and install the locking brackets to prevent the battery from falling down.

Installation Angle Requirements

• Install the equipment vertically, no tilt or upside down.





5.2 Installing the Battery System

5.2.1 Moving the Equipment


CAUTION(MISE EN GARDE)


- Operations such as transportation, turnover, installation and so on must meet the requirements of the laws and regulations of the country or region where it is located.
- Move the equipment to the site before installation. Follow the instructions below to avoid personal injury or equipment damage.
 - 1. Consider the weight of the equipment before moving it. Assign enough personnel to move the equipment to avoid personal injury.
 - 2. Wear safety gloves to avoid personal injury.
 - 3. Keep balance to avoid falling down when moving the equipment.

5.2.2 Installing the Battery System

NOTICE(AVIS)


- Ensure that the ground is flat and no inclination.
- Ensure that the base stands on the floor vertically.
- Ensure that the base clings to the wallwith its arrow directs at the wall
- Align the holes of the upper and the lower battery modules when placing the upper battery module.
- Put the locking bracket of the PCU cling to the wall, and ensure that the bottom of the PCU is vertically and closely put on the battery.
- Cover the equipment with a cardboard to prevent foreign matters when drilling holes.
- Beware of the batteries and PCU falling down.
- Do not install the base and the locking bracket on one side.

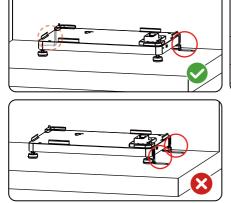









- Keep the fastening screws after opening the top cover of PCU for later usage.
- Use the PCU-Battery Spacing pin to fix the last battery and PCU. Do not install the Battery-Battery Spacing pin.
- If you need to open the top cover of PCU in rain or snow, please take protective measures to prevent rain or snow from entering the maintenance chamber. If it is not able to be guaranteed, do not open the top cover.
- **Step 1:** Install the adjustable feet to the base.
- **Step 2:** Install the locking bracket to the base.
- **Step 3:** Place the base cling to the wall and mark the drilling positions. Then remove the base.
- **Step 4:** Drill holes with the hammer drill.
- **Step 5:** Fasten the expansion bolts, ensuring the base is firmly installed.
- **Step 6:** Install the battery to the base.
- **Step 7:** Install the batteries from the bottom up as the instruction of Step 6.
- Step 8: Install the locking bracket of the PCU.
- **Step 9:** Put the PCU above the installed battery module securely. Mark the drilling hole with a marker, then remove the PCU.
- **Step 10:** Drill holes with the hammer drill.
- **Step 11:** Fasten the expansion bolts, ensuring the PCU is firmly installed.
- Step 12: Open the top cover of the PCU.
- **Step 13:** Install the positioning pin between the PCU and the battery.

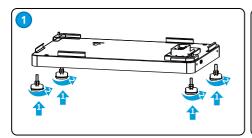


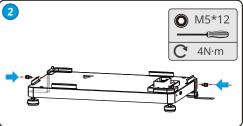


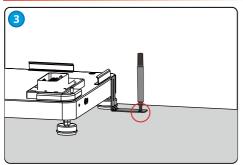


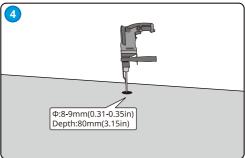


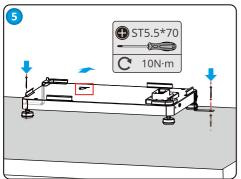


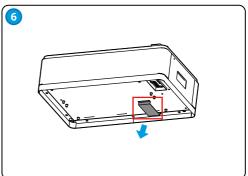


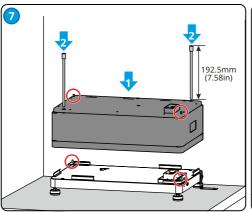


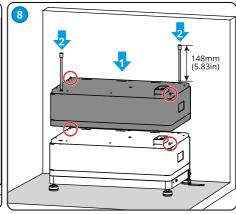


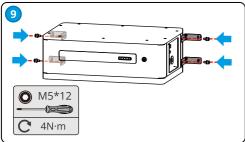


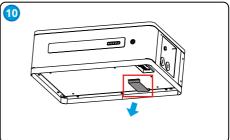


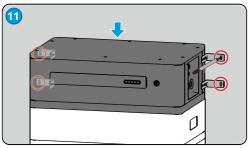

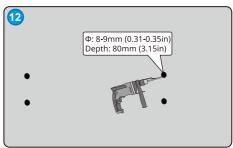

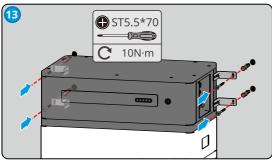

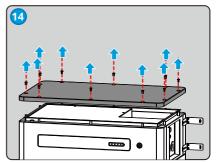

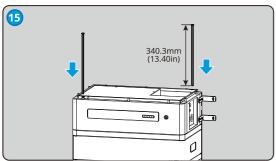

6 Electrical Connection

6.1 Safety Precaution

DANGER(DANGER)

INSTRUCTIONS PERTAINING TO A RISK OF FIRE OR ELECTRIC SHOCK

- Perform electrical connections, including operations, cables, and component specifications in compliance with local laws and regulations ANSI/NFPA 70.
- The battery system exists high voltage during the equipment running. Please keep Power
 Off before any operations to avoid danger. Strictly follow all safety precautions outlined in
 this manual and safety labels on the equipment during the operation.
- All operations, cables and parts specification during the electrical connection shall be in compliance with local laws and regulations.
- Tie the same type cables together, and place them separately from cables of different types.
 Do not place the cables entangled or crossed.
- When crimping the terminals, ensure that the conductor part of the cable is in full contact with the terminals. Do not crimp the cable jacket with the terminal. Otherwise the charger may not operate, or its terminal block getting damaged due to heating and other phenomenon because of unreliable connection after operation.

WARNING(AVERTISSEMENT)

GROUNDING INSTRUCTIONS

This product must be connected to a grounded, metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the product.

NOTICE(AVIS)


- Wear personal protective equipment like safety shoes, safety gloves, and insulating gloves during electrical connections.
- All electrical connections should be performed by qualified professionals.
- Cable colors in this document are for reference only. The cable specifications shall meet local laws and regulations.

6.2 Electrical Connection


NOTICE(AVIS)


- A max of eight battery systems can be parallel connected in one energy storage system.
 Ensure that the usable energy of each battery system is the same.
- Install the terminal resistor to the COM3 port of Battery system 1, which is connected to the inverter directly.
- Install the terminal resistor to the COM2 port of Battery system N, which is the last battery system of the battery cluster system.
- The battery cluster interlock function will fail if the terminal resistor is not installed.

Single battery system

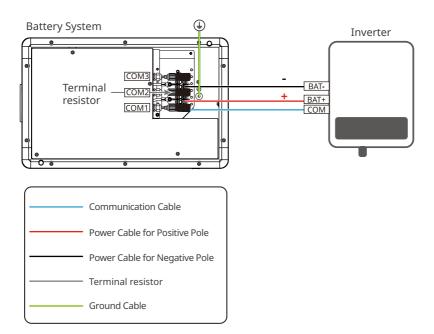

Parallized battery systems

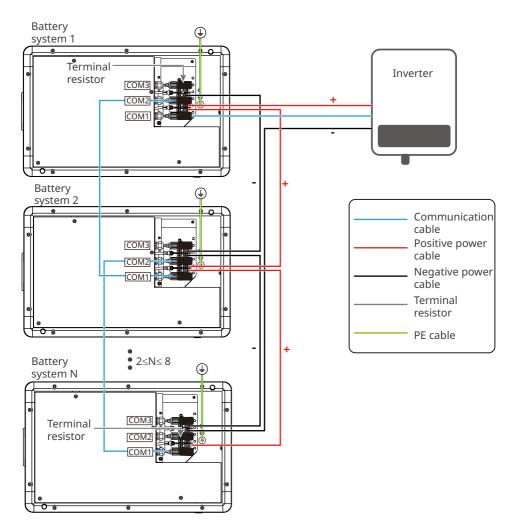

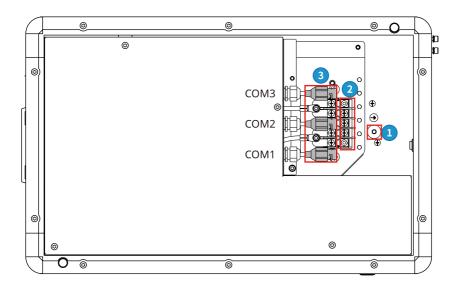


No.	PIN Definition	Silk Print	Recommended Cable Dimension	
1	Grounding point		Connecting the PE cable • The recommended specification: copper, temperature105°C (221°F), cross-sectional area 10AWG.	
	Connecting the Power cable The recommended specification: copper,			
2	Power terminal		temperature105°C (221°F), cross-sectional	
3 Communication terminal COM	COM1	To realize the communication between the		
		COM2	battery and the inverter, as well as among the	
	Cerminal	COM3	batteries.	


6.2.1 Installing the Wiring Conduit

! WARNING(AVERTISSEMENT)

- Conduit shall be prepared by Users with specification matched with the waterproof end cap.
- It is recommended to use 1 inch cable gland for routing. The diameter for the routing hole on the PCU is 34mm (1.34 in).
- When installing the conduit, make sure the installation is in place, and the hole between the conduit and the equipment interface is sealed. Otherwise the protection level of the equipment may be affected, which may cause damage to the equipment.

Diameter for the PCU routing hole

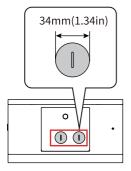


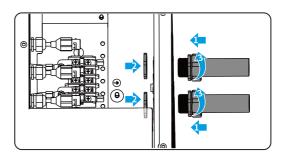


6.2.2 Connecting the Communication Cable

NOTICE(AVIS)

- Connect the PE cable first before installing the equipment. Disconnect the PE cable before dismantling the equipment.
- Prepare the PE cable by Users. The cable should meet standards for outdoor use.
- The drawing force of the cable after crimping should be at least 400N.
- **Step 1:** Strip the insulation layer and insert the bared conductor into the terminal.
- Step 2: Crimp the PE cable.
- **Step 3:** Install the heat shrink tube.
- Step 4: Connect the PE cable.

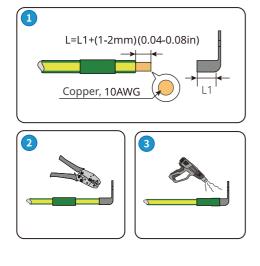

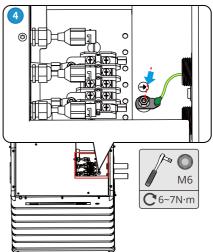


0

C 4N·m

6.2.3 Connecting the Power Cable

WARNING(AVERTISSEMENT)

- Connect the DC cables with the delivered terminals. The manufacturer shall not be liable for the damage if other terminals are used.
- · Power off the battery system before connecting the power cable to avoid high voltage danger.
- The PE cable should be prepared by the customer. Type: outdoor PV cables satisfying the inverter's max input voltage.
- **Step 1:** Strip the insulation layer and insert the bared conductor into the terminal.
- **Step 2:** Crimp the Power cable.
- **Step 3:** Install the heat shrink tube.
- **Step 4:** Connecting the Power cable.

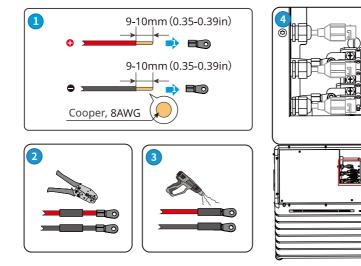

6.2.4 Connecting the Communication Cable

NOTICE(AVIS)

Please refer to the following pin definitions if you need to make a new battery communication cable.

RJ45 Modular Connector






CAN Communication port

PIN	СОМ1	COM2	сомз	Description
1	CAN3H	CAN3H	CAN3H	COM1: connects to the BMS communication
2	CAN3L	CAN3L	CAN3L	port on the inverter, for communication with the inverter; or connects to the parallelized battery system for communication. COM2, COM3: BMS communication for battery system parallel connection
3	N/A	N/A	N/A	N/A
4	CAN2H	N/A	N/A	COM1: communication for battery system
5	CAN2L	N/A	N/A	parallel connection
6	ISO_GND	ISO_GND	N/A	PIN for grounding.
7	HVIL_IN	HVIL_IN	N/A	COM1, COM2: interlock function
8	HVIL_OUT	HVIL_OUT	N/A	COM3: reserved

- **Step 1:** Disassemble the waterproof module.
- **Step 2:** Route the communication cable through the waterproof module.
- **Step 3:** Connect the communication cable to the battery. Tighten the waterproof module.

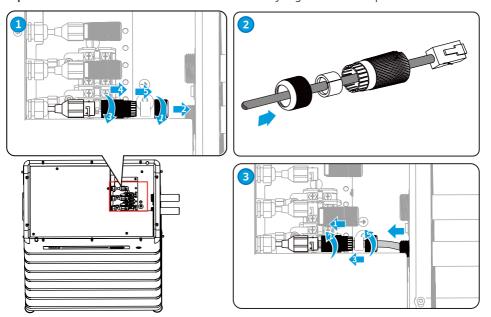


6.2.5 Connecting the Terminal Resistor


NOTICE(AVIS)

If the terminal resistor is not installed, the Interlock Failure will occur, and the system cannot work correctly.

- Step 1: Disassemble the waterproof module.
- **Step 2:** Install the terminal resistor. Tighten the waterproof module.


Single battery system

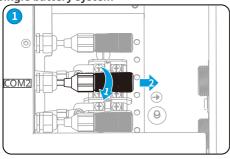


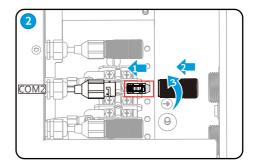


Parallized battery systems


For Battery 1:

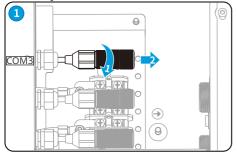

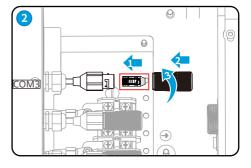

For Battery N:

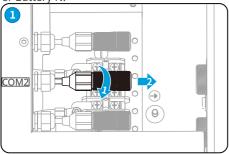


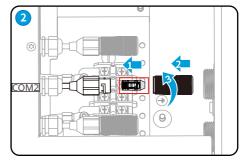

NOTICE(AVIS)

 Make sure that the cable is connected correctly and securely. Clear the debris after completing the connection.

6.2.6 Installing the top cover of the PCU

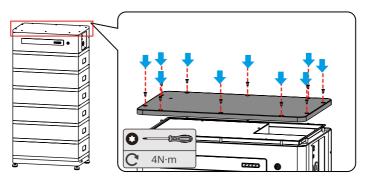

07 System Operation

7.1 Check Before Power ON


Check the following items before power on to avoid the battery system being damaged.

No.	Check Item
1	The equipment is firmly installed in a clean place where is well-ventilated and easy to operate.
2	The PE cable, power cable, communication cable, and terminal resistor are connected correctly and securely.
3	Cable ties are intact, routed properly and evenly.
4	Unused ports and terminals are sealed.

7.2 Power ON the Battery System


Single Battery System

- **Step 1:** (Optional) Turn on the breaker between the inverter and the battery system.
- **Step 2:** Turn on the air switch of the battery system.
- **Step 3:** Power on the inverter in the system following the instructions in the user manual of the inverter.

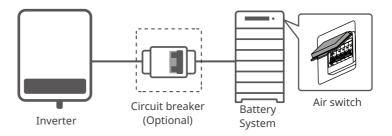

Parallel Connected Battery System

- **Step 1:** (Optional) Turn on the breaker between the inverter and the battery system.
- **Step 2:** Turn on the breakers between the battery systems.
- **Step 3:** Turn on the air switches of the battery systems in turn.
- **Step 4:** Power on the inverter in the system following the instructions in the user manual of the inverter.

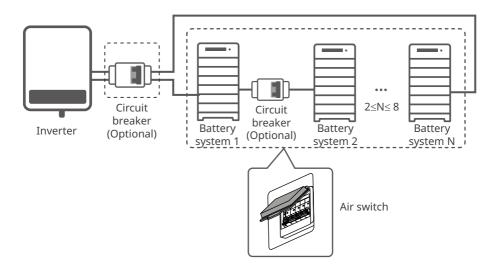


7.3 Setting the Battery Parameters

Select battery model via SolarGo after successfully connecting the battery module and the inverter.

APP installation and connection



Set battery model via the SolarGo App.

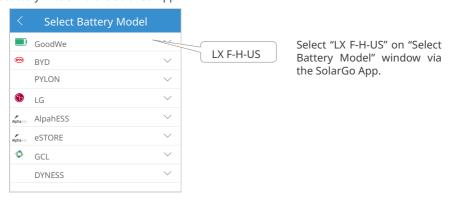

NOTICE(AVIS)

"Battery Communication Failure" will be displayed if you select the wrong battery model. Please select the right battery model accordingly.

7.4 Indicator Status



Button Indicator	Status
Green	Standby or Working
Red	Alarming or Faulty

7.4.1 Normal Status

Button Indicator	SOC Indicator	Description
Idle: green light blink 2 times Standby: green light blink 1 time Working: steady green		SOC<5%
		5%≤SOC<25%
		25%≤SOC<50%
		50%≤SOC<75%
		75%≤SOC<95%
		SOC≥95%

NOTICE(AVIS)

- The SOC indicator keeps on when charging.
- The SOC indicator blinks one time when discharging.

7.4.2 Alarming Status

Button Indicator	SOC Indicator	Alarm	Solutions	
Red light blink 2 times		Battery Overvoltage	Restart the battery. Contact the After Sale Service if the problem could not be solved.	
		Battery Undervoltage	Long press the button for 5 seconds to start the battery under charging conditions. Contact the After Sale Service if the problem could not be solved.	
		Overcurrent Charging	Restart the battery. Contact the After Sale Service if the problem could not be solved.	
		Overcurrent Discharging	Restart the battery. Contact the After Sale Service if the problem could not be solved.	
		Temperature Difference Exception	Power off and wait for 2 hours. Contact the After Sale Service if the problem could not be solved.	
		High Temperature	Power off and wait for 2 hours. Contact the After Sale Service if the problem could not be solved.	
		Low Temperature	Power off and wait for 2 hours. Contact the After Sale Service if the problem could not b solved.	
		Interlock Failure	Contact the After Sale Service if the problem could not be solved.	
		Others	Contact the After Sale Service.	

7.4.3 Faulty Status

Button Indicator	SOC Indicator	Fault	Solutions
Steady red		Battery Overvoltage	Restart the battery. Contact the After Sale Service if the problem could not be solved.
		Battery Undervoltage	Long press the button for 5 seconds to start the battery under charging conditions. Contact the After Sale Service if the problem could not be solved.
		Overcurrent Charging	Restart the battery. Contact the After Sale Service if the problem could not be solved.
		Overcurrent Discharging	Restart the battery. Contact the After Sale Service if the problem could not be solved.
		Temperature Difference Exception	Power off and wait for 2 hours. Contact the After Sale Service if the problem could not be solved.
		High Temperature	Power off and wait for 2 hours. Contact the After Sale Service if the problem could not be solved.

	Low Temperature	Power off and wait for 2 hours. Contact the After Sale Service if the problem could not be solved.	
	Inconsistent Software Version	Contact the After Sale Service if the problem could not be solved.	
	Precharge Fault	Restart the battery. Contact the After Sale Service if the problem could not be solved.	
	Relay Fault	Restart the battery. Contact the After Sale Service if the problem could not be solved.	
	Air Switch Fault	Restart the battery. Contact the After Sale Service if the problem could not be solved.	
	Insulation Fault	Do not touch the battery. Contact the After Sale Service.	
Steady red	Internal Communication Fault	Power off and check the communication cables. Restart the battery. Contact the After Sale Service if the problem could not be solved.	
	SN Fault	Contact the After Sale Service.	
	Voltage Balance Fault	Restart the battery. Contact the After Sale Service if the problem could not be solved.	
	Inconsistent Master and Slave	Restart the battery. Contact the After Sale Service if the problem could not be solved.	
	Temp. Sensor Fault	Restart the battery. Contact the After Sale Service if the problem could not be solved.	
	Others	Contact the After Sale Service if the problem could not be solved.	



Maintenance NR

8.1 Power OFF the Battery System

DANGER(DANGER)

INSTRUCTIONS PERTAINING TO A RISK OF FIRE OR FLECTRIC SHOCK

- Power off the battery system before operations and maintenance. Otherwise, the equipment may be damaged or electric shocks may occur.
- Push the air switch to restart the battery.

Follow the steps below to power off the battery system to prevent the system from being damaged.

Method one:

Step 1: Turn off the inverter in the system following the instructions in the user manual of the

Step 2:Long press the multifunction button indicator for more than 15s, and make sure that the SOC indicator and the button indicator of the PCU are off.

Method two:

Step 1: Turn off the inverter in the system following the instructions in the user manual of the inverter.

Step 2:Disconnect the air switch, and make sure that the SOC indicator and the button indicator of the PCU are off.

8.2 Routine Maintenance

WARNING(AVERTISSEMENT)

- Contact the after-sales service for help if you find any problems that may influence the battery or the hybrid inverter. Disassemble without permission is strictly forbidden.
- Contact after-sale service for help if the copper conductor is exposed. Do not touch or disassemble privately because the high voltage danger exists.
- In case of other emergencies, contact the after-sales service as soon as possible. Operate following the instructions or wait for the after-sales service personnel.

Maintaining Item	Maintaining Period
Checkwhether the locking bracket is secured, tighten it if not.	Once every 6 months
Check whether the outer enclosure is broken. Repair the painting or contact the after-sales service if there is any broken.	Once every 6 months
Check whether there is an exposed cable. Replace the exposed cable or contact the after-sales service for help.	Once every 6 months
Check whether there is any dust around the battery module. Clean the dust if there is any to avoid affecting heat dissipation.	Once every 6 months
Check whether there is any liquid or pest near the battery to avoid intrusion in a long term.	Once every 6 months

09 **Parameters**

Usable Energy (kWh)* 9.6	To also its all	D	17 50 6 30	17 542 0 20	LV 546 0 20	LV 540 2 20	
Battery Module	Technical Parameters		LX F9.6-30	LX F12.8-30	LX F16.0-30	LX F19.2-30	
Number of Modules 3 4 5 6 Cell Type LFP(LiFePO4) LFP(LiFePO4) Cell Configuration 60S1P 80S1P 100S1P 120S1P Nominal Voltage (V) 192 256 320 384 Operating Voltage Range (V) 171~216 228~288 285~360 342~432 Nominal Dis-/Charge Current (A)*2 8.96 11.2 13.44 Short-Circuit Current 4.2kA 1.0ms 4.6kA 1.0ms 4.7kA 1.0ms 4.9kA 1.0ms Operating Temperature Range (°F) Charge: +32~+122; Discharge: +5~+122 295% 4.2kA 1.0ms 4.6kA 1.0ms 4.9kA 1.0ms 4.7kA 1.0ms <	Usable Energy (kWh)*		9.6	12.8	16.0	19.2	
Cell Type LFP(LiFePO4) Cell Configuration 60S1P 80S1P 100S1P 120S1P Nominal Voltage (V) 192 256 320 384 Operating Voltage Range (V) 171-216 228-288 285-360 342-432 Nominal Dis-/Charge Current (A)*2 35 35 Nominal Power(kW)* 6.72 8.96 11.2 13.44 Short-Circuit Current 4.2kA 1.0ms 4.6kA 1.0ms 4.7kA 1.0ms 4.9kA 1.0ms Operating Temperature Range (°F) Charge: +32-+122; Discharge: +5-+122 25% 4.2kA 1.0ms 4.9kA 1.0ms 4.7kA 1.0ms<	Battery Module		LX F3.2-30: 64V 50Ah 3.2 kWh				
Cell Configuration 6051P 8051P 10051P 12051P Nominal Voltage (V) 192 256 320 384 Operating Voltage Range (V) 171-216 228-288 285-360 342~432 Nominal Dis-/Charge Current (A)*2 35 35 Nominal Power(kW)* 6.72 8.96 11.2 13.44 Short-Circuit Current 4.2kA 1.0ms 4.6kA 1.0ms 4.7kA 1.0ms 4.9kA 1.0ms Operating Temperature Range (°F) Charge: +32~+122; Discharge: +5~+122 295% 4.2kA 1.0ms 4.2kA 1.0ms 4.2kA 1.0ms 4.9kA 1.0ms	Number of Modules		3	4	5	6	
Nominal Voltage (V) 192 256 320 384	Cell Type		LFP(LiFePO4)				
Operating Voltage Range (V) 171~216 228~288 285~360 342~432 Nominal Dis-/Charge Current (A)*2 35 Nominal Power(kW)* 6.72 8.96 11.2 13.44 Short-Circuit Current 4.2kA 1.0ms 4.6kA 1.0ms 4.7kA 1.0ms 4.9kA 1.0ms Operating Temperature Range (°F) Charge: +32~+122; Discharge: +5~+122 25% 25% 24 </th <th>Cell Cor</th> <th>figuration</th> <th>60S1P</th> <th>80S1P</th> <th>100S1P</th> <th>120S1P</th>	Cell Cor	figuration	60S1P	80S1P	100S1P	120S1P	
Nominal Dis-/Charge Current (A)*2 8.96 11.2 13.44 Short-Circuit Current 4.2kA 1.0ms 4.6kA 1.0ms 4.7kA 1.0ms 4.9kA 1.0ms Operating Temperature Range (°F) Charge: +32~+122; Discharge: +5~+122 Relative Humidity ≤95% Altitude (Ft) ≤9842 Communication CAN Weight (Ib) 300.9 384.7 468.5 552.3 Dimensions (W×H×D in) 23.6*15*29.5 23.6*15*35.6 23.6*15*41.7 23.6*15*47.8 Ingress Protection Rating IP55 Storage Temperature (°F) -4~+131 Mounting Method Ground-Mounted Round-trip Efficiency 95.98% Cycle Life 3500@77°F Standard and Certification EMC FCC part 15 FCC part 15 FCC part 15 Communication FCC part 15 Communication FCC part 15 Communication 19.4	Nominal	Voltage (V)	192	256	320	384	
Current (A)*2 35 Nominal Power(kW)* 6.72 8.96 11.2 13.44 Short-Circuit Current 4.2kA 1.0ms 4.6kA 1.0ms 4.7kA 1.0ms 4.9kA 1.0ms Operating Temperature Range (°F) Charge: +32~+122; Discharge: +5~+122 Relative Humidity ≤95% CAN Weight (Ib) 300.9 384.7 468.5 552.3 Dimensions (W×H×D in) 23.6*15*29.5 23.6*15*35.6 23.6*15*41.7 23.6*15*47.8 Ingress Protection Rating IP55 Storage Temperature (°F) -4~+131 Mounting Method Ground-Mounted Round-trip Efficiency 95.98% Cycle Life 3500@77°F Standard and Certification EMC FCC part 15	Operating Voltage Range (V)		171~216	228~288	285~360	342~432	
Short-Circuit Current 4.2kA 1.0ms 4.6kA 1.0ms 4.7kA 1.0ms 4.9kA 1.0ms Operating Temperature Range (°F) Charge: +32~+122; Discharge: +5~+122 Relative Humidity ≤95% Altitude (Ft) ≤9842 Communication CAN Weight (lb) 300.9 384.7 468.5 552.3 Dimensions (W×H×D in) 23.6*15*29.5 23.6*15*35.6 23.6*15*41.7 23.6*15*47.8 Ingress Protection Rating IP55 Storage Temperature (°F) -4~+131 Mounting Method Ground-Mounted Round-trip Efficiency 95.98% Cycle Life 3500@77°F Standard and Certification EMC FCC part 15			35				
Operating Temperature Range (°F) Charge: +32~+122; Discharge: +5~+122 Relative Humidity ≤95% Altitude (Ft) ≤9842 Communication CAN Weight (Ib) 300.9 384.7 468.5 552.3 Dimensions (W×H×D in) 23.6*15*29.5 23.6*15*35.6 23.6*15*41.7 23.6*15*47.8 Ingress Protection Rating IP55 Storage Temperature (°F) -4~+131 Ground-Mounted Round-trip Efficiency 95.98% Cycle Life 3500@77°F Standard and Certification EMC FCC part 15	Nominal Power(kW)*		6.72	8.96	11.2	13.44	
Range (°F) Charge: +32~+122; Discharge: +5~+122 Relative Humidity ≤95% Altitude (Ft) ≤9842 Communication CAN Weight (Ib) 300.9 384.7 468.5 552.3 Dimensions (W×H×D in) 23.6*15*29.5 23.6*15*35.6 23.6*15*41.7 23.6*15*47.8 Ingress Protection Rating IP55 Storage Temperature (°F) -4~+131 Ground-Mounted Round-trip Efficiency 95.98% Cycle Life 3500@77°F Standard and Certification EMC FCC part 15	Short-Circuit Current		4.2kA 1.0ms	4.6kA 1.0ms	4.7kA 1.0ms	4.9kA 1.0ms	
Altitude (Ft) ≤9842 Communication CAN Weight (Ib) 300.9 384.7 468.5 552.3 Dimensions (W×H×D in) 23.6*15*29.5 23.6*15*35.6 23.6*15*41.7 23.6*15*47.8 Ingress Protection Rating IP55 Storage Temperature (°F) -4~+131 Mounting Method Ground-Mounted Round-trip Efficiency 95.98% Cycle Life 3500@77°F Standard and Certification EMC FCC part 15			Charge: +32~+122; Discharge: +5~+122				
Communication CAN Weight (Ib) 300.9 384.7 468.5 552.3 Dimensions (W×H×D in) 23.6*15*29.5 23.6*15*35.6 23.6*15*41.7 23.6*15*47.8 Ingress Protection Rating IP55 Storage Temperature (°F) -4~+131 Mound-Mounted Round-trip Efficiency 95.98% Cycle Life 3500@77°F Standard and Certification EMC FCC part 15	Relative Humidity		≤95%				
Weight (Ib) 300.9 384.7 468.5 552.3 Dimensions (W×H×D in) 23.6*15*29.5 23.6*15*35.6 23.6*15*41.7 23.6*15*47.8 IP55 Storage Temperature (°F) -4~+131 Mounting Method Ground-Mounted Round-trip Efficiency 95.98% Cycle Life 3500@77°F Standard and Certification EMC FCC part 15	Altitude (Ft)		≤9842				
Dimensions (W×H×D in) 23.6*15*29.5 23.6*15*35.6 23.6*15*41.7 23.6*15*47.8	Communication		CAN				
Ingress Protection Rating Storage Temperature (°F) -4~+131 Mounting Method Ground-Mounted Round-trip Efficiency 95.98% Cycle Life 3500@77°F Safety UL1973-2018, UL9540A-2019 FCC part 15 EMC FCC part 15	Weight (lb)		300.9	384.7	468.5	552.3	
Storage Temperature (°F) Mounting Method Round-trip Efficiency 95.98% Cycle Life 3500@77°F Safety UL1973-2018, UL9540A-2019 EMC FCC part 15	Dimensions (W×H×D in)		23.6*15*29.5	23.6*15*35.6	23.6*15*41.7	23.6*15*47.8	
Mounting Method Round-trip Efficiency 95.98% Cycle Life 3500@77°F Standard and Certification FCC part 15	Ingress Pro	tection Rating	IP55				
Round-trip Efficiency 95.98% Cycle Life 3500@77°F Standard and and Certification EMC FCC part 15	Storage Temperature (°F)		-4~+131				
Cycle Life 3500@77°F Standard and and Certification EMC FCC part 15	Mounting Method		Ground-Mounted				
Standard and EMC FCC part 15 Certification	Round-trip Efficiency		95.98%				
Standard and EMC FCC part 15 Certification	Cycle Life		3500@77°F				
and EMC FCC part 15 Certification		Safety	UL1973-2018, UL9540A-2019				
		EMC	FCC part 15				
		Transportation	UN38.3				

^{*1:} Test conditions, 100% DOD, 0.2C charge & discharge at 77±2°F for battery system at beginning life. System Usable Energy may vary with different Inverter.
*2: Nominal Dis-/Charge Current and power derating will occur related to Temperature and

^{*3:} Based on 2.5~3.65V voltage rang @77±2°F of Cell under 1C/1C test condition and 80% EOL.





Official Website

SolarGo App

GoodWe Technologies Co.,Ltd.



No. 90 Zijin Rd., New District, Suzhou, 215011, China



www.goodwe.com





Contact Information