



ŠKODA Superb Owner's Manual



Layout of this Owner's Manual (explanations)

This Owner's Manual has been systematically designed to make it easy for you to search for and obtain the information you require.

Chapters, table of contents and subject index

The text of the Owner's manual is divided into relatively short sections which are combined into easy-to-read **chapters**. The chapter you are reading at any particular moment is always specified on the bottom right of the page.

The **Table of contents** is arranged according to the chapters and the detailed **Subject index** at the end of the Owner's Manual helps you to rapidly find the information you are looking for.

Direction indications

All direction indications such as "left", "right", "front", "rear" relate to the direction of travel of the vehicle.

Units of measurement

All values are expressed in metric units.

Explanation of symbols

- Denotes a reference to a section with important information and safety advice in a chapter.
- Denotes the end of a section.
- Denotes the continuation of a section on the next page.
- Indicates situations where the vehicle must be stopped as soon as possible.
- ® Denotes a registered trademark.
- Indicates the texts displayed in the MAXI DOT screen.
- Indicates the texts shown in the segment display.

Display

In this owner's manual, the screen on the MAXI DOT display is used as the display illustration, provided it is not otherwise stated.

Notes



The most important notes are marked with the heading **WARNING**. These **WARNING** notes draw your attention to a **serious risk of accident or injury**.

CAUTION

A **Caution** note draws your attention to the possibility of damage to your vehicle (e.g. damage to gearbox), or points out general risks of an accident.

For the sake of the environment

An **Environmental** note draws your attention to environmental protection aspects. This is where you will, for example, find tips aimed at reducing your fuel consumption.



of your vehicle.

A normal **Note** draws your attention to important information about the operation

Documentation for date of delivery

Date of delivery/vehicle registrationಿ (VIN)			
Vehicle identification number			
ŠKODA partner			
Stamp and signature of the seller			
I confirm that I have taken delivery of the specified vehicle in good condition, have been shown how to operate it correctly, and the terms of the warranty have been explained to me.			
Signature of the customer			
Signature of the customer			

ŠKODA extended warranty Stamp of ŠKODA partner Limits of the ŠKODA extended warranty^{a)} Years: ОГ Valid from:

a) (Whichever comes first).

a) (Whichever comes first).

Preface

You have opted for a ŠKODA - our sincere thanks for your confidence in us.
You have received a vehicle with the latest technology and range of amenities. Please read this Owner's
Manual carefully, because the operation in accordance with these instructions is a prerequisite for proper use of the vehicle.

If you have any questions about your vehicle, please contact a ŠKODA Partner.

We hope you enjoy driving your ŠKODA, and wish you a pleasant journey at all times.

Your ŠKODA AUTO a.s. (hereinafter referred to only as ŠKODA or manufacturer)

Terms used

The on-board literature contains the following terms relating to the service work for your vehicle.

- "Specialist garage" A Workshop that carries out specialist service tasks for ŠKODA vehicles. A specialist garage can be a ŠKODA partner, a ŠKODA service partner or an independent workshop.
- "ŠKODA service partner" A Workshop that has been contractually authorized by the manufacturer ŠKODA AUTO a.s. or its sales partner to perform service tasks on ŠKODA vehicles and to sell ŠKODA Genuine Parts.
- "ŠKODA partner" A company that has been authorized by the manufacturer ŠKODA AUTO a.s. or its sales partner to sell new ŠKODA vehicles and, when applicable, to service them using ŠKODA Genuine Parts and sell ŠKODA Genuine Parts.

Owner's Manual

These operating instructions apply to all **body variants** of the vehicle and all related **models**.

The manual describes **all possible equipment variants** without identifying them as special equipment, model variants or market-dependent equipment.

Consequently, this vehicle does not need to contain all of the equipment components described in this owner's manual.

The scope of equipment of your vehicle relates to your purchase contract for the vehicle. More information is available from the ŠKODA Partner from whom you bought the vehicle.

The **illustrations** can differ in minor details from your vehicle; they are only intended for general information.

Table of Contents

Materials defect liability and ŠKODA warranty for new cars	5
Mobility warranty and ŠKODA extended warranty	6

Abbreviations

Using the system

Cockpit Overview	
Instruments and Indicator Lights Instrument cluster Warning Lights	_ 10
Information system Driver information system Multifunction display (MFA) MAXI DOT display Service Interval Display	_ 25 _ 25 _ 28
Unlocking and opening Unlocking and locking KESSY Anti-theft alarm system Luggage compartment lid Electric boot lid (Superb Combi) Electric power windows Electric sliding/tilting roof Panoramic sliding roof (Superb Combi)	37 38 38 39 44 44 47
Lights and visibility Lights Interior lights Visibility	_ 5

Windscreen wipers and washers Rear mirror	_ 61 _ 63
Seats and useful equipment	_ 66
Adjusting the seats	
Seat features	
Practical equipment	
Luggage compartment	_ 84
Removable light (Superb Combi)	
Variable loading floor in the luggage compartment (Estate)	_ 92
Extending variable loading floor with integrate aluminium rails and faseting elements (Superb	
Combi)	_ 92
Net partition (Superb Combi)	
Roof rack system	_ 96
Air conditioning system	_ 98
Heating, ventilation and cooling	_ 98
Air conditioning system (manual air conditionin system)	g 100
Climatronic (automatic air conditioning system)	_ 103
Auxiliary heating (auxiliary heating and ventilation)	_ 107
Communication and multimedia	110
General information	110
Universal telephone preinstallation GSM II	
Universal telephone preinstallation GSM III	
WLAN	
Voice control	
Multimedia	126
Driving	
Starting-off and Driving	
Steering	_ 130
Starting and stopping the engine using the key	131
Starting and stopping the engine - KESSY	_ 133

Brakes	137
Manual gear changing and pedals	
Automatic transmission	
Running in	
Economical driving and environmental sustainability	143
Avoiding damage to your vehicle	
Driving abroad	
Assist systems	150
Brake assist systems	150
Parking aid	
Park assist	
Cruise Control System	
START-STOP	
Fatigue detection (break recommendation)	161
Towing a trailer	162
Towing device	
Trailer	165
Safety	
Paralisa Safata	160
Passive Safety General information	
Correct seated position	
	1/0

General information Correct seated position	
Seat belts Using seat belts Inertia reels and belt tensioners	173
Airbag system Description of the airbag system Airbag overview Deactivating airbags	178 179
Transporting children safely Child seat Fastening systems	186

General Maintenance

Car care	19
Service intervals	
Services, modifications, and technical	
alterations	19:
Washing your car	190
Taking care of your vehicle exterior	198
Taking care of the interior	20
Inspecting and replenishing	204
Fuel	204
Engine compartment	200
Engine oil	210
Coolant	21
Brake fluid	214
Vehicle battery	21
Wheels	220
Tyres and wheel rims	22
Winter operation	220

Do-it-yourself

Emergency equipment and self-help	_ 227
Emergency equipment	_ 227
Changing a wheel	_ 229
Tyre repair	_ 232
Jump-starting	_ 234
Towing the vehicle	_ 236
Radio remote control	_ 238
Emergency unlocking/locking	_ 240
Emergency operation of the sliding/tilting roof	_ 241
Replacing windscreen wiper blades	_ 242
Fuses and light bulbs	_ 244
Fuses	_ 244
Bulhs	247

Technical data

Technical data	252
Vehicle data	 252

Index

Materials defect liability and ŠKODA warranty for new cars

Materials defect liability

Your ŠKODA partner, as a vendor, is liable to you for material damage to your new ŠKODA car, ŠKODA Genuine Parts or ŠKODA Genuine Accessories in accordance with statutory regulations and the purchase agreement.

ŠKODA warranty for new cars

As well as the materials defect liability, ŠKODA AUTO a.s. grants you the ŠKODA warranty for new cars (hereafter referred to as "ŠKODA warranty)," according to the terms described later.

As part of the ŠKODA warranty, ŠKODA AUTO a.s. will guarantee the following services:

- Repair of damage to your vehicle that occurs within two years from the start of the ŠKODA warranty;
- Repair of paint damage to your vehicle that occurs within three years from the start of the ŠKODA warranty;
- Repair of rust perforation to the bodywork of your vehicle that occurs within twelve years from the start of the warranty. Only rust perforation on the inside and the outside of body sheets is included in the rust perforation to bodywork definition and covered by the ŠKODA warranty.

The start of the warranty is the date on which the original purchaser acquires the vehicle upon purchasing it from the ŠKODA partner or the date of first registration. Whichever one occurs first and is recorded by the ŠKODA partner in the service schedule accordingly is the one that applies.

Repairs may either occur by replacing the faulty part or by restoring it. Replaced parts become the property of the ŠKODA service partner.

There are no other entitlements arising from the ŠKODA warranty. In particular, there are no entitlements for replacement, cancellation, provision of a courtesy vehicle for the duration of repairs or compensation for damages.

If your ŠKODA vehicle was purchased from a ŠKODA partner in a country of the European Economic Area (i.e. the countries of the European Union, Norway, Iceland and Liechtenstein) or in Switzerland, claims arising from the ŠKODA warranty must also be made through a ŠKODA service partner in one of these countries.

If your ŠKODA vehicle has been purchased from a ŠKODA partner outside the European Economic Area and Switzerland, claims arising from the ŠKODA warranty must also be made through a ŠKODA service partner outside the European Economic Area and Switzerland.

One of the conditions of a service from the ŠKODA guarantee is that you have carried out all service works in a timely and adequate manner and in accordance with the manufacturer's provisions. You must prove that service works have been carried out properly and in accordance with the manufacturer's provisions when raising a claim from the ŠKODA warranty. In case of a missed service or in case of a failure to carry out a service according to the manufacturer's provisions, you may still be entitled to warranty claims as long as you can prove that the missed service or the failure to carry out a service according to the manufacturer's provisions was not the cause of the defect.

Natural wear and tear of your vehicle is not covered by the ŠKODA warranty. The ŠKODA warranty also does not cover defects to bodywork, installations and conversions provided by third-parties, nor vehicle defects caused by these. The same goes for accessories which are not factory installed and/or delivered.

In addition, this warranty does not apply if the defect was caused by one of the following:

- > unauthorized use, improper handling (e.g. use in racing competitions or overloading), improper care and maintenance, or unapproved modification to your vehicle:
- Non-compliance with provisions in the service schedule and the Owner's manual or other factory-supplied instructions;
- > External causes or influences (e.g. accidents, hail, flooding, etc.);
- > parts fitted or installed on the vehicle, whose use is not approved by ŠKODA AUTO a.s., or modification of the vehicle in a manner not approved by ŠKODA AUTO a.s. (e.g. tuning);
- > damage caused by you which was not immediately seen to by specialist garage or was not fixed properly.

It is the customer's responsibility to prove that it was not the cause.

This ŠKODA guarantee does not affect the purchaser's statutory rights arising from liability to defects from the vehicle vendor and other potential claims from product liability laws.

Mobility warranty and ŠKODA extended warranty

Mobility warranty

Mobility warranty provides a sense of security when travelling in your vehicle.

Should your car break down when you're on the move one day as a result of an unexpected fault, you will be eligible for services to ensure your continued mobility as part of the mobility warranty, which includes the following: Breakdown service at the breakdown location and towing off to the ŠKODA service partner, technical assistance by phone or on-site operation.

If your vehicle is not repaired on the same day, the ŠKODA service partner may provide further services as required, such as replacement transportation (bus, train, etc.), a courtesy vehicle, etc.

You can obtain more information regarding terms and conditions for the provision of mobility warranty for your vehicle from your ŠKODA partner. Here you will also be given detailed terms and conditions for the mobility warranty with respect to your vehicle. In the event that there is no mobility warranty coverage available for your vehicle, you should check with any ŠKODA service partner about the possibility of a subsequent agreement.

Note

The mobility warranty is only available for some countries.

Optional ŠKODA extended warranty

If you received an extended ŠKODA warranty when purchasing your new car, the two-year ŠKODA warranty for damages to your ŠKODA vehicle will be extended by the time you chose or until the chosen mileage limit has been reached.

The previously mentioned paint warranty and the warranty against rust perforation stay unaffected by the extended warranty.

Detailed conditions for the extended warranty are included in the extended warranty terms and conditions, which your ŠKODA partner will have given to you upon purchasing your new vehicle.

Note

The mobility guarantee and optional extended warranty ŠKODA are only available for some countries.

Abbreviations

Abbreviation	Definition
rpm	Engine revolutions per minute
ABS	Anti-lock brake system
AF	Multi-purpose vehicles
AHL	Adaptive headlights
AG	Automatic gearbox
APN	Access Point Name - the name of an access point for the WiFi network
TCS	Traction control
CO ₂ in g/km	discharged quantity of carbon dioxide in grams per driven kilometer
DPF	Diesel particle filter
DSG	Automatic double clutch gearbox
DSR	Active driver-steering recommendation
EDL	Electronic differential lock
ECE	Economic Commission for Europe
EPC	EPC fault light
ESC	Electronic Stability Control
EU	European Union
FSI	Stratified petrol direct injection
GSM	Groupe Spécial Mobile - a digital network of mobile devices for the transmission of voice and data
HFP	Hands-free profile - connection of a mobile device by means of its Bluetooth® profile
kW	Kilowatt, measuring unit for the engine output
MG	Manual gearbox
MFD	Multifunction display
N1	Panel van intended exclusively or mainly for the transportation of goods
Nm	Newton meter, measuring unit for the engine torque

Abbreviation	Definition
PIN	Personal Identification Number - personal identification number for the connection of electronic devices using Bluetooth® or WiFi
rSAP	Remote SIM Access Profile - remote transmission of SIM data
SSP	simple security pairing - connection of two devices using Bluetooth® profile
TDI CR	Diesel engine with turbocharging and common rail injection system
TDI PD	Diesel engine with injection system and unit injector injection system
TSI	Petrol engine with turbocharging and direct injection
UMTS	Universal Mobile Telecommunication System - the next evolution of the GSM network (3G)
WLAN	Wireless Local Area Network - wireless connection of elec- tronic devices for data transfer (WiFi)

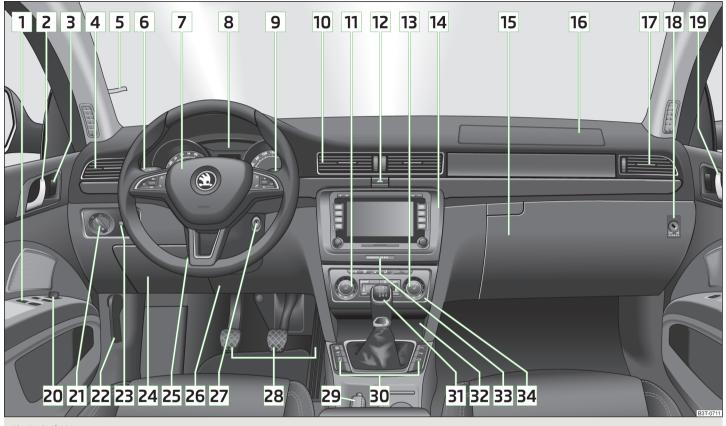


Fig. 1 Cockpit

Using the system

Cockpit

Overview

1 2 3	Electric windows	44 31 36 99
5	Parking ticket holder	٥.
6	Operating lever:	
_	 Turn signal light, headlight and parking light, headlight flasher Speed regulating system 	5: 15:
7	Steering wheel:	
	> With horn	
	> With driver's front airbag	180
	with pushbuttons for radio, navigation system phone and information system	111, 126
8	Instrument cluster: Instruments, warning lights and display	111, 12
9	Operating lever:	
	> Information system	2
	> Windscreen wiper and wash system	6
10	Air outlets in the central part of the dash panel	99
11	Regulator for left seat heating	70
12	Button for hazard warning light system	56
13	Regulator for right seat heating	70
14	Depending on equipment fitted: > Radio	
	Navigation system	
15	Storage compartment on the front passenger side	80
16	Front passenger airbag	180
17	Air outlet	99
18	Key switch for switching off the front passenger airbag (in front passenger storage compartment)	184
19	Door opening lever	3

20	Electric exterior mirror adjustment	65
21	Light switch	51
22	Bonnet release lever	208
23	Regulator for the instrument lighting and regulator for the head- light beam range adjustment	
24	Storage compartment on the driver's side	. 75
25	Lever for adjusting the steering wheel	130
26	Driver's knee airbag	
27	Ignition lock	
28	Pedals	
29	Handbrake	138
30	Bars with buttons depending on the equipment fitted:	150
	> A START STOP	
	> # Tyre control display	
	> & Electronic Stability Control ESC	
	> P⊕ Park Assist	
	> P [™] Parking aid	
	> 🖙 Tailgate operation (Superb Combi)	42
31	Depending on equipment fitted:	
	> Gearshift lever (manual gearbox)	
	> Selector lever (automatic gearbox)	. 139
32	Depending on equipment fitted:	
	> Ashtrays	
	> Storage compartment	
33	Warning light for the deactivated front seat passenger airbag	. 184
34	Depending on equipment fitted:	100
	> Operating controls for the air conditioning system	
	Operating controls for Climatronic	. 103

Note

The arrangement of the controls and switches and the location of some items on right-hand drive models may differ from that shown in » Fig. 1. The symbols on the controls and switches are the same as for left-hand drive models.

Instruments and Indicator Lights

Instrument cluster

Introduction

This chapter contains information on the following subjects:

Overview	10
Engine revolutions counter	
Speedometer	11
Coolant temperature gauge display	
Display	
Fuel gauge	
Counter for distance driven	12
Digital clock	13
Display of the second speed	13
Display in rear centre console	13
Auto Check Control	13

Fault display

If there is a fault in the instrument cluster, the **Error** message will appear in the display. Have the fault rectified as soon as possible by a specialist garage.

WARNING

- Concentrate fully at all times on your driving! As the driver you are fully responsible for road safety.
- Never operate the controls in the instrument cluster while driving, only when the vehicle is stationary!

Overview



Fig. 2 Instrument cluster



First read and observe the introductory information and safety warnings ... on page 10.

- 1 Revolutions counter with warning lights » page 11
- 2 Speedometer with warning lights » page 11
- **3** Button for display mode:
 - > Setting the hours/minutes » page 13
 - > Enable / disable the display of the second speed¹⁾ » page 13
 - Service intervals Display of the number of days and kilometres remaining until the next service¹⁾ » page 30
- 4 Coolant temperature gauge » page 11
- Display» page 12:
- > With counter for distance driven » page 12
- > With service interval display » page 30
- > With digital clock » page 13
- > with multifunction display (MFA) » page 25
- > with information system » page 23

Applies to vehicles with a segment display.

- Fuel gauge » page 12
- Button for:
 - > Reset trip counter for the distance driven » page 12
 - > Set hours/minutes
 - > enable / disable the mode selected by means of the 3 key

Engine revolutions counter



First read and observe the introductory information and safety warnings \blacksquare on page 10.

The red scale of the rev counter 1 » Fig. 2 on page 10 indicates the range in which the system begins to limit the engine speed. The system automatically restricts the engine speed to a steady limit.

You should shift into the next higher gear before the red scale of the revolution counter is reached, or select mode **D** on the automatic gearbox.

Follow the recommended gear to prevent engine speeds that are too high or too low » page 24.



For the sake of the environment

Correct shifting up has the following advantages.

- It helps to reduce fuel consumption.
- It reduces the operating noise.
- It protects the environment.
- It benefits the durability and reliability of the engine.

Speedometer



First read and observe the introductory information and safety warnings 🔢 on page 10.

Warning against excessive speeds

An audible warning signal will sound when the vehicle speed exceeds 120 km/h¹⁾. The audible warning signal is switched off when the vehicle speed falls below 120 km/h.

Coolant temperature gauge display



Coolant temperature gauge



First read and observe the introductory information and safety warnings [] on page 10.

The coolant temperate display » Fig. 3 only operates when the ignition is switched on.

Cold range

If the pointer is still in the left area of the scale it means that the engine has not vet reached its operating temperature. Avoid high speeds, full throttle and high engine loads. This prevents possible damage to the engine.

The operating range

The engine has reached its operating temperature as soon as the pointer moves into the mid-range of the scale. At very high ambient temperatures or heavy engine loads, the pointer may move even further to the right.

High temperature range

If the pointer reaches the red area of the scale, the coolant temperature is too high. Further information » page 16.

CAUTION

Additional headlights and other attached components in front of the air inlet impair the cooling efficiency of the coolant.

¹⁾ This function is only valid for some countries.

Display

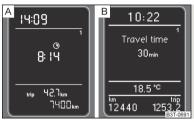


Fig. 4 **Display types**



First read and observe the introductory information and safety warnings H on page 10.

The instrument cluster can have one of the following types of display » Fig. 4.

- A Segment display, indicated in the text with the S symbol
- MAXI DOT display, indicated in the text with the

 symbol

CAUTION

Pull out the ignition key if coming in contact with the display (e.g. when cleaning) to prevent any possible damage. On vehicles with the KESSY system, switch off the ignition and open the driver's door.

Fuel gauge



Fig. 5 **Fuel gauge**

First read and observe the introductory information and safety warnings ! on page 10.

The fuel gauge » Fig. 5 only operates if the ignition is switched on.

The fuel tank has a capacity of about 60 litres. The indicator light in the instrument cluster lights up when the pointer reaches the reserve marking page 20.

CAUTION

Never drive until the fuel tank is completely empty! The irregular supply of fuel can cause misfiring. This can result in considerable damage to parts of the engine and the exhaust system.

Note

After filling up, it can occur that during dynamic driving (e.g. numerous curves, braking, driving downhill and climbing a steep hill) the fuel gauge indicates approx. a fraction less. When stopping or during less dynamic driving, the fuel gauge displays the correct fuel level again. This is not a fault.

Counter for distance driven



Fig. 6
Segment display / MAXI DOT display



First read and observe the introductory information and safety warnings 1. on page 10.

Daily trip counter (trip)

The daily trip counter $\boxed{\mathbf{A}}$ » Fig. 6 indicates the distance which you have driven since it was last reset - in steps of 100 metres or 1/10 of a mile.

Reset trip counter for the distance driven

> Press and hold the 7 » Fig. 2 on page 10 button.

Odometer

The odometer B » Fig. 6 indicates the total distance the vehicle has travelled.



If the second speed display is enabled on vehicles with a segment display, this speed will be shown instead of the odometer.

Digital clock



First read and observe the introductory information and safety warnings II on page 10.

The clock is set with the buttons 3 and 7 » Fig. 2 on page 10.

Select the display that you wish to change with the button 3 and carry out the change with the button 7.

In vehicles equipped with the MAXI DOT display, it is also possible to set the **clock** in the Time menu » page 29.

Display of the second speed



First read and observe the introductory information and safety warnings II on page 10.

The display can show the current speed in mph¹⁾.

This feature is provided for driving in countries with different speed units.

Maxi DOT display

The display of the second speed can be set in the menu item settings » page 29, Settings.

Seament display

- > Press the 3 > Fig. 2 on page 10 key repeatedly, until the odometer display flashes » page 12.
- > Press the 7 key while the display flashes.

The second speed is displayed instead of the odometer.

The display of the second speed can be disabled in the same way.

Display in rear centre console



Fig. 7 Centre console at rear: Display



-

First read and observe the introductory information and safety warnings 🛄 on page 10.

The time and the outside temperature is displayed on the display in the rear centre console when the ignition is switched on » Fig. 7.

The values are taken over by the instrument cluster.

Auto Check Control



First read and observe the introductory information and safety warnings II on page 10.

Vehicle condition

Certain functions and conditions of individual vehicle systems are checked continuously when the ignition is switched on and also while driving.

Some error messages and other information are displayed in the MAXI DOT display. The messages are displayed simultaneously with the symbols in the MAXI DOT display or with the warning lights in the instrument cluster » page 14.

¹⁾ For models with the speedometer in mph, the second speed is displayed in km/h.

The menu item **Vehicle status** is shown in the main menu of the MAXI DOT display whenever at least one fault message exists. After selecting this menu, the first of the error messages is displayed. Several error messages are shown on the display under the message e.g. **1/3**. This indicates that the first of a total of three error messages is being displayed.

Warning symbols in the MAXI DOT display

الميك	Engine oil pressure too low	» page 16
0	Clutches of the automatic gearbox are too hot	» page 14
9±7;	Check engine oil level, engine oil sensor faulty	» page 18
	Thickness of brake pads	» page 21
<u>[]</u>	Problem with engine oil pressure	» page 14

Problem with the engine oil pressure

If the !> symbol is shown in the MAXI DOT display, you must have your vehicle checked immediately by a specialist garage. The information about the maximum permissible engine speed is displayed together with this symbol.

O Clutches of the automatic gearbox are too hot

A $^{\circ}$ symbol in the MAXI DOT display indicates that the temperature of the automatic gearbox clutches is too high.

The following message is shown in the MAXI DOT display.

Gearbox overheated. Stop! Log book!

a do not continue to drive! Stop the vehicle, switch off the engine, and wait until the **a** icon goes out – risk of gearbox damage! You can continue your journey as soon as the symbol disappears.

WARNING

If you have to stop for technical reasons, then park the vehicle at a safe distance from the traffic, switch off the engine and activate the hazard warning light system » page 56.

Note

- If the MAXI DOT display shows warning messages, these messages must be confirmed in order to access the main menu » page 23.
- As long as the operational faults are not rectified, the symbols are always indicated again. After they are displayed for the first time, the symbols continue to be indicated without any extra messages for the driver.

Warning Lights

Introduction

This chapter contains information on the following subjects:

(P) Handbrake	15
① Brake system	
Seat belt warning light	15
🗀 Generator	
🕶 Open door 🔝	16
🗠 Engine oil pressure 🔝	16
	16
⇔ Bonnet	17
Soot lid	17
😥 😥 Power steering/steering lock (KESSY system)	17
Engine oil level	
🗦 Traction Control System (ASR) 🔝	
Electronic Stability Control (ESC)	18
Antilock brake system (ABS)	
🕩 The rear fog light	
Bulb failure	
Adaptive headlights	
Exhaust inspection system	
™ Glow plug system (diesel engine)	
EPC EPC fault light (petrol engine)	
🗈 Fuel reserve 🔝	20
🍂 Airbag system	
(I) Tyre pressure	21

### Windscreen washer fluid level	_ 21
O Pads	_ 21
□ □	_ 21
© Low beam	
	_ 22
™ Cruise control system	_ 22
Selector lever lock/starting (KESSY system)	_ 22
■ Main beam	_ 22

The indicator lights show certain functions/faults and may be accompanied by audible signals.

WARNING

- If illuminated indicator lights and the corresponding descriptions and warning notes are not observed, this may result in severe injuries or major vehicle damage.
- The engine compartment of your car is a hazardous area. There is a risk of injuries, scalding, accidents and fire when working in the engine compartment, e.g. inspecting and replenishing oil and other fluids. It is essential to observe safety notes » page 206, Engine compartment.

(P) Handbrake



First read and observe the introductory information and safety warnings ! on page 14.

The indicator light ② comes on if the handbrake is applied. An audible warning is also given if you drive the vehicle for at least 3 seconds at a speed of more than 6 km/h.

The following message is shown in the MAXI DOT display.

Release parking brake!

(I) Brake system



First read and observe the introductory information and safety warnings ! on page 14.

The indicator light (i) illuminates if the brake fluid level in the braking system is too low or there is a fault in the ABS.

The following message is shown in the MAXI DOT display.

Brake fluid: Log book!

Stop the vehicle, switch off the engine, and check the level of the brake fluid » page 214 » .

WARNING

- If you have to stop for technical reasons, then park the vehicle at a safe distance from the traffic, switch off the engine and activate the hazard warning light system » page 56.
- The following guidelines should be observed when opening the bonnet and checking the brake fluid level » page 206, Engine compartment.
- If the warning light (1) is displayed simultaneously with warning light (2) » page 19, (3) Antilock brake system (ABS), (3) do not continue your journey! Seek help from a specialist garage.
- A fault to the ABS system or the braking system can increase the vehicle's braking distance risk of accident!

🧸 Seat belt warning light



First read and observe the introductory information and safety warnings 1 on page 14.

The indicator light 4 comes on after the ignition is switched on as a reminder for the driver and front passenger to fasten the seat belt. The indicator light only goes out if the driver or front passenger has fastened his seat belt.

If the seat belt has not been fastened by the driver or front passenger, a permanent warning signal sounds at vehicle speeds greater than 20 km/h and simultaneously the indicator light 4 flashes.

If the seat belt is not fastened by the driver or front passenger during the next 90 seconds, the warning signal is deactivated and the indicator light $\stackrel{4}{\circ}$ lights up permanently.

☐ Generator

First read and observe the introductory information and safety warnings I on page 14.

Seek help from a specialist garage. The electrical system requires checking.

WARNING

If you have to stop for technical reasons, then park the vehicle at a safe distance from the traffic, switch off the engine and activate the hazard warning light system » page 56, Hazard warning light system.

CAUTION

If the $\stackrel{\ \ \, }{}$ warning light (cooling system fault) lights up in addition to the $\stackrel{\ \ \, }{}$ warning light while driving, $\stackrel{\ \ \, }{}$ do not continue to drive! Stop the engine - there is a risk of engine damage!

Open door

First read and observe the introductory information and safety warnings on page 14.

The indicator light \bigcirc comes on, if one or several doors are opened.

WARNING

If you have to stop for technical reasons, then park the vehicle at a safe distance from the traffic, switch off the engine and activate the hazard warning light system » page 56.

📂 Engine oil pressure

First read and observe the introductory information and safety warnings !! on page 14.

When the indicator light is flashing $\[\]$, the engine oil pressure is too low.

The following message is shown in the MAXI DOT display.

Oil pressure: Log book!

Stop the vehicle, switch off the engine, and check the level of the engine oil » page 211.

Even if the oil level is correct, **do not drive any further** if the indicator light is flashing ②. Also do not leave the engine running at an idling speed.

Seek help from a specialist garage.

WARNING

If you have to stop for technical reasons, then park the vehicle at a safe distance from the traffic, switch off the engine and activate the hazard warning light system » page 56.

♣ Coolant



First read and observe the introductory information and safety warnings ! on page 14.

If the indicator light \ddots lights up or flashes, either the coolant temperature is too high or the coolant level is too low.

The following message is shown in the MAXI DOT display.

Check coolant! Log book!

Stop the vehicle, switch off the engine, check the level of the coolant » page 213, and refill the coolant if necessary » page 214.

If the coolant is within the specified range, the increased temperature may be caused by an operating problem at the radiator fan. Check the fuse for the radiator fan, replace if necessary » page 246, Fuses in the engine compartment.

Do not continue driving if the warning light! is lit, even though the coolant level is correct and the fuse for the fan is in working order!

Seek help from a specialist garage.

WARNING

- If you have to stop for technical reasons, then park the vehicle at a safe distance from the traffic, switch off the engine and activate the hazard warning light system » page 56.
- Carefully open the coolant expansion bottle. If the engine is hot, the cooling system is pressurized risk of scalding! It is therefore best to allow the engine to cool down before removing the cap.
- Do not touch the radiator fan. The radiator fan may switch itself on automatically even if the ignition is off.

Bonnet



First read and observe the introductory information and safety warnings H on page 14.

The indicator light \triangleright comes on if the bonnet is unlocked.

WARNING

If you have to stop for technical reasons, then park the vehicle at a safe distance from the traffic, switch off the engine and activate the hazard warning light system » page 56.

Boot lid



First read and observe the introductory information and safety warnings H on page 14.

The indicator light \Leftrightarrow comes on if the boot lid is opened.

WARNING

If you have to stop for technical reasons, then park the vehicle at a safe distance from the traffic, switch off the engine and activate the hazard warning light system » page 56.

😡 😥 Power steering/steering lock (KESSY system)



First read and observe the introductory information and safety warnings 11 on page 14.

Power steering

If the indicator light 😔 lights up, this indicates a partial failure of the power steering and the steering forces can be greater. Seek help from a specialist garage.

If the indicator light e! lights up, this indicates a complete failure of the power steering and the steering assist has failed (significantly higher steering forces). Seek help from a specialist garage.

Steering lock (KESSY system)

- > While the indicator light ⊕ is flashing, the steering lock cannot be released. Further information » page 37, KESSY.
- If the warning light electrical flashes, a signal tone sounds, and the following message appears in the MAXI DOT-display **Steering column lock: Workshop!)**, the electrical steering lock is faulty. Seek help from a specialist garage.
- If the warning light ⊕! flashes, a beep sounds and in the MAXI DOT display the message Steering lock defective appears, then the electric steering lock is broken. Park the car, ⊕ do not continue the journey. After switching off the ignition, it is then no longer possible to lock the steering, to activate the electrical components (e.g. radio, navigation system), to switch on the ignition again and to start the engine. Seek help from a specialist garage.

WARNING

If you have to stop for technical reasons, then park the vehicle at a safe distance from the traffic, switch off the engine and activate the hazard warning light system » page 56.

Note

If the vehicle battery has been disconnected and reconnected, the yellow indicator light @ comes on after switching on the ignition. The indicator light must go out after driving a short distance. Visit a specialist garage if the yellow warning light @ stays on after having started the engine again and driving a short distance.

Engine oil level

First read and observe the introductory information and safety warnings H on page 14.

The indicator light 🗠 lights up (oil quantity too low)

The following message is shown in the MAXI DOT display.

Check oil level!

Stop the vehicle, switch off the engine, and check the level of the engine oil » page 211.

The indicator light will go out if the bonnet is left open for more than 30 seconds. If no engine oil has been replenished, the indicator light will come on again after driving about 100 km.

The indicator light 🗠 flashes (engine oil level sensor faulty)

The following message is shown in the MAXI DOT display.

Oil sensor: Workshop!

If the engine oil level sensor is faulty, the indicator light flashes \cong several times and an audible signal sounds when the ignition is turned on.

Seek help from a specialist garage.

WARNING

If you have to stop for technical reasons, then park the vehicle at a safe distance from the traffic, switch off the engine and activate the hazard warning light system » page 56.

5 Traction Control System (ASR)



First read and observe the introductory information and safety warnings 1. on page 14.

The indicator light flashes to show that the ASR is currently operating.

If the indicator light eta comes on immediately after starting the engine, the ASR can be switched off for technical reasons. Switch the ignition off and on again. If the indicator light does not light up after you switch the engine back on, the ASR is fully functional again.

If the indicator light 👭 lights up, there is a fault in the ASR.

The following message is shown in the MAXI DOT display.

Error: Traction control (ASR)

Seek help from a specialist garage.

Further information » page 151, Traction Control System (TCS).



Note

If the vehicle's battery has been disconnected and reconnected, the indicator light \mathfrak{S} comes on after switching on the ignition. The indicator light should go out after driving a short distance.

Electronic Stability Control (ESC)



First read and observe the introductory information and safety warnings 1. on page 14.

The indicator light flashes to show that the ESC is currently operating.

If the indicator light eta comes on immediately after you start the engine, the ESC might be switched off due to technical reasons. Switch the ignition off and on again. If the indicator light does not light up after you switch the engine back on, the ESR is fully functional again.

If the warning light lights up ! there is a fault in the ESC system.

The following message is shown in the MAXI DOT display.

Error: Electronic Stability Control (ESC)

Seek help from a specialist garage.

Further information » page 150, Electronic Stability Control (ESC).



Note

If the vehicle's battery has been disconnected and reconnected, the indicator light 3 comes on after switching on the ignition. The indicator light must go out after driving a short distance.

(ABS)

First read and observe the introductory information and safety warnings 11 on page 14.

If the indicator light Θ lights up, there is a fault in the ABS.

The following message is shown in the MAXI DOT display.

Error: ABS

The vehicle will only be braked by the normal brake system without the ABS. Seek help from a specialist garage.

WARNING

- If you have to stop for technical reasons, then park the vehicle at a safe distance from the traffic, switch off the engine and activate the hazard warning light system » page 56.
- If the warning light (1) » page 15 is displayed together with warning light (○),
 do not continue your journey! Seek help from a specialist garage.
- A fault to the ABS system or the braking system can increase the vehicle's braking distance – risk of accident!

↑ The rear fog light

First read and observe the introductory information and safety warnings !! on page 14.

The warning light (‡ comes on when the rear fog lights are operating » page 55.

Bulb failure

First read and observe the introductory information and safety warnings ! on page 14.

The indicator light % comes on if a bulb is faulty:

- > within a few seconds of the ignition being switched on;
- > when a light with a defective bulb is turned on.

The following message, for example, may be shown in the MAXI DOT display.

INFORMATION Check front right low beam!

Adaptive headlights

First read and observe the introductory information and safety warnings !! on page 14.

If the indicator light \Re flashes for 1 minute while driving or after switching on the ignition, there is a problem with the adaptive headlights » page 54.

The following message is shown in the MAXI DOT display.

Cornering light (AFS) has no function. Log book!

Exhaust inspection system



If the indicator light lights up, there is a fault in the exhaust inspection system. The engine control unit allows the vehicle to run in emergency mode.

Seek help from a specialist garage.

or Glow plug system (diesel engine)

First read and observe the introductory information and safety warnings !! on page 14.

The indicator light ∞ comes on after the ignition has been switched on. The engine can be started immediately after the pre-glow indicator light goes out.

There is a fault in the glow plug system if the indicator light ∞ does not come on at all or lights up continuously.

If the indicator light ∞ begins to **flash** while driving, a fault exists in the engine control. The engine control unit allows the vehicle to run in emergency mode.

Seek help from a specialist garage.

EPC EPC fault light (petrol engine)

First read and observe the introductory information and safety warnings 11 on page 14.

If the indicator light EPC lights up, there is a fault in the engine control. The engine control unit allows the vehicle to run in emergency mode.

Seek help from a specialist garage.

Diesel particulate filter (diesel engine)

First read and observe the introductory information and safety warnings • on page 14.

The diesel particulate filter separates the soot particles from the exhaust. The soot particles collect in the diesel particulate filter where they are burnt on a regular basis.

If the indicator light — lights up, soot has accumulated in the filter.

In order to clean the filter, and where traffic conditions permit » \blacksquare , the vehicle should be driven at an even speed of at least $60 \, \text{km/h}$ at engine speeds of $1\, 800 - 2\, 500 \, \text{rpm}$ for at least $15 \, \text{minutes}$ or until the warning light goes out with the 4th or 5th gear engaged (automatic gearbox: position S) when the traffic situation permits it.

The indicator light — only goes out after the diesel particulate filter has been successfully cleaned.

If the filter is not properly cleaned, the indicator light \Longrightarrow does not go out and the indicator light ∞ begins to flash.

The following message is shown in the MAXI DOT display.

Diesel particulate filter: Log book!

The engine control unit allows the vehicle to run in emergency mode. After switching the ignition off and on again the indicator light, the indicator light salso lights up.

Seek help from a specialist garage.

WARNING

- The diesel particle filter achieves very high temperatures. Therefore do not park in areas where the hot filter can come into direct contact with dry grass or other combustible materials there is the risk of fire!
- Always adjust your speed to suit weather, road, region and traffic conditions. The recommendations indicated by the indicator light must not tempt you to disregard the national regulations for road traffic.

CAUTION

As long as the indicator light — lights up, one must take into account an increased fuel consumption and in certain circumstances a power reduction of the engine.

Note

- To assist the combustion process of the soot particles in the filter, we recommend that regularly driving short distances be avoided.
- Using diesel fuel with an increased sulphur content can considerably reduce the lifespan of the filter. A ŠKODA service partner will be able to tell you which countries use diesel fuel with a high sulphur content.
- If the engine is turned off during the filter cleaning process or shortly afterwards, the cooling fan may turn on automatically for a few minutes.

₱ Fuel reserve



First read and observe the introductory information and safety warnings H on page 14.

The indicator light \bigcirc will come on if the fuel level is less than 9 litres.

The following message is shown in the MAXI DOT display.

Please refuel. Range: ... km



Note

The text in the display goes out only after refuelling and driving a short distance.

Airbag system

First read and observe the introductory information and safety warnings •• on page 14.

If the indicator light 🤌 lights up, there is a fault in the airbag system.

The following message is shown in the MAXI DOT display.

Error: Airbag

The functionality of the airbag system is monitored electronically even if one of the airbags is switched off.

If a front, side or head airbag or belt tensioner has been switched off using the vehicle system tester:

➤ The indicator light \$\mathbb{S}\$ lights up for around 4 seconds after the ignition is switched on and then flashes for around 12 seconds.

The following message is shown in the MAXI DOT display.

Airbag/belt tensioner deactivated.

If the air bag was switched off using the key-operated switch on the side of the dash panel on the passenger side:

- ➤ The indicator light

 comes on for around 4 seconds after the ignition has been switched on.
- > The deactivated air bag is indicated by the illumination of the warning light » page 184**PASSENGER AIR BAG OFF** in the middle of the dash panel .

WARNING

If there is a fault, have the airbag system checked immediately by a specialist garage. Otherwise, there is a risk of the airbag not being activated in the event of an accident.

Tyre pressure

First read and observe the introductory information and safety warnings ... on page 14.

The indicator light (1) lights up, if there is a substantial drop in inflation pressure in one of the tyres. Check and adjust the pressure in all tyres » page 221, Service life of tyres.

If the indicator light (1) lights up, there is a fault in the system.

Seek help from a specialist garage.

Further information » page 223, Tyre pressure monitor.

i n

Note

If the battery has been disconnected, the indicator light (1) illuminates after the ignition is switched on. The indicator light must go out after driving a short distance.

Windscreen washer fluid level



If the windscreen washer fluid level is too low, the indicator light $\mbox{\textcircled{\#}}$ comes on.

The following message is shown in the MAXI DOT display.

Top up wash fluid!

Top up with liquid » page 209, Windscreen washer system.

O Pads



First read and observe the introductory information and safety warnings ! on page 14.

If the indicator light () is slit, the brake pads are worn.

The following message is shown in the MAXI DOT display.

Check brake wear!

Seek help from a specialist garage.

⟨□ □ Turn signal system



First read and observe the introductory information and safety warnings 1 on page 14.

Either the left \diamondsuit or right \diamondsuit indicator light flashes depending on the position of the turn signal lever.

If a turn signal light fails, the indicator light flashes at twice its normal rate.

Switching off the hazard indicator light system is switched on will cause all of the turn signal lights as well as both indicator lights to flash.

Further information » page 53, Turn signal and main beam.

ED Low beam

First read and observe the introductory information and safety warnings !! on page 14.

The indicator light © comes on when low beam is selected » page 51.

Fog lights

First read and observe the introductory information and safety warnings ... on page 14.

The indicator light \$0 comes on when the fog lights are operating » page 55.

n Cruise control system

First read and observe the introductory information and safety warnings I on page 14.


The indicator light to comes on when the cruise control is operating with page 157.

Selector lever lock/starting (KESSY system)

First read and observe the introductory information and safety warnings I on page 14.

If the indicator light \odot lights up, operate the brake pedal. This is necessary to move the selector lever from position P and N » page 140or to start the engine in vehicles with the KESSY system » page 135.

Main beam

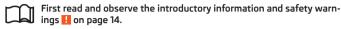

The indicator light to comes on when the main beam or headlight flasher are selected » page 53.

Information system

Driver information system

Introduction

This chapter contains information on the following subjects:

Using the information system	23
Ice warning	24
Gear recommendation	24
Door, boot lid or bonnet warning	25
Compass display	25

The information system provides the driver with alerts and messages about individual vehicle systems. This information and advice is shown in the instrument cluster display or indicated by the lighting up of the corresponding warning light in the instrument cluster.

The information system provides the following information.

- > Ice warning » page 24.
- > Recommended gear » page 24.
- > Door, boot lid or bonnet warning » page 25.
- > Compass display » page 25.
- > Multi-function display (MFA) » page 25.
- > Warning against excessive speed » page 27.
- > MAXI DOT display » page 28.
- > Service interval display » page 30.
- > Auto Check Control » page 13.
- > Selector lever positions for an automatic gearbox » page 140.

!

WARNING

Concentrate fully at all times on your driving! As the driver, you are fully responsible for the operation of your vehicle.

Using the information system



Fig. 8 Buttons/dial: on the operating lever / on the multifunction steering wheel



First read and observe the introductory information and safety warnings 1 on page 23.

On vehicles with a segment display of the multi-function display (MFA) » page 25 the information system can be controlled with the lever.

On vehicles with a MAXI DOT display > page 28 the information system can be operated with the control lever and the buttons on the multifunction steering wheel.

Description of the operation

Button/wheel	Action	Operation
	push up or down briefly	Select data
Α	push up or down briefly	Set data values
	Press and hold button	Call up main menu of the MAXI DOT display
В	press briefly	Show data
В	press briefly	Confirm data
	Press and hold button	Call up main menu of the MAXI DOT display
С	press briefly	to go back one level in the menu of the MAXI DOT display
	Turn upwards or downwards	Select data
	Turn upwards or downwards	Set data values
D	press briefly	Show data
	press briefly	Confirm data

Ice warning



First read and observe the introductory information and safety warnings 🖪 on page 23.

Prompt in the MAXI DOT display

If the outside temperature while driving drops to below +4°C, the following icon appears on the display in front of the temperature display *. An audible signal is emitted.

If the outside temperature is already below +4°C when turning the ignition on, the * icon appears immediately. An audible signal is emitted.

Prompt in the segment display

If the outside temperature while driving drops to below +4°C, the temperature display » page 26, Outside temperature will show up with the following icon in front *. An audible signal is emitted.

If the outside temperature is already below +4°C when turning the ignition on, the temperature display and the * icon appear immediately. An audible signal is emitted.

After pressing button A » Fig. 8 on page 23, the information which was shown last is indicated.

WARNING

Even at temperatures of around +4 °C, black ice may still be on the road surface! You should therefore not only rely on the outside temperature display for accurate information as to whether there is ice on the road.

Gear recommendation



Fig. 9 Information on the selected gear / Gear recommendation



First read and observe the introductory information and safety warnings II on page 23.

Information on the selected gear

The currently engaged gear A is shown in the display » Fig. 9.

Recommended gear

In order to minimise the fuel consumption, a recommendation for shifting into another gear is indicated in the display.

If the system recognises that it is beneficial to change gear, an arrow $B^{(i)}$ is displayed. The arrow points up or down, depending on whether you should shift into a higher or lower gear.

The gear recommendation is intended only for vehicles with a manual transmission or for vehicles with an automatic transmission in manual shift mode (Tiptronic).

For vehicles with manual gearshifting, [C] indicates the recommended gear.

CAUTION

The driver is always responsible for selecting the correct gear in different driving situations, such as overtaking.

Door, boot lid or bonnet warning



First read and observe the introductory information and safety warnings 🔢 on page 23.

Vehicles with a MAXI DOT display

If at least one door, the boot or bonnet is open, the display indicates the relevant open door, boot or bonnet vehicle icon.

An acoustic signal will also sound if you drive the vehicle above 6 km/h.

Vehicles with a segment display

If at least one door or the boot or bonnet is open, the indicator lights \mathcal{P} or $\boldsymbol{\Leftrightarrow}$ and come on in the instrument cluster » page 14, Warning Lights.

Compass display



First read and observe the introductory information and safety warnings II on page 23.

For vehicles with a factory fitted navigation system, an abbreviation for each point of the compass (depending on the current direction of travel) is shown on the top left-hand corner of the 2)display.

The abbreviation for each point of the compass is displayed only when the ignition is on.

Multifunction display (MFA)

Introduction

This chapter contains information on the following subjects:

Memory	26
Information overview	26
Warning against excessive speeds	28

The driving data is displayed on the multifunction display.

The multifunction display can only be operated when the ignition is switched on. After the ignition is switched on, the function that was last selected before switching off the ignition is displayed.

For vehicles with a MAXI DOT display, the menu item MFA must be selected and confirmed in the main menu » page 28, MAXI DOT display.

On vehicles with a MAXI DOT display, there is an option to fade out some of the information » page 29, Settings.

On vehicles with a segment display, the B arrow is displayed behind the C specification.

²⁾ Applies to vehicles using the MAXI DOT display.

WARNING

- Concentrate fully at all times on your driving! As the driver, you are fully responsible for the operation of your vehicle.
- Even at temperatures of around +4 °C, black ice may still be on the road surface! You should therefore not only rely on the outside temperature display for accurate information as to whether there is ice on the road.

Note

- In certain national versions the displays appear in the Imperial system of measures.
- If the display of the second speed is activated in mph, the current speed is not indicated in km/h on the display.
- The amount of fuel consumed will not be indicated.

Memory



Fig. 10
Multi-function display - Display example of the memory



The multifunction display is equipped with two automatic memories, 1 and 2. The selected memory is shown in the Display » Fig. 10.

Single-trip memory (memory 1)

The single-trip memory collates the driving information from the moment the ignition is switched on until it is switched off. New data will also flow into the calculation of the current driving information if the trip is continued within 2 hours after switching off the ignition. If the trip is interrupted for more than 2 hours, the memory is automatically erased.

Total-trip memory (memory 2)

The total trip memory collates the data from any number of individual trips up to a total of 19 hours and 59 minutes or a 1999 km distance or, for vehicles with a MAXI DOT display, 99 hours and 59 minutes, or a 9999 km distance. The memory is deleted when either of these limits is reached and the calculation starts all over again.

Unlike the single-trip memory, the total-trip memory is not deleted after a period of interruption of driving of 2 hours.

Select memory

- > Select the corresponding element of the multi-function display » page 23, *Using the information system.*
- > Press button **B** or the adjustment wheel **D** » Fig. 8 on page 23 briefly.

Reseting

- > Select the corresponding element of the multi-function display » page 23, *Using the information system*.
- > Select the desired memory.
- > Press and hold button B or adjustment wheel D » Fig. 8 on page 23.

The following values of the selected memory are set to zero.

- > Average fuel consumption.
- > Distance driven.
- > Average speed.
- > Driving time



Note

All information in the memory 1 and 2 is erased if the battery of the vehicle is disconnected.

Information overview



First read and observe the introductory information and safety warnings 1 on page 25.

Outside temperature

The current outside temperature is displayed.

For vehicles with a MAXI DOT display this information is always shown.

Driving time

The driving time which has elapsed since the memory was last erased appears in the display. If you want to measure the time travelled from a particular moment in time on, at this moment, reset the memory by setting the button to zero » page 26, *Memory*.

The maximum time indicated in both memories is 19 hours and 59 minutes and on vehicles which are fitted with a MAXI DOT display, it is 99 hours and 59 minutes. The indicator is set back to zero if this period is exceeded.

Current fuel consumption

The current fuel consumption level is displayed in litres/100 km¹). You can use this information to adapt your driving style to the desired fuel consumption.

The display appears in litres/hour if the vehicle is stationary or driving at a low speed 2 .

Average fuel consumption

The average fuel consumption since the memory was last erased is displayed in litres/100 $km^{\eta}.$

If you wish to determine the average fuel consumption over a certain period of time, you must set the memory at the start of the new measurement to zero » page 26, *Memory*. After erasing the memory, no value is displayed until you have driven approx. 300 m.

The display is updated regularly while you are driving.

Range

The estimated range is displayed in kilometres. It indicates the distance you can still drive with your vehicle based on the level of fuel in the tank and the same style of driving.

The display is shown in steps of 10 km. After lighting up of the indicator light the display is shown in steps of 5 km.

The fuel consumption over the last 50 km is used to calculate the information. The range will increase if you drive in a more economical manner.

If the memory is set to zero (after disconnecting the battery), a fuel consumption of 10 I./100 km is calculated for the range; afterwards the value is updated according to the style of driving.

The distance travelled since the memory was last erased is displayed » page 26, *Memory*. If you want to measure the distance travelled from a particular moment in time on, at this moment, reset the memory by setting the button to zero » page 26, *Memory*.

The maximum distance indicated in both memories is 1999 km or 9 999 km on vehicles with a MAXI DOT display. The indicator is set back to zero if this period is exceeded.

Average speed

The average speed since the memory was last erased is displayed in km/ hour » page 26, *Memory*. To determine the average speed over a certain period of time, set the memory to zero at the start of the measurement » page 26, *Memory*.

After erasing this data, no value appears in the display until you have driven approx. 300 m.

The display is updated regularly while you are driving.

Current speed

The current speed, which is identical to the display of the speedometer $\fbox{2}$ » Fig. 2 on page 10 is displayed.

Oil temperature3)

The current engine oil temperature is displayed. If the oil temperature is lower than 50 °C or if a fault in the system for checking the oil temperature is present, only - -.- is displayed instead of the oil temperature.

Warning against excessive speeds

The warning that the speed limit is being exceeded can be enabled / disabled » page 28, Warning against excessive speeds in the display.

Distance travelled

¹⁾ On some models in certain countries, the display appears in kilometres/litre.

²⁾ On some models in certain countries, - -.- km/ltr. is displayed when the vehicle is stationary.

³⁾ Applies to vehicles using the MAXI DOT display.

Warning against excessive speeds



First read and observe the introductory information and safety warnings H on page 25.

Adjust the speed limit while the vehicle is stationary

- > Select the menu item Speed warning (MAXI DOT display) or

 ⊕ (segment display).
- > Activate the speed limit option by confirming this menu item¹⁾.
- > Set the desired speed limit, e.g. 50 km/h.
- > Store the speed limit by confirming the set value, or wait several seconds; your settings will be saved automatically.

The speed limit can be adjusted from 30 km/h to 250 km/h in 5 km/h increments.

Adjusting the speed limit while the vehicle is moving

- > Select the menu item Speed warning (MAXI DOT display) or ⊕ (segment display).
- > Drive at the desired speed, e.g. 50 km/h.
- > Confirm the current speed as the speed limit.

If you wish to adjust the set speed limit, you can do so in 5 km/h intervals (e.g. the accepted speed of 47 km/h increases to 50 km/h or decreases to 45 km/h).

> Store the speed limit, or wait several seconds; your settings will be saved automatically.

Change or disable speed limit

- > Select the menu item Speed warning (MAXI DOT display) or

 ⊕ (segment display).
- > By confirming the stored value, the speed limit is disabled.
- > By reconfirming, the option to change the speed limit is activated.

If the set speed limit is exceeded, an audible signal will sound as a warning. The menu item **Speed warning** (MAXI DOT display) or Θ (Segment display) appears in the display at the same time as the set threshold.

The set driving mode is stored even after switching the ignition on and off.

MAXI DOT display

Introduction

This chapter contains information on the following subjects:

Main menu	28
Settings	. 29

The MAXI DOT display provides you with information about the **current operating state of your vehicle**. It also provides you with data relating to the radio, mobile phone, multifunction display (MFA), navigation system, automatic gearbox » page 139 and devices connected via the MDI input.

1

WARNING

Concentrate fully at all times on your driving! As the driver you are fully responsible for the operation of your vehicle.

Main menu



First read and observe the introductory information and safety warnings ... on page 28.

Press and hold button A or C » Fig. 8 on page 23 to activate the **MAIN MENU**. By briefly pressing the C button you will reach one level higher.

Overview of the menu items in the main menu.

- MFA (Multifunction display) » page 25
- Audio » Operating instructions for the radio
- Navigation » Operating instructions for the navigation system
- **Phone** » page 110;
- Aux. heating » page 107
- Assist systems » page 161
- Vehicle status » page 13
- Settings » page 29

The **Audio** and **Navigation** menu items are only displayed when the factory-fitted radio or navigation system is switched on.

¹⁾ If no value is set the output value 30 km/h is automatically displayed.

The **Aux**. **heating** menu item is only displayed if the vehicle is equipped with factory-fitted auxiliary heating.

The menu item **Assistants** is only displayed if the vehicle is fitted with fatigue detection.



Note

- If warning messages are displayed, these messages must be verified to access the main menu » page 23, *Using the information system*.
- If the display is not activated at that moment, the menu always shifts to one of the higher levels after approx. 10 seconds.
- Using the factory-fitted radio or navigation system » Radio operating instructions or » navigation system operating instructions.

Settings



First read and observe the introductory information and safety warnings H on page 28.

You can change certain settings by means of the MAXI DOT display. The current menu item is shown in the top of the display under a line.

You can select the following menu options:

Language

You can set the language for the display texts here.

Automatic blind (Combi)

This is where the automatic roll-up function of the boot roll cover can be deactivated/activated when opening the boot lid.

MFD displays

Activate or deactivate certain displays of the multifunction display here.

Comfort

The following functions can be activated, deactivated or adjusted here:

ically clos- locked ve- set and it oramic tilt/ oprox.
e activation
utomatic stem.
v or for all
wering on reverse
right exte-

- a) This function is only available on vehicles with a rain sensor.
- b) This function is only available on vehicles with an electrically adjustable driver seat.

Lights and Visibility

The following functions can be activated, deactivated or adjusted here:

Activate/deactivate and adjust the light duration of the COMING HOME function.
Switch on/off and adjust the light duration of the LEAVING HOME function.
Activate/deactivate and adjust the footwell light intensity.
Activate/deactivate "DAY LIGHT" function.
Activate/deactivate the function of the automatic rear window wiping.
Activate/deactivate the lane ch. flash function.
Activate/deactivate the travel mode feature.
Restore the factory setting for the lighting.

Time

The time, time format (12 or 24 hour indicator) and the changeover between summer/winter time can be set here.

Winter tyres

Here, you can set the speed at which an audible signal should sound. This function is, for example, used for winter tyres where the maximum permissible speed is lower than the maximum speed of the vehicle » page 220.

The following message appears in the display when exceeding the speed limit:

Winter tyres: maximum ... km/h.

Units of measurement

The units for the temperature, consumption and distance driven can be set here.

Assistants

The tones of the audible signals for the parking aid can be adjusted here.

Alt. speed dis.

Here, the display of the second speed in mph¹⁾ can be activated.

Service

Here you can have the remaining kilometres and days until the next service interval displayed, and reset the Service Interval Display.

Factory setting

Here, the factory settings of the display can be restored.

Service Interval Display

Introduction

This chapter contains information on the following subjects:

Before the next service interval is reached, a message concerning the kilometres and days remaining until the next service is due is shown for about 10 seconds after the ignition is switched on.

The kilometre indicator or the days indicator reduces in steps of 100 km or, where applicable, days until the service due date is reached.



Note

- Information is retained in the Service Interval Display even after the vehicle battery is disconnected.
- If the instrument cluster is exchanged after a repair, the correct values must be entered in the counter for the Service Interval Display. This work is carried out by a specialist garage.
- For more information on the service intervals » page 191, Service intervals.

Prompt in the segment display

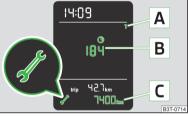


Fig. 11
Segment display: Example of a message



First read and observe the introductory information given on page 30.

Explanation of graphic

- service interval due
- A Distinction of the type of service
- B Icon ③ and the days remaining until the next service interval
- C Kilometres remaining until the next service interval²⁾

Oil change service

If an oil change interval is due, the *f icon and the number 1 in position A are displayed for approx. 10 seconds » Fig. 11.

¹⁾ For models with the speedometer in mph, the second speed is displayed in km/h.

²⁾ The kilometres remaining until the next service interval are displayed instead of the odometer.

The days and kilometres remaining until the next service interval are displayed at the same time.

As soon as the due date for the service is reached, the flashing icon ${\mathscr I}$ and the message **OIL CHNG** appears in the display for about 20 seconds after the ignition has been switched on.

Inspection

If an **inspection** is due, the \mathscr{L} icon and the number **2** in position $\boxed{\mathbf{A}}$ are displayed for approx. 10 seconds » Fig. 11.

The days and kilometres remaining until the next service interval are displayed at the same time.

As soon as the due date for the service is reached, the flashing key symbol ${\mathscr I}$ and the text INSPEC _ appears in the display for about 20 seconds after the ignition has been switched on.

Display the days and distance until the next service interval

You can press button 3 » Fig. 2 on page 10 continuously to display the remaining distance and days until the next service interval whenever the ignition is switched on.

The \not symbol and the distance and days remaining until next service interval appear in the display for about 10 seconds.

The distance and the days remaining until the next **oil change interval** are displayed first; after pressing button 3 again, the distance and the days remaining until the next **inspection** are displayed.

Prompt in the MAXI DOT display



First read and observe the introductory information given on page 30.

Oil change service

If an oil change service is due, the message Oil change in ... km or days appears.

As soon as the service interval date has arrived, the message **Oil change now!** appears once the ignition has been switched on.

Inspection

If an inspection is due, the message Inspection in ... km or ... days appears.

As soon as the service interval date has arrived, the message **Inspection now!** appears once the ignition has been switched on.

Displaying the distance and days until the next service interval

You can display the remaining distance and days until the next service interval whenever the ignition is switched on in menu **Settings** » page 29.

The following message is displayed for 10 seconds.

Oil change ... km / ... days

Inspection ... km / ... days

Unlocking and opening

Unlocking and locking

Introduction

This chapter contains information on the following subjects:

Vehicle key	33
Unlock/lock with remote control	33
Unlocking/locking - KESSY	34
Safe securing system	35
Individual settings	35
Locking/unlocking the vehicle from the inside	36
Child safety lock	36
Opening/closing a door	37

Your car is equipped with a central locking system.

The central locking system allows you to lock and unlock all doors, the fuel filler flap and tailgate at the same time based on the current setting $^{\eta}$.

The safe securing system » page 35 is integrated in the central locking system. Once the car is locked from the outside, the door locks are automatically blocked by the safe securing system » ...

The following takes place after unlocking¹⁾.

- > The doors, the boot lid and the fuel filler flap are unlocked.
- > The interior light, which is switched by the door contact, comes on.
- > The safe securing system is switched off.
- > The indicator light in the driver door stops flashing.
- > The anti-theft alarm system is deactivated.

The following takes place after locking¹⁾.

- The doors, the boot lid and the fuel filler flap are locked.
- > The interior lights switched by the door contact come on.
- > The safe securing system is switched on.
- > The indicator light in the driver door begins flashing.
- > The anti-theft alarm system is activated.

Displaying an error

If the indicator light in the driver's door initially flashes quickly for around 2 seconds, and then lights up for 30 seconds without interruption before flashing again slowly, you will need to seek the assistance of a specialist garage.

ij

WARNING

- If the car is locked and the safe securing system is activated, there must not be any person in the car as it is then not possible to open either a door or a window from the inside. The locked doors make it more difficult for rescuers to get into the vehicle in an emergency risk to life!
- Locked doors prevent unwanted entry into the vehicle from outside, for example at road crossings.

i

Note

- In the event of an accident in which the airbags are deployed, the locked doors are automatically unlocked in order to enable rescuers to gain access to the vehicle.
- In case of failure of the central locking the driver's door can only be unlocked or locked with the key. The other doors and the tailgate can be emergency locked or emergency released.
- Emergency locking of the door » page 240.
- Emergency unlocking of the boot lid » page 241.

 $^{^{1)}\,\,}$ Depending on the individual setting » page 35 .

Vehicle key



Fig. 12 Remote control key



First read and observe the introductory information and safety warnings ! on page 32.

Two remote control keys are provided with the vehicle » Fig. 12.

The transmitter with the battery is housed in the handle of the remote control key. The receiver is located in the interior of the vehicle.

The operating range of the remote control key is approx. 30 m. But this range of the remote control can be reduced if the batteries are weak.

The remote control key has a fold-open key bit which can be used for unlocking and locking the car manually and also for starting the engine.

The spare key must by initialised by a specialist garage after repair or replacement of the receiver unit. Only then can the remote control key be used again.

WARNING

- Always withdraw the key whenever you leave the vehicle even if it is only for a short time. This is particularly important if children are left in the vehicle. Otherwise, the children might start the engine or operate electrical equipment (e.g. power windows) risk of injury!
- Do not withdraw the ignition key from the ignition lock until the vehicle has come to a stop. The steering lock might otherwise engage unintentionally risk of accident!

CAUTION

- Each key contains electronic components; therefore it must be protected against moisture and severe shocks.
- Keep the groove of the keys absolutely clean. Impurities (textile fibres, dust, etc.) have a negative effect on the functionality of the locking cylinder and ignition lock.
- The battery must be replaced if the central locking or anti-theft alarm system does react to the remote control at less than approx. 3 metres away » page 239.



Note

If you lose a key, please contact a specialist garage, who will be able to provide you with a new one.

Unlock/lock with remote control



Fig. 13
Remote control key



First read and observe the introductory information and safety warnings ... on page 32.

Explanation of graphic

- ⊕ Unlocking the vehicle
- ⊟ Locking the vehicle
- ⇔ Unlocking the boot lid
- A Folding out/folding up of the key bit
- **B** Warning light

Unlocking

The turn signal lights flash twice as confirmation that the vehicle has been unlocked.

If you unlock the vehicle and do not open a door or the boot lid within the next 30 seconds, the vehicle will lock again automatically and the safelock system or anti-theft alarm system will be switched on. This function is intended to prevent the car being unlocked unintentionally.

The seat and mirror are adjusted after the vehicle is unlocked » page 69.

Locking

The turn signal lights flash once as confirmation that the vehicle has been locked.

If the doors or the boot lid remain open after the vehicle has been locked, the turn signal lights do not flash until they have been closed.

The current position of the seat and mirror after the vehicle is locked » page 69.

Checking the battery condition

The battery is empty if the red warning icon B » Fig. 13 does not flash when you press a button on the remote control key. Replace the battery » page 239.

WARNING

If the car is locked from the outside and the safelock system is switched on, there must not be any person in the car as it is then not possible to open either a door or a window from the inside. The locked doors make it more difficult for rescuers to get into the vehicle in an emergency – risk to life!

CAUTION

- Only operate the remote control when the doors and boot lid are closed and the vehicle is in your line of sight.
- If the driver door is open, the vehicle cannot be locked using the remote control key.
- The operation of the remote control may temporarily be affected by signal interference from transmitters close to the car and which operate in the same frequency range (e.g. mobile phone, TV transmitter).

Note

For vehicles with anti-theft alarm the acoustic signals can also be activated/deactivated by locking/unlocking » page 29.

Unlocking/locking - KESSY

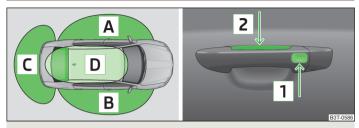


Fig. 14 KESSY: Name of the zones/sensors in the handle of the front door



First read and observe the introductory information and safety warnings ! on page 32.

The KESSY system (Keyless Entry Start Exit System) enables unlocking and locking of the vehicle without actively using the remote control key. The key must be in one of the areas [A.] [B] or [C] » Fig. 14 (about 1.5 meters away from the vehicle).

Unlocking

> Grab the door handle of the front door or cover the sensor 2 » Fig. 14 with the whole palm of your hand » ...

Locking

> Touch the sensor 1 » Fig. 14 with your fingers.

On vehicles fitted with automatic gearbox, the selector lever must be moved into the position **P** before unlocking.

Unlocking the boot lid

> Press the button in the handle of the boot lid » page 39.

Switching off the safelock system

> Use your fingers to touch the sensor 1 twice within 2 seconds.

Unlocking or locking areas

- A Front door left
- **B** Front door right
- C Luggage compartment lid

If you cover the sensor 2 at the same time as the sensor 1» Fig. 14 when unlocking the vehicle, it is not unlocked.

If the vehicle is locked via the sensor 1, it will not be possible to unlock it again in the following 2 seconds via the sensor 2 - prevents accidental unlocking.

The KESSY system can find the valid key, even if it was left in the front of the vehicle's roof for example D » Fig. 14. It is therefore not always necessary to know where the kev is.

Always check to see whether the vehicle is locked.

Further information about the KESSY system » page 37.



CAUTION

- Do not use objects which might prevent direct contact between the hand and the sensor.
- Some types of gloves can impair the function of the grip sensor.
- After leaving the vehicle, it does not lock automatically, the procedure for locking the vehicle must therefore be observed.
- If the battery in the key is weak or discharged, the vehicle may not be unlocked or locked via the KESSY system. In this case, use the emergency unlocking or emergency locking on the driver's door » page 240.

Safe securing system



First read and observe the introductory information and safety warnings 🔢 on page 32.

The door locks are blocked automatically if the vehicle is locked from the outside. Afterwards, it is not possible to open the doors with the door handle either from the inside or from the outside.

This fact is pointed out by the following message on the display of the instrument cluster after switching out the ignition.

Observe SAFE locking! Log book!

CHECK SAFELOCK

If the vehicle is locked and the safe securing system is switched off, the door can be opened separately from the inside by a single pull on opening lever.

Switching off

The safelock can be switched off by locking twice within 2 seconds.

Switching on

The safelock switches on automatically the next time the vehicle is locked and unlocked.

Switch-on display

The indicator light flashes for around 2 seconds in quick succession, afterwards it begins to flash evenly at longer intervals.

Switch-off display

The indicator light in the driver door flashes for about 2 seconds fast, goes out and starts to flash at longer intervals after about 30 seconds.



WARNING

If the car is locked and the safe securing system is activated, there must not be any person in the car as it is then not possible to open either a door or a window from the inside. The locked doors make it more difficult for rescuers. to get into the vehicle in an emergency - risk to life!



н

Note

This function only applies to certain countries.

Individual settings



First read and observe the introductory information and safety warn-First read and obserings I on page 32.

The following central locking functions can be set via the MAXI DOT display » page 29, Settings.

Opening a single door

This function makes it possible to only unlock the driver's door. The other doors, the fuel filler flap and the boot lid remain locked and are only unlocked after being opened again.

Unlocking doors on one side of a vehicle

This function enables you to unlock both doors on the driver's side. The other doors, the fuel filler flap and the boot lid remain locked and are only unlocked after being opened again.

Unlocking the vehicle with the KESSY system

This function enables you to unlock all the doors, individual doors, both doors on the left or right vehicle side. The other doors, the fuel filler flap and the boot lid remain locked and are only unlocked after being opened again.

Automatic locking/unlocking

All doors are locked from a speed of around 15 km/h. The button in the handle of the boot lid is deactivated.

If the ignition key is withdrawn, the car is then automatically unlocked again. In addition, it is possible for the driver or front passenger to unlock the car by pressing the central locking button θ .

The vehicle doors can be unlocked and opened at any time by pulling once on the door opening lever.

Locking/unlocking the vehicle from the inside



Fig. 15 **Central locking button**



First read and observe the introductory information and safety warnings 1 on page 32.

If the vehicle was not locked from the outside, it can also be unlocked and locked with the rocker switch on the door opening lever of the driver or front passenger door » Fig. 15 even without the ignition switched on. While a door is opened, the vehicle cannot be locked.

Locking

> Press the button ⊕/» Fig. 15.

The symbol Θ in the button comes on.

Unlocking

➤ Press the button ₽/» Fig. 15.

The symbol Θ in the button is no longer illuminated.

The following applies if your vehicle has been locked using the central locking button.

- > It is not possible to open the doors or the boot lid from the outside (safety feature, e.g. when stopping at traffic lights etc.).
- The doors can be unlocked and opened from the inside by a single pull on the opening lever of the respective door.
- In the event of an accident in which the airbags are deployed, the locked doors are automatically unlocked from the inside in order to enable rescuers to gain access to the vehicle.

WARNING

- Doors locked from the inside make it difficult for rescuers to get into the vehicle in an emergency risk to life!
- Never leave children unattended in the vehicle.
- If the safelock system is switched on » page 35, the door opening lever and the central locking buttons do not operate.

Child safety lock



Fig. 16

Parental Control: Left rear door



First read and observe the introductory information and safety warnings ! on page 32.

The child safety lock prevents the rear door from being opened from the inside. The door can only be opened from the outside.

You can switch the child safety lock on and off using the vehicle key.

Switching on

> Turn the slot of the safety lock in the direction of the arrow » Fig. 16 (mirror-inverted on the right doors).

Switching off

> Turn the slot of the safety lock in the opposite direction to the arrow » Fig. 16 (mirror-inverted on the right door).

Opening/closing a door

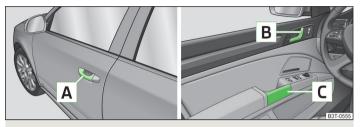


Fig. 17 Door handle/door opening lever:



First read and observe the introductory information and safety warnings 11 on page 32.

Opening from the outside

• Unlock the vehicle and pull the door handle A » Fig. 17 on the door you wish to open.

Opening from the inside

> Pull on door opening lever B of the respective door and push the door away from you.

Closing from the inside

> Grasp pull handle C and close the door.

WARNING

- Make sure that the door has closed correctly as it can open suddenly while driving risk of death!
- Only open and close the door when there is no one in the opening/closing range risk of injury!
- An opened door can close automatically if there is a strong wind or the vehicle is on an incline risk of injury!

KESSY

Introduction

This chapter contains information on the following subjects:

Information message	37
Parking vehicle	38

The KESSY system (Keyless Entry Start Exit System) enables unlocking and locking of the vehicle without actively using the remote control key.

Information message



First read and observe the introductory information given on page 37.

Key in the vehicle

The protection against inadvertently locking the key in the vehicle unlocks the vehicle automatically if the following conditions are met.

- ✓ The vehicle, including the boot lit, has been locked.
- ✓ The key with which the vehicle has been locked remains in the vehicle in the zone D

 » Fig. 14 on page 34.

The turn signal lights flash four times as confirmation that the vehicle has been unlocked again.

The following message is shown in the information cluster display.

- Key in vehicle.
- KEY IN VEHICLE

Additionally, on vehicles which are fitted with the anti-theft alarm system, an audible signal sounds.

The system has not found a key

If the system has not found a key in the vehicle, the following message appears in the display of the instrument cluster.

- Key not found.
- NO KEY

This can occur if the key is outside the vehicle, the battery in the key is discharged, the key is defective or the electromagnetic field is strongly disturbed.

Fault in KESSY system

If there is a fault in the KESSY system, the following message will appear in the display of the instrument cluster.

- Keyless access system faulty.
- CHECK KEYLESS

Low voltage of the key battery

If the voltage of the battery in the remote control key is too low, the following message appears in the display of the instrument cluster.

- Change the key battery!
- KEY BATTERY

Change the key battery » page 239!

Parking vehicle



First read and observe the introductory information given on page 37.

If the vehicle is not unlocked within 60 hours/ 90 hours, the sensors in the handle of the driver /front passenger's door are deactivated automatically » Fig. 14 on page 34.

Activation after 60 hours

- ➤ Unlock the driver's door using the sensor 2 » Fig. 14 on page 34.
- > Press the handle of the boot lid.
- ightharpoonup Unlock the vehicle using the symbol button $\stackrel{\circ}{ o}$ on the remote control key.
- > Unlocking the driver's door in an emergency » page 240.

Activation after 90 hours

- > Unlock the vehicle using the symbol button ∂ on the remote control key.
- > Unlocking the driver's door in an emergency » page 240.

Anti-theft alarm system

Introduction

This chapter contains information on the following subjects:

Activating/deactivating	30
3	
Interior monitor and towing protection	30

The anti-theft alarm system increases the level of protection against people seeking to break into the vehicle. The system triggers audible and visual warning signals if an attempt is made to break into the vehicle (hereafter referred to only as alarm).

An alarm is triggered when the following monitored areas of the vehicle have a fault.

- > Bonnet.
- > Boot lid.
- > Doors.
- > Ignition lock.
- > Vehicle inclination » page 39.
- > Interior of car » page 39.
- > A drop in voltage of the on-board power supply.
- > Socket of the factory-fitted towing device » page 162, Towing a trailer.

An alarm is immediately triggered if either of the two battery terminals is disconnected while the anti-theft alarm system is activated.

The alarm is **switched off** by unlocking the vehicle or switching on the ignition.

CAUTION

Before leaving the vehicle, it must be checked that all of the doors and windows including the sliding/tilting roof are locked in order to ensure the full functionality of the anti-theft alarm system.



The working life of the alarm siren is 5 years.

Activating/deactivating



First read and observe the introductory information and safety warnings ! on page 38.

Activating

The anti-theft alarm system is activated automatically approximately 30 seconds after the vehicle is locked.

If you unlock the vehicle and do not open a door or the boot lid within the next 30 seconds, the vehicle will lock again automatically and the safelock system or anti-theft alarm system will be switched on. This function is intended to prevent the car being unlocked unintentionally.

Deactivating

The anti-ther alarm system is deactivated automatically after the vehicle is unlocked. If the vehicle is not opened within 30 seconds, the anti-ther alarm system is automatically activated again.

The alarm system is also deactivated if you unlock the driver door using the key within 45 seconds of locking the vehicle.



Note

If the car is unlocked with the key in the driver door, insert the key into the ignition and switch the ignition to deactivate the alarm system.

Interior monitor and towing protection



Fig. 18

Button for interior monitor and towing protection



First read and observe the introductory information and safety warnings ! on page 38.

The interior monitor detects movements inside the car or the inclination of the vehicle and then triggers the alarm.

Switching off

- > Switch off the ignition.
- > Open the driver door.
- > Press the symbol button ♀ » Fig. 18 on the B-pillar on the driver's side. The lighting of the symbol ♀ in the button changes from red to orange.
- > Lock the vehicle within 30 seconds.

The interior monitor and the towing protection are activated automatically after the vehicle is locked.

Deactivate the interior monitor and the towing protection if there is a possibility of the alarm being triggered by movements from (e.g. children or animals) within the vehicle interior or if the vehicle has to be transported (e.g. by train or ship) or towed.

1

CAUTION

- The opened glasses storage compartment reduces the effectiveness of the interior monitor. To ensure the full functionality of the interior monitor, the glasses storage compartment must always be closed before locking the vehicle.
- The anti-theft alarm system is activated when the vehicle is locked even if the safe securing system is deactivated. The interior monitor is however not activated.

Luggage compartment lid

Introduction

This chapter contains information on the following subjects:

Twindoor - open/close small boot lid	40
i Willdoor - open/close sinali boot lid	40
TwinDoor - open / close large boot	40
Open / close (Superb Combi)	41
Automatic locking	41

WARNING

- Ensure that the lock is properly engaged after closing the boot lid. Otherwise, the boot lid might open suddenly while the vehicle is moving, even it was locked risk of accident!
- Never drive with the boot lid open or ajar, as otherwise exhaust gases may get into the interior of the vehicle risk of poisoning!
- Do not press on the rear window when closing the luggage compartment lid, as otherwise this could crack - risk of injury!

CAUTION

- If the vehicle was locked before the boot lid was closed, the lid is immediately locked automatically when closed.
- Do not press on the rear window when closing the tailgate, it could crack.

Note

- The function of the button in the grip above the licence plate is deactivated when starting off or at a speed of 5 km/hour or more for vehicles with central locking. The function is restored after the vehicle stops and the door is opened.
- Repeated opening and closing of the boot lid can lead to a temporary failure of the function due to the overheating protection of the motors of the Twindoor system.

Twindoor - open/close small boot lid



Fig. 19 Handle of boot lid/opened small boot lid



First read and observe the introductory information and safety warnings 1 on page 39.

After unlocking, the boot lid can be opened with the button in the handle above the number plate.

Opening

> Press the button in the handle at the lower edge of the boot lid 1 » Fig. 19 and lift the boot lid.

Closing

> Pull down and strike the lid with the handle 2 » Fig. 19.

The small boot lid can also be opened by pressing the symbol \Longrightarrow on the remote control key $\!\!\!>$ page 33 .

TwinDoor - open / close large boot



Fig. 20 Handle of boot lid/opened large boot lid



First read and observe the introductory information and safety warnings II on page 39.

After unlocking, the boot lid can be opened with the button in the handle above the number plate.

Opening

- > Press the button in the handle at the lower edge of the tailgate 1 » Fig. 20.
- > Wait until the brake light 2 in the rear window flashes twice and then lift the lid.

Closing

> Pull down and strike the lid with the handle 3 » Fig. 20.

Open / close (Superb Combi)



Fig. 21 Handle of boot lid



Fig. 22 Handle in the inner panelling of the boot lid



First read and observe the introductory information and safety warnings ! on page 39.

After unlocking, the boot lid can be opened with the button in the handle above the number plate.

Opening

ightharpoonup Press the handle ightharpoonup ightharpoonup Fig. 21 and raise the lid in the direction of the arrow ightharpoonup .

Closing

> Pull the lid down with the handle C » Fig. 22 and close with a slight swing.

Automatic locking



First read and observe the introductory information and safety warnings 11 on page 39.

If the vehicle was locked before the boot lid was closed, the lid is immediately locked automatically when closed.

The period after which the boot lid is locked automatically can be extended by a specialist garage.

Delayed locking

If the tailgate was locked using the ⇔ symbol button on the remote control key, it is possible to open the tailgate within a limited period of time.

There is a risk of unwanted entry into the vehicle before the boot lid is locked automatically. The vehicle should therefore always be locked with the symbol button \bigoplus on the radio remote control.

Delayed locking can be deactivated by a specialist garage at any time.



Note

More detailed information about this is available from a ŠKODA Partner.

Electric boot lid (Superb Combi)

Introduction

This chapter contains information on the following subjects:

Operating description	42
Acoustic signals	43
Adjusting/deleting the top lid position	43
Malfunctions	44

Force limiter

The electric boot lid is fitted with a force limiter. If the lid hits an obstacle when closing, it stops and an audible signal sounds.

If you rapidly enter the vehicle during the opening or closing process of the boot lid, the whole vehicle may jerk and as a result the movement of the lid can be interrupted.

Manual operation

Manually opening and closing the lid is only possible in exceptional cases. It must be completed slowly and without sudden movements as close to the centre of the lid as possible » ...

WARNING

- Ensure that the lock is properly engaged after closing the boot lid. Otherwise, the boot lid might open suddenly while the vehicle is moving, even it was locked risk of accident!
- Never drive with the boot lid open or ajar, as otherwise exhaust gases may get into the interior of the vehicle risk of poisoning!

CAUTION

- The movement of the lid can be stopped by applying an abrupt and quick force against the lid.
- Do not try to close the lid manually during the electrical closing process. Damage can occur to the system of the electric boot lid.
- If the lid is closed manually, it must be ensured that when moving the lid into the lock, pressure is applied to the centre edge of the lid above the ŠKODA logo. Handling the sides of the lid can damage the electric lid.

CAUTION

- Before opening or closing the lid, check if there are any objects in the opening or closing range which could obstruct the movement (e.g. a load on the roof rack or on the trailer, etc.) risk of causing damage to the lid!
- Ensure that there is at least 10 cm of clearance above the opened lid (e.g. distance from the garage ceiling). Otherwise, it may happen that the clearance above the opened lid is no longer sufficient after relieving the vehicle of a load (e.g. after unloading) risk of causing damage to the lid.
- In certain circumstances, if the lid is loaded (e.g by a thick layer of snow), the opening process of the lid can be interrupted. Remove the load on the lid to reenable the electrical operation.
- If the lid closes automatically (e.g. under load of snow), you will hear an intermittent beep.

Operating description



Fig. 23 Operation of the lid



Fig. 24 Lid operation/operating areas



First read and observe the introductory information and safety warnings 14 on page 41.

Control elements

The lid can be operated with the following control elements.

- \rightarrow With the symbol button \Leftrightarrow on the remote control key (press for about 1 s).
- > With the button in the handle A on the outer part of the lid » Fig. 23.
- > With the button B on the inner part of the lid » Fig. 23.
 - > With the button C in the centre console » Fig. 24.

Operating areas

The system distinguishes 3 operating areas where the function of the individual operating elements changes » Fig. 24. The end positions of the lid - fully closed in the secured lock and fully opened - differ as well.

The range of the area 3 changes proportionally, depending on the setting of the top position of the lid » page 43.

If the lid is set in the uppermost position in the area 2, the area 3 is not active. The range of the area 2 changes proportionally, depending on the setting of the top position of the lid.

Symbol explanation in the operating description

- ✓ Feasible action
- ☐ Non-feasible action

Lid operation with the handle A

Action	Closed	Area			Open
Action	lid	1	2	3	lid
Opening		⋖			
Stop		⋖			
Closing			±		✓

The operation of the lid using the handle ${\Bbb A}$ is only possible when the vehicle is unlocked.

Lid operation with the button B

Action	Closed Area			Open lid	
Action	lid	1	2	3	lid
Opening		✓			
Stop		✓	✓		
Closing			±	⋖	✓

Operating the lid with the button **B** is only possible when the lid is open.

Lid operation with the symbol button $\mathop{{}\lesssim}$ on the remote control key and the button $\boxed{\text{C}}$

Action Closed Area			Open		
Action	lid	1	2	3	lid
Opening	⋖	⋖			
Stop		๔	⋖		
Closing					

When the ignition is switched on, the operation of the lid does not function using the remote control key.

Operating the lid with the button C does not work if the vehicle was locked from the outside.

Operating the lid with the symbol button \leftrightarrows on the remote control key and the button $\fbox{\textbf{C}}$ does not work when a trailer is coupled to the vehicle.

Acoustic signals



First read and observe the introductory information and safety warnings 1 on page 41.

The acoustic signals serve as a safety function and provide information about the success of a performed action.

Signals	Status
Interrupted tone	Opening (with the button \Leftrightarrow on the remote control key or with the button $\boxed{\textbf{C}}$ » Fig. 24 on page 42)
interrupted tone	Automatic closing of the lid » page 42, ! in section In-
	troduction
1 continuous tone	Force limiter
3 rising tones	Confirmation of the storage of the lid position
3 identical tones	fault

Adjusting/deleting the top lid position



First read and observe the introductory information and safety warnings ! on page 41.

Adjusting

- > Stop the lid in the desired position (electrically or manually).
- > Press and hold the button B > Fig. 23 on page 42 for longer than 3 seconds.

Storing the new position is confirmed with an audible signal.

Delete

- > Carefully lift up the lid manually to the maximum opening position.
- > Press and hold the button **B** » Fig. 23 on page 42 for longer than 3 seconds.

An audible signal sounds and the height which was originally set is deleted from the memory, while the basic position of the top lid position is again set.

The top lid position is adjusted, for example, in the following situations.

- > When the space for opening the lid is limited (e.g. garage height).
- > For a more convenient operation, such as by a person's height.

The top position which is reached when the lid opens automatically, is always lower than the maximum top position which can be reached when the lid is opened manually.

The lid always opens to the height which was last stored.

Malfunctions



First read and observe the introductory information and safety warnings 11 on page 41.

If the battery is disconnected and reconnected while the lid is open, it is necessary to activate the system of the electric boot lid. Activation means closing the lid by hand. Thus, the end position of the lid is stored under fully closed in secured lock.

Examples of operational malfunctions

Description of the malfunction	Possible solutions
The lid cannot be lifted out of the lock.	Emergency unlocking of the lid » page 241
The lid does not react to an opening signal	Remove any obstacle (e.g. snow), open the lid again » page 42
	Press the handle A and pull the lid upwards
The lid remains in the top position	Manual closing of the lid

Electric power windows

Introduction

This chapter contains information on the following subjects:

Opening/closing the window from the driver seat	45
Opening the windows in the front passenger door and in the rear doors	45

Force limit	46
Nindow convenience operation	46
Operational faults	46
·	

The power windows operate only when ignition is switched on.

After switching the ignition off, it is still possible to open or close the windows for approx. 10 minutes. The power windows are only switched off completely once the driver or front passenger door are opened.

When driving always use the existing heating, air conditioning and ventilation system for ventilating the interior of the vehicle. If the windows are opened, dust as well as other dirt can get into the vehicle and in addition the wind noise is more at certain speeds.

WARNING

- Ensure that no persons are still left in the vehicle when locking the vehicle. In an emergency, the windows will no longer be able to be opened from the inside.
- The system is fitted with a force limiter » page 46. If there is an obstacle, the closing process is stopped and the window goes down by several centimetres. However, the windows should be closed carefully risk of injury.
- It is recommended to deactivate the electrically operated power windows in the rear doors (safety pushbutton) S » Fig. 25 on page 45 when children are being transported on the rear seats.

CAUTION

- Keep the windows clean to ensure the correct functionality of the electric windows.
- In the event that the windows are frozen, first of all eliminate the ice » page 200, *Windows and exterior mirrors* and only then operate the electrical power windows. Otherwise, the window sealing and the electrical power window mechanism could be damaged.
- In the winter, ice accumulating on the surface of the window may cause there to be more resistance when closing the window. The window will stop and move back several centimetres.
- It is necessary to deactivate the force limiter to close the window » page 46.
- Make sure that the windows are closed whenever you leave the locked vehicle. ▶

SE SE

For the sake of the environment

At high speeds, you should keep the windows closed to prevent unnecessarily high fuel consumption.



Note

The window lift system is equipped with protection against overheating. Repeated opening and closing of the window can cause this mechanism to overheat. If this happens, it will not be possible to operate the window for a short time. You will be able to operate the window again as soon as the overheating protection has cooled down.

Opening/closing the window from the driver seat



Fig. 25

Buttons on the driver's door



First read and observe the introductory information and safety warnings 1 on page 44.

Opening

Lightly press the appropriate button down and hold it until the window has moved into the desired position. Releasing the button causes the window to stop immediately.

The window can be completely opened automatically by briefly pressing the button as far as the stop. Renewed pressing of the button causes the window to stop immediately.

Closing

> Pull gently on the top edge of the corresponding button and hold until the window has moved into the desired position. Releasing the button causes the window to stop immediately.

The window can also be fully closed automatically by pulling the button up to the stop. Renewed pulling of the button causes the window to stop immediately.

Buttons for the power windows » Fig. 25.

- A Button for power window of the driver's door
- B Button for power window of the front passenger door
- C Button for power window of the rear right door
- D Button for power window at the rear left door
- S Safety pushbutton

Safety pushbutton

The buttons for power windows in the rear doors can be deactivated by pressing the safety pushbutton [S] » Fig. 25. The buttons for the electrical power windows in the rear doors are activated again by pressing the safety pushbutton [S] again.

If the buttons for the rear doors are deactivated, the indicator light **a** in the safety switch **s** lights up.

Opening the windows in the front passenger door and in the rear doors



Fig. 26
Arrangement of the button on the rear door



First read and observe the introductory information and safety warnings ! on page 44.

There is a button in the front passenger door and in the rear doors for that window.

Opening

Lightly press the appropriate button down and hold it until the window has moved into the desired position. Releasing the button causes the window to stop immediately. The window can be completely opened automatically by briefly pressing the button as far as the stop. Renewed pressing of the button causes the window to stop immediately.

Closing

> Pull gently on the top edge of the corresponding button and hold until the window has moved into the desired position. Releasing the button causes the window to stop immediately.

The window can also be fully closed automatically by pulling the button up to the stop. Renewed pulling of the button causes the window to stop immediately.

Force limit



First read and observe the introductory information and safety warnings 1 on page 44.

The electrical power window system is fitted with a force limiter. It reduces the risk of bruises or injuries when closing the windows.

If there is an obstacle, the closing process is stopped and the window goes down by several centimetres.

If the obstacle prevents the window from being closed during the next 10 seconds, the closing process is interrupted once again and the window goes down by several centimetres.

If you attempt to close the window again within 10 seconds of the window being moved down for the second time, even though the obstacle was not yet been removed, the closing process is only stopped. During this time it is not possible to automatically close the window. The force limiter is still switched on.

The force limiter is only switched off if you attempt to close the window again within the next 10 seconds - the window will now close with full force!

If you wait longer than 10 seconds, the force limiter is switched on again.

Window convenience operation



First read and observe the introductory information and safety warnings II on page 44.

The windows can be operated by the locking or unlocking.

The prerequisite for ensuring that the convenience operating feature correctly is the automatic opening/closing of all windows is operational.

Opening can take place in one of the following ways.

- > Press and hold the symbol button ⊕ on the key.
- > Hold the key in the driver's lock in the unlock position.
- > Press and hold the upper part of the central locking button in the driver's door » page 36.
- ➤ Hold the button A[□] in the opening position » Fig. 25 on page 45.

Closing can take place in one of the following ways.

- > Press and hold the symbol button ⊕ on the key.
- > Hold the key in the driver's lock in the lock position.
- > Press and hold the lower part of the central locking button » page 36 in the driver's door.
- → Hold the button A[□] in the closing position » Fig. 25 on page 45.
- In the KESSY system, hold a finger on the sensor 1 » Fig. 14 on page 34.

You can interrupt the opening or closing process for the windows immediately by releasing the key or the the button $\boxed{\mathbb{A}}$ and interrupting the locking/unlocking.

Convenience opening or closing the window using the key in the driver's lock is only possible within 45 seconds after locking the vehicle.

Operational faults



First read and observe the introductory information and safety warnings 1 on page 44.

The automatic power windows do not work if the vehicle battery was disconnected and connected while a window is open. The system must be activated.

Activation sequence:

Onvenience opening and closing the windows with the button A is possible immediately after unlocking the vehicle or turning off the ignition and opening the driver's or front passenger's door.

- > Switch on the ignition.
- > Pull the top edge of the button and close the window.
- > Release the button.
- > Pull the relevant button upwards again for approx. 3 seconds, and keep it pressed down.

Electric sliding/tilting roof

Introduction

This chapter contains information on the following subjects:

Operation	47
Convenience operation of sliding/tilting roof	48
Electric sliding/tilting roof with solar cells	48

The electric sliding/tilting roof (abbreviated in the following as 'sliding/tilting roof') can only be operated when the ignition is turned on and when the outdoor temperature is higher than -20 °C.

The sliding/tilting roof can still be operated for approx. 10 minutes after switching the ignition off. However, as soon as the driver or front passenger's door is opened it is no longer possible to operate the sliding/tilting roof.

CAUTION

- Always close the sliding/tilting roof before disconnecting the battery.
- If the battery has been disconnected and reconnected, it is possible that the sliding/tilting roof does not operate correctly. In this case, turn the rotary switch to the switch position A » Fig. 27 on page 47 and push forward for about 10 seconds.

Operation

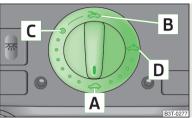


Fig. 27
Control dial for the sliding/tilting



First read and observe the introductory information and safety warnings ! on page 47.

Comfort position

> Turn the switch to position C » Fig. 27.

When the sliding/tilting roof is in the comfort position, the intensity of the wind noise is reduced.

Open partially

> Simply turn the knob to a point between A and c.

Open fully

> Turn the switch to position B and hold it in this position (spring-tensioned position).

Tilting roof

> Turn the switch to position D.

Closing

> Turn the switch to position A.

Force limiter

The sliding/tilting roof is fitted with a force limiter. If an obstacle (e.g. ice) prevents closing, the sliding/tilting roof stops and opens completely. The sliding/tilting roof can be closed completely without the force limiter by turning the switch into position A » Fig. 27 at the front for as long as it takes for the sliding/tilting roof to close completely » ...

WARNING

When closing the sliding/tilting roof proceed with caution to avoid causing crushing injuries – risk of injury!

CAUTION

During the winter it may be necessary to remove any ice and snow in the vicinity of the sliding/tilting roof before opening it to prevent any damage to the opening mechanism.

Convenience operation of sliding/tilting roof



First read and observe the introductory information and safety warnings ! on page 47.

The sliding/tilting roof can be operated by locking/unlocking using the key or using the KESSY system with the aid of the sensor $\boxed{1}$ » Fig. 14 on page 34.

- > Press and hold the symbol button ⊕ on the key.
- ➤ In the KESSY system, hold a finger on the sensor 1 » Fig. 14 on page 34.

By releasing the lock or lifting your finger off the sensor $\boxed{1}$ when using the KESSY system, the closing process is immediately interrupted.

WARNING

Close the sliding/tilting roof carefully – risk of injury! The force limiter does not work when convenience closing is in operation.

Electric sliding/tilting roof with solar cells



First read and observe the introductory information and safety warnings ! on page 47.

If there is sufficient bright sunlight, the solar cells in the sliding/tilting roof deliver the electrical power for the fresh air blower. Further information » page 103, *Climatronic (automatic air conditioning system)*.

The operation of the sliding/tilting roof with solar cells is the same as of a normal sliding/tilting roof.

Panoramic sliding roof (Superb Combi)

Introduction

This chapter contains information on the following subjects:

Operation	49
Opening/closing the sun screen	49
Convenience operation of Sliding/tilting roof	50

The panoramic sliding/tilting roof (abbreviated in the following as 'sliding/tilting roof') can only be operated when the ignition is turned on and when the outdoor temperature is higher than -20 °C.

The sliding/tilting roof can still be operated for approx. 10 minutes after switching the ignition off. However, as soon as the driver or front passenger's door is opened it is no longer possible to operate the sliding/tilting roof.

CAUTION

- Always close the sliding/tilting roof before disconnecting the battery.
- If, for example, the battery has been disconnected and reconnected, it is possible that the sliding/tilting roof does not operate correctly. Next, move the rotary switch into position A Fig. 28 on page 49, pull the recess firmly downwards and forwards. The sliding/tilting roof opens and closes again after around 10 seconds. Do not release the control dial until it has done so.
- If, for example, the battery has been disconnected and reconnected, it is possible that the sun screen does not operate correctly. Then turn the switch to position A » Fig. 28 on page 49and press and hold the button G » Fig. 29 on page 49. The sun screen opens and closes again after around 10 seconds. Do not release the control dial until it has done so.

Operation



Fig. 28
Control dial for the sliding/tilting roof



First read and observe the introductory information and safety warnings ! on page 48.

Comfort position

> Turn the switch to position C » Fig. 28.

When the sliding/tilting roof is in the comfort position, the intensity of the wind noise is reduced.

Open partially

> Turn the switch to a position in area D.

Open fully

> Turn the switch to position B and hold it in this position (spring-tensioned position).

Tilting roof

- > Turn the switch to position A.
- > Press the switch in the region **E** towards the roof.

Closing

- > Turn the switch to position A.
- > Press the switch on the recess **E** down and pull forwards.

Force limiter

The sliding/tilting roof is fitted with a force limiter. The sliding/tilting roof stops and moves back several centimetres when it cannot be closed because there is something in the way (e.g. ice). The sliding/tilting roof can be fully closed without a force limiter by pressing the switch on the recess E down and then pushing it forward until the sliding/tilting roof is fully closed » \blacksquare .

WARNING

When closing the sliding/tilting roof proceed with caution to avoid causing crushing injuries – risk of injury!

CAUTION

During the winter it may be necessary to remove any ice and snow in the vicinity of the sliding/tilting roof before opening it to prevent any damage to the opening mechanism.

Opening/closing the sun screen

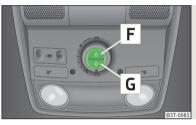


Fig. 29 Buttons for sun screen

First read and observe the introductory information and safety warnings ! on page 48.

The sun screen can be closed or opened using the buttons » Fig. 29.

Opening

- > Briefly press the button F >> Fig. 29 to open fully.
- > Press and hold the button **F** to open to the desired position.

The opening process stops when one releases the button.

Closing

- > Briefly press the button **G** » Fig. 29 to close fully.
- > Press and hold the button **G** to close in the desired position.

The closing process stops when one releases the button.

Convenience operation of Sliding/tilting roof



First read and observe the introductory information and safety warnings ! on page 48.

The sliding/tilting roof can be operated by locking/unlocking using the key or using the KESSY system with the aid of the sensor $\boxed{1}$ » Fig. 14 on page 34.

Closing

> Hold down the symbol button ⊕ on the key, or when using the KESSY system, keep your finger on the sensor 1 × Fig. 14 on page 34×

By releasing the lock or lifting your finger off the sensor 1 when using the KESSY system, the closing process is immediately interrupted.

Tilting roof

> Press and hold the symbol button ⊕ on the key.

WARNING

Close the sliding/tilting roof carefully – risk of injury! The force limiter does not work when convenience closing is in operation.

Lights and visibility

Lights

Introduction

This chapter contains information on the following subjects:

Parking and low beam lights	51
Daylight running lights (DAY LIGHT)	52
Turn signal and main beam	53
Automatic driving lamp control	53
Adaptive headlights (AFS)	54
Fog lights	
Fog lights with the CORNERfunction	55
Rear fog light	55
COMING HOME / LEAVING HOME	55
Hazard warning light system	56
Parking lights	57

Unless otherwise stated, the lights only work when the ignition is switched on.

On models fitted with ${\bf right}$ -hand steering the position of the controls differs from that shown in » Fig. 30 on page 51. The symbols which mark the positions of the controls are identical.

Keep the headlights lenses clean. The following guidelines must be observed » page 200, Headlight lenses.

WARNING

- The activation of the lights should only be undertaken in accordance with national legal requirements.
- The driver is always responsible for the correct settings and use of the lights.

WARNING (Continued)

- The automatic driving lamp control AUTO only operates as a support and does not release the driver from his responsibility to check the light and, if necessary, to switch on the light depending on the given light conditions. The light sensor cannot, for example, detect rain or snow. Under these conditions we recommend switching on the low beam or fog lights!
- Never drive with only the side lights on! The side lights are not bright enough to light up the road sufficiently in front of you or to be seen by other oncoming traffic. Therefore always switch on the low beam when it is dark or if visibility is poor.

i

Note

The headlights may mist up temporarily. When the driving lights are switched on, the light outlet surfaces are free from mist after a short period, although the headlight lenses may still be misted up in the peripheral areas. This mist has no influence on the life of the lighting system.

Parking and low beam lights

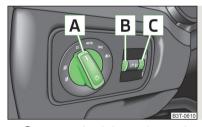


Fig. 30 Light switches, knobs for headlight beam adjustment and brightness of instrument illumination



First read and observe the introductory information and safety warnings I on page 51.

A light switch positions » Fig. 30

- Switching on the parking light or parking lights on both sides » page 57
- Turn on the low beam
- Switching off lights (except daytime running lights)
- D Switching on the front fog lamp » page 55
- () Switching on the rear fog light » page 55

Lights and visibility

Turning the rotary switch ∮○ from position — to 3 gradually activates the headlight beam adjustment, thereby shortening the beam of light » Fig. 30, position ■.

The positions of the width of illumination correspond approximately to the following car load.

- Front seats occupied, boot empty
- 1 All seats occupied, boot empty
- 2 All seats occupied, boot loaded
- 3 Driver seat occupied, boot loaded

Instrument lighting

Turning the rotary switch \(\? \) when the lights are switched on adjusts the brightness of the instrument lighting \(> \) Fig. 30, position \(\) \(\) .

The instruments are also illuminated when the side light, low or high beam light is switched on.

WARNING

Always adjust the headlight beam to satisfy the following conditions.

- The vehicle does not dazzle other road users, especially oncoming vehicles.
- The beam range is sufficient for safe driving.

Note

- We recommend you adjust the headlight beam when the low beam is switched on.
- The Bi-Xenon bulbs adapt automatically to the load and driving state of the vehicle when the ignition is switched on and when driving. Vehicles that are equipped with Bi-Xenon headlights do not have a manual headlight range adjustment control.
- The low beam continues to shine while the ignition is switched on and the light switch is in the position © or AUTO. After switching off the ignition, the low beam is switched off automatically and only the side lights come on. The side light goes out after the ignition key is removed.
- If there is a fault in the light switch, the low beam comes on automatically.

Daylight running lights (DAY LIGHT)



First read and observe the introductory information and safety warnings ! on page 51.

The daytime running lights function provides the lighting of the front of the vehicle.

Switching on daytime running lights

> The light switch is in position (A) or AUTO turn» Fig. 30 on page 51.

Deactivating the function daylight driving lights

- > Pull the turn signal and main beam lever to the steering wheel and push downwards » Fig. 31 on page 53.
- At the same time switch on the ignition and hold the lever down in this position for at least 3 seconds.

Activating the function daylight driving lights

- > Pull the turn signal and main beam lever to the steering wheel and push upwards » Fig. 31 on page 53.
- At the same time switch on the ignition and hold the lever down in this position for at least 3 seconds.

The daytime running lights can be activated or deactivated via the Maxi DOT display in the menu item **DRL** » page 29.

The daytime running lights are switched on automatically if the following conditions are met:

- ✓ The ignition is switched on.
- ✓ The daylight driving lights function is activated.
- ✓ The light switch is in the position 0 or AUTO » Fig. 30 on page 51.

i

ш

Note

When the daytime running light is switched on, the side lights (neither at the front or rear) and the number plate lights are not lit.

Turn signal and main beam

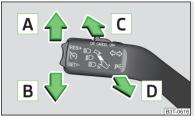


Fig. 31
Operating lever: Turn signal and main beam operation



First read and observe the introductory information and safety warnings ! on page 51.

Lever positions » Fig. 31

- B Switch on left 🗘 turn signal
- C Switch on high beam (spring-tensioned position) **E**
- D Switch off main beam and headlamp flasher (spring-loaded position) €

The parking light can also be controlled with the control lever » page 57.

The main beam can only be switched on when the low beam lights are on.

When the high beam or headlight flasher is on, the warning light ₺ lights up in the instrument cluster.

When the left or right turn signal is on, the warning light \diamondsuit or \diamondsuit flashes in the instrument cluster.

Turn signal for changing lanes - to only flash briefly, only move **the lever** up or down to the pressure point and **hold it in this position**.

Convenience turn signal

If you only wish to flash three times, briefly push **the lever** to the upper or lower pressure point and **release again**.

The "Intelligent turn signal" can be activated or deactivated via the Maxi DOT display in the Intelligent turn signal» page 29 menu item.

V

WARNING

Only turn on the main beam or the headlight flasher if other road users will not be dazzled.

i

Note

- The headlight flasher can be operated even if the ignition is switched off.
- The turn signal light switches itself off automatically when driving around a curve or after making a turn.
- The indicator light flashes at twice its normal rate if a bulb for the turn signal light fails.

Automatic driving lamp control



Fig. 32 **Light switch**



First read and observe the introductory information and safety warnings ! on page 51.

If the light switch is in position AUTO » Fig. 32, the parking lights, low beam and number plate lights are switched on/off automatically.

The light is regulated based on data gathered by the light sensor attached between the windscreen and the interior mirror.

If the light switch is in position AUTO, the symbol AUTO lights up next to the light switch. If the light is switched on automatically, the symbol \gg next to the light switch also lights up.

Automatic headlight control in rain

If the light switch is in position **AUTO** and if automatic wiping in rain or wiping (position 2 or 3) is switched on for longer than 15 seconds » page 62, the parking lights and low beam will switch on automatically.

The light switches off when automatic wiping/wiping (position 2 or 3) is not switched on for longer than approx. 4 seconds.

CAUTION

Do not affix any stickers or similar objects in front of the light sensor on the windscreen, so that its functionality is not impaired or disabled.

Adaptive headlights (AFS)



First read and observe the introductory information and safety warnings II on page 51.

The AFS system makes sure the street remains lit up depending on the traffic and weather situation.

The system automatically adjusts the cone of light in front of the vehicle to the driving speed or the use of the wiper.

The AFS system works in tandem with automatic driving lamp control AUTO, please read the following » page 53.

The AFS system can work only if the following condition is met.

✓ The light switch is in the position AUTO.

The AHL system operates in the following modes.

Out of town mode

The cone of light in front of the vehicle is similar to the low beam. The mode is active if none of the following modes are active.

City mode

The light cone in front of the vehicle is adjusted so that this and the adjacent sidewalks, intersections, pedestrian crossings, etc. are illuminated. The mode is active at speeds of 15-50 km / h.

Motorway mode

The cone of light in front of the vehicle is adjusted so that the driver can respond in time to an obstruction or other hazard in time. The mode is activated gradually from a speed of 90 km/h. It is most effective at speeds above 120 km/h.

Rain mode

The cone of light in front of the vehicle is adjusted so that the driver can reduce the glare from oncoming vehicles in rain.

The mode is active at speeds of 15 - 70 km/h and if the windscreen wipers continuously operate for a period of time longer than 2 minutes. The mode is deactivated when the windscreen wipers are switched off for longer than 8 minutes.

Dynamic cornering lights

The cone of light in front of the vehicle is adjusted to the steering angle so that the road in the curve is illuminated. This function is active at speeds greater than 10 km.h and in all AFS modes.

Tourist lights (Travel mode)

This mode makes it possible to drive in countries with opposing traffic system (driving on the left/right) without dazzling the oncoming vehicles.

When this mode is active, the above-mentioned modes and the side swivel of the headlights is deactivated.

This mode can be enabled or disabled via the Maxi DOT display in the **Travel** mode» page 29 menu option.

WARNING

If the AFS system is defective, the headlights are automatically lowered to the emergency position, which prevents a possible dazzling of oncoming traffic. This reduces the cone of light in front of the vehicle. Drive carefully and visit a specialist garage as soon as possible.

Note

When the "Tourist light" mode is active, the warning icon & flashes for about 10 seconds each time the ignition is switched on.

Fog lights



Fig. 33 **Light switch**



First read and observe the introductory information and safety warnings 11 on page 51.

Switching on/off

- > Pull the light switch to position 1.

The rear fog light is switched off in the reverse order.

The indicator light 30 lights up in the instrument cluster when the fog lights are switched on 30 page 14.

Fog lights with the CORNERfunction



First read and observe the introductory information and safety warnings ! on page 51.

The CORNER function lights the front fog lamp on each side of the vehicle to illuminate the area around the vehicle when turning, parking, etc.

The CORNER function is switched on automatically if the following conditions are met.

- The turn signal is switched on or the front wheels are turned sharply to the right or left¹⁾.
- The engine is running.
- The vehicle is stopped or moves at a speed of no more than 40 km/h.

- The low beam is switched on or the light switch is in the position AUTO and the low beam is switched on.
- The daytime running lights are not switched on.
- The fog lights are not switched on.

The CORNER light is mainly intended to be used for illuminating the nearby environment at a broad angle in front of and beside the vehicle. It lights up and goes out gradually.



Note

The two fog lights are switched on when you shift into the reverse gear.

Rear fog light



First read and observe the introductory information and safety warnings H on page 51.

Switching on/off

- > Turn the light switch to position

 or

 Fig. 33 on page 55.
- > Pull the light switch to position 2.

The rear fog light is switched off in the reverse order.

The warning light (# lights up in the instrument cluster when the rear fog light is switched on » page 14.

Only the rear fog light on the trailer lights up if the vehicle has a factory-fitted towing device or a towing device from ŠKODA original accessories and it is driven with a trailer.

COMING HOME / LEAVING HOME



First read and observe the introductory information and safety warnings II on page 51.

COMING HOME/LEAVING HOME (hereafter referred to only as function) makes it possible to automatically switch on the lights for a short time after leaving the vehicle or when approaching the vehicle in poor visibility.

If both switch-on conditions are conflicting, for example, if the front wheels are turned to the left and the right turn signal light is switched on, the turn signal light has the higher priority.

The function is switched on automatically if the following conditions are met:

- √ The light switch is in position AUTO » Fig. 32 on page 53.
- ✓ The visibility in the vehicle environment is reduced.
- ✓ The ignition is switched off.

The functions and settings of the illumination time can be activated/deactivated via the MAXI DOT display in the menu items **Coming Home** or **Leaving Home** » page 29.

The light is regulated based on data gathered by the light sensor attached between the windscreen and the interior mirror » page 53.

The function switches on the parking and low beam lights, the entry lighting in the exterior mirrors and the licence plate light.

COMING HOME

The light turns on automatically when you open the driver's door on (within 60 seconds of turning off the ignition).

The light turns off 10 seconds after closing all the doors and the tailgate or after the preset time.

If a door or the boot lid remains open, the light goes out after 60 seconds.

LEAVING HOME

The light turns on automatically after the vehicle is unlocked with the remote control.

The light turns off after 10 seconds or after a preset time or after the vehicle is locked.

4

CAUTION

Do not affix any stickers or similar objects in front of the light sensor on the windscreen, so that its functionality is not impaired or disabled.



Note

If this function is activated constantly, the battery will be heavily discharged particularly in short-haul traffic.

Hazard warning light system



Fig. 34 Button for hazard warning light system



First read and observe the introductory information and safety warnings 1 on page 51.

Switching on/off

> Press the A » Fig. 34 button.

All the turn signal lights on the vehicle flash at the same time when the hazard warning light system is switched on. The warning light for the turn signals and the warning light in the button also flash at the same time. The hazard warning light system can also be operated if the ignition is switched off.

If one of the airbags is deployed, the hazard warning light system will switch on automatically.

When the turn signal is switched on while the hazard warning light system is on (and ignition is switched on), only the turn signal light for the selected driving direction will flash while the turn signal is switched on.

WARNING

Switch on the hazard warning light system if, for example, the following occurs.

- You encounter a traffic congestion.
- The vehicle has broken down.

Parking lights



First read and observe the introductory information and safety warnings 1 on page 51.

Parking light P[≤] switching on

- > Switch off the ignition.
- Place the control lever into position or where applicable position a far as it can go » Fig. 31 on page 53 the parking light on the right/left side of the vehicle is switched on.

Switching on the side light on both sides ୬ €

> Turn the light switch A to position > Fig. 30 on page 51 and lock the vehicle.



- The parking light P < can only be activated if the ignition is switched off.
- If the right or left turn signal light has been switched on and the ignition is switched off, the parking light is not automatically switched on.

Interior lights

Introduction

This chapter contains information on the following subjects:

Front interior light	57
Rear interior light	58
Rear interior light	58
Front door warning light	59
Entry lighting	59

Front interior light

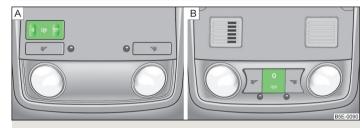


Fig. 35 Switch for front interior light - 2 versions



Fig. 36 **Switch for reading lights - 2 versions**

First read and observe the introductory information given on page 57.

Rocker switch positions » Fig. 35.

- 0 switching off
- control using the door contact switch (middle position)

For vehicles with interior monitoring there is no icon for the center position (operation with the door contact switch)» Fig. 35 - \blacksquare .

Reading lights

▼ Switch the reading light on/off » Fig. 36

If operating the light with the door contact switch is enabled **the light will come on** when one of the following events occurs:

- > The vehicle is unlocked.
- > One of the doors or the tailgate is opened.
- > The ignition key is removed.

If operating the light with the door contact switch is enabled **the light will go off** when one of the following events occurs:

- > The vehicle is locked.
- > The ignition is switched on.
- > About 30 seconds after all the doors have been closed.



- If the interior light remains switched on when the ignition is switched off or if one of the doors is open, the light will automatically go out after around 10 minutes.
- Two diffuse lights are integrated in the front interior lighting, that illuminate the gearshift lever and the middle of the dash panel. These are switched on automatically when the parking light is activated. Also, after switching on the ignition when the parking lights are switched on, the door handle lighting comes on.

Rear interior light

Applies to vehicles without a panoramic sliding roof.



Fig. 37 Interior light and rear reading lights



First read and observe the introductory information given on page 57.

The rear interior light is operated together with the front interior light » page 57.

Switching the reading light on/off

> Press the button ₹ or ₹ » Fig. 37.

Rear interior light

Applies to vehicles with a panoramic sliding roof.

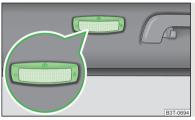


Fig. 38 Interior lights at the rear



First read and observe the introductory information given on page 57.

The light can be operated by moving the lens into one of the following positions \gg Fig. 38.

- switching on
- switching off
- control using the door contact switch (middle position)¹⁾

 $^{^{\}eta}$ In this position, the same rules apply to this light as for the front interior light » page 57, Front interior light.

Front door warning light



Fig. 39 **Warning light**



First read and observe the introductory information given on page 57.

The warning light is located in the lower door trim panel » Fig. 39.

The light switches on/off when the front door is opened or closed.

Vehicles without this warning light have only a reflector at this point.



If the door is open and the ignition switched off, the light will extinguish automatically after around 20 minutes.

Entry lighting



First read and observe the introductory information given on page 57.

The lighting is positioned on the bottom edge of the exterior mirror and illuminates the entry area of the front door.

The light comes on after the vehicle has been unlocked or on opening the front door. The lighting goes out about 30 seconds after the doors are closed or if the ignition is switched on.

WARNING

If the entry light is on, do not touch its cover - risk of burns!

i

Note

If the door is open and the ignition switched off, the light will extinguish automatically after around 1 minutes.

Visibility

Introduction

This chapter contains information on the following subjects:

Windscreen and rear window heater	59
Sun visors	60
Sun screen	60
Sun screen in the rear doors	61■

Windscreen and rear window heater



Fig. 40 Buttons for the rear and front window heating Climatronic / manual air conditioning



First read and observe the introductory information given on page 59.

Explanation of graphic

- Switch the rear window heater on/off
- Switching the windscreen heater on/off

When the heater is switched on, a lamp lights up inside the button.

The front - and rear window heater only operates when the engine is running.

The windscreen and rear window heater automatically switches off after approximately 10 minutes.

GE.

For the sake of the environment

The heating should be switched off as soon as the window is de-iced or free from mist. The reduced current consumption will have a favourable effect on fuel economy » page 146, Saving electrical energy.



Note

- If the on-board voltage drops, the windscreen and rear window heater switches off automatically, to provide sufficient electrical energy for the engine control » page 218, Automatic load deactivation.
- If the light is flashing inside the button the heater is off due to low battery.

Sun visors

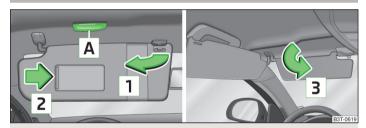


Fig. 41 Sun visor/double sun visor



First read and observe the introductory information given on page 59.

The sun visor for the driver or front passenger can be pulled out of the fixture and swivelled towards the door in the direction of the arrow $\boxed{1}$ » Fig. 41.

The vanity mirrors in the sun visors are provided with covers. Push the cover in the direction of the arrow 2. When you slide open the cover, the vanity mirror lighting in the headliner A switches on automatically. It switches off again when you slide the cover closed or when you raise the sun visor.

On vehicles that are equipped with a double sun visor, the auxiliary visor can be unfolded in the direction of the arrow 3 after swivelling the sun visor towards the door.

1

WARNING

The sun visors must not be swivelled towards the side windows in the deployment area of the head airbags if any objects, such as ball-point pens, etc. are attached to them. This might result in injuries to the occupants if the head airbag is deployed.

Sun screen

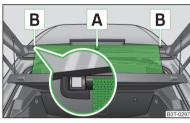


Fig. 42 Unroll the sun screen



First read and observe the introductory information given on page 59.

The sun screen is located in the lower part of the boot cover.

Pulling out

Pull the sun screen on the handle A » Fig. 42 and hang it in the magnetic brackets B.

Folding

Remove the sun screen from the magnetic brackets B and hold it on the handle A so that it can slowly roll up into the housing on the boot cover without being damaged.



Note

Do not place any objects that react sensitively to influences of magnetic fields (watches, electronics, etc.) in the immediate vicinity of the magnetic brackets. They can be damaged by the magnetic field.

Sun screen in the rear doors



Fig. 43 Rear door: Sun screen



First read and observe the introductory information given on page 59.

Pulling out

> Pull out the sun screen with the handle A » Fig. 43 and hang it in the bracket on the top edge of the door.

Folding

> Remove the sun screen from the handle A » Fig. 43 and hold it in such a way that it can roll up slowly without being damaged.

Windscreen wipers and washers

Introduction

This chapter contains information on the following subjects:

The windscreen wipers and the wash system only operate if the ignition is switched on and the bonnet is closed.

If the intermittent wipe is switched on, the intervals are also controlled depending on speed.

When automatic wiping in rain is active, the wiper intervals are regulated based on the intensity of the rain.

The rear window is wiped once automatically if the windscreen wipers are on when reverse gear is selected.

Top up with windscreen wiper fluid » page 209.

WARNING

- Properly maintained windscreen wiper blades are essential for clear visibility and safe driving » page 243.
- Replace the windscreen wiper blades once or twice a year for safety reasons. These can be purchased from a ŠKODA Partner.
- Do not use the windscreen washer system at low temperatures, without heating the windscreen beforehand. Otherwise the window cleaner could freeze on the windscreen and restrict the view to the front.
- Automatic wiping in rain only operates as a support. The driver is not released from the responsibility to set the function of the windscreen wipers manually depending on the visibility conditions.

CAUTION

- In cold temperatures and during the winter, check before the journey or before switching on the ignition that the wiper blades are not frozen to the windscreen. If the windscreen wipers are switched on when the blades are frozen to the windscreen, this may damage both the blades and windscreen wiper motor!
- If the ignition is switched off while the windscreen wipers are switched on, the windscreen wipers will continue wiping in the same mode after the ignition is turned back on. The windscreen wipers could freeze up in cold temperatures between the time the ignition was turned off and when it was turned back on again.
- Carefully detach frozen wiper blades from the front or rear window.
- Remove snow and ice from the windscreen wipers before driving.
- If the windscreen wipers are handled carelessly, there is a risk of damage to the windscreen.
- The ignition must not be switched on if the front windscreen wiper arms are folded out. The wiper blades would move back into their rest position and while doing so damage the paintwork of the bonnet.
- If there is an obstacle on the windscreen, the wiper will try to push away the obstacle. The wiper stops automatically after 5 attempts to eliminate the obstacle, in order to avoid a damage to the wiper. Remove the the obstacle and switch the wiper on again.

i

Note

- Each time the ignition switches off for the third time, the position of the wind-screen wipers changes. This counteracts an early fatigue of the wiper rubbers.
- The rear window wiper only operates if the boot lid is closed.
- Keep the wiper blades clean. They may become soiled, e.g., with wax residues after washing in automatic car wash systems » page 197.
- The windscreen washer nozzles for the windscreen are heated when the engine is running and the outside temperature is less than approx. +10 °C.

Windscreen wipers and washers

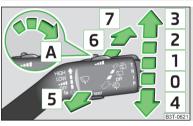


Fig. 44 Operating lever: Windscreen wipers and washer settings



First read and observe the introductory information and safety warnings ! on page 61.

Lever positions » Fig. 44

- Wipers off
- 1 Periodic windscreen wiping/automatic wiping in rain
- 2 slow windscreen wiping
- 3 rapid windscreen wiping
- 4 Flick windscreen wiping (spring-tensioned position)
- 5 Automatic wipe/wash for windscreen (spring-tensioned position)
- Wiping the rear window pane (the windscreen wiper wipes at regular intervals after a few seconds)
- 7 Automatic wipe/wash for the rear window (spring-tensioned position)
- Switches for setting the required break between the individual wiper strokes

 (1 periodic windscreen wiping) or the wiper speed in rain (1 automatic windscreen wiping in rain)

Automatic wipe/wash for windscreen

The wash system operates immediately, the windscreen wipers wipe somewhat later. The wash system and the windscreen wiper operate simultaneously at a speed of more than 120 km/h.

Letting go of the lever will cause the windscreen wash system to stop and the wiper to continue for another 3-4 wiper strokes (depending on the period of spraying of the windscreen).

At a speed of more than 2 km/h, the wiper wipes once again 5 seconds after the last wiper stroke in order to wipe the last drops from the windscreen. This function can be activated/deactivated by a specialist garage.

Automatic wipe/wash for the rear window (Superb Combi)

The wash system operates immediately, the windscreen wiper wipes somewhat later.

Letting go of the lever will cause the windscreen wash system to stop and the wiper to continue for another 2-3 wiper strokes (depending on the period of spraying of the windscreen). The lever remains in position $\boxed{6}$ » Fig. 44.

Automatic rear window wiper (Superb Combi)

If the lever is in position $\boxed{2}$ » Fig. 44 or $\boxed{3}$ the rear window is wiped every 30 or 10 seconds if the vehicle's speed exceeds 5 km/h.

If automatic windscreen wiping in rain is activated (the lever is in the position 1) the function is only active if the windscreen wipers operate in continuous mode (no break between each wiping process).

Automatic rear window wiping can be activated/deactivated via the MAXI DOT display in the menu item **Rear wiper** » page 29.

Winter setting of the windscreen wiper

If the windscreen wipers are in rest position, they cannot be folded out from the windscreen. For this reason we recommend adjusting the windscreen wipers in winter so that they can be folded out from the windscreen easily.

- > Switch on the windscreen wipers.
- > Switch off the ignition.

The windscreen wipers remain in the position in which they were when switching off the ignition.

The service position can also be used as a winter position » page 243.

i

Note

If the slow or the fast wiper setting is switched on and the vehicle speed decreases to below 4 km/h, the wiper speed is incrementally set to a lower wiper speed. The original setting is restored step by step when the speed of the vehicle exceeds 8 km/h.

Alternative parking position of the rear windscreen wiper (Superb Combi)



First read and observe the introductory information and safety warnings **!!** on page 61.

Each time after switching off the engine for the second time, the wiper blade of the rear window wiper is tilted. This prolongs the life of the wiper blade.

Activation/deactivation

- > Switch on the ignition.
- > Push the operating lever to position 6 » Fig. 44 on page 62 five times in succession within 5 seconds.
- Switch off the ignition. After switching on the ignition again, the alternative park position of the rear window wiper is activated/deactivated.

Headlight cleaning system



First read and observe the introductory information and safety warnings ! on page 61.

After the ignition is turned on headlamps are always cleaned at the first and after every tenth spraying of the windscreen 5 » Fig. 44 on page 62 when the low beam or high beam is switched on.

You should remove stubborn dirt (such as insect residues) from the headlight lenses at regular intervals, for example when refuelling. The following guidelines must be observed » page 200, *Headlight lenses*.

To ensure the proper operation of the cleaning system during the winter, any snow should be removed from the washer nozzle fixtures and ice should be cleared with a de-icing spray.

CAUTION

Never remove the nozzles from the headlight cleaning system by hand – risk of damage!

Rear mirror

Introduction

This chapter contains information on the following subjects:

WARNING

- Make sure that the mirror is not covered by ice, snow, mist or other objects.
- Convex (curved outward) or aspheric exterior mirrors increase the field of vision. They do, however, make objects appear smaller in the mirror. These mirrors are therefore only of limited use for estimating distances to the following vehicles.
- Whenever possible use the interior mirror for estimating the distances to the following vehicles.
- The illuminated display of an external navigation unit can lead to operational faults to the automatic dimming interior mirror risk of accident.

WARNING

Automatic dimming mirrors contain an electrolytic fluid which may leak should the mirror glass break.

- The leaking electrolytic fluid can irritate the skin, eyes and breath apparatus. Immediately seek out fresh air and leave the vehicle. If this is not possible, open all windows and doors.
- If you swallow electrolytic fluid, seek medical assistance immediately.
- If your eyes or skin come into contact with the electrolytic fluid, immediately wash the affected area for a few minutes long with a lot of water. Then consult a doctor immediately.

CAUTION

Never mechanically fold in or fold back the exterior mirrors with the fold-in function \ominus by hand as this will damage the electric drive.

l No

Note

- Automatic mirror dimming operates only properly if the sun screen for the rear window in the housing on the boot cover is not in use or the light striking the interior rear-view mirror is not affected by other objects.
- If the automatic interior mirror dimming is switched off, the exterior mirror dimming is also switched off.
- The mirror heater only operates when the engine is running and up to an outside temperature of +35 °C.
- Do not touch the surface of the exterior mirrors if the exterior mirror heater is switched on.
- If the electrical exterior mirror setting fails at any time, the mirrors can be adjusted by hand by pressing on the edge of the mirror surface.
- Contact a specialist garage if there is a fault with the power setting function for the exterior mirrors.

Interior mirror

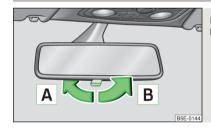


Fig. 45

Manual dimming interior mirror

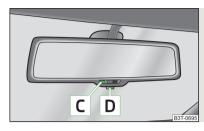


Fig. 46
Automatic dimming mirror



First read and observe the introductory information and safety warnings H on page 63.

Manual dimming interior mirror

- > To dim the mirror set the lever on the rear view mirror in the direction of front wheel arrow A » Fig. 45.
- > To restore the original **position**, adjust the lever on the rear view mirror in the direction of the front wheel off arrow B.

Automatic dimming mirror

- > To activate the Auto Dimmer, press the D button, the indicator light C illuminates >> Fig. 46.
- To disable auto-dimming, press the D button again, the indicator light C goes out.

If automatic dimming is activated, the mirror dims **automatically** depending on the light striking the mirror from the rear.

When the interior lights are switched on or the reverse gear is engaged, the mirror always moves back into the basic position (not dimmed).

Do not attach external navigation devices on to the windscreen or in the vicinity of the automatic dimming interior mirror » page 63, ! in section Introduction.

Exterior mirrors



Fig. 47 **Knob for the mirrors**



First read and observe the introductory information and safety warnings ! on page 63.

By moving the knob in the direction of the arrow, the mirror can be adjusted to the desired position » Fig. 47.

The movement of the mirror surface is identical to the movement of the rotary knob.

The knob can be moved into the following positions.

- L adjust the left mirror or both mirrors
- R adjust right mirror or both mirrors
- Switch off mirror control
- Mirror heater
- ₱ folding in both exterior mirrors

Adjusting both mirrors in sync

After the rotary knob to position L or in right-hand drive in the position R provided, both mirrors may be adjusted simultaneously.

The synchronous adjustment of the two mirrors can be activated/deactivated via the MAXI DOTdisplay in the menu item Mirror adjust » page 29.

Folding-in both of the exterior mirrors with the rotary knob

It is only possible to fold in both exterior mirrors when the ignition is switched on and at a speed of up to 15 km/h.

The mirrors are folded back into the driving position after the rotary knob is turned from the position \rightleftharpoons to a different one.

Folding-in both of the exterior mirrors using the remote control key

The entire mirror can be folded by pressing the \oplus symbol button on the remote control key for 2 seconds. All windows must be closed.

The exterior mirror is folded back into the driving position when the ignition is switched on.

Automatic dimming mirror

The exterior mirrors are dimmed together with the automatic dimming interior mirror » page 64.

Tilting surface of front passenger mirror

On vehicles fitted with the memory function for the driver's seat » page 69, the surface of the mirror tilts down slightly when the reverse gear is engaged and the rotary knob is in the position **R** or in position on vehicles with right-hand drive L » Fig. 47. This provides an aid in seeing the kerb of the pavement when parking the car.

The mirror returns into its initial position after the rotary knob is moved out of position **R** (or position **L** on vehicles with right-hand drive) and put into another position or if the speed is more than 15 km/h.

The tilt of the mirror surface can be activated/deactivated via the MAXI DOT display in the menu item **Mirror down**» page 29.

Memory function for mirrors

On vehicles fitted with a memory function for the driver seat, the relevant setting for the exterior mirrors is also stored automatically when the seat position is stored » page 69.

Seats and useful equipment

Adjusting the seats

III Introduction

This chapter contains information on the following subjects:

Manually adjusting the front seats	67
Electric front seat adjustment	67
Head restraints	68
Memory function of the electrically adjustable seat	69
Memory function of the remote control key	69

The driver's seat should be adjusted in such a way that the pedals can be fully pressed to the floor with slightly bent legs.

The seat backrest on the driver's seat should be adjusted in such a way that the upper point of the steering wheel can be easily reached with slightly bent arms.

Correct adjustment of the seats is particularly important:

- > for safely and quickly reaching the controls;
- > for a relaxed body position that reduces fatigue;
- > for achieving maximum protection from the seat belts and the airbag system.

WARNING

General information

- Caution when adjusting the seat! You may suffer injuries or bruises as a result of adjusting the seat without paying proper attention.
- The electric front seat adjustment is still functional if the ignition is switched off (even with the ignition key removed). Therefore, children should never be left unattended in the vehicle.
- The seat backrests must not be tilted too far back when driving, as this will impair the function of the seat belts and of the airbag system risk of injury!
- Never carry more people than the number of seats in the vehicle.
- Each occupant must correctly fasten the seat belt belonging to the seat. Children must be fastened » page 186, *Transporting children safely* with a suitable restraint system.

WARNING (Continued)

- The front seats and head restraints must be adjusted to match the body size at all times and the seat belt must always be fastened properly to provide the most effective levels of protection to the passengers.
- Do not carry any objects on the front passenger seat except objects designed for this purpose (e.g. child seats) risk of accident!

WARNING

Information for the driver

- Only adjust the driver's seat when the vehicle is stationary risk of accident!
- Maintain a distance of at least 25 cm from the steering wheel, and a distance of at least 10 cm between the legs and the dash panel at the height of the knee airbag. Not maintaining this minimum distance will mean that the airbag system will not be able to properly protect you hazard!
- Ensure that there are no objects in the driver's footwell, as these may get caught in the pedal apparatus when driving or braking » page 139. You would then no longer be able to operate the clutch, brake or accelerate.

WARNING

Information for the front seat passenger

- Maintain a distance of at least 25 cm to the dash panel. Not maintaining this minimum distance will mean that the airbag system will not be able to properly protect you hazard!
- Always keep your feet in the footwell when the car is being driven never place your feet on the instrument panel, out of the window or on the surfaces of the seats. You will be exposed to increased risk of injury if it becomes necessary to apply the brake or in the event of an accident. If an airbag is deployed, you may suffer fatal injuries when adopting an incorrect seated position!

Note

- After a certain time, play can develop within the adjustment mechanism of the backrest angle.
- For safety reasons, it is not possible to store the seat position in the electric seat memory and remote control key memory if the inclination angle of the seat backrest is more than 102° in relation to the seat cushion.
- Each time you store the position of the electrically adjustable driver's seat and exterior mirrors, the existing setting is deleted.

Manually adjusting the front seats

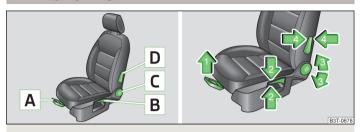


Fig. 48 Controls / setting



First read and observe the introductory information and safety warnings 1 on page 66.

Adjusting a seat in a forward/back direction

> Pull the lever A » Fig. 48 in the direction of the arrow 1 and push the seat in the required direction.

The lock must click into place after you release the lever.

Adjusting height of seat

Again push/pull the lever B » Fig. 48 in the direction of one of the arrows2.

Adjusting the angle of the seat backrest

> Relieve any pressure from the seat backrest (do not lean on it) and turn the handwheel C | x Fig. 48in the direction of the arrow 3.

Adjusting lumbar support

> Push the lever D » Fig. 48 in the direction of one of the arrows4.

Electric front seat adjustment



Fig. 49 Adjusting controls / lumbar support



Fig. 50 Setting: Seat pad / backrest

First read and observe the introductory information and safety warnings ... on page 66.

Adjusting a seat in a forward/back direction

> Push the switch **B** » Fig. 49 in the direction of one of the arrows **3** » Fig. 50.

Set the height of the seat cushion

> Push the switch **B** » Fig. 49 in the direction of one of the arrows **5** » Fig. 50.

Adjust the angle of the seat cushion

> Push the switch **B** » Fig. 49 in the direction of one of the arrows **4** » Fig. 50.

Adjusting the angle of the seat backrest

▶ Push the switch C » Fig. 49 in the direction of one of the arrows **6** » Fig. 50.

Reducing or increasing the curvature of the lumbar support

> Push the switch A in the region of one of the arrows2» Fig. 49.

Raising or lowering the curvature of the lumbar support

> Push the switch A in the region of one of the arrows1» Fig. 49.

The adjusted driver's seat position can be set in the memory of the seat » page 69 or the remote control key » page 69.



If the setting procedure is interrupted, you will need to press the button again.

Head restraints

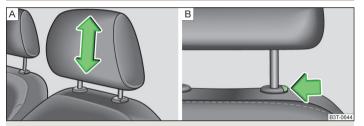


Fig. 51 Headrest: adjusting / removing

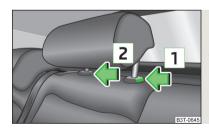


Fig. 52 Rear centre head rests in vehicles with the TOP TETHER system



First read and observe the introductory information and safety warnings ! on page 66.

Best protection is achieved if the top edge of the head rest is at the same level as the upper part of your head.

Setting height

- Grasp the side of the head restraint with both hands and push it upwards as required » Fig. 51 A.
- To move the head restraint downwards, press and hold the safety button » Fig. 51 B with one hand and press the head restraint downwards with the other hand.

The front seats and head rests must be adjusted to match the body size at all times and the seat belt must always be fastened properly to provide the most effective levels of protection to the passengers » page 170, Correct seated position.

Removing/installing

- > Pull the head restraint up out of the seat backrest as far as the stop (for the rear head restraints fold the seat backrest forward).
- > Press the locking button in direction of the arrow $\stackrel{\cdot}{\text{\tiny N}}$ Fig. 51 ${\mathbb B}$ and pull the head restraint out.
- > To re-insert the head restraint, push it far enough down into the seat backrest until the locking button clicks into place.

Removing and installing rear middle head rest

Applies to vehicles using the TOP TETHER system.

- > Pull the head restraint out of the seat backrest as far as the stop.
- Press the locking button in the direction of arrow 1 » Fig. 52, simultaneously press the locking button into the opening 2 using a flat screwdriver with a width of maximum 5 mm and pull out the head rest.
- > To re-insert the head restraint, push it far enough down into the seat backrest until the locking button clicks into place.

1

WARNING

- The head rests must be correctly adjusted to avoid risk of injury.
- Never drive with the head restraints removed risk of injury.
- If the rear seats are occupied, the rear head rests must not be in the lower position.

Note

The middle rear head restraint is adjustable in two positions.

Memory function of the electrically adjustable seat

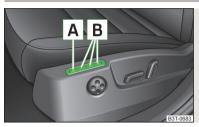


Fig. 53
Memory buttons and SET button



First read and observe the introductory information and safety warnings 1 on page 66.

The memory function for the driver's seat provides the option to store the positions of the driver's seat and the external mirrors. Each of the three memory buttons **B** » Fig. 53 can be assigned a set position.

Storing seat and exterior mirror settings for driving forward

- > Switch on the ignition.
- > Adjust the seat to the desired position.
- > Adjust both of the exterior mirrors » page 65.
- > Press the button (SET) A » Fig. 53.
- > Within 10 seconds after pressing the SET button, press the desired memory button B.

An acknowledgment sound confirms the storage.

Saving front passenger mirror settings when reversing

- > Switch on the ignition.
- > Press the required memory button B » Fig. 53.
- Move the rotary knob for the exterior mirror control into position R » page 65.
- > Engage reverse gear.
- Adjust the front passenger's mirror to the desired position » page 65.

> Disengage reverse gear.

The set position of the exterior mirror is stored.

Retrieving the saved setting

> Briefly press the desired memory button B » Fig. 53 with the ignition on.

10

> Press and hold the desired memory button B with the ignition off or when the ignition is on and travelling at a speed of more than 5 km / h.

Stopping the ongoing adjustment

> Press any button on the driver's seat or the button ⓐ on the remote control key.



Note

Each time new seat and exterior mirror settings for forward travel are saved, the individual setting for the right exterior mirror for reverse travel must also be saved again.

Memory function of the remote control key



First read and observe the introductory information and safety warnings ... on page 66.

The automatic storage of the driver's seat and exterior mirror positions when locking the vehicle can be turned on in the memory of the remote control key (afterwards only as function of automatic storage).

Storing seat and exterior mirror settings for driving forward

> Enable automatic storage.

When automatic storage is activated, the current positions of the driver's seat and the external mirrors are saved in the memory of the remote control key each time the vehicle is locked. When the vehicle is next unlocked using the same key, the driver's seat and the external mirrors assume the positions stored in the memory of this key¹⁾.

Saving front passenger mirror settings when reversing

> Unlock the vehicle with the remote control key.

 $^{^{\}eta}$ The vehicle must be locked and unlocked with the same key to save the seat and exterior mirror position to the key.

- > Switch on the ignition.
- > Turn dial for the exterior mirror control into position R » page 65.
- > Engage reverse gear.
- > Adjust the front passenger's mirror to the desired position » page 65.
- > Disengage reverse gear.

The adjusted position of the exterior mirror is stored in the remote control key memory.

Enable automatic storage

- > Unlock the vehicle with the remote control key.
- > Press and hold any memory button $\boxed{\textbf{B}}$ » Fig. $5\vec{3}$ on page 69. After the seat has assumed the position stored under this button, at the same time press the button a on the remote control key within 10 seconds.

The successful activation of the automatic storage function for each key is confirmed by an acoustic signal.

The seat and external mirror positions which are already saved in the memory button are **not** saved in the memory of the key.

The seat can be adjusted to the required position if necessary » page 67.

After locking the vehicle, the current positions of the driver's seat and the external mirrors are saved in the memory of the remote control key.

Disable the function of automatic storage

- > Unlock the vehicle with the remote control key.
- > Press and hold the SET button A » Fig. 53 on page 69. At the same time, press the button a on the remote control key within 10 seconds.

The successful deactivation of the automatic storage function for each key is confirmed by an acoustic signal.

Stopping the ongoing adjustment

> Press any button on the driver's seat or the button (a) on the remote control key.

Seat features

Introduction

This chapter contains information on the following subjects:

Seat heaters	70
Ventilated front seats	71
Convenience features of passenger seat	72
Armrest, front	72
Armrest rear	73
Seat backrests	73
Rear seat folded forward (Superb Combi)	74

Seat heaters

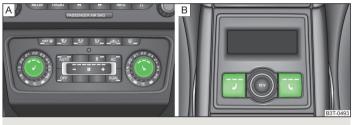


Fig. 54 Heating: Front seats/ rear seats



First read and observe the introductory information given on page 70.

The seat backrests and surfaces of the front seats and the two outer rear seats can be heated electrically.

The seat heating can only be switched on when the engine is running.

Switching on the front seat heater

> Press the controller in the area of the symbols w and w Fig. 54 - A.

Switch on rear seat heater

> Press the symbol button ₩ or ₩ » Fig. 54 - B.

By pressing the button once, the heating is switched to the highest intensity - level 3, which is indicated by all three of the indicator lights in the switch lighting up.

With repeated pressing of the switch, the heating is turned down until it goes off.

The seat heating level is indicated by the number of illuminated warning lights in the respective control.

. ₩A

WARNING

If you have a subdued pain and/or temperature sensitivity, e.g. through medication, paralysis or because of chronic illness (e.g. diabetes), we recommend not to use the seat heating. This can lead to burns on the back, the posterior and the legs which are difficult to heal. If the seat heating is used, we recommend to make regular breaks in your journey when driving long distances, so that the body can recuperate from the stress of the journey. Please consult your doctor, who can evaluate your specific condition.

CAUTION

- Do not kneel on the seats or otherwise apply concentrated pressure to them.
- Do not turn on the seat heater if seats are not occupied.
- Do not switch on the seat heating if the seats have objects attached to or placed on them, for example a child seat, a bag, etc. A fault of the heating elements in the seat heating can occur.
- If additional seat covers or protective covers are attached to the seats, do not turn on the seat heater - there is a risk of damaging the seat covers and seat heating.
- Do not clean the seats using moisture » page 203, Seat covers.

Note

- If the on-board voltage drops, the seat heating is switched off automatically, in order to provide sufficient electrical energy for the engine control » page 218.
- If the heaters for the rear seats are set to the highest intensity level 3, they are automatically switched over to level 2 after 10 minutes (two indicator lights are illuminated on the switch).

Ventilated front seats



Fig. 55
Rocker switch for the seat ventilation



First read and observe the introductory information given on page 70.

Heat and condensation can be removed from the seat cushions and seat backrests on the front seats.

The ventilation is operated using the rocker switch » Fig. 55 in the front part of the seat cushion, in front of the seat control elements for the electric front seat adjustment.

Switching on

> Switch the rocker switch to position 1 - lower intensity and to position 2 - higher intensity.

Switching off

> Switch the rocker switch to the centre position ***i**.

WARNING

If you or a passenger have limited pain and/or temperature sensitivity, e.g. caused by medication, paralysis or because of chronic illness (e.g. diabetes), we recommend that you consult your physician before using the ventilated front seat.

CAUTION

- Do not kneel on the seats or otherwise apply concentrated pressure to them.
- The fan is located underneath the front seat cushion. Do not place any objects in this area it may damage the fan.
- Do not clean the seats using moisture » page 203, Seat covers.

i

Note

- The ventilation should only be switched on when the engine is running. This has a significant effect of saving on the battery capacity.
- We do not recommend using the front seat ventilation and heating at the same time. Using the ventilation to cool the seat surface considerably reduces the heating capacity, at the same time affecting the ability of the control unit to detect the right seat surface temperature.

Convenience features of passenger seat

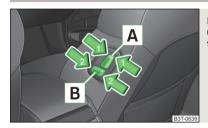


Fig. 56
Operating passenger seat from the rear seat



First read and observe the introductory information given on page 70.

The front passenger seat can also be operated from the rear seat.

Adjusting the angle of the seat backrest

> Push the switch A in the direction of one of the arrows 1 » Fig. 56.

Adjusting a seat in a forward/back direction

> Push the switch B in the direction of one of the arrows 2 » Fig. 56.

Armrest, front

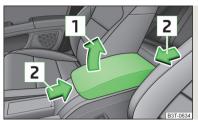


Fig. 57 **Adjusting armrest**



First read and observe the introductory information given on page 70.

The armrest is adjustable for height and length.

Setting height

First of all fold the cover downwards and then lift it in the direction of the arrow
 Fig. 57 to one of the 4 fixed positions.

Move

> Move the cover into the desired position in the direction of the arrow $\boxed{\mathbf{2}}$ » Fig. 57.

The armrest includes a storage compartment underneath » page 79.



Note

Push the armrest cover all the way back to the stop before applying the handbrake.

Armrest rear



Fig. 58
Fold the armrest forwards



First read and observe the introductory information given on page 70.

Folding forward

> Fold down the armrest in the direction of the arrow » Fig. 58.

A cup holder may be located in the armrest » page 76.

Seat backrests

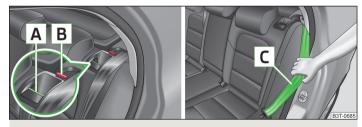


Fig. 59 Seat back: unlock / lock

First read and observe the introductory information given on page 70.

The luggage compartment can be increased in size by folding the seat backrests forward. The seat backrests can be folded forward individually on vehicles with divided rear seats.

Folding forward

Before folding the seat backrests forwards, adapt the position of the front seats in such a way that they are not damaged by the folded seat backrests ¹⁾.

> Push the lever A » Fig. 59 and fold the seat backrest completely forwards.

Folding backward

- > If you removed the head restraint, you need to reinsert it with the backrest tilted slightly forwards » page 68.
- ➤ Hold the rear outer seat belt **C** » Fig. 59 against the side trim panel.
- > Then push the seat backrest back into the upright position until the securing knob A clicks into place check by pulling on the seat backrest » ...
- > Make sure that the red pin B is hidden.

WARNING

- The seat belts and the belt locks must be in their original position after folding back the seat backrests they must be ready to use.
- The seat backrests must be securely locked in position so that no objects in the luggage compartment can slide into the passenger compartment on sudden braking – risk of injury.
- Ensure that the rear seat backrests are properly engaged. Only then can the seat belt for the middle seat reliably fulfil its function.

CAUTION

Ensure that the seat belts are not damaged when operating the seat backrests. Under no circumstances must the rear seat belts be jammed by the folded back seat backrests.

If the front seats are too far back, we recommend removing the rear head restraints before the seat backrests are folded forward, to achieve a loading space that is as horizontal as possible. Store the removed head restraints in such a way that they are not be damaged or soiled.

Rear seat folded forward (Superb Combi)

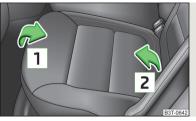


Fig. 60
Folding the seat cushion forwards



First read and observe the introductory information given on page 70.

> Pull up the seat cushion in the direction of the arrow 1 » Fig. 60 and fold forwards in the direction of the arrow 2.

i

Note

To achieve a loading space that is as horizontal as possible, the rear head restraints can be removed before folding the seat backrests forwards. Store the removed head restraints in such a way that they are not be damaged or soiled.

Practical equipment

Introduction

This chapter contains information on the following subjects:

Car park ticket holder	75
Storage compartment on the driver's side	75
Storage compartments in the doors	75
Storage compartment in the front centre console	76
Cup holders	76
Cigarette lighter	77
Ashtray	77
12-Volt power outlet	78
Storage compartment under the armrest, front	79

Storage net in the front centre console	_ 79
Glasses storage box	_ 80
Storage compartment on the passenger side	
Storage compartment under the passenger seat	_ 81
Clothes hook	_ 81
Storage pockets on the front seats	_ 82
Storage compartment for umbrella	_ 82
Storage compartment in rear centre console	_ 82
Storage compartment in the rear armrest	_ 83
Rear seat backrest with long-cargo channel	_ 83
Removable ski bag	_ 84

1

WARNING

- Do not place anything on the dash panel. These objects might slide or fall down when driving (when accelerating or cornering) and may distract you from concentrating on the traffic there is the risk of an accident.
- When driving, ensure that no objects from the centre console or from other storage compartments can get into the driver's footwell. You would then no longer be able to apply the brakes or operate the clutch or accelerator pedal risk of accident!
- No objects should be placed in the storage compartments nor in the drinks holders; the vehicle occupants could be endangered if there is sudden braking or the vehicle collides with something.
- Ash and cigarette or cigar stubs must only be discarded in ashtrays!

Car park ticket holder



Fig. 61 Windscreen: Parking ticket holder



First read and observe the introductory information and safety warnings 1. on page 74.

The note holder is designed e.g. for attaching car park tickets.

WARNING

The attached note has to always be **removed** before starting off in order not to restrict the driver's vision.

Storage compartment on the driver's side

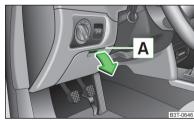


Fig. 62 Storage compartment on the driver's side



First read and observe the introductory information and safety warnings ! on page 74.

Opening

> Raise the handle A » Fig. 62 and open out the compartment in the direction of the arrow.

Closing

> Swivel the lid against the direction of the arrow until it clicks into place.

!

WARNING

The storage compartment must always be closed when driving for safety reasons.

Storage compartments in the doors



Fig. 63 Storage compartment: in the front door/in the rear door



First read and observe the introductory information and safety warnings 1. on page 74.

!

WARNING

Use the storage compartment only for storing objects which do not project so that the effectiveness of the side airbag is not impaired.

Storage compartment in the front centre console



Fig. 64
Opening the storage compartment



First read and observe the introductory information and safety warnings 1 on page 74.

Open/close

ightarrow Press on the edge of the roof $\boxed{\mathbf{A}}$ » Fig. 64 in the direction of the arrow.

Closing takes place in the reverse order.

WARNING

The storage compartment must never be used as an ashtray or for the storage of combustible materials - fire hazard and risk of damage to the storage compartment!

Note

The storage compartment is equipped with an interior light which lights up when the parking light is on.

Cup holders

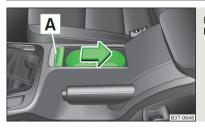


Fig. 65
Front centre console: Cup holder

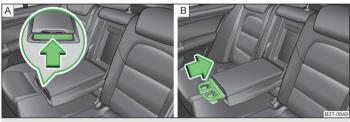


Fig. 66 Rear armrest: Remove cup holder/insert cup holder



First read and observe the introductory information and safety warnings 1 on page 74.

Two beverage containers can be placed into the cup holder.

Cup holder at the front

On vehicles that are fitted with a cover for cup holders, you can cover the cup holder by pulling on the handle $\boxed{\mathbf{A}}$ » Fig. 65 in the direction of the arrow.

Rear cup holder

- Press on the front end of the armrest in the direction of the arrow » Fig. 66 A, the cup holder comes out.
- > To slide the cup holder in again, press the middle part of the cup holder » Fig. 66 ■ and slide it into the armrest in the direction of the arrow.

WARNING

- Never put hot beverage containers in the cup holder. If the vehicle moves, they may spill - risk of scalding!
- Do not use any cups or beakers which are made of brittle material (e.g. glass, porcelain). This could lead to injuries in the event of an accident.

CAUTION

- Do not leave open beverage containers in the cup holder during the journey. There is a risk of spilling e.g. when braking which may cause damage to the electrical components or seat upholstery.
- Slide in the cup holder before raising the rear armrest.

Cigarette lighter

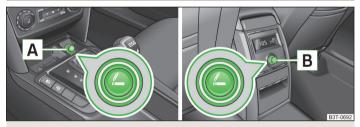


Fig. 67 Centre console: Cigarette lighter, front/rear



First read and observe the introductory information and safety warnings **!!** on page 74.

Usage

- > Press the button of the cigarette lighter A or B » Fig. 67.
- > Wait until the button pops forward.
- > Remove the cigarette lighter immediately and use.
- > Place the cigarette lighter back into the socket.

WARNING

- Take care when using the cigarette lighter! Improper usage can case burns.
- The cigarette lighter also operates when the ignition is switched off or the ignition key withdrawn. Therefore never leave children unattended in the vehicle.

Note

- The cigarette lighter socket can also be used as a 12Volt socket for electrical appliances » page 78, 12-Volt power outlet.
- Further information » page 193, Services, modifications, and technical alterations.

Ashtray



Fig. 68 Centre console: Ashtray at the front/rear



First read and observe the introductory information and safety warnings II on page 74.

The ashtray can be used for discarding ash, cigarettes, cigars and the like » ...

Removing/inserting the front ash tray

- > Open the ashtray » Fig. 64 on page 76.
- > Grasp the ashtray insert in the area A » Fig. 68 and remove it in the direction of the arrow 1.

Insertion takes place in the reverse order.

Removing/inserting the rear ashtray insert

> Open the ashtray » Fig. 77 on page 82.

> Grasp the ashtray insert B » Fig. 68 in the area marked with the arrows and remove it in the direction of the arrow 2.

Insertion takes place in the reverse order.

WARNING

Never place flammable objects in the ashtray - risk of fire!



The ashtrays are fitted with an interior light which lights up when the parking light is on.

12-Volt power outlet

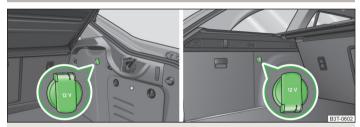


Fig. 69 Boot: Superb / Superb Combi socket



First read and observe the introductory information and safety warnings 14 on page 74.

Overview of the 12-volt power socket

In the front centre console A » Fig. 67 on page 77.

In the rear centre console **B** » Fig. 67 on page 77.

In the boot » Fig. 69.

Using the power socket

- Remove the cover from power socket or cigarette lighter » Fig. 67 on page 77or open the cover for the power socket» Fig. 69.
- > Connect the plug for the electrical appliance to the socket.

The 12-volt power sockets and any connected appliances can also be operated when the ignition is switched off or the ignition key is withdrawn » .

WARNING

- Improper use of the power sockets and the electrical accessories can cause fires, burns and other serious injuries.
- Never leave children unattended in the vehicle.
- If the connected electric device becomes too hot, switch it off and disconnect it from the power supply immediately.

CAUTION

- The power socket can only be used for connecting approved electrical accessories with a power uptake of up to 120 watt.
- Never exceed the maximum power consumption, otherwise the vehicle's electrical system can be damaged.
- Connecting appliances when the engine is not running will drain the battery of the vehicle!
- Only use matching plugs to avoid damaging the power sockets.
- Only use accessories that have been tested for electromagnetic compatibility in accordance with the applicable directives.
- Switch off the devices connected to the power sockets before you switch the ignition on or off and before starting the engine, to avoid damage from voltage fluctuations.
- Observe the operating instructions for the connected devices!

Storage compartment under the armrest, front



Fia. 70 Armrest: Stowage compartment



First read and observe the introductory information and safety warnings II on page 74.

Openina

> Pull and open the cover of the armrest using the handle A in the direction of the arrow » Fig. 70.

Closing


> Open the lid to the stop, only then can it be folded downwards and against the direction of the arrow » Fig. 70.

The sockets marked AUX AUX-IN input and the MDI input are located in the storage compartment.



The storage compartment is equipped with an interior light which lights up when the parking light is on.

Storage net in the front centre console

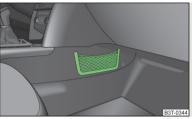

Fia. 71 Front centre console: Storage

First read and observe the introductory information and safety warnings II on page 74.

WARNING

Only store soft objects with a total weight of 0.5 kg in the storage net. Heavy objects are not secured sufficiently - risk of injury!

CAUTION

Do not place any sharp objects in the nets - risk of net damage.

Glasses storage box

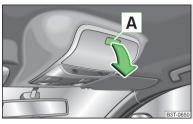


Fig. 72 Opening the glasses storage box



First read and observe the introductory information and safety warnings • on page 74.

Opening

> Press the button A » Fig. 72.

The box folds in the direction of the arrow.

Closing

> Swivel the lid on the glasses storage box against the direction of the arrow » Fig. 72until it is heard to lock.

WARNING

- The compartment must only be opened when removing or inserting the spectacles and otherwise must be kept closed!
- The box must be closed before leaving and locking the vehicle risk of impairment to the functions of the anti-theft alarm system!

CAUTION

Do not put any heat-sensitive objects in the glasses storage box - they may be damaged.

Storage compartment on the passenger side

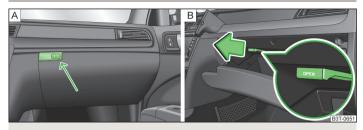


Fig. 73 Tray open / operating air supply



First read and observe the introductory information and safety warnings 1 on page 74.

A pen holder is provided in the stowage compartment.

Opening

> Press the button » Fig. 73 - A.

The flap folds down.

Closing

> Lift the lid upwards until it clicks into place.

Air supply

- > Open the air supply by pulling the lever in the direction of the arrow » Fig. 73 B.
- The air supply is closed by pressing the lever in the opposite direction to that of the arrow.

Opening the air supply when the air conditioning system is switched on allows cooled air to flow into the storage compartment.

Opening the air inlet when the air conditioning system is on causes fresh or interior air to flow into the storage compartment.

We recommend closing the air supply if it is operated in heating mode or the cooling system for the storage compartment is not being used.

WARNING

The storage compartment must always be closed when driving for safety reasons.

Note

When the stowage compartment is opened, a light lights up.

Storage compartment under the passenger seat



Fig. 74
Front passenger seat: Opening the storage compartment



First read and observe the introductory information and safety warnings H on page 74.

Opening

> Pull the handle to position 1 » Fig. 74 in the direction of the arrow.

The compartment opens in the direction of the arrow 2.

Closing

- ➤ Grip the compartment by the handle and close in the opposite direction to that of the arrow 2 >> Fig. 74.
- > Hold onto the handle until the door is closed.

WARNING

The storage compartment must always be closed when driving for safety reasons.

CAUTION

The storage compartment is designed for storing small objects of up to 1.5 kg. in weight.

Clothes hook



First read and observe the introductory information and safety warnings ! on page 74.

The clothes hooks are located on the middle pillar of the vehicle and on the handle of the headliner above each of the rear doors.

WARNING

- Only hang light items of clothing on the hooks. Never leave any heavy or sharp-edged objects in the pockets of the items of clothing.
- Do not use clothes hangers for hanging up items of clothing otherwise this may reduce the effectiveness of head airbags.
- Ensure that any clothes hanging from the hooks do not impair your vision to the rear.

CAUTION

The maximum permissible load of the hooks is 2 kg.

Storage pockets on the front seats



Fia. 75 Map pockets



First read and observe the introductory information and safety warnings II on page 74.

The pockets intended for storage of maps, magazines, etc. are provided on the reverse side of the front seat rests » Fig. 75.

WARNING

Never put heavy items in the map pockets - risk of injury!

CAUTION

Never put large objects into the map pockets, e.g. bottles or objects with sharp edges - risk of damaging the pockets and seat coverings.

Storage compartment for umbrella



Fig. 76 Left rear door: Stowage compartment for an umbrella



First read and observe the introductory information and safety warnings II on page 74.

The storage compartment for an umbrella is located in the rear left door » Fig. 76.



Note

An umbrella can be purchased from ŠKODA Original Accessories.

Storage compartment in rear centre console

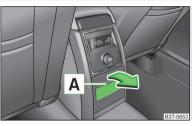


Fig. 77 Opening the storage compartment



First read and observe the introductory information and safety warnings II on page 74.

The storage compartment is equipped with a removable insert.

Open/close

> Pull the handle A » Fig. 77 on the upper section of the recess and open out the compartment in the direction of the arrow.

Closing takes place in the reverse order.



The storage compartment is not a substitute for the ashtray and must also not be used for such purposes - risk of fire!

Storage compartment in the rear armrest



Fig. 78 Opening the storage compartment



First read and observe the introductory information and safety warnings 11 on page 74.

Opening

• Lift button A on the front of the armrest and lift the storage compartment cover in the direction of the arrow » Fig. 78.

Closing

> Fold back the storage compartment lid in the opposite direction to that of the arrow » Fig. 78 until it clicks.

Rear seat backrest with long-cargo channel

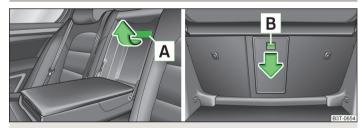


Fig. 79 Rear seats: Cover handle/boot: Unlock button



First read and observe the introductory information and safety warnings II on page 74.

After folding the rear armrest and cover up, an opening in the seat backrest becomes visible through which the removable through-loading bag with skis can be pushed. The armrest and cover can be folded forward from the passenger compartment or the boot.

Opening from the passenger compartment

- > Fold down the rear armrest » Fig. 58 on page 73.
- > Pull the handle A pull up to the stop in the direction of the arrow and fold the cover down » Fig. 79.

Opening from the boot

> Push the unlock button B » Fig. 79 in the direction of the arrow and fold the cover including the armrest forwards.

Closing

> Fold the cover and rear armrest upwards to the stop - the cover must click into place.

Ensure that the armrest is always locked into place after closing. This is apparent as the red field above the unlocking button $\boxed{\mathbf{B}}$ » Fig. 79 is not visible from the boot.

WARNING

The through-loading channel is only intended for transporting skis that are placed in a properly secured, removable through-loading bag » page 84.

Removable ski bag

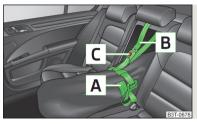


Fig. 80 Securing the through-loading bag



First read and observe the introductory information and safety warnings H on page 74.

The removable through-loading bag is solely used for transporting skis.

Loading

- > Open the boot lid.
- > Fold the rear armrest and the cover in the seat backrest downwards » page 83, Rear seat backrest with long-cargo channel.
- Place the empty, removable through-loading bag in such a way that the end of the bag with the zip is in the boot.
- > Push the skis into the removable through-loading bag from the boot » .
- > Close the through-loading bag.

Securing

- > Tighten the strap A on the free end around the skis in front of the bindings » Fig. 80.
- > Fold the seat backrest a little forward.
- Guide the securing strap B through the opening in the seat backrest around the upper part of the seat backrest.
- Then push the seat backrest back into the upright position until the unlocking button clicks into place - check by pulling on the seat backrest.
- > Insert the securing strap B into the lock C until it clicks into place.

On vehicles fitted with a luggage net partition, guide the securing strap B around the housing when the net partition is rolled up. After fixing the net partition in place, it is not longer possible to unroll the net partition.

WARNING

- After placing skis into the through-loading bag, you must secure the bag with the securing strap B » Fig. 80.
- The strap A must hold the skis tight.
- Make sure that the strap A holds the skis in front of the binding (also refer to imprint on the removable through-loading bag).
- The total weight of the skis which are transported must not exceed 24 kg.

Note

- The through-loading bag is foreseen for four pairs of skis.
- Place the skis with the tips facing to the front and the sticks with the tips facing to the rear. into the removable through-loading bag.
- If there are several pairs of skis in the removable through-loading bag, ensure that the bindings are positioned at the same height.
- The removable through-loading bag must never be folded together or stowed when moist.

Luggage compartment

Introduction

This chapter contains information on the following subjects:

Class N1 vehicles	85
Fastening elements	86
Fixing nets	86
Folding hook	86
Floor covering	87
Luggage net	87
Luggage compartment cover	88
Roll-up boot cover (Superb Combi)	88
Automatic Retractable cargo cover (Superb Combi)	89
Side pockets in luggage compartment	89
Side compartment in boot with battery	90
Non-closable side pocket (Superb Combi)	90

Please observe the following for the purpose of maintaining good handling characteristics of your vehicle:

- > Distribute loads as evenly as possible.
- > Place heavy objects as far forward as possible.
- > Attach the items of luggage to the lashing eyes or using the nets » page 86.

In the event of an accident, even small and light objects gain so much kinetic energy that they can cause severe injuries.

The magnitude of the kinetic energy is dependent on the speed at which the vehicle is travelling and the weight of the object.

Example: In the event of a frontal collision at a speed of 50 km/h, an object with a weight of 4.5 kg produces an energy, which corresponds to 20 times its own weight. This means that it results in a weight of approx. 90 kg " ".

Luggage compartment light

The light switches on/off when the luggage compartment lid is opened or closed.

If the boot lid is open and the ignition switched off, the light will extinguish automatically after around 10 minutes.

Boot light for Superb Combi vehicles » page 90.

WARNING

- Store the objects in the boot and attach them to the lashing eyes.
- Loose objects can be thrown forward during a sudden manoeuvre or in case of an accident and can injure the occupants or other road users.
- Loose objects could hit a deployed airbag and injure occupants danger of death!
- Please note that transporting heavy objects alters the handling properties of the vehicle due to the displacement of the centre of gravity risk of accident! The speed and style of driving must be adjusted accordingly.
- If the items of luggage or objects are attached to the lashing eyes with unsuitable or damaged lashing straps, injuries can occur in the event of braking manoeuvres or accidents. To prevent items of luggage from moving around, always use suitable lashing straps which must be firmly attached to the lashing eyes.
- The transported items must be stowed in such a way that no objects are able to slip forward on sudden driving or braking manoeuvres risk of injury!
- When transporting objects in the luggage compartment that has been enlarged by folding the rear seats forward, ensure the safety of the passengers transported on the other rear seats » page 171.

WARNING (Continued)

- If the rear seat next to the folded forward seat is occupied, ensure maximum safety, e.g. by placing the goods to be transported in such a way that the seat is prevented from folding back in case of a rear collision.
- Do not drive with the luggage compartment lid fully opened or slightly ajar otherwise exhaust gases may get into the interior of the vehicle risk of poisoning!
- Do not exceed the permissible axle loads and permissible gross weight of the vehicle risk of accident!
- Do not transport people in the boot!

CAUTION

Make sure that transported objects with sharp edges do not damage the following:

- heating elements in the rear window;
- elements of the aerial integrated in the rear window;
- Aerial filaments integrated in the rear side windows (Superb Combi).

Note

Tyre pressure must be adjusted to the load » page 221.

Class N1 vehicles



First read and observe the introductory information and safety warnings H on page 84.

On class N1 vehicles, which are not fitted with a protective grille, a lashing set which complies with the standard EN 12195 (1 - 4) must be used for fastening the load.

Fastening elements


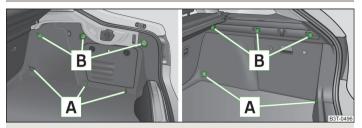


Fig. 81 Lashing eyes and fastening elements: Superb / Superb Combi

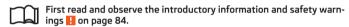

The boot provides the following fastening elements » Fig. 81.

- A Lashing eyes for fastening items of luggage and fixing nets.
- **B** Fastening elements for fastening fixing nets.

CAUTION

The maximum permissible load of the lashing eyes is 3.5 kN (350 kg).

Fixing nets

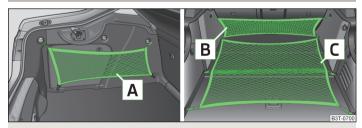


Fig. 82 Fastening examples for nets



First read and observe the introductory information and safety warnings 1 on page 84.

Examples for attaching the fixing nets» Fig. 82.

- A Vertical pocket
- B Horizontal pocket
- **c** Floor net

WARNING

Do not exceed the maximum permissible load of the fixing nets. Heavy objects are not secured sufficiently – risk of injury!

CAUTION

- The maximum permissible load of the fixing nets is 1.5 kg.
- Do not place any sharp objects in the nets risk of net damage.

Folding hook

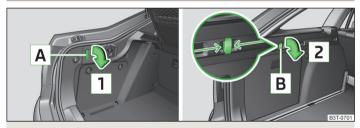


Fig. 83 Folding hooks: Superb / Superb Combi



First read and observe the introductory information and safety warnings \blacksquare on page 84.

Folding hooks for attaching small items of luggage, such as bags etc., are provided on both sides of the boot.

Folding forward

> Superb: Press on the lower portion of the hook A and fold down direction of the arrow 1 > Fig. 83.

> Superb Combi: Grip the hook B direction of the arrow and fold down in the direction of arrow 2 » Fig. 83.

CAUTION

The maximum permissible load of the hook is 7.5 kg.

Floor covering

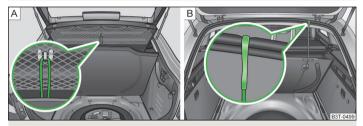


Fig. 84 Fixing the floor covering: Superb / Superb Combi

First read and observe the introductory information and safety warnings \blacksquare on page 84.

The raised floor covering of the luggage compartment can be fixed (e.g. when handling the spare wheel):

- > Superb: with the loop on a hook on the luggage compartment cover » Fig. 84 -
- > Superb Combi: with the hook on the frame of the luggage compartment lid » Fig. 84 - B.

Luggage net

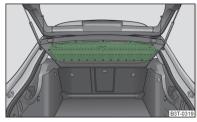


Fig. 85 Luggage net

First read and observe the introductory information and safety warnings II on page 84.

The luggage net is located on the underside of the luggage compartment cover. The net is designed for transporting lighter objects.

WARNING

Only store soft objects with a total weight of 1.5 kg in the net. Heavy objects are not secured sufficiently - risk of injury!

CAUTION

Do not place any sharp objects in the nets - risk of net damage.

Luggage compartment cover

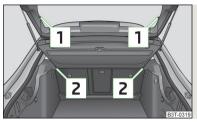


Fig. 86 Removing/installing the luggage compartment cover



First read and observe the introductory information and safety warnings 1 on page 84.

Removina

- > Hook the support straps 1 » Fig. 86 onto the tailgate.
- > Place the cover in the horizontal position.
- > Pull the cover out of the holders 2 horizontally towards the rear.

The removed boot cover can be stowed behind the seat backrest.

Install

- > Push the boot cover into the brackets 2 » Fig. 86.
- > Hook the support straps 1 onto the tailgate.

WARNING

No objects should be placed on the boot cover, the vehicle occupants could be endangered if there is sudden braking or the vehicle collides with something.

CAUTION



If the retaining strips $\boxed{1}$ are attached to the tailgate, the boot cover will raise when you open the tailgate.

Roll-up boot cover (Superb Combi)



Fig. 87 Foldable luggage compartment cover: pull out and roll up / take out



First read and observe the introductory information and safety warnings ! on page 84.

Pulling out

Pull the foldable boot cover as far as the stop into the secured position
 Fig. 87.

Folding

> Press the cover in the handle area in the direction of the arrow 3 » Fig. 87, and the cover automatically rolls up into position 1.

Press in the grip area again and the cover will roll up.

Removing/inserting

The fully rolled-up boot cover can be removed (e.g. for the transport of bulky objects).

> Push on the side of the crossbar in the direction of the arrow 4 » Fig. 87 and remove the cover in the direction of the arrow 5.

Insertion takes place in the reverse order.

WARNING

No objects should be placed on the foldable boot cover.

Automatic Retractable cargo cover (Superb Combi)

First read and observe the introductory information and safety warnings 1 on page 84.

The automatic rolling up of the foldable boot cover enables an easier entry into the boot.

> Open the boot lid.

The foldable boot cover rolls up automatically in the position 1 to » Fig. 87 on page 88.

> Push the cover in the area of the handle in the direction of the arrow 3.

The cover retracts completely.

When the boot lid is opened quickly, the automatic rolling up of the foldable boot cover is blocked for a delay time of approx. 2 seconds.

The function to automatically roll up the foldable boot cover can be activated/deactivated via the MAXI DOT display in the menu:

- Settings
- Auto Rollo

Side pockets in luggage compartment



Fig. 88 Superb boot: Open side compartment left / right



Fig. 89
Superb Combi boot: Open right compartment



First read and observe the introductory information and safety warnings 10 on page 84.

Open / close compartment (Superb)

> Turn the bolts in direction of arrow » Fig. 88.

Closing takes place in the reverse order.

The CD changer and TV tuner are located in the right compartment » Fig. 88.

The first-aid box can also be stored in this compartment.

Open and close compartment / (Superb Combi)

> Pull the handle in the direction of the arrow » Fig. 89.

Closing takes place in the reverse order.

The CD changer and TV Tuner are housed in this compartment.

The first-aid box and warning triangle can also be stored in this compartment.

Side compartment in boot with battery



Fig. 90 Open compartment with battery: Superb / Superb Combi



First read and observe the introductory information and safety warnings 11 on page 84.

On some vehicles the battery is located in the left compartment » page 215.

Open / close compartment (Superb)

> Unfasten the bolts eg with a coin or screwdriver in the direction of the arrow 1 » Fig. 90.

Closing takes place in the reverse order.

Open and close compartment / (Superb Combi)

> For example, insert a coin in the slot A and lift them in the arrow direction 2 > Fig. 90.

The compartment opens in the direction of the arrow 3.

> Close compartment (opposite to arrow direction) 3 until you hear it click.



Note

The side compartment where the battery is located is labelled in the Superb Combi vehicles with the symbol € .

Non-closable side pocket (Superb Combi)



Fig. 91 Removing non-lockable side compartment



First read and observe the introductory information and safety warnings ! on page 84.

Increasing the size of the boot

Remove the cover of the stowage compartment in the direction of the arrow » Fig. 91.

CAUTION

When handling the side compartment, ensure that the cover and the cover mountings are not damaged.

Removable light (Superb Combi)

Introduction

This chapter contains information on the following subjects:

Use light 91
Changing rechargeable light batteries 91

A removable lamp is fitted on the left side of the boot. This lamp has two functions.

- > Lighting the luggage compartment part B illuminated » Fig. 92 on page 91 (lamp in holder).
- > Portable lamp part C illuminated (lamp removed from the holder).

If the lamp is in the holder, it is automatically switched on when the tailgate is opened and switched off again when the tailgate is closed.

The lamp is supplied by three rechargeable type AAA batteries. The rechargeable batteries are constantly charged when the engine is running. It takes approx. 3 hours to fully charge the rechargeable batteries.

The lamp is fitted with magnets. Therefore it is possible to attach the lamp, for example on the vehicle body, after removing it.

CAUTION

The removable lamp is not watertight and must therefore be protected against moisture.

Note

- If the lamp is not correctly inserted into the holder, it does not light up when the boot lid is opened and the rechargeable batteries are not charged.
- If the lamp is not switched off and it is correctly inserted in the holder, the bulbs in the front part C » Fig. 92 on page 91 of the lamp are automatically switched off.

Use light

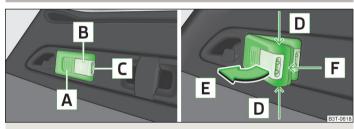


Fig. 92 Use light / remove light



Use light

- > If you press button $\boxed{\mathbb{A}}$ » Fig. 92 once, the lamp lights up with 100 % light intensity.
- If you press button A again, the lamp lights up with 50 % light intensity.
- > Press A button once again the light goes out.

Remove the lamp from the holder

> Grasp the lamp in the areas of the arrows D » Fig. 92 and swivel it in the direction of the arrow E.

Reinserting the lamp the holder

> First of all place the deactivated lamp in the holder on the side facing the boot lid and then press on the lamp from the other side until it is clicks into place.

Changing rechargeable light batteries



First read and observe the introductory information and safety warnings 1. on page 90.

Proceed as follows if you wish to replace the faulty rechargeable batteries yourself:

- > Remove the lamp.
- Lever off the cover for the rechargeable batteries with a narrow and pointed object from the location of the lock-off clips | F| » Fig. 92 on page 91.
- > Remove the faulty rechargeable batteries from the lamp.
- Insert the new rechargeable batteries.
- Insert the cover for the rechargeable batteries and press it down until it clicks into place.

CAUTION

We recommend having faulty rechargeable batteries replaced by a ŠKODA service partner. If the lamp is not correctly opened, it can be damaged.

🚳 Foi

For the sake of the environment

Dispose of used rechargeable batteries in accordance with national legal provisions.

i Note

- Pay attention to the correct polarity when changing the rechargeable batteries.
- The replacement rechargeable batteries must have the same specification as the original rechargeable batteries. If other types of rechargeable batteries are used, the power output can be reduced or it can lead to a malfunction of the lamp.

Variable loading floor in the luggage compartment (Estate)

Introduction

This chapter contains information on the following subjects:

The variable loading floor makes handling of bulky items of luggage easier.

CAUTION

The maximum permissible load of the variable loading floor is 75 kg.

i Note

The room under the variable loading floor can be used to stow objects.

Dividing the luggage compartment

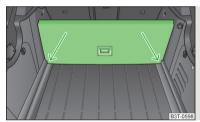


Fig. 93

Dividing the boot with variable loading floor



First read and observe the introductory information and safety warnings ! on page 92.

Lift up the part with the mounting and secure it by sliding it into the grooves marked with the arrows » Fig. 93.

Remove variable loading floor

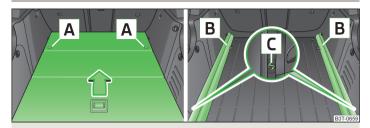


Fig. 94 Boot: Remove variable loading floor/remove carrier rails



First read and observe the introductory information and safety warnings ... on page 92.

- > Unlock the variable loading floor by turning the safety eyes A » Fig. 94 to the left by around 90°.
- > Fold up and remove the loading floor by moving it in the direction of the arrow.
- > Unlock the carrier rails **B** by turning the arbour-mounted fixing eyes **C** to the right by approx. 90°.

WARNING

Ensure that the carrier rails and variable loading floor are correctly fastened when installing the variable loading floor. If this is not the case, there is a risk of injury for the occupants.

Extending variable loading floor with integrated aluminium rails and faseting elements (Superb Combi)

Introduction

This chapter contains information on the following subjects:

Partial extension of variable load floor _______93

Divide boot 93

The variable loading floor makes handling of bulky items of luggage easier.

CAUTION

The maximum permissible load of the variable loading floor is 75 kg.



The space below the variable loading floor can be used for stowing objects, for example the fastening elements, removed foldable boot cover, etc.

Partial extension of variable load floor



Fig. 95 Boot: partially pulling out the variable loading floor



The variable loading floor can be partially pulled out over the rear bumper.

- > Grasp the rear of the variable loading floor by the handle and lift gently in the direction of the arrow 1 | Fig. 95.
- > Extend the variable load floor over the bumper in the direction of the arrow 2 until it engages in the opening C.

The variable loading floor which is pulled out in such a way is solely used as a seat, for example for changing shoes.

- To push in the rear section of the variable loading floor, grasp by the handle and lift slightly in the direction of the arrow 1.
- > Slide the variable load floor forward up to the stop.

When pulling out the variable loading floor, the front edge (close to the rear seats) is lifted at the same time. Thus, small objects can no longer fall into the space between the boot floor and the variable loading floor.

CAUTION

Ensure that the raised front edge of the variable loading floor is not damaged.

Divide boot



Fig. 96

Dividing the boot

First read and observe the introductory information and safety warnings ! on page 92.

The boot can be divided with the variable loading floor.

- > Grasp the rear of the variable loading floor by the handle and lift in the direction of the arrow 1 » Fig. 95 on page 93.
- > Insert the trailing edge in one of the openings A » Fig. 96.

The variable loading floor is secured in the openings A against movement.

The variable loading floor can be pulled out a little more before dividing the boot with the variable loading floor » page 93. This enlarges the space between the rear seats and the separation.

CAUTION

Ensure that the raised front edge of the variable loading floor is not damaged.

Fit and remove variable loading floor

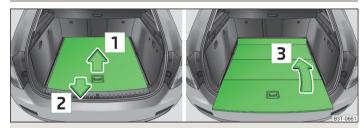


Fig. 97 Boot: Fold up variable loading floor

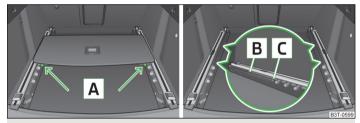


Fig. 98 Boot: remove variable loading floor



First read and observe the introductory information and safety warnings ... on page 92.

The variable loading floor can be removed and reinstalled, if necessary.

Removing

- > Grasp the rear part of the floor by the handle, raise it slightly in the direction of the arrow 1 » Fig. 97 and pull it out over the bumper in the direction of the arrow 2 until it engages in the opening C » Fig. 98.
- > Fold up the loading floor by moving it in the direction of the arrow 3 » Fig. 97.
- > Press the safety buttons A » Fig. 98 and remove the floor.

Install

> Fold up the floor and place it on the carrier rails.

- > Push the floor forwards until it engages in the openings **B** in the carrier rails » Fig. 98.
- > Carefully press in the vicinity of the openings C on the floor until it clicks into place, if necessary press the safety buttons A.

WARNING

Ensure the variable loading floor is attached correctly during installation. If this is not the case, there is a risk of injury for the occupants.

Fixing set

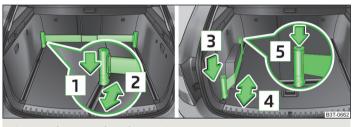


Fig. 99 Telescopic pole and tensioning strap



First read and observe the introductory information and safety warnings ... on page 92.

The fixing set can be used for dividing the boot or for securing the objects which are being transported.

Telescopic pole

- > Insert the holders for the telescopic pole into the left and right openings of the carrier rails.
- > Press the top part of the holder in the direction of the arrow 1 » Fig. 99 and simultaneously push in the desired position in the direction of the arrow 2.
- > Ensure that the holder is correctly locked in place.

Tensioning strap

- > Insert the tensioning strap holders into the opening on the left or right carrier rail.
- > Press the holder in the direction of the arrow 3 » Fig. 99 and simultaneously push in the desired position in the direction of the arrow 4.

- > Ensure that the holder is correctly locked in place.
- > Place the object that is to be secured behind the tensioning strap.
- > Press the button 5 on the top side of the holder and tighten the strap.

WARNING

The objects in the boot must be firmly secured with the fixing set so that they cannot move freely and uncontrollably and to prevent damage to objects or injuries to occupants.

Note

- Do not use the fixing set to secure objects that might damage the fixing set.
- The tensioning strap can also be fully reeled up by pressing the button 5 | » Fig. 99.

Movable lashing eyes

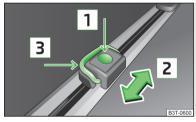


Fig. 100 **Moveable lashing eyes**

First read and observe the introductory information and safety warnings !! on page 92.

There are four moveable lashing eyes in the boot that can, for example, be used to attach the fixing nets.

- > Press the button 1 » Fig. 100 and push the lashing eye in the desired position in the direction of the arrow 2.
- > Fold up the clamp 3 » Fig. 100 and, for example, attach the fixing net.

Net partition (Superb Combi)

Introduction

This chapter contains information on the following subjects:

Using the net partition behind the rear seats	95
Using the net partition behind the front seats	96
Removing and refitting the net partition housing	96

WARNING

-

- Ensure that the cross rod is inserted into the mounts C » Fig. 101 on page 95 or » Fig. 102 on page 96 in the front position!
- The belt locks and the belts must be in their original position after folding back the seat cushions and backrests they must be ready to use.
- The seat backrests must be securely locked in position so that no objects in the luggage compartment can slide into the passenger compartment on sudden braking – risk of injury.
- Ensure that the rear seat backrests are properly engaged. Only then can the seat belt for the middle seat reliably fulfil its function.

Using the net partition behind the rear seats

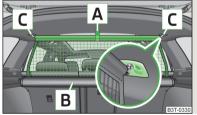


Fig. 101 Net partition behind the front seats in the pulled-out state



First read and observe the introductory information and safety warnings ! on page 95.

Pulling out

- > Pull the net partition by the tab A » Fig. 101 in the direction of the fasteners C
- > Insert the cross rod into one of the mounts C and push forwards.

> In the same way, insert the cross rod into the mount C on the other side of the vehicle.

Folding

- > First pull the cross rod back slightly on the one side and then on the other side and remove it from the mounts C > Fig. 101.
- Hold the cross rod in such a way that the net partition can slowly roll up into the housing B without being damaged.

i Note

If you wish to use the entire luggage compartment, the roll-up luggage compartment cover can be removed » page 88.

Using the net partition behind the front seats

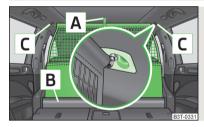


Fig. 102 Net partition behind the front seats in the pulled-out state



First read and observe the introductory information and safety warnings H on page 95.

Pulling out

- > Fold the rear seats forward » page 73.
- > Pull the net partition by the tab A » Fig. 102.
- > First of all insert the cross rod into the mount C on one side and push it forward.
- > In the same way, insert the cross rod into the mount $\[\mathbb{C} \]$ on the other side of the vehicle.

Folding

- > First pull the cross rod back slightly on the one side and then on the other side and remove it from the mounts C » Fig. 102.
- > Hold the cross rod in such a way that the net partition can slowly roll up into the housing B without being damaged.

> Fold the rear seats back into their original positions » page 73.

Removing and refitting the net partition housing

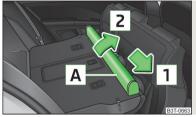


Fig. 103 Rear seats: Removing the net partition housing



First read and observe the introductory information and safety warnings 1 on page 95.

Removina

- > Fold the rear seats forward » page 73.
- > Open the rear right door.
- > Push the housing A in the direction of the arrow 1 and remove it from the mounts on the right seat backrests in the direction of the arrow 2 × Fig. 103.

Install

- Insert the recesses on the housing A » Fig. 103into the mounts on the rear seat backrests.
- > Push the net partition housing in the opposite direction of the arrow 1 as far as the stop.
- > Fold the rear seats back into their original positions » page 73.

Roof rack system

Introduction

This chapter contains information on the following subjects:

Attachment points	97
Roof load	97▶

WARNING

- The transported items on the roof rack must be securely attached risk of accident!
- Always secure the load with appropriate and undamaged lashing straps or tensioning straps.
- Distribute the load evenly over the roof rack system.
- When transporting heavy objects or objects which take up a large area on the roof rack system, the handling of the car may change as a result of the displacement of the centre of gravity. The style of driving and speed must therefore be adapted to the current circumstances.
- Avoid abrupt and sudden driving/braking manoeuvres.
- Adjust the speed and driving style to the visibility, weather, road and traffic conditions.
- The permissible roof load, permissible axle loads and permissible total vehicle weight must not be exceeded under any circumstances risk of accident!

CAUTION

- Only use roof rack systems approved by ŠKODA AUTO a.s
- When dealing with roof racks, the installation instructions supplied with the roof luggage rack system must be observed.
- On models fitted with a power sliding/tilting roof or a panoramic sliding roof, ensure that the opened sliding/tilting roof or the panoramic sliding roof does not strike any items of luggage transported on the roof.
- Ensure that the boot lid does not hit the roof load when opened.
- The height of the vehicle changes after mounting a roof luggage rack system and the load that is secured to it. Compare the vehicle height with available clearances, such as underpasses and garage doors.
- Always remove the roof luggage rack system before entering an automated car wash.
- Ensure the roof aerial is not impaired by the secured load.

For the sake of the environment

The increased aerodynamic drag results in a higher fuel consumption.

Attachment points

Does not apply to the Superb Combi.



Fig. 104 Attachment points for roof bars



First read and observe the introductory information and safety warnings ! on page 96.

Installation location of the attachment points for roof bars » Fig. 104:

- A Forward attachment point
- **B** Rear attachment point

Perform the assembly and disassembly according to the enclosed instructions.



CAUTION

Observe the information regarding the assembly and disassembly in the enclosed instructions.

Roof load



First read and observe the introductory information and safety warnings 1 on page 96.

The maximum permissible roof load (including roof rack system) of $100 \ kg$ and the maximum permissible total weight of the vehicle should not be exceeded.

The full permissible roof load cannot be used if a roof rack system with a lower load carrying capacity is used. In this case, the roof rack system must only be loaded up to the maximum weight limit specified in the fitting instructions.

Air conditioning system

Heating, ventilation and cooling

Introduction

This chapter contains information on the following subjects:

Air outlets	99
Using the air conditioning system economically	99
Operational problems	100

The heating effect is dependent upon the coolant temperature, thus full heat output only occurs when the engine has reached its operating temperature.

If the cooling system is switched on, the temperature and air humidity drops in the vehicle. The cooling system prevents the windows from misting up during winter months.

It is possible to briefly activate recirculated air mode to enhance the cooling effect.

Please refer to the information regarding recirculated air mode for the air-conditioning system » page 102 or for Climatronic » page 105.

WARNING

For your own safety and that of other road users, ensure that all the windows are free of ice, snow and misting. Please familiarize yourself about how to correctly operate the heating and ventilation systems, how to demist and defrost the windows, as well as with the cooling mode.

CAUTION

- The air inlet in front of the windscreen must be free (e.g. of ice, snow or leaves) to ensure that the heating and cooling system operates properly.
- After switching on the cooling **Condensation** from the evaporator of the air conditioning may drip down and form a puddle below the vehicle. This is not a leak!

i

Note

- The used air streams out through the vents in the boot.
- We recommend that you do not smoke in the vehicle when the recirculating air mode is operating since the smoke which is drawn at the evaporator from the interior of the vehicle forms deposits in the evaporator of the air conditioning system. This produces a permanent odour when the air conditioning system is operating which can only be eliminated through considerable effort and expense (replacement of compressor).

Air outlets

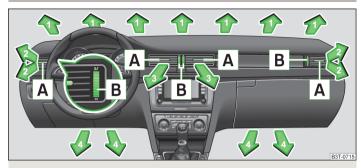


Fig. 105 Air vents at the front



Fig. 106 Air vents at the rear



First read and observe the introductory information and safety warnings ! on page 98.

Unwarmed or cooled air will flow out of the opened air outlet vents according to the setting of control dial and the outside atmospheric conditions.

The direction of airflow can be adjusted using the air outlet vents **2**, **3** » Fig. 105 and **5** » Fig. 106 - the outlets can be opened and closed individually.

Set the air flow direction

- > To adjust the height of the air flow, turn the horizontal vanes up or down with the movable adjuster A » Fig. 105 » Fig. 106.
- > To change the lateral direction of the air flow, turn the vertical fins with the movable adjuster A » Fig. 105 or » Fig. 106 to the left or right.

Setting the amount of airflow

- > Turn the knob B > Fig. 105 and > Fig. 106 to position 2 to fully open the air outlet.
- Turn the knob **B** » Fig. 105 and » Fig. 106 to position **0** to close the air outlet.

The knob can be adjusted to any position in between.

An overview of the available settings for adjusting the direction of the air outlet

Setting the direction of the air outlet	Active air outlet vents
# / # j	1, 2
	1, 2, 4, 6
212 3	2, 3, 5
!	4, 6



Note

Do not cover the air outlet vents with objects of any kind.

Using the air conditioning system economically



First read and observe the introductory information and safety warnings **!!** on page 98.

The compressor on the air conditioning system uses power from the engine when in cooling mode which will effect the fuel consumption.

It recommended to open the windows or the doors of a vehicle for which the interior has been strongly heated through the effect of direct sunlight in order to allow the heated air to escape.

The cooling system should not be on if the windows are open.

For the sake of the environment

Pollutant emissions are also lower when fuel is being saved » page 143, *Economical driving and environmental sustainability*.

Operational problems



First read and observe the introductory information and safety warnings H on page 98.

If the cooling system does not operate at outside temperatures higher than +5 $^{\circ}$ C, there is a problem in the system. The reasons for this may be.

- One of the fuses has blown. Check the fuse and replace if necessary » page 244.
- The cooling system has switched off automatically for a short time because the coolant temperature of the engine is too hot » page 11.

If you are not able to resolve the operational problem yourself, or if the cooler output has reduced, switch off the cooling system and seek assistance from a specialist garage.

Air conditioning system (manual air conditioning system)

Introduction

This chapter contains information on the following subjects:

Control elements	100
adjusting	102
Recirculated air mode	102

The cooling system operates only if the following conditions are met.

- ✓ The cooling system is switched on » page 100.
- ✓ The engine is running.
- ✓ The outside temperature is above approx. +2 °C.
- ✓ The blower switch is switched on (positions 1-4).

Under certain circumstances, air at a temperature of about 5 $^{\circ}\text{C}$ can flow out of the vents when the cooling system is switched on.

If the desired interior temperature can also be achieved without activating the cooling system, fresh air mode should be selected.

The cooling system is switched off at a high coolant temperature in order to provide cooling at a high load of the engine.

1

CAUTION

Lengthy and uneven distribution of the air flow out of the vents (especially around the feet) and large differences in temperature, for example, when getting out of the vehicle, can cause susceptible individuals to catch a cold.

i

Note

We recommend that you have the air conditioning system cleaned by a specialist garage once every year.

Control elements



Fig. 107 The air conditioning system: Control elements



First read and observe the introductory information and safety warnings ! on page 100.

Functions of the individual controls » Fig. 107:

- Set the temperature (turn to the left to reduce the temperature: turn to the right to increase temperature)
- B Set the blower stage (stage 0: Fan off, stage 4: the highest blower speed)

- C Set the direction of the air outlet » page 99
- A/C Switch cooling system on/off
- Switching the rear window heater on/off » page 59
- Aux. heating on/off » page 107
- Recirculating air operation on/off » page 102

Note

The warning light in the symbol button **A/C** lights after activation, even if not all of the conditions for the function of the cooling system are met » page 100. By lighting up of the indicator light in the button, the operational readiness of the cooling system is signalled.

adjusting

 \bigcap

First read and observe the introductory information and safety warnings ! on page 100.

Recommended basic settings of the control elements of the air conditioning system for the respective operating modes:

Control dial se		Control dial settings » Fig. 107 on page 100			. 107 on page 100	Air outlet vents 2 » Fig. 105	
Settings	Α	В	С	A/C	@	on page 99	
Defrost/defog windscreen and side windows ^{a)}	Desired tempera- ture	3 or 4	(III)	Automatically switched on	Do not switch on	Open and align with the side window	
The fastest heating	To the right up to the stop	3	**************************************	Switched off	Briefly switch on	Opening	
Comfortable heating	Desired tempera- ture	2 or 3	#:/ *;	Switched off	Do not switch on	Opening	
The fastest cooling	To the left up to the stop	briefly 4, then 2 or 3	2 3	Activated	Briefly switch on	Opening	
Comfortable cooling	Desired tempera- ture	1, 2 or 3	2 3	Activated	Do not switch on	Open and align to the roof	
Fresh air mode - ventilation	To the left up to the stop	Desired position	> 3	Switched off	Do not switch on	Opening	

^{a)} We recommend that you do not use this setting in countries with high humidity levels. This can result in heavy cooling of the window glass and the following fogging from outside.

We recommend that you leave the air outlet vents ${\bf 3} \gg {\rm Fig.}\,105$ on page 99 in the opened position.

Recirculated air mode



First read and observe the introductory information and safety warnings ! on page 100.

Recirculated air mode prevents polluted air outside the vehicle from getting into the vehicle, for example when driving through a tunnel or when standing in a traffic jam.

Switching on/off

> Press the symbol button 🖘.

The indicator light in the button lights up.

> Press the symbol button ← again.

The indicator light in the button goes out.

Recirculated air mode is switched off automatically if the air distribution control \boxed{C} » Fig. 107 on page 100 is turned to position m. Recirculated air mode can be switched on again from this setting by repeatedly pressing the symbol button m.

WARNING

Do not leave recirculated air mode on over a longer period of time, as "stale" air can cause fatigue of the driver and passengers, reduce attention levels and also cause the windows to mist up. The risk of having an accident increases. Switch off recirculated air mode as soon as the windows start to mist up.

Climatronic (automatic air conditioning system)

Introduction

This chapter contains information on the following subjects:

103
104
104
104
105
106
106
106

The Climatronic in **automatic mode** ensures the best-possible setting of the temperature of the outflowing air, the blower stage and air distribution.

The system also takes sunlight into account, which eliminates the need to alter the settings manually.

The cooling system operates only if the following conditions are met.

- ✓ The cooling system is switched on » page 100.
- ✓ The engine is running.
- ✓ The outside temperature is above approx. +2 °C.

The cooling system is switched off at a high coolant temperature in order to provide cooling at a high load of the engine.

Aeration of the vehicle when ignition is switched off

On models fitted with power sliding/tilting roof with sollar cells, the fresh air blower is automatically switched over to "solar mode" if the sun ray's are sufficient after switching off the ignition. The solar cells on the sliding/tilting roof deliver power for the fresh air blower. This supplies the interior of the car with fresh air.

For an optimum ventilation, the air outlet vents ${\bf 2}$ and ${\bf 3}$ must be opened » Fig. 105 on page 99.

The ventilation functions only when the sliding/tilting roof is fully closed.

i

Note

- We recommend that you have Climatronic cleaned by a specialist garage once every year.
- On vehicles equipped with a factory-fitted radio or radio navigation system, the Climatronic information is also shown on their displays. This function can be switched off, see » operating instructions for the radio or navigation system.

Control elements



Fig. 108 Climatronic: Control elements



First read and observe the introductory information given on page 103.

Functions of the individual controls » Fig. 108:

- A Adjust the temperature for the left side » page 104
- B Adjust the blower speed ♣ » page 106
- C Depending on equipment:
 - > <u>₩</u> Aux. heating on/off » page 108
 - ightharpoonup Switching the windscreen heater on/off » page 59
- D Adjust the temperature for the right side » page 104
- E Interior temperature sensor

F Depending on equipment:

- > 🐟 Recirculation mode with air quality sensor on/off » page 105, Recirculation mode Version 1
- ➤ Recirculation mode with air quality sensor on/off » page 106, Recirculation mode Version 2

MAX Switch the intensive windscreen heater on/off

- Air flow to the windows
- 🝰 Air flow to the upper body
- 🛂 Air flow in the footwell
- Switching the rear window heater on/off » page 59

AUTO Switching automatic mode on » page 104

OFF Switching Climatronic system off

A/C Switch cooling system on/off » page 104

DUAL Switch the temperature setting in Dual mode on/off » page 104

Control the seat heater on the front right seat » page 70

Note

Do not stick anything on or cover the interior temperature sensor $\overline{\mathbf{E}}$, otherwise it could have an unfavourable effect on the Climatronic.

automatic mode



First read and observe the introductory information given on page 103.

The automatic mode is used in order to maintain a constant temperature and to demist the windows in the interior of the car.

Recommended setting for all periods of the year

- > Set the required temperature between +18 °C and +26 °C: we recommend 22 °C.
- > Press the button AUTO » Fig. 108 on page 103.
- > Move the air outlet vents 2 and 3 » Fig. 105 on page 99 so that the air flow is directed slightly upwards.

After pressing, an indicator light in the top right or left corner of the button AUTO lights up, depending on which mode was last selected.

If the warning light in the top right corner of the button **AUTO** lights up, the Climatronic operates in "HIGH"-mode.

The "HIGH" mode is the standard setting of the Climatronic.

When pressing AUT0 the button again, the Climatronic switches to "LOW"-mode and the indicator light in the top left corner lights up. The Climatronic uses only in this mode the lower blower speed. However taking into account the noise level, this is more comfortable, yet be aware that the effectiveness of the air conditioning system is reduced particularly if the vehicle is fully occupied.

By pressing the button AUTO again, it is changed to "HIGH"-mode.

Automatic mode can be **switched off** by pressing one of the buttons for the air distribution or by increasing/decreasing the blower speed.

Switching the cooling system on/off



First read and observe the introductory information given on page 103.

> Press the button A/C.

The indicator light in the button lights up.

> Press button A/C. once more.

The indicator light in the button goes out.

After the cooling system is switched off, only the ventilation and heating function remains active whereby the minimum temperature that can be reached is the outside temperature.

Setting the temperature



First read and observe the introductory information given on page 103.

The interior temperature for the left and right side can be set separately or together.

For both sides

> Turn the control dial $\boxed{\mathbb{A}}$ » Fig. 108 on page 103 to the left or right to increase or decrease the temperature.

The indicator light in the button DUAL lights up.

For the right side

> Turn the control dial D » Fig. 108 on page 103 to the left or right to increase or decrease the temperature.

The indicator light in the button DUAL lights up.

If the warning light in the symbol button **DVAL** is lit, the temperature for both sides cannot be set with the control dial $\boxed{\mathbf{A}}$. This function can be restored by pressing the symbol button **DVAL**. The indicator light in the button goes out.

The interior temperature can be set between +18 °C and +26 °C. The interior temperature is regulated automatically within this range.

If a temperature lower than +18 $^{\circ}\text{C}$ is selected, a blue symbol lights up at the start of the numerical scale.

If a temperature higher than +26 $^{\circ}\mathrm{C}$ is selected, a red symbol lights up at the start of the numerical scale.

At both end positions, Climatronic functions at maximum cooling/heating output and the temperature is not regulated.

CAUTION

Lengthy and uneven distribution of the air flow out of the vents (especially around the feet) and large differences in temperature, for example, when getting out of the vehicle, can cause susceptible individuals to catch a cold.

Recirculation mode - Version 1



First read and observe the introductory information given on page 103.

Recirculated air mode prevents polluted air outside the vehicle from getting into the vehicle, for example when driving through a tunnel or when standing in a traffic jam.

If a considerable increase in concentration of pollutants is recognised by the air quality sensor, recirculated air mode will temporarily be switched off.

If the concentration of pollutants decreases to the normal level, the air distribution control is automatically switched off so that fresh air can be guided into the vehicle interior.

In recirculated air mode air is sucked out of the interior of the vehicle and then fed back into the interior. When the automatic air distribution control is switched on, an air quality sensor measures the concentration of pollutants in the drawn in air.

Switching recirculated air mode on

> Repeatedly press the button ∞ until the indicator light on the **left** side of the button is illuminated.

Switch on automatic air distribution control

> Repeatedly press the button ∞ until the warning light on the **right-hand** side of the button lights up.

Switch off automatic air distribution control temporarily

If the air quality sensor does not switch on automatic recirculated air mode when there is an unpleasant smell, you can switch it on manually.

> Press the symbol button 🙈 A.

The indicator light lights up in the button on the left side.

Switching recirculated air mode off

> Press the button AUTO or press the symbol button 🖘 again until the warning lights in the button go out.

WARNING

Do not leave recirculated air mode on over a longer period of time, as "stale" air can cause fatigue of the driver and passengers, reduce attention levels and also cause the windows to mist up. The risk of having an accident increases. Switch off recirculated air mode as soon as the windows start to mist up.

Note

- If the windscreen mists up, press the symbol button MAX®. Press the button AUTO once the windscreen has demisted.
- The automatic air distribution control operates only if the outside temperature is higher than approx. 2 °C.

Recirculation mode - Version 2



First read and observe the introductory information given on page 103.

Recirculated air mode prevents polluted air outside the vehicle from getting into the vehicle, for example when driving through a tunnel or when standing in a traffic jam.

In recirculated air mode air is sucked out of the interior of the vehicle and then fed back into the interior.

The air recirculation mode is automatically activated after the ignition is switched if it was on before the ignition was turned off. The indicator light in the button lights up.

Switch off / on

> Press the symbol button 🖘.

The indicator light in the button goes out.

> Press the symbol button 🖘 again.

The indicator light in the button lights up.

WARNING

Do not leave recirculated air mode on over a longer period of time, as "stale" air can cause fatigue of the driver and passengers, reduce attention levels and also cause the windows to mist up. The risk of having an accident increases. Switch off recirculated air mode as soon as the windows start to mist up.

Note

If the windscreen mists up, press the symbol button MAX. Press the button AUTO once the windscreen has demisted.

Controlling blower



First read and observe the introductory information given on page 103.

The Climatronic system controls the blower stages automatically in line with the interior temperature.

However, the blower stages can be manually adapted to suit your particular needs.

Repeatedly pressing the symbol button \$\mathbf{s}\$ on the left or right reduces or increases blower speed.

If the blower is switched off, the Climatronic system is switched off.

The set blower speed is displayed above the symbol button **\$** when the respective number of indicator lights come on.

WARNING

- "Stale air" may result in fatigue in the driver and occupants, reduce attention levels and also cause the windows to mist up. The risk of having an accident increases.
- Do not switch off the Climatronic system for longer than necessary.
- Switch on the Climatronic system as soon as the windows mist up.

Defrosting windscreen



First read and observe the introductory information given on page 103.

Switching on

- > Press the symbol button max > Fig. 108 on page 103.
- > Press the symbol button ♥ » Fig. 108 on page 103.

Switching off

- > Press the symbol button MAX @ again or press the symbol button AUTO.
- > Press the symbol button ☞ again.

More air flows out of the air outlet vents 1 » Fig. 105 on page 99. The temperature control is controlled automatically.

Auxiliary heating (auxiliary heating and ventilation)

Introduction

This chapter contains information on the following subjects:

Switching on/off	108
Radio remote control	109

Conditions for the functioning of auxiliary heating (Aux. heating and ventilation), hereinafter referred to only as auxiliary heating (Aux. heating).

- ✓ The charge state of the vehicle battery is sufficient.
- The fuel supply is adequate (the warning icon) is not lit in the display of the instrument cluster).

Auxiliary ventilation

The auxiliary ventilation enables fresh air to flow into the vehicle interior by switching off the engine, whereby the interior temperature is effectively decreased (e.g. with the vehicle parked in the sun).

Auxiliary heating (aux. heating)

The auxiliary heating (aux. heating) can be used when stationary, when the engine is switched off to preheat the vehicle and while driving (e.g. during the heating phase of the engine).

The auxiliary heating (auxiliary heating) functions in connection with the air-conditioning system or Climatronic.

The auxiliary heating (aux. heating) also warms up the engine. This is not valid for vehicles with the $3.6\,l/191\,kW$ FSI engine.

The auxiliary heating (parking heating) warms up the coolant by combusting fuel from the vehicle tank. The coolant heats air flowing into the passenger compartment (as long as the blower fan speed **B** » Fig. 107 on page 100 or » Fig. 108 on page 103 is not set to zero).

WARNING

- The auxiliary heating (aux. heating) must never be operated in closed rooms (e.g. garages) risk of poisoning!
- The auxiliary heating (aux. heating) must not be allowed to run during refuelling risk of fire.
- The exhaust pipe of the auxiliary heating (aux. heating) is located on the underside of the vehicle. Therefore, if you wish to operate the auxiliary heating (aux. heating), do not park the vehicle in such a way that the exhaust gases can come into contact with highly flammable materials (e.g. dry grass) or easily inflammable substances (e.g. spilt fuel) risk of fire.

CAUTION

- Running auxiliary heating (aux. heating) consumes fuel from the vehicle tank and automatically controls the filling level. If only a low quantity of fuel is present in the fuel tank, the auxiliary heating (aux. heating) switches off.
- The exhaust pipe of the auxiliary heating (aux. heating), which is located on the underside of the vehicle, must not be clogged and the exhaust flow must not be blocked.
- If the auxiliary heating (aux. heating) is running, the vehicle battery discharges. If the auxiliary heating and ventilation has been operated several times over a longer period, the vehicle must be driven a few kilometres in order to recharge the vehicle battery.

i Note

- The auxiliary heating (aux. heating) switches on the blower B » Fig. 107 on page 100 or » Fig. 108 on page 103 only if it has achieved a coolant temperature of approx. 50 °C.
- At low outside temperatures, this can result in a formation of water vapour in the area of the engine compartment. This is quite normal and is not an operating problem.
- The air inlet in front of the windscreen must be free (e.g. of ice, snow or leaves) to ensure that the auxiliary heating (aux. heating) operates properly.
- So that warm air can flow into the vehicle interior after switching on the auxiliary heating, you must maintain the comfort temperature normally selected by you, leave the fan switched on and leave the air outlet vents in an open position. It is recommended to put the air flow in the position ③ or ⑤.

Switching on/off



Fig. 109 Button for switching on/off the system directly on the operating part of the air conditioning/Climatronic



First read and observe the introductory information and safety warnings 1 on page 107.

The auxiliary heating (aux. heating) can be switched on/off as follows.

Manually switching on

- using the button on the operating part of the manual air conditioning/Climatronic. The warning light in the button lights up » Fig. 109;
- **ON** by using the radio remote control » page 109.

Manually switching off

- using the button on the operating part of the manual air conditioning/Climatronic. The warning light in the button goes out » Fig. 109;
- **OFF** by using the radio remote control » page 109.

After switching off the auxiliary heating, the coolant pump runs for a short period.

Automatic switching on/off

The following menu items can be selected from the **Aux. heating** menu item in the information display » page 28 (depending on the vehicle equipment):

- Day of the week set the current day of the week;
- Running time Set the required running time in 5 minute increments. The running time can be 10 to 60 minutes.
- Mode Set the desired heating/ventilation mode;

- Starting time 1, Starting time 2, Starting time 3 for each pre-set time, the day and the time (hour and minute) can be set for switching on the auxiliary heating and ventilation. An empty position can be found between Sunday and Monday when selecting the day. If this empty position is selected, the activation is performed without taking into account the day.
- Activate Activate pre-set mode;
- Deactivate Deactivate pre-set mode;
- Factory setting Restore factory setting;
- Back Return to main menu

Only one programmed pre-set time can be active.

The last programmed pre-set time remains active.

After the auxiliary heating (aux. heating) automatically activates at the set time, it is necessary to pre-set a time again.

If the menu item **Back** is selected or no changes are made on the display for longer than 10 seconds, the set values are stored, but the pre-set time is not activated.

The system switches itself off at the end of the running time set under the menu item **Running time**.



Note

An indicator light on the button $\underline{\mathtt{M}} \Rightarrow \mathsf{Fig.}\,109$ is illuminated when the system is running.

Radio remote control

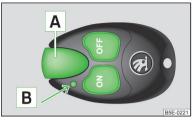


Fig. 110
Auxiliary heating (aux. heating):
Radio remote control



First read and observe the introductory information and safety warnings 10 on page 107.

Explanation of graphic

- A Aerial
- B Warning light
- (N) Switch on aux. heating
- Off Switch off aux. heating

The transmitter and the battery are housed in the housing of the remote control. The receiver is located in the interior of the vehicle.

When the battery is fully charged, the range of the remote control is a few hundred metres. Obstacles between the remote control and the vehicle, bad weather conditions and a weaker battery in the remote control can clearly reduce the range.

To switch the auxiliary heating (aux. heating) on or off, hold the remote control vertical, with the aerial $\boxed{\mathbf{A}}$ pointing upwards. The antenna must not be covered with the fingers or the palm of the hand during this process.

The auxiliary heating can only be switched on/off safely using the radio remote control, if the distance between the radio remote control and the vehicle is at least 2 m.

After pressing the button, the warning light in the remote control gives the user different kinds of feedback:

Display warning light B » Fig. 110	Importance
Lights up green for around 2 seconds.	The auxiliary heating was switched on.
Lights up red for around 2 seconds.	The auxiliary heating (aux. heating) is switched off.
Slowly flashes green for around 2 seconds.	The ignition signal was not received.
Quickly flashes green for around 2 seconds.	The auxiliary heating (aux. heating) is blocked, e. g. because the tank is nearly empty or there is a fault in the auxiliary heating (aux. heating).
Flashes red for around 2 seconds.	The switch off signal was not received.
Lights up orange for around 2 seconds, then green or red.	The battery is weak, however the switching on or off signal was received.
Lights up orange for around 2 seconds, then flashes green or red.	The battery is weak, however the switching on or off signal was not received.
Flashes orange for around 5 seconds.	The battery is discharged, however the switching on or off signal was not received.

Replace the battery » page 239.



The radio remote control comprises electronic components and must therefore be protected against water, severe impacts and direct sunlight.

Communication and multimedia

General information

Introduction

This chapter contains information on the following subjects:

Mobile phones and two-way radio systems	110
Universal telephone preinstallation (hands free)	110
Operating the phone on the multifunction steering wheel	111
Symbols in the MAXI DOT display	112
Phone Phonebook	113

Mobile phones and two-way radio systems



First read and observe the introductory information given on page 110.

ŠKODA permits the operation of mobile phones and two-way radio systems with a professionally installed external aerial and a maximum transmission power of up to 10 watts.

Please consult a ŠKODA Partner for information about the possibility of installing and operating mobile phones and two-way radio systems with a transmission power of more than 10 W.

Operating mobile phones or two-way radio systems may interfere with the functionality of the electronic systems in your vehicle.

The reasons for this are as follows:

- > no external aerial;
- > external aerial incorrectly installed;
- > transmission power greater than 10 watts.

WARNING

- If a mobile phone or a two-way radio system is operated in a vehicle without an external aerial or an external aerial which has been installed incorrectly, this can increase the strength of the electromagnetic field inside the vehicle.
- Two-way radio systems, mobile phones or mounts must not be installed on airbag covers or within the immediate deployment range of the airbags.
- Never leave a mobile phone on a seat, on the dash panel or in any area from where it becomes a projectile during a sudden braking manoeuvre, an accident or a collision risk of injury.
- Before transport of the vehicle by air, the Bluetooth® function must be switched off by a specialist company.

Universal telephone preinstallation (hands free)



First read and observe the introductory information given on page 110.

The universal telephone preinstallation ("hands-free system") includes a convenience mode for the mobile phone via voice control, the multifunction steering wheel, the radio or navigation system.

WARNING

- Concentrate fully at all times on your driving! As the driver you are fully responsible for the operation of your vehicle. Only use the hands-free system to the extent that you are in full control of your vehicle in any traffic situation.
- The national regulations for using a mobile phone in a vehicle must be observed.

i Note

- We recommend that the installation of mobile phones and two-way radio systems in a vehicle be carried out by a specialist firm.
- Not all mobile phones that enable Bluetooth® communication are compatible with the universal telephone preinstallation GSM II or GSM III. Ask a ŠKODA Partner whether your phone is compatible with the universal telephone preparation GSM II or GSM III.
- The range of the Bluetooth® connection to the hands-free system is restricted to the vehicle interior. The range is dependent on local factors, e.g. obstacles between the devices and mutual interferences with other devices. If your mobile phone is in a jacket pocket, for example, this can lead to difficulties when establishing a connection with the hands-free-system or transferring data.

Operating the phone on the multifunction steering wheel



Fig. 111 Multifunction steering wheel: Control buttons for the telephone



First read and observe the introductory information given on page 110.

To minimize driver distraction when operating the telephone, the basic telephone's functions can be set by simply operating the buttons located on the steering wheel » Fig. 111.

This applies only if your vehicle has been equipped with the universal telephone preinstallation at the factory.

The buttons operate the functions for the operating mode of the current telephone.

If the side lights are switched on, the buttons on the multifunction steering wheel are illuminated.

Button/wheel	Action	Operation
1	Press briefly	Mute (MUTE ₺)
1	Turn upwards	Increase the volume
1	Turn downwards	Decrease the volume

Button/wheel	Action	Operation			
2	Press briefly Accept call, End call Display telephone's basic menu → Telephone main menu → List of dialled numbers → Call selected contact				
2	Press and hold button	Reject the incoming call			
3	Turn up/down	Previous / next menu item			
3	Press briefly	Confirm selected menu item			
3	Press and hold button	Continuously display first letter of the phone book			
3	Quickly turn upwards	To the previous initial letter in the telephone book			
3	Quickly turn downwards	To the next initial letter in the telephone book			
4	Press briefly	Return to a previous level on menu			
4	Press and hold button	Exit telephone menu			

Symbols in the MAXI DOT display



First read and observe the introductory information given on page 110.

Symbol	Importance	Valid for
Ê	Charge status of the phone battery ^{a)}	GSM II, GSM III
	Signal strength ^{a)}	GSM II, GSM III
*	A phone is connected with the hands-free system	GSM II, GSM III when connected via the HFP profile
·	The hands-free system is visible to other devices	GSM II, GSM III when connected via the HFP profile
PREMIUME	A phone is connected with the hands-free system	GSM III when connected via the rSAP profile
MEMORE S	The hands-free system is visible to other devices	GSM III when connected via the rSAP profile
•	A multimedia unit is connected to the hands-free system	GSM II, GSM III
39	A UMTS network is available	GSM III
₹	Internet connection via the hands-free system	GSM III when connected via the rSAP profile

a) This function is only supported by some mobile phones.

Phone Phonebook



First read and observe the introductory information given on page 110.

A phone phonebook is part of the hands-free system. This phone phonebook can be used depending on the type of mobile phone.

After the telephone's first connection to the hands-free system, the phone book from the phone and the SIM card loads into the hands-free memory.

Each time the telephone has established a new connection with the hands-free system, an update of the relevant phone book is performed. The updating can take a few minutes. During this period, the available phone book is the one stored at the previous update. Newly stored telephone numbers are only shown after the updating has ended.

The update is interrupted if a telephone event (e.g. incoming or outgoing call, voice control dialogue) occurs during the updating procedure. After the telephone event has ended, the updating starts anew.

GSM II

The internal phonebook provides 2 500 free memory locations. Each contact can contain up to 4 numbers.

On vehicles fitted with the Columbus navigation system, a maximum of 1 200 telephone contacts are shown on the display of this appliance.

If the number of contacts loaded exceeds 2 500, the phone book is not complete.

GSM III

The internal phonebook provides 2 000 free memory locations. Each contact can contain up to 5 numbers.

On vehicles fitted with the Columbus navigation system, a maximum of 1 000 telephone contacts are shown on the display of this appliance.

If the mobile phone's telephone book has more than 2,000 contacts, the following message will appear in the MAXI DOTdisplay:

Phone book not fully loaded

Universal telephone preinstallation GSM II

Introduction

This chapter contains information on the following subjects:

Connecting the mobile phone to the hands-free system _______ 11
Telephone operation in the MAXI DOT display _______ 11

The universal telephone preinstallation GSM II comprises the following functions.

- > Phone Phonebook » page 113.
- Convenience operation of the telephone via the multifunction steering wheel » page 111.
- > Telephone operation in the MAXI DOT display » page 111.
- > Voice control of the telephone » page 122.
- Music playback from the telephone or other multimedia units » page 126.

All communication between a mobile phone and your vehicle's hands-free system is established with the help of Bluetooth® technology.



Note

The following guidelines must be observed » page 110, Mobile phones and two-way radio systems.

Connecting the mobile phone to the hands-free system



First read and observe the introductory information given on page 113.

To connect a mobile phone with the hands-free system, the two devices must be paired. Detailed information on this is provided in the operating instructions for your mobile phone.

The following steps must be carried out for the connection.

- > Activate Bluetooth® and the visibility of your mobile phone on your telephone.
- > Switch on the ignition.
- > Select the Phone New user menu in the MAXI DOT display and wait until the hands-free system has completed the search.
- > Select the phone you wish to connect from the list of units found.

- > Confirm the PIN1).
- If the hands-free system announces (as standard SKODA_BT) on the display of the mobile phone, enter the PIN¹¹ within 30 seconds and wait, until the connection is established²¹.
- To finish pairing in the MAXI DOT display, confirm the creation of the new user profile.

If there is no free space available to create a new user profile, delete an existing user profile.

During the connecting procedure, no other mobile phone may be connected with the hands-free system.

Up to four mobile phones can be paired with the hands-free system, whereby only one mobile phone can communicate with the hands-free system.

The visibility of the hands-free system is automatically switched off 3 minutes after the ignition is switched on and is also deactivated when the mobile phone has connected to the hands-free system.

Restoring the visibility of the hands-free system

If you have not managed to connect your mobile phone with the hands-free system within 3 minutes of switching on the ignition, the visibility of the hands-free system can be reestablished for 3 minutes in the following ways.

- > By turning the ignition off and on.
- > By turning voice control off and on.
- > In the MAXI DOT display under menu item Bluetooth Visibility.

Creating a connection with an already paired mobile phone

After switching on the ignition, the connection is automatically established for the already paired mobile phone². Check on your mobile phone if the automatic connection has been established.

Disconnecting the connection

- > By withdrawing the ignition key.
- > By disconnecting the hands-free system in the mobile phone.
- > By disconnecting from the user in the MAXI DOT display under the menu item Bluetooth - User.

Solving connection problems

If the hands-free system reports **No paired phone found**, check the operating status of the mobile phone.

- > Is the mobile phone switched on?
- > Is the PIN code entered?
- > Is Bluetooth® active?
- > Is the visibility of the mobile phone active?
- > Has the mobile phone already been paired with the hands-free system?

Telephone operation in the MAXI DOT display



First read and observe the introductory information given on page 113.

The following menu items can be selected from the Phone menu.

- Phone book
- Dial number³⁾
- Call list
- Voice mailbox
- Bluetooth³⁾
- Settings⁴⁾
- Back

Phone book

The **Phone book** menu item lists the contacts downloaded from the telephone memory and the mobile phone SIM card.

Depending on the Bluetooth® version on the mobile phone, an automatically generated 6-digit PIN (SSP) is either displayed, or the PIN 1234 has to be entered manually.

²⁾ Some mobile phones have a menu, in which the authorisation for establishing a Bluetooth® connection is completed by inputting a code. If the authorisation input is required, it must always be performed when re-establishing the Bluetooth connection.

³⁾ On vehicles fitted with the Amundsen+ navigation system, this function can be accessed via the navigation system menu; refer to the » operating instructions for the Amundsen+ navigation system.

⁴⁾ This function is not available in vehicles fitted with the Amundsen+ navigation system.

Dial number

Any telephone number can be entered in the **Dial number** menu item. The required digits must be selected one after the other using the adjustment wheel, and then confirmed by pressing the adjustment wheel. You can select digits **0-9**, symbols +, *, # and the **Cancel**, **Call** and **Delete** functions.

Call list

The following menu items can be selected in the **Call list** menu item.

- Missed calls List of missed calls
- Dialled Nos. List of dialled numbers
- Received calls list of received calls

Voice mailbox

In the **Voice mailbox** menu item, you can set the number of the voice mailbox ij and then dial the number.

Bluetooth

The following menu items can be selected from the **Bluetooth** menu item.

- User Overview of the stored telephones
- New user Search for new mobile phones that are in the reception range
- Visibility Switches on the visibility of the hands-free system for other devices
- Media player Playback via Bluetooth®
- Active device Connected device
- Paired Devices List of paired devices
- Search Device search
- Phone name option to change the name of the phone (default SKODA_BT)

Settings

The following menu items can be selected from the **Settings** menu item.

- Telephone book Phonebook
- Update¹⁾ Update the phone book
- List Arrange the entries in the phone book
 - Surname Arrange according to surname
 - First name Arrange according to first name
- Ring tone Ring tone setting

Back

Return to the telephone's basic menu.

Universal telephone preinstallation GSM III

Introduction

This chapter contains information on the following subjects:

Connecting the phone to the hands-free system	116
Telephone operation in the MAXI DOT display	117
nternet connection via Bluetooth®	118

The following functions are included in the universal telephone preinstallation GSM III:

- > Phone Phonebook » page 113.
- > Convenience operation via the multifunction steering wheel » page 111.
- > Telephone operation in the MAXI DOT display » page 117.
- > Voice control of the telephone » page 122.
- > Music playback from the telephone or other multimedia units » page 126.
- > Internet connection » page 118.
- > Display of SMS messages » page 117.

All communication between a telephone and the hands-free system of your vehicle can only be established with the help of the following profiles of Bluetooth® technology.

rSAP - Remote SIM access profile

After connecting the telephone with the hands-free system via the rSAP profile, the telephone deregisters from the GSM network, and communication with the network is only enabled by the hands-free system via the vehicle's external aerial. In the telephone only the interface for Bluetooth® remains active. In this case, you can only use the mobile phone to disconnect from the hands-free system, deactivate the Bluetooth® connection or dial the emergency number 112 (only valid in some countries).

HFP - Hands Free Profile

After connecting the telephone with the hands-free system via the HFP profile, the telephone continues to use its GMS module and the internal antenna to communicate with the GSM network.

On vehicles fitted with the Amundsen+ navigation system, this function can be accessed via the navigation system menu; refer to the » operating instructions for the Amundsen+ navigation system.

i

Note

The following guidelines must be observed » page 110, Mobile phones and two-way radio systems.

Connecting the phone to the hands-free system



First read and observe the introductory information given on page 115.

To connect a mobile phone with the hands-free system, it is necessary to interconnect the telephone and hands-free system. Detailed information on this is provided in the operating instructions for your mobile phone. The following steps must be carried out for the connection.

Connecting the telephone with the hands-free system via the rSAP profile

- Activate Bluetooth® and the visibility of your mobile phone on your telephone. For certain mobile phones it is necessary to switch on first the rSAP function.
- > Switch on the ignition.
- > Select the Phone New user menu in the MAXI DOT display and wait until the hands-free system has completed the search.
- > Select the phone you wish to connect from the list of units found.
- > Confirm the PIN1).
- If your SIM card is blocked by a PIN code, enter the PIN code for the SIM card in your phone. The telephone connects to the hands-free system (during the first connection you can only enter the PIN code in the MAXI DOT display when the vehicle is stationary, as this is the only situation when you can choose whether the PIN code should be stored).
- > To save a new user, follow the instructions in the Maxi DOT display.
- Reconfirm the rSAP command on your mobile phone to download the telephone book and the identification data from the SIM card into the hands-free system.

Connecting the telephone with the hands-free system via the HPP profile

- > Activate Bluetooth® and the visibility of your mobile phone on your telephone.
- > Switch on the ignition.

- > Select the Phone New user menu in the MAXI DOT display and wait until the hands-free system has completed the search.
- > Select the phone you wish to connect from the list of units found.
- Confirm the PIN¹⁾.
- > Follow the instructions on the MAXI DOT display and the mobile phone to store a new user or to download the telephone book and identification data from the SIM card into the hands-free system.

The telephone primarily connects via the rSAP profile.

If the PIN code was stored, the telephone is automatically detected and connected with the hands-free system the next time the ignition is switched on. Check your mobile phone to see whether this automatic connection has been established.

Disconnecting the connection

- > By removing the key from the ignition lock (the connection is disconnected during a telephone call).
- > By disconnecting the hands-free system in the mobile phone.
- > Select the user by disconnecting the user in the Maxi DOT display in the Bluetooth User menu option Disconnect.

On vehicles which are fitted with a radio or navigation system at the factory, it is possible to terminate the telephone call after removing the key from the ignition lock by pressing the button on the touchscreen of the radio²⁾ or navigation system: refer to the operating instructions for the radio or navigation system.



Note

- In the memory of the hands-free system, up to three users can be stored, whereby the hands-free system can only communicate actively with one user. If a connection is established with a fourth mobile phone, one of the users must be deleted.
- When connecting to the hands-free system, follow the instructions on your mobile phone.

Depending on the Bluetooth® version on the mobile phone, an automatically generated 6-digit PIN (SSP) will either be displayed, or a 16-digit code displayed in the MAXI DOTdisplay will need to be entered into your mobile phone and confirmed within 30 seconds by following the instructions on your mobile phone display.

²⁾ Does not apply for Radio Swing.

Telephone operation in the MAXI DOT display



First read and observe the introductory information given on page 115.

If no phone is connected to the hands-free system, the message **No paired phone found** appears along with the following menu items when the **Mobile phone** menu is selected.

- Help This menu item appears when no paired phone is stored in the memory of the hands-free system.
- Connect This menu item appears when one or more paired phones are stored in the memory of the hands-free system.
- New user New phone
- Media player Media player
 - Active device Connected device
- Paired devices List of paired devices
- Search Device search
- Visibility Visibility on/off
- SOS Emergency call

If a telephone is paired with the hands-free system, the following menu items can be selected in the **Mobile phone** menu.

Phone book

The **Phone book** menu item lists the contacts downloaded from the telephone memory and the mobile phone SIM card.

The following functions are available for each phone contact.

- Display telephone number
- Voice tag Voice tag for the contact
- Replay Play a voice tag
- Record Record a voice contact

Dial number

Any telephone number can be entered in the **Dial number** menu item. The required digits must be selected one after the other using the adjustment wheel, and then confirmed by pressing the adjustment wheel. You can select digits **0-9**, symbols **+**, *****, **#** and the **Delete**, **Call** and **Back** functions.

Call list

The following menu items can be selected in the Call list menu item.

- Missed calls List of missed calls
- Received calls list of received calls
- Dialled Nos. List of dialled numbers
- Delete lists Delete call registers

Voice mailbox

In the Voice mailbox menu item, you can set or save the number of the voice mailbox and then dial the number. The required digits must be selected one after the other using the adjustment wheel, and then confirmed by pressing the adjustment wheel. You can select digits 0-9, symbols +, *, # and the Delete, Call, Save and Back functions.

SMS¹⁾

A list of received text messages is displayed in the SMS menu item. After calling a message, the following functions appear.

- Show Display text message
- Read The system reads out the selected text message through the vehicle's speakers
- **Send time** Display message send time
- Callback Dial the phone number of the sender of the text message
- **Copy** Copy the received text message to the SIM card
- Delete Delete the message

Bluetooth

The following menu items can be selected from the **Bluetooth** menu item.

- User Overview of the stored telephones
- Connect Connection with the telephone
- Disconnect Disconnection of telephone
- Rename Rename the telephone
- **Delete** Delete the telephone
- New user Search for new mobile phones that are in the reception range
- Visibility Switches on the visibility of the hands-free system for other devices
- Media player Media player
 - Active device Connected device
 - Paired devices List of paired devices
 - Connect Connection with the device
 - Rename Rename the device

¹⁾ Only applies when connecting the telephone to the hands-free system via the rSAP profile.

- Delete Delete the device
- Authorisation Authorise the device
- Search Search for available media players
- Visibility Switch on the visibility of the hands-free system for media players in the vicinity
- Modem overview of the active and paired devices for the connection to the internet
 - Active device Connected device
 - Paired devices List of paired devices
- Phone name option to change the name of the phone (default SKODA_BT)

WLAN

Wi-Fi menu item » page 120, Use WLAN network in MAXI DOT display.

Settings

The following menu items can be selected from the **Settings** menu item.

- Telephone book Phonebook
 - Update Read in the phone book
 - Select memory Select memory with phone contacts
 - SIM & phone Download the contacts of the SIM card and the phone
 - SIM card Download the contacts from the SIM card
 - Mobile phone Initial setting to also import contacts from the SIM card; it is necessary to switch to the SIM & phone menu item
 - List Arrange the entries in the phone book
 - Surname Arrange according to surname
 - First name Arrange according to first name
- Own number Optionally display your own telephone number on the display of the device of the person you are calling (this function is network-dependent)
 - Network depnd. Network-dependent own number display
 - Yes Allow display of your own number
- No Prohibit display of your own number
- Signal settings Signal settings
- Ring tone Ring tone setting
- Volume Signal volume settings
- Turn vol. up Increase volume
- Turn vol. down Decrease volume
- Phone settings Phone settings
- Select operator Select operator
 - Automatic Automatic operator selection
 - Manual Manual operator selection

- Network mode Network mode
- UMTS UMTS
- GSM GSM
- Automatic automatic
- SIM mode Applies to telephones with the rSAP profile that simultaneously support the operation of two SIM cards - there is an option to choose which SIM card to connect to the hands-free system
 - SIM mode 1 SIM 1 is connected to the hands-free system
 - SIM mode 2 SIM 2 is connected to the hands-free system
- Phone mode Toggle between rSAP and HFP mode
 - Premium rSAP mode
 - Handsfree HFP mode
- Off time Set the off time in increments of 5 min
- Access point Set the Internet access point
 - APN Change the access point name
 - User name User Name
 - Password Password
- Switch off ph. Switch off the hands-free system (the mobile phone remains paired)

Back

Return to the main menu in the MAXI DOT display.

Internet connection via Bluetooth®



First read and observe the introductory information given on page 115.

A notebook can, for example, be connected to the Internet via the hands-free system.

The control unit of the hands-free system supports the GPRS, EDGE and UMTS/3G technologies.

An Internet can only be established via a telephone which is connected via the rSAP profile.

The procedure for connecting to the Internet can vary depending on the type and version of the operating system as well as the type of the device to be connected. Successfully connecting to the internet requires appropriate knowledge of the operating system for connecting the device.

Process of connection

> Connect the mobile phone with the hands-free system.

- > Set the access point in the Mobile phone Settings Access point menu (depending on the operator, usually "Internet").
- > Switch on the visibility of the hands-free system for other devices in the Mobile phone - Bluetooth - Visibility menu.
- Use the device that is to be connected to search for available Bluetooth® devices.
- > Select the hands-free system (as standard "SKODA_BT") from the list of found devices.
- > Enter the password on the device being connected and follow any instructions given on this device or in the MAXI DOTdisplay.
- Enter the desired Internet address in the Internet browser. The operating system requests the entry of the telephone number for the internet access (depending on the operator, usually **99#").

WLAN

Introduction

This chapter contains information on the following subjects:

Wi-Fi is a wireless network for connecting to the Internet.

Using a mobile phone connected with the universal telephone preparation GSM III via the rSAP profile, it is possible to establish a Wi-Fi network in the vehicle and to enable passengers with compatible devices to connect to this network.

Switching Wi-Fi network on/off



Switching on

> Connect the mobile phone with the universal telephone preparation GSM III via the rSAP profile >> page 116.

The display shows the message Switch on WLAN?

> Select the Yes menu item.

If no access point¹⁾ is assigned automatically, then this must be entered manually as per the instructions from the mobile network operator, e.g. "Internet".

If the Wi-Fi network is switched on, the display will show the following message, for example: WLAN SK. WLAN 1234 switched on.

The display then shows a password for the Wi-Fi network connection. The password can subsequently be found in the **Mobile phone** - **Wi-Fi** - **Password** - **Show** menu.

If no data connection via WLAN is available, the display will show the message **Data connection not available**. This can be caused by a weak GSM signal, for example. Try to establish the connection again at a location with stronger signal reception.

Switching off

> Select the Wi-Fi - Off menu item in the Mobile phone menu.

The display shows the message Switch off WLAN?

> Select the **OK** menu item.

The display shows the message WLAN switched off.

Connecting an external device to the WLAN network



First read and observe the introductory information given on page 119.

Connecting using the Wi-Fi network search

- > Switch on the Wi-Fi network » page 119, Switching Wi-Fi network on/off.
- On the device to be connected, search for available Wi-Fi networks (Wi-Fi) see operating instructions for the device to be connected.
- > Select the appropriate Wi-Fi network connection in the menu of the networks found (e.g. Wi-Fi SK_WLAN 1234).

Select the Wi-Fi menu item in the Mobile phone menu.

 $^{^{1)}}$ The name of the access point is defined by the mobile operator.

If menu item WPA2 is set in the Mobile phone - Wi-Fi - Settings - Encryption menu, then the password displayed when the Wi-Fi is switched on must be entered in the device to be connected. The password can be found in the Mobile phone - Wi-Fi - Password - Show menu.

If menu item Open is set in the Mobile phone - Wi-Fi - Settings - Encryption menu, the connection is made automatically.

Connecting using WPS (service for easy connection)

- > Switch on the Wi-Fi network » page 119, Switching Wi-Fi network on/off.
- > Open the Mobile phone Wi-Fi WPS config. menu in the instrument cluster.
- In the device to be connected, select the connection using WPS function see operating instructions for the device to be connected.

If the **Pushbutton** menu item is selected in the instrument cluster, the Wi-Fi connection is made automatically.

If the **WPS PIN** menu item is selected in the instrument cluster, then a PIN must be entered in the device to be connected and the instrument cluster.

Use WLAN network in MAXI DOT display



First read and observe the introductory information given on page 119.

When a Wi-Fi network is switched on, the following menu items are displayed when the **Wi-Fi** menu item is selected.

- Off Switch off the WLAN network (depending on the context)
- Device list Display a list of external devices
- Active device Display a list of active devices
 - Block Block device connections
- Known devices Display a list of known devices
 - Rename Rename the device
- Block Block device connections
- Device blocked Display a list of blocked devices
 - Unblock Remove the connection block
- Delete lists Delete device lists
- Known devices Delete the list of known devices
- Device blocked Delete the list of blocked devices
- Both lists Delete both device lists
- Password Use of password to log on to the WLAN network
- Show Display a password to log on to the WLAN network
- Generate Generate a new password to log on to the WLAN network

- WLAN name Use of WLAN network name
- Show Display the WLAN network name
- Rename Rename the WLAN network
- WPS config. Wi-Fi network connection using WPS
- Pushbutton Automatic connection
- WPS PIN PIN entry for the connection
- Data counter Display information about the volume of data transferred
- Act. Conn. Display the volume of data transferred for the current connection
- Total Display the total volume of data transferred
- Reset Reset the information about the volume of data transferred
- **Settings** WLAN network settings
 - Access point Access point settings
 - Settings Access point management
 - APN Change the access point name
 - User name User Name
 - Password Password
 - Reset Reset access point factory settings
 - Prioritisation Set the connection priority
 - Calls Set the connection priority for calls
 - Data Set the connection priority for data transfer
 - Encryption- Set the encryption
 - WPA2 Enable WPA 2 encryption
 - Open No encryption
 - Visibility Set the WLAN network visibility
 - Visible WLAN network is visible to other devices
 - Invisible WLAN network is not visible to other devices
 - Data roaming Set the data roaming
 - No roaming Data roaming is not allowed
 - Allow Data roaming is allowed
 - Always ask Question setting for data roaming
 - WLAN channel Select WLAN network channels (preferably set to channel 11)
 - Channel 1 ... Channel 11 Display the WLAN network channels
 - Reset Reset Wi-Fi network factory settings

Voice control

Introduction

This chapter contains information on the following subjects:

Dialogue	122
Voice commands - GSM II	123
Voice commands - GSM III	123

Dialogue

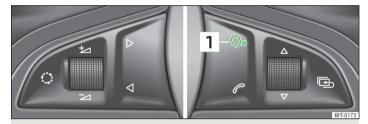


Fig. 112 Multifunction steering wheel



First read and observe the introductory information given on page 122.

The voice control system (hereinafter referred to as the system) makes it possible to use voice commands for some functions of the hands-free system.

The period of time during which the system is ready to receive voice commands and to carry them out is called a dialogue. The system gives audible feedback and guides you if necessary through the relevant functions.

Optimum understanding of the voice commands depends on several factors.

- > Speak with a normal tone of voice without intonation and excessive pauses.
- > Avoid a bad pronunciation.
- Close the doors, windows and sliding roof, to reduce or stop disturbing exterior noise.

- > You are recommended to speak louder at higher speeds, so that the sound of your voice is not drowned out by the increased ambient noise.
- During the dialogue, limit additional noise in the vehicle, e.g. passengers talking at the same time.
- **>** Do not speak, if the system makes an announcement.

The microphone for voice control is inserted in the moulded headliner and directed to the driver and front passenger. Therefore the driver and the front passenger can operate the equipment.

Entering a phone number

The telephone number can be entered as a continuous series of individually spoken digits (the whole number at once) or in the form of digital blocks (separated by short pauses). After each order of digits (separation through brief voice pause) all of the digits detected up to now are repeated by the system.

The digits **0 - 9**, symbols **+**, *****, **#** are permitted. The system detects no continuous digit combinations such as twenty-three, but only individually spoken digits (two, three).

Activating voice control - GSM II

By briefly pressing the button 1 » Fig. 112 on the multifunction steering wheel.

Deactivating voice control - GSM II

If the system is currently playing a message, you will need to end the message currently being played by briefly pressing the button 1 on the multi-function steering wheel.

If the system expects a voice command, you can end the dialogue yourself:

- > with the CANCEL voice command;
- > by briefly pressing the button 1 on the multifunction steering wheel.

Activating voice control - GSM III

The dialogue can be started at any time by pressing the button $\boxed{1}$ » Fig. 112 on the multifunction steering wheel¹⁾.

Deactivating voice control - GSM III

If the system is currently playing a message, the message that is currently being played must be terminated by pressing the button $\boxed{1}$ » Fig. 112 on the multi-function steering wheel.

If the system expects a voice command, you can end the dialogue yourself:

- > with the CANCEL voice command;
- > by briefly pressing the button 1 » Fig. 112 on the multifunction steering wheel. ▶

¹⁾ Not valid for vehicles with the Columbus navigation system.

i Note

- The dialogue of an incoming call is immediately interrupted.
- The voice control is only possible in vehicles fitted with a multi-function steering wheel with telephone control.
- On vehicles that are factory-fitted with the Columbus navigation system, it is only possible to operate the voice control for the telephone via this device » Operating instructions for the Columbus navigation system, chapter Voice control for the navigation system.

Voice commands - GSM II

First read and observe the introductory information given on page 122.

Basic voice commands

Voice command	Action		
HELP	After this command, the system repeats all possible commands.		
CALL XYZ	This command calls up the contact from the phone book.		
PHONE BOOK	After this command, for example, the phone book can be repeated back to you, a voice entry for the contact can be updated or deleted, etc.		
CALL HISTORY	Lists of dialled numbers, missed calls, etc.		
DIAL NUMBER	After this command, a telephone number can be entered in order to establish a connection with the requested party.		
REDIAL	After this command the system calls the last dialled number.		
MUSIC ^{a)}	Play music from the mobile phone or another paired device.		
FURTHER OPTIONS	After this command the system offers additional context-dependent commands.		
SETTINGS	Selection for setting Bluetooth®, dialogue etc.		
CANCEL	The dialogue is ended.		

a) On vehicles fitted with the Amundsen+ navigation system, this function can be accessed via the navigation system menu; refer to the » operating instructions for the Amundsen+ navigation system.

If a voice command is not detected, the system answers with "Sorry?", and a new entry can be made. After the 2nd error the system repeats the aid. After the 3rd error the answer "Cancelled" is given and the dialogue is ended.

Storing voice recording for a contact

If automatic name recognition does not work reliably for some contacts, you can choose to save your own voice tag for the contact in the **Phone book** - **Voice tag** - **Record** menu item.

Your own voice tag can also be saved using the voice control in the **Further options** menu.

Voice commands - GSM III



First read and observe the introductory information given on page 122.

Basic voice commands

Voice command	Action
HELP	After this command, the system repeats all possible commands.
CALL NAME	After this command, a name can be entered to establish a connection with the requested party.
DIAL NUMBER	After this command, a telephone number can be entered in order to establish a connection with the requested party.
REDIAL	The last selected telephone number is selected.
READ ADDRESSBOOK	The system reads out contacts from the telephone book.
READ MESSAGES	The system reads the messages which were received while the telephone was connected to the control unit.
SHORT DIALOGUE	The help is significantly reduced (good operating knowledge provided).
LONG DIALOGUE	The help is not reduced (suitable for beginners).
CANCEL	The dialogue is ended.

If the system does not recognise the command, it repeats the first part of the help thus enabling a new entry to be completed. After the 2nd error the system repeats the second part of the aid. After the 3rd error the answer "Cancelled" is given and the dialogue is ended.

Storing voice recording for a contact

If automatic name recognition does not work reliably for some contacts, you can choose to save your own voice tag for the contact in the **Phone book - Voice tag -**Record menu item.

Your own voice tag can also be saved using the voice control in the Further options menu.

Multimedia

Introduction

This chapter contains information on the following subjects:

Music playback via Bluetooth	_ 126
Operating the radio and navigation system on the multifunction steering	
wheel	_ 126
AUX- and MDI inputs	_ 127
CD change	_ 128
DVD-preinstallation	_ 128

To ensure that music can be played via Bluetooth[®], you must first pair the device with the hands-free system in the **Phone** - **Bluetooth** - **Media player** menu.

The music playback process is performed on the connected device.

The universal telephone preinstallation GSM II ensures that the music played back via the hands-free system can be controlled with the remote control » page 123, *Voice commands - GSM II.*



Note

The device being connected must support the Bluetooth $^{\circ}$ A2DP profile; refer to the operating instructions for the relevant device being connected.

Music playback via Bluetooth®



First read and observe the introductory information given on page 126.

The universal telephone preinstallation makes it possible to play back music via Bluetooth® from devices such as MP3 players, mobile phones or notebooks.

Operating the radio and navigation system on the multifunction steering wheel

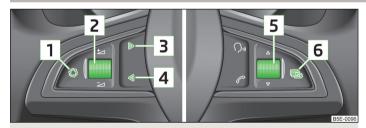


Fig. 113 Multifunction steering wheel: control buttons



First read and observe the introductory information given on page 126.

The multifunction steering wheel comprises buttons for setting the basic functions for the factory-fitted radio and navigation system » Fig. 113.

The radio and navigation system can of course still be operated on the devices. A description is included in the relevant operating instructions.

If the side lights are switched on, the buttons on the multifunction steering wheel are illuminated.

The buttons apply for the respective operating mode of the current radio, audio, video or navigation system.

The following functions can be completed by pressing or turning the buttons.

Button/ wheel	Action	Radio	TV	Audio sources	DVD video	Navigation
1	Press		Change audio source			
2	Press	Switch tone off/on (MUTE ∜)				Interrupt current navigation an- nouncement
2	Turn upwards		Increase the vo	olume		
2	Turn downwards		Decrease the v	olume		
3	Press briefly	Skip to next channel	Skip to next channel	Skip to next track	Skip to next chapter	No function
[3]	Press briefly		Stop traffic annou	incement		
3	Press and hold but- ton	No function		Fast forward		No function
4	Press briefly	Switch to previous channel	Switch to previous channel	Switch to start of track ^{a)}	Switch to previous chapter	No function
			Stop traffic annou	incement		
4	Press and hold but- ton	No function Fast rewind		No function		
5	Turn upwards	Switch to previous channel and display List of stored/accessible channels	Skip to next channel	Skip to next track	Skip to next chapter	Show the option to stop navigation or
5	Turn downwards	Switch to the next channel and display List of stored / accessible channels	Switch to previous channel	Switch to start of track ^{a)}	Switch to previous chapter	display the list of recent destina- tions
6	Press briefly	Call up the main menu				

a) To go to the previous track, press the adjustment wheel twice or rotate it by two positions.

AUX- and MDI inputs



First read and observe the introductory information given on page 126.


The AUX- and MDI inputs are used to connect external audio sources (e.g. iPod or MP3 player) and to play back music from these devices via the factory-fitted radio or navigation system.

The AUX-input is located in the storage compartment below the front armrest and is marked with AUX.

The MDI input is located in the storage compartment below the front armrest.

For a description of use, refer to the operating instructions for the relevant radio or navigation system.

CD change

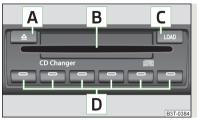

Fia. 114 The CD changer



First read and observe the introductory information given on page 126.

The CD changer for the radio and navigation system is located in the right side compartment of the boot.

Inserting the CD

> Touch the button C >> Fig. 114 and guide the CD (compact disc) into the CD-case B. The CD is automatically loaded onto the lowest free position in the CD changer. The indicator light in the corresponding button **D** stops flashing.

Filling the CD changer with CDs

> Press and hold the button C » Fig. 114 for longer than 2 seconds and guide the CDs one after the other (maximum 6 CDs) into the CD case B. The indicator lights in the buttons **D** stop flashing.

Inserting a CD at a specific position

- > Press the button C » Fig. 114. The indicator lights in the buttons D illuminate the memory spaces that are already assigned and flash in the case of free mem-
- Touch the desired button D and guide the CD into the CD-case B.

Ejecting a CD

- > Press the button A » Fig. 114 to eject a CD. For assigned memory spaces, the indicator lights now illuminate in the buttons D.
- > Press the corresponding button D. The CD is ejected.

Eiecting all CDs

> Press and hold the button A » Fig. 114 for more than 2 seconds. All CDs in the CD-changer are ejected consecutively.

- Note
- Insert a CD, with the labelled side facing up, into the CD slot B » Fig. 114 until it is automatically drawn in. The play function will start automatically.
- After loading a CD into the CD changer, wait until the indicator light of the corresponding button D is illuminated. Then the CD case B is free to load the next CD.
- If a position is selected, on which a CD is already located, this CD is ejected. Remove the ejected CD and load the desired CD.

DVD-preinstallation

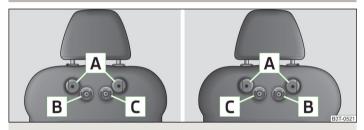


Fig. 115 Seat backrest - left front seat/right front seat



First read and observe the introductory information given on page 126.

Description

- Openings for attachment of DVD player holder
- Audio/video input
- Connection input, DVD player

Only one DVD pre-installation is factory-installed in the seat backrest of the front seat.

The DVD player holder and DVD player can be purchased from ŠKODA original accessories. For a description of the use, refer to the operating instructions for these devices and equipment.

WARNING

- If there are passengers on both of the rear seats, the DVD player holder must not be used on its own (without the DVD player) risk of injury!
- The inclination of the holder can be adjusted to three preset positions. Be careful not to injure fingers between the holder and the backrest when changes to the position of the DVD player holder are made.
- The DVD player holder must not be used when the rear seat backrest or the rear seat is folded forward or has been removed completely.

Note

Follow the instructions given in the operating instructions of the DVD player holder/DVD player.

Driving

Starting-off and Driving

Steering

Introduction



Fia. 116 Correct seated position for the driver

This chapter contains information on the following subjects:

Adjusting the steering wheel position _____ Power steering _____ 131

WARNING

- When driving, hold the steering wheel with both hands firmly on the outer edge in the 9 o'clock and 3 o'clock position. Never hold the steering wheel in the 12 o'clock position or in any other way (e.g. in the middle or inner edge of the steering wheel). In such cases, you could severely injure the arms, hands and head when the driver airbag is deployed.
- Never adjust the steering wheel when the vehicle is moving only when the vehicle is stationary!

WARNING (Continued)

- Adjust the steering wheel so that the distance A » Fig. 116 between the steering wheel and your chest is at least 25 cm. Adjust the distance of the legs to the circuit board in the region of the knee airbag to at least 10 cm B. If you do not comply with the minimum distance, the airbag system will not protect you - danger of death!
- If the steering wheel is adjusted further towards the head, the protection provided by the driver airbag in the event of an accident is reduced. Check that the steering wheel is aligned to the chest.

Adjusting the steering wheel position



Adjustable steering wheel: Lever below steering wheel



First read and observe the introductory information and safety warnings II on page 130.

The height and forward/back position of the steering wheel can be adjusted.

- > First of all adjust the driver's seat > page 66.
- > Pull the lever below the steering wheel down » Fig. 117.
- > Adjust the steering wheel to the desired position (with regard to the height and forward/back position).
- > Push the lever upwards to the stop.

WARNING

The lever for adjusting the steering wheel must be locked whilst driving so that the steering wheel cannot accidentally change position during the journey - risk of accident!

Power steering



First read and observe the introductory information and safety warnings 10 on page 130.

The power steering enables you to steer the vehicle with less physical force.

The power steering only works when the engine is running.

It is still fully possible to steer the vehicle if the power steering fails or if the engine is not running (e.g. when towing). However, greater physical effort is required to turn the steering wheel.

Starting and stopping the engine using the key

Introduction

This chapter contains information on the following subjects:

Electronic immobilizer	132
Ignition Switch	132
Starting the engine	132
Stopping the engine	133

Starting and stopping the engine on vehicles with the KESSY system » page 133.

The engine can only be started using a correctly coded original key.

The engine running noises may louder at first be louder for a short time after starting the cold engine. This is quite normal and is not an operating problem.

WARNING

- When driving, the ignition key must always be in the position 2 » Fig. 118 on page 132 (ignition switched on) without the engine running. This position is confirmed by the appearance of certain indicator lamps in the instrument cluster.
- \blacksquare If the key is not in position $\boxed{\textbf{2}_{r}}$ it could unexpectedly lock the steering -danger of accident!
- Only pull the ignition key from the ignition lock when the vehicle has come to a complete stop (by applying the handbrake). Otherwise, the steering could be blocked risk of accident!
- When leaving the vehicle, the ignition must always be removed. This is particularly important if children are left in the vehicle. Children could otherwise start the engine for example risk of accident or injury!
- Never leave the vehicle unattended with the engine running.
- Never switch off the engine before the vehicle is stationary risk of accident!

WARNING

- Never leave the engine running in unventilated or closed rooms. The exhaust gases from the engine contain substances such as odourless and colourless carbon monoxide (a poisonous gas) risk to life!
- Carbon monoxide can cause unconsciousness and death.

CAUTION

- The starter must only be operated when the engine is not running and the vehicle is at a standstill. The starter or engine can be damaged if the starter is activated when the engine is running 3 » Fig. 118 on page 132.
- Do not tow start the engine there is a risk of damaging the engine and the catalytic converter. The battery from another vehicle can be used as a jump-start aid » page 234, Jump-starting.

CAUTION

- Avoid high engine revolutions, full throttle and high engine loads before the engine has reached its operating temperature risk of damaging the engine!
- Do not switch the engine off immediately at the end of your journey after the engine has been operated over a prolonged period at high loads but leave it to run at an idling speed for about 1 minute. This prevents any possible accumulation of heat when the engine is switched off.



For the sake of the environment

Do not warm up the engine while the vehicle is stationary. If possible, start your journey as soon as the engine has started. Through this the engine reaches its operating temperature more rapidly and the pollutant emissions are lower.



Note

After switching off the ignition, the radiator fan may intermittently continue to operate for approx. 10 minutes.

Flectronic immobilizer



First read and observe the introductory information and safety warnings III on page 131.

An electronic chip is integrated in the head of the key. The immobiliser is deactivated with the aid of this chip when the key is inserted in the ignition lock.

The electronic immobiliser is automatically activated when the ignition key is withdrawn from the lock.

The engine will not start if a non-authorized ignition key is used.

The following message is shown in the information cluster display.

- Immobilizer active.
- IMMOBILISER

Ignition Switch

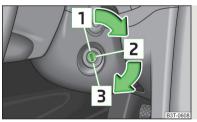


Fig. 118 Positions of the vehicle key in the ignition lock



First read and observe the introductory information and safety warnings II on page 131.

Petrol engines » Fig. 118

- Ignition switched off, engine off, the steering can be locked
- Ianition switched on
- Starting engine

Diesel engines » Fig. 118

- 1 Fuel supply interrupted, ignition switched off, engine switched off, the steering can be locked.
- Heating glow plugs on, ignition switched on
- Starting engine

To lock the steering, with the ignition key withdrawn, turn the steering wheel until the steering locking pin engages audibly.

If the **steering is locked** and the key cannot or can only be turned with difficulty into the position 2 » Fig. 118, move the steering wheel back and forth and the steering lock will unlock.



Note

We recommend locking the steering wheel whenever leaving the vehicle. This acts as a deterrent against the attempted theft of your car.

Starting the engine



First read and observe the introductory information and safety warnings 🔢 on page 131.

Vehicles with a diesel engine are equipped with a glow plug system. The glow plug warning light ∞ illuminates after the ignition has been switched on. Start the engine after the warning light ∞ has gone out.

You should not switch on any major electrical components during the heating period otherwise the vehicle battery will be drained unnecessarily.

Procedure for starting the engine

- > Firmly apply the handbrake.
- Move the gearshift lever into neutral or move the selector lever into position P or N.
- > Switch on the ignition 2 » Fig. 118 on page 132.

- Depress and hold the clutch pedal (vehicles with a manual gearbox) or brake pedal (vehicles with an automatic gearbox) until the engine starts.
- > Turn the key into position 3 to the stop and release immediately after the engine has been started do not apply the accelerator.

After letting go, the vehicle key will return to position 2.

If the engine does not start within 10 seconds, turn the key to position 1. Repeat the start-up process after approx. half a minute.

> Release the handbrake.

Vehicles with manual transmission

The engine will not start if the clutch pedal is not depressed.

The following message is shown in the information cluster display.

- Depress clutch to start.
- **B** CLUTCH

Vehicles with automatic transmission

The engine will not start if the brake pedal is not depressed.

The warning light S lights up in the instrument cluster and the following message appears in the display.

- Apply the brake to start.
- **B** BRAKE

CAUTION

- If the engine does not start up after a second attempt, one of the following fuses may be defective.
- Petrol engine fuse for the electric fuel pump.
- Diesel engine fuse for the control unit for glow plugs or glow plug relay and fuel pump.
- Check the fuse and replace if necessary » page 244, or seek assistance from a specialist garage.

Stopping the engine

First read and observe the introductory information and safety warnings 11 on page 131.

Switch off the engine by turning the ignition key into position $\boxed{1}$ » Fig. 118 on page 132.

For vehicles with automatic transmission, the ignition key can only be removed if the selector lever is in position **P**.

Starting and stopping the engine - KESSY

Introduction

This chapter contains information on the following subjects:

Steering lock / unlock	134
Switching on the ignition	135
Starting the engine	135
Switching off the ignition	136
Switching off the engine	136
Emergency start-up of the engine	136
Emergency ignition shutoff system	136

The KESSY system (Keyless Entry Exit System, hereinafter referred to only as system) allows the switching on or switching off of the ignition and starting or stopping of the engine without the active use of the key.

A key must be in the vehicle to unlock the steering, switch on the ignition and start the vehicle. When travelling the key must be in the vehicle.

The engine running noises may louder at first be louder for a short time after starting the cold engine. This is guite normal and is not an operating problem.

WARNING

- Never leave the key in the vehicle when you exit the vehicle. This is particularly important if children are left in the vehicle. Children could otherwise start the engine for example risk of accident or injury!
- Never leave the vehicle unattended with the engine running.
- Never switch off the engine before the vehicle is stationary risk of accident!

WARNING

- Never leave the engine running in unventilated or closed rooms. The exhaust gases from the engine contain substances such as odourless and colourless carbon monoxide (a poisonous gas) - risk to life!
 - Carbon monoxide can cause unconsciousness and death.

CAUTION

- The system can recognize the valid key, even if it has been forgotten, for example, in the front of the vehicle roof \boxed{D} » Fig. 14 on page 34 - There is danger of loss or damage to the key! It is therefore not always necessary to know where the key is.
- The starter must only be operated when the engine is not running and the vehicle is at a standstill. The starter or engine may be damaged if the starter is activated when the engine is running.
- Do not tow start the engine there is a risk of damaging the engine and the catalytic converter. The battery from another vehicle can be used as a jump-start aid » page 234, lump-starting.

CAUTION

- Avoid high engine revolutions, full throttle and high engine loads before the engine has reached its operating temperature - risk of damaging the engine!
- Do not switch the engine off immediately at the end of your journey after the engine has been operated over a prolonged period at high loads but leave it to run at an idling speed for about 1 minute. This prevents any possible accumulation of heat when the engine is switched off.

For the sake of the environment

Do not warm up the engine while the vehicle is stationary. If possible, start your journey as soon as the engine has started. Through this the engine reaches its operating temperature more rapidly and the pollutant emissions are lower.

Note

- The system is protected against inadvertently switching off the engine while driving, this means that the engine can only be switched off in an emergencv » page 136.
- After switching off the ignition, the radiator fan may intermittently continue to operate for approx. 10 minutes.
- Under certain circumstances (e.g. after switching off the ignition and opening the driver's door), the steering is enabled only when the ignition is switched on or the engine is started.

Steering lock / unlock



Fia. 119 Starter button



First read and observe the introductory information and safety warnings II on page 133.

The steering lock (steering lock) deters attempted theft of your vehicle.

Locking

- > Stop the vehicle.
- > Switch off the engine or the ignition by pressing the starter button » Fig. 119.
- > Open the driver door.

The steering is locked automatically.

If the driver's door is opened and the ignition is switched off afterwards, the steering is only locked after the vehicle is locked.

Unlocking

- > Open the driver's door and get into the vehicle.
- > Close the driver's door.

The steering is unlocked within 2 seconds.

If the system does not unlock the steering at the first time (for example when the front wheels are in contact with an obstacle), then two more unlocking attempts are performed automatically.

If the steering is still not unlocked, then the following message is displayed on the display of the instrument cluster.

- Move the steering wheel!
- **MOVE STEERING WHEEL**

Slightly move the steering wheel and the system will make up to 3 more attempts to unlock after 2 seconds. At the same time, the indicator light 😔 flashes.

If the steering is still not unlocked, to try to eliminate the possible cause and then repeat the unlocking attempt.

Switching on the ignition



First read and observe the introductory information and safety warnings II on page 133.

> Press the starter button » Fig. 119 on page 134 briefly.

The ignition is switched on.



Note

The ignition is switched on when indicated by the lighting up of certain indicator lamps in the instrument cluster.

Starting the engine



First read and observe the introductory information and safety warnings H on page 133.

Vehicles with a **diesel engine** are equipped with a glow plug system. The glow plug warning light ∞ illuminates after the ignition has been switched on. Start the engine after the warning light ∞ has gone out.

You should not switch on any major electrical components during the heating period otherwise the vehicle battery will be drained unnecessarily.

Procedure for starting the engine

- > Firmly apply the handbrake.
- Move the gearshift lever into neutral or move the selector lever into position P or N.
- Depress and hold the clutch pedal (vehicles with a manual gearbox) or brake pedal (vehicles with an automatic gearbox) until the engine starts.
- > » Fig. 119 on page 134Press and hold "the starter button until the engine starts.
- > Release the handbrake.

Vehicles with manual transmission

The engine will not start if the clutch pedal is not depressed.

The following message is shown in the information cluster display.

- Depress clutch to start.
- **G** CLUTCH

Vehicles with automatic transmission

The engine will not start if the brake pedal is not depressed.

The warning light \odot lights up in the instrument cluster and the following message appears in the display.

- Apply the brake to start.
- B BRAKE

CAUTION

- If the engine does not start up after a second attempt, one of the following fuses may be defective.
 - Petrol engine fuse for the electric fuel pump.
 - Diesel engine fuse for the control unit for glow plugs or glow plug relay and fuel pump.
- Check the fuse and replace if necessary » page 244, or seek assistance from a specialist garage.

 $^{^{} ext{I}}$ On vehicles with the START-STOP system, it is sufficient to press the starter button briefly. The motor will then automatically start.

Switching off the ignition



First read and observe the introductory information and safety warnings 🔢 on page 133.

> Press the starter button » Fig. 119 on page 134 briefly.

The ignition is switched off.

The ignition can be switched off up to a speed of 2 km/h.

On vehicles with manual transmission, the clutch pedal must not be depressed to switch off the ignition, otherwise the system will try to start.

For **automatic transmission** vehicles, the brake pedal must not be depressed, otherwise the system will try to start.

If the driver's door is opened while the igition is on, an audible signal sounds and the following message appears in the instrument cluster display.

Ianition on!

IGNITION ON

When leaving the vehicle always switch off the ignition.

Switching off the engine



First read and observe the introductory information and safety warnings II on page 133.

- > Stop the vehicle.
- > Press the starter button » Fig. 119 on page 134.

The engine and the ignition are switched off simultaneously.

Emergency start-up of the engine



Fia. 120 Emergency start-up of engine



First read and observe the introductory information and safety warnings III on page 133.

If the authorisation check for the key fails, the following message appears in the instrument cluster display.

- Key not found.
- NO KEY

The emergency start-up must be completed.

- > Press the starter button directly with the key » Fig. 120.
- or
- > Press the starter button and then hold the key to the starter button.



During an emergency start-up of the engine, the key bit must face the starter button » Fig. 120.

Emergency ignition shutoff system



First read and observe the introductory information and safety warnings 🔢 on page 133.

The ignition can be turned off in an emergency even when travelling at a speed of more than 2 km / hr.

> Press the starter button » Fig. 119 on page 134 for longer than 1 second or twice within 1 second.

After emergency stop of the ignition, the steering is unlocked.

Brakes

~~				
	Intro	МΠ	cti	nn

This chapter contains information on the following subjects:

Information on braking	137
Handbrake	138

WARNING

- Greater physical effort is required for braking when the engine is switched off risk of accident!
- The clutch pedal must be actuated when braking on a vehicle with manual transmission, when the vehicle is in gear and at low revs. Otherwise, the function of the brake booster may be impaired risk of accident!
- Never leave children unattended in the vehicle. The children might, for example, release the handbrake or take the vehicle out of gear. The vehicle could then start to move risk of accident!

WARNING

■ In the case of damage to the standard fitted front spoiler or if retrofitting another front spoiler, hub caps etc.» page 193, Services, modifications, and technical alterations, make sure that the air supply to the front brakes is not affected. The front brakes may overheat, which can have a negative impact on the functioning of the braking system – risk of accident!

CAUTION

- Observe the recommendations on the new brake pads » page 143.
- Never let the brakes slip with light pressure on the pedal if braking is not necessary. This causes the brakes to overheat and can also result in a longer braking distance and excessive wear.

Information on braking



First read and observe the introductory information and safety warnings **!!** on page 137.

If the brakes are applied in full and the control unit for the braking system considers the situation to be dangerous for the following traffic, the brake light flashes automatically.

After the speed was reduced below around 10 km/h or the vehicle was stopped, the brake light stops flashing and the hazard warning light system switches on. The hazard warning light system is switched off automatically after accelerating or driving off again.

Before travelling a long distance with a steep gradient, reduce speed and shift into the next lowest gear. As a result, the braking effect of the engine will be used, reducing the load on the brakes. Any additional braking should be completed intermittently, not continuously.

Wear-and-tear

The wear of the brake pads is dependent on the operating conditions and driving style.

The brake pads wear more quickly if a lot of journeys are completed in towns and over short distances or if a very sporty style of driving is adopted.

Under these **severe conditions**, the thickness of the brake pads must also be checked by a specialist garage between service intervals.

Wet roads or road salt

The performance of the brakes can be delayed as the brake discs and brake pads may be moist or have a coating of ice or layer of salt on them in winter. The brakes are cleaned and dried by applying the brakes several times.

Corrosion

Corrosion on the brake discs and dirt on the bake pads occur if the vehicle has been parked for a long period and if you do not make much use of the braking system. The brakes are cleaned and dried by applying the brakes several times.

Faults in the brake surface

If it is found that the braking distance has suddenly become longer and that the brake pedal can be depressed further, the brake system may be faulty.

Visit a specialist garage immediately and adjust your style of driving appropriately, as you will not know the exact extent of the damage.

Low brake fluid level

An insufficient level of brake fluid may result in problems in the brake system. The level of the brake fluid is monitored electronically » page 15, (**) Brake system.

Brake booster

The brake booster increases the pressure generated with the brake pedal. The brake booster only operates when the engine is running.

Handbrake



Fig. 121 **Handbrake**

First read and observe the introductory information and safety warnings 1 on page 137.

Apply

> Pull the handbrake lever firmly upwards.

Release

- Pull the handbrake lever up slightly and at the same time push in the locking button » Fig. 121.
- > Move the lever right down while pressing the lock button.

The handbrake indicator light 100 lights up when the handbrake is applied, provided the ignition is on.

A warning signal sounds if the vehicle is inadvertently driven off with the hand-brake applied.

The following instruction is shown in the MAXI DOT display.

Release parking brake!

The handbrake warning is activated if the vehicle is driven at a speed of more than around 5 km/h for more than 3 seconds.

₽ WA

WARNING

Please note that the handbrake must be fully released. A handbrake which is only partially released can result in the rear brakes overheating. This can have a negative effect on the operation of the brake system – risk of accident!

Manual gear changing and pedals

Introduction

This chapter contains information on the following subjects:

Manual gear changing	138
Pedals	139■

Manual gear changing



Fig. 122
Gearshift pattern of 5 gear or
6 gear manual gearbox



First read and observe the introductory information given on page 138.

Always depress the clutch pedal all the way down. This prevents uneven wear on the clutch.

The gearshift indicator must be observed when changing gear » page 24.

Only engage reverse gear when the vehicle is stationary. Depress the clutch pedal and hold it fully depressed. Wait a moment before reverse gear is engaged to avoid any shift noises.

The reversing lights will come on once reverse gear is engaged, provided the ignition is on.

WARNING

Never engage reverse gear when driving - risk of accident!

CAUTION

If not in the process of changing gear, do not leave your hand on the gearshift lever while driving. The pressure from the hand can cause the gearshift mechanism to wear excessively.

Pedals



First read and observe the introductory information given on page 138.

The operation of the pedals must not be hindered under any circumstances!

In the driver's footwell, only a footmat, which is attached to the two corresponding attachment points, may be used.

Only use factory-supplied footmats or footmats from the range of ŠKODAOriginal Accessories, which are fitted to two attachment points.

WARNING

No objects may be placed in the driver's footwell – risk due to obstruction or limitation of pedal operation.

Automatic transmission

Introduction

This chapter contains information on the following subjects:

Modes and use of selector lever	140
Manual shifting of gears (Tiptronic)	141
Starting-off and driving	141
Malfunction	142

WARNING

- Do not depress the accelerator if changing the forward driving mode risk of accident!
- Never move the selector lever to mode **R** or **P** when driving risk of accident!
- When the vehicle is stationery and the engine is running, the vehicle must be held in mode D, S or R with the brake pedal. Even when the engine is idling, the power transmission is never completely interrupted the vehicle creeps.

CAUTION

- If the selector lever is moved to mode **N** while driving, the accelerator pedal must be released and you will need to wait until the engine has reached its idling speed before moving the selector lever to a forward driving mode again.
- At temperatures below -10 °C, the engine can only be started in the selector lever position **P**.
- When stopping on a slope, never try to hold the vehicle using the accelerator pedal this may lead to gear damage.

Note

After the ignition is switched off, the ignition key can only be with drawn if the selector lever is in the position ${\bf P}.$


Modes and use of selector lever



Fig. 123 Selector lever / display



Fig. 124 Shiftlock button

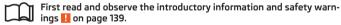

When the ignition is switched on, the gearbox mode and the currently selected gear are indicated in the display » Fig. 123.

The following modes can be selected with the selector lever » Fig. 123.

P - Parking mode

The driven wheels are locked mechanically in this mode.

The parking mode must only be selected when the vehicle is stationary.

R - Reverse gear

Reverse gear can only be engaged when the vehicle is stationary and the engine is at idling speed.

Before moving into mode **R** from mode **P** or **N**, depress the brake pedal and press the locking button at the same time » Fig. 124.

N - Neutral

The power transmission to the drive wheels is interrupted in this mode.

D - Mode for forwards travel (normal programme)

In mode **D**, the forward gears are automatically changed according to the engine load, accelerator pedal actuation and driving speed.

S - Mode for forwards travel (sports programme)

In mode S, the forward gears are shifted automatically up and down at higher engine speeds than in mode D.

Before changing to mode **S** from mode **D**, press the locking button » Fig. 124

Releasing selector lever from mode P or N (selector lever lock)

The selector lever is locked in modes **P** and **N** to prevent the forwards travel mode from being selected accidentally and setting the vehicle in motion. The warning light (S) illuminates in the instrument cluster » page 22.

The selector lever is released by depressing the brake pedal while the pressing lock button at the same time » Fig. 124.

The selector lever is not locked when quickly moving via position **N** (e.g. from **R** to D). This, for example, helps to rock out a vehicle that is stuck, e.g. in a bank of snow. The selector lever lock will engage if the lever is in position **N** for more than approx. 2 seconds without the brake pedal being depressed.

The selector lever is locked only when the vehicle is stationary and at speeds up to 5 km/h.



Note

If you want to move the selector lever from mode P to mode D or vice versa, move the selector lever quickly. This prevents modes R or N from being accidentally selected.

Manual shifting of gears (Tiptronic)



Fig. 125 Selector lever / multi-function steering wheel



First read and observe the introductory information and safety warnings ! on page 139.

Tiptronic mode makes it possible to manually shift gears with the selector lever or multifunction steering wheel. This mode can be selected both while stopping and while driving.

The currently selected gear is indicated in the display » Fig. 123 on page 140.

The gearshift indicator must be observed when changing gear » page 24.

Switching to manual shifting

> Push the gear selector from position D towards the right, or left in a right-hand drive vehicle.

Shifting up gears

- > Press the selector lever forwards + » Fig. 125.
- > Pull the right-hand rocker switch ⊕ » Fig. 125 briefly towards the steering wheel.

Shifting down gears

- > Press the selector lever backwards » Fig. 125.
- > Pull the left-hand rocker switch (-) » Fig. 125 briefly towards the steering wheel.

Temporarily switch to manual gear changing in mode D or S

> Pull one of the rocker switches (-)(+) briefly towards the steering wheel » Fig. 125.

If one of the rocker switches ①/① is not pulled for more than 1 minute, manual gear changing is deactivated. The temporary switch to manual gear changing can also be deactivated by pulling the right-hand rocker switch ① towards the steering wheel for more than 1 second.

When accelerating, the gearbox automatically shifts up into the higher gear just before the maximum permissible engine speed is reached.

If a lower gear is selected, the gearbox does not shift down until there is no risk of the engine overrevving.



Note

It may be beneficial, for example, when travelling downhill, to use manual shifting of gears. Shifting to a lower gear reduces the load on the brakes and hence the wear of the brakes » page 137.

Starting-off and driving



First read and observe the introductory information and safety warnings 1. on page 139.

Starting off

- > Start the engine.
- > Firmly depress and hold the brake pedal.
- > Press and hold the lock button » Fig. 124 on page 140.
- > Move the selector lever into the desired position » page 140 and then release the lock button.
- > Release the brake pedal and accelerate.

Stop

- > Fully depress and hold the brake pedal and bring the vehicle to a stop.
- > Keep holding the brake pedal until driving is resumed.

The selector lever position ${\bf N}$ does not have to be selected when stopping for a short time, such as at a cross roads.

Parking

- > Fully depress and hold the brake pedal and bring the vehicle to a stop.
- > Firmly apply the handbrake.
- > Press and hold the lock button » Fig. 124 on page 140.
- ➤ Move the selector lever into the position **P** and then release the locking button. ►

Launch control¹⁾

The Launch control function allows the vehicle to reach maximum acceleration when starting off in mode **S** or Tiptronic.

- > Activate the ASR » page 150, Brake assist systems.
- > START STOP deactivate » page 160.
- > Fully depress and hold the brake pedal with your left foot.
- > Fully depress the accelerator pedal with your right foot.
- > Release the brake pedal.

The vehicle starts off with maximum acceleration.

Reactivate the ASR and START-STOP as soon as the desired speed is reached.

Kickdown

The kickdown function allows you to achieve the maximum acceleration of your vehicle while driving.

When the accelerator pedal is fully depressed, the kickdown function is activated in any forward driving mode.

The gearbox shifts down one or more gears depending on the vehicle speed and engine speed, and the vehicle accelerates.

The gearbox does not shift up into the highest gear until the engine has reached its maximum revolutions for this gear range.

WARNING

Rapid acceleration, particularly on slippery roads, can lead to loss of control of the vehicle – risk of accident!

Malfunction



First read and observe the introductory information and safety warnings H on page 139.

Emergency programme

The transmission switches to the emergency programme, if there is a fault in system of the automatic gearbox.

Indications of an activated emergency programme include the following:

- > Only certain gears are selected.
- > The reverse gear R cannot be used.
- > Shifting gears in Tiptronic mode is not possible.

Gearbox overheating

The gearbox may, for example, become too hot due to frequent repeated starting or stop-and-go traffic. Overheating is indicated by the warning light » page 14, O Clutches of the automatic gearbox are too hot.

Defective selector lever lock

If the selector lever lock is defective or its power supply is interrupted (e.g. discharged vehicle battery, faulty fuse), the selector lever can no longer be moved out of position **P** in the normal manner, and the vehicle can no longer be driven. The selector lever must be unlocked specially » page 241.



Note

If the gearbox has switched to the emergency programme, visit a specialist garage.

Running in

Introduction

This chapter contains information on the following subjects:

New engine	142
New tyres	143
New brake pads	143■

New engine



First read and observe the introductory information given on page 142.

The engine has to be run in during the first 1500 kilometres.

This function is only valid for some engines.

Up to 1000 kilometres

- Do not drive faster than 3/4 of the maximum speed of the gear in use, i.e. 3/4 of the maximum permissible engine speed.
- > No full throttle.
- > Avoid high engine speeds.
- > Do not tow a trailer.

From 1000 up to 1500 kilometres

Gradually increase the power output of the engine up to the full speed of the gear engaged, i.e. up to the maximum permissible engine speed.

The red scale of the rev counter indicates the range in which the system begins to limit the engine speed.

During the first operating hours the engine has higher internal friction than later until all of the moving parts have harmonized. The driving style which you adopt during the first approx.1 500 kilometres plays a decisive part in the success of running in your car.

Never drive at unnecessarily high engine speeds even after the running-in period.

On vehicles fitted with a manual gearbox, at the very latest shift up into the next gear when the red area is reached. Observe the recommended gear » page 24, *Gear recommendation*. **Very** high engine speeds when accelerating (accelerator) are automatically restricted » !.

In vehicles with manual transmission, do not drive at unnecessarily **low** engine speeds. Shift down a gear when the engine is no longer running smoothly. Observe the recommended gear » page 24, *Gear recommendation*.

CAUTION

- The engine is not protected from excessive engine revs caused by shifting down at the wrong time. This can result in a sudden increase in revs beyond the permissible maximum rpm, thereby causing engine damage.
- Never rev up a cold engine when the vehicle is stationary or when driving in individual gears.

For the sake of the environment

Do not drive at unnecessarily high engine speeds. Shifting up sooner helps save fuel, reduces engine noise and protects the environment.

New tyres



First read and observe the introductory information given on page 142.

New tyres must firstly be "run in", as they do not offer optimal grip at first. Therefore, drive especially carefully for the first 500 km or so.

New brake pads



First read and observe the introductory information given on page 142.

New brake pads do not initially provide optimal braking performance. They first need to be "run in". Therefore, drive especially carefully for the first 200 km or so. ■

Economical driving and environmental sustainability

Introduction

This chapter contains information on the following subjects:

Looking ahead	144
Economical gear changing	
Avoiding full throttle	145
Reducing idling	145
Avoiding short distances	
Checking tyre inflation pressure	145
Avoiding unnecessary ballast	146
Regular maintenance	146
Saving electrical energy	146
Environmental compatibility	146

The technical requirements for low fuel usage and economic efficiency of the vehicle have already been built into the vehicle at the works. ŠKODA places a particular emphasis on minimising negative effects on the environment.

It is necessary to take note of the guidelines given in this chapter in order to make best use of these characteristics and to maintain their effectiveness.

Fuel consumption, environmental pollution and the wear to the engine, brakes and tyres depend essentially on the following three factors:

- > your personal driving style
- > operating conditions
- > technical requirements

The fuel economy by can be improved by 10 -15 % by always looking ahead and driving in an economical way.

Fuel consumption is also be influenced by external factors which are beyond the driver's control. Consumption increases during the winter or under difficult conditions, on poor roads, etc.

Fuel consumption can vary considerably from the manufacturer's data, as a result of outside temperatures, the weather and driving style.

The optimal engine speed should be obtained when accelerating, in order to avoid a high fuel consumption and resonance of the vehicle.

CAL

CAUTION

All the speed and engine revolution figures apply only when the engine is at its normal operating temperature.

Looking ahead



First read and observe the introductory information and safety warnings on page 143.

A vehicle's highest fuel consumption occurs when accelerating, therefore unnecessary accelerating and braking should be avoided. If looking ahead when driving, less braking and consequently less accelerating are required.

If possible, let your vehicle coast to a stop, or use the engine brake, if you can see that the next set of traffic lights is on red, for example.

Economical gear changing

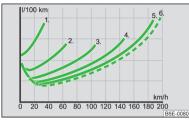


Fig. 126 Principle sketch: Fuel consumption in litres/100 km depending on the selected gear



First read and observe the introductory information and safety warnings ! on page 143.

Shifting up early saves on fuel.

Manual gearbox

- > Drive no more than about one length of your vehicle in first gear.
- > Shift up into the next gear at approx. 2000 rpm.

An effective way of achieving good fuel economy is to shift up **early**. Observe the recommended qear » page 24, *Gear recommendation*.

A suitably selected gear can have an effect on fuel consumption » Fig. 126.

Automatic gearbox

- > Slowly apply the accelerator pedal. However, do not depress ias far as the kick-down position » page 142.
- An economic driving programme is automatically selected if the accelerator pedal is only depressed slowly.

Avoiding full throttle

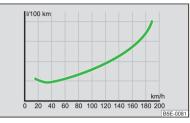


Fig. 127 Principle sketch: Fuel consumption in litres/100 km. and speed in km/h.



First read and observe the introductory information and safety warnings ! on page 143.

Driving more slowly saves fuel.

Sensitive use of the accelerator will not only significantly reduce fuel consumption but also positively influence environmental pollution and wear of your vehicle.

The maximum speed of your vehicle should, as far possible, never be used. Fuel consumption, pollutant emissions and vehicle noises increase disproportionally at high speeds.

The » Fig. 127 shows the ratio of fuel consumption to the speed of your vehicle. Fuel consumption will be halved if you drive at only three-quarters of the possible top speed of your vehicle.

Reducing idling



First read and observe the introductory information and safety warnings ... on page 143.

Idling also costs fuel.

In vehicles not equipped with the START-STOP system, turn off the engine when in a traffic jam, at a level crossing or traffic lights with longer wait times.

Even after just 30-40 seconds you will have saved more fuel than that is needed when you start the engine up again.

If an engine is only idling it takes much longer for it to reach its normal operating temperature. Wear-and-tear and pollutant emissions, though, are particularly high in the warming-up phase. Therefore, start driving as soon as the engine has started, In this case high engine speeds should be avoided.

Avoiding short distances

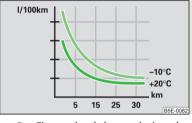


Fig. 128
Principle sketch: Fuel consumption in I/100 km at different temperatures

First read and observe the introductory information and safety warnings ! on page 143.

Short distances result in an above-average high fuel consumption. We therefore recommend avoiding distances of less than 4 km if the engine is cold.

A cold engine consumes the most fuel immediately after the start. Fuel consumption drops to 10 litres/100 km after just 1 kilometre. The consumption stabilises once the engine and catalytic converter have reached their operating temperature.

An important factor in this connection is also the **ambient temperature**. The image » Fig. 128 shows the different levels of fuel consumption after driving a certain distance at a temperature of +20 °C and a temperature of -10 °C.

The vehicle has a higher fuel consumption in winter than in summer.

Checking tyre inflation pressure



First read and observe the introductory information and safety warnings 143.

Tyres which are correctly inflated save fuel.

Always ensure the tyre inflation pressure is correct. If the inflation pressure is too low, the tyres will have to overcome a higher rolling resistance. This will not only increase fuel consumption but also tyre wear and the driving behaviour will wor-

Always check the tyre inflation pressure when the tyres are **cold**.

Avoiding unnecessary ballast



First read and observe the introductory information and safety warnings I on page 143.

Transporting ballast costs fuel.

Each kilogramme of weight increases the fuel consumption. Therefore, we recommend to carry no unnecessary weight.

It is particularly in town traffic, when one is accelerating guite often, that the vehicle weight will have a significant effect upon the fuel consumption. A rule of thumb here is that an increase in weight of 100 kilograms will cause an increase in fuel consumption of about 1 litre/100 kilometres.

At a speed of 100 - 120 km/h, your vehicle that is fitted with a roof rack cross member without a load will use use about 10 % more fuel than normal due to the increased aerodynamic drag.

Regular maintenance



First read and observe the introductory information and safety warnings on page 143.

A poorly tuned engine uses an unnecessarily high amount of fuel.

By having your vehicle regularly maintained by a specialist garage, you create the conditions needed for economical driving. The maintenance state of your vehicle has a positive effect on traffic safety and value retention

A poorly tuned engine can result in a fuel consumption which is 10 % higher than normal.

Check the oil level at regular intervals, e.g. when filling up. Oil consumption is dependent to a considerable extent on the load and speed of the engine. Oil consumption could be as high as 0.5 litres/1 000 km depending on your style of driving.

It is quite normal that a new engine has a higher oil consumption at first, and reaches its lowest level only after a certain running in time. The oil consumption of a new vehicle can therefore only be correctly assessed after driving about 5 000 km.

For the sake of the environment

- Additional improvements to the fuel economy can be made by using synthetic high-lubricity oils.
- Regularly check the ground under the vehicle. Have your vehicle inspected by a specialist garage if you find any stains caused by oil or other fluids on the ground.



Note

We recommend that your vehicle be serviced on a regular basis by a ŠKODA service partner.

Saving electrical energy



First read and observe the introductory information and safety warnings 🔢 on page 143.

When the engine is running, the alternator generates and supplies electrical power. If more electrical components of the electrical system are switched on, more fuel is needed to operate the alternator. We therefore recommend switching off electrical components if these are no longer required.

Environmental compatibility



First read and observe the introductory information and safety warnings !! on page 143.

Environmental protection has played a major role in the design, material selection and production of your new ŠKODA. Particular emphasis has been placed on the following points.

Design measures

- > loints designed to be easily detached.
- > Simplified disassembly due to the modular structure system.
- > Improved purity of different classes of materials.
- > Identification of all plastic parts in accordance with VDA Recommendation 260.
- > Reduced fuel consumption and exhaust emission CO₂.

- > Minimum fuel leakage during accidents.
- > Reduced noise.

Choice of materials

- > Extensive use of recyclable material.
- > Air conditioning filled with CFC-free refrigerant.
- > No cadmium.
- > No asbestos.
- > Reduction in the "vaporisation" of plastics.

Manufacture

- > Solvent-free cavity protection.
- Solvent-free protection of the vehicle for transportation from the production plant to the customer.
- > The use of solvent-free adhesives.
- > No CFCs used in the production process.
- > Without use of mercury.
- > Use of water-soluble paints.

Trade-in and recycling of old cars

ŠKODA meets the requirements of the brand and its products with regard to protecting the environment and the preserving resources. All new ŠKODA vehicles can be utilized up to 95 % and always ¹⁾ be returned.

In a lot of countries sufficient trade-in networks have been created, where you can trade-in your vehicle. After you trade-in your vehicle, you will receive a confirmation stating the recycling in accordance with environmental regulations.



Note

You can find more detailed information about the trade-in and recycling of old cars from a specialist garage.

Avoiding damage to your vehicle

Introduction

This chapter contains information on the following subjects:

General information ________147
Driving through water on streets ________148

General information



н

First read and observe the introductory information given on page 147.

Pay attention to low-slung parts of the vehicle, such as the spoiler and exhaust, particularly in the following situations.

- > When driving on poorly maintained roads and paths.
- > When driving over kerbs.
- > When driving on steep ramps etc.

Particular attention must be paid with vehicles with sport suspension and when the vehicle is fully laden.

Subject to fulfilment of the national legal requirements.

Driving through water on streets



Fig. 129 **Driving through water**



First read and observe the introductory information given on page 147.

The following instructions must be observed if vehicle damage is to be avoided when driving through water (e.g. flooded roads).

> Determine the depth of the water before driving through.

The water level must not reach above the bar on the lower beam » Fig. 129.

> Do not drive any faster than at a walking speed.

At a higher speed, a water wave can form in front of the vehicle, which can cause water to penetrate into the engine's air induction system or other parts of the vehicle.

- > Never stop in the water, do not reverse and do not switch the engine off.
- Deactivate the START-STOP system before driving through water » page 159, START-STOP.

WARNING

- Driving through water, mud, sludge etc. can impair the braking power and increase the braking distance risk of accident!
- Avoid abrupt and sudden braking immediately after water crossings.
- After driving through bodies of water, the brakes must be cleaned and dried as soon as possible by intermittent braking. Only apply the brakes for the purpose of drying and cleaning the brake discs if the traffic conditions permit this. Do not place any other road users in jeopardy.

CAUTION

- When driving through water, some parts of the vehicle such as the engine, qearbox, chassis or electrics can be severely damaged.
- Oncoming vehicles can generate water waves which can exceed the permissible water level for your vehicle.
- Potholes, mud or rocks can be hidden under the water making it difficult or impossible to drive through the body of water.
- Do not drive through salt water. The salt can lead to corrosion. Any vehicle parts that have come into contact with salt water must be rinsed immediately with fresh water.



Note

After driving through water, we recommend having the vehicle checked by a specialist garage.

Driving abroad

Introduction

This chapter contains information on the following subjects:

Unleaded petrol	148
Headlights	149

In certain countries, it may be possible that the ŠKODA Partner network is limited or has not been established. This is the reason why procuring certain spare parts may be somewhat complicated and specialist garages may only be able to make limited repairs.

Unleaded petrol



First read and observe the introductory information given on page 148.

A vehicle fitted with a petrol engine must always be refuelled with unleaded petrol » page 205, *Unleaded petrol*. Information regarding the locations of filling stations that offer unleaded petrol is, for example, provided by the automobile associations.

Headlights



First read and observe the introductory information given on page 148.

The low beam of your headlights is set asymmetrically. It illuminates the side of the road on which the vehicle is being driven to a greater extent.

When driving in countries in which the traffic drives on the other side of the road than in your home country, the asymmetrical low beam may dazzle oncoming drivers. In order to avoid this, the headlights must be adjusted at a specialist garage.

Headlights with Xenon lights can be adjusted in the menu of the MAXI DOT display > page 54.

i

Note

You can find out more information on adjusting the headlights at a specialist garage.

Assist systems

Brake assist systems

Introduction

This chapter contains information on the following subjects:

Electronic Stability Control (ESC)	150
Antilock Braking System (ABS)	151
Traction Control System (TCS)	151
Electronic Differential Lock (EDL)	151
Driver Steering Recommendation (DSR)	151
Hydraulic Brake Assist (HBA)	151
Hill Hold Control (HHC)	152

WARNING

- A lack of fuel can cause irregular engine running or cause the engine to shut down. The brake assist systems would then fail to function risk of accident!
 Adjust the speed and driving style to the current visibility, weather, road and traffic conditions. The increased safety provided by the brake assist systems must not tempt you to take safety risks risk of accident!
- In the event of an ABS fault, visit a specialist garage immediately. Adjust your style of driving according to the damage to the ABS, as you will not know the exact extent of the damage or the extent to which this is limiting the braking efficiency.

CAUTION

- All four wheels must be fitted with the same tyres approved by the manufacturer to ensure the brake assist systems operate correctly.
- Changes to the vehicle (e.g. to the engine, brakes, chassis) can influence the functionality of the brake assist systems » page 193, Services, modifications, and technical alterations.
- If a fault occurs in the ABS system, the ESC, ASR and EDL will also not work. An ABS fault is indicated by the warning light) » page 19.

Electronic Stability Control (ESC)



Fig. 130 ESC system: TCS button



First read and observe the introductory information and safety warnings 1 on page 150.

The ESC system helps improve control of the vehicle in situations where it is being operated at its dynamic limits, such as a sudden change to the direction of travel. Depending on the conditions of the road surface, the risk of skidding is reduced, thereby improving the vehicle's driving stability .

The ESC system is automatically activated each time the ignition is switched on.

The direction which the driver wishes to take is determined based on the steering angle and the speed of the vehicle and is constantly compared with the actual behaviour of the vehicle. In the event of deviations, such as the car beginning to skid, the ESC system will automatically brake the appropriate wheel.

During an intervention of the system, the indicator light ${\it flashes}$ flashes in the instrument cluster.

The following systems are integrated into the Electronic Stability Control (ESC).

- > Antilock Brake System (ABS) » page 151.
- > Traction control (ASR) » page 151.
- > Electronic Differential Lock (EDL) » page 151.
- > Driver Steering Recommendation (DSR) » page 151.
- > Hydraulic Brake Assist (HBA) » page 151.
- > Hill Hold Control (HHC) » page 152.
- > Trailer stabilisation (TSA) » page 162, Towing a trailer.

The ESC system cannot be deactivated. The $\mbox{\ensuremath{\mbox{\it de}}}$ » Fig. 130 symbol button can only be used to deactivate the ASR.

The warning light & lights up in the instrument cluster when the ASR is deactivated.

Antilock Braking System (ABS)



First read and observe the introductory information and safety warnings H on page 150.

ABS prevents the wheels locking when braking. Thus helping the driver to maintain control of the vehicle.

The intervention of the ABS is noticeable from the **pulsating movements of the brake pedal** which is accompanied by noises.

When the ABS system is active, do not brake periodically or reduce the pressure on the brake pedal.

Traction Control System (TCS)



Fig. 131 TCS button



First read and observe the introductory information and safety warnings ! on page 150.

If the wheels are slipping, the TCS adapts the engine speed to the conditions of the road surface. The TCS makes it much easier to start off, accelerate and climb steep hills even if the conditions of the road surface are unfavourable.

The TCS function is activated automatically each time the ignition is switched on. If your vehicle is fitted with the ESC system, the ASR is integrated into the ESC system » page 150.

During an intervention of the system, the TCS indicator light 🔑 flashes in the instrument cluster.

The TCS should normally always be enabled. The system should be deactivated only in the following situations, for example.

- > When driving with snow chains.
- > When driving in deep snow or on a very loose surface.
- > When "rocking a car free" when it has become stuck.

The ASR can be deactivated via the symbol button ASR » Fig. 131.

The warning light $\frac{9}{8}$ lights up in the instrument cluster when the ASR is deactivated.

Ensure the TCS is activated again afterwards.

Electronic Differential Lock (EDL)



First read and observe the introductory information and safety warnings ! on page 150.

If one of the wheels starts to spin, the EDL system brakes the spinning wheel and transfers the driving force to the other wheels. This ensures the stability of the vehicle and a quick journey.

The EDL switches off automatically in order to avoid excessive heat generation in the disc brake of the wheel being braked. The vehicle can continue to be driven and has the same characteristics as a vehicle not fitted with EDL. The EDL switches on again automatically as soon as the brake has cooled down.

Driver Steering Recommendation (DSR)



First read and observe the introductory information and safety warnings \blacksquare on page 150.

In critical situations, the DSR provides the driver with a steering recommendation in order to stabilise the vehicle. The DSR is activated, for example, on the right and left vehicle side when braking sharply on different road surfaces.

Hydraulic Brake Assist (HBA)



First read and observe the introductory information and safety warnings ! on page 150.

The HBA increases the braking effect and helps to reduce the braking distance.

The HBA is activated by very quick operation of the brake pedal. In order to achieve the shortest possible braking distance, the brake pedal must be applied firmly until the vehicle has come to a standstill.

The HBA function is automatically deactivated when the brake pedal is released.

The ABS is activated faster and more effectively with the intervention of the HBA.

Hill Hold Control (HHC)



First read and observe the introductory information and safety warnings 10 on page 150.

When driving on slopes, HHC allows you to move your foot from the brake pedal to the accelerator pedal without having to use the handbrake.

The system holds the brake pressure produced by the activation of the brake pedal for approx. 2 seconds after the brake pedal is released.

The brake pressure drops gradually the more you operate the accelerator pedal. If the vehicle does not start off within 2 seconds, it starts to roll back.

The HHC is active on slops of >5 % if the driver door is closed. HHC is only ever active on slopes when in forward or reverse start off. When driving downhill, it is inactive.

Parking aid

Introduction

This chapter contains information on the following subjects:

Function	153
Activation/deactivation	153

WARNING

- The parking aid is not a substitute for the driver paying proper attention and it is always the driver's responsibility to take care when reversing the vehicle or carrying out similar manoeuvres. Pay particular attention to small children and animals as they may not be recognised by the system sensors.
- Before reversing, you should make sure that there are no small obstacles, such as rocks, thin posts, trailer drawbars etc. in front or behind your vehicle.
 Such obstacles may not be recognised by the system sensors.
- Under certain circumstances, surfaces of certain objects and types of clothing cannot reflect the system signals. Thus, these objects or people who wear such clothing are not recognised by the System sensors.
- External sound sources can have a detrimental effect on the system. Under adverse conditions, this may cause objects or people to not be recognised by the system.

1

CAUTION

- If a warning signal sounds for about 3 seconds after activating the system and there is no obstacle close to your car, this indicates a system fault. The fault is also indicated by the P4 symbol flashing in the » Fig. 132 on page 153 button. Seek help from a specialist garage.
- The sensors must be kept clean (free of ice, etc.) to enable the system to operate properly.
- Additionally installed modules such as bicycle carriers can impair the function of the parking aid.

i

Note

- The signal tones for front obstacle recognition are factory-set to be higher than for rear obstacle recognition.
- The sound of the park-assist can be adjusted via the MAXI DOT display in the **Wizards** menu option » page 29.
- If the system is activated and the selector lever of the automatic gearbox is in position **P** (the vehicle cannot move), the warning tone is interrupted and no obstacles are displayed.

Function


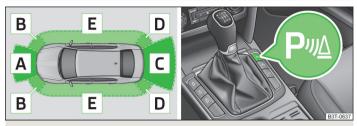


Fig. 132 Range of sensors / system button

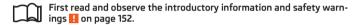

The parking aid (hereafter referred to solely as system) only works when the ignition is switched on.

The system supports the driver via audible signals, via the display on the radio or via the factory-installed navigation system when parking and manoeuvring » *Radio user quide, Navigation system user quide.*

The system uses ultrasound waves to calculate the distance between the bumper and an obstacle. The ultrasound sensors are located on the front/rear bumper.

Explanation of graphic - range of sensors in the vicinity of the vehicle

Area » Fig. 132	Range of sensors ^{a)}
Α	120 cm
В	60 cm
С	160 cm
D	60 cm
E b)	60 cm

a) These are only the approximate ranges of sensors.

The interval between the acoustic signals becomes shorter as the clearance is reduced. A continuous tone sounds from a distance of approx. 30 cm - danger area. From this moment on do not continue driving!

The length of the vehicle can be increased with an installed detachable towing device. The danger area thus begins at a distance of around 35 cm on vehicles equipped with a factory-fitted towing device.

Towing a trailer

On vehicles equipped with a factory-fitted towing device, only system areas A and B » Fig. 132 are active when towing a trailer.

Activation/deactivation



First read and observe the introductory information and safety warnings ! on page 152.

The system is automatically activated by selecting **reverse gear** or pressing the P₄ » Fig. 132 on page 153 symbol button. The symbol P₄ lights up in the button; activation is confirmed by a brief acoustic signal.

The system is deactivated by moving out of reverse gear or by pressing the Passymbol button, or is deactivated automatically at a speed of over 10 km/h (the Passymbol in the button goes out).

On vehicles which **only have rear sensors**, the system can only be deactivated by moving out of reverse gear.

Park assist

Introduction

This chapter contains information on the following subjects:

Finding a parking space	154
Parking	155
Manoeuvring out of a parallel parking space	156
Automatic brake assist	156
Information messages	156

The parking aid is part of the park assist system, therefore the information and safety guidelines » page 152, *Parking aid* must be read and observed.

Park Assist (in the following referred to as the system) helps drivers park in suitable parallel and perpendicular parking places and also to manoeuvre out of parallel parking spaces.

b) Applies only for vehicles with 12 sensors.

The system only operates if the ignition is switched on.

The displays, messages and system instructions are displayed in the MAXI DOT display (in the display only below).

During the parking procedure the system only takes over the steering movements, the pedals continue to be operated by the driver.

When the system is activated, the warning light $P \oplus$ lights up » Fig. 133 on page 154 - A.

The traction control system (TCS) must always be switched on when parking.

Basis of the system function

- > The measurement and evaluation of the size of parking spaces when driving.
- > The determination of the correct position of the vehicle for parking.
- The calculation of the line on which the vehicle drives backwards into the parking space or forwards from the parking space.
- > the automatic turning of the front wheels when parking in, or manoeuvring out of the parking space.

WARNING

- The system does not exempt the driver from his/her responsibility for parking in and manoeuvring out of the parking space.
- External sound sources can have a detrimental effect on parking in and manoeuvring out of the parking space. Under adverse conditions, this may cause objects or people to not be recognised by the system.
- When parking in, and manoeuvring out of parking spaces, the system automatically executes quick steering movements. While it is doing so, do not place your hands between the steering wheel risk of injury!
- When parking or departing from a parking space on loose or slippery surfaces (gravel, snow, ice etc.), there may be deviations due to the conditions of the calculated road surface. We therefore recommend not using the system in such situations.

CAUTION

- If other vehicles are parked behind or on the kerb, the system can guide your vehicle beyond the kerb or onto it. Ensure that the wheels or the wheel rims of your vehicle are not damaged and if necessary intervene in time.
- Under certain circumstances, the surfaces or structures of certain objects such as wire mesh fences or powder snow cannot be detected by the system.

- The evaluation of the parking space and the parking procedure depend on the circumference of the wheels. The system only works correctly if the vehicle is fitted with the wheel size approved by the manufacturer.
- If wheels other than those approved by the manufacturer are mounted, the resulting position of the vehicle in the parking space can differ slightly. This can be avoided by readjusting the system at a specialist garage.
- Under certain circumstances, the system may not function correctly, for example, if the vehicle is fitted with snow chains or a temporary spare wheel.

Finding a parking space

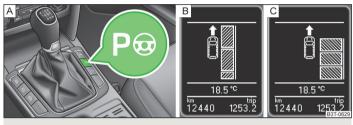


Fig. 133 System button / display



First read and observe the introductory information and safety warnings ! on page 153.

The search for a suitable parking space takes place while the display is switched off. If the display is not switched on using the $P\Theta$ symbol button until the driver drives past the parking space, the system can assess and display this parking space.

Finding a parallel parking space

- \Rightarrow Drive past the parking space at up to 40 km/h and a distance of 0.5 1.5 m.
- > Press the ₱⊕ » Fig. 133 symbol button once.

The display shows » Fig. 133 - B.

Finding a perpendicular parking space

- > Drive past the parking space at up to 20 km/h and a distance of 0.5 1.5 m.
- > Press the ₱⊕ » Fig. 133 symbol button **twice**.

The display shows » Fig. 133 - C.

The search area for the parking space on the driver's side is automatically indicated on the display.

Activate the turn signal on the driver's side if you wish to park on this side of the road. In the display the search area for the parking space is indicated on the driver's side.

If suitable parking space is found, its parameters are stored until another suitable parking space has been found or until a distance of 10 m had been driven after finding the parking space.

To change the parking mode when searching for a parking space, press the Pe symbol button again.

Parking

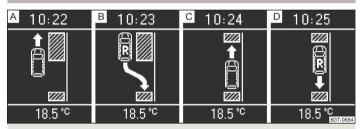


Fig. 134 Display



First read and observe the introductory information and safety warnings ! on page 153.

The time limit for the parking procedure with the help of the system is 6 minutes.

If the system has recognised a suitable parking space, this parking space is shown in the display » Fig. 134 - A.

- > Continue driving forwards until the display appears » Fig. 134 B.
- > Stop and make sure that the vehicle does not move forward until the start of the parking procedure.
- > Select reverse gear or move the selector lever into position R.
- As soon as the following message is shown in the display: Steering int. active. Monitor area around veh.!, let go of the steering wheel. The steering will be taken over by the system.
- > Observe the direct vicinity of the vehicle and reverse carefully.

In the event that the parking procedure cannot be carried out in one go, the parking process is completed in further stages.

- If the forward arrow in the display flashes » Fig. 134 Cengage the 1st gear or move the selector lever to position D.
- > Wait until the steering wheel automatically turns into the required position and then carefully drive forwards.
- > If the backwards arrow is flashing in the display » Fig. 134 D, select reverse gear again or move the selector lever into position R.
- > Wait until the steering wheel automatically turns into the required position and then carefully reverse.

These steps can be repeated several times one after the other.

As soon as the parking procedure is completed, an audible signal sounds and the following message appears in the display:

Steering interv. finished. Take over steering!

Explanation of graphic

- A Parking place recognised with the information to drive on.
- B Parking place recognised with the information to engage the reverse gear.
- c Indication for selecting the forward gear.
- D Indication for selecting the reverse gear.

Automatic termination

The system cancels the parking procedure if one of the following cases occurs:

- > Speed of 7 km/h repeatedly exceeded during the parking procedure.
- Time limit of 6 minutes exceeded for the parking procedure.
- > System button pressed.
- > TCS system switched off.
- > Intervention of the driver in the automatic steering procedure (stops the steering wheel).
- Reverse gear disengaged or selector lever moved out of position R when reversing into the parking space.
- > Selector lever moved into position P.
- > There is a system fault (system temporarily not available).
- > Automatic braking for damage limitation.

If any of the above events occurs, the following warning message is displayed. » page 156.

Manoeuvring out of a parallel parking space



First read and observe the introductory information and safety warnings H on page 153.

Manoeuvring out

- > Press the ₱⊕ » Fig. 133 on page 154 symbol button once.
- Activate the turn signal for side of the vehicle where the parking space is out of which you wish to manoeuvre.
- > Select reverse gear or move the selector lever into position R.
- As soon as the following message is shown in the display: Steering int. active. Monitor area around veh.!, let go of the steering wheel. The steering will be taken over by the system.
- > Observe the direct vicinity of the vehicle and reverse carefully.
- > Follow the system instructions shown in the display.

As soon as the parking procedure is completed, an audible signal sounds and the following message appears in the information display:

■ Steering interv. finished. Take over steering!

Automatic termination

The system terminates the manoeuvring procedure if one of the following cases arises.

- > Speed of 7 km/h exceeded during the departing procedure.
- > System button pressed.
- > TCS system switched off.
- Intervention of the driver in the automatic steering procedure (stops the steering wheel).
- > There is a system fault (system temporarily not available).
- > Automatic braking for damage limitation.

If any of the above events occurs, the following warning message is displayed. » page 156.

Automatic brake assist



First read and observe the introductory information and safety warnings 1. on page 153.

The system provides assistance to the driver with automatic brake assist. The automatic brake assist does not exempt the driver from his/her responsibility for the accelerator, brake and clutch.

Automatic braking for preventing cancellations caused by excessive speeds

Automatic brake support can be used in order to stop the speed from exceeding 7 km/h, thereby preventing the subsequent cancellation of the parking procedure. The parking procedure can be resumed after automatic braking.

Automatic braking takes place only once per parking procedure.

Automatic braking for damage limitation

The system detects an imminent collision based on the driving speed and the distance from the obstacle, automatic brake support is initiated.

The system function is ended after this automatic brake assist for damage limitation.

1

WARNING

- Automatic brake assist only works as an element of the assist function. The driver must always be ready to brake the vehicle him/herself.
- Automatic brake assist is ended after around 1.5 seconds. Depress the braking pedal so that the vehicle does not start moving by itself.

Information messages



First read and observe the introductory information and safety warnings \blacksquare on page 153.

Park Assist: Speed too high.

Reduce speed to under 40 km/h (parallel parking) or under 20 km/h (bay parking). This message is only displayed at speeds up to around 50 km/h. When the speed exceeds 50 km/h, reactivate the system using the Paper button.

Speed too high. Take over steering!

The parking procedure was ended because the speed was exceeded. Park with a max. speed of 7 km/h.

Driver steering intervention: Take over steering!

The parking procedure is terminated due to a driver steering intervention.

Park Assist stopped. ASR deactivated.

The parking procedure cannot be carried out because the TCS system is deactivated. Activate the TCS.

ASR deactivated. Take over steering!

The parking procedure was ended because TCS was deactivated during the parking procedure.

Trailer: Park Assist stopped.

The parking procedure cannot be carried out because a trailer is hitched.

■ Time limit exceeded. Take over steering!

The parking procedure was ended because the time limit of 6 minutes was passed.

Park Assist currently not available.

The system cannot be activated because a fault exists on the vehicle. Seek help from a specialist garage.

Park Assist stopped. System currently not available.

The parking procedure was ended because a fault exists on the vehicle. Seek help from a specialist garage.

Park Assist faulty. Workshop!

The parking procedure is not possible because a fault exists in the system. Seek help from a specialist garage.

Park Assist stopped. Take over steering!

Assume control of the steering. Complete the parking procedure without using the system.

ASR intervention. Take over steering!

The parking procedure is terminated by a TCS intervention.

PARK ASSIST Turn on turn signal and select reverse gear

The prerequisites for manoeuvring out of a parking space using the system have been met. Switch on the turn signals and shift into reverse.

M Please take over steering and drive on.

The manoeuvring procedure out of a parallel parking space has ended. Assume control of the steering.

Automatic space departure not possible. Space too small.

The manoeuvring procedure using the system is not possible. The parking gap is too small.

Park Assist: Brake interv. Speed too high.

The driving speed during the parking procedure was too high - automatic brake assist is initiated.

Cruise Control System

Introduction

This chapter contains information on the following subjects:

Activating/deactivating	158
Storing and maintaining speed	158
Changing the stored speed	158
Switching off temporarily	158

The Cruise Control System (CCS) maintains a set speed, more than 25 km/h, without you having to actuate the accelerator pedal.

This is only possible within the range which is permitted by the power output and braking power of the engine.

The warning light '\(\) illuminates in the instrument cluster when the cruise control system is switched on.

WARNING


- For safety reasons, the cruise control system must not be used in dense traffic or on unfavourable road surfaces (such as icy roads, slippery roads, loose gravel) risk of accident!
- The saved speed may only be resumed if it is not too high for the current traffic conditions.
- Always deactivate the cruise control system after use to prevent the system being switched on unintentionally.

CAUTION

- The cruise control system is not able to maintain a constant speed when driving in areas with steeper gradients. The weight of the vehicle increases the speed at which it travels. In such cases, select a lower gear or brake the vehicle using the footbrake.
- The cruise control system cannot be activated when first gear or reverse gear is selected (vehicles with manual transmission).

- The cruise control system cannot be activated when the selector lever is in positions P , N or R (vehicles with automatic transmission).
- The cruise control system may automatically switch off when some brake assist systems (e.g. ESC) intervene, when the maximum permissible engine speed is exceeded, etc.

Activating/deactivating

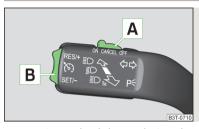

Fia. 135 Operating lever: Cruise control system controls



First read and observe the introductory information and safety warnings 🔢 on page 157.

Activating

Move switch A » Fig. 135 into the ON position.

Deactivating

Move switch A » Fig. 135 into the OFF position.

Storing and maintaining speed



First read and observe the introductory information and safety warnings II on page 157.

- > Activate the cruise control system » page 158.
- > Drive at the desired speed.
- > Push the rocker button B into the SET/- » Fig. 135 on page 158 position.

After you have released the rocker button B from the SET/- position, the speed you have just stored is kept constant without having to depress the accelerator.

Changing the stored speed



First read and observe the introductory information and safety warnings II on page 157.

Increasing the speed with the rocker button B

> Push the rocker button | B| into the RES/+ » Fig. 135 on page 158 position.

If the rocker button is held in the RES/+ position, the speed will increase continuously. Release the rocker button once the desired speed is reached. The set speed is then stored in the memory.

Decreasing the speed using the rocker button B

The stored speed can be **reduced** by pushing the rocker switch **B** into the SET » Fig. 135 on page 158 position.

If the rocker button is pressed and held in the **SET/-** position, the speed will decrease continuously. Release the rocker button once the desired speed is reached. The set speed is then stored in the memory.

If the rocker button is released at a speed of less than approx. 25 km/h, the speed is not stored and the memory is erased. Once the speed of the vehicle has increased to more than approx. 25 km/h, the speed must then be stored again by pushing the rocker button **B** into the **SET/-** position.

Increasing the speed with the accelerator

> Depress the accelerator pedal.

Releasing the accelerator pedal will cause the speed to drop again to the set speed.

Decreasing the speed with the brake pedal

The speed can also be reduced by depressing the brake pedal, which temporarily deactivates the system » page 158.

Switching off temporarily



First read and observe the introductory information and safety warnings 🔢 on page 157.

The cruise control system can be **temporarily deactivated** by pushing the switch A » Fig. 135 on page 158into the spring-mounted CANCEL position or by depressing the brake or clutch pedal.

The set speed remains stored in the memory.

Briefly push the rocker button **B** into the **RES/+** position in order to **resume** the stored speed after the clutch or brake pedal is released.

START-STOP

Introduction

This chapter contains information on the following subjects:

Starting/shutting down the engine	159
Operating conditions of the system	160
Manually activating/deactivating the system	160
Information messages	161

The START-STOP system helps you to save fuel while at the same time reducing harmful exhaust emissions and ${\rm CO}_2$ emissions.

The function is automatically activated each time the ignition is switched on.

In the start-stop mode, the engine automatically switches to the vehicle's idle phase, e.g. when stopped at traffic lights. The engine restarts automatically where necessary.

The system can work only if the following basic conditions are met.

- ✓ The driver's door is closed.
- ✓ The driver has fastened the seat belt.
- ✓ The bonnet is closed.
- \checkmark The driving speed was higher than 4 km.h after the last stop.
- ✓ No trailer is coupled.

WARNING

- The brake servo unit and power steering only operate if the engine is running.
- Never let the vehicle roll with the engine switched off.

CAUTION

Always deactivate the START-STOP system before driving through water ** page 148.

i

Note

- If the driver's seat belt is removed for more than approx. 30 seconds or the driver's door is opened during stop mode on vehicles with manual transmission or automatic transmission (when the selector lever in position **P**), the engine must be started manually » page 133.
- After manually starting the engine on vehicles with manual transmission, automatic engine shut down is not possible until the vehicle has travelled the required minimum distance for START-STOP mode.
- If, on vehicles with automatic transmission, the selector lever positions D, S or N are selected after driving in reverse, the vehicle will first need to achieve a speed of over 10 km/h before automatic engine shut down can take place again.
- Changes to the outdoor temperature can have an effect on the internal temperature of the vehicle battery even after several hours. If the vehicle remains outdoors for a long time in minus temperatures or in direct sunlight, it can take several hours until the internal temperature of the vehicle battery reaches a suitable temperature for proper operation of the START STOP system.
- If Climatronic is running in automatic mode, the engine may not switch off automatically under certain conditions.

Starting/shutting down the engine



First read and observe the introductory information and safety warnings 1.50 on page 159.

Vehicles with manual transmission

- > Stop the vehicle (where necessary, apply the handbrake).
- > Put the gear stick into Neutral.
- > Release the clutch pedal.

Automatic engine shut down (STOP phase) takes place. The warning symbol \circledR appears in the instrument cluster display.

> Depress the clutch pedal.

The automatic start procedure takes place again (START phase). The warning symbol $\ensuremath{\Theta}$ goes out.

Vehicles with automatic transmission

> Bring the vehicle to a stop and depress the brake pedal.

Automatic engine shut down takes place. The warning symbol \circledR appears in the instrument cluster display.

> Release the brake pedal.

The automatic start procedure takes place again. The warning symbol A goes out.

Further information on automatic transmission

Engine shut down takes place when the selector lever is in positions ${\bf P},\,{\bf D},\,{\bf S}$ and ${\bf N}$ and in Tiptronic mode.

When the selector lever is in position **P**, the engine remains shut down even after you release the brake pedal. Start the engine by pressing the gas pedal or by moving the selector lever into a different mode and releasing the brake pedal.

If the selector lever is moved into position **R** during the **STOP phase**, the engine will re-start.

No automatic engine shutdown takes place when the vehicle is moving at low speed (e.g. during a traffic jam or when tuning) and remains stationary after pressing the brake pedal lightly. Automatic engine shutdown takes place if you press the brake pedal down with more force.

Operating conditions of the system



First read and observe the introductory information and safety warnings 11 on page 159.

The START-STOP system is very complex. Some of the procedures are hard to check without servicing.

No engine shut down is carried out

Before each STOP phase, the system checks whether certain conditions have been met. No engine shut down takes place in the following situations.

- The engine has not reached the minimum temperature for the START STOP mode.
- > The temperature inside the vehicle has not reached the temperature set in the air-conditioning system.
- > The external temperature is very low/high.
- The intensive windscreen heater (Climatronic) or windscreen heater/ventilation is switched on with the maximum air temperature setting (manual air conditioning system).
- > The parking aid/Park Assist is switched on.
- > The charge state of the vehicle battery is too low.
- > The stationary vehicle is on a steep slope or a steep downhill section.
- > The idling speed is too high.
- > The steering angle is too large (manoeuvring).
- > The selector lever position R is selected (e.g. when parking).

The warning symbol \varnothing appears in the instrument cluster display.

The automatic start procedure takes place again

During the STOP phase, the engine fires up without any active driver intervention, e.g. in the following situations.

- > The vehicle begins to roll, e.g. on a slope.
- > The difference between the temperature setting of the air-conditioning system and the inside temperature is too large.
- The intensive windscreen heater (Climatronic) or windscreen heater/ventilation is switched on with the maximum air temperature setting (manual air conditioning system).
- The brake pedal was pressed several times (the pressure in the braking system is too low).
- > The charge state of the vehicle battery is too low.
- > The current consumption is too high.

Manually activating/deactivating the system



Fig. 136

Button for the START-STOP system



First read and observe the introductory information and safety warnings 1 on page 159.

Activation/deactivation

> Press the symbol button & » Fig. 136.

When start-stop mode is deactivated, the indicator light in the button lights up.



Note

If the system is deactivated during the STOP phase, the automatic start procedure takes place.

Information messages

First read and observe the introductory information and safety warnings •• on page 159.

The messages and information are indicated in the instrument cluster display.

- Start the engine manually!
- START MANUALLY

The driver sees this message when the conditions for the automatic start procedure are not met during the STOP phase. The engine must be started manually » page 135.

- Error: start-stop system
- ERROR START-STOP

Error in the START-STOP system. Seek help from a specialist garage.

Fatigue detection (break recommendation)

Introduction

This chapter contains information on the following subjects:

WARNING

- For the driving ability is always the driver's responsibility. Never drive if you feel tired.
- The system may not detect all cases where a break is needed.
- Therefore, take regular, sufficient breaks during long trips.
- There will be no system warning during the so-called micro-sleep.

i Not

- In some situations, the system may evaluate the driving incorrectly and thus mistakenly recommend a break (e.g. sporty driving, adverse weather conditions or poor road conditions).
- The fatigue detection system is designed primarily for motorway driving.

Function



First read and observe the introductory information and safety warnings ... on page 161.

The fatigue detection system advises the driver on the basis of information about the steering behaviour, to take a break from driving. The system recommends a break at speeds of 65-200 km/h.

After the ignition has been switched on, the system evaluates the steering behaviour for 15 minutes. This baseline analysis is constantly compared with the current steering behaviour.

If the system detects deviations from normal steering behaviour due to possible fatique of the driver, it recommends to take a break from driving.

The system deletes the stored baseline analysis if one of the following conditions is met.

- The vehicle is stopped and the ignition switched off.
- The vehicle is stopped, the seat belt removed and the driver's door opened.
- > The vehicle is stopped for more than 15 minutes.

If none of these conditions are met or if the driving style is not changed, the system recommends a driving break again after 15 minutes.

Activation/deactivation

The system can be activated/deactivated via the MAXI DOT display in the $\bf Wizards$ menu option » page 28.

Information messages



First read and observe the introductory information and safety warnings 1 on page 161.

The $\underline{\$}$ symbol will appear in the MAXI DOT display for a few seconds, along with the following message.

Fatique detected. Take a break.

An audible signal is also emitted.

Towing a trailer

Towing device

Introduction

This chapter contains information on the following subjects:

Description	162
Adjusting the ready position	163
Fitting the ball head	163
Check proper fitting	164
Removing the ball head	164
Use and care	165

If your vehicle has already been factory-fitted with a towing device or is fitted with a towing device from ŠKODA Original Accessories, then it meets all of the technical requirements and national legal regulations for towing a trailer.

Your vehicle is fitted with a 13-pin power socket for the electrical connection between the vehicle and trailer. If the trailer that is to be towed has a **7-pin connector**, you can use a suitable adapter from ŠKODA Original Accessories.

The maximum trailer drawbar load is 80 kg.

WARNING

- Check that the tow bar is seated correctly and is secured in the mounting recess before the start of every journey.
- Do not use the tow bar if it is not correctly inserted and secured in the mounting recess.
- Do not use the towing device if it is damaged or if there are parts missing.
- Do not modify or adapt the towing device in any way.
- Never release the tow bar while the trailer is still coupled.

CAUTION

Take care when handling the tow bar so as to avoid damaging the paintwork on the bumper.

Description



Fig. 137 Carrier for the towing device/tow bar



First read and observe the introductory information and safety warnings 1 on page 162.

The tow bar can be removed and is kept in the spare wheel compartment or in a compartment for the spare wheel in the boot » page 228, Vehicle tool kit.

Explanation of graphic

- 1 13-pin power socket
- 2 Safety eyelet
- 3 Mounting recess
- 4 Cap
- 5 Dust cap
- 6 Tow ball
- 7 Operating lever
- 8 Lock cap
- 9 Release pin
- 10 Kev
 - Locking ball



Note

If you lose the key, please get in touch with a specialist garage.

Adjusting the ready position


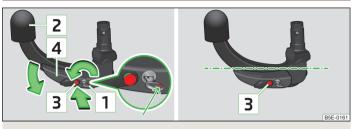


Fig. 138 Setting the ready position/ready position

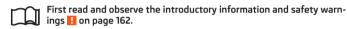

Always adjust the ball head in the ready position before fitting.

- > Turn the key 1 so that its red marking is visible » Fig. 138.
- > Grip the tow bar below the protective cap 2.
- > Press the release pin 3 in the direction of the arrow to the stop, and simultaneously push the lever 4 downwards in the direction of the arrow to the stop.

The lever remains locked in this position.

CAUTION

In the ready position, the key cannot be removed nor turned to a different position.

Fitting the ball head

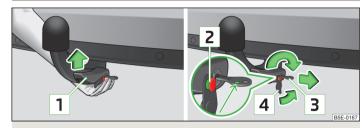


Fig. 139 Insert the ball head/lock the lock, and put the lock cover on



First read and observe the introductory information and safety warnings ... on page 162.

- > Pull cap 4 » Fig. 137 on page 162 downwards.
- > Put the tow bar in the ready position » page 163.
- > Grip the tow bar from underneath » Fig. 139 and insert into the mounting recess until you hear it click into place » .

The lever 1 automatically turns upwards and the release pin 2 pops out (its red and green parts are visible) » 1.

If the lever 1 does not turn automatically, or if the release pin 2 does not pop out, remove the tow bar from the mounting recess by turning the lever downwards as far as it can go. Clean the tapered surfaces on the tow bar and the mounting recess.

- Lock the lock on the operating lever by turning the key 3 by 180° to the right (see green marking 3 is visible) and remove the key in the direction of the arrow.
- Insert the cap 4 onto the lock in the direction of the arrow » !.
- > Check that the tow bar is securely attached » page 164.

WARNING

- Keep your hands outside the lever's range of motion when attaching the tow bar risk of finger injuries!
- Never attempt to pull the operating lever upwards forcibly to turn the key. Doing so would mean the ball head is not attached correctly.

CAUTION

- After removing the key, always replace the cap on the lock of the operating lever risk of dirt getting into the lock.
- Keep the mounting recess of the towing equipment clean at all times. Such dirt prevents the ball head from being attached securely.
- After removing the ball head, always place the cap on the mounting recess.

Check proper fitting

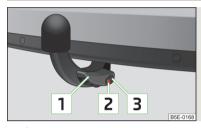


Fig. 140 Check that the tow bar is attached properly



First read and observe the introductory information and safety warnings 1 on page 162.

Check that the tow bar is fitted properly before each use.

Check the following points.

- ✓ The lever 1 is right at the top » Fig. 140.
- √ The release pin 2 is completely exposed (both its red and green parts are visible).
- ✓ The key is removed.
- ✓ The cap 3 is on the lock of the operating lever.
- ✓ The tow bar does not come out of the mounting recess even after heavy "shaking".

WARNING

Do not use the towing device unless the tow bar has been properly locked!

Removing the ball head

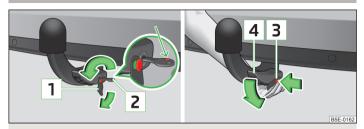


Fig. 141 Unlock the operating lever of the ball head/removing the ball head



First read and observe the introductory information and safety warnings 1 on page 162.

- > Remove the cap 1 » Fig. 141 from the lock on the tow bar in the direction of the arrow.
- > Unlock the lock on the operating lever by turning the key 2 180° to the left so that the red marking becomes visible.
- > Grasp the ball head from underneath.
- Press the release pin 3 in the direction of the arrow to the stop, and simultaneously push the lever 4 downwards in the direction of the arrow to the stop.

The ball head is released in this position and falls freely into the hand. If it does not fall freely into the hand, use your other hand to push it upwards.

At the same time, the tow bar latches into the ready position and is therefore ready to be re-inserted into the mounting recess » !.

> Place the cap 4 » Fig. 137 on page 162 onto the mounting recess.

WARNING

Never allow the tow bar to remain unsecured in the boot. This could cause boot damage on sudden braking, and could put the safety of the occupants at risk.

CAUTION

- If the lever is held firm and not pushed downwards as far as it can go, it will go back up after the ball head is removed and will not latch into the ready position. The tow bar will then need to be brought into this position before the next time it is fitted.
- Stow the ball head in the ready position with the key inserted in the box. When doing so, make the side opposite to the inserted key face downwards there is a risk of damaging the key.
- Do not use excessive force when handling the operating lever (e.g. do not step on it).

Note

- We recommend putting the protective cover onto the ball head before removing the tow bar.
- Clean any dirt from the tow bar before stowing it away in the box with the vehicle tool kit.

Use and care



First read and observe the introductory information and safety warnings ! on page 162.

Close the mounting recess with the cover to prevent any dirt from getting in.

Always check the tow bar before hitching a trailer. Apply suitable grease where necessary.

Use the protective cover when stowing away the tow bar, in order to stop the boot from getting dirty.

In the event of dirt, clean the surfaces of the mounting recess and treat with a suitable preservative.



CAUTION

Apply grease to the upper part of the mounting recess. Make sure you do not remove any grease.

Trailer

Introduction

This chapter contains information on the following subjects:

Loading a trailer	165
Driving with a trailer	166
Trailer stabilisation	167
Anti-theft alarm system	167

!

WARNING

Always drive particularly carefully with the trailer.

Loading a trailer



First read and observe the introductory information and safety warnings ! on page 165.

The vehicle/trailer combination must be balanced, whereby the maximum permissible drawbar load must be utilised. If the drawbar load is too low, it jeopardises the performance of the vehicle/trailer combination.

Distribution of the load

Distribute the load in the trailer in such a way that heavy items are located as close to the axle as possible. Secure the items from slipping.

The distribution of the weight is very poor if your vehicle is unladen and the trailer is laden. Maintain a particularly low speed if you cannot avoid driving with this combination.

Tyre pressure

Correct the tyre inflation pressure on your vehicle for a "full load" » page 221, Service life of tyres.

Trailer load

The permissible trailer load must not be exceeded under any circumstances » page 252, *Technical data*.

The trailer loads specified apply only to altitudes up to 1 000 metres above mean sea level.

The engine output falls as altitude increases, as does the vehicle's climbing power. Therefore, for every additional 1000 m in height (or part), the maximum permissible towed weight must be reduced by 10%.

The towed weight is made up of the actual weights of the loaded towing vehicle and the loaded trailer.

The trailer and drawbar load information on the type plate of the towing device is merely a test value for the towing device. The vehicle-specific values are detailed in the vehicle documents.

WARNING

- Do not exceed the maximum permissible axle and drawbar load and the maximum permissible total or towed weight of the vehicle and the trailer risk of accident and serious injury.
- Slipping loads can significantly impair the stability and safety of the vehicle/ trailer combination risk of accident and serious injury.

Driving with a trailer

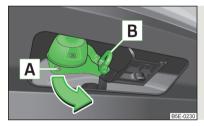


Fig. 142 Swivel out the 13-pin power socket



First read and observe the introductory information and safety warnings 11 on page 165.

Before the journey

- > Grip the 13-pin socket at point A and swing out in the direction of arrow» Fig. 142.
- > Lift off protective cap 5 » Fig. 137 on page 162.

After the journey

> Grip the 13-pin socket at point A and swing in the opposite direction to the arrow» Fig. 142.

> Place the protective cover 5 » Fig. 137 on page 162 onto the tow bar.

Safety eyelet

The purpose of the safety eyelet **B** » Fig. 142 is to attach the breakaway cable of the trailer.

When attaching the breakaway cable to the safety eyelet, it must **sag** freely against the vehicle in all trailer positions (sharp bends, in reverse etc.).

Exterior mirrors

You have to have additional exterior mirrors fitted if you are not able to see the traffic behind the trailer with the standard rear-view mirrors. The national legal requirements must be observed.

Headlights

The front of the vehicle may lift up when a trailer is being towed and the headlights may dazzle other road users.

Adjust the headlights using the headlight beam control » page 51, $Parking\ and\ low\ beam\ lights.$

Driving speed

For safety reasons, do not drive faster than 80 km/h when towing a trailer.

Immediately reduce your speed as soon as even the slightest swaying of the trailer is detected. Never attempt to stop the trailer from "swaying" by accelerating.

Brakes

Apply the brakes in good time! If the trailer is fitted with a **trailer brake**, apply the brakes gently at first, then brake firmly. This will avoid brake jolts resulting from the trailer wheels locking.

On downhill sections shift down a gear in good time to also use the engine as a brake.

Engine overheating

If the needle for the coolant temperature gauge moves into the right-hand area or the red area of the scale, the speed must be reduced immediately.

Stop and switch off the engine if the indicator light 4 in the instrument cluster lights up. Wait a few minutes and check the level of coolant » page 213, *Checking the coolant level*.

The following guidelines must be observed » page 16, *L. Coolant*.

The coolant temperature can be reduced by switching on the heating.

WARNING

- Never use the safety eyelet for towing!
- Adapt your speed to the conditions of the road surface and to the traffic situation.
- Improper or incorrectly connected electric cables can energise the trailer and cause functional faults to the vehicle's entire electrical system as well as accidents and severe injuries.
- Work on the electrical system must only be carried out by specialist garages.
- Never directly connect the trailer's electrical system with the electrical connections for the tail lights or other current sources.

Note

- After coupling the trailer and connecting the power socket, check that the rear lights on the trailer are working correctly.
- If there is an error in the trailer lighting, check the fuses in the fuse box in the dash panel » page 244.
- Contact between the breakaway cable and the safety eyelet can result in mechanical wear on the surface protection of the eyelet. Such wear does not impair the functioning of the safety eyelet and does not constitute a fault. It is excluded from the warranty coverage.
- If you tow a trailer frequently, you should also have your vehicle inspected between service intervals.
- The handbrake on the towing vehicle must be applied when coupling and uncoupling the trailer.

Trailer stabilisation



First read and observe the introductory information and safety warnings ! on page 165.

The trailer stabilisation is an extension of the stabilisation control that works in conjunction with the counter-steering assistance to reduce the amount the trailer "sways".

After turning on the ignition, the ESC indicator light $\stackrel{?}{\sim}$ in the instrument cluster lights up for about 2 seconds longer than the ABS indicator light.

Function requirements for trailer stabilisation.

- The coupling device was factory-fitted or purchased from the ŠKODA Original Accessories.
- ✓ The ESC is active. (Warning lights ♣ or ♣ do not illuminate in the instrument cluster).
- The trailer is electrically connected to the towing vehicle via the trailer socket.
- ✓ The speed is higher than approx. 60 km/h.
- ✓ The trailer has a rigid drawbar.

WARNING

The increased safety offered by the trailer stabilisation must not tempt you to take greater risks than otherwise.

CAUTION

- The trailer stabilisation need not be able to correctly detect all of driving situations.
- Light trailers that sway are not always detected and therefore stabilised accordingly by the trailer stabilisation.
- Release the pressure on the accelerator pedal if the system is being regulated.
- Avoid abrupt and sudden driving/braking manoeuvres.

Note

The trailer stabilisation works for both braked and unbraked trailers.

Anti-theft alarm system



First read and observe the introductory information and safety warnings 1 on page 165.

When the vehicle is locked, the alarm is activated when the electrical connection to the trailer is interrupted.

Always switch off the anti-theft alarm system before a trailer is coupled or uncoupled » page 38.

Conditions for including a trailer in the anti-theft alarm system.

- ✓ The vehicle is factory-fitted with an anti-theft alarm system and towing device.
- The trailer is electrically connected to the towing vehicle via the trailer socket.
- The electrical system of the vehicle and trailer is functional.
- The vehicle is locked with the vehicle key and the anti-theft alarm system is activated.

Note

For technical reasons, trailers with rear LED lights cannot be connected to the anti-theft alarm system.

Safety

Passive Safety

General information

Introduction

This chapter contains information on the following subjects:

Safety equipment	169
Before setting off	169
What influences the driving safety?	170

In this section you will find important information, tips and notes on the subject of passive safety in your vehicle.

We have combined everything here which you should be familiar with, for example, regarding seat belts, airbags, child seats and safety of children.

WARNING

- This chapter contains important information on how to use the vehicle for the driver and his occupants.
- You can find further information on safety concerning you and those travelling with you in the following chapters of this owner's manual.
- The complete on-board literature should always be in the vehicle. This applies in particular, if you rent out or sell the vehicle.

Safety equipment



First read and observe the introductory information and safety warnings ! on page 169.

The following list contains only part of the safety equipment in your vehicle.

- > Three-point seat belts for all the seats.
- > Belt force limiter for front and outer rear seats.
- > Belt tensioner for front and outer rear seats.
- > Seat belt height adjusters for the front seats.

- > Front airbag for the driver and the front passenger.
- > Driver's knee airbag.
- > Front side airbags.
- > Rear side airbags.
- > Head airbags.
- > Anchoring points for child seats using the ISOFIX system.
- > Anchoring points for child seats using the TOP TETHER system.
- > Head restraints adjustable for height.
- > Adjustable steering column.

The specified safety equipment works together, in order to optimally protect you and those travelling with you in accident situations.

The safety equipment does not protect you or the people travelling with you, if you or your occupants adopt an incorrect seated position or the equipment is not correctly adjusted or used.

If the seat belt is not fastened properly, this may result in injuries if an airbag is activated in the event of an accident.

Before setting off



First read and observe the introductory information and safety warnings 1 on page 169.

For your own safety and the safety of the people travelling with you, please pay attention to the following points before setting off.

- > Ensure that the lighting and the turn signal system are functioning properly.
- > Check the tyre inflation pressure.
- > Ensure that all of the windows offer good visibility to the outside.
- > Secure all items of luggage » page 84, Luggage compartment.
- > Ensure that no objects can obstruct the pedals.
- > Adjust the mirrors, the front seat and head restraint to your body size.
- > Advise your passengers to adjust the head restraints to their body size.
- > Protect children in suitable child seats with correctly fastened seat belts » page 186, *Transporting children safely*.
- Adopt the correct seated position » page 170, Correct seated position. Tell your passengers to assume the correct seated position.
- > Correctly fasten the seat belt. Also inform passengers to fasten the seat belt correctly » page 173.

What influences the driving safety?



First read and observe the introductory information and safety warnings H on page 169.

The driver is fully responsible for himself and his occupants. If your driving safety is effected, you place yourself and the oncoming traffic at risk.

The following guidelines must therefore be observed.

- Do not become distracted from concentrating on the traffic situation, e.g. by your passengers or mobile phone calls.
- Never drive when your driving ability is impaired, e.g. due to medication, alcohol or drugs.
- > Keep to the traffic regulations and the permissible speed limit.
- > Always adjust the driving speed to the road, traffic and weather conditions.
- > Take regular breaks on long journeys at least every two hours.

Correct seated position

Introduction

This chapter contains information on the following subjects:

Correct seated position for the driver	171
Correct seated position for the front passenger	171
Correct seated position for the passengers in the rear seats	171
Examples of incorrect seated positions	171

WARNING

General information

- The front seats and head restraints must be adjusted to match the body size at all times and the seat belt must always be fastened properly to provide the most effective levels of protection to the passengers.
- If the occupant adopts an incorrect seated position, he is exposed to lifethreatening injuries, in case he is hit by a deployed airbag.
- If the occupants on the rear seats are not sitting upright, the risk of injury is increased due to incorrect routing of the seat belt.
- The seat backrests must not be tilted too far back when driving, as this will impair the function of the seat belts and of the airbag system risk of injury!

WARNING

Information for the driver

- Always assume the correct seated position before setting off and do not change this position while driving. Also advise your passengers to adopt the correct seated position and not to change this position while the car is moving.
- Maintain a distance of at least 25 cm from the steering wheel, and a distance of at least 10 cm between the legs and the dash panel at the height of the knee airbag. Not maintaining this minimum distance will mean that the airbag system will not be able to properly protect you hazard!
- When driving, hold the steering wheel with both hands firmly on the outer edge in the 9 o'clock and 3 o'clock position. Never hold the steering wheel in the 12 o'clock position or in any other way (e.g. in the middle or inner edge of the steering wheel). In such cases, you could severely injure the arms, hands and head when the driver airbag is deployed.
- Ensure that there are no objects in the driver's footwell as they may get caught behind the pedals when driving or applying the braking. You would then no longer be able to operate the clutch, brake or accelerate.

WARNING

Information for the front seat passenger

- Maintain a distance of at least 25 cm to the dash panel. Not maintaining this minimum distance will mean that the airbag system will not be able to properly protect you hazard!
- Always keep your feet in the footwell when the car is being driven never place your feet on the instrument panel, out of the window or on the surfaces of the seats. You will be exposed to increased risk of injury if it becomes necessary to apply the brake or in the event of an accident. If an airbag is deployed, you may suffer fatal injuries when adopting an incorrect seated position!

Correct seated position for the driver

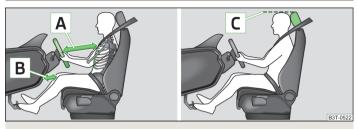


Fig. 143 Correct driver seating position / properly adjusted headrest



First read and observe the introductory information and safety warnings 1 on page 170.

For your own safety and to reduce the risk of injury in the event of an accident, we recommend the following setting.

- Position the steering wheel so that there is a gap of at least 25 cm between the steering wheel and the chest A > Fig. 143, and that the distance between the legs and the dash panel at the height of the knee airbag is at least 10 cm B.
- Adjust the driver's seat in the forward/back direction so that the pedals can be fully depressed with slightly bent legs.
- Adjust the seat backrest so that the highest point of the steering wheel can be reached with your arms at a slight angle.
- > Adjust the head restraint so that the top edge of the head restraint is at the same level as the upper part of your head C.
- > Correctly fasten the seat belt » page 173.

Manual driver seat adjustment » page 67.

Electrical driver seat adjustment » page 67.

Correct seated position for the front passenger



First read and observe the introductory information and safety warnings 1. on page 170.

For the safety of the front passenger and to reduce the risk of injury in the event of an accident, we recommend the following setting.

- Position the front passenger seat back as far as possible. The front passenger must maintain a distance of at least 25 cm to the dash panel so that the airbag offers the greatest possible safety if it is deployed.
- > Adjust the head restraint so that the top edge of the head restraint is at the same level as the upper part of your head C » Fig. 143 on page 171.
- > Correctly fasten the seat belt » page 173.

In exceptional cases the front passenger airbag can be deactivated » page 183, Deactivating airbags.

Manual front passenger adjustment » page 67.

Electrical front passenger seat adjustment » page 67.

Correct seated position for the passengers in the rear seats



First read and observe the introductory information and safety warnings 1 on page 170.

To reduce the risk of injury in the event of a sudden braking manoeuvre or an accident, the occupants on the rear seats must observe the following.

- Adjust the head restraint so that the top edge of the head restraint is at the same level as the upper part of the head C | » Fig. 143 on page 171.
- > Correctly fasten the seat belt » page 173.
- > Use a suitable child restraint system if transporting children in the vehicle » page 186, *Transporting children safely*.

Examples of incorrect seated positions



First read and observe the introductory information and safety warnings 1. on page 170.

Maximum seat belt protection is only achieved if seat belts are fastened correctly. ▶

Incorrect seated positions considerably reduce the protective functions of the seat belts and therefore increase the risk of injury due to an incorrect routing of the seat helt.

The driver is fully responsible for himself and passengers, especially children. Never allow a passenger to adopt an incorrect seated position when the car is moving.

The following list contains instructions which, if not observed, may cause serious injuries or death. This list is not complete, however we would like you to familiarise yourself with this subject.

Observe the following instructions while driving.

- > Do not stand up.
- > Do not stand on the seats.
- Do not kneel on the seats.
- > Do not tilt the seat backrest too far back.
- > Do not lean against the dash panel.
- > Do not lie on the rear seats.
- > Do not sit only on the front part of the seat.
- > Do not sit facing to the side.
- > Do not lean out of the window.
- > Do not put your feet out of the window.
- > Do not put your feet on the dash panel.
- > Do not put your feet on the seat cushion.
- > Do not allow anybody to travel in the footwell.
- > Do not drive without fastening your seat belt.
- > Do not delay in the luggage compartment.

Seat belts

Using seat belts

☐ Introduction



Fig. 144

Driver wearing seat belt

This chapter contains information on the following subjects:

The physical principle of a frontal collision	174
Fastening and unfastening seat belts	175
Seat belt height adjuster on the front seats	176

Seat belts that are fastened correctly offer good protection in the event of an accident. They reduce the risk of an injury and increase the chance of survival in the event of a major accident.

Correctly fastened seat belts hold occupants of the car in the correct seated position » Fig. 144.

The seat belts reduce the kinetic energy (energy of motion) to a considerable extent. They also prevent uncontrolled movements which, in turn, may well result in severe injuries.

Occupants of a vehicle who have correctly fastened their seat belts have the major benefit of the fact that the kinetic energy is absorbed as effectively as possible by the belts.

The structure of the front end of the vehicle and other passive safety measures, such as the airbag system, also contribute to the kinetic energy being reduced as effectively as possible. The energy produced is thus absorbed and there is less risk of injury.

Particular safety aspects must be observed when transporting children in the vehicle » page 186.

WARNING

- Fasten your seat belt before each journey even when driving in town! This also applies to the passengers seated at the rear risk of injury!
- Expectant women must also always wear a seat belt. This is the only way of ensuring optimal protection for the unborn child » page 175, Fastening and unfastening seat belts.
- Maximum seat belt protection is only achieved if you are correctly seated » page 170, Correct seated position.
- The seat backrests of the front seats must not be tilted too far to the rear otherwise the seatbelts can lose their effectiveness.

WARNING

Observe the following instructions for the correct routing of the seat belt.

- Always ensure that the webbing of the seat belts is properly routed. Seat belts which are not correctly adjusted can themselves cause injuries even in minor accidents.
- Adjust the height of the belt in such a way that the shoulder part of the belt is roughly positioned across the middle of your shoulder on no account across your neck.
- A seat belt which is hanging too loose can result in injuries as your body is moved forward by the kinetic energy produced in an accident and is then suddenly held firm by the belt.
- The belt webbing must not run across solid or fragile objects (e.g. spectacles, ball-point pens, bunches of keys etc.). Such objects can cause injury.

WARNING

Observe the following instructions for handling the seat belts.

- The belt webbing must not be jammed in-between at any point or twisted, or chafe against any sharp edges.
- Make sure you do not catch the seat belt in the door when closing it.

WARNING

Observe the following instructions for the proper use of the seat belts.

- Never use one seat belt to secure two persons (including children). The seatbelt must not be placed over a child who is sitting on the lap of another passenger.
- The lock tongue should only be inserted into the lock which is the correct one for your seat. Wrong use of the safety belt will reduce its capacity to protect and the risk of injury increases.
- The slot of the belt tongue must not be blocked, otherwise the belt tongue will not lock in place properly.
- Many layers of clothing and loose clothing (e. g. a winter coat over a jacket) do not allow you to be correctly seated and impairs proper operation of the seat belts.
- It is prohibited to use clamps or other objects to adjust seat belts (e. g. for shortening the belts for smaller persons).
- The seat belts for the rear seats can only fulfil their function reliably when the seat backrests are correctly locked into position » page 73.

WARNING

Observe the following instructions for proper maintenance of the seat belts. ■ The belt webbing must always be kept clean. Soiled belt webbing may impair proper operation of the inertia reel » page 203.

- The seat belts must not be removed or changed in any way. Do not attempt to repair the seat belts yourself.
- Check the condition of all the seat belts on a regular basis. If any damage to the seat belts, seat belt connections, inertia reel or the lock is detected, the relevant seat belt must be replaced by a specialist garage.
- Damaged seat belts which have been subjected to stress in an accident and were therefore stretched, must be replaced - this is best done by a specialist garage. The anchorage points of the belts must also be inspected. The anchorage points for the belts should also be checked.

Note

The national legal requirements must be observed when using seat belts.

The physical principle of a frontal collision

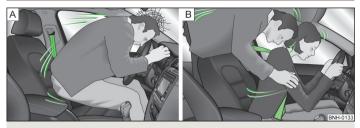


Fig. 145 Driver without a fastened seat belt/rear passenger without a fastened seat belt



First read and observe the introductory information and safety warnings 🔢 on page 173.

Motion energy, so-called kinetic energy, is produced as soon as the vehicle is moving, both for the vehicle and its occupants.

The magnitude of this kinetic energy depends essentially on the speed at which the vehicle is travelling and on the weight of the vehicle including the occupants. The greater the speed and weight increase, the greater the amount of energy which has to be absorbed in the event of an accident

The speed of the vehicle is the most important factor. Doubling the speed of the vehicle from 25 km/h up to 50 km/hour increases the kinetic energy four times.

The idea that it is possible to support your body with your hands in a minor accident is incorrect. Even in a collision at only a low speed, the forces acting on the body are such that it is no longer possible to support your body.

Even if you only drive at a speed of 30-50 km/h, the forces that your body is exposed to in the event of an accident can exceed a metric ton (1000 kg).

For example, a person's weight of 80 kg "increases" to 4.8 tons (4800 kg) at 50 km/h.

In the event of a frontal collision, occupants of the car not wearing a seat belt, are thrown forward and strike in an uncontrolled way parts of the interior of the car, such as steering wheel, dash panel or windscreen » Fig. 145 - A. In certain circumstances you could even be thrown out of the vehicle, which could cause life threatening or even fatal injuries.

It is also important that rear passengers fasten their seat belts, as they could otherwise be thrown through the vehicle in an uncontrolled manner in the event of an accident.

A rear seat passenger who has not fastened the seat belt is a danger not only to himself but also for those seated at the front ** Fig. 145 - \mathbb{B} .

Fastening and unfastening seat belts

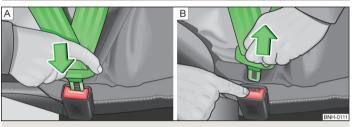


Fig. 146 Fastening/unfastening the seat belt

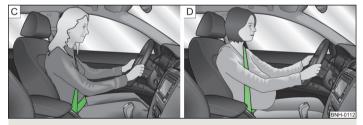


Fig. 147 Routing of belt webbing over the shoulders and the lap belt/Routing of belt webbing for an expectant mother



First read and observe the introductory information and safety warnings 11 on page 173.

Fasten

> Correctly adjust the front seat and head restraint before fastening the seat belt » page 170.

- > Use the lock tongue to slowly pull the webbing over your chest and pelvis.
- > Insert the lock tongue into the belt buckle » Fig. 146 A that is part of the seat until it clicks into place.
- > Pull on the belt to check that it has engaged correctly in the lock.

A plastic knob in the belt webbing holds the belt tongue in a position which is easy to get hold of.

It is important that the belt is properly routed to ensure seat belts offer the maximum protection.

The shoulder part of the seat belt must never run across the neck but must roughly run over the middle of the shoulder and fit snugly against the chest. The lap part of the belt must run across the pelvis, must not be positioned across the stomach and must always fit snugly » Fig. 147 - ©.

Expectant women must also always wear a seat belt. This is the only way of ensuring optimal protection for the unborn child.

On expectant mothers, the lap part of the belt must be positioned as low as possible on the pelvis to avoid exerting any pressure on the lower abdomen » Fig. 147 - $\boxed{\mathsf{p}}$.

Release

Release the seat belt only when the vehicle is stationary.

- > Press the red button in the belt buckle » Fig. 146 B, the lock tongue pops out.
- Manually guide the belt back so that it is easier to fully roll up the webbing, the seat belt does not twist.

CAUTION

When releasing the seatbelt ensure that the tongue of the lock does not damage the door trim or other parts of the interior.

Seat belt height adjuster on the front seats



Fig. 148 Front seat: Seat belt height adjuster



First read and observe the introductory information and safety warnings 1 on page 173.

The seat belt height adjuster makes it possible to adjust the routing of the front seat belts in the area of the shoulder to the body size.

- > Press the height adjuster and move up or down in the desired direction » Fig. 148.
- Then pull firmly on the belt to ensure that the seat belt height adjuster has correctly locked in place.

Inertia reels and belt tensioners

Introduction

This chapter contains information on the following subjects:

 Inertia reels
 176

 Belt tensioners
 176 ■

Inertia reels



First read and observe the introductory information given on page 176.

Each seat belt is equipped with an inertia reel.

When pulling slowly on the seat belt, the belt can move freely. When pulling sharply on the seat belt, the movement is locked by the inertia reel.

The belts also lock when full braking, when the car accelerates, when driving downhill and when cornering.

H

WARNING

If the seat belt does not lock when pulling sharply on it, have it inspected immediately by a specialist garage.

Belt tensioners



First read and observe the introductory information given on page 176.

The safety for the driver, front passenger and passengers on the outer rear seats who are wearing their seat belts, is enhanced by the belt tensioners fitted to the inertia reels on the front and rear external three-point seat belts.

The three-point seat belts are automatically tensioned in the event of a frontal collision of a certain severity. The belt tensioners can also be deployed if the seat belts are not fastened.

The fastened three-point seat belts are automatically tensioned in the event of a frontal or side collision of a certain severity.

Belt tensioners are not activated in the event of minor frontal collisions, side and rear-end collisions, in the case of a rollover and also not in accidents in which no major forces are produced from the front.

1

WARNING

- Any work on the belt tensioner system including removal and installation of system components because of other repair work, must only be carried out by a specialist garage.
- The protective function of the system is only adequate for a single accident. If the belt tensioners have been deployed, it is then necessary to replace the entire system.

Note

- Smoke is generated when the belt tensioners are deployed. This is not an indication of a fire in the vehicle.
- When disposing of the vehicle or parts of the belt tensioner system, it is important to comply with national legal requirements. SKODA service partners are familiar with these regulations and will be able to provide you with detailed information.

Airbag system

Description of the airbag system

Introduction

This chapter contains information on the following subjects:

System description _____ Airbag deployment _____

WARNING

- An airbag can only offer you optimal protection in combination with a fastened seat belt.
- The airbag is not a substitute for the seat belt, but instead forms part of the complete passive vehicle safety concept.
- To ensure passengers are protected with the greatest possible effect when the airbag is deployed, the front seats must be correctly adjusted to match the body size » page 170, Correct seated position.
- If you do not fasten the seat belts when driving, lean too far forward or adopt an incorrect seated position, you are exposing vourself to increased risk of injury in the event of an accident.

WARNING

Observe the following instructions for handling the airbag system.

- If there is a fault, the airbag system must be checked by a specialist garage immediately. Otherwise, there is a risk of the airbag not being activated in the event of an accident.
- No modifications of any kind must be made to parts of the airbag system.
- Any work on the airbag system including the installation and removal of system components due to other repair work (e.g. removal of the steering wheel) must only be carried out by a specialist garage.
- Never make any changes to the front bumper or bodywork.
- It is prohibited to manipulate individual parts of the airbag system as this might result in the airbag being deployed.
- The protective function of the airbag system is sufficient for only one accident. The airbag system must then be replaced if the airbag has been deployed.

System description



First read and observe the introductory information and safety warnings 🔢 on page 178.

The functional status of the airbag system is indicated by the indicator light ** in the instrument cluster » page 21.

When the airbags are deployed, they fill with gas and inflate.

A grey white or red, non-harmful gas is released when the airbag is inflated. This is perfectly normal and is not an indication of a fire in the vehicle.

Depending on the vehicle equipment, the airbag system consists of the following modules.

- > Electronic control unit.
- > Front airbag for the driver and the front passenger » page 180.
- > Driver's knee airbag » page 181.
- > Side airbags » page 181.
- > Head airbags » page 182.
- > Airbag warning light in the instrument cluster » page 21.
- > Key switch for the front passenger airbag » page 184.
- > Warning light for the front passenger airbag deactivation/activation in the middle of the dash panel » page 184.

Note

- The airbag system needs no maintenance during its working life.
- If you sell your vehicle, provide the complete vehicle documentation to the new owner. Please note that the information relating to the possibility of deactivating the front passenger airbag must be included!
- When disposing of vehicle or parts of the airbag system, it is important to comply with the national legal requirements.

Airbag deployment



First read and observe the introductory information and safety warn-First read and observings II on page 178.

The airbags inflate in fractions of a second and at a high speed in order to be able to offer additional protection in the event of an accident.

The airbag system is only functional when the ignition is switched on.

In certain accident situations, the several airbags may be deployed simultaneously.

The airbags **are not deployed** in the case of **minor** frontal and side collisions, rearend collisions, tilting of the vehicle and vehicle rollover.

Deployment factors

It is not possible to generally determine which deployment conditions apply to the airbag system in every situation. An important role is played by factors such as the type of object that the vehicle hits (hard/soft), the impact angle, vehicle speed etc.

A decisive factor for the deployment of the airbags is the deceleration which occurs. The control unit analyses the nature of the collision and activates the relevant restraint system.

If the vehicle deceleration which occurs and is measured during the collision remains below the prescribed reference values specified in the control unit, the airbags are not deployed although the vehicle may well suffer severe damage to the bodywork as a consequence of the accident.

The following airbags will be deployed in the event of a severe frontal collision.

- > Driver's front airbag.
- > Front passenger airbag.
- > Driver's knee airbag.

The following airbags will be deployed in the event of a severe side collision.

- > Front side airbag on the side of the accident.
- > Rear side airbag on the side of the accident.
- > Head airbags on the side of the accident.

In the event of an accident in which the airbags are deployed:

- > the interior lighting comes on (if the switch for the interior light is in the door contact position),
- > the hazard warning light is switched on;
- > all the doors are unlocked;
- > the fuel supply to the engine is interrupted.


Airbag overview

Introduction

This chapter contains information on the following subjects:

ront airbags	180
river's knee airbag	181
ide airbags	181
lead airbags	182

Front airbags

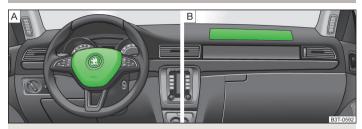

 ${\rm Fig.\,149}\;$ Driver's airbag in the steering wheel/front passenger airbag in the dash panel

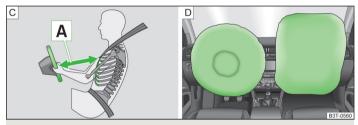


Fig. 150 Safe distance to steering wheel/inflated airbags



First read and observe the introductory information given on page 179.

In the event of a severe frontal collision, the front airbag system offers additional protection for the head and chest area of the driver and front passenger.

The front airbag for the driver is housed in the steering wheel » Fig. 149 - A.

The front airbag for the front seat passenger is located in the dash panel above the stowage compartment » Fig. 149 - \blacksquare .

When the airbags are deployed, they inflate in front of the driver and front passenger » Fig. 150 - D. The forward movement of the driver and of the front passenger is cushioned when they make contact with the fully inflated airbag and the risk of injury to head and chest is thus reduced.

WARNING

Correct seated position

- For the driver and front passenger, it is important to maintain a distance of at least 25 cm to the steering wheel or dashboard A » Fig. 150. Not maintaining this minimum distance will mean that the airbag system will not be able to properly protect you hazard! The front seats and the head restraints must always also be correctly adjusted to match the body size of the occupant.
- The airbag develops enormous forces when triggered, which can lead to injuries if the sitting position or seated position is not correct.
- There must not by any further persons, animals or objects positioned between the front seated occupants and the deployment area of the airbag.

WARNING

Front airbag and transporting children

- Never transport children on the front seat of a vehicle without using a proper restraint system. If airbags are deployed in the event of an accident, the child might suffer severe or even fatal injuries!
- The front passenger airbag must be deactivated if using a rear-facing child seat on the front passenger seat » page 183, Deactivating airbags. If this is not done, there is a risk of the child suffering severe or even fatal injuries if the front passenger airbag is deployed. When transporting a child on the front passenger seat, pay attention to any relevant national regulations regarding the use of child safety seats.

WARNING

General

- The steering wheel and the surface of the airbag module in the dash panel on the passenger side must not have stickers attached, be covered or modified in any other way. These parts should only be cleaned with a cloth that is dry or has been moistened with water. No objects such as cup holders, mobile phone mounts, etc. must be attached to the covers of the airbag modules or be located within their immediate vicinity.
- \blacksquare Never place objects on the surface of the front passenger airbag module in the dash panel.

Driver's knee airbag


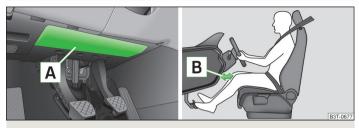


Fig. 151 Driver's knee airbag below the steering column

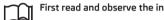

First read and observe the introductory information given on page 179.

The driver's knee airbag offers adequate protection for the driver's legs.

The driver's knee airbag A is located in the lower part of the dash panel below the steering column » Fig. 151.

In the event of a severe frontal collision, the driver's knee airbag and front airbags are deployed.

The forward movement of the body is cushioned when it makes contact with the fully inflated airbaq and the risk of injury to the legs of the driver is thus reduced.

. WA

WARNING

- Adjust the driver's seat in a forward/back direction so that there is a gap of at least 10cm between the legs B and the dash panel in the vicinity of the knee airbag » Fig. 151. If it is not possible to meet this requirement due to your body size, visit a specialist garage.
- The surface of the airbag module in the lower part of the dash panel below the steering column not have stickers attached, be covered or modified in any other way. This part should only be cleaned with a cloth that is dry or has been moistened with water. No objects must be attached to the cover of the airbag module or located within the immediate vicinity.
- Do not attach any bulky and heavy objects (bunch of keys etc.) to the ignition key. These can be ejected by the knee airbag when it is deployed and can cause injuries.

Side airbags

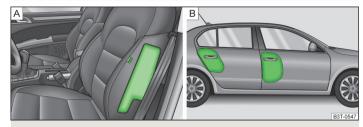


Fig. 152 Location of the side airbag in the driver's seat \emph{I} gas-filled side airbags



First read and observe the introductory information given on page 179.

In the event of severe side collisions, the side airbag system provides additional protection for the upper body (chest, stomach and pelvis) of passengers in the vehicle.

The front side airbags are housed in the upholstery of the seat backrests of the front seats » Fig. 152 - A.

The rear side airbags are located between the entrance area and the seat back-rest.

When the side airbags » Fig. 152 - \blacksquare are deployed, the head airbag and belt tensioner are also automatically deployed on the relevant side.

The load of the occupants is cushioned when plunging into the fully inflated airbag and the risk of injury to the entire upper body (chest, stomach and pelvis) is reduced on the side facing the door.

WARNING

Observe the following instructions for the correct seated position.

- Your head should never be positioned in the deployment area of the side airbag. You might suffer severe injuries in the event of an accident. This applies in particular to children who are transported without using a suitable child safety seat » page 187, Child safety and side airbag.
- There must not be any further persons, animals as well as objects positioned between the occupants and the deployment area of the airbag. No accessories, such as cup holders, should be attached to the doors.
- If children adopt an incorrect seated position when travelling, they may be exposed to an increased risk of injury in the event of an accident. This can result in serious injuries » page 186, Child seat.

WARNING

The airbag control unit operates using pressure sensors located in the front doors. For this reason, no adjustments may be carried out to the doors or door panels (e.g. installation of additional loudspeakers). Resulting damage can have a negative impact on the function of the airbag system. Any work on the front doors and door panels must be carried out by a specialist garage. The following instructions must be observed.

- Never drive with inner door panels removed.
- Never drive if parts of the inner door panel have been removed and the resulting openings have not been properly sealed.
- Never drive if the loudspeakers in the doors have been removed, unless the loudspeaker openings have been properly sealed.
- Always make sure that the openings are covered or filled if additional loudspeakers or other equipment parts have been installed in the inner door panels.
- Always have work carried out by a ŠKODA service partner or a professional specialist garage.

WARNING

- Only hang light items of clothing on the hooks fitted in the vehicle. Never leave any heavy or sharp-edged objects in the pockets of the items of clothing.
- Ensure that there are no excessive forces, such as violent knocks, kicks etc., impact on the backrests of the seats otherwise the system may be damaged. The side airbags would not be deployed in such a case!
- Any seat or protective covers which you fit to the driver or front passenger seats must only be of the type expressly authorized by ŠKODA. In view of the fact that the airbag inflates out of the backrest of the seat, use of non-approved seat or protective covers would considerably impair the protective function of the side airbag.
- Any damage to the original seat covers in the area of the side airbag module must be repaired immediately by a specialist garage.
- The airbag modules in the front seats must not display any damage, cracks or deep scratches. It is not permissible to use force in order to open the modules.

Head airbags

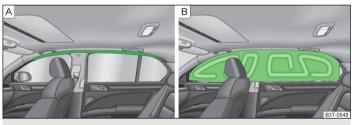


Fig. 153 Location of the head airbag/gas-filled head airbag



First read and observe the introductory information given on page 179.

In the event of a severe side collision, the head airbag system offers additional protection for the head and neck area of passengers.

The head airbags are positioned above the doors on both sides in the interior of the car » Fig. 153 - \boxed{A} .

In the event of a **side collision** the head airbag is deployed together with the relevant side airbag and the belt tensioner on the side of the car on which the accident occurs.

When deployed, the airbag covers the windows of the front and rear doors, as well as the door pillar \gg Fig. 153 - \blacksquare .

Head impact with interior parts is reduced by the inflated head airbag. The reduction in any impact to the head and the resultant minimizing of any movements of the head additionally reduce the risk of injuries to the neck area.

The head airbag also offers additional protection in the case of an offset impact by covering the front door pillar.

WARNING

General

- There must not be any objects in the deployment area of the head airbags which might prevent the airbags from inflating properly.
- Only hang light items of clothing on the hooks fitted in the vehicle. Never leave any heavy or sharp-edged objects in the pockets of the items of clothing. Additionally, clothes hangers must not be used to hang up items of clothing.
- The installation of impermissible accessories in the vicinity of the head airbags can considerably impair the protection offered by the head airbag in the event of it being deployed. When the deployed head airbag is inflated, parts of the accessories fitted could be thrown into the interior of the car and injure the occupants » page 193.
- The sun visors must not be swivelled towards the side windows in the deployment area of the head airbags if any objects, such as ball-point pens, etc. are attached to them. This might result in injuries to the occupants if the head airbag is deployed.
- There must no other persons (e.g. children) or animals between the passenger and the deployment area of the head airbag. In addition, none of the occupants should lean their head out of the window when driving, or extend their arms and hands out of the window.

WARNING

The airbag control unit operates using pressure sensors located in the front doors. For this reason, no adjustments may be carried out to the doors or door panels (e.g. installation of additional loudspeakers). Resulting damage can have a negative impact on the function of the airbag system. Any work on the front doors and door panels must be carried out by a specialist garage. The following instructions must be observed.

- Never drive with inner door panels removed.
- Never drive if parts of the inner door panel have been removed and the re-
- sulting openings have not been properly sealed.

 Never drive if the loudspeakers in the doors have been removed, unless the
- loudspeaker openings have been properly sealed.

 Always make sure that the openings are covered or filled if additional loudspeakers or other equipment parts have been installed in the inner door pan-
- Always have work carried out by a ŠKODA service partner or a professional specialist garage.

Note

In vehicles with head airbags, the word AIRBAG can be seen on the B column cladding.

Deactivating airbags

Introduction

This chapter contains information on the following subjects:

Deactivating airbags	184
Deactivating the front passenger airbag	184

Deactivating airbags



First read and observe the introductory information given on page 183.

Deactivating an airbag should be considered in cases such as the ones below.

- If using a rear-facing child seat on the front passenger seat (due to different legal regulations, the airbag must be deactivated if using a forwards-facing child seat in some countries) » page 186, Transporting children safely.
- If it is not possible to maintain a distance of at least 25 cm between the middle of the steering wheel and chest, despite the driver's seat being correctly adjusted.
- > If special attachments are required in the area of the steering wheel because of a physical disability.
- If different seats have been fitted (e.g. orthopaedic seats without side airbags).

The front passenger airbag can be switched off with the key-operated switch » page 184, *Deactivating the front passenger airbag*.

We recommend that you ask a ŠKODA service partner to deactivate any other airbags.

Monitoring the airbag system

The operational capability of the airbag system is monitored electronically, including when one of the airbags is switched off.

Airbag deactivated using diagnostic equipment

➤ The warning light ** lights up for approximately 4 seconds after the ignition is switched on and then flashes again for approximately 12 seconds.

Front passenger airbag deactivated using the key switch in the storage compartment

- > The warning light ** lights up for approximately 4 seconds after the ignition is switched on.
- > Warning light off % 3 » Fig. 154 on page 184 lights up after the ignition is switched on.



Note

- The national regulations for switching off airbags must be observed.
- A ŠKODA service partner will be able to inform you which, if any, of your vehicle's airbags can or must be deactivated.

Deactivating the front passenger airbag



Fig. 154 Key switch for front passenger airbag/warning light for front passenger airbag activation/deactivation



First read and observe the introductory information given on page 183.

Only the front passenger airbag is deactivated with the key switch.

Switching off

- > Switch off the ignition.
- > Open the storage box on the front passenger's side.
- > Use the key to turn the slot of the key switch into position 2 » Fig. 154 OFF.
- > Close the storage box on the front passenger's side.
- > Check that warning light OFF 3 PASSENGER AIR BAG OFF in the text lights up after the ignition is switched on.

Switching on

- > Switch off the ignition.
- > Open the storage box on the front passenger's side.
- > Use the key to turn the slot of the key switch into position 1 ≫ Fig. 154 **ON**.
- > Close the storage box on the front passenger's side.
- > Check that warning light OFF 3 PASSENGER AIR BAG OFF lights up after the ignition is switched on.

WARNING

- The driver is responsible for whether the airbag is switched on or switched
- Only switch off the airbag when the ignition is switched off! Otherwise a
- fault can occur in the system for deactivating the airbag.

 If the warning light OFF is flashing, the front passenger airbag will not be deployed in an accident. Have the airbag system checked by a specialist garage immediately.

Transporting children safely

Child seat

Introduction

This chapter contains information on the following subjects:

Use of a child seat on the front passenger seat	187
Child safety and side airbag	187
Classification of child seats	188
Use of child seats fastened with a seat belt	188

Children are generally safer on the rear seats than on the front passenger seat.

In contrast to adults, the muscles and bone structure of children are not vet fully developed. Thus children are exposed to increased risk of injury.

Children should be transported in accordance with the relevant statutory provisions.

Child seats complying with the ECE-R 44 standard must be used. ECE-R stands for: Economic Commission for Europe - Regulation.

Child seats that comply with the ECE-R 44 standard are identified with a test mark that cannot be removed: a large E within a circle with the test number below.

WARNING

- The national legal requirements must be observed when using child seats.
- One should never carry children, and also not babies! on one's lap.
- Never leave children unattended in the vehicle. Certain outside climatic conditions can cause life-threatening temperatures in the vehicle.
- The child must be secured in the vehicle during the entire journey! Otherwise, the child would be thrown through the vehicle in the event of an accident, causing fatal injuries to both the child and other occupants.

WARNING (Continued)

- Children are exposed to an increased risk of injury in the event of an accident if they lean forward or adopt an incorrect seated position when the vehicle is moving. This particularly applies to children who are transported on the front passenger seat as they can suffer severe, or even fatal injuries if the airbag system is deployed!
- Pay particular attention to the information provided by the manufacturer of the child safety seat regarding the correct routing of the belt. Seat belts which are not correctly adjusted can themselves cause injuries even in minor accidents.
- Safety belts must be checked to ensure that they are running properly. One should also ensure that the belt is not damaged by sharp-edged fittings.
- The front passenger airbag must be deactivated if using a rear-facing child seat on the front passenger seat. Further information » page 187, Use of a child seat on the front passenger seat.

CAUTION

When installing a child seat in which the child faces forward, adjust the head restraints so that they are as high as possible.

Note

We recommend that you use child seats from ŠKODA Original Accessories. These child seats were developed and also tested for use in ŠKODA vehicles. They meet the FCF-R 44 standard.

Use of a child seat on the front passenger seat

Never use a backwards-facing child restraint system on a seat that is protected by an active airbag installed in front of it. This could cause the child severe injury or even death.



Fig. 155
Sticker on the B column on the front passenger side.



First read and observe the introductory information and safety warnings H on page 186.

For safety reasons, we recommend that you install child seats on the rear seats whenever possible.

The following instructions must be followed when using a child seat on the front passenger seat.

- > The front passenger airbag must be deactivated if using a rear-facing child seat » .
- If possible, adjust the front passenger seat backrest so that it is as vertical, so as to ensure secure contact between the passenger seat backrest and the back of the child seat.
- > If possible, move the front passenger seat backwards so that there is no contact between the front passenger seat and the child seat behind it.
- > With child safety seats in groups 2 or 3, make sure that the loop-around fittings attached to the child seat headrest is positioned in front of or at the same height as the loop-around fittings on the B pillar on the passenger side.
- > Set the height-adjustable front passenger seat as high up as possible.
- > Set the front passenger seat belt as high up as possible.
- > Place and fasten the child seat on the seat and the child in the child seat according to the specifications in the manufacturer's user manual of the child seat.

WARNING

- The front passenger airbag must be deactivated if using a rear-facing child seat on the front passenger seat » page 183, Deactivating airbags.
- Never use a rear-facing child seat on the front passenger seat if the passenger airbag is activated. This child safety seat is positioned in the deployment area of the front passenger airbag. The airbag may cause the child severe, or even fatal injuries, in the event of it being deployed.
- This is also clearly stated on the sticker which is located on the B column on the front passenger side » Fig. 155. The sticker is visible upon opening the front passenger door. In some countries, the sticker is affixed to the front passenger sun visor.
- With child safety seats in groups 2 or 3, make sure that the loop-around fittings attached to the child seat headrest is positioned in front of or at the same height as the loop-around fittings on the B pillar on the passenger side.
- As soon as the rear-facing child seat is no longer being used on the passenger seat, the front passenger airbag should be re-activated again.

Child safety and side airbag

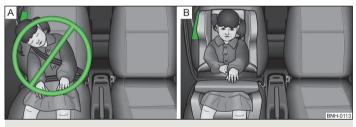


Fig. 156 Incorrect seated position of a child who is not properly secured risk from the side airbag/child properly protected by child seat



First read and observe the introductory information and safety warnings 1. on page 186.

The child must not be positioned in the deployment area of the side airbaq » Fig. 156 - A.

There must be sufficient room between the child and the deployment area of the side airbag so that the airbag can provide as much protection as possible » Fig. 156 - \blacksquare .

WARNING

- Children must never be seated with their head in the deployment area of the side airbag risk of injury!
- Do not place any objects within the deployment area of the side airbags risk of injury!

Classification of child seats



First read and observe the introductory information and safety warnings 11 on page 186.

Classification of child seats according to the ECE-R 44 standard.

Group	Weight of the child	Approximate age
0	up to 10 kg	up to 9 months
0+	up to 13 kg	up to 18 months
1	9-18 kg	up to 4 years
2	15-25 kg	up to 7 years
3	22-36 kg	over 7 years

Use of child seats fastened with a seat belt



First read and observe the introductory information and safety warnings 1 on page 186.

Overview of the usability of child seats fastened with a seat belt on each of the seats in accordance with the ECE-R 16 standard.

Group	Front passenger seat	Rear seats outside	Rear seat middle
0 to 10 kg	U	U	U
0+ to 13 kg	U	U	U

Group	Front passenger seat	Rear seats outside	Rear seat middle
1 9-18 kg	U	U	U
2 15-25 kg	U	U	U
3 22-36 kg	U	U	U

U "Universal" child seat category - a child seat designed to be attached to the seat using the seat belt.

Fastening systems

Introduction

This chapter contains information on the following subjects:

An	chor eyelets for the ISOFIX system	189
Us	e of child seats with the ISOFIX system	189
An	chor eyelets for the TOP TETHER system	190■

Anchor eyelets for the ISOFIX system



Fig. 157 Labels on the ISOFIX system



First read and observe the introductory information given on page 188.

There are two locking eyes between the seat backrest and the seat cushion of the outer rear seats and front passenger seat for fixing the ISOFIX system child seat in place.

On the rear outside seats, the fixing eyes are located below the upholstery. The places are marked with labels with the ISOFIX logo » Fig. 157.



WARNING

- Always refer to the instructions from the manufacturer of the child seat when installing and removing a child seat with the ISOFIX system.
- Never attach other child seats, belts or objects to the anchor eyelets intended for the installation of a child seat with the ISOFIX system risk to life.



Note

- A child seat fitted with the ISOFIX system can only be mounted in a vehicle fitted with an ISOFIX system if the child seat has been approved for this type of vehicle. Further information is available from a ŠKODA Partner.
- Child seats with the ISOFIX system can be purchased from ŠKODA Original Accessories.

Use of child seats with the ISOFIX system



First read and observe the introductory information given on page 188.

Overview of the usability of child seats with the ISOFIX system on each of the seats in accordance with the ECE-R 16 standard.

Group	Size category of the child seat ^{a)}	Front passenger seat ^{b)}	Outer rear seats	Rear seat middle
0 to 10 kg	E	х	IL-SU	х
0.	E			
0+ to 13 kg	D	x	IL-SU	X
10 13 kg	С			

Group	Size category of the child seat ^{a)}	Front passenger seat ^{b)}	Outer rear seats	Rear seat middle
	D			
	С			
9-18 kg	В	x	IL-SU IUF	x
3 10 kg	B1		101	
	A			

a) The size category is shown on the label attached to the child seat.

- IL-SU The seat is suited for installation of an ISOFIX child seat with "Semi-Universal" approval. The "Semi-Universal" category means that the child seat with the ISOFIX system is approved for your vehicle. Observe the list of vehicles that comes with the child seat.
- IUF The seat is suitable for the installation of an ISOFIX child seat with "Universal" approval and attachment with the TOP TETHER belt.
- The seat is not fitted with fixing eyes for the ISOFIX system.

Anchor eyelets for the TOP TETHER system



Fig. 158 Anchor evelets on the TOP **TETHER system**

First read and observe the introductory information given on page 188.

The anchor eyelets for attaching the belt for a child seat with the TOP TETHER system are located on the rear side of the outer rear seat backrests » Fig. 158.

WARNING

- Always refer to the instructions from the manufacturer of the child seat when installing and removing a child seat with the TOP TETHER system.
- Only use child seats with the TOP TETHER system on the seats with the locking eyes.
- Only ever attach one belt from the child seat to a locking eye.
- On no account should you equip your vehicle, e.g. mount screws or other anchorage points.

b) If the front passenger seat is fitted with the ISOFIX system attachment points, it is suited for the installation of an ISOFIX child seat with the "Semi-Universal" approval.

General Maintenance

Car care

Service intervals

Introduction

This chapter contains information on the following subjects:

Overview of service intervals	191
Fixed service intervals QI1 - QI4	192
Variable service interval QI6	192
Information about the ŠKODA service	192

The Service Interval Display in the instrument cluster will remind you to carry out every service stipulated by the manufacturer at the right time, in order to avoid forgetting any.

A timely and adequate performance of servicing works is one of the requirements for the settlement of possible warranty claims.

The completion of services can be verified through the confirmed service certification and the respective receipts.

The service intervals are matched to normal operating conditions.

In case of difficult operating conditions, it is necessary to have some servicing work performed before the date of the next service or between the service intervals stated. This applies mainly to the cleaning or the replacement of the air filter insert in regions with heavy dust pollution as well as checking and replacing the toothed belt, but also vehicles with diesel particle filter which can use the engine oil more intensely.

These severe conditions are:

- > Fuel containing sulphur
- > Frequent short trips
- > Longer idling mode of the engine (e.g. taxi vehicles)
- > Operation in areas with heavy dust pollution
- > Frequent trailer operation

- > Predominantly stop-and-go traffic as tends to occur in city driving, for example
- > Operation predominantly during winter.

A service consultant at the specialist garage will tell you whether the operating conditions of your vehicle make it necessary for such work to be carried out between the normal service intervals.

Different service charges may apply, depending on the scope of necessary works as well as the model, features and condition of your vehicle.

i

Note

- The customer is responsible for covering the cost of all services including changing or replenishing the operating fluid, even during the warranty period, unless the ŠKODA AUTO a.s. warranty terms or other agreements state otherwise.
- You will be informed about the scope of the service with regard to a particular service event by the specialist garage.

Overview of service intervals

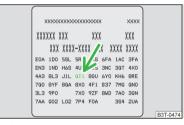


Fig. 159 Vehicle data sticker: Service interval



First read and observe the introductory information given on page 191.

The service interval specified by the manufacturer is indicated on the data sticker » Fig. 159 which is under the floor cover in the boot.

One of the following service intervals applies for your vehicle:

- > Fixed service interval QI1;
- > Fixed service interval OI2:
- > Fixed service interval QI3;
- > Fixed service interval OI4;
- > Variable service interval QI6.

In order to be able to operate a vehicle with a variable service interval, it must only be filled and topped up with the specified engine oil.

If this engine oil is not available, the oil change is subject to a fixed service interval. In this case, the vehicle **must** be changed to the fixed service interval.

Note

- The corresponding motor oil specifications » page 210.
- A changeover from the variable service interval to the fixed service interval, or from the fixed service interval to the variable service interval, can be carried out by a specialist garage.

Fixed service intervals 011 - 014



First read and observe the introductory information given on page 191.

Inanastian	QI1 - QI4	First after 30,000 km or 2 years ^a), thereafter every 30,000 km or every 1 year ^a).
Inspection		Every 15,000 km or every 1 year ^{a)} (Applies to Russia).
	QI1	After 5,000 km or every 1 year ^{a)} .
Oil abanca comica	QI2	After 7,500 km or every 1 year ^a).
Oil change service	QI3	After 10,000 km or every 1 year ^{a)} .
	QI4	After 15,000 km or every 1 year ^{a)} .
Brake fluid change		First change after 3 years, then every 2 years.

a) (Whichever comes first).

WARNING

The brake fluid must always be changed after the first 3 years and then every 2 years. When the brake fluid becomes too old, vapour bubbles may form in the brake system when the brakes are used hard. The efficiency of the brakes could be seriously affected – risk of accident!

Note

For diesel operation with a high sulphur content, the interval of engine oil change will be every 7,500 km. Please ask your specialist garage for information on the countries where diesel fuel has a high sulphur content.

Variable service interval QI6



First read and observe the introductory information given on page 191.

The service intervals depend on how the vehicle is driven and the local conditions in which the vehicle is used. For example, your vehicle is subjected to different loads when driven over short distances than long distances. The service intervals are also **variable**.

Inspection	First after 30,000 km or 2 years ^{a)} , then every 30,000 km or every 1 year ^{a)} .
Oil change service	According to the service interval display (at the latest after 30,000 km or every 2 years ^a)).
Brake fluid change	First change after 3 years, then every 2 years.

a) (Whichever comes first).



WARNING

The brake fluid must always be changed after the first 3 years and then every 2 years. When the brake fluid becomes too old, vapour bubbles may form in the brake system when the brakes are used hard. The efficiency of the brakes could be seriously affected – risk of accident!

Information about the ŠKODA service



First read and observe the introductory information given on page 191.

There is an extensive servicing network made up of ŠKODA service partners at your disposal, for the maintenance of your vehicle.

ŠKODA Service Partners feature modern, specially developed tools and equipment. Here, trained specialists have a comprehensive range of ŠKODA Original Parts and ŠKODA Original Accessories at their disposal.

All ŠKODA service partners operate in accordance with the latest guidelines and instructions of the manufacturer. All service work is therefore carried out on time and in accordance with the quality standards. Adhering to these instructions and guidelines helps ensure road safety and helps keep your vehicle in a good technical condition.

In addition, the ŠKODA service partners offer an array of other services.

ŠKODA Service Partners are therefore properly prepared to service your vehicle and to provide quality work. We therefore recommend that you have your vehicle maintained by a ŠKODA service partner.

Services, modifications, and technical alterations

Introduction

This chapter contains information on the following subjects:

Tests required by law	194
ŠKODA Service Partners	194
ŠKODA Original Parts	194
ŠKODA Original Accessories	194
Spoiler	195
Airbags	195

The instructions and guidelines from ŠKODA AUTO a.s. must be observed when carrying out any modifications, repairs or technical alterations to your vehicle.

Adhering to these instructions and guidelines helps ensure road safety and helps keep your vehicle in a good technical condition. After carrying out modifications, repairs or technical alterations, the vehicle will comply with German road transport regulations (StVZO)

Always consult a ŠKODA Partner » page 194 before buying accessories or parts, or before carrying out any modifications, repairs or technical alterations to your vehicle.

WARNING

- If work on your vehicle is not carried out properly, this can lead to operational faults risk of accident and serious injuries.
- We recommend only having these modifications and technical alterations carried out by a specialist garage.
- Interference on the electronic components and their software can lead to operational faults. This interference can also impair not directly affected systems because of the networking of the electronic components. The operationall safety of the vehicle may be at significant risk and can lead to increased wear of parts.
- The ŠKODA Partner accepts no liability for products that have not been approved by ŠKODA AUTO a.s. even though these may be products with an operational approval or that have been approved by a government testing institute.

WARNING

- We advise you only to use ŠKODA Original Accessories and ŠKODA Original Parts which have been expressly approved for use on your vehicle. Reliability, safety and suitability for your vehicle are quaranteed with these.
- ŠKÓDA Original Accessories and ŠKODA Original Parts can be purchased from ŠKODA Partners, who will also perform the professional assembly of the purchased parts.

For the sake of the environment

Technical documents regarding alterations carried out on the vehicle must be kept by the vehicle user in order to be handed over to the recyclers at a later date. This ensures that the vehicle is recycled in an environmentally sound manner.

i Note

Any damage caused by technical alterations made without the approval of the manufacturer is excluded from the warranty.

Tests required by law

First read and observe the introductory information and safety warnings II on page 193.

Many countries have legislation which require that the reliability and roadworthiness and/or exhaust gas composition of a vehicle must be tested at specific intervals. These tests can be carried out by workshops or checking stations that have been legally authorized for this purpose.

The ŠKODA service partners have been informed about the necessary legal tests and will prepare the vehicle for the tests in a service operation at the customer's discretion, or will ensure that these tests are carried out. The specialist garages can carry out the specified tests directly at the customer's discretion, if they are designated for such a procedure. This saves you time and money.

Even if you want to take your vehicle to an officially approved test centre for prior checking in preparation of a legally required test, we recommend that you consult the service consultant of your ŠKODA service partner beforehand.

The service consultant will tell you which areas, according to his appraisal, you should focus on in order that your vehicle may pass the technical test without any problems. In this way, you can avoid additional expenses resulting from a possible subsequent test.

ŠKODA Service Partners



First read and observe the introductory information and safety warnings III on page 193.

ŠKODA Service Partners feature modern, specially developed tools and equipment. Here, trained specialists have access to a comprehensive range of ŠKODA Original Parts and ŠKODA Original Accessories for carrying out modifications, repairs and technical alterations.

All ŠKODA service partners operate according to the most recent guidelines and instructions from ŠKODA AUTO a.s. All service and repair work is therefore carried out on time and at the appropriate quality. Adhering to these instructions and guidelines helps ensure road safety and helps keep your vehicle in a good technical condition.

ŠKODA Service Partners are therefore properly prepared to service your vehicle and to provide quality work. We therefore advise you to have all modifications, repairs and technical alterations to your vehicle carried out by a ŠKODA Service Partner.

ŠKODA Original Parts



First read and observe the introductory information and safety warnings III on page 193.

We recommend the use of ŠKODA Genuine Parts for your vehicle, since these parts are approved by ŠKODA AUTO a.s. They correspond exactly to the ŠKODA AUTO a.s. regulations in regard to design, dimensional accuracy and material, and are identical to the components used in the batch production.

ŠKODA AUTO a.s. is able to warrant the safety, suitability, and long life of these products. Therefore, we recommend that you only use ŠKODA Genuine Parts.

ŠKODA AUTO a.s. supplies the market with a complete range of ŠKODA Genuine Parts not only while the model is still in production but for at least 15 years after the end of series production; the market is supplied with wear-and-tear parts and for at least 10 years with equipment parts.

ŠKODA service partners are liable for any ŠKODA original part defects for a period of 2 years after sale in accordance with the materials defect liability, provided that nothing else was agreed in the purchase agreement. You should keep the approved warranty certificate and the bill for these components for this period of time, so that the commencement of the term may be verified.

Body repairs

ŠKODA vehicles are designed so that if the body suffers damage, it is only necessary to replace those parts which are in fact damaged.

Before you decide to have damaged body parts replaced, however, you should first of all contact your specialist garage to determine whether or not such parts can also be repaired. Repairs to body parts are usually cheaper.

ŠKODA Original Accessories



First read and observe the introductory information and safety warnings I on page 193.

If you wish to fit accessories to your vehicle, you should remember the following:

We recommend that you use ŠKODA Genuine Accessories in your vehicle. ŠKODA AUTO a.s. has selected such accessories to ensure that they are reliable, safe and suitable for your particular vehicle. Although we constantly monitor the market. we are not able to assess or warrant the parts even though in some instances such parts may have a type approval or may have been approved by a nationally recognised testing laboratory.

All accessory products go through a fastidious process in the area of technical development (technical tests) and quality inspection (customer tests), and only if all tests are positive does the product become a ŠKODA Genuine Accessory.

Our ŠKODA Genuine Accessories service also provides expert advice, and professional fitting at the customer's discretion.

ŠKODA service partners are liable for any ŠKODA Genuine Part defects for a period of 2 years after installation or delivery in accordance with the materials defect liability, provided that nothing else was agreed in the purchase contract or in any other agreements. You should keep the approved warranty certificate and the bill for these components for this period of time, so that commencement of the term may be verified.

In addition, ŠKODA Service Partners also stock a range of suitable car care products as well as those parts which are subject to natural wear-and-tear, such as tyres, batteries, bulbs and wiper blades.

The accessories authorized by the company ŠKODA AUTO a.s. will be offered by the ŠKODA partners in all countries where the company ŠKODA AUTO a.s. has a sales and service network. This will usually be in the form of a printed catalogue of Original ŠKODA Accessories, in the form of separate printed brochures or in the form of offers for ŠKODA Genuine Accessories on the ŠKODA partner web pages.

Spoiler



First read and observe the introductory information and safety warnings 🔲 on page 193.

If your new vehicle is fitted with a **spoiler** on the front bumper in combination with the **spoiler** on the luggage compartment lid, the following instructions must be adhered to.

- > For safety reasons, the vehicle must only be fitted with a spoiler on the front bumper in combination with the associated spoiler on the luggage compartment lid.
- This kind of spoiler cannot be left on the front bumper either on its own, in combination with another spoiler not on the luggage compartment lid or in combination with an unsuitable spoiler on the luggage compartment lid.
- > We recommend that you consult the ŠKODA Service Partner for any repairs to or replacement, addition or removal of spoilers.

WARNING

If work on your vehicle's spoilers is not carried out properly, this can lead to operational faults - risk of accident and serious injuries.

Airbaas



First read and observe the introductory information and safety warnings 🔢 on page 193.

The system components of the airbag system can be situated in the front bumper, doors, front seats, roof lining or body.

WARNING

Any work on the airbag system including the installation and removal of system components due to other repair work (e.g. removal of the steering wheel) must only be carried out by a specialist garage.

- Modifications, repairs and technical alterations that have been carried out unprofessionally can cause damage and operational faults, and can also seriously impair the effectiveness of the airbag system - risk of accident and fatal injury!
- The airbag system must then be replaced if the airbag has been deployed. Airbag modules cannot be repaired.

WARNING

Observe the following instructions for handling the airbag system.

- It is prohibited to manipulate individual parts of the airbag system, as this might result in the airbag being deployed.
- Never install any airbag parts into the vehicle that have been removed from old cars or have been recycled.
- Never install damaged airbag parts in the vehicle. The airbags may then not be deployed properly or even at all in the event of an accident.
- No modifications of any kind must be made to parts of the airbag system.

WARNING

- A change to the vehicle's wheel suspension, including the use of non-approved wheels and tire combinations, can alter the functioning of the airbag system risk of accident and fatal injury!
- Never make any changes to the front bumper or the bodywork.

WARNING

The airbag control unit operates using pressure sensors located in the front doors. For this reason, no adjustments may be carried out to the doors or door panels (e.g. installation of additional loudspeakers). Resulting damage can have a negative impact on the function of the airbag system. Any work on the front doors and door panels must be carried out by a specialist garage. The following instructions must be observed.

- Never drive with inner door panels removed.
- Never drive if parts of the inner door panel have been removed and the resulting openings have not been properly sealed.
- Never drive if the loudspeakers in the doors have been removed, unless the loudspeaker openings have been properly sealed.
- Always make sure that the openings are covered or filled if additional loudspeakers or other equipment parts have been installed in the inner door panels.

Washing your car

Introduction

This chapter contains information on the following subjects:

Washing by hand	197
Automatic car wash systems	197
Washing with a high-pressure cleaner	197

The best way to protect your vehicle against harmful environmental influences is frequent washing.

How often the vehicle should be washed depends on factors such as:

- > Frequency of use.
- > Parking situation (garage, under trees etc.).
- > Season.
- > Weather conditions.
- > Environmental influences.

The longer insect residues, bird droppings, tree sap, road and industrial dust, tar, soot particles, road salt and other aggressive deposits remain adhering to the paintwork of your vehicle, the more detrimental their destructive effect can be. High temperatures, such as those caused by intensive sun's rays, accentuate this caustic effect.

It is essential to also thoroughly clean the **underside of the vehicle** at the end of the winter.

WARNING

- When washing your vehicle in the winter: Water and ice in the braking system can affect the braking efficiency risk of accident!
- Only wash the vehicle when the ignition is switched off risk of accident!

CAUTION

Do not wash your vehicle in bright sunlight - risk of paint damage.

For the sake of the environment

Only wash the vehicle at washing bays intended for this purpose.

Washing by hand



First read and observe the introductory information and safety warnings 1 on page 196.

Soak the dirt with plenty of water and rinse as well as possible.

Clean the vehicle with a soft **sponge**, a **washing glove** or a **washing brush**. Work from the top to the bottom - starting with the roof.

Only use a car shampoo for stubborn dirt.

Wash out the sponge or washing glove thoroughly at short intervals.

Clean wheels, door sills and similar parts last. Use a second sponge for such areas.

Give the vehicle a good rinse after washing it and dry it off using a chamois leather.

CAUTION

- When washing the car by hand, protect your hands and arms from sharp-edged metal parts (e.g. when cleaning the underfloor, the inside of the wheel housings or the wheel trims, etc.) risk of cuts!
- Only apply slight pressure when cleaning the vehicle's paintwork.

Automatic car wash systems



First read and observe the introductory information and safety warnings I on page 196.

The usual precautionary measures must be taken before washing the vehicle in an automatic car wash system (e.g. closing the windows and the sliding/tilting roof etc.).

If your vehicle is fitted with any particular attached parts, such as a spoiler, roof rack system, two-way radio aerial etc., it is best to consult the operator of the car wash system beforehand.

After an automatic wash with wax treatment, the lips of the wipers should be cleaned with cleaning agents specially designed for the purpose, and then degreased.

WARNING

Fold in the exterior mirrors to prevent damage before washing the vehicle in an automatic car wash system. Never manually fold in electric exterior mirrors - always use the electric controls.

Washing with a high-pressure cleaner



First read and observe the introductory information and safety warnings ! on page 196.

When washing the vehicle with a high-pressure cleaner, the instructions for use of the equipment must be observed. This applies in particular to the **pressure** used and to the **spraying distance**.

Maintain a sufficiently large distance to the parking aid sensors and soft materials such as rubber hoses or insulation material.

!

WARNING

Never use circular spray nozzles or dirt cutters!

CAUTION

- If washing the vehicle in the winter using a hose or high-pressure cleaner, ensure that the jet of water is not aimed directly at the locking cylinders or the door/panel joints risk of freezing!
- To avoid damaging the parking aid sensors while cleaning with high-pressure cleaners or steam jets, the sensors must only be directly sprayed for short periods while a minimum distance of 10 cm must be observed.
- \blacksquare The temperature of the water used for cleaning must not exceed 60 $^{\circ}\text{C}$ risk of damaging the vehicle.
- See also Washing cars with decorative films using a high-pressure cleaner » page 199 .

Taking care of your vehicle exterior

Introduction

This chapter contains information on the following subjects:

Taking care of your vehicle's paintwork	198
Plastic parts	199
Rubber seals	199
Chrome parts	199
Decorative films	199
Windows and exterior mirrors	200
Headlight lenses	200
Door lock cylinders	200
Cavity protection	200
Wheels	201
Underbody protection	201

Regular and proper care help to retain the efficiency and **value** of your vehicle. It may also be one of the requirements for the acceptance of warranty claims relating to corrosion damage and paint defects on the bodywork.

We recommend using vehicle care products from ŠKODA Original Accessories. These are available from ŠKODA Partners. The usage instructions on the package must be observed.

WARNING

- Vehicle care products may be harmful to your health if not used according to the instructions.
- Always store vehicle care products safely, in particular out of the reach of children risk of poisoning!
- Protect your hands and arms from sharp-edged metal parts when cleaning the underfloor, the inside of the wheel housings or the wheel trims risk of cuts!

CAUTION

- Do not use any insect sponges, rough kitchen sponges or similar cleaning products risk of damaging the paintwork surface.
- Cleaner that contain solvents can damage the material being cleaned.

For the sake of the environment

Used vehicle care product cans represent hazardous waste that is harmful to the environment. These must be disposed of in accordance with national legal regulations.



Note

Due to the special tools and knowledge required, and to avoid any potential problems with the cleaning and care of the interior of your vehicle, we recommend that cleaning and care of the interior of your vehicle be carried out by a ŠKODA service partner.

Taking care of your vehicle's paintwork



First read and observe the introductory information and safety warnings 1 on page 198.

Minor paint damage such as scratches, scuffs or stone chips should be treated immediately if possible, using **touch-up pens** or **sprays**.

Preserving the vehicle paintwork

A thorough wax treatment provides the vehicle's paintwork with highly effective protection against harmful environmental influences.

The vehicle must be treated with a high-quality hard wax polish at the latest, when no more drops form on the clean paintwork.

A new layer of a high-quality hard wax polish can be applied to the clean bodywork after it has dried thoroughly.

Even if you use a wax preserver regularly we still recommend that you treat the paintwork of the vehicle at least twice a year with hard wax.

Polishing

Polishing is necessary if the vehicle's paintwork has become unattractive and if it is no longer possible to achieve a gloss with wax preservatives.

If the polish does not contain any preserving elements, the paint must be treated with a preservative afterwards.

CAUTION

- Never apply wax to the windows.
- Mat painted or plastic parts must not be treated with polishing products or hard waxes.
- Do not polish the paintwork in a dusty environment risk of paint scratches.
- Do not apply any paint care products to door seals or window guides.
- If possible, do not apply any paint care products to parts of the bodywork that come into contact with door seals or window guides.

Plastic parts



First read and observe the introductory information and safety warnings III on page 198.

Clean plastic parts with a damp cloth.

If this method does not completely clean the plastic parts, use cleaning products specially designed for this purpose.

CAUTION

Do not use paint care products on plastic parts.

Rubber seals



First read and observe the introductory information and safety warnings 🔢 on page 198.

All door seals and window guides are factory-treated with a colourless matt varnish layer to prevent the freezing of painted body parts and to protect against driving noise.

Do not treat the door seals and window guides with any products whatsoever.



CAUTION

Applying additional treatments to the seals can corrode the protective coating, and driving noise may occur.

Chrome parts



First read and observe the introductory information and safety warnings 🔲 on page 198.

First clean the chrome parts with a damp cloth and then polish them with a soft. dry cloth.

If this method does not completely clean chrome parts, use a specific chrome care product.

CAUTION

Do not polish the chrome parts in a dusty environment - risk of surface scratches.

Decorative films



First read and observe the introductory information and safety warnings 🔢 on page 198.

Wash the films with a mild soap solution and clean, warm water. Never use harsh cleaning products or chemical solvents, as this could damage the films.

The following instructions must be followed when washing the vehicle with a high-pressure cleaner:

- > The minimum distance between the nozzle and the vehicle body should be 50
- > Keep iet perpendicular to the film surface.
- > The maximum water temperature is 50 °C.
- > The maximum water pressure is 80 bar.

CAUTION

In the winter months, do not use an ice scraper to remove ice and snow from the areas with films. Do not use any other objects to remove frozen layers of snow or ice - risk of film damage.

Windows and exterior mirrors



First read and observe the introductory information and safety warnings II on page 198.

Use a plastic ice scraper for removing snow and ice from the windows and mirrors.

Regularly clean windows from the inside with clean water.

Dry the glass surfaces with a clean chamois leather or a cloth intended for this purpose.

When drying the windows after washing the vehicle, do not use window leathers that have been used to polish the bodywork. Residues of preservatives in the window leather can make the window dirty and reduce visibility.

CAUTION

- The ice scraper should not be moved forward and backward but in one direction to avoid any damage to the surface of the glass.
- Snow or ice that is contaminated with coarse dirt such as fine gravel, sand or salt must not be removed from the windows and mirrors - there is a risk of damage to the surface of the windows and mirrors.
- Do not remove snow or ice from glass parts using warm or hot water risk of cracks forming in the glass.
- When removing snow or ice from windows and mirror lenses ensure that the paintwork of the vehicle is not to damage.
- Do not clean the inside of the windows with sharp-edged objects or corrosive and acidic cleaning agents - there is a risk of damaging the heating elements or window aerial.

Headlight lenses



First read and observe the introductory information and safety warnings II on page 198.

Clean plastic front headlight lenses using clean, warm water and soap.

CAUTION

- Never wipe headlights with a dry cloth.
- Do not use any sharp objects to clean the plastic lenses, as this may damage the protective paintwork and consequently cause cracks to form on the headlight lenses.
- Do not use any harsh cleaning products or chemical solvents to clean the headlights, as this could damage the headlight lenses.

Door lock cylinders



First read and observe the introductory information and safety warnings II on page 198.

Specific products must be used for de-icing door lock cylinders.

CAUTION

When washing your vehicle, ensure as little water as possible gets into the lockina cylinders.

Cavity protection



First read and observe the introductory information and safety warnings III on page 198.

All the cavities of your vehicle which are at risk from corrosion are protected for life by a layer of **protective wax** applied in the factory.

This wax protection does not need to be inspected or re-applied.

If any small amount of wax flow out of the cavities at high temperatures, these must be removed with a plastic scraper and the stains cleaned using a petroleum cleaner.

WARNING

Safety regulations should be observed when using petroleum cleaner to remove wax - risk of fire!

Wheels



First read and observe the introductory information and safety warnings III on page 198.

Wheel rims

Also thoroughly wash the wheel rims when washing the vehicle on a regular basis.

Regularly remove salt and brake abrasion, otherwise the rim material will be corroded.

Damage to the paint layer on the wheel rims must be touched up immediately.

Light alloy wheels

After washing thoroughly and treat the wheel rims with a protective product for light alloy wheels. Products which cause abrasion must not be used to treat the wheel rims.

CAUTION

Severe layers of dirt on the wheels can also result in wheel imbalance. This may show itself in the form of a wheel vibration which is transmitted to the steering wheel which, in certain circumstances, can cause premature wear of the steering. This means it is necessary to remove the dirt.

Underbody protection



First read and observe the introductory information and safety warnings II on page 198.

The underside of your vehicle is protected for life against chemical and mechanical influences.

It is not possible to guarantee that the **protective coating** will not suffer any damage as the vehicle is driven.

We recommend having the protective coating underneath the vehicle and the chassis checked — preferably before the beginning of winter and at the end of winter.

WARNING

Never use additional underbody protection or anti-corrosion agents for exhaust pipes, catalytic converters, diesel particle filters or heat shields. When the engine reaches its operating temperature, these substances may ignite risk of fire!

Taking care of the interior

Introduction

This chapter contains information on the following subjects:

Natural leather	202
Artificial leather, cloths and Alcantara®	202
Seat covers	203
Seat belts	203

Regular and proper care help to retain the efficiency and value of your vehicle.

We recommend using vehicle care products from ŠKODA Original Accessories. These are available from ŠKODA Partners. The usage instructions on the package must be observed.

WARNING

- Vehicle care products may be harmful to your health if not used according to the instructions.
- Always store vehicle care products safely, in particular out of the reach of children – risk of poisoning!

CAUTION

- Be sure to check clothing for colourfastness to avoid any damage or visible stains on the material (leather), panels and textiles.
- Remove fresh stains such as those from ball-point pens, ink, lipstick, shoe polish, etc., from the material (leather), panels and textiles as quickly as possible.
- Air fresheners and scents can be hazardous to heath when the temperature inside the vehicle is high.
- Do not attach scents or air fresheners to the dash panel there is a risk of damage to the dash panel.

- Do not stick any stickers on the inside of the rear windows, the rear side windows and in the vicinity of the heating elements on the windscreen or near the window aerial. These may get damaged.
- Do not clean the roof panelling with a brush risk of damage to the surface of the panelling.
- Cleaner that contain solvents can damage the material being cleaned.
- Apply only a small amount of the cleaning and care product.



For the sake of the environment

Used vehicle care product cans represent hazardous waste that is harmful to the environment. These must be disposed of in accordance with national legal regulations.



Note

Due to the special tools and knowledge required, and to avoid any potential problems with the cleaning and care of the interior of your vehicle, we recommend that cleaning and care of the interior of your vehicle be carried out by a ŠKODA service partner.

Natural leather



First read and observe the introductory information and safety warnings II on page 201.

Leather is a natural material with specific properties, and requires regular cleaning and maintenance.

The leather should be cleaned on a regular basis depending on the amount of wear-and-tear.

Dust and dirt in the pores and folds act as abrasive materials. This leads to severe corrosion and the premature brittleness of the leather surface.

We recommend that you remove dust **regularly and at short intervals** using a cloth or vacuum cleaner.

Clean soiled leather surfaces with a water-dampened cotton or woollen cloth and then dry with a clean, dry cloth » !..

Clean severely soiled areas with a cloth soaked in a mild soap solution (2 tablespoons of neutral soap to 1 litre of water).

To **remove stains**, use a cleaning agent specially designed for this purpose.

Treat the leather regularly and at suitable intervals using a suitable leather care product.

CAUTION

- Ensure that no part of the leather is soaked through during cleaning and that no water gets into the seams. Otherwise, the leather could become brittle or cracked.
- Avoid leaving the vehicle for lengthy periods in bright sunlight to avoid the leather from bleaching. If the vehicle is parked in the open for lengthy periods, protect the leather from direct sunlight by covering it.
- Sharp-edged objects on items of clothing such as zip fasteners, rivets, sharpedged belts, jewellery and pendants may leave permanent scratches or signs of rubbing on the surface. Such damage cannot be subsequently recognised as a justified complaint.
- The use of a mechanical steering wheel lock may damage the leather surface of the steering wheel.
- Use a care cream with light blocker and impregnation effect on a regular basis and each time after cleaning. The cream nourishes the leather, allows it to breathe and keeps it supple and also provides moisture. It also creates surface protection.
- Some clothing materials, e.g. dark denim, do not have sufficient colour fastness. This can cause damage or clearly visible discolouration to seat covers, even when used correctly. This applies particularly to light-coloured seat covers. This does not relate to a fault in the seat cover, but rather to poor colour fastness of the clothing textiles.



Note

When using the vehicle, minor visible changes may occur to the leather parts of the covers (e.g. wrinkles or creases) as a result of the stress applied to the covers.

Artificial leather, cloths and Alcantara®



First read and observe the introductory information and safety warnings II on page 201.

Artificial leather

Clean artificial leather with a damp cloth.

If this method does not completely clean the artificial leather, use a mild soap solution or cleaning products specially designed for this purpose.

Fabric

Clean upholstery cover materials and cloth trims on doors, boot cover, etc. using specific cleaning agents, e.g., dry foam.

Use a soft sponge, brush, or commercially available microfibre cloth.

Use a cloth and special detergent to clean the roof trim.

Remove any lumps on the cover fabric and any fabric residue using a brush.

Remove stubborn hair using a "cleaning glove".

Alcantara®

Dust and fine dirt particles in pores, creases and seams may chafe and damage the surface.

If you leave your vehicle parked in the open for lengthy periods, protect the Alcantara® seat covers from the direct rays of the sun to prevent fading.

Minor changes in colour caused by use are normal.

CAUTION

C/ C/ I/OII

- Do not use any leather cleaners on Alcantara® seat covers.
- For Alcantara seat covers do not use any solvents, floor wax, shoe cream, stain remover, or similar agents.
- Avoid leaving the vehicle in bright sunlight for long periods of time in order to stop the fabric from bleaching. If the vehicle is parked outside for long periods of time, cover the fabric to protect it from direct sunlight.
- Some clothing materials, e.g. dark denim, do not have sufficient colour fastness. This can cause damage or clearly visible discolouration to seat covers, even when used correctly. This applies particularly to light-coloured seat covers. This does not relate to a fault in the seat cover, but rather to poor colour fastness of the clothing textiles.

Seat covers



First read and observe the introductory information and safety warnings I on page 201.

Electrically heated seats

Do not clean the covers $\mbox{\bf by moistening},$ as this can damage the seat heating system.

Use a specific cleaning agent such as dry foam or similar to clean the covers.

Seats without seat heating

Thoroughly vacuum the seat covers with a vacuum cleaner before cleaning.

Clean the seat covers with a damp cloth or cleaning products specially designed for this purpose.

Indented points arising on the fabrics by everyday use, can be removed by brushing against the direction of hair with a damp brush.

Always clean all parts of the covers, so that there are no visible edges. Then allow the seat to dry completely.

CAUTION

- Regularly remove dust from the seat covers using a vacuum cleaner.
- Electrically heated seats must not be dried after cleaning by switching on the heater.
- Do not sit on wet seats risk of seat deformation.
- Always clean the seats "from seam to seam".

Seat belts



First read and observe the introductory information and safety warnings ! on page 201.

The belt webbing must always be kept clean.

Wash dirty seat belts with mild soapy water.

Remove coarse dirt with a soft brush.

Dirty belt webbing may impair the correct functioning of the inertia reel.

WARNING

- The seat belts must not be removed for cleaning.
- Never clean the seat belts chemically as chemical cleaning products could destroy the fabric.
- The seat belts must not be allowed to come into contact with corrosive liquids (e.g. acids).
- Check the condition of all the seat belts on a regular basis. If any damage to the belt webbing, seat belt connections, inertia reel or lock is detected, the seat belt must be replaced by a specialist garage.
- The seat belts must be fully dried before being rolled up.

Inspecting and replenishing

Fuel

Introduction

This chapter contains information on the following subjects:

204
205
206

The correct grades of fuel for your vehicle are stated on a sticker affixed to the inside of the fuel filler flap » Fig. 160 on page 204 - B.

WARNING

The national legal requirements must be observed if carrying a spare canister in the vehicle. We do not recommend carrying any fuel canisters in your vehicle for safety reasons. in the event of an accident, these canisters can become damaged and fuel may escape - risk of fire!

CAUTION

- Never drive until the fuel tank is completely empty! The irregular supply of fuel can cause misfiring, which can result in considerable damage to parts of the engine and the exhaust system.
- Immediately remove any fuel that has spilled onto the vehicle's paintwork risk of paint damage!
- If the vehicle was not purchased in the country where it was intended to be operated, you should check whether the fuel specified by the manufacturer is offered in the country where the vehicle will be operated. You should also perhaps check whether the manufacturer has recommended a different fuel for operation of the vehicle in the corresponding country. Is this not the case, then you must check whether it is permitted by the manufacturer to operate the vehicle with another fuel type.

Refuellina

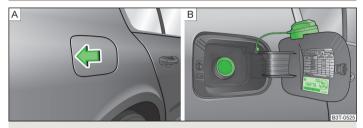


Fig. 160 Open fuel filler flap/fuel filler flap with cap unscrewed



First read and observe the introductory information and safety warnings II on page 204.

Before refuelling, switch off the auxiliary heating system (auxiliary heating and ventilation) » page 108.

- > Press on the fuel filler flap in the direction of the arrow » Fig. 160 A.
- > Unscrew the filler cap by turning it in a counterclockwise direction and place the cap onto the top of the fuel filler flap » Fig. 160 - B.
- Insert the pump nozzle into the fuel filler tube as far as it will go.

The fuel tank is full just as soon as the pump nozzle switches off for the first time » ...

- > Remove the pump nozzle from the fuel filler tube and put it back in the pump.
- > Insert the filler cap onto the fuel filler neck and screw it in a clockwise direction until it clicks into place.
- > Close the fuel filler flap until it clicks into place.

Check that the fuel filler flap is closed properly.

CAUTION

The fuel tank is full just as soon as the pump nozzle switches off for the first time, provided the nozzle has been operated properly. Do not continue filling the fuel tank otherwise the expansion volume is filled up.

i

Note

The fuel tank has a capacity of about **60 litres**, containing a reserve of approx. **10.5 litres**.

Unleaded petrol



First read and observe the introductory information and safety warnings H on page 204.

Your vehicle can only be operated with **unleaded petrol** in compliance with the **EN 228**ⁿ standard.

All petrol engines can be operated using petrol that contains at ${\it most}\,10\%$ bioethanol (E10).

Required fuel - unleaded petrol 95/91 or 92 or 93 RON

Use unleaded fuel with the octane rating **95** RON. Unleaded petrol with the octane ratings **91**, **92** or **93** RON can also be used, but may result in a slight loss in performance.

Prescribed fuel - unleaded petrol min. 95 RON

Use unleaded fuel with the octane rating 95 RON or higher.

In case of necessity, you can refuel with petrol with the octane ratings **91**, **92** or **93** RON, if petrol with the octane rating **95** RON is not available » ...

Prescribed fuel - unleaded fuel 98/95 RON

Use unleaded fuel with the octane rating **98** RON or higher. Unleaded petrol **95** RON can also be used but results in a slight loss in performance.

In case of necessity, you can refuel with petrol with the octane ratings **91**, **92** or **93** RON, if unleaded fuel with octane rating **98** RON or **95** RON is not available » .

Fuel additives

Unleaded petrol in accordance with the EN 228 standard¹⁾ meets all the conditions for a smooth-running engine. We therefore recommend that no fuel additives are used. This can result in considerable damage to parts of the engine or the exhaust system.

CAUTION

- Even filling the tank with leaded petrol that does not meet the standards once can lead to serious damage to parts of the exhaust system!
- If a fuel other than unleaded fuel which complies to the above mentioned standards (e.g. leaded petrol) is used by mistake, do not start the engine or switch on the ignition! Extensive damage to engine parts can occur! We recommend that you have the fuel system cleaned by a specialist garage.

CAUTION

- If, in an emergency, the vehicle has to be refuelled with petrol of a lower octane number than the one prescribed, the journey must only be continued at medium engine speeds and a low engine load. Driving at high engine revs or a high engine load can severely damage the engine! Refuel using petrol of the prescribed octane number as soon as possible.
- Engine parts can be damaged if petrol with a lower octane number than the one prescribed is used.
- Even in the event of an emergency, petrol of a lower octane number than 91 RON must not be used, otherwise the engine can be severely damaged!

CAUTION

- In no case may fuel additives with metal components be used, especially not with manganese and iron content. LRP(lead replacement petrol) fuels with metallic components may not be used. There is a risk of causing considerable damage to parts of the engine or exhaust system!
- Fuels with metallic content may not be used. There is a risk of causing considerable damage to parts of the engine or exhaust system!

In Germany also DIN 51626-1 or E10 for unleaded petrol with octane number 91 or 95 or DIN 51626-2 or E5 for unleaded petrol with octane number 95 and 98.

i

Note

- Unleaded petrol that has a higher octane number than that required by the engine can be used without limitations.
- On vehicles with prescribed unleaded petrol **95/91**, **92 or 93** RON, the use of petrol with a higher octane number than **95** RON does not result in a noticeable power increase or a lower fuel consumption.
- On vehicles using prescribed unleaded petrol of min. 95 RON, the use of petrol with a higher octane number than 95 RON can increase the power and reduce fuel consumption.

Diesel fuel



First read and observe the introductory information and safety warnings 1 on page 204.

Your vehicle can only be operated with diesel fuel that meets the ${\rm EN}\,590^{\rm lj}$ standard.

All diesel engines can be operated using diesel fuel with at most 7% biodiesel (B7)²).

For the Indian market, your vehicle can run only on **diesel fuel** compliant with standard **IS 1460/Bharat IV**. If diesel fuel which complies with this standard is not available, you can refuel with diesel fuel according to standard **IS 1460/Bharat III** in case of emergency.

Operation in winter - Winter-grade diesel fuel

In the cold season, only use "winter-grade diesel fuel" which will still operate properly even at a temperature of -20 °C.

It is often the case in countries with different climatic conditions that diesel fuels available have a different temperature characteristic. ŠKODA Partners and filling stations in the relevant country will be able to provide you with information regarding the diesel fuels available.

Preheating fuel

The vehicle is fitted with a fuel filter preheating system. This secures operation of a vehicle using diesel fuel down to an environmental temperature of -25 °C.

Diesel fuel additives

Additives, so-called "flow improvers" (petrol and similar agents) should not be mixed with the diesel fuel. This can cause serious damage to engine or exhaust system parts.

!

CAUTION

- Just filling the tank once with diesel fuel that does not comply with the standard, can cause severe damage to parts of the engine, the fuel and exhaust system!
- If a different fuel other than diesel fuel, which complies to the above mentioned standards (e.g. petrol) is used by mistake do not start the engine or switch on the ignition! Extensive damage to engine parts can occur! We recommend that you have the fuel system cleaned by a specialist garage.
- Water which has collected in the fuel filter can cause engine faults.

!

CAUTION

- Your vehicle cannot be operated with biofuel RME, therefore this fuel must not be refuelled and driven. The use of biofuel RME can cause considerable damage to parts of the engine or fuel system.
- Additives, so-called "flow improvers" (petrol and similar agents) should not be mixed with the diesel fuel. This can cause serious damage to engine or exhaust system parts.

Engine compartment

Introduction

This chapter contains information on the following subjects:

Opening and closing the bonnet	208
Engine compartment overview	209
Radiator fan	209
Windscreen washer system	209

¹⁾ In Germany also DIN 51628, in Austria ÖNORM C 1590, in Russia GOST R 52368-2005 / EN 590:2004.

²⁾ In Germany according to the DIN 52638 standard, in Austria ÖNORM C 1590, in France EN 590.

WARNING

Injuries or scolding or risks of accident or fire may occur when working in the engine compartment. For this reason, it is essential to comply with the warning instructions outlined below and with the general applicable safety rules. The engine compartment of your car is a hazardous area!

WARNING

The following instructions must be followed before starting work in the engine compartment:

- Turn off the engine and withdraw the ignition key.
- Firmly apply the handbrake.
- If the vehicle is fitted with a manual gearbox, move the gearshift lever into Neutral, or if the vehicle is fitted with an automatic gearbox, move the selector lever into position P.
- Allow the engine to cool.
- Never open the bonnet if you can see steam or coolant escaping from the engine compartment – risk of scalding! Wait until no more steam or coolant is escaping.

WARNING

The following instructions must be followed when working in the engine compartment.

- Keep children clear of the engine compartment.
- Never touch the radiator fan while the engine is still warm. The fan might suddenly start running!
- Do not touch any hot engine parts risk of burns!
- The coolant additive and thus all of the coolant is harmful to your health.
- Avoid contact with the coolant.
- Coolant vapours are harmful to health.
- Never open the end cover of the coolant expansion reservoir while the engine is still warm. The cooling system is pressurized!
- When opening the end cover of the coolant expansion reservoir, cover it with a cloth to protect your face, hands and arms from hot steam or hot coolant.
- If any coolant splashes into your eyes, immediately rinse out your eyes with clear water and contact a doctor as soon as possible.

WARNING (Continued)

- Always store the coolant additive securely in its original container, and in particular out of the reach of children – risk of poisoning!
- If coolant is swallowed, consult a doctor immediately.
- Do not leave any items (e.g. cloths or tools) in the engine compartment.
- Never spill fluids on the hot engine. Such fluids (e.g. the antifreeze contained in the coolant) may ignite!

WARNING

The following warning instructions must be observed at all times when working in the engine compartment while the engine is running.

- Pay particular attention to rotating engine parts (e.g. V-ribbed belt, generator, radiator fan) and the high-voltage ignition system risk to life!
- Never touch the electric wiring on the ignition system.
- Avoid short circuits in the electrical system particularly on the vehicle's battery.
- Always make sure that no jewellery, loose clothing or long hair can get caught in rotating engine parts risk to life! Always remove any jewellery, tie back long hair and wear tight fitting clothing before completing any work.

WARNING

The following warning instructions must be observed if work has to be carried out on the fuel or electrical systems.

- Always disconnect the vehicle battery from the electrical system.
- Do not smoke.
- Never work near open flames.
- Always have a functioning fire extinguisher nearby.

WARNING

- Read and observe the information and warning instructions on the fluid containers.
- Keep fluids in their original containers and keep securely out of the reach of children!

WARNING (Continued)

- If you intend to work underneath the vehicle, you must secure the vehicle from rolling away and support it with suitable supporting blocks; the car jack is not sufficient - risk of injury!
- Never cover the engine with additional insulation material (e.g. with a cover) - risk of fire!
- The bonnet must always be properly closed when driving. Therefore, the lock must always be checked after closing the bonnet in order to ensure that it has engaged properly.
- If you notice that the lock is not properly engaged while driving, stop the vehicle immediately and close the bonnet - risk of accident!

CAUTION

Always top up using the correct specification of fluids. This may result in major operating problems and also vehicle damage!

For the sake of the environment

In view of the requirements for the environmentally friendly disposal of fluids and the special tools and knowledge required for such work, we recommend that fluids be changed by a specialist garage.

Note

- Please consult a specialist garage for any guestions relating to fluids.
- Fluids with the correct specifications can be purchased from ŠKODA Original Accessories.

Opening and closing the bonnet



Fig. 161 Bonnet release lever/release lever



First read and observe the introductory information and safety warnings II on page 206.

Openina

> Pull the release lever under the dash panel in the direction of the arrow 1 » Fig. 161.

Before opening the bonnet, ensure that the arms of the windscreen wipers are correctly in place against the windscreen otherwise the paintwork could be damaged.

- > Press the release lever in the direction of the arrow 2 » Fig. 161 and the bonnet is unlocked.
- > Grasp the bonnet and lift up until it is held open by the pressurised gas spring.

Closina

- > Pull the bonnet down far enough to overcome the force of the pressurised gas
- > Close the bonnet from a height of approximately 20 cm with a slight swing

WARNING

Check that the bonnet is closed properly.

CAUTION

Never open the bonnet using the locking lever » Fig. 161.

Engine compartment overview

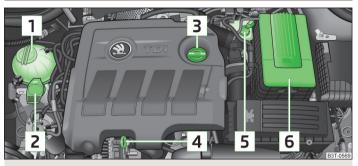


Fig. 162 Principle sketch: Engine compartment

First read and observe the introductory information and safety warnings III on page 206.

1 (Coolant expansion reservoir	213
2 V	Nindscreen washer fluid reservoir	209
3 E	Engine oil filler opening	212
4 E	Engine oil dipstick	211
5 E	Brake fluid reservoir	214
6 E	Battery (below a cover)	215

Note

The location of the inspection points in the engine compartment of petrol and diesel engines is practically identical.

Radiator fan



First read and observe the introductory information and safety warnings II on page 206.

The radiator fan is powered by an electric motor. Operation is controlled according to the temperature of the coolant.

WARNING

After switching off the ignition, the fan may intermittently continue to operate for approx. 10 minutes.

Windscreen washer system



Fia. 163 Engine compartment: Windscreen washer fluid reservoir



First read and observe the introductory information and safety warnings II on page 206.

The windscreen washer fluid reservoir is located in the engine compartment and contains the cleaning fluid for the windscreen or rear window and for the adaptive headlights.

The filling level of the container is about 3 litres and about 5.5 litres on vehicles that have a headlight washing system¹⁾.

Clear water is not sufficient to intensively clean the windscreen and headlights. We recommend using clean water together with a screen cleaner from the range of ŠKODA Original Accessories (with antifreeze in winter), which will remove any stubborn dirt.

¹⁾ In some countries, 5.5 ltr. applies for both variants.

In Winter, the washing water should always be mixed with antifreeze even if the vehicle has heated windscreen washer nozzles.

Under exceptional circumstances, methylated spirits can also be used if no screen cleaner with antifreeze is available. The concentration of methylated spirits must not be more than 15 %. The freeze protection at this concentration is sufficient only to -5 °C.

CAUTION

- Under no circumstances must radiator antifreeze or other additives be added to the windscreen washer fluid.
- If the vehicle is fitted with a headlight cleaning system, only cleaning products which do not attack the polycarbonate coating of the headlights must be added to the windscreen washer fluid.
- Do not remove the filter from the windscreen washer fluid reservoir when refilling, as this may cause contamination of the liquid transportation system, leading in turn to a windscreen washer system malfunction.

Engine oil

Introduction

This chapter contains information on the following subjects:

Specifications and capacity	210
Checking the oil level	211
Replenishing	212
Changing	212

The engine has been factory-filled with a high-grade oil that can be use throughout the year - except in extreme climate zones.

The engine oils are undergoing continuous further development. Thus the information stated in this Owner's Manual is only correct at the time of publication.

ŠKODA Service Partners are informed about the latest changes by the manufacturer. We therefore recommend that the oil change be completed by a ŠKODA Service Partner.

The specifications (VW standards) stated in the following can be indicated separately or together with other specifications on the bottle.

The oil capacities include oil filter change. Check the oil level when filling; do not over fill. The oil level must be between the markings » page 211.

WARNING

- The engine compartment of your car is a hazardous area. The following warning instructions must be followed at all times when working in the engine compartment » page 206.
- Do not continue your journey if for some reason it is not possible to top up the engine oil . Switch off the engine and seek assistance from a specialist garage.
- If the oil level is above level A » Fig. 164 on page 211,

 do not continue to drive! Switch off the engine and seek assistance from a specialist garage.

CAUTION

Do not pour any additives into the engine oil - risk of serious damage to the engine parts!

Note

- Before a long drive we recommend that you purchase and carry with you engine oil which complies with the specification for your vehicle.
- We recommend that you use oils from ŠKODA Original Accessories.
- If your skin has come into contact with oil, it must be washed thoroughly.

Specifications and capacity



First read and observe the introductory information and safety warn-First read and observings I on page 210.

Specifications and capacity (in I) for vehicles with flexible service intervals

Petrol engines	Specification	Filling level
1.4 ltr./92 kW TSI	VW 503 00, VW 504 00	3.6
1.8 ltr/112 kW TSI 1.8 ltr/118 kW TSI	VW 504 00	4.6
2.0 I/147 kW TSI	VW 504 00	4.6
3.6 I/191 kW FSI	VW 504 00	5.5

Diesel engines ^{a)}	Specification	Filling level
1.6 l./77 kW TDI CR	VW 507 00	4.3
2.0 ltr/103 kW TDI CR DPF	VW 507 00	4.3
2.0 ltr/125 kW TDI CR DPF	VW 507 00	4.3

a) Engine oil VW 505 01 can optionally be used in diesel engines without a DPF.

Specifications and capacity (in I) for vehicles with fixed service intervals

Petrol engines	Specification	Filling lev- el
1.4 ltr./92 kW TSI	VW 501 01, VW 502 00	3.6
1.8 ltr/112 kW TSI 1.8 ltr/118 kW TSI	VW 502 00	4.6
2.0 l/147 kW TSI	VW 502 00	4.6
3.6 I/191 kW FSI	VW 502 00	5.5


Diesel engines ^{a)}	Specification	Filling lev- el
1.6 l./77 kW TDI CR	VW 507 00	4.3
2.0 ltr/103 kW TDI CR DPF	VW 507 00	4.3
2.0 ltr/125 kW TDI CR DPF	VW 507 00	4.3

a) Engine oil VW 505 01 can optionally be used in diesel engines without a DPF.

CAUTION

- If the above engine oils are not available, a different engine oil can be used in an emergency. To prevent damage to the engine, a maximum of 0.5 litres only of the following engine oils may be used until the next oil change:
- For petrol engine models: ACEA A3/ACEA B4 or API SN/API SM:
- For diesel engine models: ACEA C3 or API CJ-4.

Checking the oil level

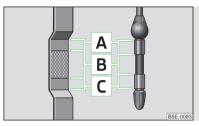

Fia. 164 Dipstick



First read and observe the introductory information and safety warnings II on page 210.

The dipstick indicates the level of oil in the engine » Fig. 164.

Checking the oil level

Ensure that the vehicle is positioned on a level surface and the engine has reached its operating temperature.

> Switch off the engine.

Wait a few minutes until the engine oil flows back into the oil trough.

- > Open the bonnet.
- > Pull out the dipstick.
- > Wipe the dipstick with a clean cloth and insert it again to the stop.
- > Pull the dipstick out again and check the oil level.

Oil level within range A

No oil must be refilled.

Oil level within range B

Oil can be refilled. Afterwards, the oil level can lie in the range A.

Oil level within range C

The engine must be topped up with oil so that the oil level at least reaches the range B.

The engine consumes a little oil. The oil consumption may be as much as 0.5 l/ 1 000 km depending on your style of driving and the conditions under which you operate your vehicle. Consumption may be slightly higher than this during the first 5 000 kilometres.

The oil level must be checked at regular intervals. We recommend after each time you refuel or prior to making a long journey.

We recommend maintaining the oil level within the range A, but not above, if the engine has been operating at high loads, for example, during a lengthy motorway trip during the summer months, towing a trailer or negotiating a high mountain pass.

The indicator light in the instrument cluster will indicate whether the oil level is too low » page 18, Engine oil level. Check the oil level using the dipstick as soon as possible. Add oil accordingly.



CAUTION

The oil level must not exceed the range A » Fig. 164 – there is a risk of damaging the exhaust system.

Replenishing



First read and observe the introductory information and safety warnings III on page 210.

- > Check the oil level » page 211.
- > Unscrew the cap of the engine oil filler opening » Fig. 162 on page 209.
- > Replenish the oil in portions of 0.5 litres in accordance with the correct specifications » page 210.
- > Check the oil level » page 211.
- > Carefully screw on the oil filler opening cap and push the dipstick in fully.

Changing



First read and observe the introductory information and safety warnings II on page 210.

The engine oil must be changed according to pre-specified service intervals » page 191 or according to the service interval display» page 30.

Coolant

Introduction

This chapter contains information on the following subjects:

Capacity	213
Checking the coolant level	213
Replenishing	214

The coolant consists of water with coolant additive. This mixture guarantees antifreeze protection, protects the cooling/heater system against corrosion and prevents lime formation.

Vehicles exported to countries with a mild climate are already factory-filled with a coolant which offers antifreeze protection down to about -25 °C. In these countries, the concentration of coolant additive should be at least 40%.

Vehicles exported to countries with a cold climate are already factory-filled with a coolant which offers antifreeze protection down to about -35 °C. In these countries, the concentration of coolant additive should be at least 50%.

If a higher concentration of antifreeze is required for climatic reasons, the concentration of coolant additive can be increased up to a maximum of 60% (antifreeze protection down to approx. -40 °C).

When refilling, only use the same antifreeze written on the antifreeze expansion tank » Fig. 165 on page 213.

WARNING

- The engine compartment of your car is a hazardous area. The following warning instructions must be followed at all times when working in the engine compartment » page 206.
- Do not continue your journey if for some reason it is not possible to fill with coolant under the current circumstances . Switch off the engine and seek assistance from a specialist garage.

CAUTION

- The concentration of coolant additive in the coolant must never be under 40%.
- Over 60% of coolant additive in the coolant reduces the antifreeze protection and cooling effect.

- A coolant additive that does not comply with the correct specifications can significantly reduce the corrosion protection.
- Any faults resulting from corrosion may cause a loss of coolant and can consequently result in major engine damage!
- Do not fill the coolant above the mark A » Fig. 165 on page 213.
- If a fault causes the engine to overheat, we recommend visiting a specialist garage, as otherwise serious engine damage may occur.

Capacity




First read and observe the introductory information and safety warnings II on page 212.

Coolant canacity (in litres)

Petrol engines	Filling level
1.4 ltr./92 kW TSI	7.7
1.8 ltr/112 kW TSI 1.8 ltr/118 kW TSI	8.6
2.0 l/147 kW TSI	8.6
3.6 I/191 kW FSI	9.0

Diesel engines	Filling level
1.6 l./77 kW TDI CR	8.4
2.0 ltr./103 kW TDI CR	8.4
2.0 ltr./125 kW TDI CR	8.4

Checking the coolant level

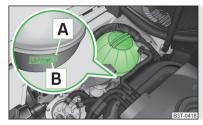

Fia. 165 Engine compartment: Coolant expansion reservoir



First read and observe the introductory information and safety warnings II on page 212.

The coolant expansion bottle is located in the engine compartment.

Inspecting the coolant level

- > Switch off the engine.
- > Open the bonnet.
- > Check the level of coolant in the coolant expansion bottle. » Fig. 165.

Coolant level above mark A

No coolant may be added.

The level may also rise slightly above the A marking when the engine is hot.

Coolant level between markings A and B Coolant may be added.

The coolant level must lie between the A and B markings when the engine is cold.

Coolant level below mark B Coolant must be added.

Top up the coolant level to between the A and B markings when the engine is cold.

¹⁾ The coolant capacity is approximately 1 I greater on vehicles that are fitted with an auxiliary heater (auxiliary heating and ventilation).

If the coolant level in the coolant expansion tank is too low, this is indicated by the warning light $\frac{1}{2}$ » page 16, $\frac{1}{2}$ Coolant lighting up in the instrument cluster. We still recommend inspecting the coolant level directly at the reservoir from time to time.

Loss of coolant

A loss of coolant is first and foremost an **indication of a leak** in the system. Do not merely top up the coolant. Have the cooling system checked by a specialist garage.

Replenishing



First read and observe the introductory information and safety warnings 1 on page 212.

Only top up with new coolant.

- > Switch off the engine.
- > Allow the engine to cool.
- > Place a cloth over the cap of the coolant expansion tank and unscrew the cap carefully.
- > Replenish the coolant.
- > Turn the cap until it clicks into place.

Do not use an alternative additive if the specified coolant is not available in an emergency. In this case, use just water and have the correct mixing ratio of water and coolant additive restored by a specialist garage as soon as possible.

Brake fluid

Introduction

This chapter contains information on the following subjects:

Checking the brake fluid level	214
Changing	215

WARNING

- The engine compartment of your car is a hazardous area. The following warning instructions must be followed at all times when working in the engine compartment » page 206.
- If the fluid level has dropped below the MIN marking » Fig. 166 on page 214,
 do not continue your journey there is a risk of an accident! Seek help from a specialist garage.
- Do not use used brake fluid the function of the brake system may be impaired risk of accident!

CAUTION

Brake fluid damages the paintwork of the vehicle.



The brake fluid is changed as part of a compulsory inspection service.

Checking the brake fluid level



Fig. 166
Engine compartment: Brake fluid reservoir



First read and observe the introductory information and safety warnings 11 on page 214.

The brake fluid reservoir is located in the engine compartment.

- > Switch off the engine.
- > Open the bonnet.
- > Check the level of brake fluid in the reservoir » Fig. 166.

The level must be between the "MIN" and "MAX" markings.

A slight drop in the fluid level results when driving due to normal wear-and-tear and automatic adjustment of the brake pads.

There may be an indication of a leak in the brake system, however, if the fluid level drops significantly within a short time or if it drops below the "MIN" marking.

If the brake fluid level is too low, this is shown by the indicator light (1) » page 15. (1) Brake system lighting up in the instrument cluster.

Changing



First read and observe the introductory information and safety warnings 🚺 on page 214.

Brake fluid absorbs moisture. Over time it therefore absorbs moisture from the environment.

Excessive water in the brake fluid may be the cause of corrosion in the brake sys-

The water content lowers the boiling point of the brake fluid.

The brake fluid must comply with the following standards or specifications: > VW 50114:

> FMVSS 116 DOT4.

Vehicle battery

Introduction

This chapter contains information on the following subjects:

Open cover	216
Checking the battery electrolyte level	217
Charging	217
Replace	218
Disconnecting or reconnecting	218
Automatic load deactivation	218

Warning symbols on the vehicle battery

Symbol	Importance
(9)	Always wear eye protection.
	Battery acid is severely caustic. Always wear gloves and eye protection.
(S)	Keep fire, sparks, open flames and lit cigarettes well clear of the vehicle battery.
	When charging the vehicle battery, a highly explosive gas mixture is produced.
80	Keep children away from the vehicle battery.

WARNING

There is risk of injuries, poisoning, chemical burns, explosions or fire when working on the battery and on the electrical system. It is essential to comply with the general applicable safety rules as well as the warning instructions outlined below.

- Keep children away from the vehicle battery.
- Do not tilt the battery otherwise battery electrolyte may flow out of the battery vent openings. Protect your eyes by wearing safety goggles or a face shield - risk of blindness!
- Always wear protective gloves, eye and skin protection when handling the vehicle battery.
- The battery acid is strongly corrosive and must, therefore, be handled with the greatest of care.
- Corrosive fumes in the air irritate the air passages and lead to conjunctivitis and inflammation of the air passages in the lungs.
- Battery acid corrodes dental enamel and, if it comes into contact with the skin, causes deep wounds that take a long time to heal. Repeated contact with diluted acids causes skin diseases (inflammations, ulcers, slin cracks).
- If any battery acid comes into contact with your eyes, rinse the affected eye immediately with clean water for several minutes and consult a doctor immediately!
- Splashes of acid on your skin or clothes should be neutralised as soon as possible using soap suds and then rinsed with plenty of water. If you swallow battery acid, consult a doctor immediately!

WARNING

- It is prohibited to work with naked flames or lights.
- It is prohibited to smoke or carry out any activities that produce sparks.
- Never use a damaged vehicle battery risk of explosion!
- Never charge a frozen or thawed vehicle battery risk of explosion and chemical burns!
- Replace a frozen vehicle battery.
- Never jump-start vehicle batteries with insufficient acid levels risk of explosion and chemical burns.

WARNING

- When you charge a battery, hydrogen is released, and a highly explosive gas mixture is also produced. An explosion can be caused through sparkling over during unclamping or loosening of the cable plug while the ignition is on.
- Creating a bridge between the poles on the battery (e.g. with a metal object or cable) creates a short circuit risk of melting the lead bars, and risk of explosion, battery fire and acid splashes.
- Avoid creating sparks when working with cables and electrical devices.
 Strong sparking represents a risk of injury.
- Before carrying out any work on the electrical system, switch off the engine, the ignition and all of the electrical components and disconnect the negative terminal (–) on the battery.

CAUTION

Improper handling of the battery can lead to damage. We recommend having all work on the vehicle battery carried out by a specialist garage.

CAUTION

- The vehicle battery must only be disconnected if the ignition is switched off, otherwise the vehicle's electrical system (electronic components) can be damaged. When disconnecting the battery from the electrical system, first disconnect the battery's negative terminal (-), followed by the positive terminal (+).
- When connecting the battery to the electrical system, first connect the battery's positive terminal (+), followed by the negative terminal (-). Under no circumstances must the battery cables be connected incorrectly risk of a cable fire.
- Ensure that battery acid does not come into contact with the bodywork risk of damage to the paintwork.

- Do not place the battery in direct daylight in order to protect the vehicle battery housing from the effects of ultra-violet light.
- If the vehicle has not been driven for more than 3 to 4 weeks, the battery will discharge. This is because certain electrical components consume electricity (e. g. control units) also in idle state. Prevent the battery from discharging by disconnecting the battery's negative terminal (–) or continuously charging the battery with a very low charging current.
- If the vehicle is frequently used for making short trips, the vehicle battery will not have time to charge up sufficiently and may discharge.

For the sake of the environment

A vehicle battery that has been removed is a special type of hazardous waste. These must be disposed of in accordance with national legal regulations.



Note

You should replace batteries older than 5 years.

Open cover





 $\label{eq:Fig.167} \textbf{Engine compartment: Polyester cover of the vehicle battery/plastic cover of the vehicle battery} \\$



First read and observe the introductory information and safety warnings ! on page 215.

The battery is located in the engine compartment in a polyester cover 1 » Fig. 167, in a plastic cover 2 » Fig. 167 or in the left side of the boot » Fig. 89 on page 89.

When working on the battery, the edge of the polyester battery cover $\boxed{1}$ » Fig. 167 is inserted between the battery and the side wall of the battery cover.

Battery in the engine compartment

> Open the battery cover in the direction of the arrow 1 or press the interlock on the side of the battery cover in the direction of the arrow 2 » Fig. 167, fold the cover up and remove.

The battery cover is installed in reverse order.

Battery in the boot

The battery is located in the left side compartment with the symbol $\stackrel{\mbox{\tiny cd}}{=}$ » Fig. 90 on page 90.

Checking the battery electrolyte level



Fig. 168

Vehicle battery: Electrolyte level indicator



On vehicles with a vehicle battery fitted with a colour indicator, the so-called magic eye » Fig. 168, the electrolyte level can be determined by looking at the change in colour.

Air bubbles can influence the colour of the indicator. For this reason carefully knock on the indicator before carrying out the check.

- > Black colour electrolyte level is correct.
- > Colourless or light yellow colour electrolyte level too low, the battery must be replaced.

Vehicles with a START-STOP system are fitted with a battery control unit for checking the energy level for the recurring engine start.

We recommend that you have the acid level checked regularly by a specialist garage, especially in the following cases.

- > High external temperatures.
- > Longer day trips.
- > After each charge.

Winter time

The vehicle battery only has a proportion of the starting power in lower temperatures. A discharged vehicle battery may already freeze at temperatures just below 0 °C.

We therefore recommend that you have the battery checked and, if necessary, recharged by a specialist garage before the start of the winter.

CAUTION

For technical reasons, on vehicles with the description "AGM", the electrolyte level cannot be checked.

Note

The battery acid level is also checked regularly by a specialist garage as part of the inspection service.

Charging



First read and observe the introductory information and safety warnings **!!** on page 215.

A properly charged vehicle battery is essential for reliably starting the engine.

- > Switch off the ignition and all of the electrical components.
- > Only when performing a "quick-charge", disconnect both battery cables (first "negative", then "positive").
- Attach the terminal clamps of the charger to the battery terminals (red = "positive", black = "negative").
- > Plug the mains cable of the charger into the power socket and switch on the device.
- After charging has been successful: Switch off the charger and remove the mains cable from the power socket.
- > Only then disconnect the charger's terminal clamps.
- > Reconnect the cables to the battery (first "positive", then "negative").

It is not necessary to disconnect the cables of the battery if you recharge the vehicle battery using low amperages (for example from a mini-charger). **Refer to the instructions of the charger manufacturer**.

A charging current of 0.1 multiple of the total vehicle battery capacity (or lower) must be used until full charging is achieved.

It is necessary to disconnect both cables before charging the battery with high amperages, known as "rapid charging".

The vent plugs of the vehicle battery should not be opened for charging.

WARNING

"Quick-charging" the vehicle battery is **dangerous** and requires a special charger and specialist knowledge.

CAUTION

On vehicles with the START/STOP system, the pole terminal of the charger must not be connected directly to the negative terminal of the vehicle battery, but only to the engine earth » page 236, Jump-starting in vehicles with the START-STOP system.

Note

We therefore recommend that vehicle batteries be rapid charged by a specialist garage.

Replace



First read and observe the introductory information and safety warnings H on page 215.

When replacing a battery, the new vehicle battery must have the same capacity, voltage, amperage and be the same size. Suitable vehicle battery types can be purchased from a specialist garage.

We recommend having the battery replaced by a specialist garage, where the new vehicle battery will be installed properly and the original battery will be disposed of in accordance with national regulations.

Disconnecting or reconnecting



First read and observe the introductory information and safety warnings 11 on page 215.

On disconnecting and reconnecting the vehicle battery the following functions are initially deactivated or are no longer able to operate fault-free.

Operation	Operating measure
Electrical power window (operational faults)	» page 46
Panoramic sliding roof (operational faults)	» page 242
Enter the radio/navigation system code number	» User manual of the radio or » user manual of the naviga- tion system
Setting the clock	» page 13
Data in the multifunction display are deleted.	» page 25



Note

We recommend having the vehicle checked by a specialist garage in order to ensure full functionality of all electrical systems.

Automatic load deactivation



First read and observe the introductory information and safety warnings ! on page 215.

The vehicle voltage control unit automatically prevents the battery from discharging when the battery is put under high levels of strain. This manifests itself by the following.

- The idling speed is raised to allow the generator to deliver more electricity to the electrical system.
- > Where necessary, large convenience consumers such as seat heaters and rear window heaters have their power limited or are shut off completely in the event of an emergency.

CAUTION

- Despite such intervention by the vehicle electric system management, the vehicle battery may be drained. For example, when the ignition is switched on a long time with the engine turned off or the side or parking lights are turned on during longer parking.
- Consumers that are supplied via a 12-V power socket can cause the vehicle battery to discharge when the ignition is switched off.

Note

Driving comfort is not impaired by consumers being deactivated. The driver is often not aware of it having taken place.

Wheels

Tyres and wheel rims

Introduction

This chapter contains information on the following subjects:

Service life of tyres	221
New tyres	222
Unidirectional tyres	223
Tyre pressure monitor	223
Spare wheel	224
Full wheel trim	225
Wheel bolts	225
Hubcaps	225
Wheel bolts	226

WARNING

- The national legal regulations must be observed for the use of tyres.
- Observe the national legal regulations relating to the use of snow chains and the maximum vehicle speed with snow chains.

WARNING

The following instructions for the use of tyres must be observed.

- For the first 500 km, new tyres do not yet provide optimum grip, and appropriate care should therefore be taken when driving risk of accident!
- Only use radial tyres of the same type, size (rolling circumference) and tread pattern on all four wheels.
- For reasons of driving safety, do not replace tyres individually.
- Never exceed the maximum permissible *load bearing capacity* for the tyres fitted there is a risk of an accident.
- Never exceed the maximum permissible *speed* for the tyres fitted there is a risk of an accident.

WARNING (Continued)

- Incorrect wheel alignment at the front or rear impairs handling risk of accident!
- Unusual vibrations or pulling of the vehicle to one side could be a sign of tyre damage. If there is any doubt that a wheel is damaged, immediately reduce your speed and stop! If no external damage is evident, drive slowly and carefully to the nearest specialist garage to have the vehicle checked.
- Only use tyres or wheel rims that have been approved by ŠKODA for your model of vehicle. Failure to observe this instruction may impair the road safety of your vehicle risk of accident!

WARNING

Observe the following information regarding tyre damage and wear.

- Never use tyres if you do not know anything about the condition and age.
- Never drive with damaged tyres risk of accident!
- Immediately replace damaged wheel rims or tyres.
- You must have your tyres replaced with new ones at the latest when the wear indicators have been worn down.
- Worn tyres impair necessary adhesion to the road surface, particularly at high speeds on wet roads. This could lead to "aquaplaning" (uncontrolled vehicle movement "swimming" on a wet road surface).

WARNING

Observe the following information regarding the tyre inflation pressure.

- The tyre control display does not absolve the driver of the responsibility to ensure the correct tyre inflation pressure. Check the tyre inflation pressure at regular intervals.
- Insufficient or excessive inflation pressure impairs handling risk of accident!
- If the inflation pressure is too low, the tyre will have to overcome a higher rolling resistance. This will cause a significant increase in the temperature of the tyre, especially at higher speeds. This can result in tread separation and a tyre blowout.

WARNING

Observe the following information regarding the wheel bolts.

- The wheel bolts must be clean and must turn easily. Never apply grease or oil.
- The prescribed tightening torque of the wheel bolts for steel and light alloy wheels is 120 Nm.
- If the wheel bolts are tightened to an insufficient tightening torque, the rims may come loose when the car is moving risk of accident! A tightening torque which is too high can damage the bolts and threads and this can result in permanent deformation of the contact surfaces on the rim.
- If the wheel bolts are handled incorrectly, the wheel may come loose when the car is moving risk of accident!

WARNING

Observe the following information regarding the spare wheel.

- Only use the spare wheel for as long as is necessary.
- Never drive with more than one spare wheel attached.
- The snow chains cannot be used on the spare wheel.

CAUTION

- If a spare wheel is used that is not identical to the fitted tyres, the following must be observed » page 224, *Spare wheel*.
- Protect the tyres from contact with oil, grease and fuel.
- Replace lost valve caps.
- If, in the event of a puncture, it is necessary to fit a spare wheel with a tyre without a dedicated running direction or with the opposite direction of rotation, drive carefully as the optimal characteristics of the tyre are no longer applicable in this situation.

For the sake of the environment

Tyres that are insufficiently inflated increase your fuel consumption.

i Note

- We recommend that any work on the wheels or tyres be carried out by a specialist garage.
- We recommend that you use wheel rims, tyres, full wheel trims and snow chains from ŠKODA Original Accessories.

Service life of tyres

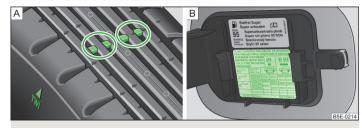


Fig. 169 Principle sketch: Tyre tread with wear indicators/open fuel filler flap with a table detailing the tyre sizes and tyre inflation pressures

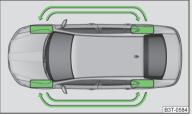


Fig. 170

Replacing wheels



First read and observe the introductory information and safety warnings 1 on page 220.

The service life of tyres depends on the inflation pressure, driving style and other circumstances. Following the advice below can extend the service life of your tyres.

Tyre pressure

Check the tyre pressure, including that of the spare wheel, at least once a month and also before setting off on a long journey.

The tyre pressures for **tyres** are shown on the inside of the fuel filler flap » Fig. 169 – \blacksquare .

The tyre pressure should be at the highest pressure specified for your vehicle at all times.

Always check the inflation pressure when the tyres are cold. Do not reduce the higher pressure of warm tyres.

With greater additional load, adjust the tyre inflation pressure accordingly.

Driving style

Fast cornering, sharp acceleration and braking increase the wear of your tyres.

Balancing wheels

The wheels of a new vehicle are balanced. When driving, however, there are a range of factors that may result in an imbalance. This may become apparent by a "vibration" in the steering.

Have the wheels rebalanced after replacing the tyres.

Wheel alignment errors

Incorrect wheel alignment at the front or rear leads to excess wear of the tyres.

Tyre damage

Drive over Kerbs and other such obstacles slowly and at right angles wherever possible in order to avoid damage to tyres and wheel trims.

We recommend checking your tyres and wheel rims for damage (punctures, cuts, splits and bulges, etc.) on a regular basis. Remove foreign bodies (e.g. small stones) from the tyre tread immediately.

Replacing wheels

If significantly greater wear is present on the front tyres, we recommend replacing the front wheels with the rear wheels as shown in the diagram » Fig. 170. You will then obtain approximately the same life for all the tyres.

We recommend that you swap the tyres every 10,000 km in order to achieve even wear on all tyres and to ensure optimal service life for the tyres.

Storing tyres

Identify disassembled tyres so that the previous direction of rotation can be maintained if the tyres are reassembled.

Always store wheels or tyres in a cool, dry place that is as dark as possible. Tyres which are not fixed to a wheel trim should be stored upright.

Wear indicators

The base of the tread of the tyres has 1.6 mm high wear indicators installed. These wear indicators are located multiple times depending on the make and are evenly spaced around the circumference of the tyre » Fig. 169 - [A]. Markings on the walls of the tyres through the letters "TWI", triangular symbols or other symbols identify the position of the wear indicators.

Tyre age

Tyres age and lose their original characteristics, even if they are not being used. Therefore, we recommend not using summer or winter tyres older than 6 or 4 years old respectively.

New tyres



First read and observe the introductory information and safety warnings I on page 220.

Only use radial tyres of the same type, size (rolling circumference) and tread pattern on one axle on all four wheels.

The tyre/wheel combinations which are approved for your vehicle are indicated in your vehicle documents.

Where possible, replace tyres by axle. Always fit the tyres with the deeper tread depth to the front wheels.

Explanation of tyre markings 205/55 R 16 94 V

What this means is:

205	Tyre width in mm » Fig. 169 on page 221 - B
55	Height/width ratio in % » Fig. 169 on page 221 - B
R	Code letter for the type of tyre - Radial » Fig. 169 on page 221 - B
16	Diameter of wheel in inches » Fig. 169 on page 221 - B
94	Load index » !
V	Speed symbol » !-

The date of manufacture is stated on the tyre wall (possibly on the *inside*). e.g. DOT ... 10 13 ..

means, for example, that the tyre was manufactured in the 10th week of 2013.

Load index

This indicates the maximum permissible load for each individual tyre.

- **91** 615 kg
- **92** 630 kg
- 93 650 kg
- **94** 670 kg

222

- **95** 690 kg
- **97** 730 kg
- **99** 775 kg

Speed symbol

This indicates the maximum permissible vehicle speed with fitted tyres in each category.

- M 130 km/h
- **o** 160 km/h
- R 170 km/h
- **S** 180 km/h
- T 190 km/h
- U 200 km/h
- H 210 km/h
- V 240 km/h
- W 270 km/h
- Y 300 km/h

CAUTION

The information about the load index and the speed symbol is listed in your vehicle documents.

Unidirectional tyres



First read and observe the introductory information and safety warnings 1 on page 220.

The direction of rotation of the tyres is marked by arrows on the wall of the tyre.

The indicated direction of rotation must be adhered to in order to ensure the optimal characteristics of these tyres.

These characteristics mainly relate to the following:

- > Increased driving stability.
- > Reduced risk of aquaplaning.
- > Reduced tyre noise and tyre wear.

Tyre pressure monitor



Fig. 171

Button for setting the tyre inflation pressure control value



First read and observe the introductory information and safety warnings ! on page 220.

System settings

After changing the tyre inflation pressure, after changing one or several wheels, the position of a wheel on the vehicle (e.g. exchanging the wheels between the axles) or when the warning light lights up while driving, a **system configuration** must be carried out as follows.

- > Inflate all of the tyres to the specified inflation pressure » page 221.
- > Switch on the ignition.
- > Press and hold the symbol button 🖔 » Fig. 171 for longer than 2 seconds.

If the warning light (1) lights up and does not go out after the system configuration, this indicates a system fault.

If the warning light flashes (1), there is a system fault.

Tyre pressure indicator

The warning light (1) lights up in any of the following cases.

- > The tyre inflation pressure is low.
- > The structure of the tyre is damaged.
- > The vehicle is loaded on one side.
- The wheels of one axle are loaded more heavily (e.g. when towing a trailer or when driving uphill or downhill).
- > Snow chains are mounted.
- > The spare wheel is mounted.
- > One wheel per axle was changed.

Wheels 223

WARNING

- When the indicator light (1) illuminates, immediately reduce the speed and avoid sudden steering and brake manoeuvres. Stop the vehicle as soon as possible and inspect the tyres and their inflation pressure.
- Under certain circumstances (e.g. sporty style of driving, wintry or unpaved roads) the warning light (1) may light up after a delay, or not at all.

CAUTION

- The tyre control display does therefore not replace the regular tyre inflation pressure control, as the system cannot detect an even loss of pressure.
- The system cannot warn in case of very rapid tyre inflation pressure loss, e.g. in case of sudden tyre damage. In this case carefully bring the vehicle to a standstill without sudden steering movements or sharp braking.
- To ensure a proper functioning of the tyre control display, it is necessary to repeat the basic setting every 10000 km or once a year.

Spare wheel



Fig. 172 Boot: Spare wheel



First read and observe the introductory information and safety warnings 1 on page 220.

The spare wheel is located in a well under the floor covering in the boot and is fixed in place with a special bolt » Fig. 172.

Take out the wheel

- > Open the boot lid.
- > Lift up the floor in the luggage compartment.
- > Remove the box with the tool kit.
- > Unscrew the bolt » Fig. 172 in a counterclockwise direction.

> Take out the wheel.

Stow the wheel

- > Stow the replaced wheel in the spare wheel well with the rim facing down.
- Screw the bolt » Fig. 172 in a clockwise direction until the wheel is safely secured.
- Place the box with the tool kit back into the spare wheel and secure it with the tape.
- > Fold back the floor in the luggage compartment.
- > Close the boot lid.

Fit a wheel in the appropriate dimensions and design as soon as possible.

If the dimensions or design of the spare wheel differ from the tyres fitted to the vehicle (e.g. winter tyres or low-profile tyres), it must only be used briefly in the event of a puncture and if an appropriately cautious style of driving is adopted » ••

Spare wheel

A warning label is displayed on the rim of the temporary spare wheel.

Please note the following if you intend to use the temporary spare wheel.

- The warning label must not be covered after installing the wheel.
- > Be particularly observant when driving.
- > The inflation pressure for the temporary spare wheel is identical to the maximum inflation pressure for the standard tyres.
- > Only use this temporary spare wheel to reach the nearest specialist garage, as it is not intended for long-term use.

WARNING

- Never use the temporary spare wheel if it is damaged.
- If the dimensions or design of the temporary spare wheel differ from the fitted tyres, never drive faster than 80 km/h (or 50 mph).
- Avoid accelerating at full throttle, sharp braking and fast cornering.

CAUTION

Observe the instructions on the warning sign of the temporary spare wheel.

Full wheel trim



First read and observe the introductory information and safety warnings H on page 220.

Pulling off

- > Hook the clamp found in the vehicle tool kit into the reinforced edge of the wheel trim.
- Push the wheel wrench through the clamp, support on the tyre and pull off the wheel trim.

Install

- > Press the wheel trim onto the wheel rim at the designated valve opening.
- Then press the trim into the wheel rim until its entire circumference locks correctly in place.

CAUTION

- Use the pressure of your hand only, do not strike the full wheel trim. Avoid heavy impacts when the trim has not yet been inserted into the wheel rim. This could cause damage to the guide and centring elements of the trim.
- When using the anti-theft wheel bolt, ensure that it is in the hole in the valve area » page 231, Securing wheels against theft.
- If wheel trims are retrofitted it must be ensured that an adequate flow of air is assured to cool the brake system.

Wheel bolts



Fig. 173

Remove the cap



First read and observe the introductory information and safety warnings ! on page 220.

Pulling off

- > Push the extraction pliers » page 228 sufficiently far onto the cap until the inner catches of the pliers are positioned at the collar of the cap » Fig. 173.
- > Remove the cap.

Install

> Push the caps onto the wheel bolts up to the stop.

The wheel bolt caps are housed in a plastic box in the spare wheel or in the storage space for the spare wheel.

Hubcaps

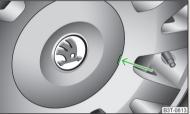


Fig. 174
Pull off the wheel trim cap on light alloy wheels



First read and observe the introductory information and safety warnings H on page 220.

Pulling off

Carefully remove the wheel trim cap using the wire clamp from the vehicle tool kit » Fig. 174.

Wheel bolts



First read and observe the introductory information and safety warnings H on page 220.

Wheels and **wheel bolts** are matched to each other in terms of design. Each time you fit other wheels rims, e.g. light alloy wheel rims or wheels with winter tyres, you must also use the matching wheel bolts with the correct length and dome shape. The right fastening of wheels depends on this.

Winter operation

Introduction

This chapter contains information on the following subjects:

Winter tyres	226
Snow chains	 226

Winter tyres



First read and observe the introductory information given on page 226.

Fitting winter tyres will significantly improve the handling of your vehicle when driving in wintry road conditions. Summer tyres have less grip on ice, snow and at temperatures below 7 °C. This is especially true of vehicles fitted with wide tyres or high-speed tyres.

In order to achieve the best possible handling properties, winter tyres must be fitted on all 4 wheels, the minimum tread depth must be 4 mm and tyres must be no older than 4 years.

Winter tyres of a lower speed category can be used provided that the permissible maximum speed of these tyres is not exceeded even if the possible maximum speed of the vehicle is higher.

The speed limit for winter tyres can be set in the MAXI DOT display in the menu item ${\bf Winter\ tyres\ }$ » page 29.



For the sake of the environment

Fit the summer tyres on again in good time as they provide better handling properties, a shorter braking distance, less tyre noise, and reduced tyre wear on roads which are free of snow and ice as well as at temperatures above 7 °C. The fuel consumption is also lower.

Snow chains



First read and observe the introductory information given on page 226.

When driving in wintry road conditions, snow chains improve not only traction, but also the braking performance.

Snow chains must only be mounted on the front wheels.

For technical reasons, it is only permissible to fit snow chains with the following wheel/tyre combinations.

Wheel size	Depth (D)	Tyre size
7J x 16 ^{a)}	45 mm	205/55
6J x 16 ^{a)}	50 mm	205/55
6J x 17	45 mm	205/50

a) Not valid for vehicles with 3.6 I/191 kW FSI engine.

Only use ${\bf fine\mbox{-}link}$ snow chains. They must not project more than 9 mm - including the chain lock.



CAUTION

- The chains must be removed when driving on roads which are free of snow. They adversely affect the handling of your vehicle, damage the tyres and are rapidly destroyed.
- Remove the **full wheel trims** before installing the snow chains.

Do-it-yourself

Emergency equipment and self-help

Emergency equipment

~~		
	Introd	luction

This chapter contains information on the following subjects:

First aid kit and warning triangle	227
fire extinguisher	228
Vehicle tool kit	228

First aid kit and warning triangle



Fig. 175 Stowage compartment for the first aid kit: Superb / Superb Combi



Fig. 176

Placing of the warning triangle

First read and observe the introductory information given on page 227.

First-aid box

The compartment for stowing the first-aid box is located in the right of the boot \gg Fig. 175.

Warning triangle

The warning triangle can be attached to the rear wall trim panel with rubber straps » Fig. 176.

WARNING

The first-aid kit and warning triangle must always be secured safely so that they do not come loose when making an emergency braking or in a vehicle collision which could cause injuries to occupants.

Note

- Pay attention to the expiration date of the first-aid kit.
- We recommend using a first-aid kit from ŠKODA Original Accessories, which are available from a ŠKODA Partner.

fire extinguisher



Fig. 177 **Fire extinguisher**



First read and observe the introductory information given on page 227.

The fire extinguisher is attached by two straps in a holder under the driver seat.

Removing / attaching

- > Loosen the two straps by pulling the buckles in the direction of the arrow » Fig. 177.
- > Remove the fire extinguisher.

Installation is carried out in the reverse order.

Please read carefully the instructions which are attached to the fire extinguisher.

The fire extinguisher must be checked by an authorised person once a year. The national legal requirements must be observed.

WARNING

The fire extinguisher must always be secured safely so that they do not come loose when making an emergency braking or in a vehicle collision which could cause injuries to occupants.

i Note

- The fire extinguisher must comply with national legal requirements.
- Pay attention to the expiration date of the fire extinguisher. Proper functioning of the fire extinguisher is not assured once it has passed its expiry date.
- The fire extinguisher is part of the scope of delivery in certain countries only.

Vehicle tool kit

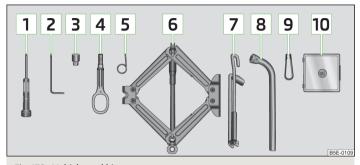


Fig. 178 Vehicle tool kit



First read and observe the introductory information given on page 227.

The vehicle tool kit and the lifting jack are housed in a plastic box in the spare wheel or in the storage space for the spare wheel. There is also space here for the removable ball rod for the trailer towing device. The box is attached with a strap on the spare wheel.

The components of the vehicle tool kit (if included in the vehicle) » Fig. 178.

- Screwdriver
- 2 Key for removing and installing the tail light
- 3 Adapter for anti-theft wheel bolts
- 4 Towing eye
- 5 Clamps for removing the wheel trims
- 6 Car jack
- 7 Crank for the jack
- 8 Wheel wrench
- 9 Extraction pliers for wheel bolt caps
- 10 Replacement bulb set

Screw the car jack back into its initial position after use in order to store it back in the box with the vehicle tool kit.

WARNING

- The factory-supplied lifting jack is only intended for your model of vehicle. Under no circumstances use it to lift heavier vehicles or other loads risk of injury!
- Ensure that the vehicle tool kit is safely secured in the boot.
- Ensure that the box is always secured with the strap.

Changing a wheel

Introduction

This chapter contains information on the following subjects:

Preliminary work	229
Changing a wheel	230
Follow-up work	230
Loosening/tightening wheel bolts	230
Raising the vehicle	231
Securing wheels against theft	231

WARNING

- If you are in flowing traffic, switch on the hazard warning light system and set up the warning triangle at the prescribed distance! The national legal requirements must be observed.
- Park the vehicle as far away as possible from the flow of traffic. Park on as flat and firm a surface as possible.
- The following instructions must be followed if the vehicle is subsequently fitted with tyres or rims that differ from the factory-fitted ones » page 222, New tyres.

WARNING

Observe the following instructions for lifting the vehicle.

- If the wheel has to be changed on a slope, first of all block the opposite wheel with a stone or similar object to prevent the vehicle from unexpectedly rolling away.
- Secure the base plate of the lifting jack with suitable means to prevent possible moving. A soft and slippery ground under the base plate may move the lifting jack, causing the vehicle to fall down. It is therefore always necessary to place the lifting jack on a solid surface or use a wide and stable base. Use a non-slip base (e.g. a rubber foot mat) if the **surface is smooth**, such as cobbled stones, tiled floor, etc.
- Only attach the lifting jack to the attachment points provided for this purpose.
- Always raise the vehicle with the doors closed.
- Never position any body parts, such as arms or legs under the vehicle, while the vehicle is raised with a lifting jack.
- Never start the engine when the vehicle is raised risk of injury.

CAUTION

- The prescribed tightening torque of the wheel bolts for steel and light alloy wheels is 120 Nm.
- If the wheel bolts are fastened too tightly, this can cause damage to the antitheft wheel bolt or the adapter.

Note

The national legal requirements must be observed when changing a wheel.

Preliminary work



First read and observe the introductory information and safety warnings ! on page 229.

Always change a wheel on a level surface as far as possible.

The following steps must be carried out before actually changing the wheel:

> Let all of the occupants get out. While changing a tyre, the occupants of the vehicle should not stand on the road (instead they should remain behind a crash barrier).

- > Switch off the engine.
- > Move the gearshift lever into **Neutral** or move the selector lever for the automatic gearbox **into position P**.
- > Firmly apply the handbrake.
- > If a trailer is connected, uncouple it.
- > Remove the vehicle tool kit » page 228 and the spare wheel » page 224 from the boot.

Changing a wheel



First read and observe the introductory information and safety warnings 1 on page 229.

- > Remove the full wheel trim » page 225 or caps » page 225.
- First of all slacken the anti-theft wheel bolt and then the other wheel bolts » page 230.
- > Jack up the vehicle until the wheel that needs changing is clear of the ground » page 231.
- > Unscrew the wheel bolts and place them on a clean surface (cloth, paper, etc.).
- > Remove the wheel carefully.
- > Attach the spare wheel and slightly screw on the wheel bolts.
- > Lower the vehicle.
- Alternately tighten wheel bolts opposite (diagonally) with the wheel wrench. Tighten the anti-theft wheel bolt last » page 230.
- > Replace the wheel trim or the caps.

Note

- All bolts must be clean and must turn easily.
- Under no circumstances grease or oil the wheel bolts!
- When fitting unidirectional tyres, ensure that the direction of rotation is correct » page 220.

Follow-up work



First read and observe the introductory information and safety warnings 1 on page 229.

The following steps must also be performed after changing the wheel.

- > Stow and attach the replaced wheel in the spare wheel well using a special bolt » page 224.
- > Stow the tool kit in the space provided and secure using the band.
- **> Check** the **tyre pressure** on the installed spare wheel as soon as possible.
- Have the tightening torque of the wheel bolts checked with a torque wrench as soon as possible.
- > Replace the damaged wheel or consult a specialist garage about repair options.



Note

- If it is determined that the wheel bolts are corroded and difficult to turn when changing the wheel, the bolts must be replaced before checking the tightening torque.
- Drive cautiously and only at a moderate speed until the tightening torque has been checked.

Loosening/tightening wheel bolts



Fig. 179
Changing a wheel: Loosening
the wheel bolts



First read and observe the introductory information and safety warnings ! on page 229.

Loosening

- > Push the wheel wrench onto the wheel bolt up to the stop¹⁾.
- > Grasp the end of the wrench and turn the bolt about **one** turn in the direction of the arrow » Fig. 179.

Tightening

> Push the wheel wrench onto the wheel bolt up to the stop¹⁾.

 $^{^{1)}}$ Use the appropriate adapter for undoing and tightening the anti-theft wheel bolts » page 231.

> Grasp the end of the wrench and turn the bolt against the direction of the arrow » Fig. 179 until it is tight.

WARNING

Undo the wheel bolts only a little (about one turn) provided that the vehicle has not yet been jacked up. Otherwise the wheel could come off and fall down – risk of injury!

Note

If it proves difficult to undo the bolts, carefully apply pressure to the end of the wrench with your **foodt**. Keep hold of the vehicle when doing so, and make sure you keep your footing.

Raising the vehicle

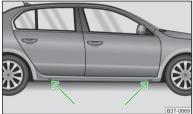


Fig. 180 Jacking points for positioning lifting jack

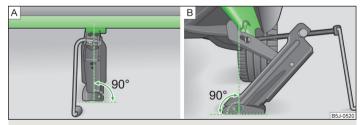


Fig. 181 Attach lifting jack



First read and observe the introductory information and safety warnings 1. on page 229.

Position the car jack below the jacking point that is closest to the faulty wheel » Fig. 180. The jacking point is located directly below the engraving in the lower sill.

- > Insert the crank into the mount on the car jack » page 228.
- > Position the lifting jack below the jacking point with the crank and move it up until its claw is positioned below the vertical web of the lower sill.
- > Align the lifting jack so that its claw grasps the web » Fig. 181 B.
- Support the base plate of the jack with its entire surface resting on level ground and ensure that the lever is located in a vertical position to the area where the claw grasps the web » Fig. 181 - A.
- > Continue turning up the jack until the wheel is just about lifted off the ground.

WARNING

- Only raise the vehicle at the attachment points.
- Choose a flat and firm surface for jacking the vehicle.

Securing wheels against theft

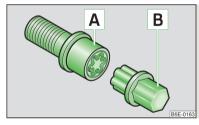


Fig. 182
Principle sketch: Anti-theft wheel bolt with adapter



First read and observe the introductory information and safety warnings ! on page 229.

The anti-theft wheel bolts can only be removed/tightened with the aid of the adapter » page 228, Vehicle tool kit.

> Pry the cover off the anti-theft wheel bolt.

- > Insert the adapter B » Fig. 182 with its toothed side fully into the inner toothing of the safety wheel bolt A until the stop so that only the outer hexagon is iutting out.
- > Push the wheel wrench onto the adapter B up to the stop.
- > Loosen or tighten the wheel bolt » page 230.
- After removing the adapter replace the cap on the anti-theft wheel bolt.
- > Have the tightening torque checked with a torque wrench as soon as possible.

Note

- Make a note of the code number hammered into the rear side of the adapter or the rear side of the anti-theft wheel bolt. This number can be used to purchase a replacement adapter from ŠKODA Original Parts if necessary.
- We recommend that you always carry the adapter for the wheel bolts with you in the vehicle. It should be stowed in the vehicle tool kit.
- The anti-theft wheel bolt set and adapter can be purchased from a ŠKODA Partner.

Tyre repair

Introduction

This chapter contains information on the following subjects:

Breakdown kit	233
Preparations for using the breakdown kit	233
Sealing and inflating the tyre	233
Check after 10 minutes' driving	234

Use the breakdown kit to reliably repair tyre damage caused by foreign bodies or a puncture with diameters up to approx. 4 mm.

A repair made using the breakdown kit is **never intended to replace** a permanent repair on the tyre. Its purpose is to get you to the nearest specialist garage.

The wheel must not be removed during repair.

Do not remove foreign bodies, e.g. screws or nails, from the tyre.

The breakdown kit must not be used under the following circumstances.

- > There is damage to the rim.
- > The outside temperature is less than -20 °C.
- > The tears or punctures are greater than 4 mm in size.

- > There is damage to the tyre wall.
- > Driving with very low tyre pressure or with a completely flat tyre.
- > If the use-by-date (see inflation bottle) has passed.

WARNING

- A tyre filled with sealant has the same driving characteristics as a standard
- Do not travel faster than 80 km/h.
- Avoid accelerating at full throttle, sharp braking and fast cornering.
- Check the tyre pressure after driving for 10 minutes.
- The sealant is hazardous to heath. Remove immediately if it comes into contact with the skin.

For the sake of the environment

Used sealant or sealant whose expiry date has passed must be disposed of in accordance with environmental protection regulations.

Note

- Observe the manufacturer's usage instructions for the breakdown kit.
- A new bottle of sealant can be purchased from ŠKODA Original Parts.
- Immediately replace the tyre that was repaired using the breakdown kit, or consult a specialist garage about repair options.

Breakdown kit

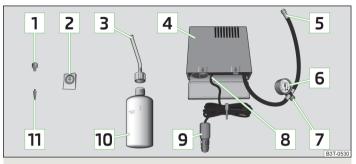


Fig. 183 Components of the breakdown kit

First read and observe the introductory information and safety warnings 1 on page 232.

The kit is located in a box under the floor covering in the luggage compartment.

Components of the breakdown kit

- 1 Valve remover
- 2 Sticker with speed designation "max, 80 km/h"/"max, 50 mph"
- 3 Inflation hose with plug
- 4 Air compressor
- 5 Tyre inflation hose
- 6 Tyre inflation pressure indicator
- 7 Air release valve
- ON and OFF switch
- 9 12 volt cable connector
- 10 Tyre inflator bottle with sealing agent
- 11 Replacement valve core

The valve remover $\boxed{1}$ has a slot at its lower end which fits into the valve core. This is the only way in which you can remove and re-install the valve core from the tyre valve. The same also applies to the replacement valve core $\boxed{1}$.

Preparations for using the breakdown kit



First read and observe the introductory information and safety warnings ! on page 232.

The following preparatory work must be carried out before using the breakdown kit.

- Park the vehicle as far away as possible from the flow of traffic. Park on as flat and firm a surface as possible.
- If you are in flowing traffic, switch on the hazard warning light system and set up the warning triangle at the prescribed distance! The national legal requirements must be observed.
- > Let all of the occupants get out. While changing a tyre, the occupants of the vehicle should not stand on the road (instead they should remain behind a crash barrier).
- > Switch off the engine and move the gearshift lever into **Neutral** or move the selector lever on the automatic gearbox **into position P**.
- > Firmly apply the handbrake.
- > Check that you can carry out the repairs with the breakdown kit » page 232.
- > If a trailer is connected, uncouple it.
- > Remove the breakdown kit from the boot.
- > Stick the sticker 2 » Fig. 183 on page 233 on the dash panel in view of the driver
- > Do not remove the foreign body, e.g. screw or nail, from the tyre.
- > Unscrew the valve cap.
- > Use the valve remover 1 to unscrew the valve core and place it on a clean surface (rag, paper, etc.).

Sealing and inflating the tyre



First read and observe the introductory information and safety warnings 1 on page 232.

Sealing

- > Forcefully shake the tyre inflator bottle 10 » Fig. 183 on page 233 several times.
- > Firmly screw the inflation hose 3 onto the tyre inflator bottle 10 in a clockwise direction. The film on the cap is pierced automatically.
- > Remove the plug from the inflation hose 3 and plug the open end fully onto the tyre valve.
- > Hold the bottle 10 with the bottom facing upwards and fill all of the sealing agent from the tyre inflator bottle into the tyre.

- > Remove the empty tyre inflator bottle from the valve.
- Screw the valve core back into the tyre valve using the valve remover 1.

Inflating

- > Screw the tyre inflation hose 5 » Fig. 183 on page 233 of the air compressor firmly onto the tyre valve.
- > Check that the air release valve 7 is closed.
- > Start the engine and run it in idle.
- > Plug the connector 9 into 12 Volt socket » page 77, Cigarette lighter.
- > Switch on the air compressor with the ON and OFF switch 8.
- Allow the air compressor to run until a pressure of 2.0 2.5 bar is achieved. Maximum run time of 8 minutes » !!
- > Switch off the air compressor.
- > If you cannot reach an air pressure of 2.0 2.5 bar, unscrew the tyre inflation hose 5 from the tyre valve.
- > Drive the vehicle 10 metres forwards or backwards to allow the sealing agent to "distribute" in the tyre.
- > Firmly screw the tyre inflation hose 5 back onto the tyre valve and repeat the inflation process.
- > If you cannot reach the required tyre inflation pressure here either, this means the tyre has sustained too much damage. You cannot seal with tyre with the breakdown kit » ...
- > Switch off the air compressor.
- > Remove the tyre inflation hose 5 from the tyre valve.

Once a tyre inflation pressure of 2.0 - 2.5 bar is reached, continue the journey at a maximum speed of 80 km/h (50 mph).

Check the tyre inflation pressure after driving for 10 minutes » page 234.

WARNING

- The tyre inflation hose and air compressor may get hot as the tyre is being inflated - there is a risk of injury.
- Do not place the hot tyre inflation hose or hot air compressor on flammable materials - there is a risk of fire.
- If you cannot inflate the tyre to at least 2.0 bar, this means the damage sustained was too serious. The sealing agent cannot be used to seal the tyre. Do not drive the vehicle. Seek help from a specialist garage.

CAUTION

Switch off the air compressor after running 8 minutes at the latest - there is a risk of overheating. Allow the air compressor to cool a few minutes before switching it on again.

Check after 10 minutes' driving



First read and observe the introductory information and safety warnings III on page 232.

Check the tyre inflation pressure after driving for 10 minutes!

If the tyre pressure is 1.3 bar or less

> Do not drive the vehicle! You cannot properly seal with tyre with the breakdown kit.

If the tyre pressure is 1.3 bar or more

- > Adjust the tyre inflation pressure to the correct value (see inside of fuel filler
- Continue driving carefully to the nearest specialist garage at a maximum speed of 80 km/h (50 mph).

Jump-starting

Introduction

This chapter contains information on the following subjects:

Jump-starting using the battery from another vehicle	235
Jump-starting in vehicles with the START-STOP system	236
Jump-starting vehicles with the vehicle battery in the boo	ot236 >

WARNING

- A discharged vehicle battery may already freeze at temperatures just below 0 °C. If the battery is frozen, do not jump start with the battery of another vehicle there is a risk of explosion.
- Pay attention to the warning instructions relating to working in the engine compartment » page 206.
- The non-insulated parts of the terminal clamps must never touch each other there is a risk of short circuit.
- The jump-start cable connected to the positive terminal of the battery must not come into contact with electrically conducting parts of the vehicle there is a risk of short circuit.
- Do not clamp the jump-start cable to the negative terminal of the discharged battery. There is the risk of detonating gas seeping out the battery being ignited by the strong spark which results from the engine being started.
- Route the jump-start cables so that they cannot be caught by any rotating parts in the engine compartment.
- Do not bend over the battery there is a risk of caustic burns.
- The vent screws of the battery cells must be tightened firmly.
- Keep any sources of ignition (naked flame, lit cigarettes, etc.) away from the battery there is a risk of explosion.
- Never jump-start vehicle batteries with insufficient acid levels risk of explosion and chemical burns.

CAUTION

- There must not be any contact between the two vehicles otherwise current may flow as soon as the negative terminals are connected.
- \blacksquare The discharged battery must be properly connected to the system of the vehicle.
- We recommend you buy jump-start cables from a car battery specialist.

Jump-starting using the battery from another vehicle

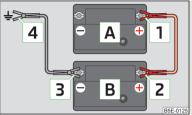


Fig. 184

Jump-starting: A – flat battery, B

- battery providing current



First read and observe the introductory information and safety warnings ! on page 234.

The battery of another vehicle can be used to jump-start your vehicle if the engine will not start because the battery is flat. Jump-start cables are required for this purpose.

The jump-start cables must be attached in the following sequence.

- > Attach clamp 1 to the positive terminal of the discharged battery A » Fig. 184.
- > Attach clamp 2 to the positive terminal of the battery supplying power B
- > Attach clamp 3 to the negative terminal of the battery supplying power B.
- > Attach the clamp 4 to a solid metal component firmly connected to the engine block or to the engine block itself.

Starting engine

- > Start the engine on the vehicle providing the power and allow it to idle.
- > Start the engine of the vehicle with the discharged battery.
- If the engine does not start, halt the attempt to start the engine after 10 seconds and wait for 30 seconds before repeating the process.
- > Disconnect the cables in exactly the reverse order to the one described above.

Both batteries must have a rated voltage of 12 V. The **capacity** (Ah) of the battery supplying the power must not be significantly less than the capacity of the discharged battery in your vehicle.

Jump-start cables

Only use jump-start cables which have an adequately large cross-section and insulated terminal clamps. Observe the instructions of the jumper lead manufacturer.

Positive cable - colour coding in the majority of cases is red.

Negative cable - colour coding in the majority of cases is black.

Jump-starting in vehicles with the START-STOP system



Fia. 185 Engine earth: START-STOP sys-



First read and observe the introductory information and safety warnings II on page 234.

On vehicles with the START-STOP system, the jump-start cable of the charger must never be connected directly to the negative pole of the vehicle battery, but only to the engine earth » Fig. 185.

Jump-starting vehicles with the vehicle battery in the boot

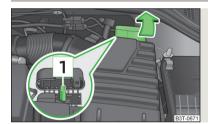


Fig. 186 Detail of the engine compartment: Jump-starting point



First read and observe the introductory information and safety warnings II on page 234.

On vehicles with the vehicle battery in the boot, the positive terminal of the battery supplying the power can only be connected to the jump-starting point in the engine compartment of the vehicle being started by means of a jump-start cable » Fig. 186!

- > Open the protective cap of the jump-starting point in the direction of the ar-
- > Connect the positive terminal of the battery supplying the power with the jumpstarting point.
- Attach the negative terminal of the battery supplying the power to a solid metal part firmly connected to the engine block or to the engine block itself.
- > Start the engine.
- After starting the engine, close the protective cap of the jump-starting point.

Towing the vehicle

Introduction

This chapter contains information on the following subjects:

Front towing eye	237
Rear towing eye	238
Vehicles with a tow hitch	238

Vehicles with manual transmission may be towed in with a tow bar or a tow rope or with the front or rear wheels raised.

Vehicles with automatic transmission may be towed in with a tow bar or a tow rope or with the front wheels raised. If the vehicle is raised at rear, the automatic gearbox is damaged!

A **tow bar** is the safest way of towing a vehicle and also minimises any shocks. Only use a **tow rope** if a suitable tow bar is not available.

When towing, the following guidelines must be observed.

Driver of the tow vehicle

- > Release the clutch particularly gently when starting off or depress the accelerator particularly gently if the vehicle is fitted with an automatic gearbox.
- > On vehicles with a manual transmission, only push down on the accelerator pedal once the rope is taught.

The maximum towing speed is **50 km/h**.

Driver of the towed vehicle

- Switch on the ignition so that the steering wheel is not locked and so that the turn signal lights, horn, windscreen wipers and windscreen washer system can be used.
- > Take the vehicle out of gear or move the selector lever into position N if the vehicle is fitted with an automatic gearbox.

Please note that the brake servo unit and power steering only operate if the engine is running. If the engine is not running, significantly more physical force is required to degrees the brake pedal and steer the vehicle.

If using a tow rope, ensure that it is always kept taught.

1

CAUTION

- Do not tow start the engine there is a risk of damaging the engine and the catalytic converter. The battery from another vehicle can be used as a jump-start aid » page 234, Jump-starting.
- If the gearbox no longer contains any oil because of a defect, your vehicle must only be towed with the driven wheels raised clear of the ground or on a special breakdown vehicle or trailer.
- The vehicle must be transported on a special breakdown vehicle or trailer if it is not possible to tow in the vehicle in the way described or if the towing distance is greater than 50 km.
- To protect both vehicles when tow-starting or towing, the tow rope should be elastic. Thus one should only use plastic fibre rope or a rope made out of a similarly elastic material.
- While towing, take care to avoid impermissibly high tensile forces or jerky loads. There is always a risk of excessive stresses and damage resulting at the points to which you attach the tow rope or tow bar when you attempt to tow a vehicle which is not standing on a paved road.
- Attach the tow rope or the tow bar to the towing eyes » page 237, Front towing eye or » page 238, Rear towing eye to the detachable ball head of the towing equipment » page 162.



Note

- We recommend using a tow rope from ŠKODA Original Accessories, which is available from a ŠKODA Partner.
- Towing another vehicle requires a certain amount of practice. Both drivers should be familiar with the particular points about towing a vehicle. Unskilled drivers should not attempt to tow in another vehicle or to be towed in.

- When towing, respect the national legal provisions, especially those which relate to the identification of the towing vehicle and the vehicle being towed.
- The tow rope must not be twisted as it may in certain circumstances result in the front towing eye being unscrewed out of your vehicle.

Front towing eye

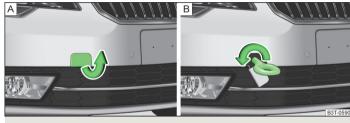


Fig. 187 Front bumper: Removing the cap/installing the towing eye



First read and observe the introductory information and safety warnings ! on page 236.

- > Remove the cap from the front bumper » Fig. 187 A.
- > Screw in the towing eye by turning to the left up to the stop » Fig. 187 🖪 and tighten as much as possible. For tightening purposes, we recommend, for example, using the wheel wrench, towing eye from another vehicle or a similar object that can be pushed through the eye.
- After unscrewing the towing eye, put the cap on and press into place. The cap must engage firmly.

- CA

CAUTION

The towing eye must always be screwed in fully and firmly tightened, otherwise the towing eye can tear when towing in or tow-starting.

Rear towing eye

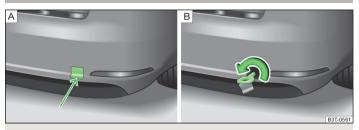


Fig. 188 Rear bumper: Removing the cap/installing the towing eye



First read and observe the introductory information and safety warnings ! on page 236.

- > Press onto the bottom part of the cap in the rear bumper » Fig. 188 A and remove it.
- > Screw in the towing eye by turning to the left up to the stop » Fig. 188 ■ and tighten as much as possible. For tightening purposes, we recommend, for example, using the wheel wrench, towing eye from another vehicle or a similar object that can be pushed through the eye.
- After unscrewing the towing eye, put the cap on and press into place. The cap must engage firmly.

On vehicles with a factory-fitted towing device, there is no mount for the screw-in towing eye behind the cap » page 238, *Vehicles with a tow hitch*.

CAUTION

The towing eye must always be screwed in fully and firmly tightened, otherwise the towing eye can tear when towing in or tow-starting.

Vehicles with a tow hitch



First read and observe the introductory information and safety warnings ! on page 236.

On vehicles with a factory-fitted towing device, there is no mount for the screwin towing eye behind the cap.

Use the built-in detachable ball rod for towing » page 162, Towing device.

Towing the vehicle using the towing device is a viable alternative solution to using the towing eye.

If the towing device is removed completely, it must be replaced with the standard reinforcement of the rear bumper which is part of the mount for the towing eye.

If this procedure is not observed, the vehicle may not meet the national legal provisions.

1

CAUTION

The detachable ball rod and/or the vehicle can be damaged if an unsuitable tow bar is used.



Note

The detachable ball rod must always be in the vehicle so that it can be used for towing, if necessary.

Radio remote control

Introduction

This chapter contains information on the following subjects:

Replacing the battery in the remote control key	_ 239
Synchronising the remote control	_ 239
Replace the battery in the remote control of the auxiliary heater (parking	
heater)	239

CAUTION

- The replacement battery must have the same specification as the original battery.
- When replacing the battery, pay attention to the correct polarity.

8

For the sake of the environment

Dispose of the used battery in accordance with national legal provisions.

Replacing the battery in the remote control key



Fig. 189 Remove cover/take out battery



First read and observe the introductory information and safety warnings I on page 238.

The battery is located under a cover A » Fig. 189.

We recommend having the key batteries replaced by a specialist garage. However, if you would like to replace the discharged battery yourself proceed as follows.

- > Flip out the key.
- > Press off the battery cover with your thumb or using a flat screwdriver in the region of the arrows 1
- > Remove the discharged battery from the key by pressing the battery down in the region of the arrow 2.
- > Insert the new battery.
- > Place the battery cover on the key and press it down until it clicks into place.



Note

- The key has to be synchronised if the vehicle cannot be unlocked or locked with the remote control key after replacing the battery » page 239.
- If a key has an affixed decorative cover, this will be destroyed when the battery is replaced. A replacement cover can be purchased from a ŠKODA Partner.

Synchronising the remote control



First read and observe the introductory information and safety warnings !! on page 238.

If the vehicle does not unlock when pressing the remote control, the key may not be synchronised. This can occur when the buttons on the remote control key are actuated a number of times outside of the operative range of the equipment or the battery in the remote control key was replaced.

Synchronise the key as follows.

- > Press any button on the remote control key.
- > Pressing of the button means that the door will unlock with the key within 1 mi-

Replace the battery in the remote control of the auxiliary heater (parking heater)



Fig. 190 Radio remote control: Battery cover



First read and observe the introductory information and safety warnings ! on page 238.

The battery is located under a cover on the back of the radio remote control » Fig. 190.

- > Insert a flat, blunt object, such as a coin, into the gap of the battery cover.
- Turn the cover against the direction of the arrow up to the mark to open the cover.
- > Replace the battery.
- > Return the battery cover.
- Turn the cover in the direction of the arrow up to the initial marking, engage.

Emergency unlocking/locking

Introduction

This chapter contains information on the following subjects:

Unlocking/locking the driver's door	240
Locking a door	240
Unlocking the tailgate	241
Selector lever-emergency unlocking	241

Unlocking/locking the driver's door



Fig. 191 Handle on the driver's door: covered locking cylinder




First read and observe the introductory information given on page 240.

- > Pull on the handle.
- > Push the vehicle key into the recess on the bottom side of the cover in the region of the arrow and fold it upwards » Fig. 191.
- Insert the vehicle key (the buttons facing upward) into the locking cylinder and lock/unlock the vehicle.

CAUTION

Make sure you do not damage the paint when performing an emergency locking/ unlocking.

Locking a door

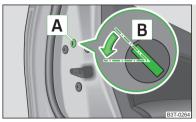

Fia. 192 Left rear door: Emergency lock-



First read and observe the introductory information given on page 240.

An emergency locking mechanism is located on the face side of the doors which have no locking cylinder, it is only visible after opening the door.

- > Remove the panel A » Fig. 192.
- Insert the key into the slot B and turn it into the horizontal position in the direction of the arrow (mirror-inverted on the right doors).
- > Replace the cover.

After closing the door, it cannot be opened from the outside. The door is unlocked by pulling on the door opening lever and is then opened from the outside.

Unlocking the tailgate

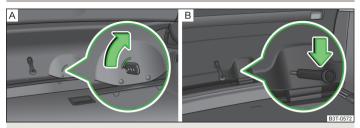


Fig. 193 Emergency unlocking: Superb / Superb Combi



First read and observe the introductory information given on page 240.

Unlocking (Superb)

- > Fold the rear seat backrest forward » page 73, Seat backrests.
- > Insert the vehicle key into the slot in the trim panel as far as the stop » Fig. 193 A.
- > Unlock the lid by moving it in the direction of the arrow.
- > Open the boot lid.

Unlocking (Superb Combi)

- > Fold the rear seat backrest forward » page 73, Seat backrests.
- Insert a screwdriver or similar tool into the opening of the trim as far as it goes » Fig. 193 - B.
- > Unlock the lid by moving it in the direction of the arrow.
- > Open the boot lid.

Selector lever-emergency unlocking

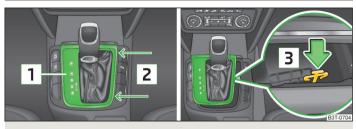


Fig. 194 Selector lever-emergency unlocking



First read and observe the introductory information given on page 240.

- > Firmly apply the handbrake.
- > Grasp the cover 1 in the area of arrow 2 » Fig. 194 and carefully pull upwards.
- > Also unlock the cover on the other side.
- > Use a finger to press the yellow plastic part in the direction of the arrow 3.
- > At the same time, press the locking button in the selector lever and move the selector lever to position N.

If the selector lever is moved again to position P, it is once again blocked.

Emergency operation of the sliding/tilting roof

Introduction

This chapter contains information on the following subjects:

Operation	242
Activation after un-clamping and re-clamping the battery	242

Operation

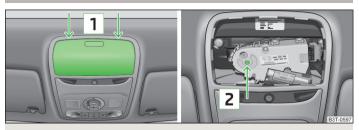


Fig. 195 Point for positioning screwdriver/opening for positioning the key



First read and observe the introductory information given on page 241.

The sliding/tilting roof can be closed or opened manually if a fault occurs. The emergency operation of the sliding/tilting roof is located underneath the glasses storage box $\boxed{1}$ » page 80, *Glasses storage box*.

- > Open the glasses storage box.
- Carefully insert an approximately 5 mm wide screwdriver into the slot in the positions shown by the arrows 1 » Fig. 195.
- Carefully fold the glasses storage box downwards by gently pressing down and turning the screwdriver.
- Insert an Allen key, SW 4, up to the stop into the opening 2 and close or open the sliding/tilting roof.
- Reinstall the glasses storage box by first inserting the plastic plugs and then pushing the entire part upwards.

Have the fault on the sliding tilting roof rectified as soon as possible by a specialist garage.

F N

Note

- It is necessary after each emergency operation to move the sliding/tilting roof into the basic position.¹⁾ This is why the rotary switch must be set to the switch position A » Fig. 27 on page 47 and pressed forward for about 10 seconds.
- After each emergency operation, it is necessary to activate the roof?) » page 242.

Activation after un-clamping and re-clamping the battery



First read and observe the introductory information given on page 241.

The panoramic sliding/tilting roof (referred to form now on as just the sliding/tiling roof) and the sun screen must be activated after disconnecting and reconnecting the battery.

To activate the sliding/tilting roof, press the notch on the control dial downwards and forwards for approx. 10 seconds.

To activate the sun screen, press and hold the switch $\mbox{\ \, \ \, G}$ » Fig. 29 on page 49 for approx. 10 seconds.

If the sliding/tilting roof or sun screen is not fully closed or pushed shut when disconnecting and reconnecting the battery, they must first be closed or pushed shut » page 49, *Opening/closing the sun screen* » page 49, *Operation*. Only then is it possible to perform the activation.

Replacing windscreen wiper blades

Introduction

This chapter contains information on the following subjects:

Replacing the windscreen wiper blades	243
Replacing the rear window wiper blade	243


 $^{^{1)}\,\,}$ Applies to emergency operation of the Superb sliding/tilting roof.

²⁾ Applies to emergency operation of the Superb Combi sliding/tilting roof.

WARNING

Replace the windscreen wiper blades once or twice a year for safety reasons. These can be purchased from a ŠKODA Partner.

Replacing the windscreen wiper blades

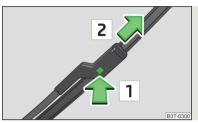

Fia. 196 Windscreen wiper blade



First read and observe the introductory information and safety warnings II on page 242.

Before replacing the windscreen wiper blade, put the windscreen wiper arms into the service position.

Service position for changing wiper blades

- > Closing the bonnet.
- > Switch the ignition off and on again.
- > Within 10 seconds, press the lever in position 4 and keep it held for around 2 seconds » Fig. 44 on page 62.

The windscreen wiper arms move into the service position.

Removing the wiper blade


- > Lift the windscreen wiper arm away from the windscreen.
- > Hold the upper part of the wiper arm and unlock the securing mechanism 1 » Fig. 196.
- > Remove the wiper blade in the direction of the arrow 2.

Attaching the wiper blade

- > Push the windscreen wiper blade until the stop and it locks in place.
- > Check that the wiper blade is correctly attached.
- > Fold the wiper arm back to the windscreen.
- Turn on the ignition and press the lever into position 4 » Fig. 44 on page 62.

The windscreen wiper arms move into the home position.

Replacing the rear window wiper blade

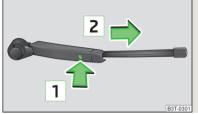

Fia. 197 Rear window wiper blade



First read and observe the introductory information and safety warnings II on page 242.

Removing the wiper blade

- > Lift the windscreen wiper arm away from the windscreen.
- > Hold the upper part of the wiper arm and unlock the securing mechanism 1 » Fia. 197.
- > Remove the wiper blade in the direction of the arrow 2.

Attaching the wiper blade

- > Push the windscreen wiper blade until the stop and it locks in place.
- > Check that the wiper blade is correctly attached.
- > Fold the wiper arm back to the windscreen.

Fuses and light bulbs

Fuses

Introduction

This chapter contains information on the following subjects:

Fuses in the dash panel	244
Fuses in the engine compartment	246
Assignment of fuses in the engine compartment	246

Individual electrical circuits are protected by fuses.

Switch off the ignition and the corresponding power consuming device before replacing a fuse.

Find out which fuse belongs to the component that is not operating » page 244, Fuses in the dash panel or » page 246, Assignment of fuses in the engine compartment.

Electrically adjustable seats are protected by automatic circuit breakers, which switch on again automatically after a few seconds after the overload has been eliminated.

Fuse colour	Maximum amperage
light brown	5
dark brown	7.5
red	10
blue	15
yellow	20
white	25
green	30
orange	40
red	50

WARNING

Always read and observe the warnings before completing any work in the engine compartment » page 206.

CAUTION

- "Never repair" fuses or replace them with a fuse of a higher amperage risk of fire! This may also cause damage at another part of the electrical system.
- If a newly inserted fuse blows again after a short time, have the electrical system checked as quickly as possible by a specialist garage.
- A blown fuses is recognisable by the molten metal strip. Replace the faulty fuse with a new one of the same amperage.

Note

- We recommend always carrying replacement fuses in the vehicle. A box of replacement fuses can be purchased from ŠKODA Original Accessories.
- There can be several power consuming devices for one fuse.
- There can be several consumer devices for one fuse, depending on the vehicle's equipment.
- Multiple fuses may exist for a single power consuming device.
- Multiple power consuming devices can share a single fuse.

Fuses in the dash panel



Fig. 198 Cover of the fuse box in the control panel / fuses



First read and observe the introductory information and safety warnings III on page 244.

The fuses are located on the left side of the dash panel behind a cover.

Replacing fuses

- > Remove the cover of the fuse box » Fig. 198.
- > Remove the plastic clip from the holder in the cover of the fuse box in the panel. >


- Clip it onto the respective fuse and pry out.Insert a new fuse.
- Return the clip to its original place.
 Re-insert the cover of the fuse box.

Fuse assignment in the dash panel

No.	Power consumer
1	Diagnostic socket, engine control unit, fuel pump relay, fuel pump control unit
2	ABS control unit, ESC switch for tyre pressure warning, brake sensor, for START-STOP coil of the starter relay only
3	Switch and airbag control unit
4	WIV, tail lights, dimming mirrors, pressure sensor, telephone preinstallation
5	Control unit for headlight beam adjustment and headlight swivel, control unit for parking aid, control unit for park assist
6	Instrument cluster, control unit for electromechanical power steering, selector lever lock, power supply for data bus
7	Heated opening of the crankcase ventilation, air flow meter
8	Control unit for trailer detection
9	Relay for auxiliary heating and ventilation
10	Adaptive left main headlight
11	Adaptive right main headlight
12	Not assigned
13	Diagnostic socket, light switch, rain sensor, clock
14	Central locking system and bonnet lid
15	Central control unit - interior lights
16	The air conditioning system
17	Not assigned
18	Phone
19	Instrument cluster, wind-shield wiper lever and turn signal lever, the relay coil for heating wind-shield
20	KESSY
21	KESSY ELV
22	Air blower for Climatronic
23	Front power window, central locking of the front doors

No.	Power consumer
24	Selector lever lock
25	Rear window heater, relay for auxiliary heating and ventilation
26	Power socket in the boot
27	Fuel pump relay, control unit for fuel pump, injection valves
28	Electric boot lid
29	Haldex
30	Climate controlled front seats
31	DVD pre-installation
32	Front power window, central locking system of the rear doors
33	Electric sliding/tilting roof
34	Alarm, spare horn
35	front and rear lighter
36	Headlight cleaning system
37	Heated front seats
38	Heated rear seats
39	Rear window wiper
40	Fan air-conditioning system, relay for auxiliary heating and ventilation
41	Not assigned
42	Light switch
43	Control unit for trailer detection
44	Control unit for trailer detection
45	Control unit for trailer detection
46	Switch for seat heating
47	Telephone preinstallation
48	Preparation for the aftermarket radio
49	Only for START-STOP: Central control unit, DC-DC converter, the engine control unit

Fuses in the engine compartment

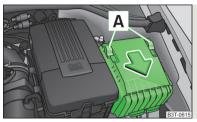

Fia. 199 Cover for the fuse box in the engine compartment



First read and observe the introductory information and safety warnings II on page 244.

On some vehicles, the battery cover must be removed before removing the cover for the fuse box » page 216.

Replacing fuses

The safety catch of the cover of the fuse box A » Fig. 199 Move the arrow.

The symbol $\hat{\boldsymbol{\varphi}}$ is displayed behind the catches.

- > Remove the cover.
- > Replace the appropriate fuse.
- > Replace the cover on the fuse box and the safety clip A move against the arrow.

The symbol Θ is displayed behind the catches.

The cover is locked into position.



CAUTION

The cover for the fuse box in the engine compartment must always be applied correctly. If the cover is not replaced properly, water may get into the fuse box leading to a risk of vehicle damage!

Assignment of fuses in the engine compartment

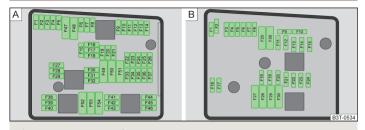


Fig. 200 Fuses: Type A / Type B



First read and observe the introductory information and safety warnings II on page 244.

Fuse assignment in the engine compartment - version A

No.	Power consumer
1	Front right main headlight, right tail light
2	Valves for ABS
3-4	Not assigned
5	Horn
6-12	Not assigned
13	Control unit for automatic gearbox
14	Not assigned
15	Coolant pump
16	Not assigned
17	Instrument cluster, windscreen wiper lever, and turn signal lever
18	Audio amplifier (sound system)
19	Radio
20-22	Not assigned
23	Engine control unit
24	Data bus control unit
25-26	Not assigned
27	Fuel dosage valve

No.	Power consumer
28	Engine control unit
29	Main relay
30	Auxiliary heating and ventilation control unit
31	Windscreen wipers
32-37	Not assigned
38	Radiator fan, valves
39	Clutch/brake pad sensor
40	Lambda probe
41	AKF valve
42	Lambda probe
43	Ignition
44-46	Not assigned
47	Front left main headlight, left tail light
48	Pump for ABS
49	Power supply for terminal 15 (ignition on)
50-51	Not assigned
52	Power supply relay - terminal X ^{a)}
53	Power to the internal fuse carrier
54	Not assigned

 $^{^{\}rm a)}$ In order not to drain the battery unnecessarily when starting the engine, the electrical components of this terminal are automatically switched off.

Fuse assignment in the engine compartment - version B

No.	Power consumer
1	Not assigned
2	Control unit for automatic gearbox DSG
3	Measuring circuit
4	Valves for ABS
5	Control unit for automatic gearbox DSG
6	Not assigned
7	Power supply relay - terminal X ^{a)}
8	Radio
9	Not assigned

No.	Power consumer
10	Engine control unit, Main relay
11	Auxiliary heating and ventilation control unit
12	Data bus control unit
13	Engine control unit
14	Ignition
15	Lambda probe (petrol engine), glow plug system relay and fuel pump (diesel engine)
16	Front right main headlight, right tail light
17	Horn
18	Audio amplifier (sound system)
19	Windscreen wipers
20	Valve for metering fuel, coolant pump, high pressure pump
21	Lambda probe
22	Clutch pedal switch
23	Coil of the coolant pump relay valves, high-pressure pump
24	Radiator fan
25	Pump for ABS
26	Front left main headlight, left tail light
27	Control unit for glow plug system
28	Windscreen heater
29	Power to the internal fuse carrier
30	Power supply for terminal 15 (ignition on)

a) In order not to drain the battery unnecessarily when starting the engine, the electrical components of this terminal are automatically switched off.

Bulbs

Introduction

This chapter contains information on the following subjects:

Headlights	248
Replacing the low beam bulb	249
Replacing bulb for main beam and daytime running lights	249

Replacing bulb for main beam	249
Replacing the bulb for the fog light	250
Replacing the bulb for the licence plate light	250
Rear light (Superb Combi)	25
Replacing bulbs in rear light (Superb Combi)	25

Some manual skills are required to change a bulb. For this reason, we recommend having bulbs replaced by a specialist garage or seeking other expert help in the event of any uncertainties.

- > Switch off the ignition and all of the lights before replacing a bulb.
- > Faulty bulbs must only be replaced with the same type of bulbs. The designation is located on the light socket or the glass bulb.
- A stowage compartment for replacement bulbs is located in a plastic box in the spare wheel or underneath the floor covering in the boot.

WARNING

- Always read and observe the warnings before completing any work in the engine compartment » page 206.
- Accidents can be caused if the road in front of the vehicle is not sufficiently illuminated and the vehicle cannot or can only be seen with difficulty by other road users.
- Bulbs H7 H8 and H15 are pressurised and may burst when changing the bulb - risk of injury! We therefore recommended wearing gloves and safety glasses when changing a bulb.
- Gas discharge bulbs (xenon bulbs) operate with a high voltage, professional knowledge is required - risk of death!
- The relevant lamp must always be switched off before a light bulb is replaced.

CAUTION

Do not take hold of the glass bulb with naked fingers (even the smallest amount of dirt reduces the working life of the light bulb). Use a clean cloth, napkin, or similar.

Note

- This Owner's Manual only describes the replacement of bulbs where it is possible to replace the bulbs on your own without any complications arising. Other bulbs must be replaced by a specialist garage.
- We recommend that a box of replacement bulbs always be carried in the vehicle. Replacement bulbs can be purchased from ŠKODAOriginal Accessories.
- We recommend having the headlight settings checked by a specialist garage after replacing a bulb in the main, low or fog beam.
- In case of failure of a xenon gas discharge lamp or an LED diode, visit a specialist garage.

Headlights



Fig. 201 Bulb arrangement: Headlight with halogen bulb/with Xenon bulb



First read and observe the introductory information and safety warnings \blacksquare on page 247.

Headlight with halogen bulb

- 1 Low beam
- 2 Main beam, separate daytime running lights, and parking light

Headlights with Xenon light

- Xenon gas discharge bulbs
- Main beam

Replacing the low beam bulb



Fia. 202 Halogen headlight: Changing the bulb for the low beam



First read and observe the introductory information and safety warnings II on page 247.

- > Remove the rubber cover 1 » Fig. 201 on page 248.
- Turn the plug with the bulb A » Fig. 202 as far as the stop in the direction of the arrow.
- > Change the bulb.
- Insert the bulb holder with the new bulb and turn in an anti-clockwise direction as far as the stop.
- > Insert the rubber cover 1.

Replacing bulb for main beam and daytime running lights



Fia. 203 Halogen headlight: Replacing the bulb for main beam and separate daytime running lights



First read and observe the introductory information and safety warnings 🔢 on page 247.

> Remove the rubber cover 2 » Fig. 201 on page 248.

- Turn the bulb holder A » Fig. 203 in the direction of the arrow as far as the stop.
- Replace the bulb, insert the bulb holder with the new bulb and turn in the opposite direction to that of the arrow as far as it goes.
- > Insert the rubber cover 2.

Replacing bulb for main beam

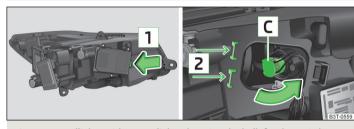


Fig. 204 Headlights with Xenon light: Changing the bulb for the main beam



First read and observe the introductory information and safety warnings II on page 247.

- ➤ Unlock the protective cap in the direction of arrow 1 » Fig. 204 and remove.
- Turn the plug with bulb C anti-clockwise to the stop and remove it.
- > Change the bulb.
- Insert the bulb holder with the new bulb and turn in an anti-clockwise direction as far as the stop.
- Insert the protective cap in holder 2 and carefully push in.

The protective cover must engage firmly.

Replacing the bulb for the fog light

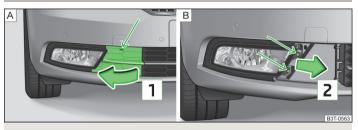


Fig. 205 Front bumper: Remove the protective grille/fog light

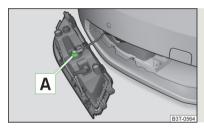


Fig. 206 Replacing the light bulb



First read and observe the introductory information and safety warnings II on page 247.

Removing the protective grille

- > Release the protective grille in the area of the arrow » Fig. 205 A using the clamp for removing the wheel trims » page 228, Vehicle tool kit.
- > Remove the protective grille in the direction of the arrow 1.

Changing light bulbs for fog lights

- > Use the screwdriver from the tool kit to unscrew the fog lamp » Fig. 205 B.
- > Remove the headlight in the direction of arrow 2.
- > Remove the connector.
- > Turn bulb holder A » Fig. 206 in an anti-clockwise direction up to the stop and remove.
- Insert the bulb holder with the new bulb into the headlight and turn in a clockwise direction as far as the stop.

- > Fit the connector.
- > Replace the fog lamp by inserting it in the opposite direction of the arrow 2 » Fig. 205 - B and screw tight.
- > Insert the protective grille and carefully press it in.

The protective grille must engage firmly.

Replacing the bulb for the licence plate light

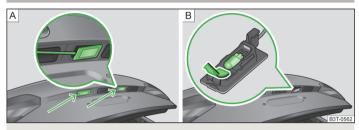


Fig. 207 Remove the number plate light/replace the bulb



First read and observe the introductory information and safety warnings III on page 247.

- > Open the boot lid.
- Insert a slotted screwdriver at the location indicated by the arrow » Fig. 207 A, press it in lightly, and unlatch the springs.
- > Remove the lamp.
- > Pull the faulty bulb out of the holder in the direction of the arrow » Fig. 207 B.
- > Insert a new bulb into the holder.
- > Replace the lamp and lightly press it until the spring latches.

CAUTION

When removing and installing the number plate light and tail light make sure that the paintwork of the vehicle and the tail light are not damaged.

Rear light (Superb Combi)

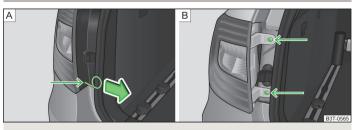


Fig. 208 Removing: Cover/light

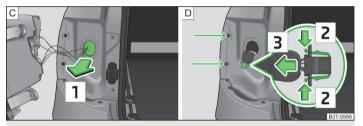


Fig. 209 Seal expand / lighting connector

First read and observe the introductory information and safety warnings on page 247.

Removing

- > Open the boot lid.
- > Insert the clamp for removing the wheel trims » page 228, Vehicle tool kit into the hole at the position indicated by the arrow » Fig. 208 A.
- > Remove the cover in the direction of the arrow » Fig. 208 A.
- > Use the screwdriver from the tool kit to unscrew the lamp » Fig. 208 B.
- Grasp the rear light and carefully remove away from the direction of travel.
- > Remove the rubber seal in the direction of arrow 1 » Fig. 209 C.
- > Pull off the cable bundle with the plug cap » Fig. 209 D.
- Press together the interlocks on the connector in the direction of arrow
 | 2 | » Fig. 209 | 0 |.

> Carefully remove the connector from the tail lamp assembly in the direction of the arrow 3.

Install

- > Insert the connector into the lamp and lock it securely.
- > Install the rubber seal in the body in the opposite direction to arrow 1 install » Fig. 209 ©.
- > Insert the tail lamp with the holes \(\backslash \) Fig. 210 on page 251 into the bolts on the body >> Fig. 209 \(\backslash \).
- > Carefully press the tail light into the bolts on the bodywork.

Be careful not to pinch the cable bundle between the bodywork and light.

- > Screw the tail lamp into place and install the cover.
- > Ensure that the cover engages firmly.

Replacing bulbs in rear light (Superb Combi)

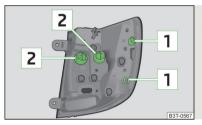


Fig. 210 Replacing the light bulb



First read and observe the introductory information and safety warnings 1 on page 247.

- > Turn the bulb holder $\boxed{\mathbf{2}}$ » Fig. 210 **anti**-clockwise remove it from the lamp housing.
- > Push the faulty bulb into the holder, turn in **anti** -clockwise direction up to the stop and remove.
- > Insert a new bulb into the holder and turn in a clockwise direction to the the stop.
- > Replace the holder with the bulb into the lamp housing and turn in a clockwise direction to the stop.

Technical data

Technical data

Vehicle data

Introduction

This chapter contains information on the following subjects:

Vehicle identification data	_ 252
Dimensions	_ 254
Vehicle-specific information depending on engine type	255
Multi-purpose vehicles (AF)	_ 259

The details given in the vehicle's technical documentation always take precedence over the details in the Owner's Manual.

The listed performance values were determined without performance-reducing equipment, e.g. air conditioning system.

Vehicle identification data

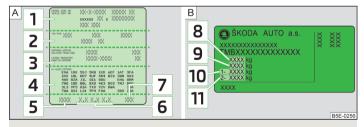


Fig. 211 Vehicle data sticker/type plate



First read and observe the introductory information given on page 252.

Vehicle data sticker

The vehicle data sticker» Fig. 211 - A is located under the floor covering in the luggage compartment.

The vehicle data sticker contains the following data:

- Vehicle identification number (VIN)
- Vehicle type
- Gearbox code/paint number/interior equipment/engine output/engine code
- Partial vehicle description
- Operating weight (in kg)
- Fuel consumption (in ltr./100 km) intra-urban/extra-urban/combined
- CO₂ emission levels combined (in g/km)

The indicated positions 5, 6 and 7 on the vehicle data sticker are only valid for some countries.

Type plate

The nameplate » Fig. 211 - B is located at the bottom of the B-pillar on the driver's side.

The type plate lists the following weights:

- Maximum permissible gross weight
- Maximum permissible towed weight (towing vehicle and trailer)
- Maximum permissible front axle load
- Maximum permissible rear axle load

Vehicle identification number (VIN)

The vehicle identification number - VIN (vehicle body number) is stamped into the engine compartment on the right hand suspension strut dome. This number is also located on a sign on the lower left hand edge below the windscreen (together with a VIN bar code).

Engine number

The engine number (three-digit code letter and serial number) is stamped onto the engine block.

Operating weight

The specified operating weight is for orientation purposes only. This value represents the minimum operating weight without additional weight-increasing equipment such as air conditioning system, spare wheel, or trailer hitch.

The operating weight also contains the weight of the driver (75 kg), the weight of the operating fluids, the tool kit, and a fuel tank filled to 90 % capacity.

It is possible to calculate the approximate loading capacity from the difference between the permissible total weight and the operating weight » ...

The payload consists of the following components:

- > Passengers
- > All items of luggage and other loads
- > Roof load including roof rack system
- > Equipment not included in the operating weight
- > Trailer drawbar load when towing a trailer (max. 80 kg).

Fuel consumption and CO₂ emissions according to ECE standards and EU directives

The measurement of the intra-urban cycle begins with a cold start of the engine. Afterwards standard urban driving is simulated.

In the extra-urban driving cycle, the vehicle is accelerated and decelerated in all gears, corresponding to daily routine driving conditions. The driving speed varies between 0 and 120 km/h.

The calculation of the combined fuel consumption considers a weighting of about 37 % for the intra-urban cycle and 63 % for the extra-urban cycle.

WARNING

Do not exceed the specified maximum permissible weights - risk of accident and damage!

Note

- If required, you can find out the precise weight of your vehicle at a specialist ga-
- The fuel consumption and emission values have been determined in accordance with rules and under conditions set out by legal or technical requirements for determining operational and technical data for motor vehicles.
- Depending on the range of equipment, style of driving, traffic situation, weather influences and vehicle condition, consumption values may deviate from the indicated values.

Dimensions



First read and observe the introductory information given on page 252.

Vehicle dimensions (mm)

	Superb	Superb GreenLine	Superb Combi	Superb Combi GreenLine
Length	4833	4833	4833	4833
Width	1817	1817	1817	1817
Width including exterior mirror	2009	2009	2009	2009
Height	1462/1482a)/1447b)	1464/1449 ^{b)}	1511/1529 a)/1497b)	1511/1496 ^{b)}
Clearance	139/159 ^a)/124 ^b)/141 ^c)	140/125 ^{b)}	141/159a)/127b)/140c)	141/126 ^{b)}
Wheel base	2761	2761	2761	2761
Track gauge front/rear	1545/1518 (1537/1510) ^{c)}	1545/1518	1545/1517 (1537/1510) ^{c)}	1545/1517

a) Applies to vehicles with a rough road package.

b) Applies to vehicles with a sport chassis.
 c) Applies to vehicles with a 3.6 I/191 kW FSI engine.

Vehicle-specific information depending on engine type



First read and observe the introductory information given on page 252.

The specified values have been determined in accordance with rules and under conditions set out by legal or technical requirements for determining operational and technical data for motor vehicles.

1.4 ltr./92 kW TSI engine

Output (kW per rpm)	Max. torque (Nm at rpm)	Number of cylinders/Displacement (cm ³)	
92/5000	200/1500-4000	4/1390	
Performances	Superb MG6	Superb Combi MG6	
Top speed (km/h)	204	203	
Acceleration 0-100 km/h (s)	10.5	10.6	
Permissible trailer load, braked (kg)	1400°/1500b)		
Permissible trailer load, unbraked (kg)	730	740	

a) Uphills up to 12 %

1.8 I/112 kW TSI engine

Output (kW per rpm)	Max. torque (Nm at rpm)			Number of	cylinders/Displacer	ment (cm³)
112/4300-6200		250/1500-4200			4/1798	
			,			
Performances	Superb MG6	Superb DSG7	Superb MG6 4x4	Superb Combi MG6	Superb Combi DSG7	Superb Combi MG6 4x4
Top speed (km/h)	219	218	215	217	216	213
Acceleration 0-100 km/h (s)	8.8	8.7	8.8	8.9	8.8	8.9
Permissible trailer load, braked (kg)	1500a)	1500 ^{a)} /1700 ^{b)} 1600 ^{a)} /1800 ^{b)}		1500a)	/1700 ^{b)}	1600a)/1800b)
Permissible trailer load, unbraked (kg)	750					

a) Uphills up to 12 %

b) Uphills up to 8 %

b) Uphills up to 8 %

1.8 ltr./118 kW TSI engine

Output (kW per rpm)	Max. torque (Nm at rpm)			Number of	f cylinders/Displace	ment (cm³)
118/4500-6200	250/1500-4500				4/1798	
Performances	Superb MG6	Superb DSG7	Superb MG6 4x4	Superb Combi MG6	Superb Combi DSG7	Superb Combi MG6 4x4
Top speed (km/h)	222	222	219	221	221	218
Acceleration 0-100 km/h (s)	8.2	8.4	8.4	8.3	8.5	8.5
Permissible trailer load, braked (kg)	1500 ^{a)} /1700 ^{b)} 1600 ^{a)} /1800 ^{b)}		1500a)	/1700 ^{b)}	1600a)/1800b)	
Permissible trailer load, unbraked (kg)	750					

a) Uphills up to 12 % b) Uphills up to 8 %

2.0 ltr./147 kW TSI engine

Output (kW per rpm)	Max. torque (Nm at rpm)	Number of cylinders/Displacement (cm ³)		
147/5100-6000	280/1700-5000	4/1984		
Performances	Superb DSG6	Superb Combi DSG6		
Top speed (km/h)	240	238		
Acceleration 0-100 km/h (s)	7.7	7.8		
Permissible trailer load, braked (kg)	1600°1/1800b)			
Permissible trailer load, unbraked (kg)	750			

a) Uphills up to 12 % b) Uphills up to 8 %

3.6 ltr/191 kW FSI engine

Output (kW per rpm)	Max. torque (Nm at rpm)	Number of cylinders/Displacement (cm ³)		
191/6000	350/2500-5000	6/3597		
Performances	Superb DSG6 4x4	Superb DSG6 4x4		
Top speed (km/h)	250	250		
Acceleration 0-100 km/h (s)	6.4	6.5		
Permissible trailer load, braked (kg)	2000			
Permissible trailer load, unbraked (kg)	750			

1.6 ltr./77 kW TDI CR engine

Output (kW per rpm)	Max. torque	(Nm at rpm)	Number of cylinders/Displacement (cm ³)		
77/4400	250/150	00-2500	4/	1598	
Performances	Superb MG6	Superb DSG7	Superb Combi MG6	Superb Combi DSG7	
Top speed (km/h)	194/197ª)	193	192/195ª)	192	
Acceleration 0-100 km/h (s)	12.1/12.2 ^{a)}	12.2	12.2/12.3ª)	12.3	
Permissible trailer load, braked (kg)	1500 ^{b)} /1700 ^{c)}	1200 ^{b)} /1400 ^{c)}	1500 ^{b)} /1700 ^{c)}	1200 ^{b)} /1400 ^{c)}	
Permissible trailer load, unbraked (kg)	750				

a) GreenLine b) Uphills up to 12 % c) Uphills up to 8 %

2.0 ltr./103 kW TDI CR engine

Output (kW per rpm)	Max. torque (Nm at rpm)			Number of	f cylinders/Displace	ment (cm³)
103/4200	320/1750-2500				4/1968	
Performances	Superb MG6	Superb DSG6	Superb MG6 4x4	Superb Combi MG6	Superb Combi DSG6	Superb Combi MG6 4x4
Top speed (km/h)	212	212	210	211	210	208
Acceleration 0-100 km/h (s)	10.0	10.1	10.3	10.1	10.2	10.4
Permissible trailer load, braked (kg)	1800 2000		18	00	2000	
Permissible trailer load, unbraked (kg)	750					

2.0 ltr./125 kW TDI CR engine

Output (kW per rpm)	Max. torque (Nm at rpm)			Number o	f cylinders/Displace	ment (cm³)
125/4200		350/1750-2500			4/1968	
2.6	s lwss	s I pess	5 D555.4.4	Superb Combi	Superb Combi	5 D555 4 4
Performances	Superb MG6	Superb DSG6	Superb DSG6 4x4	MG6	DSG6	Superb DSG6 4x4
Top speed (km/h)	228	222	219	226	221	218
Acceleration 0-100 km/h (s)	8.6	8.6	8.7	8.7	8.7	8.8
Permissible trailer load, braked (kg)	18	1800 2000		18	00	2000
Permissible trailer load, unbraked (kg)		750				

Multi-purpose vehicles (AF)



First read and observe the introductory information given on page 252.

Engine	Maximum permissible gross weight (kg)					
1.4 ltr./92 kW TSI	MG6					
1.4 IU./92 KW 131		2032				
1.8 ltr./118 kW TSI	MG6	DSG7	MG6 4x4			
1.0 IU./110 KW 131	2061	2073	2152			
2.0 l/147 kW FSI		DSG6				
2.0 1/14/ KW F31	2105					
3.6 l/191 kW FSI	DSG6 4x4					
5.0 / 9 KW F3		2267				
1.6 ltr./77 kW TDI	MG6	DS	G7			
CR	2077/2084 ^{a)}	20	84			
2.0 ltr./103 kW TDI	MG6	DSG6	MG6 4x4			
CR	2097	2119	2174			
2.0 ltr./125 kW TDI	MG6	DSG6	DSG6 4x4			
CR	2105	2122	2199			

a) GreenLine

Index

Δ
~

Abroad	
Driving abroad	. 14
Unleaded petrol	. 14
ABS	
Function	_ 15
Warning light	_ 1
Accessories	. 19
Adaptive headlights (AFS)	_ 5
Adjust	
Auxiliary heating (auxiliary heating and ventilation)	
Adjusting	
Exterior mirrors	_ 6
Head restraints	_ 6
Interior mirror	
Manual air conditioning	. 10
Seats 6	6, 6
Steering wheel	
Adjusting the seats 66	, 17
Adjustment	
Headlight beam	_ 5
Aerial	
See windows	20
AFS	_ 5
Airbag	
Deactivating	
Deactivating the front passenger airbag	
Deployment	
Front airbag	
Head airbag	
Knee airbag	
Modifications and damage to the airbag system Side airbag	_ 18
Airbag system	

Air conditioning system	98
Air outlets	
Climatronic	
Manual air conditioning system	
Air outlets	
Air recirculation	
Climatronic	105, 106
Alarm	
Switching off	38
Triggering	
Anti-theft alarm system	
Activating/deactivating	39
Trailer	
Antilock Braking System	15
Armrest	
front	72
rear	73, 83
Artificial leather	202
Ashtray	7
ASR	
Warning light	18
Assist system	
ABS	15
Assist systems	150
ABS	
ASR	18
Cruise Control System	157
DSR	
EDL	15
ESC	18, 150
HBA	
Park assist	
Parking aid	
START-STOP	
	15
Auto Check Control	
Automatic driving Jamp control	5

Automatic gearbox	
Selector lever-emergency unlocking	. 24
Starting-off and driving	_ 14
Tiptronic	
Automatic load deactivation	. 218
Automatic retractable cargo cover (Superb Combi))	_ 89
Automatic transmission	. 139
Kickdown	14
Malfunction	. 14
Selector lever lock	
Using the selector lever	140
MUX	
Installation in the storage compartment	_ 79
Auxiliary heating (auxiliary heating and ventila-	
tion)	
Adjust	108
Radio remote control	
Switching on/off	108
voiding damage to the vehicle	74
Driving through water	
Avoiding damage to your vehicle	. 14
В	
Ball head	
Check fitting	164
Fitting	
Ready position	
Removing	
Rattery	
In the remote control key	239
iReplace the remote control of the auxiliary heat	-
er (parking heater)	239
Belts	. 17:
Belt tensioners	. 170
Bonnet	
Closing	208
Opening	
Warning light	_ 1

Boot	
Automatic retraction (Superb Combi)	89
Class N1 vehicles	85
Class N1 vehicles Extending variable loading floor	92
Folding book	86
Non-closable side pocket (Superb Combi)	90
Removable Light (Superb Combi)	
Roll-up boot cover (Superb Combi)	88
Side compartment with battery	90
Boot cover (Superb Combi)	88
Boot lid	
Automatic locking	
Warning light	
(Superb Combi)	
Brake booster	
Brake fluid	
Changing	
Checking	
display messaes	
Brake pads	5
warning light	21
Brakes	
Brake assist systems	150
Brake booster	
Brake fluid	
Handbrake	
Indicator light	
Running in	
Braking	
Information on braking	137
Breakdown kit	
Break recommendation	233
	161
See Fatigue detection	101
Bulbs	247
Replacing	24/
Button in the driver's door	
Electric power windows	44
C	
Car care	191

Car computer	
see multifunction display	25
Car park ticket holder	75
Carrier	96
Cavity protection	200
CD changer	128
Central locking button	
Changing	
Brake fluid	215
Engine oil	212
Wheels	229
Changing a wheel	
Follow-up work	
Preliminary work	229
Remove and attaching a wheel	
Charging a vehicle battery	217
Check	
Fit ball head properly	164
Checking	
Battery electrolyte level	
Brake fluid	
Coolant	
Engine oil	
Oil level	
Windscreen washer fluid	
Children and safety	186
Child safety	10-
Side airbag	
Child safety lock	36
Child seat	
Classification	
ISOFIX	
on the front passenger seat TOP TETHER	18/
Use of child seats	190
Use of ISOFIX child seats	
Chrome parts	103
refer to Taking care of your vehicle	100
Cigarette lighter	
cigarette ligitter	//

Cleaning	. 191
Alcantara	202
Artificial leather	202
cloths	202
Covers of electrically heated seats	203
Headlight lenses	200
Natural leather	202
Plastic parts	
Wheels	20
Climatronic	103
Air recirculation 105	, 106
automatic mode	104
Control elements	103
Controlling blower	106
Cooling system	104
Defrosting windscreen	106
Setting the temperature	104
Clock	_ 13
Clothes hook	_ 8
Cockpit	
12-Volt power outlet	_ 78
Ashtray	
Cigarette lighter	_ 77
General view	_ 9
Liahtina	_ 57
Practical equipment	_ 74
Storage compartments	
COMING HOME	
Compartments	74
Compass display	
Computer	
see multifunction display	25
Convenience operation of sliding/tilting roof	
Convenience operation of sliding/tilting roof (Su-	
perb Combi)	
Coolant	
Checking	
display messaes	
Replenishing	214
Coolant temperature gauge display	_ 1

Correct seated position	170	Indicator light for an open door	16	Malfunctions	44
Driver		Opening	37	Operating	42
Front passenger		Door locking		Electric sliding/tilting roof	47
Instructions		Emergency	240	Electronic Differential Lock (EDL)	
Rear seats	171	Doors		Electronic immobilizer	
Counter for distance driven	12	Emergency locking	240	Electronic Stability Control (ESC)	
Cruise control system		Driver Steering Recommendation (DSR)	151	Emergency	
Activating/deactivating		Driving		Activation of the sliding/tilting roof	242
Changing the stored speed		Abroad	148	Changing a wheel	
Storing and maintaining speed		Driving through water on streets	148	Door locking	240
Switching off temporarily		Emissions	252	Hazard warning light system	
Cruise Control System	157	Fuel consumption	252	jump-starting	
Cup holders	76	Driving economically		Jump-starting	234
		Economical gear changing	144	Locking the driver's door	240
D		Driving through water		Selector lever-unlocking	
		DSR		Sliding/tilting roof	242
DAY LIGHT		DVD-preinstallation		Start engine - KESSY	136
see Daylight running lights		D D D D D D D D D D D D D D D D D D D		Switching off the ignition –KESSY	
Daylight running lights		E		Towing the using the tow hitch	
De-icing the windscreen and rear window $ _ $	59	-		Towing the vehicle	
Deactivating an airbag	184	Economical and environmentally friendly dr	iving 143	Tyre repair	
Decorative films	199	Economical driving		Unlocking the driver's door	
Delayed locking of the boot lid		Ballast	146	Unlocking the tailgate	241
see Boot lid	41	Driving at full throttle	145	Emergency equipment	
Diesel		Idling		Fire extinguisher	
refer to Fuel	206	Looking ahead	144	First aid kit	
Diesel fuel		Regular maintenance	146	Jack	
Operation in winter	206	Saving energy		Vehicle tool kit	
Diesel particulate filter		Short distances		Warning triangle	
display messages		Tyre inflation pressure		Emissions	252
Digital clock		EDL	151	Engine	1.43
Dipstick		Electrical power windows		Running in	
Display		Button in the driver's door		Engine compartment	
Service interval	30	Button in the rear doors	45	Brake fluid	
Distance driven	10	Electric boot lid		Coolant	
	12	Force limit		Overview	
Door Child safety lock	26	Manual operation	41	Vehicle battery	
Closing		Electric luggage compartment lid		Engine oil	
Emergency locking the driver's door	7/۱۸	Acoustic signals		Capacity Changing	
Line gency locking the univers door	240	Adjusting the top lid position	43		
		Deleting the top lid position	43	Checking	211

Replenishing	212	Front door warning light	59	Headlights	
Specifications	210	Front interior light	57	Driving abroad	
Engine revolutions counter	11	Fuel		Headlight cleaning system	
Entry lighting		Diesel	_ 206	Replacing a bulb	
Environment	143	Fuel gauge	12	Head restraint	68
Environmental compatibility	146	gauge		Heater	
Environmentally friendly driving	143	refer to Fuel		Windscreen and rear window	59
ESC		Refuelling		Heating	
Function	150	Unleaded petrol		Exterior mirrors	
Warning light		Fuel consumption	143	Seats	
Extending variable loading floo		Fuses		HHC	
	93	Assignment		Hill Hold Control (HHC)	152
Extending variable loading floor		Colour coding		Horn	9
Divide boot		Fuse assignment in the engine compartment		Hydraulic Brake Assist (HBA)	151
Movable lashing eyes	95	Replacing	_ 244		
Extrending variable loading floor					
Fixing set	94	G			
-		Gearbox		Ice warning	
F		display messaes	13	Ignition	132
		Gear changing	וכו	Immobilizer	132
Fastening elements		Gear stick	138	Individual settings	
Fatigue detection		General view	_ 130	Locking	
Function		Cockpit	9	Unlocking	
Information messages		Glasses storage box		Inertia reels	176
Films	199	Glow plug system	60	Information message	
Fire extinguisher	228	Warning light	10	see KESSY	37
First aid kit	227	GSM1		Information system	23
Floor covering		G3I ^M I	15, 115	Using	23
Fixing	87			Instrument cluster	10
Fog lights	55	Н		Display	
Fog lights with the CORNER function	55	Handbrake	138	Overview	10
Folding hook		Hands-free system	_ 150	Interior monitor	39
Footmats	139	Voice control	122	Internet connection	118
see footmats		Hazard warning light system		ISOFIX	189
Force limit		HBA			
Electric boot lid (Superb Combi)	41	Head airbag		J	
Power windows		Headlight cleaning system	102		
Sliding/tilting roof	47	Headlight cleaning system	62	Jack	228
Sliding/tilting roof (Superb Combi)	49	Headilght cleaning system	03	Jacking points	
Front airbag	180			Raise vehicle	231
_					

ump-starting	234, 235	Hazard warning light system	_ 56	Maintenance	14
		Headlight beam adjustment	_ 51	Decorative films	19
K		Headlight flasher		Manual air conditioning	
••		Instrument lighting	_ 51	adjusting	
KESSY		Low beam lights	_ 51	Recirculated air mode	10
Information message		Main beam		Manual gear changing	
lock		Parking lights 5		see gear changing	13
Lock / unlock the steering		Rear fog light Switching on and off	_ 55	Manually setting air conditioning	
Starting the engine		Switching on and off	_ 51	Control elements	10
Switching off the engine		Tourist lights		Materials defect liability	
Switching off the ignition		Turn signal		MAXI DOT	
Switching on the ignition		Warning lights		Main menu	2
unlock	37	Loads	252	see MAXI DOT display	2
Key		Lock		Settings	
Starting the engine	132	Remote control	_ 33	MAXI DOT display	
Stopping the engine	133	Vehicle key	_ 33	MDI	
Knee airbag	181	Locking		Installation in the storage compartment _	7
		Individual settings	_ 35	MFA	/
L		KESSY	34		_
		Locking and unlocking the vehicle from the inside	36	see multifunction display	2
EAVING HOME	55	Long-cargo channel		Mirror Exterior mirrors	_
_ever		Low beam lights			0
Main beam		Luggage compartment		Mirrors	_
Turn signal		Cover		Interior mirror	
Windscreen wipers	62		241	Vanity	
_icht		Fastening elements	86	Mobile phone	110, 113, 11
COMING HOME / LEAVING HOME	55	Fix floor covering		Connecting to the hands-free system	
_ight		Fixing nets		Modes of the automatic transmission	
Cockpit	57	Lighting		Modifications	19
Replacing bulbs		Luggage net		Modifications and technical alterations	
Travel mode	54	see boot lid		Airbags	
ight bulbs		Side pockets	89	Service	
Rear light (Superb Combi)	251	Unlocking the tailgate	241	Spoiler	19
ighting.		Variable loading floor	92	Multifunction display	
Luggage compartment	84	Luggage compartment cover	. 88	Functions	
ights	51	Luggage compartment lid	39	Memory	2
Adaptive headlights (AFS)	54	Luggage net	87	Multimedia	
Automatic driving lamp control		55 5 **-	_	AUX	
Daylight running	52	M		MDI	12
Fog lights	55				
Fog lights with the CORNER function	55	Main beam	_ 53		

N	
Net partition Behind the front seats Behind the rear seats Removing and refitting the housing	96 95 96
Nets Non-closable side pocket (Superb Combi)	
0	
Oil See Engine oil	211
Oil pressure display messaes	16
On-board computer see multifunction display	
Operation in winter Diesel fuel	
Vehicle battery	217
Outside temperatureOverview	26
Engine compartment	_ 209
Р	
Paintwork See Paintwork care	198
Paintwork care	
Panoramic sliding roof (Combi) Closing	48
OpeningSun screen	
Park assist	153
Finding a parking space Information messages	156
Parking	155
Automatic brake assist	
Manoeuvring out of a parallel parking space $ _$	156

Park assist	152 152 153 51 38 193 169 170 169 139 205 198 205 198 - 78 - 45 - 74 - 74 - 78 - 82 - 82 - 82 - 80 - 79 - 81 - 79
R	_ 02
*	300
Radiator fan Radio reception	209
See windowsRadio remote control	200
	109

Raise vehicle	_ 231
Rear-view mirror	
Exterior mirrors	_ 65
Rear fog light	_ 55
Rear interior light	_ 58
Rear mirror	_ 63
Interior mirror	_ 64
Rear seats	
Seat folded forward Combi	_ 74
Rear window - heater	_ 59
Recirculated air mode	
Manual air conditioning	_ 102
Recommended gear	_ 24
Refuelling	
Fuel	204
Remote control	
lock	_ 33
Replacing the battery	. 239
Synchronisation process	
unlock	_ 33
Remote control key	
Replacing the battery	. 239
Removable lights (Superb Combi)	
Changing rechargeable light batteries	91
Removable Light (Superb Combi)	
Remove light	
Removable ski bag	_ 84
Removable variable loading floor	
Fit and remove	_ 94
Repairs and technical alterations	_ 193
Replace	
Vehicle battery	_ 218
Replacing	
Bulb for main beam	
Bulb for main beam and daytime running lights	. 249
Bulb for the fog lightBulb for the licence plate light	250
Bulb for the licence plate light	. 25U
Bulbs	
Fuses	
. 0505	

Fuses in the dash panel	244	Height adjustment	176	Sliding/tilting roof	
Fuses in the engine compartment	246	Inertia reels		Close (Superb Combi)	4
Low beam bulb	249	The physical principle of a frontal collision	174	Closing	4
Wiper blades	243	Seat features	_ 70	Closing the sun screen (Superb Combi)	4
Replenishing		Seats		Electric sliding/tilting roof	4
Coolant	214	Armrest rear	_ 73	Emergency operation	
Engine oil		Armtest, front	_ 72	Opening/closing the sun screen (Superb Combi)	
Windscreen washer fluid	209	Convenience features of passenger seat	_ 72	Opening and tilting	4
Roof luggage rack		Electric adjustment		Opening and tilting (Superb Combi)	
Attachment points	97	Head restraints	68	Operation	_ 4
Roof rack system	96	Heating		Operation (Superb Combi)	
Roof load		Manually adjusting	_ 67	Snow chains	
Running-in		save	69	Spare wheel	_ 22
The first 1500 km	142	Seat backrests	_ 73	Speedometer	1
Running in		Storing in memory of remote control key		Speed symbol	
Brake pads	143	Ventilated front seats		See Wheels	_ 22
Engine		Seats and useful equipment		Spoiler	_ 19
Tyres		Adjusting the seats	_ 66	START-STOP	
•		see automatic gearbox		Manually activating/deactivating the system _	_ 16
S		Manual shifting of gears on the multifunction		Operating conditions of the system	_ 16
-		steering wheel	. 141	Starting/shutting down the engine	_ 15
afe securing system	35			Starting and stopping the engine - KESSY	13
afety	169	see Using the selector lever	140	Starting and stopping the engine using the key	13
Child safety	186	Service	194	Starting engine	
Child safety seats		Service display	_ 30	Jump-starting	23
Correct seated position		Service intervals	. 191	Starting the engine	
Head restraints		Setting the clock		Jump-starting	23
ISOFIX		Clock	_ 13	Key	
TOP TETHER		Shelves	74	see KESSY	
Saving electrical energy	143	Shift		START STOP	
creens		Information on the selected gear	24	Information messages	16
see Sun screen in the rear doors	61	Recommended gear		Jump-starting	
ieals		Shifting gears		Steering force assistance	
Taking care of your vehicle	199	Driving and saving energy	144		
ieat belt		Side airbag		see KESSY	13
warning light	15	Side compartment in boot with battery			
eat belt height adjuster	176	Side compartments in the luggage compartment		Stopping the engine	_ 151
eat belts	173	ski bag		Key	13
Belt tensioners		zvi nad	_ 04	Storage compartment in rear centre console	
Cleaning	203			Storage compartment in real centre console	
fastening and unfastening	175			Storage compartment on the passenger side	_ 0

Storage compartments	_ 74	Wash system	197	Tyre load-bearing capacity	
Storage compartment under the passenger seat		Wax treatment	198	See Wheels	22
Storage pockets on the front seats	82	Taking care of your vehicles		Tyre pressure monitor	
Storing skis		Fabric covers	203	Setting	22
Sun screen		TCS		Tyre repair	
Sun screen in the rear doors		Operation	151	Check pressure	
Sun visors		Technical data	252	Preparations	
Switch	. 00	Telephone	113, 115	Sealing and inflating the tyre	
see Ignition	132	Tilting roof		Tyres	
Switching lights on and off		see Electric sliding/tilting roof	47	Inflation pressure	
Switching off the engine		Tiptronic	141	New	
see KESSY	136	Tools	228	See Wheels	
Switching off the ignition	150	TOP TETHER	190	Sizes Tyre wear indicator	
see KESSY	136	Towing	236	Tyre wear indicator	22
Switching on the ignition	.50	Towing a trailer		11	
see KESSY	135	Towing device		U	
366 KE331		Description	162	Umbrella	
Т		Drawbar load		Tray	8
•		Use and care	165	Underbody protection	20
Tailgate		Towing eye		Unleaded petrol	
TwinDoor	40	Front	237	Unlock	_ '-
Taking care of the vehicle		Rear	238	Remote control	7
Natural leather	202	Towing protection	39	Vehicle key	
Seat belts	203	Traction Control System (TCS)	151	Unlocking	
Taking care of your vehicle		Trailer		Individual settings	3
Automatic car wash system	197	13-pin power socket	166	KESSY	
Cavity protection		driving with a trailer	166	Unlocking and locking	
Chrome parts		Loading	165	Useful equipment	
Cleaning the wheels		Safety eye	166	Ashtray	7
Decorative films		Trailer stabilisation		Car park ticket holder	
Door lock cylinders		Transport		Cigarette lighter	
Headlight lenses		Luggage compartment		Clothes hook	
High-pressure cleaner		Roof rack system	96	Cup holders	7
Plastic parts Polishing the paintwork		Transporting children safely	186	Glasses storage box	8
Rubber seals		Turn signal	53	Removable ski bag	
Taking care of the interior		Twindoor		Seat backrest with long-cargo channel	
Taking care of the interior		see boot lid	40	Storage compartment in the front centre cons	
Washing		Two-way radio systems		Storage compartment on the driver's side	
Washing by hand	197	Type plate		Storage compartments in the doors	
3 3		-		Using the information system	2

Using the selector lever	140	Warning triangle	227	Windscreen	
		Warranty	5	Deicing	
V		Washing	191	Heater	59
		Automatic car wash system		Windscreen washer fluid	
Variable loading floor		by hand	197	Checking	
Dividing the luggage compartment		Chrome parts		Replenishing	
Removeslides off on aluminium rails	92	High-pressure cleaner	197	Warning light	
	92	Water		Winter	_ 209
Vehicle battery	210	Driving through	148	Windscreen washers	-
Automatic load deactivation charging		Wax treatment		Windscreen washers	
Checking the battery electrolyte level	217	See Taking care of your vehicle		Windscreen washer system	_ 209
Cover		Weights	252	Windscreen wiper	
Disconnecting and reconnecting	210	Wheel bolts		Replacing the rear window wiper blade	_ 243
Operation in winter		Anti-theft wheel bolt		Windscreen wipers	
Replace		Caps		Operating	
Safety instructions		Loosening and tightening		Replacing the windscreen wiper blades	
Vehicle care		Wheel rims	220	Windscreen washer fluid	
Alcantara	202	Wheels		Windscreen wipers and washers	61
Artificial leather	202	Bolts		Windshield wiper	
Cloths		Changing		alternative parking position of the rear wind-	
Vehicle Condition		Full trim		screen wiper	63
see Auto Check Control	13	General information		Winter	200
Vehicle data sticker	252	Load index		Deicing windows	
Vehicle dimensions	254	Replacing wheels Service life of tyres		Winter operation	
Vehicle height		Snow chains		Snow chains	
vehicle identification number - VIN		Spare wheel		Winter tyres	_ 220
Vehicle kev		Speed symbol		Winter tyres See Wheels	226
lock	33	Storing wheels	221		
unlock		Tyre pressure	221	WLAN	
Vehicle length		Tyre sizes		Network connection	
Vehicle tool kit		Tyre wear indicator		Switching off	
Vehicle width		Unidirectional tyres	223	Switching on	119
Visibility		Winter tyres	226	Switching on	113
Visors		Wheels and tyres			
see Sun screen	60	Hubcaps			
see Sun visors		Wi-Fi	119		
	0	Window convenience operation	46		
W		Windows			
VV		Deicing			
Warning lights	14	See electric power windows	44		

ŠKODA AUTO a.s. pursues a policy of constant product and model development. We trust that you will understand that changes to models in terms of shape, equipment and engineering, may be introduced at any time. The information about appearance, performances, dimensions, weight, standards and functions of the vehicle is correct at the time of publication. Some equipment might only be introduced at a later date, or might only be offered in certain markets; information is provided by ŠKODA Partners. It is therefore not possible for legal claims to be made based on the data, illustrations and descriptions contained in this Owner's Manual.

Reprinting, reproduction, translation, or any other use, either in whole or in part, is not permitted without the written consent of ŠKODA AUTO a.s..

ŠKODA AUTO a.s. expressly reserves all rights relating to copyright laws.

Subject to change.

Issued by: ŠKODA AUTO a.s.

© ŠKODA AUTO a.s. 2013

ŠKODA Service App - ŠKODA Service in your pocket

The ŠKODA Service application is designed for smartphones operating on iOS and Andriod systems, and its purpose is to help ŠKODA AUTO customers in any difficult situation they may encounter on their travels.

My dealer – choose your nearest or preferred Service Centre.

Assistance – contact the Assistance Service or your favourite dealer.

My car – complete Owner's Manual and summary list of all control lamps for quick review



ŠKODA Manual App - Know your vehicle

The ŠKODA Manual application aims on users of tablet PCs who are interested in ŠKODA vehicles or already own one. The application contains full featured digital version of the Owner's Manual for all current ŠKODA models.

- > Navigation through the list of content
- > Classical reading page by page
- > Full text search throughout the whole manual
- **> Bookmarks** for fast access to favourite chapters







www.skoda-auto.com

You also can do something for the environment!

The fuel consumption of your ŠKODA and the related pollutant emissions are determined crucially on how you drive.

The noise and the wear of the vehicle depend on the way how you deal with your vehicle.

This Owner's Manual shows you how to use your ŠKODA vehicle with utmost care for the environment while driving economically at the same time.

Also please pay attention to those parts in the Owner's Manual that are marked & below.

Work with us - for the sake of the environment.

Návod k obsluze Superb anglicky 11.2013 S74.5610.12.20 3T0 012 720 AF