



CAROUSEL

KODAK
CAROUSEL® Projector

4000



Congratulations on the purchase of your new KODAK CAROUSEL 4000 Projector. We know that you'll enjoy using it for many years. If you ever feel that you need advice on using your projector, write to our staff of photographic experts at Eastman Kodak Company, Photo Information, Department 841S, Rochester, New York 14650. Also, see the comprehensive service information beginning on page 12, and the Warranty and Service Centers at the back of this manual.

SERIAL NUMBER—The serial number of your projector is stamped on the cord retainer on the underside of the projector.

Equipment subject to minor appearance changes.

© Eastman Kodak Company, 1981

Before you start to use your new projector, learn these basic safety precautions. Keep them in mind whenever you handle or operate the equipment.

IMPORTANT SAFEGUARDS

1. Read and understand all instructions.
2. Close supervision is required when any appliance is used by those who may not understand the need for the following precautions:
 - Care must be taken as burns can occur from touching hot parts. Allow the projector to cool before replacing the projection lamp or cleaning lenses.
 - Do not operate an appliance with a damaged cord or if the appliance has been dropped or damaged—until it has been examined by a qualified service technician.
 - Be careful to place the electrical cord where you, your family, and your guests will not trip on it.
 - If an extension cord is necessary, a cord with a suitable current rating should be used. Cords rated for less amperage than the appliance may overheat.
 - Never yank the cord to pull the plug from an outlet. Grasp the plug and pull it to disconnect it.
 - This instruction manual contains directions for replacing a worn-out lamp and for cleaning the projection lens, the condenser lens, the heat-absorbing glass, and the mirror. With these exceptions, do not disassemble the projector. Incorrect reassembly can cause electric shock hazard when the projector is used subsequently.

SAVE THESE INSTRUCTIONS



POWER SWITCH



Only brief operating instructions are given on this page. Read on for important details.

1. Unwind the power cord from the cord retainer on the underside of the projector. (The cord will not be wrapped around the retainer when shipped.) Plug the power cord into a 110- to 125-volt, 60 Hz power outlet. See page 4.
2. Place a loaded slide tray on the projector with the TRAY INDEX BAR opposite the GATE INDEX. See page 7.
3. Slide the POWER SWITCH to LAMP. See page 7.



4. Briefly push the SELECT BAR partway down to project the first slide on the screen. See page 7.
5. Rotate the FOCUS KNOB until the projected image is critically sharp. See page 8.
6. Briefly push the select bar partway down to change slides. For immediate random projection of any slide in the tray, press and hold the select bar all the way down, rotate the tray to the desired number, and then release the select bar. See page 8.

CONTENTS

Introduction	2
Serial Number	2
Setting Up	4
Power cord	4
Screen and seats	4
Projection distances	5
Zoom lens	5
Slide Tray	6
Loading slide tray	6
Placing slide tray on projector	7
Projecting Slides	7
Elevation	7
Focus	8
Advancing slides	8
Random selection of slides in trays	8
Removing slide tray	8
Showing single slides	8
Editing slides	8
After the show	9
Projector Care	9
Projection-lamp replacement	9
Cleaning	10
Thermal fuses	11
Emergency slide-tray removal	11
Service for Your Projector	12
Packing instructions	12
Troubleshooting guide	13
Kodak Consumer Centers	14
Auxiliary Equipment	16
Service Centers	19
Warranty	OBC

Projection-Lamp Tips

- Rough treatment of the projector may damage the projection lamp.
- Projector operation on line voltages above 125 volts greatly reduces the lamp life.
- Unplug the power cord before changing the lamp.
- Allow for unrestricted flow of air to the exhaust vent at the rear of the projector.

SETTING UP

Power Cord

Unwind the power cord from the **CORD RETAINER** on the underside of the projector. (The cord will not be wrapped around the retainer when shipped.) Turn the projector upright.

Plug the power cord into a suitable electrical outlet. *Your CAROUSEL Projector operates on 110- to 125-volt, 60 Hz current only.* If you plug your projector into a different electrical source, the projector may be damaged.

Screen and Seats

Because slides may be square, horizontal, or vertical in format, a square screen is usually most convenient. It should be large enough for easy viewing by everyone present. If possible, your projector should be at the same level as the center of the screen.

For easy viewing, your audience should not be farther from the screen than six times the longer dimension of the projected image. See the chart listing projector-to-screen distances on the next page. Place the seats as close as possible to both sides of the beam thrown by the projector. The picture appears most brilliant and life-like when you are seated near the projected beam.



CORD RETAINER

Approximate Distances in Feet from Projector to Screen
(KODAK Projection Lenses)

Long Dimension of Projected Picture	126 Slides (28 x 28 mm)					135 Slides (24 x 36 mm)					110 Slides (13 x 17 mm) in 2 x 2-inch Mounts or Adapters		
	3-inch ^a Lens	102 mm Lens	127 mm 124 mm ^a Lens	7-inch ^a Lens	102-152 mm 100-150 mm ^a Zoom Lens	3-inch ^a Lens	102 mm Lens	127 mm 124 mm ^a Lens	7-inch ^a Lens	102-152 mm 100-150 mm ^a Zoom Lens	2½-inch ^a Lens	3-inch ^a Lens	102 mm Lens
40"	10	13½	17	23½	13½ to 20	8	10½	13	18½	10½ to 16	14	16½	22
50"	12½	16½	21	29	16½ to 25	10	13	16½	23	13 to 19½	17	20½	27½
60"	15	20	25	34½	20 to 30	11½	15½	19½	27	15½ to 23½	20½	24½	33
70"	17½	23	29	40½	23 to 34½	13½	18	22½	31½	18 to 27	24	28½	38
84"	20½	27½	34½	48	27½ to 41½	16	21½	27	37½	21½ to 32	28½	34½	45½

^aThese lenses are recommended for slides mounted in glass. See page 17 for list of lenses.

**KODAK Projection
EKTANAR C Zoom Lens,
102 to 152 mm f/3.5**

**KODAK Projection
EKTAGRAPHIC FF Zoom Lens,
100 to 150 mm f/3.5**

If your projector is equipped with either of these optional zoom lenses, you can vary the size of the projected image to fill a screen without changing the projector-to-screen distance.

To use the zoom lens:

1. Install the zoom lens by moving the focus knob toward the top of the projector and guiding the lens into the projector. Insert the lens far enough into its recess so that the gear teeth on the lens barrel will be

engaged by the gear on the focus-knob shaft.

2. Rotate the focus knob until the projected image is sharp.
3. Rotate the front part of the lens barrel until the image fills the screen.
4. To obtain maximum image sharpness and the desired image size, you may need to repeat steps 2 and 3 alternately.

SLIDE TRAY

Furnished with your projector is the KODAK CAROUSEL TRANSVUE 140 Slide Tray. This tray is made of a translucent material which allows you to see the slide-identification numbers on the tray without turning on the room lights. It holds 140 slides in 2 x 2-inch cardboard or thin plastic mounts (not glass or metal mounts) up to $\frac{1}{16}$ inch thick. Since this tray was designed to hold as many slides as possible, the slide compartments in the tray are quite narrow. For this reason, your slide mounts should be in good condition. Mounts which are warped or bent may fail to drop from the tray into the projector. (If this happens, straighten the mount with your fingers or place the slide in a new mount, such as a KODAK READY-MOUNT.)

Clip off all mount corners that are frayed. Do not attempt to project slides mounted with loose or sticky tape.

As the tray revolves, the number of the slide being projected will be opposite the gate index on the projector.

(You can obtain additional slide trays from your dealer; see page 16.)



Loading Slide Tray

Check the bottom of the tray to make sure the INDEX HOLE is opposite the INDEX NOTCH. If it isn't, slide the LATCH in the direction shown by the arrow, and turn the bottom plate until the index hole points to the index notch. Then release the latch.

Remove the LOCK RING from the tray by turning the ring in the direction of the arrow marked UNLOCK; then lift off the ring. Insert a slide in each slot in the tray, with the top of the picture down. The printed border, or trademark side, of each cardboard-mounted slide—or emulsion (dull) surface of a slide mounted in plastic—should face the next lower number. For example, the bordered, trademark (or emulsion) side of slide No. 2 should face toward slide No. 1, No. 3 toward No. 2, etc.

Replace the lock ring, turning it in the direction of the arrow marked LOCK until the ring is secure on the tray.



Placing Slide Tray on Projector

Place the loaded slide tray on the projector so that the hole in the center of the tray fits over the center post on the top of the projector. Then turn the tray slowly until the TRAY INDEX BAR is opposite the GATE INDEX on the projector. The tray will drop down into operating position on the projector. If the tray doesn't drop easily into place, check the alignment of the index hole and the index notch as described under "Loading Slide Tray" on page 6.

NOTE: The tray will drop farther down on the projector during the first slide-change cycle.

PROJECTING SLIDES

Your projector has a built-in shutter that interrupts the projection beam when there is no slide in the projector gate. This eliminates the harsh glare of an illuminated white screen before the first slide in a tray, after the last slide in a tray, and during slide-tray changes. The illuminated control panel and built-in READING LIGHT will help you avoid the need of interrupting your slide show by turning on the room lights. To use the reading light, simply lift the cover.

Turn on the projection lamp by sliding the POWER SWITCH to LAMP. Briefly push the SELECT BAR partway down to put the first slide in viewing position.

POWER SWITCH



READING LIGHT

Elevation

To center the projected image on the screen vertically, elevate the front of the projector by using the ELEVATING FOOT. To release the foot, press the RELEASE while lifting the front of the projector to the desired height. Use the ELEVATING WHEEL for fine adjustments in elevation.



Focus

Let the projector warm up for about 30 seconds. Focus for maximum sharpness at the center of the screen image by rotating the **FOCUS KNOB**.



Advancing Slides

To advance the tray to the next slide, briefly push the select bar partway down.

Random Selection of Slides in Trays

To project a particular slide in a tray:

1. Press the **SELECT BAR** and hold it down.
2. Rotate the tray in either direction until the number of the slide you want to project is opposite the gate index on the projector.
3. Release the select bar; the desired slide will be projected immediately.



Removing Slide Tray

You can remove the tray from the projector at any time—with the power switch turned off or on:

1. Press the select bar and hold it down. With the power switch in the OFF position, you will need to push the select bar *all the way down*.
2. Rotate the tray until the tray index bar is opposite the gate index.
3. Release the select bar and lift off the tray.

NOTE: When the projector power cord is not plugged in, the select bar will function manually only when the power switch is in the OFF position.



Showing Single Slides

1. With the projector turned on, insert a slide (correctly oriented) into the projector gate. Push the slide down into the gate as far as it will go.
2. After viewing the slide, press the select bar to eject the slide from the gate. You can then insert another slide into the gate. You can project slides up to $\frac{1}{8}$ inch thick by this method.

Editing Slides

If you want to edit your slides, you can project them singly, as described above. Or you can place a tray of slides



on the projector. Remove the lock ring from the tray. To edit a slide after viewing, firmly press and hold down the select bar, and remove the slide from the tray. You can then reorient the slide or replace it with another.

The optional KODAK EC Stack Loader, described on page 16, provides a convenient means of editing your slides.

After the Show

1. Slide the power switch to OFF and remove the slide tray.
2. **As you support the front of the projector**, release the elevating foot by pressing the release. Then lower the front of the projector; the elevating foot will be retracted into the projector.
3. Retract the lens by turning the focus knob counterclockwise.
4. Unplug the power cord, and wind it around the cord retainer on the underside of the projector.

PROJECTOR CARE

Your CAROUSEL Projector requires *no* lubrication; all bearings are self-lubricating.

Projection-Lamp Replacement

Your projector is equipped with a code FHS projection lamp with a rated life of 70 hours. There are also two special-application lamps available. For longer lamp life (but less brightness), use a code EXY lamp with a rated life of 200 hours. For 25 percent greater brightness than offered by the FHS lamp, use a code EXR lamp with a rated life of 35 hours. Use of high-brightness lamps may cause some buckling or premature fading of your slides.

It's a good idea to keep a spare projection lamp on hand. If the lamp should burn out during use, set the power switch at FAN to speed cooling. When the projector and lamp have cooled sufficiently, turn the projector off and unplug the power cord.

Open the LAMP DOOR by pressing down on the latch. Grasp the small PULLOUT HANDLE on the LAMP-BRACKET ASSEMBLY, and pull it away from the projector to the stop position.



CAUTION: Be certain that the projector and the projection lamp have cooled before you remove the lamp.



Push the LAMP-RELEASE LEVER down and to the side until it is free of its retaining clip; then raise the lever all the way, grasp the lamp, and remove it.

Insert a new lamp into the socket with a prong of the lamp in each slot of the socket. *Do not touch the transparent portion of the lamp. If you accidentally get fingerprints on the lamp, wipe it carefully with a clean, soft cloth moistened with rubbing alcohol.* Lower the lamp-release lever to seat the lamp; then push down on the lever and slide it under its retaining clip. With your forefinger, press down firmly on the reflector base of the lamp to be sure that the lamp is correctly seated.

Push the lamp-bracket assembly all the way back into the projector. Then close the lamp door.

Cleaning

To get the brightest, sharpest screen images, keep the optical system of your projector clean. Dust or fingerprints on the projection or condenser lens will reduce the brightness of the screen image and will cause it to appear unsharp or low in contrast.


Projection lens

Turn the focus knob clockwise until the lens is out as far as it will go. Carefully move the focus knob toward the top of the projector as you withdraw the projection lens. Blow any dust or dirt from the lens.

With paper such as KODAK Lens Cleaning Paper or a soft, clean, lintless cloth, gently wipe the front and rear surfaces of the lens. If moisture is required, breathe on the lens surface or use a drop of cleaner such as KODAK Lens Cleaner on the paper or cloth.

Replace the lens by again moving the focus knob toward the top of the projector and guiding the lens back into position. Insert the lens far enough into its recess so that the gear teeth on the side of the lens barrel will be engaged by the gear on the focus-knob shaft.



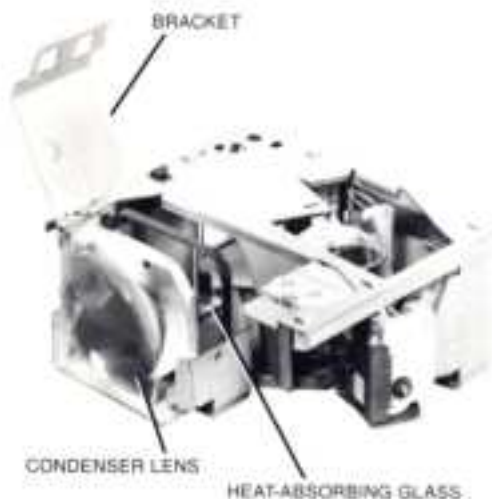

Condenser lens, heat-absorbing glass, and mirror

CAUTION: The heat-absorbing glass may shatter. Handle it only with gloves. Keep the glass covered with a cloth or other material while it is out of the projector.

Open the **LAMP DOOR**. Remove the entire lamp-bracket assembly by pulling the assembly straight back out of the projector as you push down on the **STOP LATCH** (page 9). Unscrew the small retaining screw, and raise the hinged **BRACKET**. Then *carefully* lift out the **CONDENSER LENS** and the

HEAT-ABSORBING GLASS, and *gently* place them on a soft cloth.

Clean both sides of the condenser lens and the heat-absorbing glass with paper such as **KODAK Lens Cleaning Paper** or a soft, clean, lintless cloth. Be careful not to leave fingerprints on any of the surfaces. Replace the lens and the heat-absorbing glass in their original locations. Lower the bracket and securely tighten the retaining screw.

Turn the entire lamp-bracket assembly upside down so that you can reach the mirror through the opening in the underside. Gently clean the surface of the mirror with **KODAK Lens Cleaning Paper** or a soft, clean, lintless cloth moistened with **KODAK Lens Cleaner**. Then replace the assembly in the projector and close the lamp door.

Thermal Fuses

Your projector is equipped with thermal fuses to prevent overheating and possible damage to the projector in case of exhaust-fan or motor failure. If overheating causes the fuses to open, the projector will not operate. The projector will require factory or repair-facility attention to make it run again. Refer to the **Service Centers** on page 19.



Emergency Slide-Tray Removal

If the slide-changing mechanism becomes inoperative because of a defective slide (see page 6), a foreign object, etc., turn the coin-slotted **TRAY-REMOVAL SCREW** in either direction, as far as it will go, to retract the tray lock. While holding the screw in this position, lift off the tray. When you remove the tray in this manner, turn the tray upside down and realign the index notch as described on page 6; then set the tray to one side. Remove the defective slide from the projector by actuating the select bar, or if necessary, pull the slide or foreign object from the gate by hand. Replace the tray on the projector.

SERVICE FOR YOUR PROJECTOR

If you have questions about your projector or have difficulty using it, carefully reread the section of this manual which pertains to the questions you have. *Especially* be sure to consult the Troubleshooting Guide on page 13. Since some projectors which are returned for repair do not need service, please review this information carefully.

If you believe your projector does need service—take your projector to your photo dealer.

OR

Take your projector to a Kodak Consumer Center if one is located near you. The addresses are listed on pages 14 and 15.

OR

Send a letter describing the problem to Eastman Kodak Company, Department 841S, 343 State Street, Rochester, New York 14650. Be sure to specify the model of your projector.

If your projector does require repair, you may send it through your photo dealer or directly to one of our Equipment Service Centers, listed on page 19.

Packing Instructions

1. Include a note with your projector giving all details: date and place of purchase and a description of the problem.
2. Use a sturdy carton that is large enough for you to surround the projector completely with packaging material, such as crumpled newspaper.
3. Securely fasten the carton with tape. Clearly write the address of the Equipment Service Center and your name and address on the top and bottom of the carton.
4. Mail the carton to Kodak. Remember to insure the equipment to replacement value.

Troubleshooting Guide

Important: So that you won't be without your projector unnecessarily, please consult this guide **before** requesting service.

WHAT HAPPENED	PROBABLE CAUSE	CORRECTION
Projector doesn't operate.	No power to projector.	Plug power cord into suitable electrical outlet. Set power switch on LAMP.
No illumination on screen with slide in projector gate.	Power switch on OFF or FAN.	Set switch on LAMP.
	No lamp in projector.	Install lamp; see page 9.
	Lamp burned out.	Install new lamp; see page 9.
	Lamp not seated in socket.	Check lamp; see page 9.
Slide not in proper focus on screen.	Lamp door not closed.	Close lamp door.
	Slide itself not sharp.	Examine slide for proper focus.
	Slide not properly focused manually.	Focus center of slide manually; see page 8.
	Projection lens installed improperly.	Follow instructions for replacing lens on page 10.

WHAT HAPPENED	PROBABLE CAUSE	CORRECTION
Slide fails to drop into projection position.	Tray base plate not properly indexed.	Align index hole and index notch; see page 6.
	Tray not properly positioned on projector.	Position tray on projector as described on page 7.
	Slide mount warped or frayed at corners.	Straighten mount or remount slide; see page 6.
Uneven illumination on screen.	Projection lamp not fully seated.	Check lamp; see page 9.
	Condenser lens not installed or not positioned properly in mount.	Check condenser lens; see page 11.
	Slide mount not properly seated in projector gate.	Check slide position and slide-mount condition.
Projector won't cycle to next slide.	Tray not properly positioned. Slide or foreign object stuck in tray or gate.	Position tray as described on page 7. Check tray. If necessary, see "Emergency Slide-Tray Removal" on page 11.

Kodak Consumer Centers

Kodak Consumer Centers offer photographic information on Kodak equipment and film. Also, the centers can perform minor adjustments on Kodak amateur equipment. The centers will advise you on the nature of serious problems and the cost of repairs which may be necessary. Addresses and telephone numbers may change. For up-to-date information, consult the Yellow Pages of your telephone directory under "Photographic Equipment and Supplies."

CALIFORNIA

1017 N. Las Palmas Avenue
Los Angeles 90038
(213) 465-7151

925 Page Mill Road
Palo Alto 94304
(San Francisco area)
(415) 493-7200

3250 Van Ness Avenue
San Francisco 94109
(415) 928-1300

9100 Alcosta Boulevard
San Ramon 94583
(San Francisco area)
(415) 828-7000

12100 Rivera Road
Whittier 90606
(Los Angeles area)
(213) 685-5610

FLORIDA

1001 Ponce de Leon Boulevard
Coral Gables 33134
(Miami area)
(305) 445-0511

GEORGIA

5315 Peachtree Industrial Boulevard
Chamblee 30341
(Atlanta area)
(404) 455-0123

HAWAII

1065 Kapiolani Boulevard
Honolulu 96814
(808) 531-6565

1122 Mapunapuna Street
Honolulu 96819
(808) 833-1661

ILLINOIS

1901 West 22nd Street
Oak Brook 60521
(Chicago area)
(312) 654-5542

NEW JERSEY

P.O. Box 1334, Route 130
Dayton 08810
(212) 879-1500 and (201) 329-6600

16-31 Route 208
Fair Lawn 07410
(201) 797-0600

NEW YORK

1133 Avenue of the Americas
New York City 10036
(212) 930-7565

800 Lee Road
Rochester 14650
(716) 722-0670

Photo Information Dept.
Rochester 14650
(716) 724-4155

TEXAS

2800 Forest Lane
Dallas 75234
(214) 241-1611

610 Gray
Houston 77002
(713) 820-7700

VIRGINIA

1555 Wilson Blvd.
Arlington 22209
(Washington, D.C. area)
(703) 527-2000

AUXILIARY EQUIPMENT



**KODAK Projection Screen
(40 x 40 inches)**

Designed for use at home with your projector. The Kodak Projection Screen is made of mildew-resistant fabric with a highly reflective glass-beaded surface for bright screen images. The screen has easy-opening legs and can be adjusted for overall height from the floor.



KODAK CAROUSEL Slide Tray

Additional slide trays to accommodate 80 or 140 slides, supplied in attractive bookshelf-type storage boxes, are available from your dealer. Each box contains an identification card and tray sticker.



KODAK EC Stack Loader

Lets you project and edit up to forty 2 x 2-inch slides in cardboard or very thin plastic mounts (or up to thirty 110 slides in 2 x 2 adapters) without loading them into a tray.



KODAK Projection Lenses (3)

(Curved-field lenses for slides mounted in cardboard or other non-glass mounts)

KODAK Projection EKTANAR C Lens, 102 mm *f*/2.8

KODAK Projection EKTANAR C Lens, 127 mm *f*/2.8

KODAK Projection EKTANAR C Zoom Lens, 102 to 152 mm *f*/3.5



KODAK Projection Lenses (6)

KODAK Projection EKTANAR Lens, 2½-inch *f*/3.5 (recommended only for 110 slides in 2 x 2-inch mounts or adapters)

KODAK Projection EKTANAR Lens, 3-inch *f*/3.5

KODAK Projection EKTAGRAPHIC FF Lens, 102 mm *f*/2.8

KODAK Projection EKTAGRAPHIC FF Lens, 124 mm *f*/2.8

KODAK Projection EKTANON Lens, 7-inch *f*/3.5

KODAK Projection EKTAGRAPHIC FF Zoom Lens, 100 to 150 mm *f*/3.5



KODAK EC Projector Dust Cover

This attractive tinted dust cover protects your projector from dust and dirt while you're not showing slides. It snaps firmly into place when you press on the center of the cover and is easily removed by means of a sliding latch.



**KODAK CAROUSEL Projector Case,
Model E**

This lined compartment case accommodates your projector, a slide tray in its carton, and such Kodak accessories as a stack loader, slide clip set, zoom lens, spare lamp, or extension cords. It is constructed of nylon-stitched brown simulated leather with panels that are reinforced with ebony board. All hardware is brass-finished.



KODAK CAROUSEL Slide Tray Case

This handsome case will accommodate three slide trays or a lesser number with room for your miscellaneous equipment.

It is a matching case to the Kodak CAROUSEL Projector Case, Model E.

KODAK 2 x 2 Adapter for 110 Slides

If you have slides that are in 30 x 30 mm mounts, snap each slide into an adapter for projection with your CAROUSEL Projector. Project the slides singly, in trays, or with the optional KODAK EC Stack Loader. Adapters are supplied in boxes of 20.

**KODAK Slide Clip
(for KODAK EC Stack Loader)**

Makes handling stacks of slides easier than ever—no loose slides to slip out of your hands! Each clip holds up to 36 slides in cardboard or plastic mounts up to .050 inch (1.27 mm) thick, or up to 25 slides in 2 x 2 adapters for 110 slides. The label on each clip provides space for slide identification.

A set of 12 clips provides compact, low-cost storage for up to 432 slides in an attractive bookshelf-type storage box.

SERVICE CENTERS

If your Kodak projector should require service, complete facilities are provided at the following Kodak Equipment Service Centers. For fastest service, send your projector to the Service Center nearest you.

9100 Alcosta Blvd., San Ramon, California 94583

12100 Rivera Road, Whittier, California 90606

5315 Peachtree Industrial Blvd., Chamblee, Georgia 30341

1122 Mapunapuna Street, Honolulu, Hawaii 96819

1901 West 22nd Street, Oak Brook, Illinois 60521

Route 130, P.O. Box 1334, Dayton, New Jersey 08810

800 Lee Road, Rochester, New York 14650

2800 Forest Lane, Dallas, Texas 75234

FULL ONE-YEAR WARRANTY

This Kodak projector is warranted by Kodak to function properly for one year from the date of purchase. This warranty does not cover the projection lamp. Kodak makes no other express warranty for this projector. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Carefully read and follow the instructions in the manual to get good results and prevent damage to your projector.

If this Kodak projector does not function properly within one year after purchase, Kodak will repair it without charge. If Kodak is unable to repair it, the option of replacement or refund of the purchase price will be available. These remedies are not available if the projector is damaged by misuse or other circumstances beyond Kodak's control, or if the improper functioning of the projector is caused by failure to follow the care and operating instructions in the manual.

Repair, and the option of replacement or refund in the event that Kodak is unable to repair the projector, are Kodak's only obligations. Kodak will not be responsible for any consequential or incidental damages resulting from the sale or use of this projector, even if loss or damage is caused by the negligence or other fault of Kodak. (Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.)

For assistance in using this projector, contact a dealer in Kodak products or one of the Kodak Consumer Centers located in the United States. For service on this projector, return it through a dealer in Kodak products, one of the Kodak Equipment Service Centers listed on page 19, or a Kodak Consumer Center. Enclosing a note with the projector giving details of the problem and date of purchase will help Kodak return the projector promptly.



Consumer/Professional & Finishing Markets

Rochester, New York 14650

3-82-G

Part No. 634646a

KODAK, CAROUSEL, EKTANAR, EKTAGRAPHIC, EKTANON, TRANSVUE, and READY-MOUNT are trademarks.

Printed in U.S.A.