

# TOUCH 1500

***Raychem***

## Configuration Guide

Software Version 2.x.x

***Raychem* NGC System**





# Contents

<b>Section 1 – Introduction.....</b>	<b>9</b>
<b>Raychem NGC-40 System Overview.....</b>	<b>9</b>
1.1.1 Product Overview .....	9
1.1.2 Control.....	10
1.1.3 Monitor.....	10
1.1.4 Ground-Fault Protection .....	10
1.1.5 Installation.....	10
1.1.6 Communications.....	11
1.1.7 Complete System .....	11
<b>Vital Information.....</b>	<b>11</b>
<b>License Agreement .....</b>	<b>12</b>
1.3.1 Raychem Touch 1500 Software—License Agreement .....	12
<b>Section 2 – NAVIGATING AND SETTING UP THE MENUS .....</b>	<b>15</b>
<b>Getting Familiar with Raychem Touch 1500 .....</b>	<b>15</b>
<b>File and System Menus .....</b>	<b>15</b>
<b>Section 3 – BASIC CONFIGURATION .....</b>	<b>17</b>
<b>An Example of a Simple Circuit Setup.....</b>	<b>17</b>
<b>Setting Up Additional Circuits .....</b>	<b>24</b>
<b>Circuits 1–3 Setup Complete Confirmation .....</b>	<b>24</b>
<b>Starting the NGC-40 .....</b>	<b>24</b>
3.4.1 System Requirements.....	24
3.4.2 Initial Setup .....	24
<b>Section 4 – FULL CONFIGURATION .....</b>	<b>25</b>
<b>Adding a NGC-40-BRIDGE to Raychem Touch 1500.....</b>	<b>25</b>
4.1.1 Communication Ports.....	25
4.1.2 RS-485 Communication ports.....	25
4.1.3 Communication via Ethernet Port .....	26
4.1.4 Scanning the Network for Devices.....	27
4.1.5 Start Scan .....	28
4.1.6 Scanning Through the Ethernet Port.....	28
4.1.7 Discover Devices.....	28
4.1.8 Configuration of System Preferences.....	29
4.1.9 Language Entry List.....	29
4.1.10 Temperature Units .....	29
4.1.11 User Activity Timeout (minutes).....	29
<b>Configuration of NGC-40-BRIDGE Modules.....</b>	<b>30</b>
4.2.1 General - Tags and Alarms.....	30
4.2.2 Communication Ports – Serial (COM Ports 1, 2 & 3) and Ethernet.....	31
4.2.3 Miscellaneous Device Information .....	31

<b>Configuration of NGC-40 HTC Modules .....</b>	<b>32</b>
4.3.1 Basic Settings .....	32
4.3.1.1 General.....	32
4.3.1.2 Control Temperature .....	32
4.3.1.3 Control Modes .....	35
4.3.1.4 Local RTD (TS1) .....	37
4.3.1.5 Electrical .....	38
<b>Configuration of NGC-40 HTC3 Modules .....</b>	<b>41</b>
4.4.1 Electricals 1 for HTC3 .....	41
4.4.1.1 Line Current 1 (Phase 1) .....	41
4.4.1.2 Line Current 2 (Phase 2).....	43
<b>4.4.1.3 Line Current 3 (Phase 3).....</b>	<b>43</b>
<b>4.4.1.4 Electricals 2.....</b>	<b>43</b>
<b>Configuration of RMM Module .....</b>	<b>45</b>
4.5.1 Configure the NGC-40 Bridge to utilize the RMM(s) using the Touch1500 interface.....	45
4.5.2 Assign an RMM RTD to a circuit.....	46
<b>Section 5 – ADVANCED SETTINGS.....</b>	<b>51</b>
<b>Temperatures.....</b>	<b>51</b>
5.1.1 Set Temperature Sources 2 Though 8 (TS2 to TS8).....	51
<b>Other Alarms.....</b>	<b>52</b>
5.2.1 Other Alarms .....	52
5.2.1.1 Failure and Trip Alarms .....	52
5.2.1.2 Contactor and Heater time Alarms.....	53
5.2.2 Alarm Output.....	53
5.2.3 Alarm Latch Settings.....	54
<b>Electrical .....</b>	<b>55</b>
5.3.1 Currents/Resistance Settings .....	55
5.3.2 Electrical General/Circuit Breaker Settings .....	56
5.3.2.1 Electrical General .....	56
5.3.2.2 Circuit Breaker Settings .....	56
5.3.3 Output Switch Settings – SSR Only.....	57
<b>Miscellaneous Settings .....</b>	<b>58</b>
5.4.1 Load Shedding.....	58
5.4.2 Digital Input   Auto-Cycle .....	59
5.4.2.1 Digital Input.....	59
5.4.2.2 Auto Cycle.....	59
<b>Device Information .....</b>	<b>60</b>
<b>Configure an HTC3 Module on Advanced Settings .....</b>	<b>60</b>
5.6.1 Set up General/GF on HTC3.....	61
5.6.1.1 Electrical General.....	61
5.6.2 Line Current Alarms .....	61
5.6.3 Electrical Setup 1.....	61
5.6.3.1 Line 1 Circuit Breaker and Output Switch Settings.....	61
5.6.3.2 Line 1 Heating Cable Resistance Alarms .....	63
5.6.4 Electrical Setup 2 .....	64
5.6.5 Electrical Setup 3 .....	64

<b>Configuration of the NGC-40 I/O Module.....</b>	<b>64</b>
5.7.1 General .....	64
5.7.1.1 Alarm Settings.....	64
5.7.2 Temperature Sensors.....	65
5.7.2.1 Tab - Sensor 1.....	65
5.7.2.2 Tab - Sensor 2, 3, 4.....	66
5.7.3 Alarm Sources.....	66
5.7.4 Alarm Latchings .....	67
5.7.5 Miscellaneous .....	67
<b>Safety Limiter Module NGC-40-SLIM .....</b>	<b>68</b>
5.8.1 General – Limiter Settings.....	69
5.8.2 Alarms – Alarm Settings .....	70
5.8.2.1 Alarm Output .....	70
5.8.2.2 Alarm Settings .....	70
5.8.3 Alarms – Alarm Latchings .....	71
5.8.4 Alarms – Alarm Output.....	72
5.8.5 Temperature Sensors .....	73
5.8.5.1 Temperature Sensor Settings – Temperature Sensor 1 Tag .....	73
5.8.5.2 Temperature Usage Settings – Temperature Sensor 1 Setup.....	73
5.8.6 Miscellaneous – Device Information .....	74
5.8.7 Assign a NGC-40-SLIM to HTC/HTC3 Module.....	74
5.8.8 Safety Temperature Limiter Assignment Confirmation .....	75
<b>Section 6 – CONFIGURATION OF THE Elexant 3500i Electronic Thermostat.....</b>	<b>76</b>
<b>Adding AN Elexant 3500i to Raychem Touch 1500 .....</b>	<b>76</b>
6.1.1 Communication Ports .....	76
6.1.2 Communication via RS-485 ports .....	76
6.1.3 Communication Port Settings .....	76
6.1.4 Scanning through the RS-485 port .....	76
6.1.5 Configuration of System Preferences.....	77
<b>Configuration of Elexant 3500i Electronic Thermostat.....</b>	<b>77</b>
6.2.1 Identifying and Selecting the Elexant 3500i Electronic Thermostat .....	77
6.2.2 Basic Settings .....	78
6.2.2.1 Basic Settings - Temperature.....	79
6.2.2.2 Control Modes .....	79
6.2.2.3 Set Local RTD 1 & RTD 2 .....	80
6.2.2.4 Set Electrical Parameters .....	80
6.2.3 Advanced Settings.....	80
6.2.3.1 Other Alarms .....	81
6.2.4 Contactor and Heater Time Alarms.....	82
6.2.4.1 Electrical .....	85
6.2.4.2 Temperature Limiter .....	86
6.2.4.3 Miscellaneous – Auto Cycle .....	87
6.2.4.4 Device Information .....	88

## **Section 7 – CONFIGURATION OF THE NGC-20/ Elexant 5010i CONTROLLER ..... 89**

### **Adding a NGC-20/ Elexant 5010i to Raychem Touch 1500 ..... 89**

7.1.1 Communication Ports .....	89
7.1.2 Communication via RS-485 ports .....	89
7.1.3 Communication Port Settings .....	89
7.1.4 Scanning through the RS-485 port .....	89
7.1.5 Configuration of System Preferences .....	90

### **Configuration of NGC-20/ Elexant 5010i Controllers ..... 90**

7.2.1 Identifying and Selecting the NGC-20/ Elexant 5010i Controller .....	90
7.2.2 Basic Settings .....	91
7.2.2.1 Basic Settings - Temperature .....	91
7.2.2.2 Control Modes .....	91
7.2.2.3 Set Local RTD 1 & RTD 2 .....	91
7.2.2.4 Set Electrical Parameters .....	92
7.2.3 Advanced Settings .....	92
7.2.3.1 Other Alarms .....	92
7.2.4 Contactor and Heater Time Alarms .....	93
7.2.4.1 Electrical .....	95
7.2.4.2 Safety Temperature Limiter .....	96
7.2.4.3 Miscellaneous – Load Shedding .....	97
7.2.4.4 Miscellaneous – Auto Cycle .....	97
7.2.4.5 Device Information .....	98

## **Section 8 – CONFIGURATION OF AN ELEXANT 4010i/ 4020i CONTROLLER..... 99**

### **ADDING AN ELEXANT 4010i/ 4020i TO Raychem Touch 1500..... 99**

8.1.1 Communication Ports .....	99
8.1.2 Communications via RS-485 Ports .....	99
8.1.3 Communication Port Settings .....	99
8.1.4 Communication via Ethernet Port.....	99
8.1.5 Scanning Through the Ethernet Port .....	100
8.1.6 Configuration of System Preferences.....	101

### **CONFIGURATION OF ELEXANT 4010i/4020i CONTROLLERS.....101**

8.2.1 Identifying and Selecting the Elexant 4010i/ 4020i Controller .....	101
8.2.2 Basic Settings .....	101
8.2.2.1 Basic Settings– Temperatures .....	102
8.2.2.2 Control Temperature .....	102
8.2.2.3 Control Modes .....	104
8.2.2.4 Set TS1, TS2 & TS3.....	106
8.2.2.5 Set Electrical 1 Settings .....	107
8.2.2.6 Set Electrical 2 Settings.....	110
8.2.3 Advanced Settings.....	112
8.2.3.1 Other Alarms .....	113
8.2.3.2 Alarm Output .....	114
8.2.3.3 Temperature Alarm Latching.....	115
8.2.3.4 Electrical Alarm Latching 1 .....	115

8.2.3.5 Electrical Alarm Latching 2.....	116
8.2.3.6 Other Alarm Latching.....	116
8.2.3.7 Electrical .....	117
8.2.3.8 Safety Temperature Limiter .....	120
8.2.3.9 Miscellaneous .....	121
8.2.3.10 Device Information .....	123
<b>Section 9 – FILE &amp; SYSTEM MENU.....</b>	<b>124</b>
<b>File Menu   Backup   Restore Database, Export Event Log &amp; Exit Program .....</b>	<b>124</b>
9.1.1 File – Back up Database .....	124
9.1.2 File – Restore Database .....	124
9.1.3 File – Export Event Log.....	125
9.1.4 File – Exit Program .....	125
<b>System Settings .....</b>	<b>125</b>
9.2.1 System   Device Manager Settings.....	125
9.2.2 System   User Level settings .....	126
9.2.3 System   Group settings.....	128
<b>System   SYSTEM Alarm Settings .....</b>	<b>130</b>
<b>System   Communication Settings .....</b>	<b>131</b>
<b>System   Preferences.....</b>	<b>131</b>
9.5.1 Operations.....	132
9.5.2 Circuit Overview of HTC .....	132
9.5.3 Monitor Device – Maintenance Values 1.....	134
9.5.4 Monitor Device – Maintenance Values 2 .....	136
9.5.5 Monitor Device – Maintenance Values - Dynamic Output.....	136
9.5.6 Analogue Readings .....	137
9.5.7 Monitor Device – Maintenance Values .....	138
9.5.8 Circuit Overview of HTC3 .....	139
9.5.9 Monitor Device – Maintenance Values 1.....	140
<b>System   DCS Gateway.....</b>	<b>140</b>
<b>Section 10 – Remote Data Access With the DCS Gateway.....</b>	<b>141</b>
<b>Overview.....</b>	<b>141</b>
<b>General Work Flow Required for Setup and Operations .....</b>	<b>141</b>
<b>Creating the DCS Gateway Map File .....</b>	<b>142</b>
<b>Setting up the DCS Gateway for Operation .....</b>	<b>142</b>
10.4.1 Setting up the DCS Gateway.....	142
10.4.2 Selecting and Viewing a DCS Gateway Map File .....	143
10.4.3 Creating a DCS Gateway Port.....	145
10.4.3.1 Communication via Serial RS-485 or RS-232 .....	145
10.4.3.2 Communication via Ethernet TCP/IP .....	147
10.4.4 Starting and Stopping the DCS Gateway .....	148
10.4.5 Editing a DCS Gateway Port .....	148
10.4.6 Starting and Stopping a DCS Gateway Port.....	149
<b>Setting up the DCS Gateway for VLINX and Profibus Gateway Operation .....</b>	<b>149</b>
10.5.1 Pre-programmed Vlinx configuration file.....	150
10.5.2 The Vlinx Custom Configuration File .....	150

**Viewing DCS Gateway Data..... 150**

- 10.6.1 View Data Points..... 151
  - 10.6.1.1 Find Address Window .....153
- 10.6.2 View DCS Gateway Port Status.....153
  - 10.6.2.1 Gateway Port Data Tab .....154
  - 10.6.2.2 Port Diagnostic Data Tab.....154
  - 10.6.2.3 Close View Port Status Window.....155

## SECTION 1 – INTRODUCTION

### 1.1 Raychem NGC-40 System Overview

#### 1.1.1 Product Overview

The Raychem NGC-40 is a multipoint electronic control, monitoring and power distribution system with unique single-point controller architecture for heat tracing used in process temperature, maintenance and freeze protection applications. By taking advantage of innovative modular packaging techniques, the Raychem NGC-40 system provides configuration and component flexibility so that it may be optimized for a customer's specific needs. This manual provides information pertaining to the configuration and maintenance of all the components of the Raychem NGC-40. For information on installation, operation, testing, and adjustments, please see the NGC-40 Installation Manual (North American, H58268/Europe, IMO0708).



Figure 1.1 Touch 1500 mounted in the NGC-40 panel

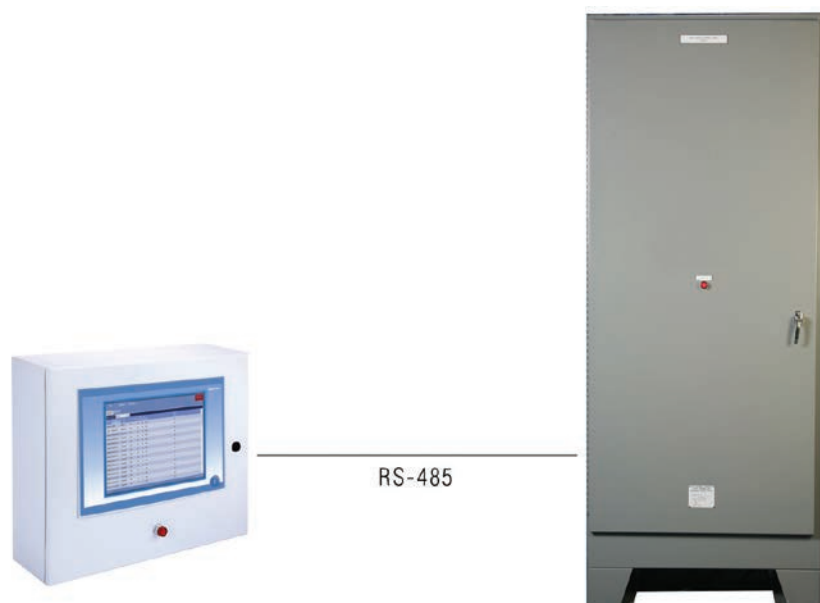


Figure 1.2 Touch 1500 mounted remotely from NGC-40 panel

### 1.1.2 Control

The Raychem NGC-40 modules measures temperatures with 3-wire, 100-ohm platinum or 2-wire Nickel/Nickel iron RTDs. The temperature information may come from a single, direct RTD hard-wired to the NGC-40 HTC/HTC3 Module, from a local NGC-40 I/O module, or from a remote source such as an RMM module (feature available in 2011). When configured with Electro-Mechanical Relays (EMRs) the Raychem NGC-40 can be configured for the following control modes:

- On/Off (Deadband)
- PASC Contactor (Proportional Ambient Sensing Control)
- Always ON
- Always OFF

When configured with SSRs, the panel can be configured for the following control modes:

- On/Off (Deadband)
- Proportional
- PASC SSR (Proportional Ambient Sensing Control)
- Always ON
- Always OFF

The Raychem NGC-40 also supports load shedding. This mode overrides temperature control and forces the output of the control module off. The load-shedding command can be issued by Distributed Control System (DCS) or Raychem Supervisor (DTS).

### 1.1.3 Monitor

The Raychem NGC-40 system measures a variety of parameters including ground fault, temperature and load current(s) to ensure system integrity. In the case of three-phase heaters, the current of each phase can be separately measured and monitored. The system can be set to periodically check the heating cable for faults, alerting maintenance personnel of a pending heat-tracing problem. All alarms can be individually enabled or disabled depending on customer preference. They can be also separately defined as latching or non-latching by the customer to meet their needs. The latching alarms need to be reset before they will disappear from the alarm list. A dry contact relay is available for alarm annunciation back to a Distributed Control System (DCS). Alternatively, the Raychem NGC-40 system can report alarm and monitoring data directly to the DCS via Modbus®.

### 1.1.4 Ground-Fault Protection

Electrical codes require ground-fault equipment protection on all heat-tracing circuits. Raychem NGC-40 systems incorporate ground-fault monitoring and trip features within the individual controllers. Where electrical codes allow the Raychem NGC-40 system to perform the ground-fault protection function, the need for specialized ground-fault circuit interrupting circuit breakers can be eliminated. This can help reduce overall system cost.

### 1.1.5 Installation

The Raychem Touch 1500 heat-tracing controller configuration and monitoring software provides a graphical user interface for the Raychem NGC-40 Control & Monitoring System. The software allows the user to configure and monitor the Raychem NGC-40 heat-tracing controller, Bridge and I/O modules.

The Raychem NGC-40 system is configured with a touch screen User Interface Terminal (Touch 1500 or TOUCH1500R) that has LCD color touch-screen display. This display provides an intuitive user interface for easy and efficient programming without keyboards or cryptic codes.

#### Touch 1500 Installed in Nonhazardous (Unclassified) Indoor Panel Locations

If the panel is located in a nonhazardous (unclassified) indoor location, the Touch 1500 can be installed locally on the Raychem NGC-40 panel door.

#### Touch 1500 Installed in Outdoor Panel Locations

If the panel is located in an outdoor, nonhazardous location, the Touch 1500 can be installed locally on the Raychem NGC-40 panel door. However, the Touch 1500 will require a protective cover over the display to shield it from the environment and a space heater/ thermostat to ensure operation if ambient temperatures below 32°F (0°C) are expected.



### **Touch 1500 Installed in Hazardous/Outdoor Panel Locations**

If the panel is located in a hazardous/outdoor location, the Touch 1500 can be installed locally on the Raychem NGC-40 panel door. However, the panel must have a Z Purge system, a protective cover over the display to shield it from the environment and a space heater/thermostat to ensure operation if ambient temperatures below 32°F (0°C are expected). In this configuration, a hazardous area mouse will be provided on the panel door to interface with the Touch 1500.

### **Touch 1500 Installed Separately from the Panel Locations**

If the Touch 1500 needs to be mounted separately from the Raychem NGC-40 control panel, such as when the panel is in a hazardous or difficult to access location, the Touch 1500R provides a wall-mount alternative for remote mounting in a nonhazardous (unclassified) indoor location.

### **1.1.6 Communications**

The Raychem NGC-40 system can be networked to host PC running Windows®- based Raychem Supervisor client-server software (DTS) and/or to a Touch 1500 for central programming, status review, and alarm annunciation. Information access for external devices is through the NGC-40-BRIDGE communications module, which supports the Modbus protocol and provides RS-232/RS-485 and 10/100Base-T Ethernet communication interfaces.

The current software in the Touch 1500 does not allow the user to network from the Touch 1500 to a host PC running Windows-based Raychem Supervisor. If this feature is required, the PC must be connected directly to the NGC-40-BRIDGE.

### **1.1.7 Complete System**

The Raychem NGC-40 is supplied as a complete system ready for field connection of heat-tracing power wiring and temperature sensor input. Optional Power Distribution further enhances the reduction of field wiring and labor to install.

## **1.2 Vital Information**

This manual is a guide for the setup and operation of the Raychem NGC-40 Control & Monitoring system using the Touch 1500 user interface.



**Important:** All information, including illustrations, is believed to be reliable. Users, however, should independently evaluate the suitability of each product for their particular application. Chemelex makes no warranties as to the accuracy or completeness of the information, and disclaims any liability regarding its use.

Chemelex' only obligations are those in the Chemelex Standard Terms and Conditions of Sale for this product, and in no case will Chemelex or its distributors be liable for any incidental, indirect, or consequential damages arising from the sale, resale, use, or misuse of the product. Specifications are subject to change without notice. In addition, Chemelex reserves the right to make changes—without notification to Buyer—to processing or materials that do not affect compliance with any applicable specification.

## 1.3 License Agreement

### 1.3.1 Raychem Touch 1500 Software—License Agreement

This agreement is a legal agreement between you, “the end user”, and Chemelex, LLC (“Chemelex”). BY INSTALLING OR OTHERWISE ACCESSING THIS PROGRAM, YOU ARE AGREEING TO BECOME BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, DO NOT INSTALL OR ACCESS THIS PROGRAM. IF INSTALLING OR OTHERWISE ACCESSING THIS PROGRAM BY OPENING A SEALED DISK PACKAGE, PROMPTLY RETURN THE UNOPENED DISK PACKAGE AND THE OTHER ITEMS (INCLUDING WRITTEN MATERIALS OR OTHER CONTAINERS) TO THE PLACE WHERE YOU OBTAINED THEM.

**1. GRANT OF LICENSE.** The Raychem Touch 1500 Software (the “Software”) is licensed, not sold, to you for use only under the terms of this Agreement, and Chemelex reserves any rights not expressly granted to you. Subject to the terms and conditions of this Agreement, Chemelex grants to you a non-exclusive, nontransferable, limited license (without the right to sublicense others) to use the one copy, including written materials if any, of the Software on a single computer at the location (company and address) to which Chemelex issued this copy of the Raychem Touch 1500 Software. The Software is owned by Chemelex LLC and is protected by United States copyright laws and international treaty provisions. All copies made by you are subject to the terms and conditions of this Agreement. The structure, organization and code of the Software are valuable trade secrets and confidential information of Chemelex. You agree not to modify, alter, merge, adapt, duplicate, distribute, translate, decompile, disassemble, reverse engineer, create derivative works, copy for use on any other computer or at any other location, or otherwise make this software available to any person or entity outside this location. The Software is licensed only to you. In no event may you transfer, sell, sublicense, rent, assign or transfer rights, lease, or otherwise dispose of the Software on a temporary or permanent basis without the prior written consent of Chemelex. You agree to use reasonable efforts to protect against the unauthorized copying and use of the Software by others. You agree not to remove, disable or circumvent any proprietary notices or labels contained on or within the Software.

#### 2. OTHER RESTRICTIONS.

1. You may not sublicense, rent or lease the Raychem Touch 1500 Software to anyone.
2. You agree to notify Chemelex promptly if “bugs” or seemingly incorrect or anomalous behavior is discovered when using the Software.
3. You agree that the Raychem Touch 1500 Software, including written materials (if any) and all copies in whole or in part, will be destroyed or returned to Chemelex at the written request of the Chemelex representative.
4. By installing or otherwise accessing the Raychem Touch 1500 Software, you acknowledge that you have read and understood Chemelex’s Disclaimer of Warranty and Limitation of Liability, set forth below.
5. You agree to use reasonable efforts to protect against the unauthorized copying and use of the Raychem Touch 1500 Software by others.

**3. DISCLAIMER OF WARRANTY.** THE RAYCHEM Touch 1500 SOFTWARE AND ACCOMPANYING WRITTEN MATERIALS ARE PROVIDED “AS IS” WITHOUT WARRANTY OF ANY KIND. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE RAYCHEM Touch 1500 SOFTWARE IS ASSUMED BY YOU. Chemelex DOES NOT WARRANT THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT PROGRAM DEFECTS WILL BE CORRECTED.

**4. LIMITED WARRANTY – MEDIA.** THE MEDIUM ON WHICH THE PROGRAM IS ENCODED IS WARRANTED TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE FOR A PERIOD OF SIXTY (60) DAYS FROM THE DATE OF DELIVERY TO YOU AS EVIDENCED BY A COPY OF YOUR RECEIPT. ALTHOUGH Chemelex BELIEVES THE MEDIA AND THE PROGRAM TO BE FREE OF VIRUSES, THE MEDIUM AND THE PROGRAM ARE NOT WARRANTED TO BE VIRUS FREE. Chemelex’s LIABILITY AND YOUR EXCLUSIVE REMEDY IF THE MEDIUM IS DEFECTIVE OR INCLUDES ANY VIRUS SHALL BE PROMPT REPLACEMENT OF THE MEDIUM WITH A NEW RAYCHEM Touch 1500 SOFTWARE PRE-ENCODED DISC.

**5. EXCLUSION OF ALL OTHER WARRANTIES.** EXCEPT AS EXPRESSLY PROVIDED ABOVE, Chemelex DISCLAIMS ALL WARRANTIES, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, EVEN IF Chemelex HAS BEEN ADVISED OF SUCH PURPOSE. THIS AGREEMENT GIVES YOU SPECIFIC LEGAL RIGHTS. SOME STATES OR COUNTRIES DO NOT ALLOW THE EXCLUSION OF WARRANTIES SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

**6. LIMITATION OF LIABILITY.** THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE SOFTWARE IS ASSUMED BY YOU. IN NO EVENT SHALL Chemelex, ITS AFFILIATES, DIRECTORS, OFFICERS, SHAREHOLDERS, EMPLOYEES OR OTHER REPRESENTATIVES BE LIABLE FOR DAMAGES OF ANY KIND, INCLUDING WITHOUT LIMITATION, ANY LOSS, DAMAGE, OR DELAY, OR FOR ANY LOST PROFITS, LOSS OF USE, INTERRUPTION OF BUSINESS, OR FOR ANY COMPENSATORY, SPECIAL, INCIDENTAL, CONSEQUENTIAL, INDIRECT DAMAGES (HOWEVER ARISING, INCLUDING NEGLIGENCE) OF ANY KIND ARISING OUT OF OR IN CONNECTION WITH THE USE OF, OR THE INABILITY TO USE, THE SOFTWARE OR THIS AGREEMENT (EVEN IF Chemelex HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES). FURTHER, IN NO EVENT SHALL Chemelex, ITS AFFILIATES, DIRECTORS, OFFICERS, SHAREHOLDERS, EMPLOYEES OR OTHER REPRESENTATIVES BE LIABLE TO YOU IN AN AMOUNT GREATER THAN THE AMOUNT ACTUALLY PAID BY YOU, IF ANY, FOR THE SOFTWARE. YOU FURTHER AGREE THAT REGARDLESS OF ANY STATUTE OR LAW TO THE CONTRARY, ANY CLAIM OR CAUSE OF ACTION ARISING OUT OF OR RELATED TO USE OF THE SOFTWARE OR THE TERMS AND CONDITIONS MUST BE FILED WITHIN ONE (1) YEAR AFTER SUCH CLAIM OR CAUSE OF ACTION AROSE OR BE FOREVER BARRED.

**7. INDEMNITY.** To the extent allowed under federal and state law, you agree to indemnify and hold Chemelex, its parents, subsidiaries, affiliates, officers, employees, sponsors and partners harmless from any claim, loss, cost, expense, demand, or damage, including reasonable attorneys' fees, arising directly or indirectly out of (a) your use of, or inability to use, the Software, (b) your activities in connection therewith, or (c) your breach of this Agreement or violation of the rights of any other party.

**8. TERMINATION.** The license granted herein will automatically terminate without notice from Chemelex if you fail to comply with any term or condition of this Agreement. You agree, upon such termination, to remove the Raychem Touch 1500 Software from any memory and/or storage media or device, and to return the Raychem Touch 1500 Software, including all media and written materials, or destroy the same and certify such destruction to Chemelex, along with any backup or other copies in your possession.

**9. COMPLETE AGREEMENT – MODIFICATION IN WRITING.** This Agreement constitutes the sole and complete understanding between the parties with respect to the Raychem Touch 1500 Software and its use, and may not be varied except by a writing signed by an officer of Chemelex. You agree that you may not rely on any representations concerning the Raychem Touch 1500 Software to the extent they vary from this Agreement, and such representations, if any, will neither add to nor vary the terms of this Agreement.

**10. CHOICE OF LAWS.** This Agreement is governed by the laws of the State of Texas and the United States, including U.S. Copyright Laws.

**11. EXPORT LAWS.** The Raychem Touch 1500 Software may require a license from the U.S. Department of Commerce or other governmental agency before it may be exported. The term "export" includes many acts (such as transferring the Raychem Touch 1500 Software to a foreign citizen within the United States), in addition to sending or taking the Raychem Touch 1500 Software outside the United States. You agree to ascertain the necessary licensing procedures and obtain any required licenses before exporting the Raychem Touch 1500 Software. You also agree to indemnify Chemelex and assume all financial responsibility for any losses it may suffer if you do not comply with this paragraph.

**12. GOVERNMENT RESTRICTED RIGHTS.** User acknowledges that the Raychem Touch 1500 Software has been developed at private expense and is provided with "Restricted Rights." Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (b)(3) and paragraph (c) of the Rights in Technical Data clause at 48 C.F.R. 252.227-7013, or subparagraphs (c)(1) and (2) of the Commercial Computer Software – Restricted Rights clause at 48 C.F.R. 52.227-19, as applicable. This provision applies to the Raychem Touch 1500 Software acquired directly or indirectly by or on behalf of any government. The Raychem Touch 1500 Software is a commercial product, licensed on the open market at market prices, and was developed entirely at private expense and without the use of any government funds. Any use, modification, reproduction, release, performance, display, or disclosure of the Raychem Touch 1500 Software by any government shall be governed solely by the terms of this Agreement and shall be prohibited except to the extent expressly permitted by the terms of this Agreement, and no license to the Raychem Touch 1500 Software is granted to any government requiring different terms.

**13. ASSIGNMENT.** You may neither assign any right nor delegate any obligation under this Agreement and attempted assignment or delegation shall be void. Chemelex may freely assign this agreement and its rights and obligations there under to any third party.

**14. INVALID PROVISIONS.** If any of the provisions of this provisions Agreement are invalid under any applicable statute or rule of law, they are to that extent deemed omitted.

**15. WAIVER.** No failure or delay of Chemelex in exercising or enforcing any right or provision of this Agreement shall constitute a waiver of such right or provision, or any other right or provision hereunder. Furthermore, any waiver by Chemelex of any right or provision of this Agreement shall not be construed as, or constitute, a continuing waiver of such right or provision, or waiver of any other right or provision of this Agreement.

**16. HEADINGS.** The section titles in this Agreement are for convenience only.

**17. SURVIVABILITY.** You agree that the terms and conditions of this Agreement shall survive any termination of this Agreement and your rights to use the Software. Should you have any questions concerning this Agreement, or if you desire to contact Chemelex for any reason, please write to:

Chemelex  
15375 Memorial Dr  
Houston, TX 77079  
USA  
info@chemelex.com

## SECTION 2 – NAVIGATING AND SETTING UP THE MENUS

This section provides information on how to use Raychem NGC-40 software to configure, monitor and maintain a heat-tracing circuit in an NGC-40 system. It starts with Getting Familiar with the Raychem NGC-40 program. In the remaining sections, there are instructions on Managing Alarms, Identifying NGC-40 Modules, Comparing the NGC-40 Module List, Loading NGC-40 Module Configurations, and Changing the NGC-40-BRIDGE Communication Settings.

### 2.1 Getting Familiar with Raychem Touch 1500

The Raychem Touch 1500 Main window has several functional areas, as illustrated in Figure 2.1. The window below is the Circuit List of a NGC-40 system with a BRIDGE, two HTC's, one HTC3 and one I/O Module:

Figure 2.1 shows the Raychem TOUCH1500 main window. The window displays a table of circuit data with the following columns: Tag, Status, Address, Device Type, Setpoint Temperature, Actual Temperature, and Line Current. The table lists several circuits, including NGC40-HTC-11EE, NGC40-HTC3-1132, NGC20-3E93, and RMM-DI modules. The status bar at the bottom indicates the software version is V3.0.0 and the system is Ready. The date and time are Wednesday, December 2, 2020 3:09:48 PM.

Tag	Status	Address	Device Type	Setpoint Temperature	Actual Temperature	Line Current
NGC40-HTC-11EE	OK	0011EE	NGC40HTC	15°C	60°C	0A
NGC40-HTC3-1132	OK	001132	NGC40HTC3	30°C	53°C	0A
NGC20-3E93	OK	3	NGC20	500°C	207°C	0A
RMM-DI [17]	OK	17	RMM-DI	N/A	N/A	N/A
RMM-DI [19]	OK	19	RMM-DI	N/A	N/A	N/A
RMM-DI [22]	OK	22	RMM-DI	N/A	N/A	N/A
ELEXANT W/LIMITER	OK	10	4010i/4020i	100°C	69°C	0A

Figure 2.1 Raychem TOUCH1500 main window

### 2.2 File and System Menus

Below is a Menu Map of the File and System buttons shown at the top of the window. The information you learn in this section will help you navigate through the menus and become more proficient in using all the features of the Touch 1500

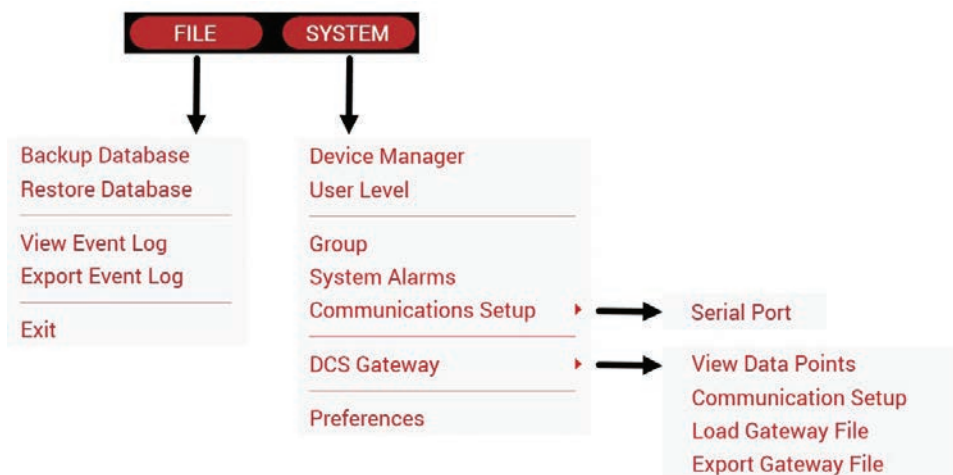


Figure 2.2 Menu map of file and system buttons

Functional Window Area	Functionality	Security Level Required
<b>File Menu</b>		
Backup Database	Allows the User to create a backup database of the NGC-40 modules settings and configuration onto a memory stick.	3, 4
Restore Database	Allows the User to restore the NGC-40 modules settings from a backup database via a memory stick into the Touch 1500 program.	3, 4
Export Event Log	Allows the User to export the Event Log onto a memory stick.	3, 4
Exit	Exit the program to Windows desktop.	4
<b>System Menu</b>		
Device Manager	Allows the User to load or remove the modules, (HTC, HTC3 and I/O modules) from the database, configure each module, and set the modules online or offline.	3, 4
User Level	Allows the user to set passwords for each of the four security levels available in the Touch 1500.	3, 4
Group	Allows the User to assign a name to a group of circuits that can be used in the "Filter by Group" in the Circuit List.	3, 4
Common Alarms	Allows the user to set up the Touch 1500 common alarms.	3, 4
Communications	Allows the user to set up the Field Communication ports: Com1 (RS-232), COM 3 (RS-485) or Ethernet from the Touch 1500 to the Bridge Module.	3, 4
Preferences	Allows the User to select; language, units (°F or °C), number of minutes before reset to the default security level and bring you back to the Circuit List window and update time/date.	3, 4
DCS Gateway	Allows the user to setup and enable the DCS Gateway, which enables remote access of Heat Trace information using the Modbus protocol.	3, 4

## SECTION 3 – BASIC CONFIGURATION

The following gives an overview of how to configure an NGC-40 circuit using the Touch 1500. For greater detail, please go to Section – 4 Full Configuration on page 21.

### 3.1 An Example of a Simple Circuit Setup

This section will explain how to set up an NGC-40 heat-tracing circuit using the Touch 1500.

This is the first window that appears when the program loads.


The screenshot shows the 'Circuit List' window. At the top, there are two main tabs: 'FILE' and 'SYSTEM'. Below these, there are three sub-tabs: 'CIRCUIT LIST' (which is active), 'ALARM LIST', and 'DEVICE MANAGER'. A 'Filter by group' dropdown menu is set to '[\*]'. Below the filter, there is a table with the following columns: Status, Address, Tag (with a dropdown arrow), Device Type, Setpoint Temperature, Actual Temperature, Line Current, GF Current, and Heater Status. The table is currently empty.

Fig. 3.1 Circuit List window

#### Step 1: Setting up Units, Language, Time and Date.


Touch the System button and then select Preferences. The Preferences window will appear. Touch the white area after each option to enter the appropriate Language, Units and Timeout delay.

Touch the Set Date Time button to enter your local time and date.

 **Important:** Local time and date is controlled by Windows. The user must exit the Touch 1500 to customize. When finished, touch the OK button to save the settings.

The screenshot shows the 'System | Preferences' window. At the top, there are two main tabs: 'FILE' and 'SYSTEM'. Below these, there are three sub-tabs: 'CIRCUIT LIST', 'ALARM LIST', and 'PREFERENCES' (which is active). The main area contains three settings: 'Language' with a dropdown menu set to 'English', 'Temperature Unit' with a dropdown menu set to '°C', and 'User activity timeout in minutes' with a dropdown menu set to '10'. Below these settings is a red button labeled 'SET DATE TIME'. At the bottom right, there are two buttons: 'OK' and 'CANCEL'.

Fig. 3.2 System | Preferences window

 **Important:** If your NGC-40 system has a Touch 1500 installed on the panel door, then the Touch 1500 will have been factory configured to communicate with the NGC-40-BRIDGE modules in the panel and you may skip to Step 5.

## Step 2: Setting Up the Network for NGC-40 Modules

If you are installing a new Touch 1500 or Touch 1500R or connecting additional NGC-40 panels to an existing Touch 1500 or Touch 1500R then you should start here at Step 2.

To connect NGC-40 panels to the Touch 1500, you must first scan the network using the Device Manager. Touch the System button and select Device Manager from the menu list. This will open the Device Manager Tab. Under the Scan for Device tab, select which network type to scan. Select the Scan Field Port tab if connecting via RS-232 or RS-485.

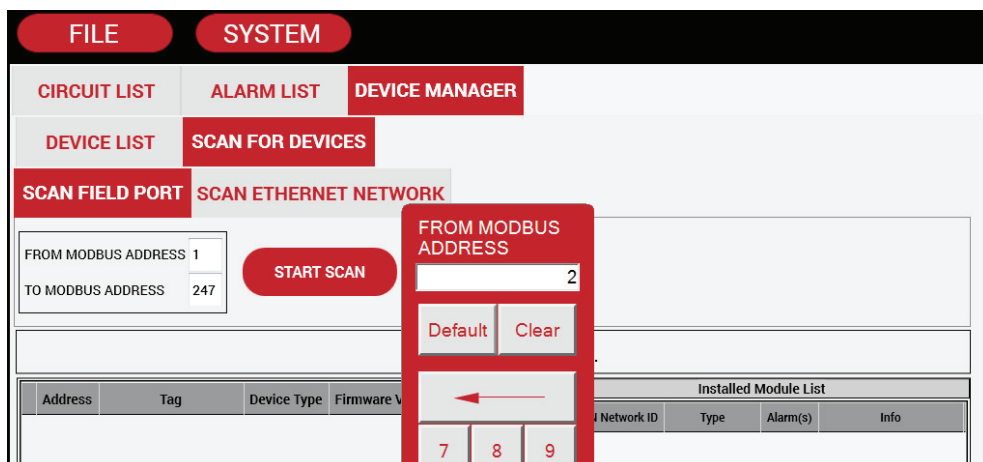


Fig. 3.3 System | Device window

The NGC-40-BRIDGE module has been set to Modbus address 1 at the factory.

**Important:** If you wish to connect the Touch 1500 to more than one NGC-40-BRIDGE, you must first assign different Modbus addresses to each of the Bridge Modules. If this is not already done, you will need to contact your Chemelex representative to schedule a Tracer Field Support or Services person to come out and make the necessary changes. The Bridge Modbus address cannot be changed via the Touch 1500.

If you know the Bridge Modbus address you may enter it in the From or To Modbus Address boxes on the Scan for Devices window. Simply touch the data entry box and a numeric keypad will appear which will allow you to enter a new Modbus address number. Touch OK to close the keypad and enter the number.

## Step 3: Scanning the Network

Click on the Start Scan button. The below window will appear showing that Touch 1500 is now scanning the modules connected to the NGC-40-BRIDGE. At the end of the SCAN click on the OK button to add the modules to the database.

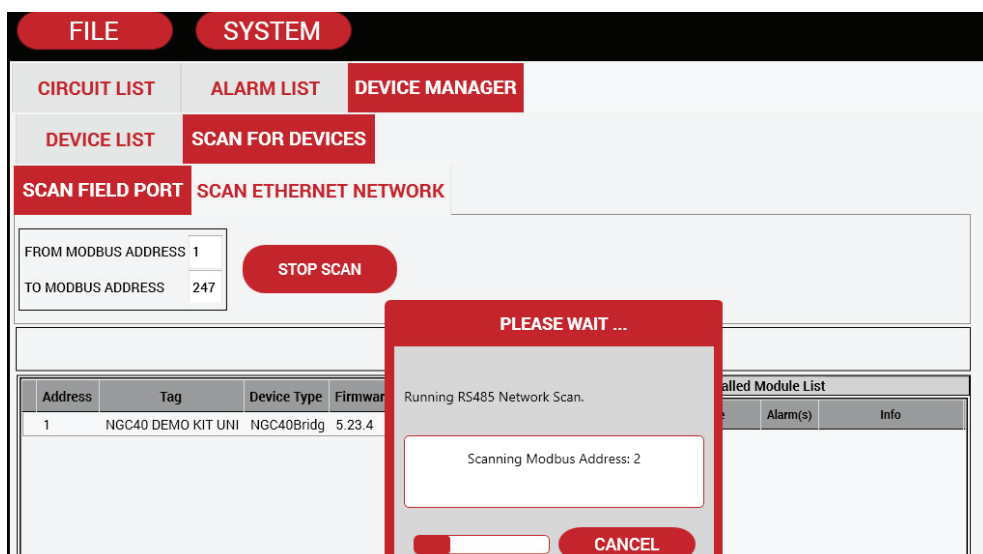


Fig. 3.4 System | Device window during scan process



At the end of the scan, the Touch 1500 software will display the modules that are connected to the NGC-40-BRIDGE. The information shown on the right hand side is the CAN bus ID's, type of module, alarms and the modules that have been installed. Information regarding the Bridge is shown on the left hand side.

FROM MODBUS ADDRESS 1  
TO MODBUS ADDRESS 247

START SCAN

Ready to perform network scan.

Address	Tag	Device Type	Firmware Version	Status
1	NGC40 DEMO KIT UNI	NGC40Bridg	5.23.4	New device.
3	NGC20-3E93	NGC20	4.3.12	New device.

Installed Module List			
CAN Network ID	Type	Alarm(s)	Info
1132	NGC40HTC3	0	Already installed
11EE	NGC40HTC	0	Already installed
EEF4F4	NGC40SLIM	0	Already installed
FFFFF1	NGC40IO	0	Already installed

Fig 3.5 System | Device window after scan process

**Important:** Scan need to be run only once unless the COMM ports of the PC is changed or additional modules are added on the NGC-40.

#### Step 4: Reviewing Connected Devices, Click on the SYSTEM | Device Manager

Touch the Device List tab. The window below will appear. This window shows all the modules that were scanned along with their tag name and status.

Address	Tag	Device Type	Status	
1	NGC40 DEMO KIT UNIT#1	NGC40Bridge	Online	
0011EE	NGC40-HTC-11EE	NGC40HTC	Online	
001132	NGC40-HTC3-1132	NGC40HTC3	Online	
FFFFF1	NGC40-IO	NGC40IO	Online	
EEF4F4	NGC40-SLIM-EEF4F4	NGC40SLIM	Online	
3	NGC20-3E93	NGC20	Online	

Fig 3.6 Device List window

Column 1 lists the Modbus address of the NGC-40 Modules. If the device type is NGC-40-BRIDGE, then the address is a Modbus address and it can only be changed by using the NGC-40 Hardware Manager Program. For all other devices types, the address is a CAN ID which are factory set and cannot be changed.

Column 2 lists the default Tag names of each module.,

Column 3 shows the Device Type

Column 4 shows the status; is the device online and active or has it been taken offline. A device that is offline will not be included in the normal system monitoring activity.

## Step 5: HTC/HTC3 Module Options

Touch one of the HTC modules shown in the Device List. A dialog box will open up with options to Configure, Remove, Set Online or Set Offline the selected module.

The screenshot shows the 'DEVICE MANAGER' tab selected. Below it is a 'DEVICE LIST' with columns: Address, Tag, Device Type, Status, and an empty column. The table contains four rows of device information. Below the table are four buttons: CONFIGURE, REMOVE, SET ONLINE, and SET OFFLINE.

Address	Tag	Device Type	Status	
1	NGC40 DEMO KIT UNIT#1	NGC40Bridge	Online	
0011EE	NGC40-HTC-11EE	NGC40HTC	Online	
001132	NGC40-HTC3-1132	NGC40HTC3	Online	
FFFFF1	NGC40-IO	NGC40IO	Online	
EEF4F4	NGC40-SLIM-EEF4F4	NGC40SLIM	Online	

Fig 3.7 Drop down buttons on Device Manager

## Step 6: Configure the Module

Touch the Config button and the window shown below with Basic Settings for Temperature, Control Modes, Local RTD (TS1) and Electrical will appear. The Temperature window is displayed by default.

The screenshot shows the configuration window for the 'NGC40-HTC-11EE' device. The 'CONFIGURE DEVICE' tab is selected. On the left is a sidebar with 'BASIC SETTINGS' and sub-options: Temperatures (selected), Control Modes, Local RTD (TS1), and Electrical. The main area shows the 'General' section with fields for Tag and Heater Status. Below is the 'Control Temperature' section with a table of settings.

☐ Show Advanced Settings

**NGC40-HTC-11EE**

**General**

Tag: NGC40-HTC-11EE  
Heater Status: Off

**Control Temperature**

Name	Alarm	Setpoint	Filter
Control Setpoint		15 °C	
High Alarm	<input checked="" type="checkbox"/> Enable	200 °C	0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	5 °C	0 S
High Limit Cutout Setpoint		700 °C	
Control Temperature Usage		Use Lowest Temperature	▼
TS Fail Mode		Fail Off	▼
TS Fail Mode Percentage		50 %	

Buttons at the bottom: MONITOR, APPLY, CANCEL, BACK, NEXT

Fig 3.8 Configuration window for temperature settings

## Step 7: Entering Device Tag Name and Temperature Settings

To enter a tag name, click the white box where the default tag name is shown. This will open the keyboard for entering the new tag name. Type the new tag name as you would with a normal keyboard and then touch the OK button on the keyboard.

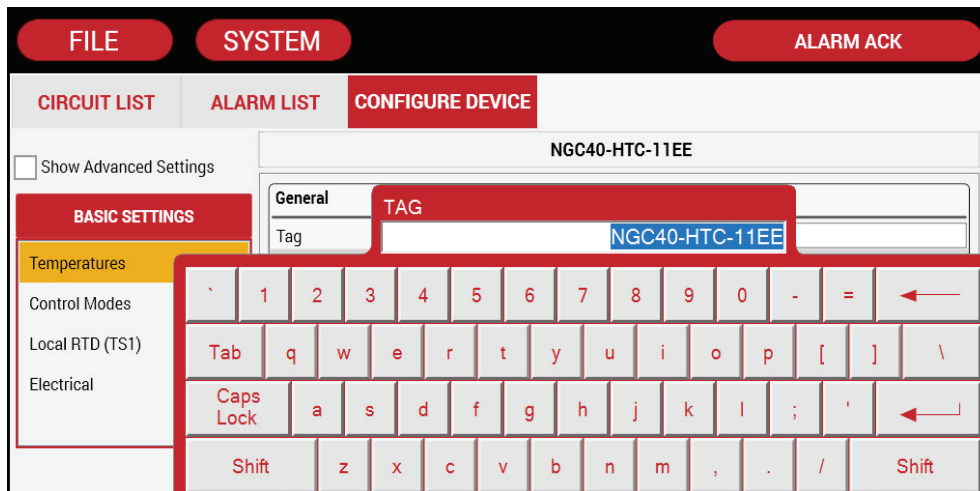


Figure 3.9 Configuration window for device tag name

To program the Control Setpoint temperature, touch the white box on the Control Setpoint row. A numeric keypad will open allowing you to change the Setpoint. Touch OK when done.

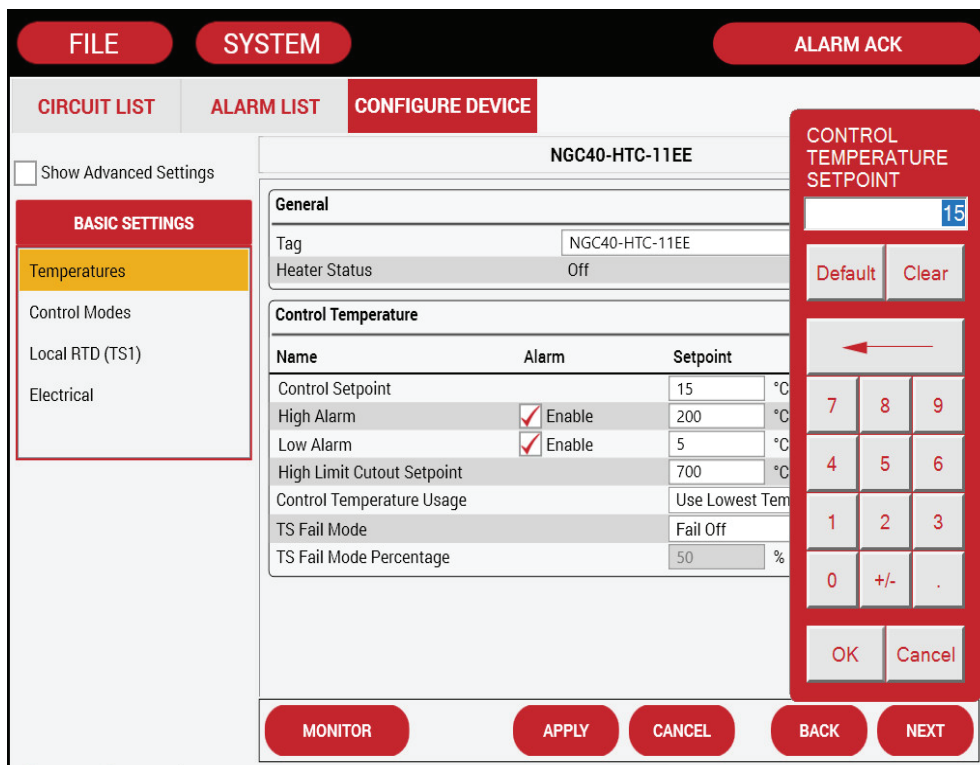


Figure 3.10 Configuration window for control setpoint temperature

The HIGH temperature alarm is disabled by default. Enable the high alarm by touching the white box. A check will appear in the box when enabled. Change the high temperature alarm to the desired value in the same way the Control Temperature was set.

The LOW temperature alarm is enabled by default. Change the low temperature alarm to the desired value in the same way the Control Temperature was set. The HIGH Limit Cutout setpoint is set at 700. Change if required.


The Control Temperature Usage can be determined by three methods, 'Monitor Only', 'Use Lowest Temp' or 'Use Average Temp'. These selections allow the temperature setpoint to be determined if multiple RTD inputs are used for a single heat-tracing circuit. Touch the drop down selection box to select the desired Control Temperature Usage method.

The Temperature Sensor Fail Mode can be defined via the TS fail Mode setting. The options are:

1. Fail Off – turns the heat-tracing circuit off when all control RTDs input fails
2. Fail On – turns the heat-tracing circuit on when all control RTDs input fails.
3. Fail to % sets the control duty cycle to a pre-defined percentage when all control RTDs input fails.
4. Fail to Lowest – if multiple RTDs are assigned to a circuit, when any one RTD input fails, the controller will use the lowest of the remaining RTD input temperatures to determine whether the heat tracing circuit should be turned on or off.

Touch the drop down selection box to select the desired response.

Save the changes by clicking on the Apply button.

 **Important:** Any setting changes made within the Touch 1500 require you to touch the Apply button to save settings in the Touch 1500 database and simultaneously transmit the settings to the NGC-40 module. If you try to exit the Configuration window without clicking on the Apply button a warning message will appear asking you if these changes are to be saved.

## Step 8: Set Control Modes

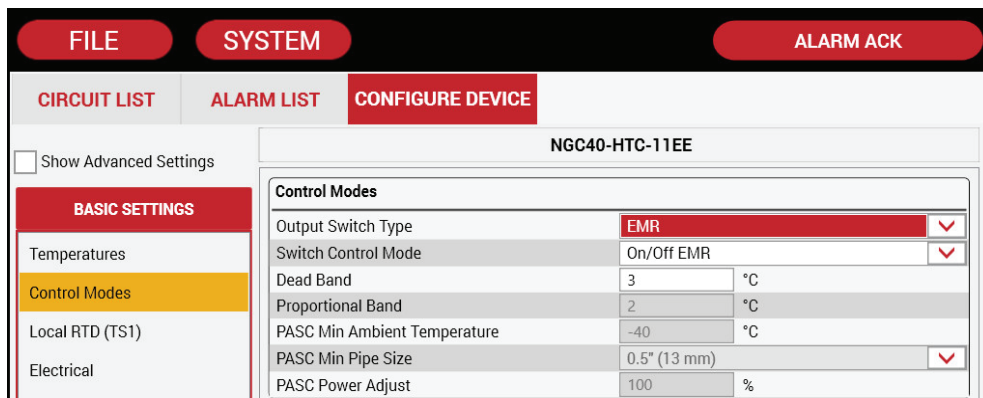



Figure 3.11 Configuration window for control modes

Touch the Control Modes button in the left hand menu list to display the Basic Control Modes window. This window allows the user to select:


Output Switch Type: SSR (Solid State Relay) or EMR (Electro Mechanical Relay)

Switch Control Mode: Both SSR and EMR - Always On, Always off, On/Off, PASC, SSR only: Proportional

- Touch the drop down selection boxes to select the desired Output Switch Type and Switch Control Mode
- Touch the white box to enter the Deadband based upon the Output Switch Type chosen.

 **Important:** If PASC is selected as your Switch Control Mode, the shaded areas will become un-shaded, allowing the user to change PASC setup parameters.

## Step 9: Set Local RTD (TS1)

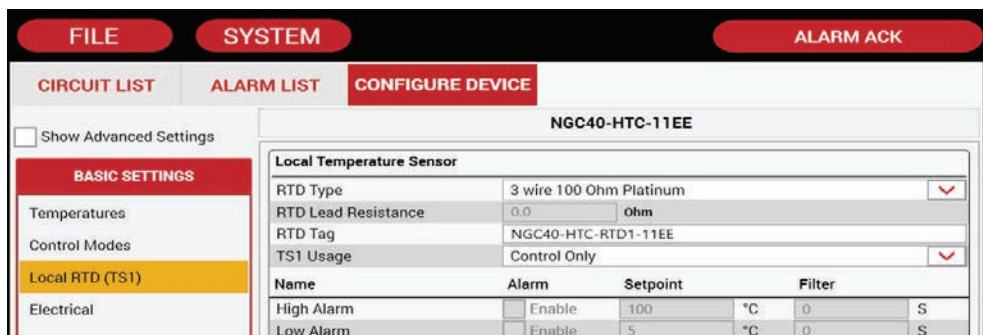

Name	Alarm	Setpoint	Filter
High Alarm	Enable	100 °C	0 S
Low Alarm	Enable	5 °C	0 S


Figure 3.12 Configuration window for local RTD (TS1)

Touch the Local RTD (TS1) button in the left hand menu list to display the Local Temperature Sensor window. This window allows the user to select:

**RTD Type:** 3-Wire 100-Ohms Platinum or 2-Wire 100-Ohms Nickel Iron or 2-Wire 100-Ohms Nickel


**Change RTD Tag:** Define Tag names for the RTDs

Define TS1 Usage: Monitor Only / Control Only / Monitor with High Temp Cut out / Control with High Temp Cut out. On Selection of 'Monitor' options the dimmed area will allow user entry, enable the High & Low Alarms, and enter alarm set point and set filter if required.

 **Important:** This window is used to enter the settings only for an RTD wired directly to the selected HTC or HTC3 module. It is not used to set up RTDs wired to I/O modules. Those instructions will be provided in Section 5.7 Configuration of the NGC-40 I/O Module on page 62.

### Step 10: Electrical – Setting Low and High Line Current Alarms, Ground-Fault Current, Voltage & Frequency

Touch the Electrical button in the left hand menu list to display the Basic Electrical Settings window. The window below is the HTC (Single Phase) module.

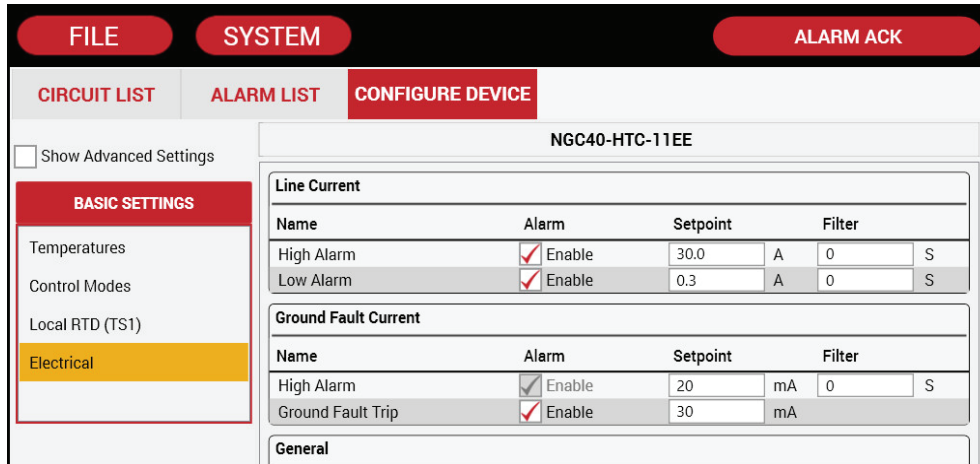


Line Current			
Name	Alarm	Setpoint	Filter
High Alarm	<input checked="" type="checkbox"/> Enable	30.0 A	0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	0.3 A	0 S

Ground Fault Current			
Name	Alarm	Setpoint	Filter
High Alarm	<input checked="" type="checkbox"/> Enable	20 mA	0 S
Ground Fault Trip	<input checked="" type="checkbox"/> Enable	30 mA	

Figure 3.13 Configuration window for electrical (HTC)

This window below is the settings for the 3-phase HTC3 Module.

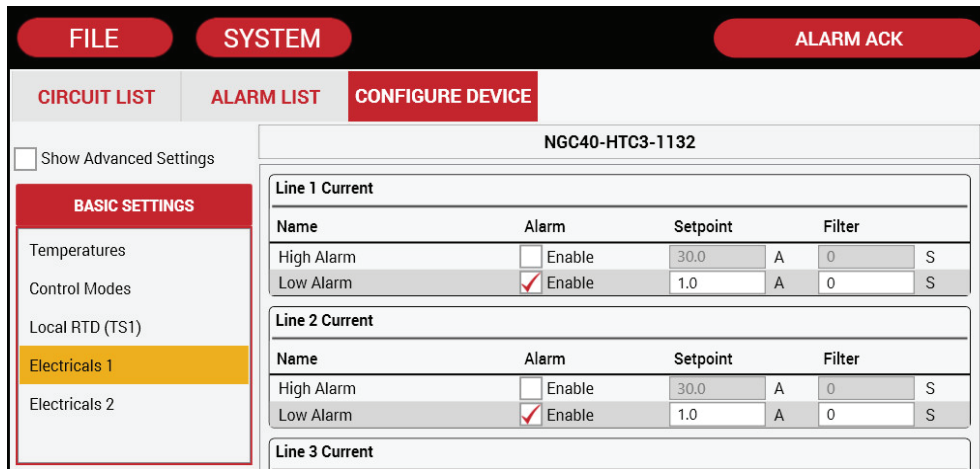

Line 1 Current			
Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	30.0 A	0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	1.0 A	0 S

Line 2 Current			
Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	30.0 A	0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	1.0 A	0 S

Line 3 Current			
Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	30.0 A	0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	1.0 A	0 S

Figure 3.14 Configuration window for electrical (HTC3)

The High Alarm current is disabled by default. To enable the High Alarm, the box next to the alarm must be checked. Touch the white box to enable/disable this alarm.


- Set the High alarm to the appropriate value by touching the white box and entering the value with the keypad.
- Set the Low Alarm to the appropriate value by touching the white box and entering the value with the keypad.

The Ground-Fault Current High Alarm is enabled and GF Trip is disabled by default. To enable GF Trip, the white box next to the alarm must be checked.

- Set the High Alarm Setpoint to the appropriate value and set Filter if required by touching the white box and entering the value with the keypad.
- Set the Ground-Fault Trip to the appropriate value by touching the white box and entering the value with the keypad.

### General Settings

The Voltage & Frequency entries are required only for Power Calculations. Enter the nominal values which will exist at the NGC-40 panel to use this feature.

 **Important:** For HTC3, Electrical 1 allows Line Current Data entry & Electrical 2 contain Ground-Fault Current & General options.

## 3.2 Setting Up Additional Circuits

Follow Steps 5 through 10 above to set-up each additional circuit.

## 3.3 Circuits 1–3 Setup Complete Confirmation

After completing the circuit set up go to the Circuit List window to confirm all circuits are activated and working properly.

FILE SYSTEM							
CIRCUIT LIST		ALARM LIST		CONFIGURE DEVICE			
Filter by group		[*]		▼			
Status	Address	Tag	Device Type	Setpoint Temperature	Actual Temperature	Line Current	
OK	0011EE	NGC40-HTC-11EE	NGC40HTC	15°C	60°C	0A	0m
OK	001132	NGC40-HTC3-1132	NGC40HTC3	30°C	53°C	0A	0m
OK	3	NGC20-3E93	NGC20	500°C	207°C	0A	0m

3.15 Circuit list window

## 3.4 Starting the NGC-40

### 3.4.1 System Requirements

The minimum configuration to use the Raychem Touch 1500 software

- Raychem Touch 1500 hardware
- At least one each of the following
  - NGC-40-BRIDGE
  - NGC-40-PTM Module
  - 24 V DC Power Supply
  - NGC-40-HTC or HTC3
  - RTDs

Maximum optional equipment configuration:

- Up to 500 NGC-40-HTC, HTC3 or I/O modules

 **Important:** Module numbers depend on actual system requirement.

### 3.4.2 Initial Setup

The Raychem Touch 1500 software is designed to run only on the Touch 1500 hardware platform. Prior to shipment, the Raychem Touch 1500 is installed into Compact Flash card. During the initial power-up, you will see a blue background “splash” window for approximately 10 seconds as the system software is loaded and initializes.

## SECTION 4 – FULL CONFIGURATION

This section describes the full configuration and monitoring capabilities and options available on all NGC-40 modules. Refer to the following subsections for information on the individual Modules:

Section 4.2 Configuration of NGC-40-BRIDGE Module on page 26


Section 4.3 Configuration of NGC-40 HTC Modules on page 28

Section 4.4 Configuration of NGC-40 HTC3 Modules on page 38

Section 5.7 Configuration of the NGC-40 I/O Module on page 62

### 4.1 Adding a NGC-40-BRIDGE to Raychem Touch 1500

Before you can use the Raychem Touch 1500 to configure and maintain your NGC-40 system, you must connect to the NGC-40-BRIDGE module in each panel that the Raychem Touch 1500 will interface with. The communication ports must first be set in order for the Touch 1500 computer to talk to the NGC-40-BRIDGE.

 **Important:** If your NGC-40 system has a Touch 1500 installed on the panel door, then the Touch 1500 will have been factory configured to communicate with the NGC-40-BRIDGE modules in the panel and you may skip this section. Alternatively, if the Touch 1500 or Touch 1500R was installed and connected to the NGC-40 by Tracer Field Support or Service personnel then installation of the NGC-40-BRIDGE modules will have been completed during commissioning and you may skip this section.

#### 4.1.1 Communication Ports

The Touch 1500 can be connected to an NGC-40-BRIDGE via RS-485 or Ethernet ports.

Although the NGC-40 Hardware Manager allows the user to change the following settings on

NGC-40-BRIDGE, in general, the default settings should be used. The user is allowed to change these settings in those cases where an external device is added which have already blocked the ports.

#### 4.1.2 RS-485 Communication ports

If the Touch 1500 is connected to the NGC-40-BRIDGE via RS-485, the Field Port Communication must first be configured. Please note that the RS-485 port is internally configured to COM3 of the Touch Hardware. Retain the default settings.

- Go to System | Communications | Field Port window

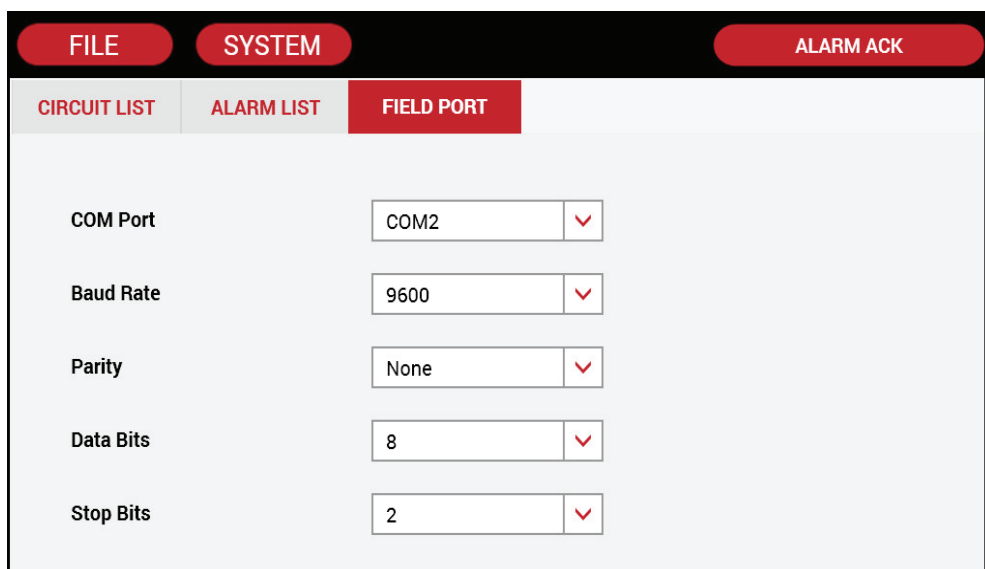


Figure 4.1 System | Communication Setup | Serial Port (Field) window

#### COM Port Entry Field

COM 3 is the default port and need not be changed, select the COM3 port if it is not displayed.

**Selection:** COM 3 (RS-485)

**Default:** COM3



Although the NGC-40 Hardware Manager allows the user to change the following settings on NGC-40-BRIDGE, in general, the default settings should be used. The user is allowed to change these settings in those cases where an external device is added (i.e. radio modem).

**Baud Rate**

**Purpose:** Defines the data rate at which communications occur on the serial communications ports.

**Options:** 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200

**Default:** 9600

**Parity**

**Purpose:** Defines the type of parity bit to be used with any of the three serial communications ports.

**Range:** None, Odd, Even

**Default:** None

**Data Bits**

**Purpose:** Defines the number of data bits used with any of the three serial communications ports.

**Range:** 7 or 8

**Default:** 8

**Stop Bits**

**Purpose:** Defines the number of stop bits used with any of the three serial communications ports.

**Options:** 1 or 2

**Default:** 2

**4.1.3 Communication via Ethernet Port**

The NGC-40-BRIDGE module/s can be connected to a Touch 1500 using an Ethernet connection. Two examples on how to make these connections and program the NGC-40-BRIDGE module and Touch 1500 are detailed in Appendix A on 104.

- Go to System | Device Manager
- Click on Scan For Device tab
- Click on Scan Ethernet Network tab

**Ethernet Port – IP Address**

**Purpose:** Defines the Ethernet Port IP Address. If the IP Address needs to be changed, click on the IP Address window. By default, the IP Address of the Touch 1500 & Subnet is automatically inserted

**Range:** From IP Address xxx.xxx.xxx.xxx. To IP Address ---.---.---.xxx (xxx= 1- 255)

**Procedure:** Click on the From IP address and change the address to 192.168.1.99 and change the To IP address to 192.168.1.101

**Default:** Both the From & To IP address will show the Touch 1500 IP address at 192.168.1.200

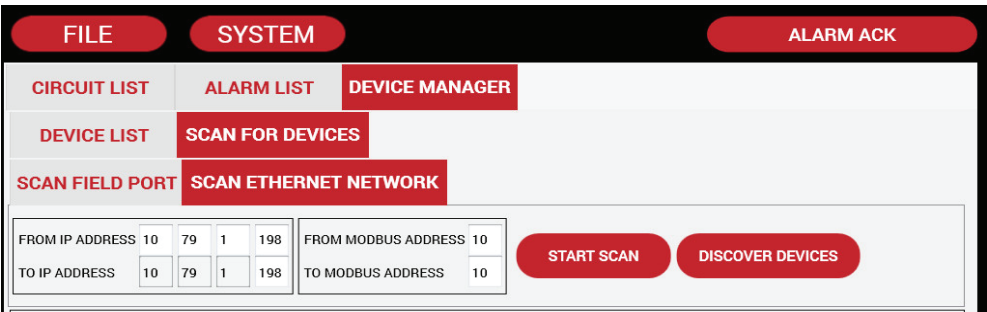


Figure 4.2 System | Device Manager | Scan for Devices window



4.1.4 Scanning the Network for Devices

There are two methods of scanning the NGC-40-BRIDGE and its associated NGC-40 modules into the Touch 1500 database. Method 1 is scanning through the Touch 1500 RS-485 port and Method 2 is scanning through the Touch 1500 Ethernet connection.

Scanning through the RS-485 port

- Go to System | Device Manager

For the very first time, the Device List window will be blank. See below:

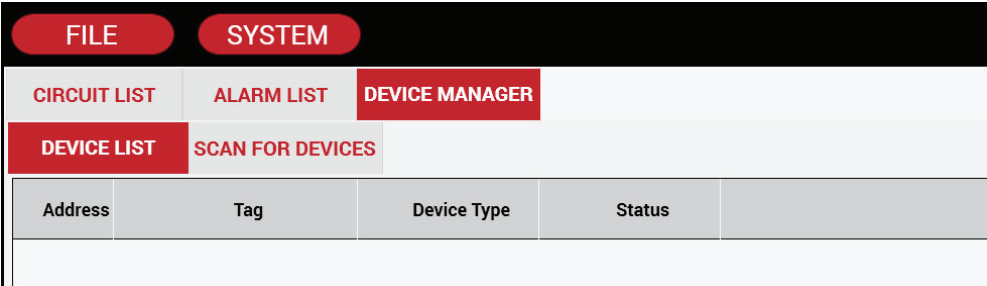


Figure 4.3 System | Device Manager window

Modbus Address

Press "Scan for Device" tab. A window opens up giving a range of the NGC-40-BRIDGE's Modbus address to scan.

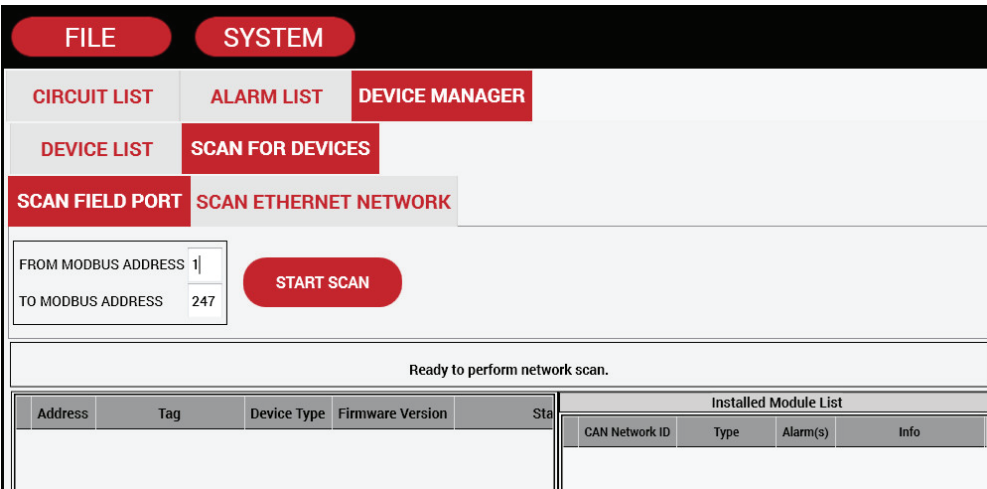



Figure 4.4 System | Device Manager | Scan for Devices window before scan

**Purpose:** The Modbus Address defines the communications address to be used by the NGC-40-BRIDGE when using the Modbus protocol to communicate with a Modbus compatible device. If the HT system incorporates a single NGC-40-BRIDGE, then the Modbus address of all the 4 Ports on the Bridge will be set at 1. If there is more than one Bridge, then the Modbus addresses will be set sequentially 1,2,3,4, etc.

**Range:** 1 to 247

**Procedure:** Click on the To Modbus address and change the address to the highest NGC-40-BRIDGE Modbus address + 1. This is done to shorten the scan time

**Default:** 1 to 247

 **Important:** If the Touch 1500 is to monitor multiple NGC-40-BRIDGE modules and their associated NGC-40-HTC/HTC3/I/O modules, each NGC-40-BRIDGE must have a unique Modbus address. To change the Modbus address in a NGC-40-BRIDGE, the user must use the NGC-40 Hardware Manager.

4.1.5 Start Scan

- Press the Start Scan button.

The Touch 1500 program will scan the network for all NGC-40-BRIDGE(s) having Modbus addresses in the range specified.

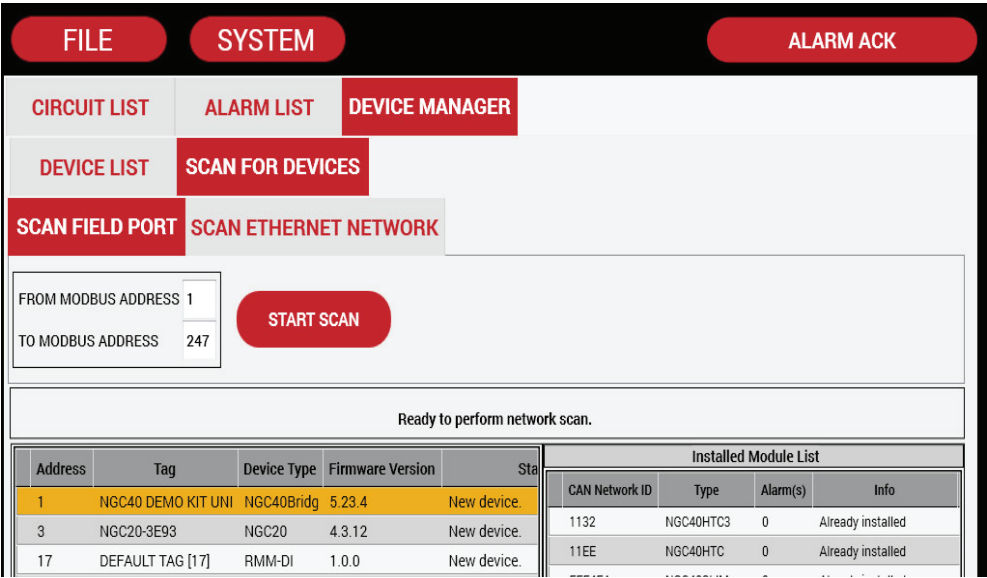


Figure 4.5 System | Device Manager | Scan for Devices window after scan

4.1.6 Scanning Through the Ethernet Port

Scanning through the Ethernet port is the same as RS-485 port except:

- Click on the “Scan Ethernet Network” tab
- Set Modbus address as per Section 4.1.4
- Press the “Start Scan” Button

Additional information on connecting Touch 1500 via Ethernet port can be found on Appendix A on page 146.

4.1.7 Discover Devices

The Discover Devices button makes use of the discovery and detection feature in the NGC-40 and Elexant systems. As long as these systems are connected on the Ethernet network, they can be found by the Discover Devices button. When devices are found, a list is displayed in a Discover Devices popup window. Select 1 or more device to add to the Touch 1500 system by checking the Select column. Use the Select All and Deselect All if all devices are required. Click OK to proceed with the add or exit the window.

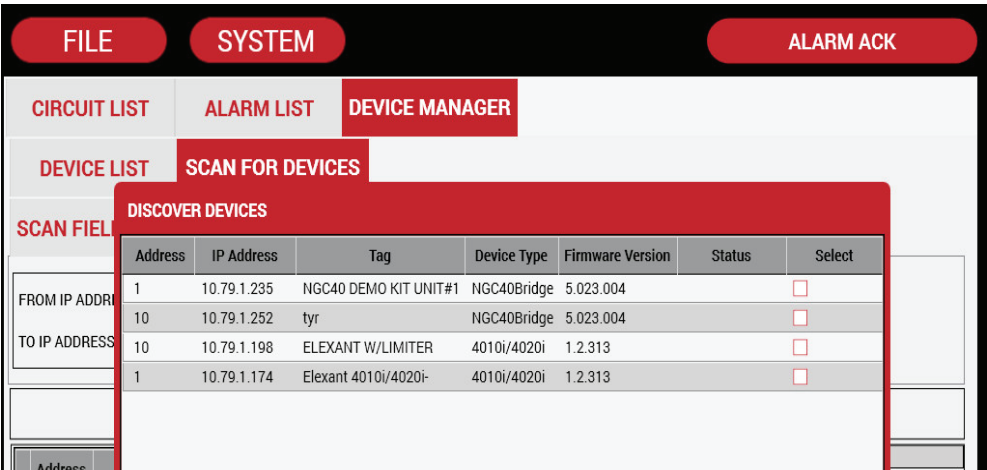


Figure 4.5a Discover Devices popup window

#### 4.1.8 Configuration of System Preferences

The System Preference window allows the user to configure the language, units, window time out, time and date that will affect the entire system.

- Go to System | Preferences

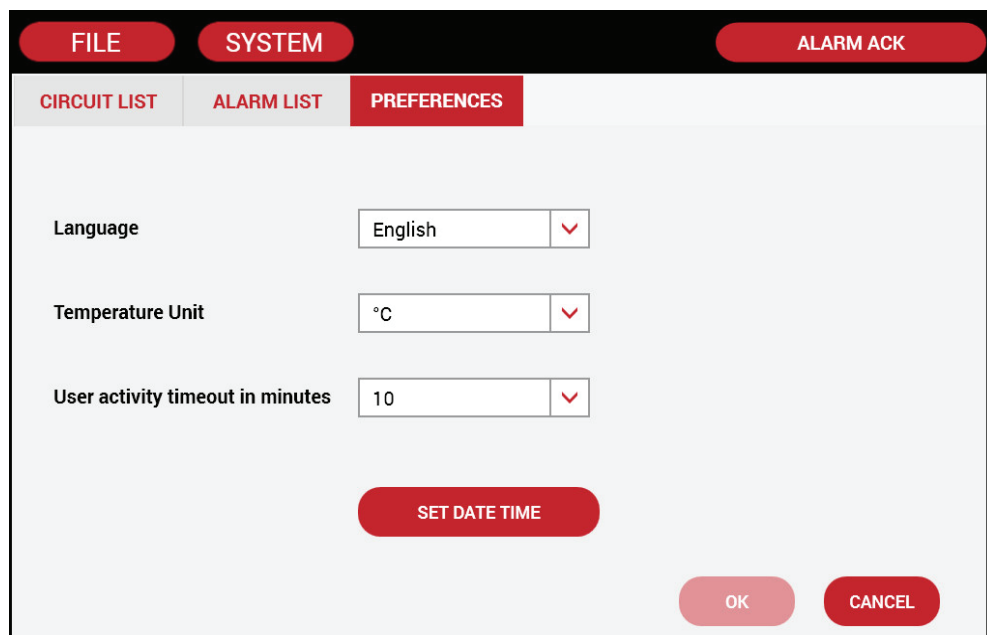


Figure 4.6 System | Preferences window

#### 4.1.9 Language Entry List

This entry specifies the language used on the Touch 1500 display windows.

**Options:** English, French, German, Russian and Chinese

**Procedure:** Select the preferred language from the dropdown list.

**Default:** English

#### 4.1.10 Temperature Units

**Options:** Fahrenheit, Celsius

**Procedure:** Select the preferred Temp Unit from the dropdown list.

**Default:** Celsius

#### 4.1.11 User Activity Timeout (minutes)

This entry sets the number of minutes before the display automatically reverts to the Circuit List Window. Any user interaction with the Touch 1500 screen will reset the timer.

 **Important:** This time entry also determines how long a password entry will remain valid

**Selection:** 5, 10, 15, 20, 25, 30, 40, 50, 60, 70, 80, 90, 100 minutes

**Procedure:** Select duration from the dropdown list.

**Default:** 10 minutes

## 4.2 Configuration of NGC-40-BRIDGE Modules

### 4.2.1 General - Tags and Alarms

- Go to System | Device Manager
- Click on NGC-40-BRIDGE
- Click on Config.

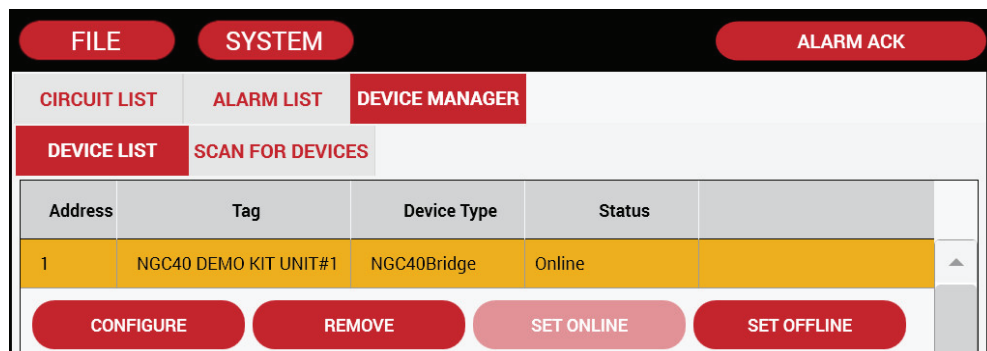


Figure 4.7 Device Manager window for NGC-40-BRIDGE

#### Bridge Tag

**Purpose:** A 40-character tag may be assigned to the NGC-40-BRIDGE to allow it to be easily associated with a pipe, vessel, process, circuit, drawing name, number.

**Range:** Alpha-numeric characters

**Procedure:** To enter a tag name, click where the default tag name is shown. This will open the keyboard for entering the new tag name.

**Default:** Default-tag

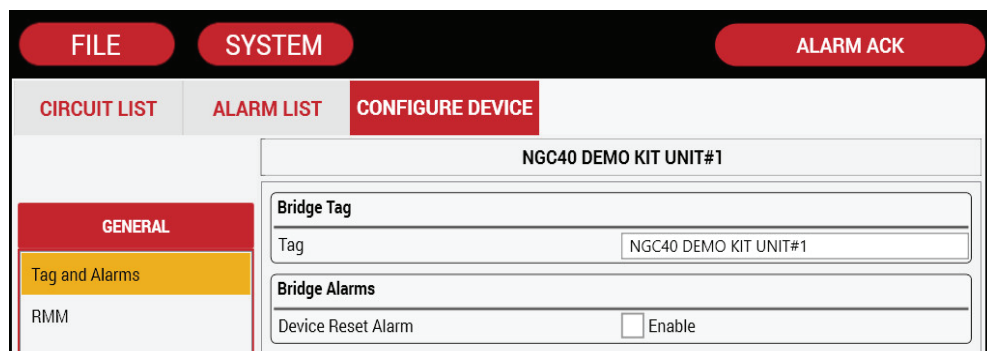


Figure 4.8 Device Manager | Configure Device window for NGC-40-BRIDGE

#### Bridge Alarms


**Purpose:** The Device Reset Alarm is used to indicate:

5. Power to the Bridge has been interrupted and subsequently restored.
6. A transient has caused the Bridge's program to restart.
7. An internal condition has caused the Bridge's program to restart.

**Options:** ENABLE or DISABLE

**Procedure:** Check box to enable alarm

**Default:** DISABLE

 **Important:** Normally the Device Reset Alarm is left disabled since powering the Bridge off and on for maintenance or trouble-shooting would require the user to reset this alarm every time.

## 4.2.2 Communication Ports – Serial (COM Ports 1, 2 & 3) and Ethernet

The screenshot shows the 'CONFIGURE DEVICE' window for 'NGC40 DEMO KIT UNIT#1'. The left sidebar has tabs for 'GENERAL', 'COMMUNICATIONS', and 'MISC'. The 'COMMUNICATIONS' tab is selected, showing 'Serial Ports' and 'Ethernet Port' sub-tabs. The 'Serial Ports' sub-tab is active, displaying a table of port settings for three communication ports.

Port Settings	
Modbus Address	1
Baud Rate	9600
Parity	None
Data Bits	8
Stop Bits	2
Tx Delay	0
Frame Type	Modbus RTU

Figure 4.9 Device Manager | Configuration Device | Communication Ports window for NGC-40-BRIDGE

**Purpose:** Allows the user to review the communication ports settings (Serial and Ethernet) on the NGC-40-BRIDGE module. The NGC-40-BRIDGE module has the following communication ports.

1. COM 1: RS-485 – Two wire RS 485 port to communicate with Touch 1500
2. COM 2: RS-485 – Two wire RS 485 port to communicate with Field devices like RMM
3. COM 3: RS-232 – Local RS 232 port to communicate with Touch 1500 Hardware Manager or Raychem Supervisor
4. Ethernet: 10/100 LAN for communicating with Remote devices which many include Touch 1500, DTS or DCS running on Host PCS

**Default Settings:** Modbus address is set at 1 for the first Bridge on a HT panel and sequentially addressed for multiple bridges. The IP address is set at 192.168.1.100. These settings can only be changed by using the NGC-40 Hardware Manager.

## 4.2.3 Miscellaneous Device Information

The screenshot shows the 'CONFIGURE DEVICE' window for 'NGC40 DEMO KIT UNIT#1'. The left sidebar has tabs for 'GENERAL', 'COMMUNICATIONS', and 'MISC'. The 'MISC' tab is selected, showing a 'Device Information' sub-tab. The 'Device Information' sub-tab is active, displaying a table of device information.

Device Information	
Device Type	NGC40Bridge
Address	1
Firmware Version	5.23.4
Serial Number	EFF3CE


Figure 4.10 Device Manager | Configuration Device | Miscellaneous window

**Purpose:** Allows the user to review the Device Information current set-up in the NGC-40-BRIDGE. The Device Type, Firmware Version and Serial Number are factory configured and cannot be changed. The Modbus address can be changed using the NGC-40 Hardware Manager.

### Load Configuration Defaults

**Purpose:** Loads the default settings that are stored in the NGC-40-BRIDGE

**Procedure:** Click on the Load Configuration Defaults button to erase the data and bring back the factory settings.

 **Important:** In order to identify the NGC-40-BRIDGE, the Tag Name will not change if the configuration defaults are loaded. The current Tag Name will not be altered until it is manually changed (Section 4.2.1 Bridge Tag).

## 4.3 Configuration of NGC-40 HTC Modules

This section provides complete programming instructions for the NGC-40 HTC Heat-Tracing Controllers for single-phase heaters, for HTC3 modules, please follow the procedures for the HTC module except for the Electrical settings which are detailed under Section 5.3 Electrical on page 55. All the NGC-40 HTC functions are logically grouped based on their functionality. For each function, an explanation of its Purpose, Range over which it may be set and its Default setting is described. Finally any Important information or Cautions that pertain to the particular function are provided.

### 4.3.1 Basic Settings

The Basic Settings tabs allow the user to review and change only those inputs which are necessary to set up an HTC module.

Name	Alarm	Setpoint	Filter
Control Setpoint		15 °C	
High Alarm	<input checked="" type="checkbox"/> Enable	200 °C	0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	5 °C	0 S
High Limit Cutout Setpoint		700 °C	
Control Temperature Usage		Use Lowest Temperature	<input checked="" type="checkbox"/>

Figure 4.11 Basic Settings –Temperatures window

#### 4.3.1.1 General

##### HTC Tag

**Purpose:** A 40-character tag may be assigned to the NGC-40-HTC to allow it to be easily associated with a pipe, vessel, and process, circuit, drawing name or number.

**Procedure:** To enter a tag name, touch where the default tag name is shown. This will open the keyboard for entering the new tag name.

**Range:** Alpha-numeric characters

**Default:** NGC-40-HTC-(last 4 characters of CAN ID)

##### Heater Status

**Purpose:** Indicates whether the heat tracing is powered On or Off

**Procedure:** N/A. this is not a programmable function. It is status only.

**Range:** On or Off

**Default:** N/A

#### 4.3.1.2 Control Temperature

##### Control Setpoint

**Purpose:** The Control Temperature Setpoint temperature is the value at which the Heat Trace Controller maintains the circuit temperature using one of the Switch Control Modes. The Control Temperature Setpoint temperature is compared to the measured pipe or ambient temperature. A decision is then made to turn on or turn off the output to control power to the heat trace cable.

**Procedure:** To enter a new set point value, touch the data area to bring up the numerical keypad.

**Range:** –80°C to 700°C (–112°F to 1292°F)

**Default:** 10°C (50°F)

 **Important:** The HTC will switch the output ON and OFF in an attempt to maintain this temperature.

## High Alarm

**Purpose:** This alarm is used to indicate when the measured temperature goes above a defined threshold. It can be used to indicate when the pipe temperature has risen above a temperature which may have a negative effect on process efficiency or operation. When enabled, this alarm will appear when the Control Temperature exceeds the Control Temperature High Alarm Setpoint. This alarm can be user selectable to be latching or non-latching (refer to Section 5.2.3) if set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.


**Procedure:** To enable Alarm, touch the Check box (a check mark will appear in the box when enabled.) To enter a new set point value, touch the data area to bring up the numerical keypad

**Range:** -80°C to 700°C (-112°F to 1292°F)

**Options:** ENABLE or DISABLE

**Default Alarm Selection:** DISABLED

**Default Alarm Temperature:** 100°C (212°F)

 **Important:** If your application is subject to periodic situations where cold or hot product is part of the process, it may be appropriate to configure the HTC for non-latching temperature alarms to avoid nuisance alarms. If it is important to be aware of any temperature alarm conditions that may have existed in a pipe, then the HTC should be configured for latching temperature alarms.


## High Alarm Filter

**Purpose:** The Control Temperature High Alarm Filter will prevent Control Temperature High Alarm from being indicated until the corresponding alarm condition has existed for the duration of the Control Temperature High Alarm Filter time.

**Procedure:** To enter a new set point value, touch the data area to bring up the numerical keypad

**Range:** 0 to 59940 seconds (0 to 999 minutes)

**Default:** 0 second

 **NOTE 1:** If an alarm condition appears and then disappears before the alarm filter time has expired, the filter timer is reset and the alarm condition must exist again for the entire alarm filter time before the corresponding alarm will be indicated.

 **NOTE 2:** If the user resets an alarm while the alarm condition still exists, then the alarm will not be indicated again until the entire alarm filter time has expired.

## Low Alarm

**Purpose:** This alarm is used to indicate when the measured temperature goes below a defined threshold. It can be used to indicate when the pipe temperature has dropped below a temperature which may have a negative effect on process efficiency or operation. When enabled, this alarm will appear when the Control Temperature decreases below the Control Temperature Low Alarm Setpoint.


**Procedure:** To enable Alarm, touch the Check box (a check mark will appear in the box when enabled.) To enter a new set point value, touch the data area to bring up the numerical keypad


**Range:** -80°C to 700°C (-112°F to 1292°F)

**Options:** ENABLE or DISABLE

**Default Alarm Selection:** ENABLE

**Default Alarm Temperature:** 5°C (40°F)

 **NOTE 1:** This alarm can be user selectable to be latching or non-latching as explained under Section 5.2.3. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to Latching the alarm must be cleared by the user. The default alarm latching/non-latching setting for this alarm is latching.

 **NOTE 2:** If your application is subject to periodic situations where cold or hot product is part of the process, it may be appropriate to configure the HTC for non-latching temperature alarms to avoid nuisance alarms. If it is important to be aware of any temperature alarm conditions that may have existed in a pipe, then the HTC should be configured for latching

## Low Alarm Filter

**Purpose:** The Control Temperature Low Alarm Filter will prevent Control Temperature Low Alarm from being indicated until the corresponding alarm condition has existed for the duration of the Control Temperature Low Alarm Filter time.

**Range:** 0 to 59940 seconds (0 to 999 minutes)

**Procedure:** To enter a new set point value, touch the data area to bring up the numerical keypad

**Default:** 0 second



**NOTE 1:** If an alarm condition appears and then disappears before the alarm filter time has expired, the filter timer is reset and the alarm condition must exist again for the entire alarm filter time before the corresponding alarm will be indicated.



**NOTE 2:** If the user resets an alarm while the alarm condition is still exists, then the alarm will not be indicated again until the entire alarm filter time has expired.

## High Limit Cutout Setpoint

**Purpose:** This parameter defines the High Limit Cutout Setpoint for each of the 8 Temperature Sources where the Temperature Source configuration has High Limit Cut-out enabled. This feature will override the Control Temperature Setpoint temperature and force the controller output off if any one of the 8 Temperature Sources temperature exceeds the High Limit Cut-Out temperature setting.

**Procedure:** To enter a new set point value, touch the data area to bring up the numerical keypad

Range: -80°C to 700°C (-112°F to 1292°F)

Default: 700°C (1292°F)



**NOTE 1:** The High Limit Cutout feature overrides an auto-cycle test. A pending auto-cycle will be initiated immediately after the Temperature Source x temperature drops below the High Cutout Setpoint.



**NOTE 2:** If a Temperature Source Failure occurs and the High Limit Cutout feature is enabled, the switch output will latch off regardless of the Temperature Control Mode setting or the Temperature Fail Mode setting.

## Control Temperature Usage

**Purpose:** Allows the selection of one of three possible temperature control modes used by the control module. The different modes are Monitoring, averaging, or minimum maintain temperature control.

**Procedure:** Touch the drop down selection box to select Control Temperature Usage

**Options:** Monitor Only/Use Lowest Temp/Use Average Temp

**Default:** Use lowest temp

## TS Fail mode

**Purpose:** Allows the selection of one of four Fail Safe modes, Fail On, Fail Off, Fixed %, Last %

Touch the drop down selection box to select TS Fail modes

**Options:** Fail On/Fail Off/ Fixed %/ Last %

**Default:** Fail Off

## TS Fail mode %

**Purpose:** Allows the Entry of Fail mode % on Fixed % mode (only)

**Procedure:** Touch the Entry box and enter %

**Range:** 0 to 99%

**Default:** Grayed out until enabled



### 4.3.1.3 Control Modes

Allows to user to select various control modes

NGC40-HTC-11EE		
<b>Control Modes</b>		
Output Switch Type	EMR	▼
Switch Control Mode	On/Off EMR	▼
Dead Band	3	°C
Proportional Band	2	°C
PASC Min Ambient Temperature	-40	°C
PASC Min Pipe Size	0.5" (13 mm)	▼
PASC Power Adjust	100	%

Figure 4.12 Basic Settings - Control Mode window

#### Output Switch Type

**Purpose:** Select the type of switching device connected to this HTC

**Procedure:** Select the type from the drop down list

**Options:** Electro-Magnetic Relay (EMR) or Solid State Relay (SSR)

**Default:** EMR

#### Switch Control Mode

**Purpose:** This allows selection of the type of algorithm to be used by the HTC to maintain the Control Setpoint temperature. There are five different control algorithms available. For detail explanation of the different Switch Control Modes, please refer to Appendix B on page 111.

**Procedure:** Select the type from the drop down list

**Options:** On/Off, PASC, Always On, Always Off, Proportional (SSR Switch Type only)

**Default:** On/Off EMR


#### Dead Band—Available only when On/Off Control Mode is selected

**Purpose:** The controller monitors the temperature of the heating circuit and compares it to the Control Temperature. If the control temperature is above the Control Temperature Setpoint by more than the deadband value, the output is turned off. If the control temperature falls below the Control Temperature Setpoint, the output is turned on.

**Procedure:** Click on the box to enter date using the numerical keypad

**Range:** 1 to 50°C (2 to 90°F)

**Default:** 3°C (5°F)


 **Important:** Adjust the DEADBAND setting to the desired level above the Control Setpoint temperature. When the control temperature is above the setpoint + deadband value, the controller will turn off the output to the tracer. If the control temperature drops down below the setpoint, the output will be turned back on. Note that the smaller the deadband setting, the more often the contactor will cycle on and off, decreasing its operational life.

#### Proportional Band — Available only when Proportional Control Mode is selected

**Purpose:** The controller monitors the temperature of the heating circuit and compares it to the Control Temperature Setpoint. If the Control Temperature is at or below the Control Temperature Setpoint the power is applied to the trace with a duty cycle of 100% minus the controller output is full on. If the Control Temperature is equal to or greater than the Control Setpoint temperature plus the Proportional Band setting, then the controller output will have a duty cycle of 0%, the output will be off. The temperature of the control sensor is constantly monitored and the output duty cycle is adjusted proportionally according to where the temperature falls within the 0% to 100% band.

### Proportional Control Temperature Band Table

Control Sensor Temperature	Duty Cycle
Setpoint + proportional band	0%
Setpoint + proportional band / 2	50%
Setpoint	100%

 **Important:** The Proportional Band is use with the three proportional control modes only (EMR PASC, SSR PASC, SSR Proportional).

**Procedure:** Click on the box to enter date using the numerical keypad

**Range:** 1 to 50°C (2 to 90°F)

**Default:** 2°C (4°F)

#### PASC Min. Ambient Temperature

**Purpose:** The PASC Min Ambient Temp is the lowest ambient temperature that was used when the heat-tracing system was designed. The entered value should agree with the value used by the design engineer to ensure that the heat tracing system was sized correctly.

**Procedure:** Click on the box to enter date using the numerical keypad

**Range:** -73°C to 51°C (-99°F to 124°F)

**Default:** -40°C (-40°F)

#### PASC Min Pipe Size

**Purpose:** PASC Min Pipe Size is the diameter of the smallest heat-traced pipe in the group controlled by this circuit. Small diameter pipes heat up and cool down more rapidly than larger diameter pipe, therefore, the PASC duty cycle is calculated over a shorter time base. Larger diameter pipes heat and cool less rapidly, so the on/off periods for the heater system can be stretched over a longer period. If contactors are being used to control the heater circuit, the longer time base reduces the number of contactor on/off cycles and extends the contactor life.


**Procedure:** Click on the box to enter date using the numerical keypad

**Options:** .50 in (15 mm), 1.0 in (25 mm), >=2.0 in (50 mm)

**Default:** .50 in (15 mm)

#### PASC Power Adjust

**Purpose:** This allows the PASC control to be adjusted when the heating cable output is greater than the design assumption, or if the pipe insulation proves to be more efficient than assumed. Pipe temperature may run higher or lower than desired if the heating cable has a different output than required to offset the heat loss. The Power Adjust parameter enables a reduction or an increase in the heat-tracing effective power by entering a value less or greater than 100%

 **Important:** If improperly used, the Power Adjust parameter can cause the piping to get too cold or too hot. If unsure, leave at 100%. Do not change this value unless an engineer calculates the temperature impact on the system and determines that it is safe to do so. Be particularly cautious if the circuit has more than one diameter of pipe or type of heat tracing. Contact a Chemelex representative for assistance with this factor.

**Procedure:** Touch the box to enter date using the numerical keypad

**Range:** 10 to 200%

**Default:** 100%

#### 4.3.1.4 Local RTD (TS1)

This section discusses setting up an RTD that is hard-wired into an HTC or HTC3 module. If no RTD is connected directly to the HTC module, (i.e. RTD input is provided from an I/O or other HTC/HTC3 modules) then you may skip this section.

##### Local Temp Sensor (TS1)

This window allows the user to set-up the RTD wired directly to the heat-tracing controller

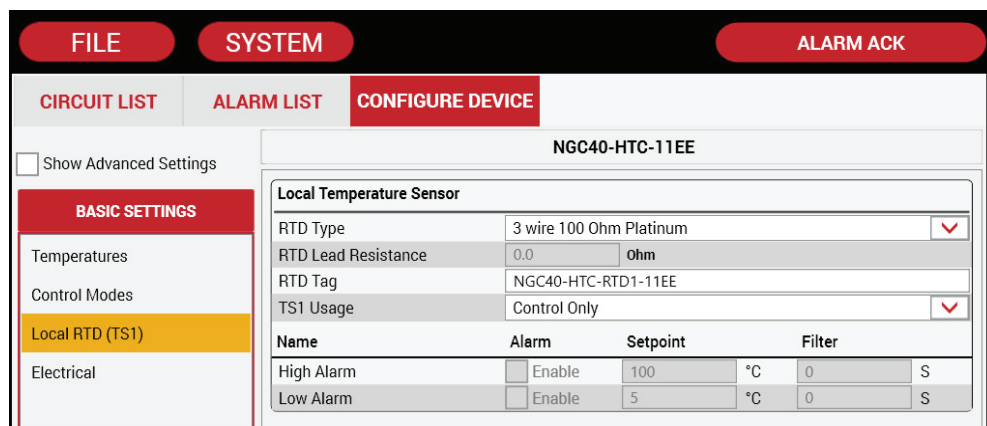


Figure 4.13 shows the 'Basic Settings - Local RTD (TS1)' window for the NGC40-HTC-11EE device. The window is divided into several sections:

- Top Bar:** FILE, SYSTEM, ALARM ACK.
- Left Sidebar:** CIRCUIT LIST, ALARM LIST, CONFIGURE DEVICE (selected). Below this is a 'Show Advanced Settings' checkbox and a 'BASIC SETTINGS' section with sub-items: Temperatures, Control Modes, Local RTD (TS1) (selected), and Electrical.
- Main Content Area:**
  - Local Temperature Sensor** section:
    - RTD Type: 3 wire 100 Ohm Platinum (dropdown menu)
    - RTD Lead Resistance: 0.0 Ohm
    - RTD Tag: NGC40-HTC-RTD1-11EE
    - TS1 Usage: Control Only (dropdown menu)
  - Alarm Settings Table:**

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	100 °C	0 S
Low Alarm	<input type="checkbox"/> Enable	5 °C	0 S

Figure 4.13 Basic Settings - Local RTD (TS1) window

##### RTD Type

**Purpose:** This allows selection of the type of RTD used

**Procedure:** Select the type from the drop down list

**Options:** 3-wire 100-Ohms Platinum or 2-wire 100-Ohms Nickel Iron or 2-wire 100-Ohms Nickel

**Default:** 3-wire 100-Ohms Platinum

##### RTD Lead Resistance

**Purpose:** This allows the lead wire resistance to be set when using 2-wire 100-Ohms Nickel Iron. The lead resistance must be entered to ensure accurate temperature measurement.

**Procedure:** Touch the data area and enter the resistance value using the keypad.

**Range:** 0 to 20 Ohms

**Default:** 0 Ohms

##### Change RTD Tag

**Purpose:** This allows the RTD name to be set to the preferred text

**Procedure:** To enter a tag name, touch where the default tag name is shown. This will open the keyboard for entering the new tag name.

**Range:** Alpha-numeric characters.

**Default:** NGC-40-HTC-RTD1-(last 4 characters of CAN ID)

##### TS1 Usage

**Purpose:** This allows selection of how the controller will react if RTD1 fails. If High Temp Cut out options is selected, the Controller will cut off power when the temp exceeds the values.

**Procedure:** Select the type from the drop down list

**Options:** Monitor Only / Control Only / Monitor with High Temp Cut out / Control with High Temp Cut out. On Selection of Monitor options the grayed area will allow data entry.

**Default:** Control Only

##### High Alarm - TS1

**Purpose:** This setting is exclusively for TS1 when set to the Monitor Only or Monitor with High Limit Cutout modes. The high alarm will activate when the temperature exceeds the set value. **Procedure:** Touch the check box to enable the alarm. When enabled, enter the setpoint by touching the white box and using the numerical keypad. If required set filter in the range in the same way.

**Temperature Range:** -80°C to 700°C (-112°F to 1292°F)

**Filter Range:** 0 to 12 seconds

**Default Setting:** DISABLED

**Default Temperature:** 100°C

**Default Filter:** 0 seconds

#### Low Alarm - TS1

**Purpose:** This setting is exclusively for TS1 when set to the Monitor Only or Monitor with High Limit Cutout modes. The low alarm will activate when the temperature goes below the set value.

**Procedure:** Touch the check box to enable the alarm. When enabled, enter the setpoint by touching the white box and using the numerical keypad. If required set filter in the range in the same way.

**Temperature Range:** -80°C to 700°C (-112°F to 1292°F)

**Filter Range:** 0 to 12 seconds

**Default Setting:** DISABLED

**Default Temperature:** 5°C

**Default Filter:** 0 seconds

The screenshot shows the 'CONFIGURE DEVICE' window for the NGC40-HTC-11EE. The 'ELECTRICAL' tab is selected in the left sidebar. The main area displays two tables for alarm settings. The first table, 'Line Current', has columns for Name, Alarm, Setpoint, and Filter. It lists 'High Alarm' and 'Low Alarm', both enabled with setpoints of 30.0 A and 0.3 A respectively, and a filter of 0 S. The second table, 'Ground Fault Current', also has columns for Name, Alarm, Setpoint, and Filter. It lists 'High Alarm' and 'Ground Fault Trip', both enabled with setpoints of 20 mA and 30 mA respectively, and a filter of 0 S.

Line Current			
Name	Alarm	Setpoint	Filter
High Alarm	<input checked="" type="checkbox"/> Enable	30.0 A	0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	0.3 A	0 S

Ground Fault Current			
Name	Alarm	Setpoint	Filter
High Alarm	<input checked="" type="checkbox"/> Enable	20 mA	0 S
Ground Fault Trip	<input checked="" type="checkbox"/> Enable	30 mA	

Figure 4.14 Basic Settings - Electrical - HTC window

#### 4.3.1.5 Electrical

This section describes the electrical setting options for the HTC/HTC3 modules.

##### Line Current

##### High Alarm

**Purpose:** Alarms at current levels which are higher than the High Line Current Alarm Setpoint. This alarm can be user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Procedure:** Touch the check box to enable or disable this alarm.

**Options:** ENABLE or DISABLE

**Default:** DISABLE

 **Important:** The default alarm latching/non-latching setting for this alarm is LATCHING.

##### High Alarm Setpoint

**Purpose:** Sets the high alarm currents threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0.3 to 60.0 A

**Default:** 30.0 A

## High Alarm Filter

**Purpose:** The Line Current High Alarm Filter will prevent high load current alarms from being indicated until a high current condition has existed for the duration of the high current alarm filter time. This filter helps eliminate nuisance alarms while maintaining the alarm function.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0 to 12 Seconds

**Default:** 0 Second

**NOTE 1:** If an alarm condition appears and then disappears before the alarm filter time has expired, the filter timer is reset and the alarm condition must exist again for the entire alarm filter time before the corresponding alarm will be indicated.

**NOTE 2:** If the user resets an alarm while the alarm condition is still exists, then the alarm will not be indicated again until the entire alarm filter time has expired.

## Low Alarm

**Purpose:** Alarms at current levels which are lower than the Line Current Low Alarm Setpoint. Monitoring for lower than expected current levels may be an effective means of continuity monitoring. This alarm can be user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Procedure:** Touch the check box to enable or disable this alarm.

**Options:** ENABLE or DISABLE

**Default:** ENABLE



**NOTE 1:** The default alarm latching/non-latching setting for this alarm is latching.



**Important:** to minimize nuisance low current alarms, the HTC must detect a current level less than the low current alarm setpoint for a period longer than approximately 20 consecutive seconds.



**NOTE 2:** For series type heating cables, adjusting the low line current alarm to 50% of full load current will properly alarm a problem and reduce nuisance alarms due to voltage dips. Parallel heaters should be adjusted to a level as close as possible to full load current but lower than the current at worst case voltage. The low current setting as a percentage of full load current will vary depending on the facility and its power system.



**NOTE 3:** A low line current alarm may also result from a switch failed open. The controller cannot detect a switch failure due to no current. A no current condition would be identified by a low line current and the latched low line current alarm value reported with the alarm will be 0.0 A.



**NOTE 4:** It may be advantageous to consider using the high tracing resistance alarm to indicate a cable fault when using certain types of heaters.

## Low Alarm Setpoint

**Purpose:** Sets the low alarm currents threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0.3 to 60.0 A

**Default:** 1.0 A

## Low Alarm Filter

**Purpose:** The Low Line Current Alarm Filter will prevent low load current alarms from being indicated until a low current condition has existed for the duration of the low current alarm filter time. This filter helps eliminate nuisance alarms while maintaining the alarm function.


**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0 to 12 Seconds

**Default:** 0 Second



**NOTE 1:** If an alarm condition appears and then disappears before the alarm filter time has expired, the filter timer is reset and the alarm condition must exist again for the entire alarm filter time before the corresponding alarm will be indicated.

 **NOTE 2:** If the user resets an alarm while the alarm condition is still exists, then the alarm will not be indicated again until the entire alarm filter time has expired.

## Ground-Fault Current

### High Alarm

**Purpose:** Alarms at ground-fault current levels which are higher than the High GF Current Alarm Setpoint. This alarm can be used to give pre-warning on a circuit whose ground-fault current is increasing but not yet at the point where it will trip and shut down the heat-tracing circuit. It is user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Procedure:** Touch the check box to enable or disable this alarm.

**Options:** ENABLE or DISABLE

**Default:** ENABLE

 **Important:** The default alarm latching/non-latching setting for this alarm is latching.

### High Alarm Setpoint

**Purpose:** Sets the high alarm currents threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 10 mA to 250 mA

**Default:** 20 mA


### High Alarm Filter


**Purpose:** The high ground-fault current alarm filter will prevent high ground-fault current alarms from being indicated until a high GF current condition has existed for the duration of the high GFI alarm filter time. This filter helps eliminate nuisance alarms while maintaining the alarm function.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

Range: 0 to 12 Seconds

Default: 0 Second

 **NOTE 1:** If an alarm condition appears and then disappears before the alarm filter time has expired, the filter timer is reset and the alarm condition must exist again for the entire alarm filter time before the corresponding alarm will be indicated.

 **NOTE 2:** If the user resets an alarm while the alarm condition is still exists, then the alarm will not be indicated again until the entire alarm filter time has expired.


## Ground-Fault Trip Alarm

**Purpose:** This alarm is activated when the ground-fault leakage current exceeds the Ground-Fault Trip Current Setpoint. Exceeding this limit will result in the output switch being latched off.

**Procedure:** Touch the check box to enable or disable this alarm.

**Options:** ENABLE or DISABLE

**Default:** ENABLE

 **NOTE 1:** National Electrical Codes may require that all legs of non-neutral based power sources be opened upon detection of a ground fault. Multi-pole switch configurations should be used on non-neutral based power systems. Check the requirements with your local Electrical Authority.

 **NOTE 2:** When the Ground-Fault Trip alarm is disabled, ground-fault tripping is disabled as well.


### Ground-Fault Trip Setpoint

**Purpose:** Sets the Ground-Fault Trip threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 10 to 250 mA

**Default:** 30 mA

 **Important:** National Electrical Codes may require that all legs of non-neutral based power sources be upon detection of a ground fault. Multi-pole switch configurations should be used on non-neutral based power systems. Check the requirements with your local Electrical Authority.

## General

### Fixed Voltage

**Purpose:** Provides the line voltage data for power calculations.

**Procedure:** Touch the white box and enter the Line Voltage using the numerical keypad.

**Range:** 80 to 700 V

**Default:** 120 V

### Fixed Frequency

**Purpose:** Provides the line frequency data required for power calculations

**Procedure:** Enter the frequency using the numerical keypad


**Range:** 45 to 65 Hz

**Default:** 60 Hz

## 4.4 Configuration of NGC-40 HTC3 Modules

This section provides complete programming instructions for the NGC-40 HTC3 Heat-Tracing Controllers for three-phase heaters. For HTC3 modules, please follow the procedures for the HTC module since the all parameters except the electrical settings are identical for both HTC and HTC3. Refer to Section 4.3 Configuration of NGC-40 HTC Modules on page 28 for instructions on the other parameters.

### 4.4.1 Electricals 1 for HTC3

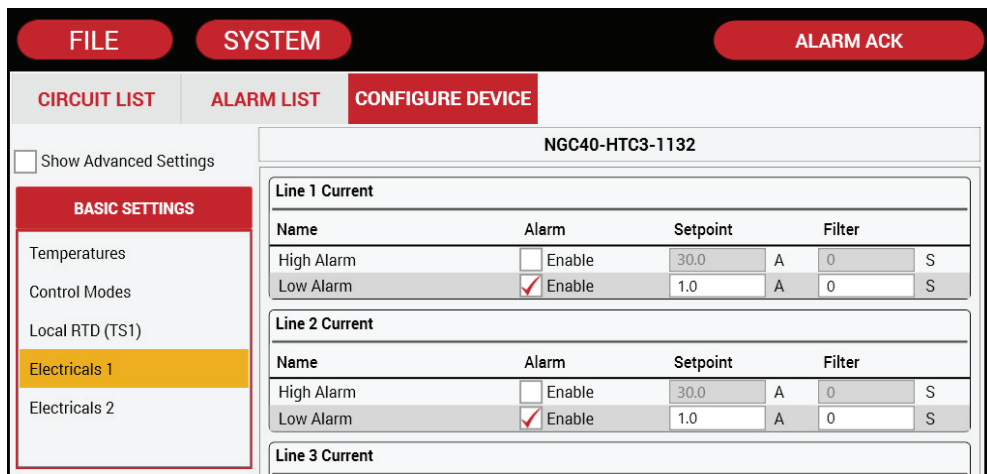

The screenshot shows the configuration interface for the NGC40-HTC3-1132 module. The top navigation bar includes 'FILE', 'SYSTEM', and 'ALARM ACK'. Below this, the 'CONFIGURE DEVICE' tab is active, showing a sidebar with 'CIRCUIT LIST', 'ALARM LIST', and 'CONFIGURE DEVICE'. The 'CONFIGURE DEVICE' section is expanded, showing 'Show Advanced Settings' (unchecked) and a list of settings: 'BASIC SETTINGS', 'Temperatures', 'Control Modes', 'Local RTD (TS1)', 'Electricals 1' (selected), and 'Electricals 2'. The 'Electricals 1' section is further expanded, showing three current settings: 'Line 1 Current', 'Line 2 Current', and 'Line 3 Current'. Each current setting has a table with columns for 'Name', 'Alarm', 'Setpoint', and 'Filter'. The 'Line 1 Current' table shows 'High Alarm' (disabled, setpoint 30.0, filter A) and 'Low Alarm' (enabled, setpoint 1.0, filter A). The 'Line 2 Current' and 'Line 3 Current' tables show identical settings.

NGC40-HTC3-1132			
Line 1 Current			
Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	30.0	A 0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	1.0	A 0 S

Line 2 Current			
Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	30.0	A 0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	1.0	A 0 S

Line 3 Current			
Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	30.0	A 0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	1.0	A 0 S

Figure 4.15 Basic Settings - Electrical - HTC3 window

#### 4.4.1.1 Line Current 1 (Phase 1)

##### High Alarm

**Purpose:** Alarms current levels which are higher than the High Line Current Alarm Setpoint. This alarm can be user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Procedure:** Touch the check box to enable or disable this alarm.

**Options:** ENABLE or DISABLE

**Default:** DISABLE

**NOTE 1:** The default alarm latching/non-latching setting for this alarm is latching.

**NOTE 2:** As the HTC3 automatically protects itself from overload, it would not normally be necessary to enable this alarm. It can be used effectively to guard against accidental paralleling of heating circuits. In-rush, or cold start currents typically associated with self-regulating cables may cause nuisance HIGH CURRENT ALARMS. If this is undesirable this alarm should be disabled.

## High Alarm Setpoint

**Purpose:** Sets the high alarm threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0.3 to 60.0 A

**Default:** 30.0 A


## High Alarm Filter


**Purpose:** The line current high alarm filter will prevent high load current alarms from being indicated until a high current condition has existed for the duration of the high current alarm filter time. This filter helps eliminate nuisance alarms while maintaining the alarm function.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0 to 12 Seconds

**Default:** 0 Second

 **NOTE 1:** If an alarm condition appears and then disappears before the alarm filter time has expired, the filter timer is reset and the alarm condition must exist again for the entire alarm filter time before the corresponding alarm will be indicated.

 **NOTE 2:** If the user resets an alarm while the alarm condition is still exists, then the alarm will not be indicated again until the entire alarm filter time has expired.

## Low Alarm


**Purpose:** Alarms current levels which are lower than the Line Current Low Alarm Setpoint. Monitoring for lower than expected current levels may be an effective means of continuity monitoring. This alarm can be user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.


**Procedure:** Touch the check box to enable or disable this alarm.


**Options:** ENABLE or DISABLE


**Default:** DISABLE

 **NOTE 1:** The default alarm latching/non-latching setting for this alarm is latching.

 **Important:** to minimize low current alarms, the HTC must detect a current level less than the low current alarm setpoint for a period longer than approximately 20 consecutive seconds.

 **NOTE 2:** For series type heating cables, adjusting the low line current alarm to 50% of full load will properly alarm a problem and reduce nuisance alarms due to voltage dips. Parallel heaters should be adjusted to a level as close as possible to full load current but lower than the current at worst case voltage. The low current setting as a percentage of full load current will vary depending on the facility and its power system.

 **NOTE 3:** a low line current alarm may also result from a switch failed open. The controller detects a switch failure due to no current. A no current condition would be identified by a low line current and the latched low line current alarm value reported with the alarm will be 0.0 A.

 **NOTE 4:** It may be advantageous to consider using the high tracing resistance alarm to indicate a cable fault when using certain types of heaters.

## Low Alarm Setpoint

**Purpose:** Sets the low alarm threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0.3 to 60.0 A

**Default:** 1.0 A

## Low Alarm Filter


**Purpose:** The low line current alarm filter will prevent low load current alarms from being indicated until a low current condition has existed for the duration of the low current alarm filter time. This filter helps eliminate nuisance alarms while maintaining the alarm function.




**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0 to 12 Seconds

**Default:** 0 Second

 **NOTE 1:** If an alarm condition appears and then disappears before the alarm filter time has expired, the filter timer is reset and the alarm condition must exist again for the entire alarm filter time before the corresponding alarm will be indicated.

 **NOTE 2:** If the user resets an alarm while the alarm condition is still exists, then the alarm will not be indicated again until the entire alarm filter time has expired.

#### 4.4.1.2 Line Current 2 (Phase 2)


**Procedure:** Repeat settings for Line Current 1

#### 4.4.1.3 Line Current 3 (Phase 3)

**Procedure:** Repeat settings for Line Current 1

#### 4.4.1.4 Electricals 2

##### Ground-Fault Current

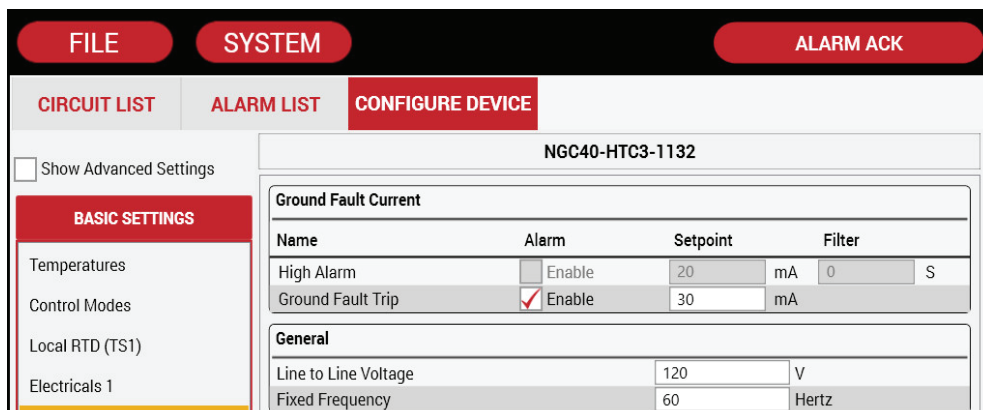

The screenshot shows the configuration interface for device NGC40-HTC3-1132. The 'CONFIGURE DEVICE' tab is active. On the left, a sidebar lists 'BASIC SETTINGS' with options: Temperatures, Control Modes, Local RTD (TS1), and Electricals 1 (highlighted). The main area displays the 'Ground Fault Current' settings. It includes a table for alarm settings and a 'General' section.

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	20 mA	0 S
Ground Fault Trip	<input checked="" type="checkbox"/> Enable	30 mA	

**General**

Line to Line Voltage	120 V
Fixed Frequency	60 Hertz

Figure 4.16 Basic Settings - Electrical - HTC3 window

The ground-fault current measurement is made for all three phases in a single measurement. If the ground-fault current in any of the phases exceeds the alarm thresholds, an alarm will be generated.

##### High Alarm

**Purpose:** Alarms ground-fault current levels which are higher than the High GF Current Alarm Setpoint. This alarm can be user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Procedure:** Touch the check box to enable or disable this alarm.

**Options:** ENABLE or DISABLE

**Default:** ENABLE

 **Important:** The default alarm latching/non-latching setting for this alarm is latching.

##### High Alarm Setpoint

**Purpose:** Sets the High Alarm threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 10 mA to 100 mA

**Default:** 20 mA

##### Ground-Fault Current- High Alarm Filter

**Purpose:** The high GF current alarm filter will prevent high GF current alarms from being indicated until a high GF current condition has existed for the duration of the high GFI alarm filter time. This filter helps eliminate nuisance alarms while maintaining the alarm function.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0 to 12 Seconds

**Default:** 0 Second

 **NOTE 1:** If an alarm condition appears and then disappears before the alarm filter time has expired, the filter timer is reset and the alarm condition must exist again for the entire alarm filter time before the alarm will be indicated.

 **NOTE 2:** If the user resets an alarm while the alarm condition still exists, then the alarm will not be indicated again until the entire alarm filter time has expired.

### Ground-Fault Trip Alarm

**Purpose:** This alarm is activated when the ground-fault leakage current exceeds the Ground-Fault Trip Current Setpoint. Exceeding this limit will result in the output switch being latched off.


A ground-fault alarm may mean the heating cable has been damaged or improperly installed and must not be ignored. Sustained electrical arcing or fire can result. To minimize the risk of fire if the alarm has tripped, shut off the power to the heating cable and repair the system immediately.


**CAUTION:** IN ORDER TO IMPLEMENT A GROUND-FAULT TRIP FUNCTION, ALL NON-GROUNDED POWER CONDUCTORS MUST BE OPENED UPON DETECTION OF A GROUND-FAULT CONDITION.

**Procedure:** Touch the check box to enable or disable this alarm.

**Options:** ENABLE or DISABLE

**Default:** ENABLE

 **NOTE 1:** National Electrical Codes may require that all legs of non-neutral based power sources be opened upon detection of a ground fault. Multi-pole switch configurations should be used on non-neutral based power systems. Check the requirements with your local Electrical Authority.

 **NOTE 2:** When the ground-fault trip alarm is disabled, ground-fault tripping is disabled as well.

### Ground-Fault Trip Setpoint


**Purpose:** Sets the Ground-Fault Trip threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**CAUTION:** IN ORDER TO IMPLEMENT A GROUND-FAULT TRIP FUNCTION, ALL NON-GROUNDED POWER CONDUCTORS MUST BE OPENED UPON DETECTION OF A GROUND-FAULT CONDITION.

**Range:** 10 to 250 mA

**Default:** 30 mA

 **Important:** National Electrical Codes may require that all legs of non-neutral based power sources be opened upon detection of a ground fault. Multi-pole switch configurations should be used on non-neutral based power systems. Check the requirements with your local Electrical Authority.

## 4.5 Configuration of RMM Module

This section provides complete programming instructions on how to assign an RMM and associated RTD's to an HTC or HTC3.

### 4.5.1 Configure the NGC-40 Bridge to utilize the RMM(s) using the Touch1500 interface

**Step 1:** On the Touch 1500, tap on System > Device Manager. The Device Manager tab should open.

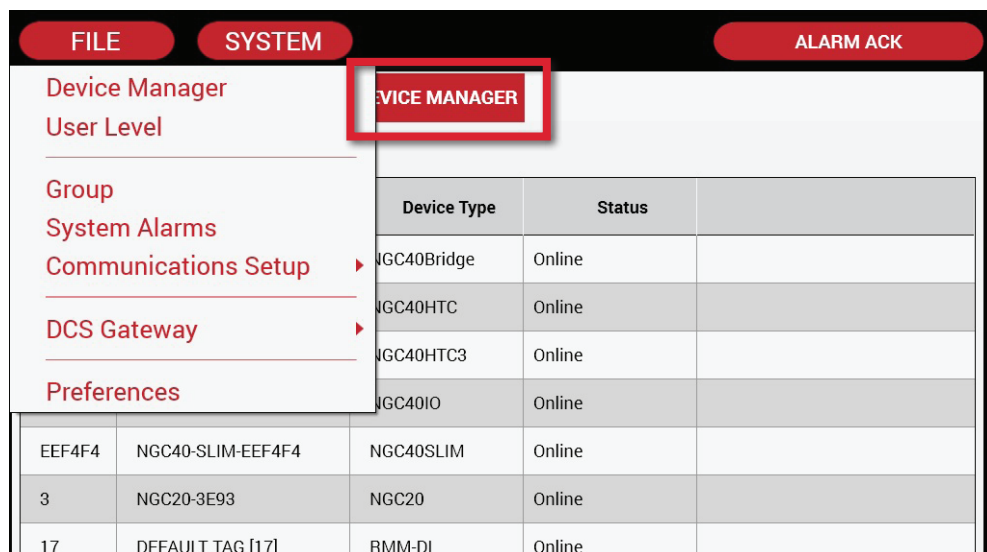


Figure 4.17 System menu

**Step 2:** In the Device List, tap on the NGC-40-Bridge that the RMM is physically connected to.

**Step 3:** Tap on the Config button under the NGC-40-Bridge that the RMM is physically connected to.

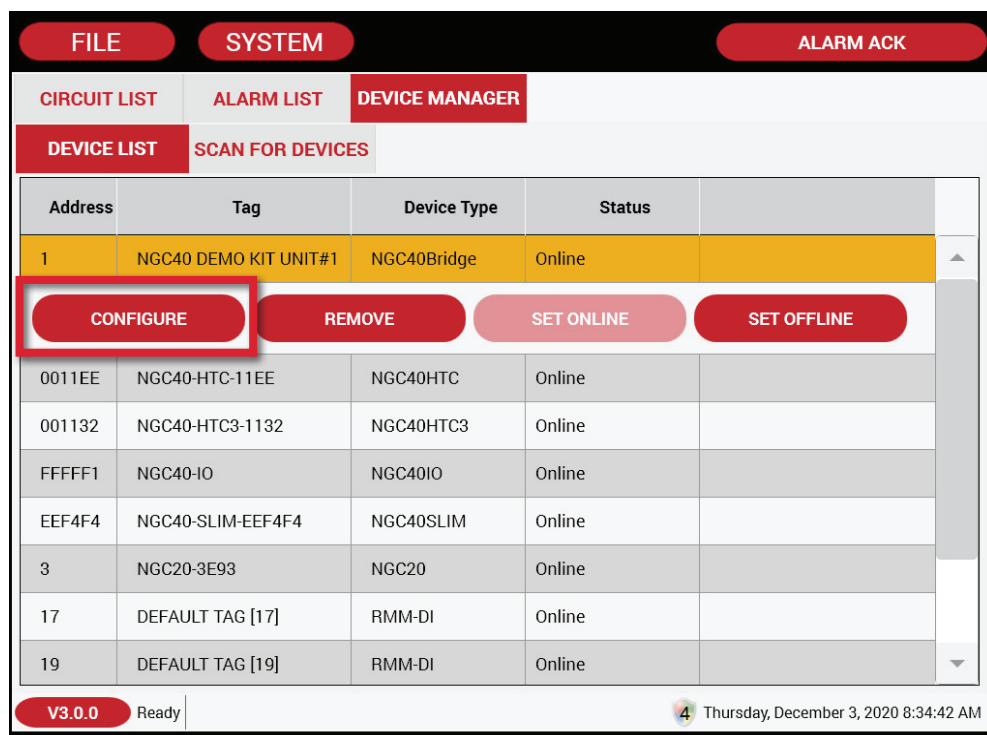


Figure 4.18 Device Manager

**Step 4:** Under General, tap RMM.

**Step 5:** Place a check mark next to the RMM(s) that will be used.

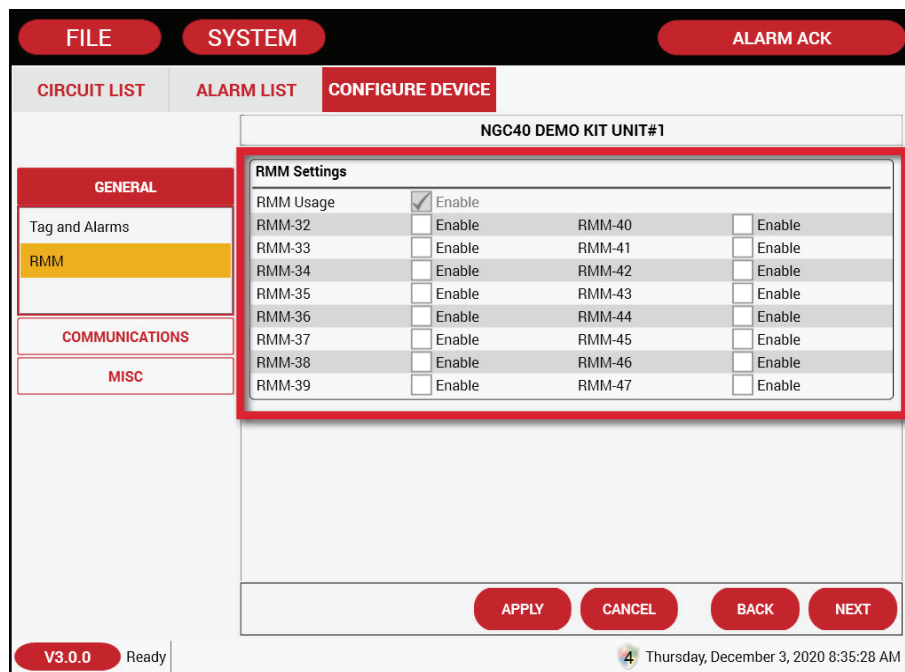


Figure 4.19 RMM list

**Step 6:** Tap on Apply, and the Cancel to close the Config screen. The RMM(s) will now be available for use on any circuit connected to that NGC-40-Bridge module.

#### 4.5.2 Assign an RMM RTD to a circuit.

**Step 1:** Tap on a circuit on the Circuit List.

**Step 2:** Tap on the Overview button.

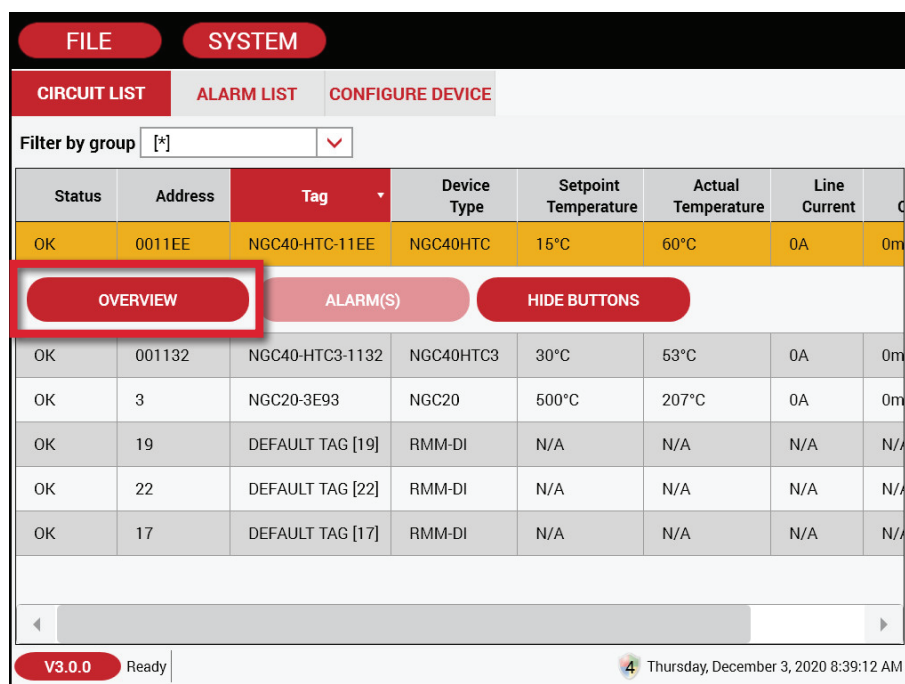


Figure 4.20 Circuit list overview

**Step 3:** Tap on the Config button near the bottom of the screen.

The screenshot shows the 'CIRCUIT OVERVIEW' screen for the NGC40-HTC-11EE device. At the top, there are tabs for 'FILE', 'SYSTEM', 'CIRCUIT LIST', 'ALARM LIST', and 'CIRCUIT OVERVIEW'. Below the tabs, the device name 'NGC40-HTC-11EE' is displayed. The 'Controller Status' section shows 'Heater Status' as 'Off', 'Control Status' as 'Heat-Tracing is off due to fault condition', and 'Safety Temperature Limiter Status' as 'Limiter Tripped'. The 'Control Temperature' section shows 'Actual Value' as 60 °C, 'Setpoint' as 15 °C, 'High Alarm' as 200 °C, and 'Low Alarm' as 5 °C. The 'Ground Fault Current' section shows 'Actual Value' as 0 mA, 'Trip Setpoint' as 30 mA, 'High Alarm' as 20 mA, and 'Highest Measured Value' as 13 mA. The 'Line Currents' section shows 'Actual Value' as 0.0 A, 'High Alarm' as 30.0 A, and 'Low Alarm' as 0.3 A. The 'Power Consumption' section shows a value of 0 W. At the bottom, there are buttons for 'CONFIGURE', 'MONITOR', 'TEST HEATER', 'APPLY', and 'CANCEL'. The status bar at the bottom shows 'V3.0.0 Ready' and the date/time 'Thursday, December 3, 2020 8:42:18 AM'.

Figure 4.21 Configure


**Step 4:** Place a check mark on the Show Advanced Settings option.

The screenshot shows the 'CONFIGURE DEVICE' screen for the NGC40-HTC-11EE device. At the top, there are tabs for 'FILE', 'SYSTEM', 'CIRCUIT LIST', 'ALARM LIST', and 'CONFIGURE DEVICE'. Below the tabs, the device name 'NGC40-HTC-11EE' is displayed. The 'Show Advanced Settings' checkbox is checked. The 'BASIC SETTINGS' section is expanded, showing 'Temperatures', 'Control Modes', 'Local RTD (TS1)', and 'Electrical'. The 'General' section shows 'Tag' as 'NGC40-HTC-11EE' and 'Heater Status' as 'Off'. The 'Control Temperature' section shows a table with columns 'Name', 'Alarm', 'Setpoint', and 'Filter'. The table contains the following rows: 'Control Setpoint' with a setpoint of 15 °C; 'High Alarm' with a setpoint of 200 °C and 'Enable' checked; 'Low Alarm' with a setpoint of 5 °C and 'Enable' checked; 'High Limit Cutout Setpoint' with a setpoint of 700 °C; 'Control Temperature Usage' with a dropdown set to 'Use Lowest Temperature'; 'TS Fail Mode' with a dropdown set to 'Fail Off'; and 'TS Fail Mode Percentage' with a value of 50 %.

Figure 4.22 Show advanced settings

**Step 5:** Tap on the Temperatures sub-menu button in the menu on the left.

 **Important:** This is not the “Temperatures” sub-setting under the Basic Settings section

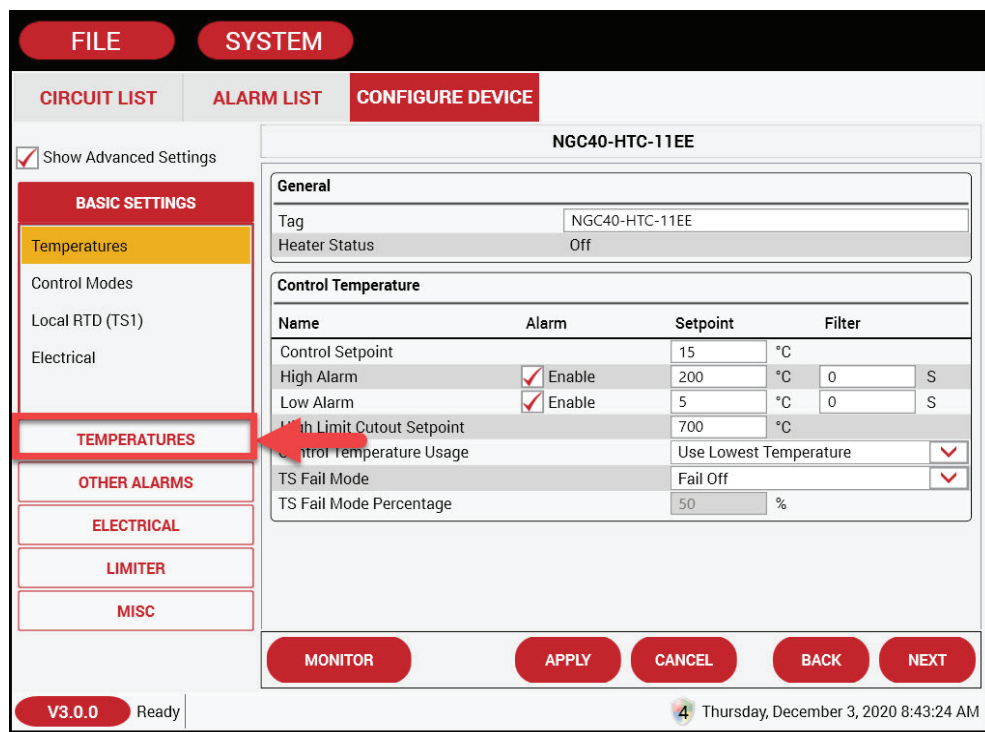


The screenshot shows the configuration interface for the NGC40-HTC-11EE device. The left sidebar contains a menu with options: BASIC SETTINGS, Temperatures (highlighted with a red box and a red arrow), OTHER ALARMS, ELECTRICAL, LIMITER, and MISC. The main area is titled 'CONFIGURE DEVICE' and displays the 'General' and 'Control Temperature' sections. The 'Control Temperature' section includes a table with columns: Name, Alarm, Setpoint, and Filter. The table lists several parameters: Control Setpoint (15 °C), High Alarm (200 °C, Enabled), Low Alarm (5 °C, Enabled), High Limit Cutout Setpoint (700 °C), Control Temperature Usage (Use Lowest Temperature), TS Fail Mode (Fail Off), and TS Fail Mode Percentage (50 %). At the bottom, there are buttons for MONITOR, APPLY, CANCEL, BACK, and NEXT. The status bar at the bottom shows 'V3.0.0 Ready' and the date/time 'Thursday, December 3, 2020 8:43:24 AM'.

Name	Alarm	Setpoint	Filter
Control Setpoint		15	°C
High Alarm	<input checked="" type="checkbox"/> Enable	200	°C 0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	5	°C 0 S
High Limit Cutout Setpoint		700	°C
Control Temperature Usage		Use Lowest Temperature	▼
TS Fail Mode		Fail Off	▼
TS Fail Mode Percentage		50	%

Figure 4.23 Temperatures sub-menu

**Step 6:** Choose a Temperature Source to assign an RMM RTD (TS2-TS8).

**Step 7:** Under the Temperature Source, tap on the Source drop-down menu and choose Remote.

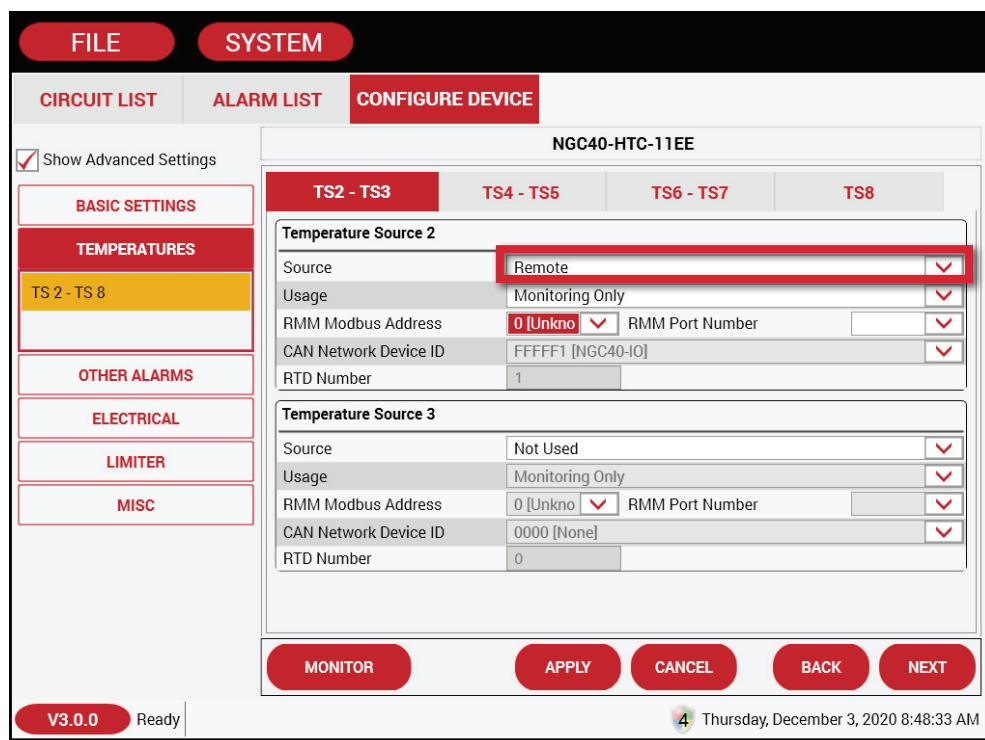

The screenshot shows the configuration interface for the NGC40-HTC-11EE device, specifically the 'Temperature Source' sub-menu. The left sidebar contains a menu with options: BASIC SETTINGS, Temperatures (highlighted with a red box), TS 2 - TS 8 (highlighted with a red box), OTHER ALARMS, ELECTRICAL, LIMITER, and MISC. The main area is titled 'CONFIGURE DEVICE' and displays the 'Temperature Source 2' and 'Temperature Source 3' sections. The 'Temperature Source 2' section includes a table with columns: Source, Usage, RMM Modbus Address, RMM Port Number, CAN Network Device ID, and RTD Number. The 'Source' dropdown menu is open, showing 'Remote' as the selected option. The 'Temperature Source 3' section includes a table with columns: Source, Usage, RMM Modbus Address, RMM Port Number, CAN Network Device ID, and RTD Number. The 'Source' dropdown menu is open, showing 'Not Used' as the selected option. At the bottom, there are buttons for MONITOR, APPLY, CANCEL, BACK, and NEXT. The status bar at the bottom shows 'V3.0.0 Ready' and the date/time 'Thursday, December 3, 2020 8:48:33 AM'.

Source	Usage	RMM Modbus Address	RMM Port Number	CAN Network Device ID	RTD Number
Remote	Monitoring Only	0 [Unkno]		FFFFF1 [NGC40-IO]	1

Source	Usage	RMM Modbus Address	RMM Port Number	CAN Network Device ID	RTD Number
Not Used	Monitoring Only	0 [Unkno]		0000 [None]	0

Figure 4.24 Temperature source

**Step 8:** Under RMM Modbus Address, choose the Modbus address of the RMM. Refer to the table below Step 11 for the RMM address switch settings conversions.

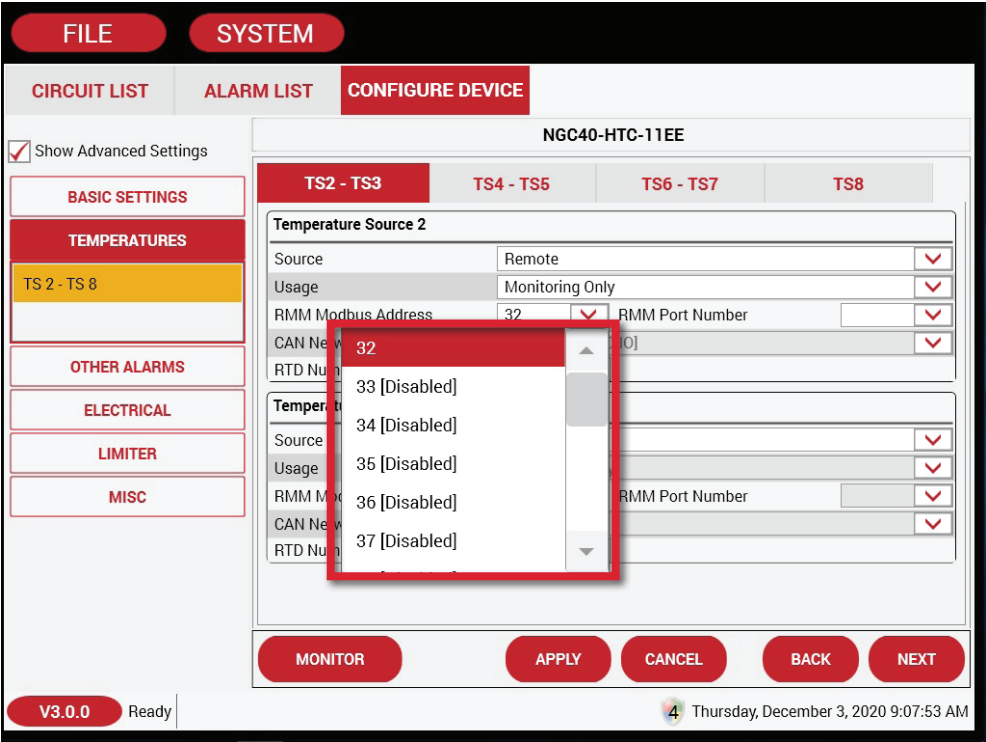


Figure 4.25 RMM address

**Step 9:** Under RMM Port Number, choose the RTD connected to the RMM from the list.

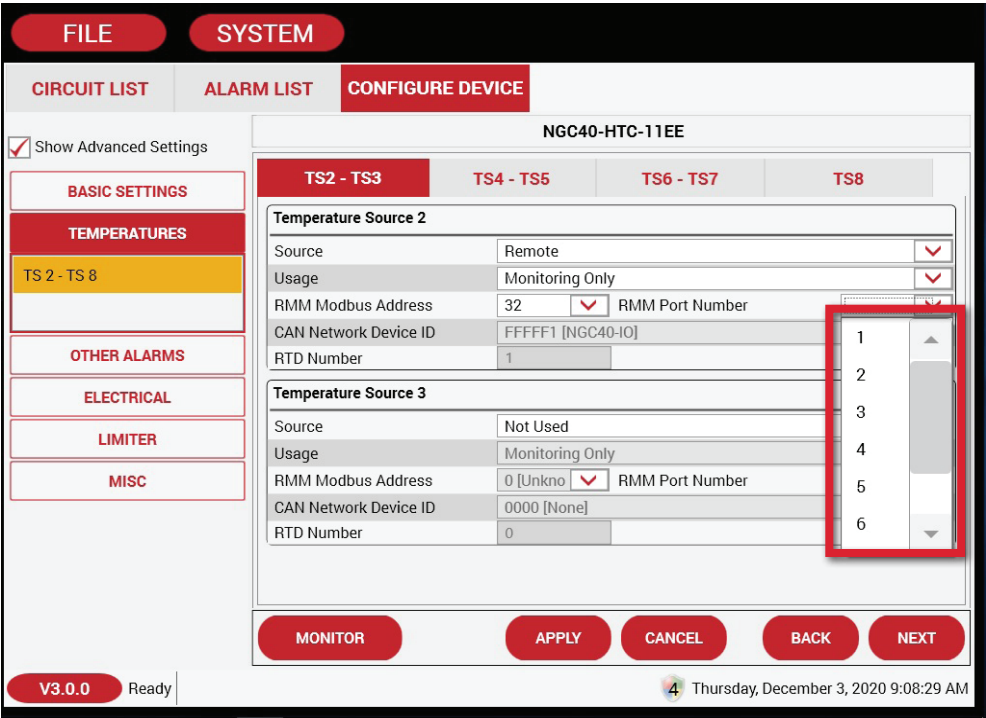


Figure 4.26 RMM port number

**Step 10:** Repeat steps 6 through 9 for any additional RMM RTDs for this circuit.

**Step 11:** Repeat steps 1 through 10 for any additional RMM RTDs for any other circuits.

## RMM Switch Settings

RMM Switch Setting	Actual Modbus Address
0	32
1	33
2	34
3	35
4	36
5	37
6	38
7	39
8	40
9	41
A	42
B	43
C	44
D	45
E	46
F	47



## SECTION 5 – ADVANCED SETTINGS

When the Show Advance Settings box is checked, additional tabs are enabled allowing more programming options. Touch the Show Advanced Setting box to enable the advanced settings mode and display the additional menus.


### 5.1 Temperatures

The screenshot shows the 'CONFIGURE DEVICE' screen for 'NGC40-HTC-11EE'. The 'Show Advanced Settings' checkbox is checked. The left sidebar contains tabs: FILE, SYSTEM, CIRCUIT LIST, ALARM LIST, and CONFIGURE DEVICE. Under CONFIGURE DEVICE, there are sub-tabs: BASIC SETTINGS, TEMPERATURES (selected), OTHER ALARMS, ELECTRICAL, LIMITER, and MISC. The TEMPERATURES tab is further divided into TS2 - TS3, TS4 - TS5, TS6 - TS7, and TS8. The TS2 - TS3 section is expanded, showing 'Temperature Source 2' and 'Temperature Source 3'. Each source has fields for Source (Not Used), Usage (Monitoring Only), RMM Modbus Address (0 [Unkno]), RMM Port Number, CAN Network Device ID (FFFFF1 [NGC40-IO] for Source 2, 0000 [None] for Source 3), and RTD Number (1 for Source 2, 0 for Source 3).

Figure 5.1 Advance Settings - Temperatures TS2 to TS8 for HTC or HTC3 window

#### 5.1.1 Set Temperature Sources 2 Though 8 (TS2 to TS8)

This section describes how to map additional RTD sensors to an HTC or HTC3 from other sensors connected to NGC-40 HTCs and I/O modules in the panel. Up to 7 additional RTD inputs can be assigned to each heat-tracing control module. The Temperatures tab displays the options available to configure sensors TS2 through TS8.

 **Important:** TS1 represents the RTD input to the individual HTC or HTC3 module and is by default assigned to the sensor connected to the HTC modules. If no RTD is hardwired to the HTC or HTC3 module, then TS1 is left unconfigured.

##### Source

**Purpose:** Identifies the source of the RTD being mapped to the control module.

**Procedure:** Touch the drop down box to select the RTD source.

**Range:** Not Used and 'CAN NETWORK'

**Default:** Not Used

##### Usage

**Purpose:** Defines how the RTD input will be used relative to control of the heat-tracing circuit.

**Procedure:** Touch the drop down box to select the RTD source.

**Range:** Monitor Only / Control Only / Monitor with High Temp Cut out / Control with High Temp Cut out.

**Default:** Monitor Only

##### CAN Network ID

**Purpose:** Identifies the Module where the RTD temperature sensor is physically connected within the NGC-40 panel. You will need to know the CAN ID of the module where the desired RTD is connected. The CAN ID for each module can be determined from the Address column in the Circuit List menu (Section 3.3).

**Procedure:** Touch the drop down box to display the list of available RTD sources. Select the desired CAN ID.


**Default:** (0000) None

## RTD Number


**Purpose:** This is applicable only if the prior selection is an I/O module. It identifies which of the possible four RTDs connected to the I/O modules will be assigned to the HTC or HTC3 module.

**Range:** 1 to 4

**Default:** 1

 **Important:** Repeat the above steps for Temperature Source 3 to 8

## 5.2 Other Alarms

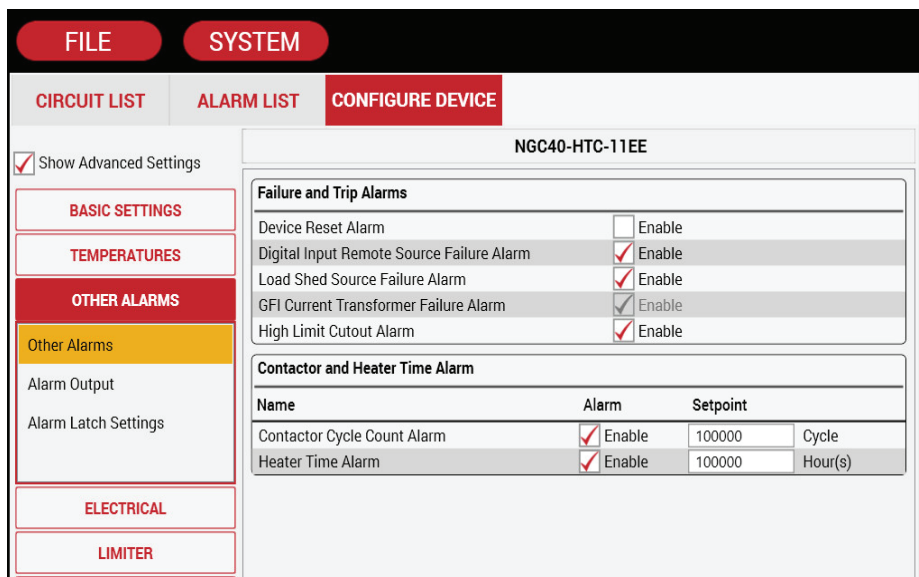

NGC40-HTC-11EE			
<b>Failure and Trip Alarms</b>			
Device Reset Alarm	<input type="checkbox"/>	Enable	
Digital Input Remote Source Failure Alarm	<input checked="" type="checkbox"/>	Enable	
Load Shed Source Failure Alarm	<input checked="" type="checkbox"/>	Enable	
GFI Current Transformer Failure Alarm	<input checked="" type="checkbox"/>	Enable	
High Limit Cutout Alarm	<input checked="" type="checkbox"/>	Enable	
<b>Contactor and Heater Time Alarm</b>			
Name	Alarm	Setpoint	
Contactor Cycle Count Alarm	<input checked="" type="checkbox"/> Enable	100000	Cycle
Heater Time Alarm	<input checked="" type="checkbox"/> Enable	100000	Hour(s)

Figure 5.2 Advance Settings | Other Alarms window

### 5.2.1 Other Alarms

#### 5.2.1.1 Failure and Trip Alarms

The advanced failure and trip alarms allow users to set alarms for the more advanced features and capabilities of the NGC-40 Control & Monitoring system.

##### Device Reset Alarm

**Purpose:** Sets an alarm flag whenever an NGC-40 module is reset.

**Procedure:** Touch the check box to enable or disable

**Range:** ENABLE or DISABLE

**Default:** DISABLED

##### Digital Input Remote Source Failure Alarm

**Purpose:** Registers an alarm when the NGC-40-BRIDGE is unable to communicate with the I/O module specified to provide the remote digital input.

**Procedure:** Touch the Check box to enable or disable

**Range:** ENABLE or DISABLE

**Default:** ENABLED

##### Load Shed Source Failure Alarm

**Purpose:** Registers an alarm when the Load Shed input source goes to the defined "alarm" state.

**Procedure:** Touch the check box to enable or disable

**Range:** ENABLE or DISABLE

**Default:** ENABLED

## Ground-Fault Current Transformer Failure Alarm

**Purpose:** Indicates if there has been a failure of the GFC sensing transformer in the NGC-40 HTC/HTC3 module

**Procedure:** Option unavailable

**Range:** ENABLED

**Default:** ENABLED

## High Limit Cutout Alarm:

**Purpose:** Alarms on high limit cutouts conditions

**Procedure:** Touch the check box to enable or disable

**Range:** ENABLE or DISABLE

**Default:** ENABLED

### 5.2.1.2 Contactor and Heater time Alarms

#### Contactor Cycle Count Alarm

**Purpose:** Generates an alarm if the number of off-to-on transitions of a mechanical contactor reaches or exceeds the contactor count alarm setting. This serves as a method to perform preventative maintenance on the contactor when it reaches the manufacturer's recommended maximum number of cycles.

**Procedure:** Touch the check box to enable or disable this alarm. Touch the white data area under Setpoint to set the desired number of contactor cycles.

**Range:** 0 to 999,999 cycles.

**Default:** ENABLED and set at 100,000 Cycles

#### Heater Time Alarm

**Purpose:** Generates an alarm if the heater ON time reaches or exceeds the set number of operational hours. This serves as a method to perform preventative maintenance on the Heaters.

**Procedure:** The check box to enable or disable this alarm. Touch the white data area under Setpoint to set the desired number of operational hours

**Range:** 0 to 999,999 cycles

**Default:** ENABLED and set at 100,000 Hrs

### 5.2.2 Alarm Output

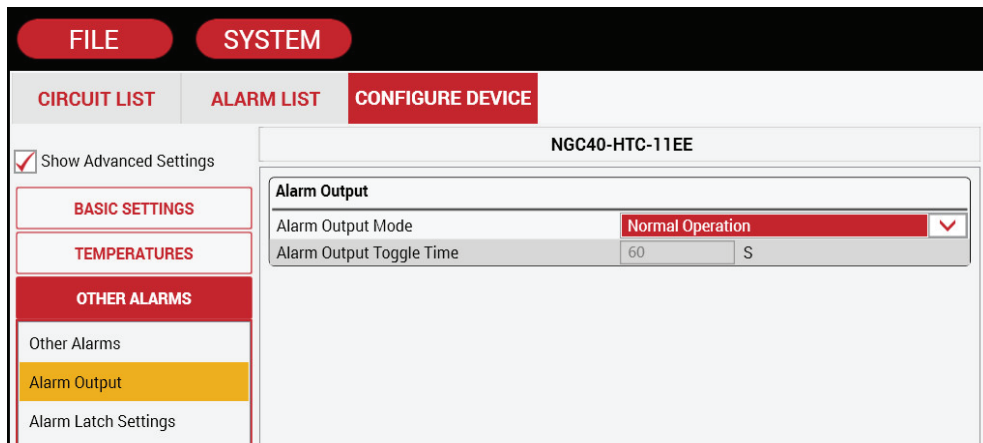


Figure 5.3 Advance Settings | Other Alarms | Alarm Output window

The alarm outputs can be set to indicate with a steady, signal, or in a flashing mode if desired. The flashing mode may be useful when the module alarm is driving an indicator light.

#### Alarm Output Mode

**Purpose:** Offers the option to generate different hard wired alarm signals.

**Procedure:** Select from the drop down list the appropriate alarm mode. Options are Normal Operation, Toggle and Flash. When the alarm output mode Toggle is chosen then set the Toggle time in the Alarm Output Toggle Time box


**Default:** Normal Operation

### 5.2.3 Alarm Latch Settings

**Purpose:** The alarm latching settings allows the user for the selection of automatic clearing (non-latching) of alarms when an alarm condition no longer exists or permanent alarming (latching) of such a condition until the alarm is manually reset.

NGC40-HTC-11EE		
TEMPERATURE ALARMS	ELECTRICAL ALARMS	OTHER ALARMS
Control Temperature Failure Alarm		<input checked="" type="checkbox"/> Latching
Control Temperature High Alarm		<input type="checkbox"/> Latching
Control Temperature Low Alarm		<input type="checkbox"/> Latching
Local Temperature Sensor Failure Alarm		<input checked="" type="checkbox"/> Latching
Local Temperature Sensor High Alarm		<input type="checkbox"/> Latching
Local Temperature Sensor Low Alarm		<input type="checkbox"/> Latching
Temperature Source 1 Failure Alarm		<input type="checkbox"/> Latching
Temperature Source 2 Failure Alarm		<input type="checkbox"/> Latching
Temperature Source 3 Failure Alarm		<input type="checkbox"/> Latching
Temperature Source 4 Failure Alarm		<input type="checkbox"/> Latching
Temperature Source 5 Failure Alarm		<input type="checkbox"/> Latching
Temperature Source 6 Failure Alarm		<input type="checkbox"/> Latching
Temperature Source 7 Failure Alarm		<input type="checkbox"/> Latching
Temperature Source 8 Failure Alarm		<input type="checkbox"/> Latching

Figure 5.4 Advance Settings | Other Alarm | Alarm Latch Settings window

 **Important:** when the heat-tracing application is subject to periodic situations where cold or hot product is part of the process, it may be appropriate to configure the HTC/HTC3 modules with non-latching temperature alarms to avoid nuisance alarms. When it's important to be aware of any temperature alarm conditions that may have existed in a pipe, then the control module temperature alarms should be configured as latching.

#### Temperature Alarms

The temperature alarm can be set latched/unlatched by selecting/unselecting the latching selection box. When enabled, the alarm will remain until the Reset button is pressed on the Touch 1500 Window.

**Default:** Latching is enabled for Control Temperature Failure Alarm and Local Temperature Sensor Failure Alarm.

#### Electrical Alarms

The electrical alarms can be set latched/unlatched by selecting/unselecting the latching selection box. When enabled, the alarm will remain until Reset button is pressed on the Touch 1500 Window.

**Default:** Latching is enabled for High Line Current, High GF, GFI Transformer Failure and switch Failure Alarms.

#### Other Alarms

Other alarms can be set latched/unlatched by selecting/unselecting the latching selection box. When enabled, the alarm will remain until Reset button is pressed on the Touch 1500 Window.

**Default:** Latching is enabled for Digital Input Source Failure and Safety Limiter Communication Failure Alarms.

## 5.3 Electrical

FILE SYSTEM

CIRCUIT LIST ALARM LIST CONFIGURE DEVICE

☒ Show Advanced Settings

NGC40-HTC-11EE

**Line Current Alarms**

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	30.0	A 0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	0.3	A 0 S

**Ground Fault Alarms**

Name	Alarm	Setpoint	Filter
High Alarm	<input checked="" type="checkbox"/> Enable	20	mA 0 S
Ground Fault Trip	<input checked="" type="checkbox"/> Enable	30	mA
GFI Current Transformer Failure Alarm	<input checked="" type="checkbox"/> Enable		

**Heating Cable Resistance Alarms**

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	50	% 0 S
Low Alarm	<input type="checkbox"/> Enable	50	% 0 S
Nominal Tracing Resistance		6.0	Ohm

Figure 5.5 Advance Settings | Electrical | Current/Resistance window

### 5.3.1 Currents/Resistance Settings

#### Line Current Alarms

**Purpose:** Current level alarms can be set to monitor the behavior of the electrical heat-tracing. Low current level alarm can be an effective means of monitoring the continuity of the electrical heat-tracing cable.

**High Alarm:** Check box to enable the alarms. When enabled, enter the Setpoint between 0.3 to 60 A. If required set filter in the range 1 to 12 seconds. This can be useful to suppress high inrush current alarms.

**Default:** DISABLED

**NOTE 1:** The High Current Alarm does not necessarily have to be enabled for control modules using proportional or proportional ambient SSR control modes, since they will attempt to automatically protect themselves from overload.

**NOTE 2:** The High Current Alarm can be used effectively to guard against accidental installation mistakes. In-rush, or cold start currents typically associated with self-regulating cables may cause nuisance High Current Alarms. If this is undesirable this alarm should be disabled or the filter time should be set.

**Low Alarm:** Check the selection box to disable the alarms. When enabled, enter the setpoint between 0.3 to 60 A. If required set the Filter time to a value between 1 to 12 seconds.

**Default:** ENABLED

#### Ground-Fault Alarms

**Purpose:** The high ground-fault alarm warns for potential earth leakage in the electrical heat-tracing cable. The earth leakage indication can be an effect of the behavior of the cable (capacitor effect) or from damage on the cable due to water ingress etc. The ground-fault alarm is by default set at 20 mA and enabled.

#### High Alarm

**Procedure:** Enter setpoint between 10 to 250 mA. If required set the filter time in the range 1 to 12 seconds.

**Default:** ENABLED

#### Ground-Fault Trip


**Purpose:** the Ground-Fault Trip enables the option to stop the electrical heat-tracing when the ground fault goes above the allowable ground-fault leakage current. Exceeding this limit will result in the output relay / SSR being latched off and the GFI Trip Alarm activated to indicate a ground-fault condition.

**Procedure:** If ground-fault tripping is desired, enable the GFI Trip Alarm and adjust the G.F. trip current to the desired value. To disable ground-fault tripping, disable the alarm. Note that the GFI Trip Alarm must be enabled in order to adjust the G.F. Trip Current level. When enabled, enter the setpoint between 10 to 250 mA.

**Default:** ENABLED

**WARNING:** Fire Hazard

A ground-fault alarm may mean the heating cable has been damaged or improperly installed and must not be ignored. Sustained electrical arcing or fire can result. To minimize the risk of fire if the alarm has tripped, shut off the power to the heating cable and repair the system immediately.

 **Important:** In order to implement a ground-fault trip function, all non-grounded power conductors must be opened upon detection of a ground-fault condition. National Electrical Codes may require that all legs of non-neutral based power sources be opened upon detection of a Ground-Fault. Multi-pole switch configurations should be used on non-neutral based power systems. Check the requirements with your local Electrical Authority.

## Heating Cable resistance Alarms

**High Alarm:** Check the box to enable the alarms. When enabled, enter the setpoint between 1 to 250%. If required set Filter in the range 1 to 12 seconds.


**Default:** DISABLED

**Low Alarm:** Check the box to enable the alarms. When enabled, enter the setpoint between 1 to 250 %. If required set Filter in the range 1 to 12 seconds.

**Default:** DISABLED

**Nominal Tracing Resistance:** Set value between 0.8 to 2500 Ohms as per design calculations.

## 5.3.2 Electrical General/Circuit Breaker Settings

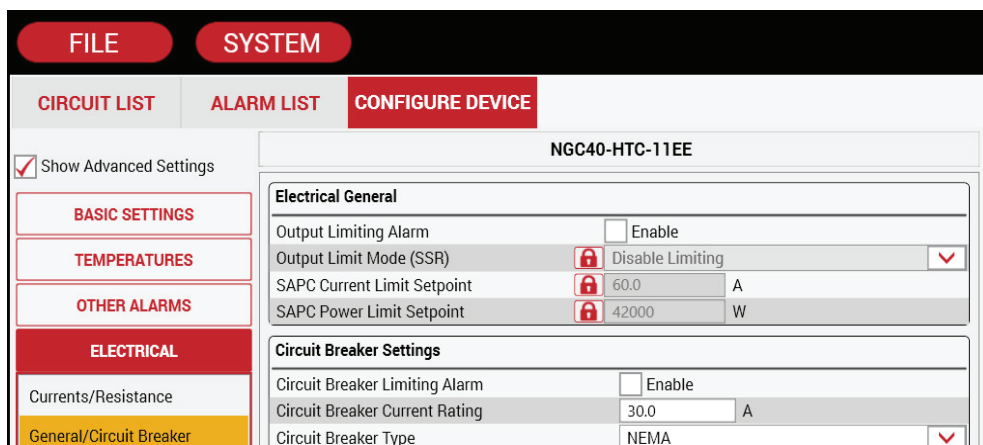

The screenshot shows the configuration interface for the NGC40-HTC-11EE device. The top navigation bar includes 'FILE' and 'SYSTEM' buttons. Below this, there are tabs for 'CIRCUIT LIST', 'ALARM LIST', and 'CONFIGURE DEVICE'. The 'CONFIGURE DEVICE' tab is active, showing a sidebar with 'Show Advanced Settings' checked and a list of settings categories: 'BASIC SETTINGS', 'TEMPERATURES', 'OTHER ALARMS', 'ELECTRICAL', and 'General/Circuit Breaker' (which is highlighted). The main panel displays the 'Electrical General' settings for the NGC40-HTC-11EE device. It includes sections for 'Output Limiting Alarm' and 'Circuit Breaker Settings'. The 'Output Limiting Alarm' section has an 'Enable' checkbox, an 'Output Limit Mode (SSR)' dropdown set to 'Disable Limiting', and two setpoint fields: 'SAPC Current Limit Setpoint' at 60.0 A and 'SAPC Power Limit Setpoint' at 42000 W. The 'Circuit Breaker Settings' section has an 'Enable' checkbox, a 'Circuit Breaker Current Rating' field set to 30.0 A, and a 'Circuit Breaker Type' dropdown set to 'NEMA'.

Figure 5.6 Advance Settings | Electrical | General | Circuit Breaker window

### 5.3.2.1 Electrical General

#### Output Limiting Alarms - SSR Only

**Purpose:** The output limiting function is to set a high current / power output to a heat-tracing circuit. This can be to reduce the heat output of the electrical heat-tracing cable or to maximize the life time expectancy of the SSR. The functionality will only be available when the heat-tracing circuit is equipped with a SSR as switching mechanism.

**Procedure:** To enable the output limiting functionality check the output limiting alarm selection box. **Default:** DISABLED

#### 5.3.2.2 Circuit Breaker Settings


##### Circuit Breaker Limiting Alarm

**Purpose:** The circuit breaker current rating setting helps prevent in-rush induced nuisance tripping of the circuit breaker immediately upstream of the control module. The control module evaluates the square of the current related to time ( $I^2t$ ) and adjusts the output duty cycle accordingly, limiting the amount of current to an acceptable level. The functionality will only be available when the heat-tracing circuit is equipped with a SSR as a switch mechanism.

**Procedure:** Check box to enable the alarms and adjust the Circuit Breaker Current Rating setting to match the heating circuit breaker size (i.e. 30.0 A).

**Range:** 0.3 to 60 A


**Default:** 60 A

 **Important:** This feature SHOULD NOT be used to reduce the size of a circuit breaker or increase the maximum heating cable length. It can be quite effective in preventing nuisance trips due to incorrect design or factors outside those considered by the design.

### Circuit Breaker Type

**Procedure:** Select options from drop down list with options, NEMA, TYPE B, TYPE C, TYPE D

**Default:** NEMA

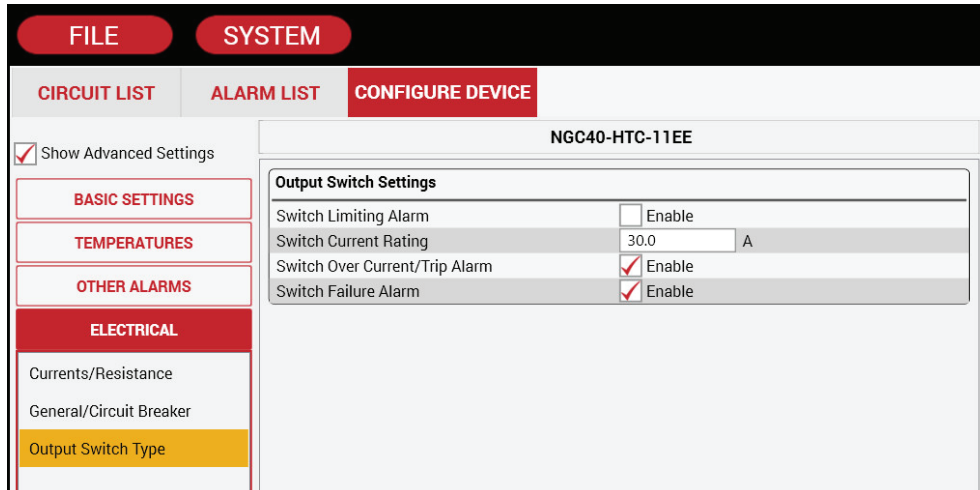

The screenshot shows the 'CONFIGURE DEVICE' window for the NGC40-HTC-11EE. The left sidebar has tabs for 'FILE', 'SYSTEM', 'CIRCUIT LIST', 'ALARM LIST', and 'CONFIGURE DEVICE'. Under 'CONFIGURE DEVICE', there are sub-tabs for 'BASIC SETTINGS', 'TEMPERATURES', 'OTHER ALARMS', and 'ELECTRICAL'. The 'ELECTRICAL' tab is selected, and within it, 'Output Switch Type' is highlighted. The main area shows 'Output Switch Settings' for the device NGC40-HTC-11EE. A checkbox 'Show Advanced Settings' is checked. The settings table is as follows:

Output Switch Settings	
Switch Limiting Alarm	<input type="checkbox"/> Enable
Switch Current Rating	30.0 A
Switch Over Current/Trip Alarm	<input checked="" type="checkbox"/> Enable
Switch Failure Alarm	<input checked="" type="checkbox"/> Enable

Figure 5.7 Advance Settings | Electrical | Output Switch window

### 5.3.3 Output Switch Settings – SSR Only

#### Switch Limiting Alarms

**Procedure:** Check box to enable the alarms.

**Default:** DISABLED

**Switch Current Rating:** Default value 30.0 A.


#### Switch Over Current/Trip Alarm


**Purpose:** This feature is used to provide protection for the output switch. Enabling this alarm will only inform the user of an excessively high current condition and that the output switch has been latched off. During a high current condition, the control module attempts to soft start a heating cable using a technique involving measured in-rush current and the switch current rating. If the control module is unable to start the cable, it will eventually trip its output switch off and will not retry or pulse its output switch again.

**Procedure:** Check box to enable the alarms. Adjust the switch current rating setting to the actual current rating of the SSR. Enable or disable the alarm as required. Note that the Overcurrent Trip Alarm does not have to be enabled in order to adjust the switch current rating setting. The current setting is grayed out when EMR is selected.

**Default:** DISABLED



 **NOTE 1:** It is highly recommended to enable this alarm as an overcurrent trip condition would normally represent a potentially serious problem.


 **NOTE 2:** This is a factory set alarm value and disabling the alarm does not disable the overcurrent trip function. In some applications the use of self-regulating cable will produce very high in-rush currents during cold startup. These currents may exceed the overcurrent trip limit and the control module will not be able to soft start the heating circuit. If this condition persists please contact your nearest Chemelex sales office for recommendations and solutions to this problem.

## Switch Failure Alarm


**Purpose:** The purpose of the Switch Failure Alarm is to indicate that an output switch failure has occurred. The control module HTC/ HTC3 checks via current measurement if the SSR/ EMR has switched correctly. If the controller measures a current while the SSR /EMR should be switched off the switch failure alarm will go on. The alarm will go on as well when the controller switches on the SSR / EMR and measures no current going to the electrical heat-tracing cable.

**Procedure:** Check box to enable the alarms

**Default:** DISABLED

 **Important:** The SWITCH FAILURE Alarm should always be enabled. A high temperature condition, as a result of a failed heating circuit, can only be caused if the output switch fails closed. When an output switch fails closed, the control module cannot turn the power to the heating circuit off, therefore no protection features are available (ground-fault trip, power limiting, etc.). If a SWITCH FAILURE ALARM is detected, the heat-tracing panel should be serviced immediately.

## 5.4 Miscellaneous Settings

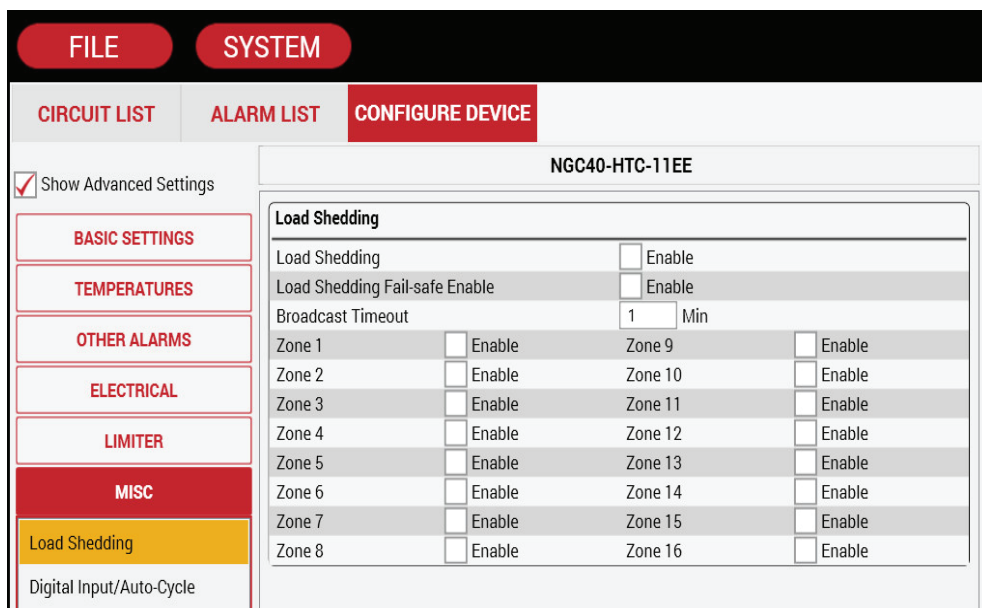

The screenshot shows the 'CONFIGURE DEVICE' window for the NGC40-HTC-11EE. The 'Show Advanced Settings' checkbox is checked. On the left sidebar, the 'MISC' category is selected, and 'Load Shedding' is highlighted. The 'Load Shedding' section contains the following settings:

Load Shedding	
Load Shedding	<input type="checkbox"/> Enable
Load Shedding Fail-safe Enable	<input type="checkbox"/> Enable
Broadcast Timeout	1 Min
Zone 1	<input type="checkbox"/> Enable
Zone 2	<input type="checkbox"/> Enable
Zone 3	<input type="checkbox"/> Enable
Zone 4	<input type="checkbox"/> Enable
Zone 5	<input type="checkbox"/> Enable
Zone 6	<input type="checkbox"/> Enable
Zone 7	<input type="checkbox"/> Enable
Zone 8	<input type="checkbox"/> Enable
Zone 9	<input type="checkbox"/> Enable
Zone 10	<input type="checkbox"/> Enable
Zone 11	<input type="checkbox"/> Enable
Zone 12	<input type="checkbox"/> Enable
Zone 13	<input type="checkbox"/> Enable
Zone 14	<input type="checkbox"/> Enable
Zone 15	<input type="checkbox"/> Enable
Zone 16	<input type="checkbox"/> Enable

Figure 5.8 Advance Settings | Miscellaneous | Load Shedding window

### 5.4.1 Load Shedding

**Purpose:** The load shedding function allows the control module output to be forced off by a load shedding command issued from DCS or other Process Control Systems. The load shedding feature may be used to turn off the output of one or more control modules in order to reduce energy consumption, this to avoid peak demand surcharges.

**Procedure:** Check box to enable load shedding as desired.

**Default:** DISABLED

Load Shedding Fail Safe Alarm: Check box to enable the options.

**Default:** DISABLED

**Broadcast Timeout:** Enter timeout in 1 to 10 minutes

Check boxes to enable zones 1 to 16



## 5.4.2 Digital Input | Auto-Cycle

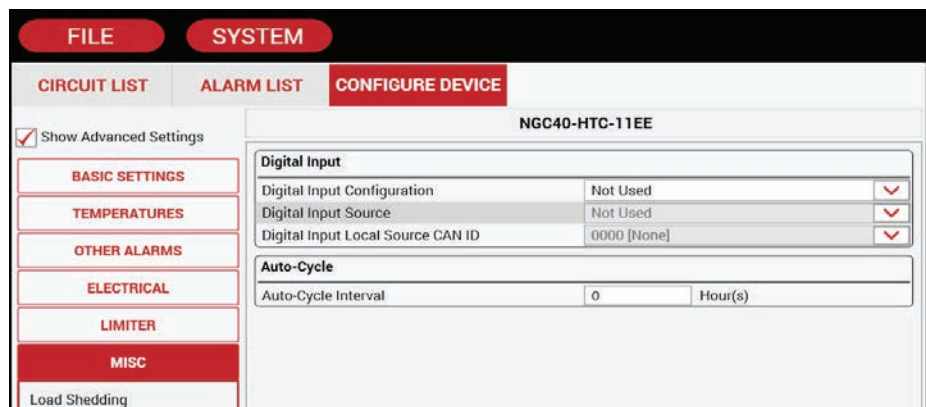


Figure 5.9 Advance Settings | Miscellaneous | Digital Input /Auto-Cycle window

### 5.4.2.1 Digital Input

**Purpose:** The digital input offers the option to alarm or override the electrical heat-tracing mode from an external device. The digital input can be configured in different ways. These are:

- None: no action taken
- Alarm when input is closed
- Alarm when input is open
- Force Off when input is closed
- Force Off when input is open
- Force On when input is closed
- Force On when input is open


**Default:** None


**Digital Input Source:** When selections other than 'Not used' is made, the drop down list will enable selection of appropriate input source.


### 5.4.2.2 Auto Cycle


**Purpose:** The auto-cycle function momentarily (approximately 10 seconds) applies power to the heating circuit at the selected interval. It is used to test the integrity of the heating circuit. Alarms generated at the time of auto-cycle are latched and remain active after the completion of the auto-cycle function until they are reset. Auto-cycling effectively eliminates the need for preventive maintenance by automatically verifying the integrity of the heating circuit. Auto-Cycle Interval is the number of hours between successive heating circuit integrity tests depending on the Auto-Cycle Units specified


**Auto Cycle Interval:** Can be set from 0 to 750 hrs. The function is disabled when set at 0.


 **NOTE 1:** Auto-cycling should always be enabled for normal operation. This feature should only be disabled if the control module's heating circuit is being monitored or exercised by some other device or means. Although this function defeats temperature control and forces output on, the control module will continue to adjust the output for protection purposes or power limiting (SSR option only).


 **NOTE 2:** Auto-cycling is inhibited if the control module is in load shedding mode, see Section 5.4.1 Load Shedding on page 55 for more details.

 **NOTE 3:** The NGC-40 HTC/HTC3 module will always auto-cycle for 6 seconds when power is initially applied to the control module and load shedding mode is disabled. However, the HTC/HTC3 module will only auto-cycle for 10 seconds when power is initially applied to the control module if auto-cycling is enabled and it is not in load shedding mode.

 **NOTE 4:** If auto-cycling is enabled, and all the control temperature sensors have failed, the control module will still perform an auto-cycle.

 **NOTE 5:** When using proportional ambient contactor mode, the Cycle Time setting should be less than the Auto-Cycle Interval otherwise auto-cycling could affect the duty-cycle.

 **NOTE 6:** For the earliest possible alarming of heating circuit problems, the Auto-Cycle Interval should be set to a small value.

 **NOTE 7:** This feature is only available if Auto-Cycle is enabled.

5.5 Device Information

FILESYSTEM

CIRCUIT LISTALARM LISTCONFIGURE DEVICE

☒ Show Advanced Settings

BASIC SETTINGS

TEMPERATURES

OTHER ALARMS

ELECTRICAL

LIMITER

MISC

Load Shedding

Digital Input/Auto-Cycle

Device Information

NGC40-HTC-11EE

Device Information

Device Type	NGC40HTC
CAN Network ID	11EE
Firmware Version	4.8.42
Serial Number	11EE

LOAD DEFAULTS

Figure 5.10 Advance Settings | Miscellaneous | Device Information window

**Purpose:** Allows the user to review the Device Information of the NGC-40-HTC. The Device Type, Firmware Version and Serial Number are factory configured and cannot be changed.

Load Configuration Defaults

**Purpose:** Loads the default settings that are stored in the NGC-40-HTC. On hitting the button, all user input data will be erased and the device will be set to factory defaults. An alarm will be raised when Device Reset Alarm option is enabled.

5.6 Configure an HTC3 Module on Advanced Settings

To configure an HTC3 module please follow the steps for HTC as per Section 4.4 Configuration of NGC-40 HTC3 Modules. The Buttons on the Touch 1500 Windows will expand as below to include additional data.

FILESYSTEM

CIRCUIT LISTALARM LISTCONFIGURE DEVICE

☒ Show Advanced Settings

BASIC SETTINGS

TEMPERATURES

OTHER ALARMS

ELECTRICAL

General/Ground Fault

Line Currents

Electrical Setup 1

Electrical Setup 2

Electrical Setup 3

LIMITER

MISC

NGC40-HTC3-1132

Electrical General

Heater Configuration	3-Phase WYE
Output Limit Mode (SSR)	<div>Disable Limiting</div>
Switch Current Rating	30.0 A
Circuit Breaker Type	NEMA

Ground Fault Current Alarms

Name	Alarm	Setpoint	Filter
High Alarm	<div>Enable</div>	20 mA	0 S
Ground Fault Trip	<div><input checked="" type="checkbox"/> Enable</div>	30 mA	
GFI Current Transformer Failure Alarm	<div><input checked="" type="checkbox"/> Enable</div>		

MONITOR

APPLY

CANCEL

BACK

NEXT

Figure 5.11 Advance Settings | Electrical | General | Ground-Fault window

## 5.6.1 Set up General/GF on HTC3

### 5.6.1.1 Electrical General

#### Heater Configuration

**Purpose:** Set the electrical heat-tracing configuration as installed in the field.

**Options:** Single-phase, 3-phase WYE, 3-phase DELTA

**Procedure:** Select the desired setting from the drop down options

**Line to Line Voltage:** Enter the design voltage within the limits of 80 to 750 V

**Fixed frequency:** Enter the value based on transformer data

#### Output Limit Mode

**Purpose:** This user selectable mode limits the maximum amount of power applied to a heating circuit. This is an average power calculated by the control module using the average current and applied voltage. The control module switches the output on and off rapidly to limit the average current to an appropriate level. The maximum power level may be adjusted to eliminate step-down transformers, lower the effective output wattage of a cable, or implement energy management of the heating circuit. Grayed out for when switch mode is EMR.

**Options:** Disable Limiting, Power Limiting, Current Limiting


**Procedure:** Select the desired setting from the drop down options

#### Switch Current Rating

**Purpose:** This feature is used to provide protection for the output switch. Enabling this alarm will only inform the user of an excessively high current condition and that the output switch has been latched off. During a high current condition, the control module attempts to soft start a heating cable using a technique involving measured in-rush current and the switch current rating. If the control module is unable to start the cable, it will eventually trip the output switch off and will not retry or pulse its output switch again.

**Procedure:** Adjust the Switch Current Rating setting to the actual current rating of the SSR. Note that the Overcurrent Trip Alarm does not have to be enabled in order to adjust the switch current rating setting. The current setting is grayed out when EMR is selected.

**Default:** Set at 30.0 A

 **Important:** This function may be set within reasonable limits for the particular tracer being powered. The effective resolution of the setting is limited to 1/30th of the calculated full on power. Do not set the maximum power level below the full output level for applications that do not require power limiting.

#### Circuit Breaker Type

**Procedure:** Select options from drop down list with options, NEMA, TYPE B, TYPE C, TYPE D

**Default:** NEMA

#### Ground-Fault Current Alarms

The data in this section is the same that was entered in the BASIC settings at Settings for Ground Fault, Section 4.3.1.5

## 5.6.2 Line Current Alarms

The data in this section is the same that was entered in the BASIC settings at Settings for Phase 1 Line Current, Section 4.4.1.1.

## 5.6.3 Electrical Setup 1

### 5.6.3.1 Line 1 Circuit Breaker and Output Switch Settings

#### Output Limiting Alarms

**Purpose:** Alarms current levels which are higher than the High Line Current Alarm Setpoint. This alarm can be user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.


**Procedure:** Check box to enable the alarms


**Default:** DISABLED

Max Line Current Alarm Setpoint

**Procedure:** Enter the value at which the High Current Alarm will go off.

**Default:** 60 A

 **Important:** As the HTC automatically protects itself from overload, it would normally not be necessary to enable this alarm. It can be used effectively to guard against accidental paralleling of heating circuits. In-rush, or cold start currents typically associated with self-regulating cables may cause nuisance High Current Alarms. If this is undesirable this alarm should be disabled.

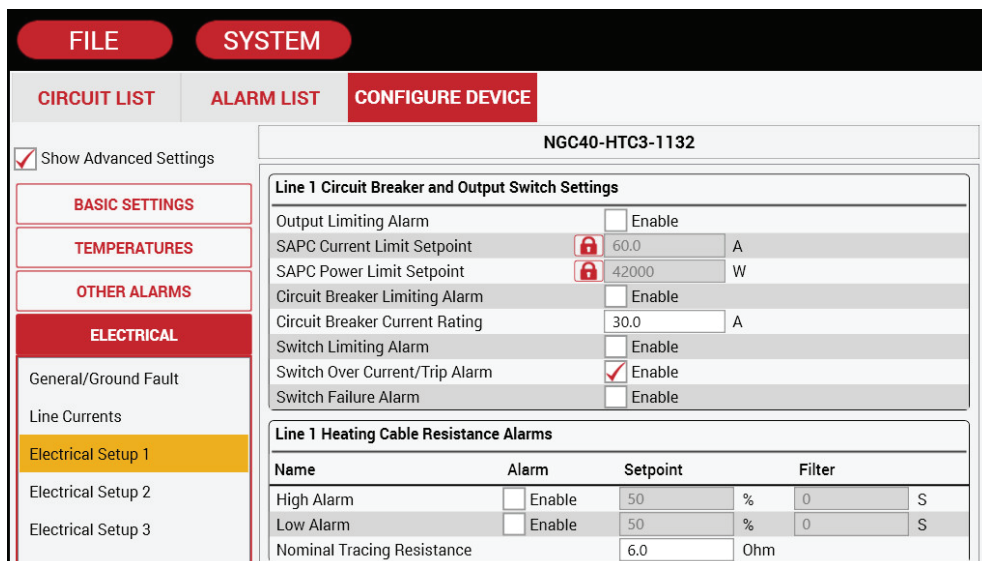

**FILE** **SYSTEM**

**CIRCUIT LIST** **ALARM LIST** **CONFIGURE DEVICE**

☒ Show Advanced Settings

**BASIC SETTINGS**

**TEMPERATURES**

**OTHER ALARMS**

**ELECTRICAL**

General/Ground Fault

Line Currents

**Electrical Setup 1**

Electrical Setup 2

Electrical Setup 3

**NGC40-HTC3-1132**

**Line 1 Circuit Breaker and Output Switch Settings**

Output Limiting Alarm ☐ Enable

SAPC Current Limit Setpoint ☐ 60.0 A

SAPC Power Limit Setpoint ☐ 42000 W

Circuit Breaker Limiting Alarm ☐ Enable

Circuit Breaker Current Rating 30.0 A

Switch Limiting Alarm ☐ Enable

Switch Over Current/Trip Alarm ☒ Enable

Switch Failure Alarm ☐ Enable

**Line 1 Heating Cable Resistance Alarms**


Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	50	% 0 S
Low Alarm	<input type="checkbox"/> Enable	50	% 0 S
Nominal Tracing Resistance		6.0	Ohm

Figure 5.12 Configure Device | Electrical for HTC3 Setup 1 window

**Maximum Power Setpoint:** Active Only When Switch Mode Is SSR

**Purpose:** This user selectable level limits the maximum amount of power applied to a heat-trace circuit. This is an average power calculated by the controller using the average current and the fixed voltage setting. The HTC switches the output on and off rapidly to limit the average current to an appropriate level. The maximum power level may be adjusted to eliminate step-down transformers, lower the effective output wattage of a cable, or implement energy management of the heat trace circuit.


**Range:** 3 to 42000 Watts

 **NOTE 1:** This function may be set within reasonable limits for the particular tracer being powered. The effective resolution of the setting is limited to 1/30th of the calculated full on power.

 **NOTE 2:** Do not set the maximum power setpoint below full output for applications that do not require control of power.

### Circuit Breaker Limiting Alarm

**Purpose:** This alarm will only inform the user that switch limiting is currently active and an excessively high current condition is present. The HTC3 will pulse its output switch for a small interval and read the resulting current. If the measured current exceeds the Switch Current Rating setting, then the duty-cycle of its output switch will be varied so that an average current not exceeding the Switch Current Rating setting is maintained.

 **Important:** This alarm should normally be left enabled. Currents in this range cannot be considered normal and should be investigated. This alarm can be user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Default:** DISABLE

Circuit Breaker Current Rating: Set the current to the desired value within the CB limits.

Switch Limiting Alarms: Check box to enable the alarms.

**Default:** DISABLED

## Switch Over Current/Trip Alarm

**Purpose:** This feature is used to provide protection for the output switch. Enabling this alarm will only inform the user of an excessively high current condition and that the output switch has been latched off. During a high current condition, the control module attempts to soft start a heating cable using a technique involving measured in-rush current and the switch current rating. If the control module is unable to start the cable, it will eventually trip its output switch off and will not retry or pulse its output switch again.

**Procedure:** Check box to enable the alarms. Adjust the switch current rating setting to the actual current rating of the SSR. Enable or disable the alarm as required. Note that the Overcurrent Trip Alarm does not have to be enabled in order to adjust the switch current rating setting. The current setting is grayed out when EMR is selected.

**Default:** DISABLED



**NOTE 1:** It is highly recommended that this alarm be enabled since an overcurrent trip condition would normally represent a serious problem.



**NOTE 2:** This is a factory set alarm value and disabling the alarm does not disable the overcurrent trip function. In some applications the use of self-regulating cable will produce very high in-rush currents during cold startup. These currents may exceed the overcurrent trip limit and the control module will not be able to soft start the heating circuit. If this condition persists please contact your nearest Chemelex sales office for recommendations and solutions to this problem.

## Switch Failure Alarm

**Purpose:** The purpose of the Switch Failure Alarm is to indicate that an output switch failure has occurred. The control module HTC/ HTC3 determines that if the output switch is turned off and there is load current present, then the output switch has failed closed and the alarm is latched on.

**Procedure:** Check box to enable the alarms

**Default:** DISABLED



**Important:** The SWITCH FAILURE Alarm should always be enabled. A high temperature condition, as a result of a failed heating circuit, can only be caused if the output switch fails closed. When an output switch fails closed, the control module cannot turn the power to the heating circuit off, therefore no protection features are available (ground-fault trip, power limiting, etc.). If a Switch Failure Alarm is detected, the unit should be serviced immediately.

## 5.6.3.2 Line 1 Heating Cable Resistance Alarms

### High Alarm

**Purpose:** Alarms heater resistance levels which have increased from the nominal resistance setting by more than the High Tracing Resistance Deviation setting. The High Resistance Alarm may be used to indicate an open or a high resistance connection or, when using constant wattage parallel cables, may indicate the failure of one or more heating zones. It may also be used to monitor a failed series-type cable or connection in 3-phase applications while minimizing nuisance alarms created by voltage fluctuations.

**Procedure:** Check box to enable the alarms. When enabled, enter the Setpoint between 1 to 250%. If required set Filter in the range 1 to 12 seconds.

**Default:** DISABLED



**Important:** High Resistance Alarms will only be generated if the output switch is on.

### Low Alarm

**Purpose:** Alarms heater resistance levels which have decreased from the nominal resistance setting by more than the Low Tracing Resistance Deviation setting.

**Procedure:** Check box to enable the alarms. When enabled, enter the Setpoint between 1 to 100 %. If required set Filter in the range 1 to 12 seconds.

**Default:** DISABLED

## Nominal Tracing Resistance

**Purpose:** This parameter defines the nominal expected heater resistance. A value must be entered by the user to allow the High and Low Tracing Resistance Alarms to be used. Once the controller and the heating cable have been installed, the following procedure should be used to determine the nominal resistance setting.

**Procedure:** Adjust the Control Setpoint temperature to turn on the output switch. Allow the load to come up to design temperature and its power consumption to stabilize. Monitor the resistance reading and record its value. Return the Control Temperature Setpoint temperature to its proper setting. Enter the recorded resistance value as the nominal resistance setting.

**Range:** Value between 0.8 to 2500 Ohms as per design calculations.

### 5.6.4 Electrical Setup 2

#### Line 2 Circuit Breaker and Output Switch settings

Repeat step Line 1 Circuit Breaker and Output Switch Settings, Section 5.6.3.1.

#### Line 2 Heating Cable Resistance Alarms

Repeat step Line 1 Heating Cable Resistance Alarm, Section 5.6.3.2.

### 5.6.5 Electrical Setup 3

#### Line 3 Circuit Breaker and Output Switch settings

Repeat step Line 1 Circuit Breaker and Output Switch Settings, Section 5.6.3.1.

#### Line 3 Heating Cable Resistance Alarms

Repeat step Line 1 Heating Cable Resistance Alarms, Section 5.6.3.2.

## 5.7 Configuration of the NGC-40 I/O Module

The screenshot shows the 'CONFIGURE DEVICE' window for the 'NGC40-IO' module. The left sidebar contains tabs: 'GENERAL' (selected), 'Alarm Settings', 'TEMPERATURE SENSORS', 'ALARM SOURCES', 'ALARM LATCHINGS', and 'MISC'. The main area is titled 'NGC40-IO' and contains the following settings:

General	
Tag	NGC40-IO

IO Alarms and Output	
Device Reset Alarm	<input type="checkbox"/> Enable
Digital Input Configuration	Not Used <span>▼</span>
Alarm Output Mode	Normal Operation <span>▼</span>
Alarm Output Toggle Time	5 Sec

Figure 5.13 Configure Device | Alarm Setting window for I/O module

### 5.7.1 General

#### 5.7.1.1 Alarm Settings

##### General

**Tag:** A 40-character tag may be assigned to the NGC-40-I/O Module to allow it to be easily associated with a pipe, vessel, process, circuit, drawing name, number.

**Range:** Alpha-numeric characters.

**Default:** NGC-40-I/O-xxxx (xxxx=last four characters of the CAN ID)

I/O Alarms and Output

## Device Reset Alarm

**Purpose:** The Device Reset Alarm is used to indicate:

1. Power to the module has been interrupted and subsequently restored.
2. A transient has caused the module's program to restart.
3. An internal condition has caused the module's program to restart.

**Procedure:** Check box to enable

**Default:** DISABLED

**Digital Input Configuration:** From the drop down list select options None/Alarm when input is Closed/ Alarm when input is open.

**Default:** None

**Digital Input Source:** When selections other than None is made, the drop down list will enable selection of appropriate input source

**Alarm Output Mode:** From the drop down list select the appropriate Alarm Mode. Options are Normal Operation, Toggle & Flash. Set the Alarm Output Toggle Time.

**Default:** Normal Operation

## 5.7.2 Temperature Sensors

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	100 °C	0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	5 °C	0 S
Failure Alarm	<input checked="" type="checkbox"/> Enable		

Figure 5.14 Configure Device | Temperature Sensor 1 to 4 window for I/O module

### 5.7.2.1 Tab - Sensor 1

**Purpose:** This screen allows the user to select the appropriate RTDs and set the parameters.

#### RTD Type

**Procedure:** Use the dropdown menu to select either 3-wire 100-Ohms Platinum or 2-wire 100-Ohm nickel iron or 2-wire 100-Ohm nickel

**Default:** 3-wire 100-Ohms platinum

#### RTD Lead Resistance

**Purpose:** Applicable only for 2-wire 100-Ohm nickel iron.

**Procedure:** Enter the appropriate value using the popup keypad

**Range:** 0 to 20 Ohms

**Default:** 0 Ohms - Grayed out

#### RTD Tag

**Purpose:** A 40-character tag may be assigned to the RTD for easy identification.

**Procedure:** Click on the default tag name to bring up the keyboard for entering the new tag name.

**Range:** Alpha-numeric characters.

**Default:** NGC-40-IO-RTD1-(last 4 characters of the IO Module CAN ID)



## High Alarm

**Procedure:** Check box to enable the alarms

**High Alarm Setpoint:** Using the keypad enter the setpoint between -80°C to 700°C.

**Default:** 100°C – Data Entry is possible when alarm is enabled

**Filter:** If required set filter in the range of 1 to 12 seconds.

**Default:** 0 Seconds – Grayed out when alarm is not enabled

 **Important:** The default Alarm Latching/Non-Latching setting for this alarm is non-latching

## Low Alarm

**Procedure:** Uncheck box to disable the alarms.

**Low Alarm Setpoint:** Using the keypad enter the setpoint between -80°C to 700°C.

**Default:** 5°C


**Filter:** If required set Filter in the range 1 to 12 seconds.

**Default:** 0 Seconds

 **Important:** The default Alarm Latching/Non-Latching setting for this alarm is non-latching

**Failure Alarm:** Uncheck box to disable the alarms


**Default:** ENABLED

 **Important:** The default Alarm Latching/Non-Latching setting for this alarm is latching

### 5.7.2.2 Tab - Sensor 2, 3, 4

Follow steps against Sensor 1 above.

### 5.7.3 Alarm Sources

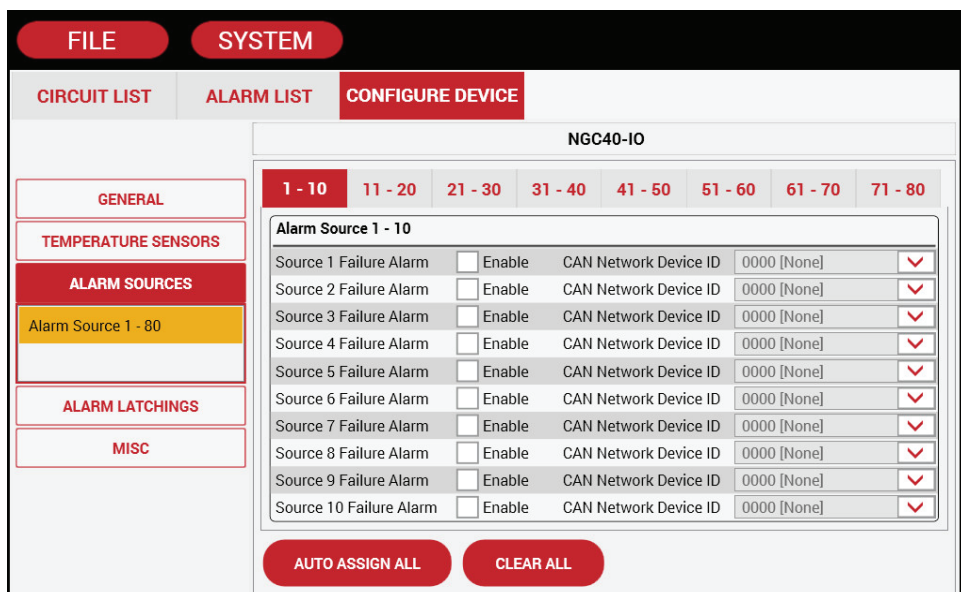

The screenshot shows the 'CONFIGURE DEVICE' window for the 'NGC40-I/O' module. The left sidebar has tabs for 'GENERAL', 'TEMPERATURE SENSORS', 'ALARM SOURCES', 'ALARM LATCHINGS', and 'MISC'. The 'ALARM SOURCES' tab is selected, showing a table for 'Alarm Source 1 - 10'. The table has columns for 'Source', 'Failure Alarm', 'Enable', 'CAN Network Device ID', and a dropdown menu. The 'Enable' column contains checkboxes, and the 'CAN Network Device ID' column contains the value '0000 [None]'. The dropdown menu shows a red checkmark. Below the table are 'AUTO ASSIGN ALL' and 'CLEAR ALL' buttons.

Source	Failure Alarm	Enable	CAN Network Device ID	
Source 1	Failure Alarm	<input type="checkbox"/>	Enable	CAN Network Device ID 0000 [None] ▼
Source 2	Failure Alarm	<input type="checkbox"/>	Enable	CAN Network Device ID 0000 [None] ▼
Source 3	Failure Alarm	<input type="checkbox"/>	Enable	CAN Network Device ID 0000 [None] ▼
Source 4	Failure Alarm	<input type="checkbox"/>	Enable	CAN Network Device ID 0000 [None] ▼
Source 5	Failure Alarm	<input type="checkbox"/>	Enable	CAN Network Device ID 0000 [None] ▼
Source 6	Failure Alarm	<input type="checkbox"/>	Enable	CAN Network Device ID 0000 [None] ▼
Source 7	Failure Alarm	<input type="checkbox"/>	Enable	CAN Network Device ID 0000 [None] ▼
Source 8	Failure Alarm	<input type="checkbox"/>	Enable	CAN Network Device ID 0000 [None] ▼
Source 9	Failure Alarm	<input type="checkbox"/>	Enable	CAN Network Device ID 0000 [None] ▼
Source 10	Failure Alarm	<input type="checkbox"/>	Enable	CAN Network Device ID 0000 [None] ▼

Figure 5.15 Configure Device | Alarm Source window for I/O module

### Alarm Source 1 to 80

**Purpose:** The NGC-40-I/O module is capable of monitoring the alarm points of all the 80 modules connected to a Bridge. Mapping the HTC modules on to the I/O module will result in reproducing the alarms on the alarm contacts of the I/O module.

**Source “x” Failure Alarm:** Check the boxes individually or press Auto Assign All button to map the HT modules. Clear All button will remove the mappings.



5.7.4 Alarm Latchings

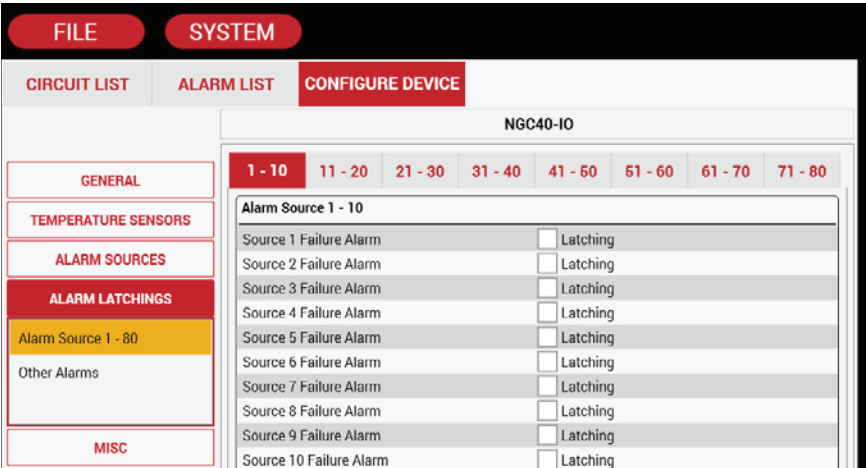


Figure 5.16 Configure Device | Alarm Latching window for I/O module

Alarm Source 1 to 80

**Purpose:** Checking the box will enable the alarms to latch.

**Default:** Disabled

Other Alarms

**Purpose:** Checking the box will enable the alarms to latch.

**Default:** Alarm latching is enabled for sensor 1/2/3/4 failures.

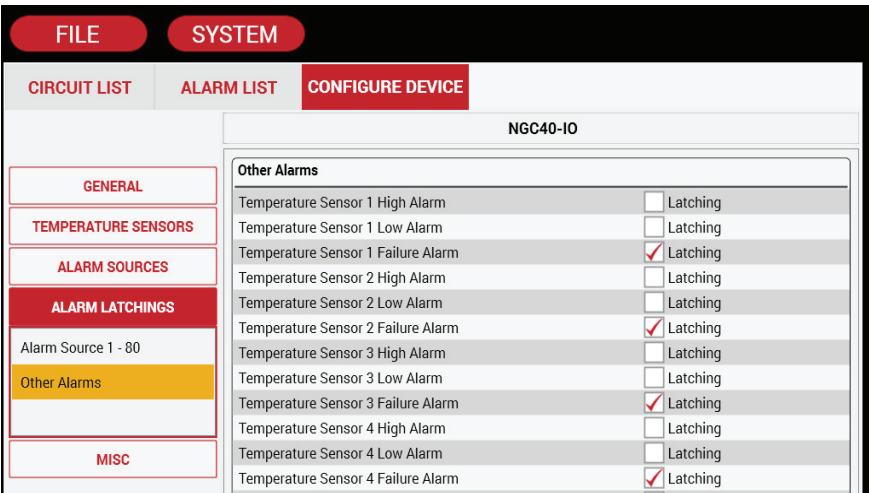


Figure 5.17 Configure Device | Alarm Latching | Other Alarm window for I/O module

5.7.5 Miscellaneous

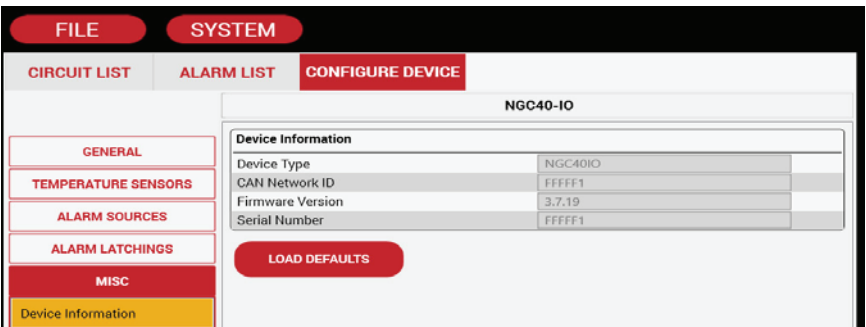


Figure 5.18 Configure Device | Miscellaneous window for I/O module

**Purpose:** Allows the user to review the Device Information current set-up in the NGC-40-I/O. The Device Type, CAN ID and Serial Number are factory configured and cannot be changed. However the Firmware Version will change whenever the same is upgraded using Hardware Manager.

**Load Configuration Defaults:** On hitting the button, all user input data will be erased and the device will be set to factory defaults. An alarm will occur if Device Reset Alarm option is enabled.

## 5.8 Safety Limiter Module NGC-40-SLIM

The NGC-40-SLIM modules use temperature data to control an external contactor providing protection against over-temperature of heating cables. If the measured temperature exceeds the user defined trip setting then the SLIM will open its output relay. If the output is switched OFF the external contactor will isolate the heating cable from the main supply. The unit will remain tripped until it has been manually reset. Resetting the unit will only be possible after the normal operating conditions have been returned to a safe level. The NGC-40-SLIM module has three temperature sensor inputs, one form C alarm output, one normally closed relay output used to control an external contactor and a external switch input use to reset the a tripped SLIM.

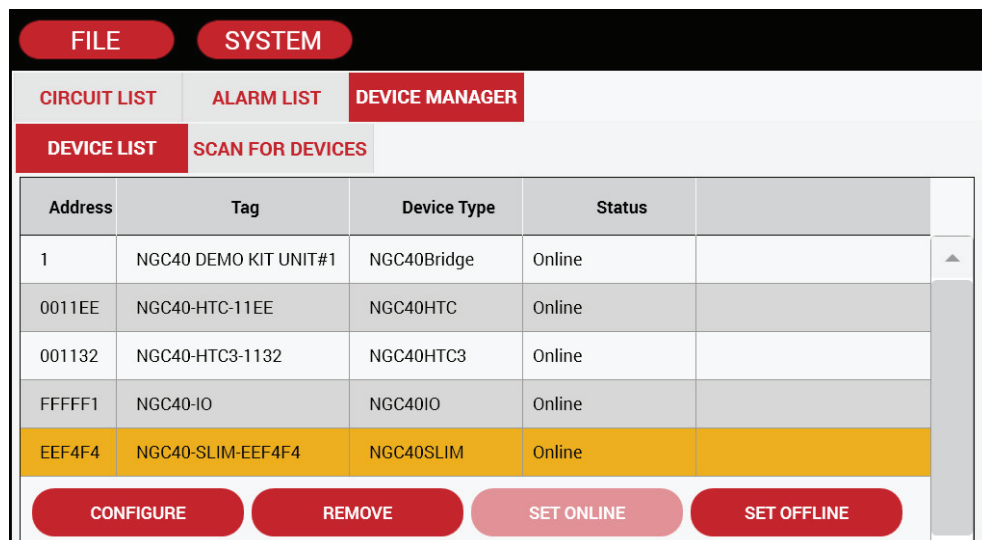


Figure 5.19 Device Manager window

The Touch 1500 program will automatically sense the presence of SLIM(s) and activate the menus. The screen above shows the presence of a Safety Limiter Module in the Device List. To configure the SLIM please click on Config.

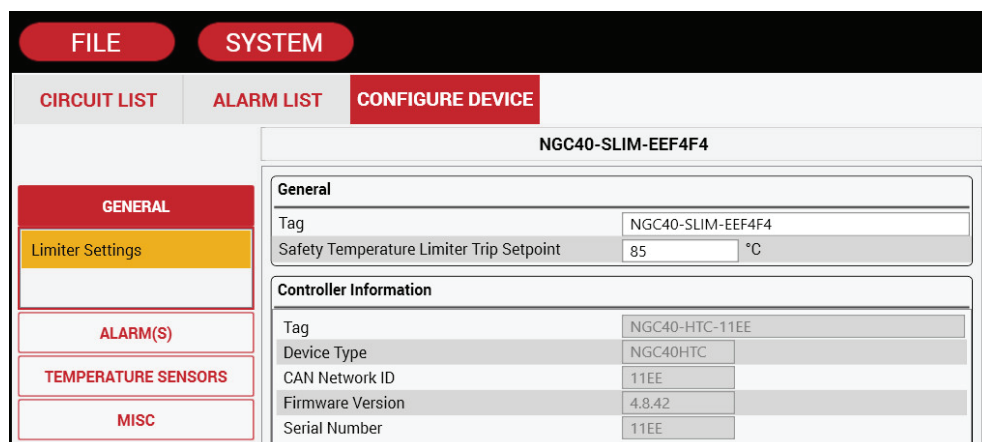


Figure 5.20 Configure Device | Limiter Settings window

### 5.8.1 General – Limiter Settings

#### General – Tag

**Purpose:** A 40-character tag may be assigned to the NGC-40-SLIM to allow it to be easily associated with a pipe, vessel, process, circuit, drawing name, number etc.

**Range:** Alpha-numeric characters.

**Procedure:** Click on the Tag Entry and an alpha numerical keyboard will drop down for data entry.

**Default:** NGC-40-SLIM-(last few characters of the CAN ID)

#### General – Safety Temp Limiter Trip Setpoint

**Purpose:** The lock out temperature (setpoint) of the safety temperature limiter must be set in such a way that maximum T-class temperature cannot be exceeded. The surface temperature of the heat-tracing cables is limited to the temperature applicable in this T class -5 K for temperatures below or equal to 200°C or -10 K for temperatures greater than 200°C.

**Options:** Data entry via the dropdown keypad

**Procedure:** Enter the desired temperature and click Apply. A pop up dialogue box will appear with instructions. Press the Set Config button on the SLIM within 60 seconds to record the new entry.

**Default:** Previous data

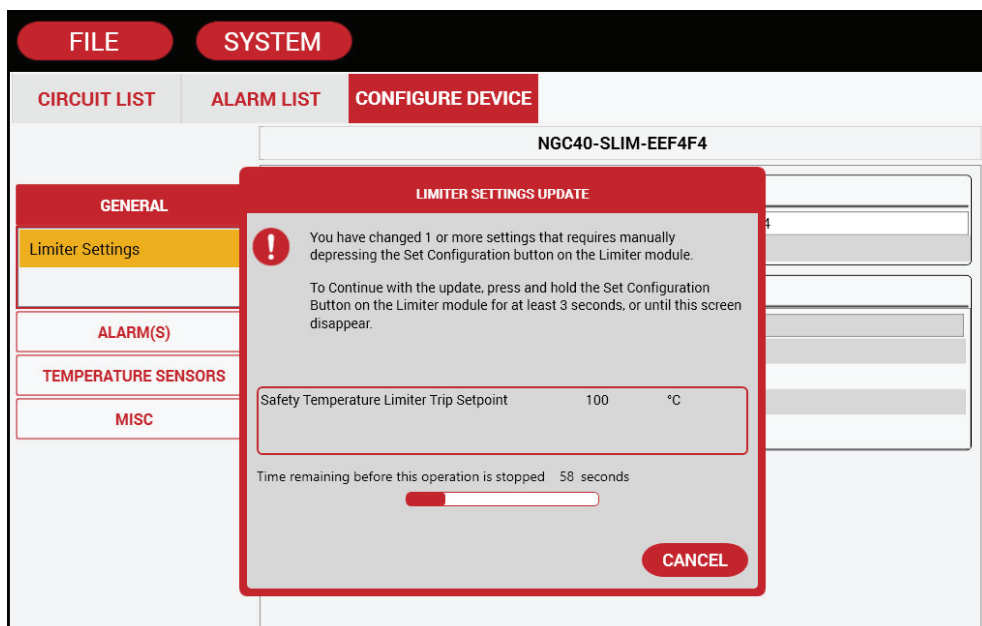


Figure 5.21 Limiter Settings Pop-up Dialogue box

## 5.8.2 Alarms – Alarm Settings

NGC40-SLIM-EEF4F4	
<b>Alarm Output</b>	
Alarm Relay Sense	Normally Closed
Alarm Output Mode	Normal Operation
Alarm Output Toggle Time	60 S
Broadcast Timeout	1 Min
<b>Alarm Settings</b>	
Temperature Sensor 1 Failure Alarm	<input checked="" type="checkbox"/> Enable
Temperature Sensor 2 Failure Alarm	<input checked="" type="checkbox"/> Enable
Temperature Sensor 3 Failure Alarm	<input checked="" type="checkbox"/> Enable
Limiter Reset Alarm	<input type="checkbox"/> Enable
Limiter Tripped Alarm	<input checked="" type="checkbox"/> Enable
HTC Communication Failure Alarm	<input checked="" type="checkbox"/> Enable

Figure 5.22 Configure Device | Alarm Settings window

### 5.8.2.1 Alarm Output

#### Alarm Output – Alarm Output Relay Sense

**Purpose:** To assign the output option for the Relay.

**Options:** Drop down list Normally Closed/Normally Open

**Procedure:** Select the desired option

**Default:** Normally Closed

#### Alarm Output – Alarm Output Mode

**Purpose:** To assign the output mode option for the Relay..

**Options:** Drop down list Normal Operation/Toggle/Flash

**Default:** Normal

#### Alarm Output – Alarm Output Toggle Time

**Procedure:** Data Entry is possible only when Toggle Mode is selected in the previous operation

**Options:** Enter the desired value using the keypad

**Range:** 1 to 240 seconds

#### Alarm Output – Broadcast Timeout

**Procedure:** To fix the broadcast time out

**Options:** Enter the desired value using the keypad

**Range:** 1 to 10 minutes

### 5.8.2.2 Alarm Settings

#### Temperature Sensor 1 Failure Alarm

**Purpose:** Enabling the TS 1 FAILURE alarm will provide an indication of an open or shorted failure of the temperature sensor connected to the RTD1 input.

**Options:** ENABLE/DISABLE

**Procedure:** Check box to disable

**Default:** ENABLED

#### Temperature Sensor 2 & 3 Failure Alarm

Follow procedure outlined for Sensor 1 above

## Limiter Reset Alarm

**Purpose:** The Slim Reset Alarm is used to indicate:

1. Power to the control module has been interrupted and subsequently restored.
2. A transient has caused the control module's microprocessor to restart its program.
3. An internal condition has caused the control module's microprocessor to restart its program.

**Options:** ENABLE/DISABLE

**Procedure:** Check Box to Enable

**Default:** DISABLED

## Alarm Settings – Limiter Tripped Alarm

**Purpose:** Enabling the SLIM Trip alarm will provide an indication of a trip on account of high temperature as per Figure 5.22.

**Options:** ENABLE/DISABLE

**Procedure:** Check Box to Disable

**Default:** ENABLED

## HTC Communication Failure Alarm

**Purpose:** Enabling the Communication Failure Alarm will provide an indication of a Communication loss with the HTC/HTC3 (s) to which the SLIM is associated

**Options:** ENABLE/DISABLE

**Procedure:** Check box to disable

**Default:** ENABLED

## 5.8.3 Alarms – Alarm Latchings

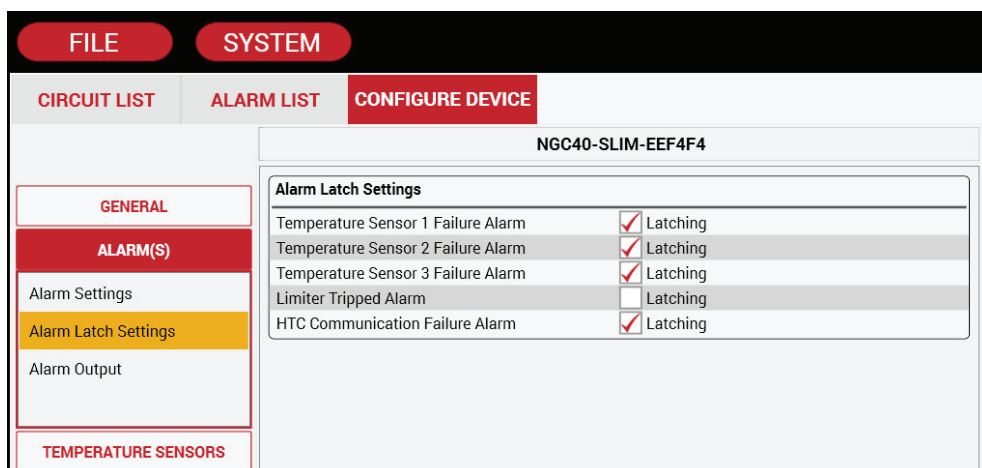


Figure 5.23 Configure Device | Alarm Latch Settings window

### Temp Sensor 1 Failure

**Purpose:** Enabling latching option for Sensor 1 Failure Alarm will result in the alarm being displayed till the Reset button is pressed on the Touch 1500 Screen.

**Options:** ENABLE/DISABLE

**Procedure:** Check box to disable

**Default:** ENABLED

### Temp Sensor 2 Failure

Refer to Procedure detailed above for Sensor 1

### Temp Sensor 3 Failure

Refer to Procedure detailed above for Sensor 1

## Controller Reset Alarm

**Purpose:** Enabling latching option for Control Reset Alarm will result in the alarm being displayed till the Reset button is pressed on the Touch 1500 Screen.

**Options:** ENABLE/DISABLE

**Procedure:** Check box to disable

**Default:** ENABLED

## Safety Temperature Limiter Trip Alarm

**Purpose:** Disabling Latching option for Control Reset Alarm will result in the alarm disappearing when the Alarm condition is nonexistent, without the need of the Reset button being pressed on the Touch 1500 Screen.

**Options:** ENABLE/DISABLE

**Procedure:** Check box to enable

**Default:** DISABLED

## HTC Communication Failure Alarm

**Purpose:** Disabling Latching option will result in the Alarm disappearing when the Alarm condition is nonexistent, without the need of the Reset button being pressed on the Touch 1500 Screen.

**Options:** ENABLE/DISABLE

**Procedure:** Check box to enable

**Default:** DISABLED

## 5.8.4 Alarms – Alarm Output

Name	Alarm	Setpoint
Contactor Cycle Count Alarm	<input checked="" type="checkbox"/> Enable	100000 Cycle

Figure 5.24 Configure Device | Alarm Output window

## Contactor Alarm Settings

### Contactor Cycle Count Alarm

**Purpose:** Generates an alarm if the number of off-to-on transitions of a contactor reaches or exceeds the Contactor Count Alarm setting. This serves as a method to perform preventative maintenance on the contactor before a failure is likely to occur.

**Procedure:** Adjust the Contactor Alarm setting to the desired value. Note that the Contactor Alarm must be enabled in order to adjust the Contactor Alarm setting. Uncheck box to disable the alarms. When enabled, enter the setpoint between 0-999999 cycles

**Default:** ENABLED and set at 100000 Cycles

## 5.8.5 Temperature Sensors

NGC40-SLIM-EEF4F4	
<b>Temperature Sensor Settings</b>	
Temperature Sensor 1 Tag	NGC40-SLIM-RTD1-EEF4F4
Temperature Sensor 2 Tag	NGC40-SLIM-RTD2-EEF4F4
Temperature Sensor 3 Tag	NGC40-SLIM-RTD3-EEF4F4
<b>Temperature Usage Settings</b>	
Temperature Sensor 1 Setup	<input checked="" type="checkbox"/> Installed
Temperature Sensor 2 Setup	<input type="checkbox"/> Installed
Temperature Sensor 3 Setup	<input type="checkbox"/> Installed

Figure 5.25 Configure Device | Temperature Sensor 1- 3 Window

### Temperature Sensors – Temperature Sensors 1 to 3

#### 5.8.5.1 Temperature Sensor Settings – Temperature Sensor 1 Tag

**Purpose:** A 40 character tag may be assigned to the local RTD connected directly to the SLIM to allow it to be easily associated with a pipe, vessel, process, circuit, drawing name or number

**Range:** Alpha-numeric characters.

**Procedure:** Click on the Tag Entry and an alpha numerical keyboard will drop down for data entry.

**Default:** NGC-40-SLIM-RTD1-(last two characters of the CAN ID)

#### Temperature Sensor Settings – Temperature Sensor 2 Tag

Follow the same procedure defined above for Sensor 1

#### Temperature Sensor Settings – Temperature Sensor 3 Tag

Follow the same procedure defined above for Sensor 1

#### 5.8.5.2 Temperature Usage Settings – Temperature Sensor 1 Setup

Temperature Sensor 1 is always enabled. This Sensor cannot be disabled.

#### Temperature Usage Settings – Temperature Sensor 2 Setup

**Purpose:** To Install the Connected RTDs into SLIM.

**Options:** Installed/Not Installed

**Procedure:** Check box to Install. After selecting / deselecting sensor click Apply. A pop up box will appear with instructions. Press the Set Config button on the SLIM within 60 seconds to record the new entry.

**Default:** Box unchecked

#### Temperature Usage Settings – Temperature Sensor 3 Setup

**Purpose:** To Install the Connected RTDs into SLIM.

**Options:** Installed / Not Installed

**Procedure:** Check box to Install. After selecting / deselecting sensor click Apply. A pop up box will appear with instructions. Press the Set Config button on the SLIM within 60 seconds to record the new entry.

**Default:** Box unchecked

## 5.8.6 Miscellaneous – Device Information

**Purpose:** Allows the user to review the Device Information current set-up in the NGC-40-SLIM. The Device Type, CAN ID and Serial Number are factory configured and cannot be changed. However the firmware version will change whenever the same is upgraded using Hardware Manager

Device Information	
Device Type	NGC40SLIM
CAN Network ID	EEF4F4
Firmware	3.8.14
Serial Number	EEF4F4

Figure 5.26 Configure Device | Device Information window


## Load Configuration Defaults

**Purpose:** Loads the default settings that are stored in the NGC-40-SLIM.

On hitting the button, all user input data will be erased and the device will be set to factory defaults. An alarm will occur if Device Reset Alarm option is enabled.

## 5.8.7 Assign a NGC-40-SLIM to HTC/HTC3 Module

**Purpose:** Allows the user to assign a NGC-40-SLIM to a HTC or HTC3 module. The assignment is performed at the HTC/HTC3 module configuration window, under Advance Settings (Safety Temperature Limiter).

 **Important:** A NGC-40-SLIM must be listed in the device manager in order for it to be assigned to a HTC/HTC3 module.

General	
Tag	NGC40-HTC-11EE
Heater Status	Off

Control Temperature			
Name	Alarm	Setpoint	Filter
Control Setpoint		15 °C	
High Alarm	<input type="checkbox"/> Enable	200 °C	0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	5 °C	0 S
High Limit Cutout Setpoint		700 °C	
Control Temperature Usage		Use Lowest Temperature	✓
TS Fail Mode		Fail Off	✓
TS Fail Mode Percentage		50 %	

Figure 5.27 Configure Device for HTC-1096 (Advance Settings window)



At the Device Manager window select the HTC/HTC3 module that requires a NGC-40-SLIM assigned.

The screenshot shows the 'Configure Device' window for the NGC40-HTC-11EE module. The left sidebar has a 'LIMITER' section with a 'Safety Temperature Limiter' option highlighted. The main panel is titled 'NGC40-HTC-11EE' and contains the following sections:

- Safety Temperature Limiter Assignment:** A dropdown menu for 'Safety Temperature Limiter CAN ID' is set to 'EEF4F4 [NGC40-SLIM-0001]'.
- Safety Temperature Limiter Settings:** A table with the following data:

Tag	EEF4F4 [NGC40-SLIM-0001]
Firmware Version	3.8.14
Serial Number	EEF4F4
Controller CANID	11EE
Limiter Trip Setpoint	85 °C
- Safety Temperature Limiter Alarms:** A table with the following data:

Limiter Tripped Alarm	<input checked="" type="checkbox"/> Enable
Limiter Communication Failure Alarm	<input checked="" type="checkbox"/> Enable

At the bottom of the main panel are buttons for 'MONITOR', 'APPLY', 'CANCEL', 'BACK', and 'NEXT'. The status bar at the bottom left shows 'V3.0.0 Ready' and the bottom right shows a clock icon and 'Thursday, December 3, 2020 9:39:22 AM'.

Figure 5.28 Configure Device | Safety Temperature Limiter window

- Select Safety Temperature Limiter from the menu
- Select Safety Temperature Limiter CAN ID from the drop down box

A list of available NGC-40-SLIM will be listed.

- Select the appropriate NGC-40-SLIM
- Select Apply

### 5.8.8 Safety Temperature Limiter Assignment Confirmation

Once a NGC-40-SLIM has been assigned to a HTC/HTC3 module, you can go to the NGC-40-SLIM and confirm the HTC/HTC3 assignment.

The screenshot shows the 'Configure Device' window for the NGC40-SLIM-EEF4F4 module. The left sidebar has a 'LIMITER' section with a 'Limiter Settings' option highlighted. The main panel is titled 'NGC40-SLIM-EEF4F4' and contains the following sections:

- General:** A table with the following data:

Tag	NGC40-SLIM-EEF4F4
Safety Temperature Limiter Trip Setpoint	85 °C
- Controller Information:** A table with the following data:

Tag	NGC40-HTC-11EE
Device Type	NGC40HTC
CAN Network ID	11EE
Firmware Version	4.8.42
Serial Number	11EE

Figure 5.29 Configure Device for NGC-40-SLIM

## SECTION 6 – CONFIGURATION OF THE ELEXANT 3500i ELECTRONIC THERMOSTAT

### 6.1 Adding AN Elexant 3500i to Raychem Touch 1500

The Elexant 3500i Electronic Thermostat is available in 5 variants, the Standard, Alarm, Communicating, Current Sensing, and Ground Fault Detecting variants. Of these five variants, the Communicating, Current Sensing, and Ground Fault Detecting variants have the ability to communicate via RS-485 terminals to a Touch 1500. The Standard and Alarm variants of the Elexant 3500i do not have the ability to communicate to a Touch 1500. Before using the Raychem Touch 1500 software to configure and maintain the Elexant 3500i system, the same must be added manually to Raychem Touch 1500. The communication ports must first be set in order for the Touch 1500 computer to talk to the Elexant 3500i Electronic Thermostat. If an NGC-40-BRIDGE or other device already resides on the system, please ensure that the Elexant 3500i Electronic Thermostat has a unique Modbus address which is different than the existing address of the connected BRIDGE modules or other devices.

#### 6.1.1 Communication Ports

The Touch 1500 can be connected to the Elexant 3500i only via the RS-485 port.

Although the Raychem Elexant Connect application allows the user to change the following settings, in general, the default settings should be used. The user is allowed to change these settings in those cases where an external device is added which has already blocked the Modbus address(s) or ports.

#### 6.1.2 Communication via RS-485 ports

The Field Port Communication must first be configured in order to connect the Elexant 3500i via RS-485. It is important to note that the RS-485 port is internally configured to COM 3 of the TOUCH Hardware. Retain the default settings.

Go to System | Communications | Field Port Window.

#### 6.1.3 Communication Port Settings

For details on Com port settings please refer Section 4.1.2 to Section 4.4.

#### 6.1.4 Scanning through the RS-485 port

Go to System | Device Manager

For the very first time, the Device List screen will be blank. See below:

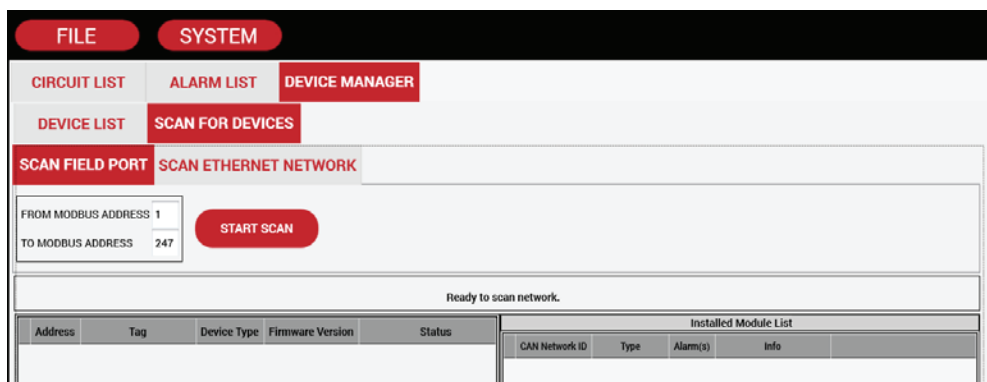


Figure 6.1 Scan for Device | Scan Field Port window

#### Modbus Address

Press Scan for Device tab. A window opens up giving a range of the Elexant 3500i Modbus address to scan.

**Purpose:** The Modbus Address defines the communications address to be used by the Elexant 3500i Electronic Thermostat when using the Modbus protocol to communicate with a Modbus compatible device **Range:** 1 to 247

**Procedure:** Click on the 'From Modbus address' to bring up on-screen keypad and change the address to the lowest Modbus address on the Elexant 3500i network. Select 'To Modbus Address' and enter the highest address +1 on the Elexant 3500i network. This is done to shorten the scan time.

**Default:** From address = 1, to address = 247

Start Scan

Press the Start Scan button.

The Touch 1500 program will scan the network for all Elexant 3500i Electronic Thermostat(s) having Modbus addresses in the range specified.

Click OK to accept the same.

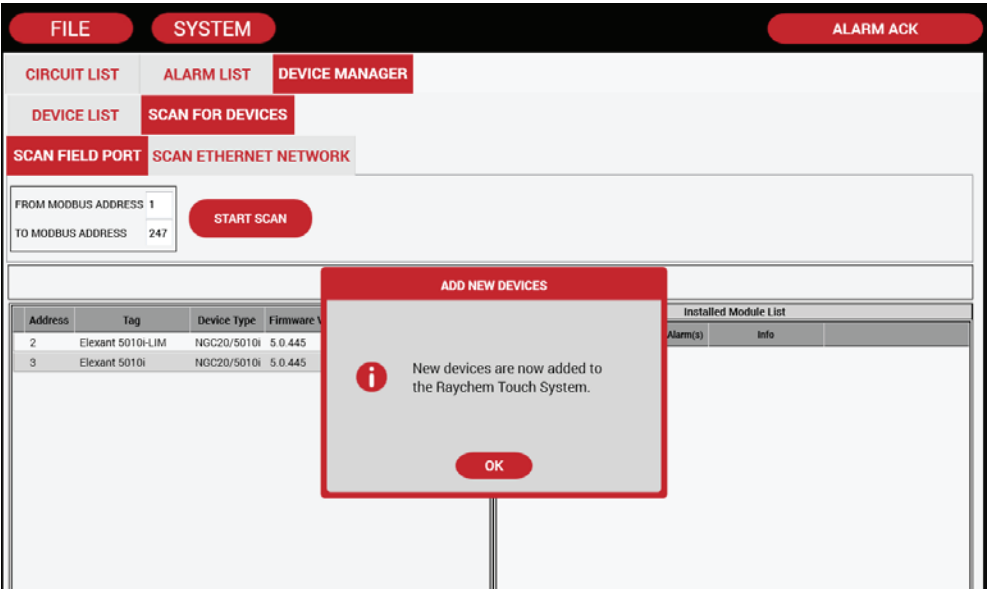


Figure 6.2 Scan for Devices | Scan Field Port window after scan

6.1.5 Configuration of System Preferences

For setting System Preferences please refer Section 4.1.7 to 4.1.10.

6.2 Configuration of Elexant 3500i Electronic Thermostat

This Section provides complete programming instructions for the Elexant 3500i Electronic Thermostat for single phase heaters.

6.2.1 Identifying and Selecting the Elexant 3500i Electronic Thermostat

Go to System | Device Manager

Click on the desired Elexant 3500i Electronic Thermostat to bring up the option buttons.

Click on the Config button.

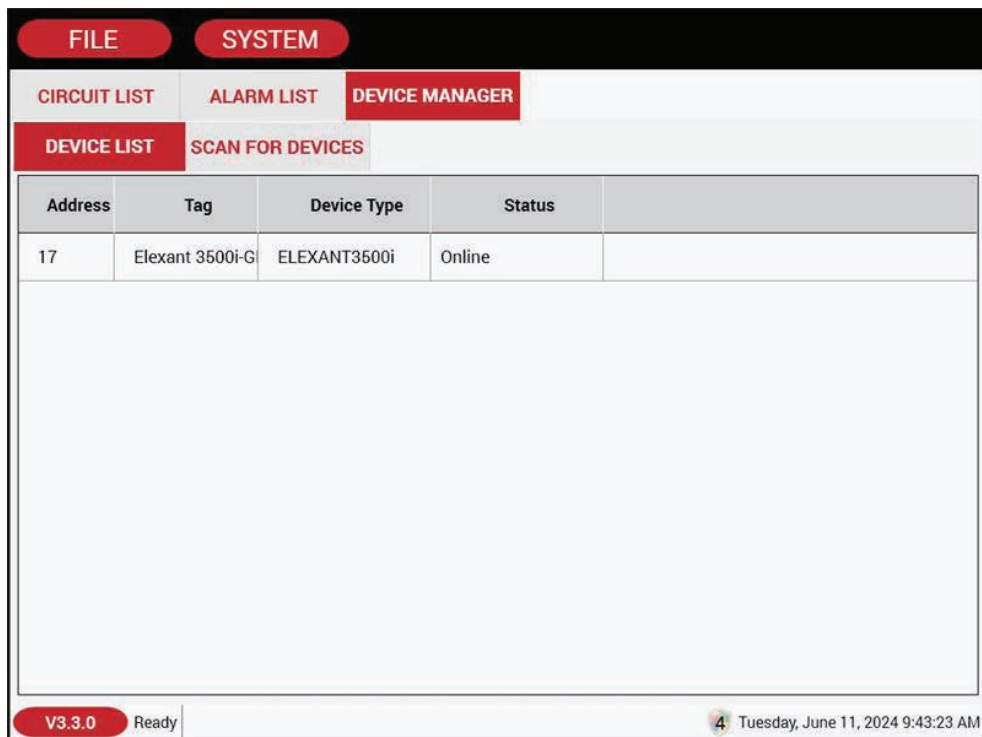


Figure 6.3 System | Device Manager window

## 6.2.2 Basic Settings

The Basic Setting tabs allow the user to review and change only those inputs which are necessary to set up the controller

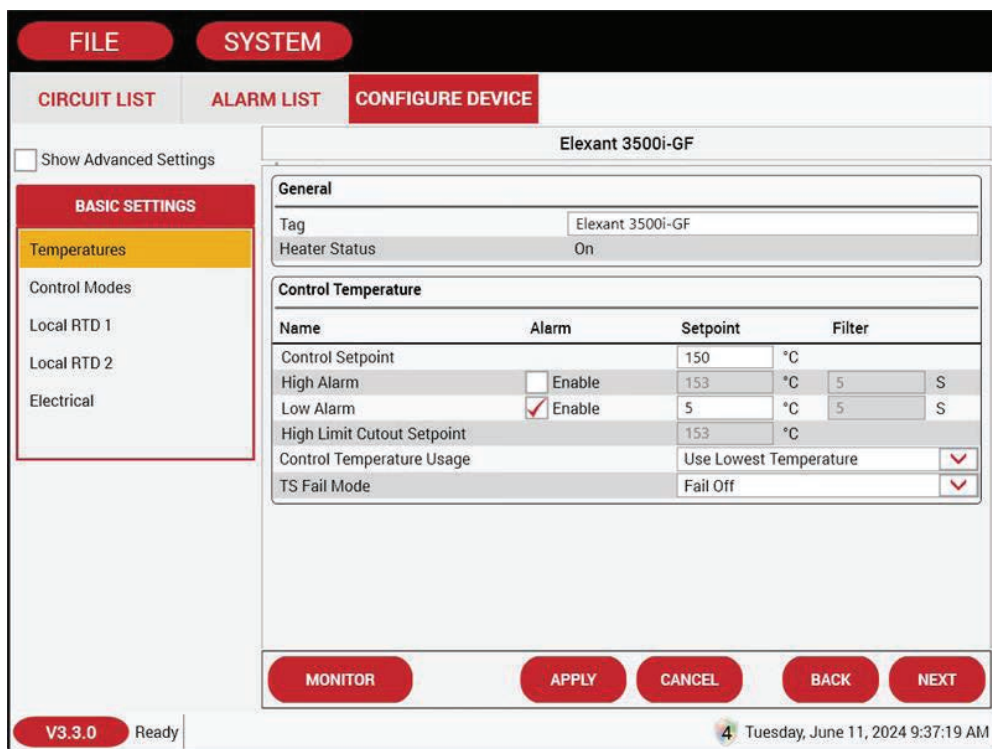


Figure 6.4 Configure Device | Temperature window

6.2.2.1 Basic Settings - Temperature

For Basic Temperature Settings on Elexant 3500i Electronic Thermostats please refer to Section 4.3.1.

6.2.2.2 Control Modes

Allows to user to select various Control Modes

For Control Mode Settings of Elexant 3500i Electronic Thermostats please refer Section 4.3.1.2 (Omit Settings against “Output Switch Type”)

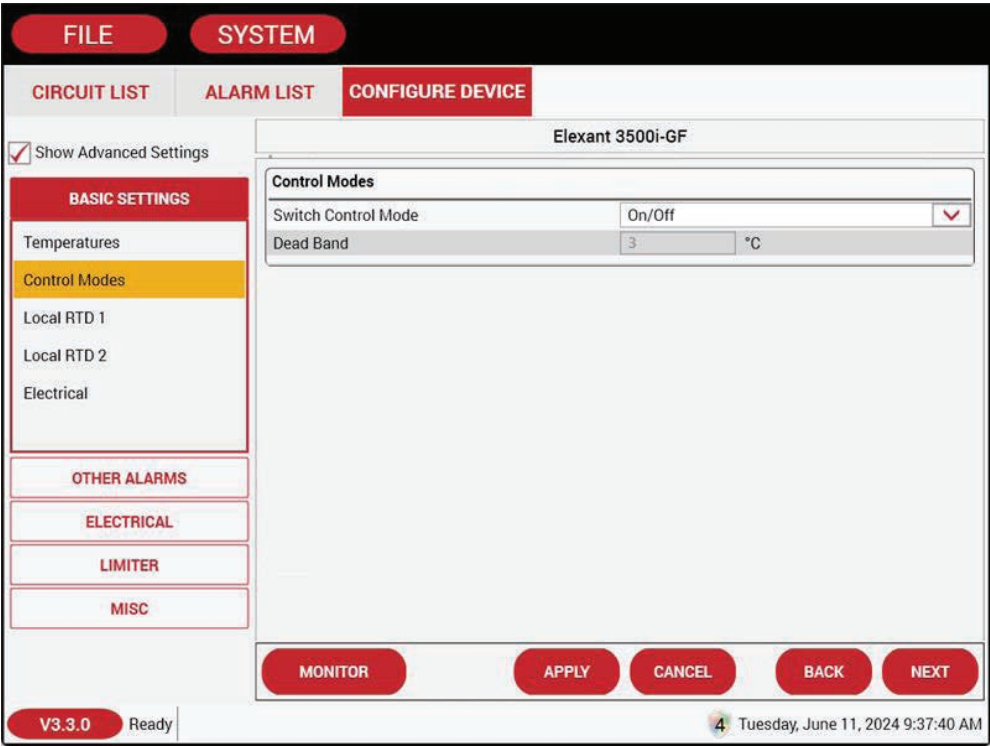


Figure 6.5 Configure Device | Control mode window

6.2.2.3 Set Local RTD 1 & RTD 2

Allows to user to select RTDs and assign functions. Please note that editing local RTD2 is only possible if an RTD is wired directly on the controller

FILESYSTEM

CIRCUIT LISTALARM LISTCONFIGURE DEVICE

Show Advanced Settings

BASIC SETTINGS

Temperatures

Control Modes

Local RTD 1

Local RTD 2

Electrical

OTHER ALARMS

ELECTRICAL

LIMITER

MISC

Elexant 3500i-GF

Local RTD 1

RTD Type3 wire 100 Ohm Platinum

RTD TagElexant 3500i-TS1-FFFF

UsageControl Only

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	150 °C	5 S
Low Alarm	<input type="checkbox"/> Enable	5 °C	5 S

MONITOR

APPLY

CANCEL

BACK

NEXT

V3.3.0Ready4 Tuesday, June 11, 2024 9:38:06 AM

Figure 6.6 Configure Device | Local RTD 1 window

For settings on Local RTD 1 & 2 of Elexant 3500i Electronic Thermostats please refer Section 4.3.1.4.

6.2.2.4 Set Electrical Parameters

For Electrical settings of Elexant 3500i Electronic Thermostats please refer Section 4.3.1.5, 4.3.1.6, & 4.3.1.7.

6.2.3 Advanced Settings

When the Show Advance Settings box is checked, additional tabs are enabled.

### 6.2.3.1 Other Alarms

FILE SYSTEM

CIRCUIT LIST ALARM LIST CONFIGURE DEVICE

✓ Show Advanced Settings

BASIC SETTINGS

OTHER ALARMS

Other Alarms

Alarm Output

Alarm Latch Settings

ELECTRICAL

LIMITER

MISC

Elexant 3500i-GF

Failure and Trip Alarms

Device Reset Alarm	<input type="checkbox"/>	Enable
High Limit Cutout Alarm	<input type="checkbox"/>	Enable
Temperature Sensor 1 Failure Alarm	<input type="checkbox"/>	Enable
Temperature Sensor 2 Failure Alarm	<input type="checkbox"/>	Enable

Contactor and Heater Time Alarm

Name	Alarm	Setpoint
Contactor Cycle Count Alarm	<input checked="" type="checkbox"/> Enable	250000 Cycle
Heater Time Alarm	<input checked="" type="checkbox"/> Enable	100000 Hour(s)

MONITOR APPLY CANCEL BACK NEXT

V3.3.0 Ready 4 Tuesday, June 11, 2024 9:38:20 AM

Figure 6.7 Configure Device | Other Alarm window

#### Failure and Trip Alarms

**Purpose:** To set advanced Alarm options.

##### Devise Reset Alarm

**Purpose:** The Device Reset Alarm is used to indicate:

1. Power to the Module has been interrupted and subsequently restored.
2. A transient has caused the Module's program to restart.
3. An internal condition has caused the Module's program to restart.

**Procedure:** Check box to enable.


**Default:** DISABLED

Load Shed Source Failure Alarm

**Purpose:** To indicate failure of Load Shed Sources

**Procedure:** Uncheck box to disable the alarms.

**Default:** ENABLED

 **Important:** The default Alarm Latching/Non-Latching setting for this alarm is LATCHING.

Ground Fault Current Transformer Failure Alarm

Option unavailable.


**Default:** ENABLED

##### Switch Failure Alarm

**Purpose:** The purpose of the Switch Failure Alarm is to indicate that an output switch failure has occurred. The control module HTC/ HTC3 determines that if the output switch is turned off and there is load current present, then the output switch has failed closed and the alarm is latched on.

**Procedure:** Uncheck Box to Disable the Alarms.

**Default:** Enabled

 **Important:** The Switch Failure alarm should always be enabled. A high temperature condition, as a result of a failed heating circuit, can only be caused if the output switch fails closed. When an output switch fails closed, the control module cannot turn the power to the heating circuit off, therefore no protection features are available (ground fault trip, power limiting, etc)

### High Limit Cutout Alarm

**Purpose:** To control the Alarm status in the event of a High Current Cut Out

**Procedure:** Uncheck box to disable the alarms

**Default:** ENABLED

 **Important:** The default Alarm Latching/Non-Latching setting for this alarm is latching.

## 6.2.4 Contactor and Heater Time Alarms

### Contactor Cycle Count Alarm

**Purpose:** Generates an alarm if the number of off-to-on transitions of a contactor reaches or exceeds the Contactor Count Alarm setting. This serves as a method to perform preventative maintenance on the contactor before a failure is likely to occur.

**Procedure:** Adjust the Contactor Alarm setting to the desired value. Note that the Contactor Cycle Count Alarm must be enabled in order to adjust the Contactor Alarm setting. Uncheck box to disable the Alarms. When enabled, enter the setpoint between 0-999999 cycles

**Default:** ENABLED and set at 100000 cycles

### Heater Time Alarm

**Purpose:** Generates an alarm if the Heater ON time reaches or exceeds the count setting. This serves as a method to perform preventative maintenance on the Heaters before a failure is likely to occur.

**Procedure:** Adjust the Contactor Alarm setting to the desired value. Note that the Heater Time Alarm must be enabled in order to adjust the Heater Time Alarm setting. Uncheck box to disable the alarms. When enabled, enter the setpoint between 0-999999 cycles

**Default:** ENABLED and set at 100000 Hrs

Alarm Output Mode

**Purpose:** To assign the output mode option for the Relay.

**Options:** Drop down list Normal Operation/Toggle/Flash

**Default:** Normal

Alarm Output – Alarm Output Toggle Time

**Procedure:** Data Entry is possible only when Toggle Mode is selected in the previous operation

**Options:** Enter the desired value using the keypad

**Range:** 1 to 240 seconds

### Alarm Latch Settings

**Purpose:** This screen allows for the selection of automatic clearing (non-latching) of alarms when an alarm condition no longer exists or permanent alarming (latching) of such a condition until the alarm is manually reset.



FILESYSTEM

CIRCUIT LIST

ALARM LIST

CONFIGURE DEVICE

☒ Show Advanced Settings

BASIC SETTINGS

OTHER ALARMS

Other Alarms

Alarm Output

Alarm Latch Settings

ELECTRICAL

LIMITER

MISC

Elexant 3500i-GF

TEMPERATURE ALARMS

ELECTRICAL ALARMS

Control Temperature Failure Alarm	<input type="checkbox"/> Latching
Control Temperature High Alarm	<input type="checkbox"/> Latching
Control Temperature Low Alarm	<input type="checkbox"/> Latching
Temperature Sensor 1 Failure Alarm	<input type="checkbox"/> Latching
Temperature Sensor 1 High Alarm	<input type="checkbox"/> Latching
Temperature Sensor 1 Low Alarm	<input type="checkbox"/> Latching
Temperature Sensor 2 Failure Alarm	<input type="checkbox"/> Latching
Temperature Sensor 2 High Alarm	<input type="checkbox"/> Latching
Temperature Sensor 2 Low Alarm	<input type="checkbox"/> Latching

MONITOR

APPLY

CANCEL


BACK

NEXT

V3.3.0 Ready

4 Tuesday, June 11, 2024 9:39:14 AM

Figure 6.8 Configure Device | Alarm Latch Settings window

 **Important:** If the application is subject to periodic situations where cold or hot product is part of the process, it may be appropriate to configure the Elexant 3500i for non-latching temperature alarms to avoid nuisance alarms. If it is important to be aware of any temperature alarm conditions that may have existed in a pipe, then the control module should be configured for latching temperature alarms

#### Tab – Temperature Alarms

Check/Uncheck boxes to enable/disable latching. When enabled, the alarm will remain until the Reset button is pressed on the Touch 1500 Screen.

**Default:** Latching is enabled for all temperature alarms

FILESYSTEM

CIRCUIT LISTALARM LISTCONFIGURE DEVICE

Show Advanced Settings

BASIC SETTINGS

OTHER ALARMS

Other Alarms

Alarm Output

Alarm Latch Settings

ELECTRICAL

LIMITER

MISC

TEMPERATURE ALARMS

ELECTRICAL ALARMS

Control Temperature Failure Alarm	<input type="checkbox"/>	Latching
Control Temperature High Alarm	<input type="checkbox"/>	Latching
Control Temperature Low Alarm	<input type="checkbox"/>	Latching
Temperature Sensor 1 Failure Alarm	<input type="checkbox"/>	Latching
Temperature Sensor 1 High Alarm	<input type="checkbox"/>	Latching
Temperature Sensor 1 Low Alarm	<input type="checkbox"/>	Latching
Temperature Sensor 2 Failure Alarm	<input type="checkbox"/>	Latching
Temperature Sensor 2 High Alarm	<input type="checkbox"/>	Latching
Temperature Sensor 2 Low Alarm	<input type="checkbox"/>	Latching

MONITOR

APPLY

CANCEL

BACK

NEXT

V3.3.0Ready

4 Tuesday, June 11, 2024 9:39:14 AM

Figure 6.9 Alarm Latching Settings | Temperature Alarm window

## Tab – Electrical Alarms

**Default:** Latching is ENABLED for all Electrical Alarms

FILESYSTEM

CIRCUIT LISTALARM LISTCONFIGURE DEVICE

Show Advanced Settings

BASIC SETTINGS

OTHER ALARMS

Other Alarms

Alarm Output

Alarm Latch Settings

ELECTRICAL

LIMITER

MISC

TEMPERATURE ALARMS

ELECTRICAL ALARMS

Low Line Current Alarm	<input type="checkbox"/>	Latching
High Ground Fault Current Alarm	<input checked="" type="checkbox"/>	Latching

MONITOR

APPLY

CANCEL

BACK

NEXT

V3.3.0Ready

4 Tuesday, June 11, 2024 1:43:50 PM

Figure 6.10 Alarm Latch Settings | Electrical Alarm window

84 | chemex.com

RAYCHEM-IM-H58682-NGC40Touch1500-EN-2504

### 6.2.4.1 Electrical

FILE SYSTEM

CIRCUIT LIST ALARM LIST CONFIGURE DEVICE

☒ Show Advanced Settings

BASIC SETTINGS

OTHER ALARMS

ELECTRICAL

Currents

LIMITER

MISC

Elextant 3500i-GF

Line Current Alarms

Name	Alarm	Setpoint	Filter
Low Alarm	<input checked="" type="checkbox"/> Enable	0.1	A 2 S

Ground Fault Alarms

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	30	mA 0 S
Ground Fault Trip	<input checked="" type="checkbox"/> Enable	30	mA

MONITOR APPLY CANCEL BACK NEXT

V3.3.0 Ready Tuesday, June 11, 2024 9:39:36 AM

Figure 6.12 Configure Device | Currents window

#### Currents

For Electrical settings of Elextant 3500i Electronic Thermostat please refer Section 5.3.

#### High Alarm Filter

**Purpose:** The Voltage High Alarm Filter will prevent alarms from being indicated until a high voltage condition has existed for the duration of the Alarm Filter time.

**Procedure:** Use the keypad to enter the desired time in seconds

**Range:** 0 to 12 Seconds

**Default:** 0 Second

**Important:** The default alarm latching/non-latching setting for this alarm is latching

#### Low Alarm – Alarm

**Purpose:** To Alarm when the measured voltage is less than the specified value.

**Procedure:** Check box to enable the alarms.

**Options:** Enable/Disable

**Default:** Disabled

#### Low Alarm – Setpoint

**Procedure:** When alarm is enabled, enter the setpoint using the onscreen keypad

**Range:** 50 to 305 V

**Default:** Grayed out; when enabled, set at 90 V.

#### Low Alarm Filter

**Purpose:** The Voltage Low Alarm Filter will prevent alarms from being indicated until a low voltage condition has existed for the duration of the Alarm Filter time.

**Procedure:** Use the keypad to enter the desired time in seconds

**Range:** 0 to 12 Seconds

**Default:** 0 Second

**Important:** The default alarm latching/non-latching setting for this alarm is latching

### 6.2.4.2 Temperature Limiter

The Communicating, Current Sensing, and Ground Fault Detecting variants of the Elexant 3500i Electronic Thermostat can be configured as a Temperature Limiter by using temperature data to TRIP the HT circuit and thereby providing protection against overheating of heating cables. If the measured temperature exceeds the user defined trip setting then the Limiter TRIP circuit will open the output relay. The unit will remain tripped until it is been reset. Resetting the unit will only be possible after the normal operating conditions have been returned to a safe level.

This section explains configuring of the Limiter circuit equipped in the Communicating, Current Sensing, or Ground Fault Detecting Elexant 3500i.

The screenshot shows a software interface for configuring an Elexant 3500i-FFFF device. At the top, there are tabs for 'FILE' and 'SYSTEM'. Below these are three sub-tabs: 'CIRCUIT LIST', 'ALARM LIST', and 'CONFIGURE DEVICE', with 'CONFIGURE DEVICE' being the active tab. On the left side, there is a sidebar with a 'Show Advanced Settings' checkbox (checked) and a list of categories: 'OTHER ALARMS', 'LIMITER' (highlighted in red), 'Temperature Limiter' (highlighted in yellow), and 'MISC'. The main area displays the 'Temperature Limiter Information' section for the device 'Elexant 3500i-FFFF'. It includes fields for 'Tag' (Elexant 3500i-FFFF) and 'Limiter Linked Device Tag'. Below this is the 'Temperature Limiter Alarms' section, which has a 'Temperature Sensor Failure Alarm' with 'Enable' and 'Latching' checkboxes both checked. The 'Temperature Limiter Cutout Temperature Setpoint' section shows a 'Cut-Out Temperature Setpoint' of 100 °C. At the bottom of the main area are five buttons: 'MONITOR', 'APPLY', 'CANCEL', 'BACK', and 'NEXT'. The bottom status bar shows 'V3.3.0 Ready' on the left and a timestamp '4 Tuesday, June 11, 2024 9:49:13 AM' on the right.

Figure 6.14 Configure Device | Temperature Limiter window

Temperature Limiter Information & Alarm settings are Read Only Parameters.

#### Temperature Limiter Trip Setpoint

**Purpose:** The lock out temperature (setpoint) of the safety temperature limiter must be set in such a way that maximum T-class temperature cannot be exceeded. The surface temperature of the heat-tracing cables is limited to the temperature applicable in this T class -5 K for temperatures below or equal to 200°C or -10 K for temperatures greater than 200°C.

**Options:** Data Entry via the dropdown keypad

**FILE** **SYSTEM**

**CIRCUIT LIST** **ALARM LIST** **CONFIGURE DEVICE**

☒ Show Advanced Settings

**OTHER ALARMS**

**LIMITER**

Temperature Limiter

**MISC**

**Elexant 3500i-FFFF**

**Temperature Limiter Information**

! The function you are about to perform requires a validation check. Please enter the Validation number as shown below into the Verify Validation Number field. Use the OK button to continue.

Validation Number: 686

Verify Validation Number:

**OK** **CANCEL**

**MONITOR** **APPLY** **CANCEL** **BACK** **NEXT**

V3.3.0 Ready 4 Tuesday, June 11, 2024 9:50:03 AM

#### 6.2.4.3 Miscellaneous – Auto Cycle

**Purpose:** The auto-cycle function momentarily (approximately 10 seconds) applies power to the heating circuit at the selected interval. It is used to test the integrity of the heating circuit. Alarms present at the time of auto-cycle then become latched and remain active after the completion of the auto-cycle function. Auto-cycling effectively eliminates the need for preventive maintenance by automatically verifying the integrity of the heating circuit. Auto-Cycle Interval is the number of hours/minutes between successive heating circuit integrity tests depending on the Auto-Cycle Units specified

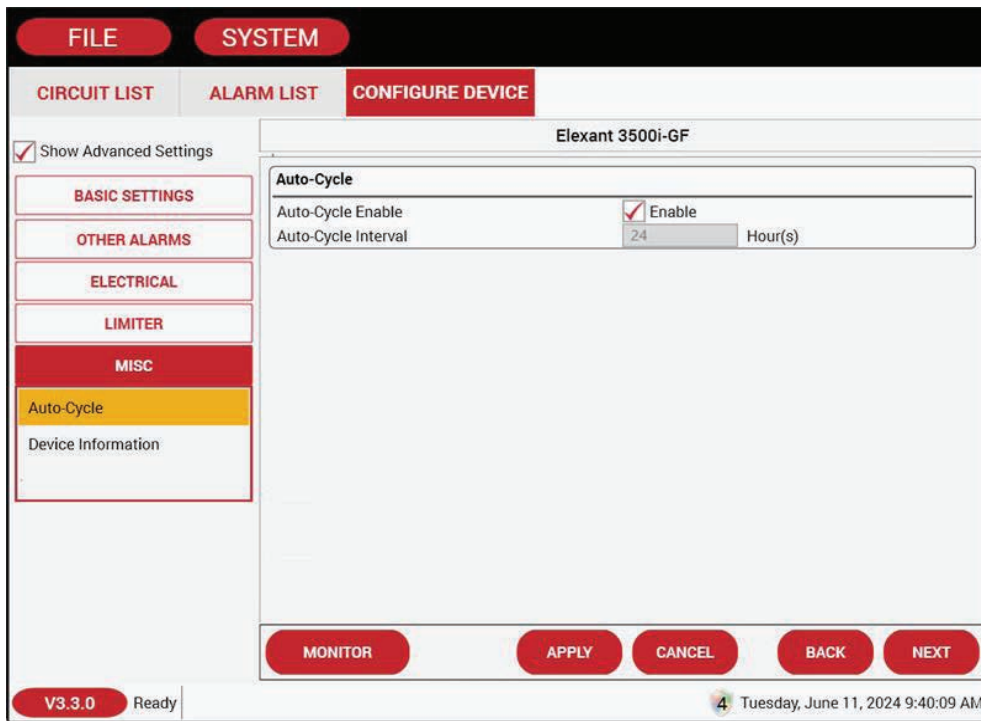


Figure 6.16 Configure Device | Auto-Cycle window

Auto Cycle Interval

**Range:** 0 or 24 Hours

**Procedure:** Using the pop up keypad enter the desired value. The function is disabled when 0 is entered

**Default:** 24 hours

#### Miscellaneous – Console Temperature Unit

**Purpose:** To set the temperature units

#### Display Units In

**Options:** Celsius / Fahrenheit

**Procedure:** Select the temp unit from the drop down box

**Default:** C

#### 6.2.4.4 Device Information

**Purpose:** Allows the user to review the Device Information of Elexant 3500i which are read only parameters. Device Type, Firmware Version and Serial Number are factory configured and cannot be changed.

#### Load Configuration Defaults

**Purpose:** Loads the default settings that are stored in the Elexant 3500i Electronic Thermostat. On hitting the button, all user input data will be erased and the device will be set to factory defaults. An alarm will occur if Device Reset Alarm option is enabled.

## SECTION 7 – CONFIGURATION OF THE NGC-20/ ELEXANT 5010i CONTROLLER

### 7.1 Adding a NGC-20/ Elexant 5010i to Raychem Touch 1500

Before using the Raychem Touch 1500 software to configure and maintain the NGC-20/ Elexant 5010i system, the same must be added manually to Raychem Touch 1500. The communication ports must first be set in order for the Touch 1500 computer to talk to the NGC-20/ Elexant 5010i Controller. If an NGC-40-BRIDGE already resides on the system, please ensure that the NGC-20/ Elexant 5010i Controller has a unique Modbus address which is different than the existing address of the connected BRIDGE modules.

#### 7.1.1 Communication Ports

The Touch 1500 can be connected to the NGC-20/ Elexant 5010i only via the RS-485 port.

Although the NGC-20/ Elexant 5010i CMA (Handheld Programmer) allows the user to change the following settings, in general, the default settings should be used. The user is allowed to change these settings in those cases where an external device is added which has already blocked the Modbus address(s) or ports.

#### 7.1.2 Communication via RS-485 ports

The Field Port Communication must first be configured in order to connect the NGC-20/ Elexant 5010i via RS-485. It is important to note that the RS-485 port is internally configured to COM 3 of the TOUCH Hardware. Retain the default settings.

Go to System | Communications | Field Port Window.

#### 7.1.3 Communication Port Settings

For details on Com port settings please refer Section 4.1.2 to Section 4.4.

#### 7.1.4 Scanning through the RS-485 port

Go to System | Device Manager

For the very first time, the Device List screen will be blank. See below:

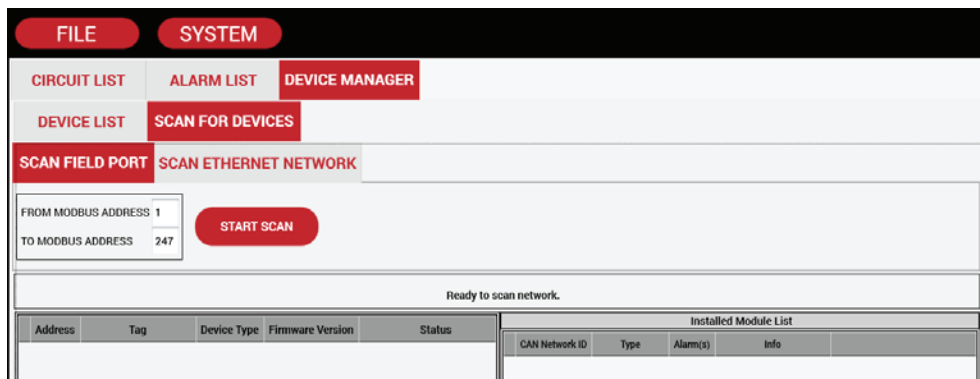


Figure 7.1 Scan for Device | Scan Field Port window

#### Modbus Address

Press Scan for Device tab. A window opens up giving a range of the NGC-20/ Elexant 5010i Modbus address to scan.

**Purpose:** The Modbus Address defines the communications address to be used by the NGC-20/ Elexant 5010i Controller when using the Modbus protocol to communicate with a Modbus compatible device **Range:** 1 to 247

**Procedure:** Click on the 'From Modbus address' to bring up on-screen keypad and change the address to the lowest Modbus address on the NGC-20/ Elexant 5010i network. Select 'To Modbus Address' and enter the highest address +1 on the NGC-20/ Elexant 5010i network. This is done to shorten the scan time.

**Default:** From address = 1, to address = 247

#### Start Scan

Press the Start Scan button.

The Touch 1500 program will scan the network for all NGC-20/ Elexant 5010i Controller(s) having Modbus addresses in the range specified.

Click OK to accept the same.

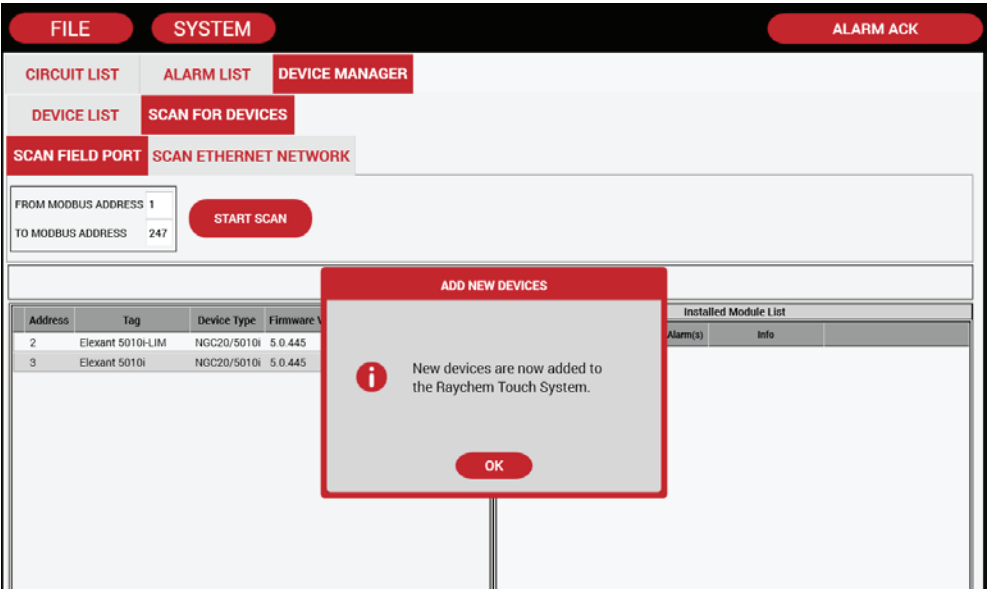


Figure 7.2 Scan for Devices | Scan Field Port window after scan

7.1.5 Configuration of System Preferences

For setting System Preferences please refer Section 4.1.7 to 4.1.10.

7.2 Configuration of NGC-20/ Elexant 5010i Controllers

This Section provides complete programming instructions for the NGC-20/ Elexant 5010i Controller for single phase heaters.

7.2.1 Identifying and Selecting the NGC-20/ Elexant 5010i Controller

Go to System | Device Manager

Click on the desired NGC-20/ Elexant 5010i Controller to bring up the option buttons.

Click on the Config button.

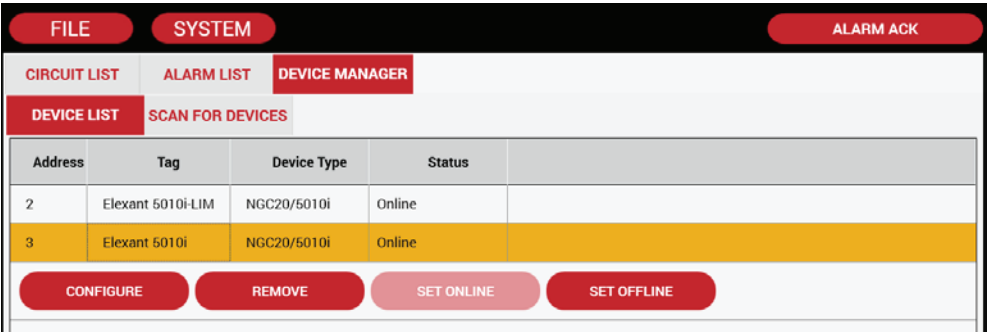


Figure 7.3 System | Device Manager window



## 7.2.2 Basic Settings

The Basic Setting tabs allow the user to review and change only those inputs which are necessary to set up the controller

**FILE** **SYSTEM** **ALARM ACK**

**CIRCUIT LIST** **ALARM LIST** **CONFIGURE DEVICE**

☐ Show Advanced Settings

**BASIC SETTINGS**

Temperatures

Control Modes

Local RTD 1

Local RTD 2

Electrical

**Elexant 5010i**

**General**

Tag: Elexant 5010i

Heater Status: Off

**Control Temperature**

Name	Alarm	Setpoint	Filter
Control Setpoint		-5	°C
High Alarm	<input type="checkbox"/> Enable	100	°C 0 S
Low Alarm	<input type="checkbox"/> Enable	-20	°C 0 S
High Limit Cutout Setpoint		200	°C
Low Limit Cutout Setpoint		-25	°C
Low Limit Cutout Deadband		3	°C
Control Temperature Usage		Use Lowest Temperature	▼
TS Fail Mode		Fail Off	▼
TS Fail Mode Percentage		50	%

Figure 7.4 Configure Device | Temperature window

### 7.2.2.1 Basic Settings - Temperature

For Basic Temperature Settings on NGC-20/ Elexant 5010i Controllers please refer to Section 4.3.1.

### 7.2.2.2 Control Modes

Allows to user to select various Control Modes

For Control Mode Settings of NGC-20/ Elexant 5010i Controllers please refer Section 4.3.1.2 (Omit Settings against “Output Switch Type”)

**FILE** **SYSTEM** **ALARM ACK**

**CIRCUIT LIST** **ALARM LIST** **CONFIGURE DEVICE**

☐ Show Advanced Settings

**BASIC SETTINGS**

Temperatures

**Control Modes**

Local RTD 1

Local RTD 2

Electrical

**Elexant 5010i**

**Control Modes**

Switch Control Mode: On/Off ▼

Dead Band: 3 °C

Proportional Band: 1 °C

PASC Min Ambient Temperature: -40 °C

PASC Min Pipe Size: 0.5" (13 mm) ▼

PASC Power Adjust: 100 %

Figure 7.5 Configure Device | Control mode window

### 7.2.2.3 Set Local RTD 1 & RTD 2

Allows to user to select RTDs and assign functions. Please note that editing local RTD2 is only possible if an RTD is wired directly on the controller

**FILE** **SYSTEM** **ALARM ACK**

**CIRCUIT LIST** **ALARM LIST** **CONFIGURE DEVICE**

☐ Show Advanced Settings

**BASIC SETTINGS**

Temperatures

Control Modes

**Local RTD 1**

Local RTD 2

Electrical

**Elexant 5010i**

**Local RTD 1**

RTD Type: 3 wire 100 Ohm Platinum ▼

RTD Lead Resistance: 0.0 Ohm

RTD Tag: Elexant 5010i-TS1-FFFF

Usage: Control Only ▼

Name	Alarm	Setpoint	Filter
High Alarm	<input checked="" type="checkbox"/> Enable	100	°C 0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	-20	°C 0 S

Figure 7.6 Configure Device | Local RTD 1 window

For settings on Local RTD 1 & 2 of NGC-20/ Elexant 5010i Controllers please refer Section 4.3.1.4.

### 7.2.2.4 Set Electrical Parameters

For Electrical settings of NGC-20/ Elexant 5010i Controllers please refer Section 4.3.1.5, 4.3.1.6, & 4.3.1.7.

## 7.2.3 Advanced Settings

When the Show Advance Settings box is checked, additional tabs are enabled.

### 7.2.3.1 Other Alarms

Elexant 5010i			
Failure and Trip Alarms			
Device Reset Alarm	<input type="checkbox"/>	Enable	
Load Shed Source Failure Alarm	<input checked="" type="checkbox"/>	Enable	
GFI Current Transformer Failure Alarm	<input checked="" type="checkbox"/>	Enable	
Switch Failure Alarm	<input checked="" type="checkbox"/>	Enable	
High Limit Cutout Alarm	<input type="checkbox"/>	Enable	
Low Limit Cutout Alarm	<input type="checkbox"/>	Enable	
Contactor and Heater Time Alarm			
Name	Alarm	Setpoint	
Contactor Cycle Count Alarm	<input checked="" type="checkbox"/> Enable	2000000	Cycle
Heater Time Alarm	<input checked="" type="checkbox"/> Enable	100000	Hour(s)

Figure 7.7 Configure Device | Other Alarm window

### Failure and Trip Alarms

**Purpose:** To set advanced Alarm options.

#### Device Reset Alarm

**Purpose:** The Device Reset Alarm is used to indicate:

1. Power to the Module has been interrupted and subsequently restored.
2. A transient has caused the Module's program to restart.
3. An internal condition has caused the Module's program to restart.

**Procedure:** Check box to enable.

**Default:** DISABLED

#### Load Shed Source Failure Alarm

**Purpose:** To indicate failure of Load Shed Sources

**Procedure:** Uncheck box to disable the alarms.

**Default:** ENABLED

 **Important:** The default Alarm Latching/Non-Latching setting for this alarm is LATCHING.

#### Ground Fault Current Transformer Failure Alarm

Option unavailable.


**Default:** ENABLED

#### Switch Failure Alarm

**Purpose:** The purpose of the Switch Failure Alarm is to indicate that an output switch failure has occurred. The control module HTC/ HTC3 determines that if the output switch is turned off and there is load current present, then the output switch has failed closed and the alarm is latched on.

**Procedure:** Uncheck Box to Disable the Alarms.

**Default:** Enabled

 **Important:** The Switch Failure alarm should always be enabled. A high temperature condition, as a result of a failed heating circuit, can only be caused if the output switch fails closed. When an output switch fails closed, the control module cannot turn the power to the heating circuit off, therefore no protection features are available (ground fault trip, power limiting, etc)

## High Limit Cutout Alarm

**Purpose:** To control the Alarm status in the event of a High Current Cut Out

**Procedure:** Uncheck box to disable the alarms

**Default:** ENABLED

 **Important:** The default Alarm Latching/Non-Latching setting for this alarm is latching.

### 7.2.4 Contactor and Heater Time Alarms

#### Contactor Cycle Count Alarm

**Purpose:** Generates an alarm if the number of off-to-on transitions of a contactor reaches or exceeds the Contactor Count Alarm setting. This serves as a method to perform preventative maintenance on the contactor before a failure is likely to occur.

**Procedure:** Adjust the Contactor Alarm setting to the desired value. Note that the Contactor Cycle Count Alarm must be enabled in order to adjust the Contactor Alarm setting. Uncheck box to disable the Alarms. When enabled, enter the setpoint between 0-999999 cycles

**Default:** ENABLED and set at 100000 cycles

#### Heater Time Alarm

**Purpose:** Generates an alarm if the Heater ON time reaches or exceeds the count setting. This serves as a method to perform preventative maintenance on the Heaters before a failure is likely to occur.

**Procedure:** Adjust the Contactor Alarm setting to the desired value. Note that the Heater Time Alarm must be enabled in order to adjust the Heater Time Alarm setting. Uncheck box to disable the alarms. When enabled, enter the setpoint between 0-999999 cycles

**Default:** ENABLED and set at 100000 Hrs

Alarm Output Mode

**Purpose:** To assign the output mode option for the Relay.

**Options:** Drop down list Normal Operation/Toggle/Flash

**Default:** Normal

Alarm Output – Alarm Output Toggle Time


**Procedure:** Data Entry is possible only when Toggle Mode is selected in the previous operation

**Options:** Enter the desired value using the keypad

**Range:** 1 to 240 seconds

#### Alarm Latch Settings

**Purpose:** This screen allows for the selection of automatic clearing (non-latching) of alarms when an alarm condition no longer exists or permanent alarming (latching) of such a condition until the alarm is manually reset.

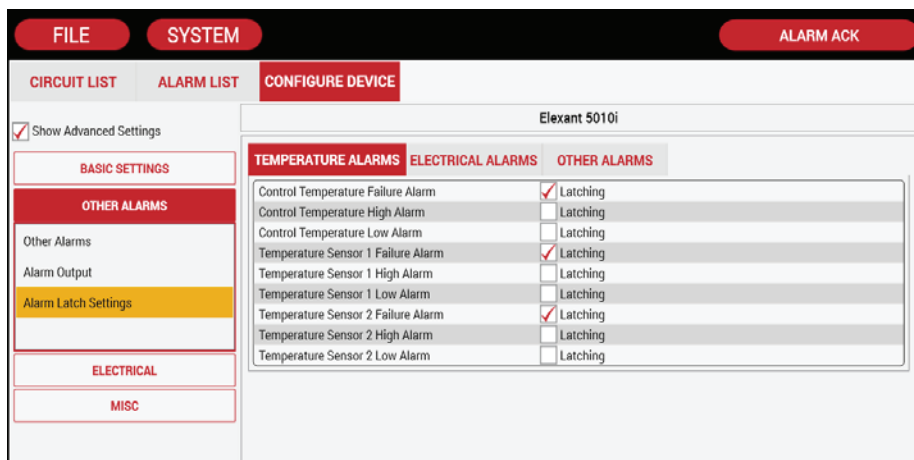

TEMPERATURE ALARMS	ELECTRICAL ALARMS	OTHER ALARMS
Control Temperature Failure Alarm	<input checked="" type="checkbox"/> Latching	
Control Temperature High Alarm	<input type="checkbox"/> Latching	
Control Temperature Low Alarm	<input type="checkbox"/> Latching	
Temperature Sensor 1 Failure Alarm	<input checked="" type="checkbox"/> Latching	
Temperature Sensor 1 High Alarm	<input type="checkbox"/> Latching	
Temperature Sensor 1 Low Alarm	<input type="checkbox"/> Latching	
Temperature Sensor 2 Failure Alarm	<input checked="" type="checkbox"/> Latching	
Temperature Sensor 2 High Alarm	<input type="checkbox"/> Latching	
Temperature Sensor 2 Low Alarm	<input type="checkbox"/> Latching	

Figure 7.8 Configure Device | Alarm Latch Settings window

**Important:** If the application is subject to periodic situations where cold or hot product is part of the process, it may be appropriate to configure the NGC-20/ Elexant 5010i for non-latching temperature alarms to avoid nuisance alarms. If it is important to be aware of any temperature alarm conditions that may have existed in a pipe, then the control module should be configured for latching temperature alarms

## Tab – Temperature Alarms

Check/Uncheck boxes to enable/disable latching. When enabled, the alarm will remain until the Reset button is pressed on the Touch 1500 Screen.

**Default:** Latching is enabled for all temperature alarms

Elexant 5010i		
TEMPERATURE ALARMS	ELECTRICAL ALARMS	OTHER ALARMS
Control Temperature Failure Alarm	<input checked="" type="checkbox"/> Latching	
Control Temperature High Alarm	<input checked="" type="checkbox"/> Latching	
Control Temperature Low Alarm	<input checked="" type="checkbox"/> Latching	
Temperature Sensor 1 Failure Alarm	<input checked="" type="checkbox"/> Latching	
Temperature Sensor 1 High Alarm	<input checked="" type="checkbox"/> Latching	
Temperature Sensor 1 Low Alarm	<input checked="" type="checkbox"/> Latching	
Temperature Sensor 2 Failure Alarm	<input checked="" type="checkbox"/> Latching	
Temperature Sensor 2 High Alarm	<input checked="" type="checkbox"/> Latching	
Temperature Sensor 2 Low Alarm	<input checked="" type="checkbox"/> Latching	

Figure 7.9 Alarm Latching Settings | Temperature Alarm window

## Tab – Electrical Alarms

**Default:** Latching is ENABLED for all Electrical Alarms

Elexant 5010i		
TEMPERATURE ALARMS	ELECTRICAL ALARMS	OTHER ALARMS
	High Line Current Alarm	<input checked="" type="checkbox"/> Latching
	Low Line Current Alarm	<input checked="" type="checkbox"/> Latching
	High Ground Fault Current Alarm	<input checked="" type="checkbox"/> Latching
	High Voltage Alarm	<input checked="" type="checkbox"/> Latching
	Low Voltage Alarm	<input checked="" type="checkbox"/> Latching
	High Heating Cable Resistance Alarm	<input checked="" type="checkbox"/> Latching
	Low Heating Cable Resistance Alarm	<input checked="" type="checkbox"/> Latching

Figure 7.10 Alarm Latch Settings | Electrical Alarm window

## Tab – Other Alarms

**Default:** Latching is ENABLED for Switch Failure, Limiter Communication Failure, Limiter Temp sensor Failure & load shed Source Failures.

Elexant 5010i		
TEMPERATURE ALARMS	ELECTRICAL ALARMS	OTHER ALARMS
		Switch Failure Alarm
		Limiter Communication Failure Alarm
		Safety Temperature Limiter Trip Alarm
		Limiter Temperature Sensor Failure Alarm
		Load Shed Source Failure Alarm
		High Limit Out-Of Alarm
		Low Limit Out-Of Alarm

Figure 7.11 Alarm Latch Settings | Other Alarm window

7.2.4.1 Electrical

FILESYSTEMALARM ACK

CIRCUIT LISTALARM LISTCONFIGURE DEVICE

Show Advanced Settings

BASIC SETTINGSOTHER ALARMS

ELECTRICAL

Currents/ResistanceVoltage

MISC

Elexant 5010i

Line Current Alarms

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	30.0	A 12 S
Low Alarm	<input type="checkbox"/> Enable	0.1	A 12 S

Ground Fault Alarms

Name	Alarm	Setpoint	Filter
High Alarm	<input checked="" type="checkbox"/> Enable	20	mA 0 S
Ground Fault Trip	<input checked="" type="checkbox"/> Enable	30	mA
GFI Current Transformer Failure Alarm	<input checked="" type="checkbox"/> Enable		

Heating Cable Resistance Alarms

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	50	% 0 S
Low Alarm	<input type="checkbox"/> Enable	50	% 0 S
Nominal Tracing Resistance		6.0	Ohm

Figure 7.12 Configure Device | Currents/Resistance window

Currents/Resistance

For Electrical settings of NGC-20/ Elexant 5010i Controllers please refer Section 5.3.

Electrical – Voltage

FILESYSTEMALARM ACK

CIRCUIT LISTALARM LISTCONFIGURE DEVICE

Show Advanced Settings

BASIC SETTINGSOTHER ALARMS

ELECTRICAL

Currents/ResistanceVoltage

MISC

Elexant 5010i

Voltage Alarms

Name	Alarm	Setpoint	Filter
High Alarm	<input checked="" type="checkbox"/> Enable	270	V 12 S
Low Alarm	<input checked="" type="checkbox"/> Enable	90	V 12 S

Figure 7.13 Configure Device | Voltage window

Voltage Alarms

**Purpose:** Alarms voltage levels, which are higher/lower than a preset limit for the application

High Alarm – Alarm

**Purpose:** To Alarm when the measured voltage is more than the specified value.

**Procedure:** Check box to enable the alarms.

**Options:** Enable/Disable

**Default:** Disabled

High Alarm – Setpoint

**Procedure:** When alarm is enabled, enter the setpoint using the onscreen keypad

**Range:** 50 to 305 V

**Default:** Grayed out; when enabled, set at 270 V.

## High Alarm Filter

**Purpose:** The Voltage High Alarm Filter will prevent alarms from being indicated until a high voltage condition has existed for the duration of the Alarm Filter time.

**Procedure:** Use the keypad to enter the desired time in seconds

**Range:** 0 to 12 Seconds

**Default:** 0 Second

 **Important:** The default alarm latching/non-latching setting for this alarm is latching

## Low Alarm – Alarm

**Purpose:** To Alarm when the measured voltage is less than the specified value.

**Procedure:** Check box to enable the alarms.

**Options:** Enable/Disable

**Default:** Disabled

## Low Alarm – Setpoint

**Procedure:** When alarm is enabled, enter the setpoint using the onscreen keypad

**Range:** 50 to 305 V

**Default:** Grayed out; when enabled, set at 90 V.

## Low Alarm Filter

**Purpose:** The Voltage Low Alarm Filter will prevent alarms from being indicated until a low voltage condition has existed for the duration of the Alarm Filter time.

**Procedure:** Use the keypad to enter the desired time in seconds

**Range:** 0 to 12 Seconds

**Default:** 0 Second

 **Important:** The default alarm latching/non-latching setting for this alarm is latching

### 7.2.4.2 Safety Temperature Limiter

The NGC-20/ Elexant 5010i Controllers are available in 2 models NGC-20/ Elexant 5010i-C-E comes without a Safety Temperature Limiter circuit while NGC-20/ Elexant 5010i-CL-E controllers use temperature data to TRIP the HT circuit thereby providing protection against over-heating of heating cables. If the measured temperature exceeds the user defined trip setting then the Limiter TRIP circuit will open the output relay. The unit will remain tripped until it is been manually reset. Resetting the unit will only be possible after the normal operating conditions have been returned to a safe level. The NGC-20/ Elexant 5010i-CL-E module has three temperature sensor inputs, two for regular control while the third one is for exclusive use of the Limiter Circuit.

This section explains configuring of the Limiter circuit equipped in the NGC-20/ Elexant 5010i-CL-E model. Users of NGC-20/ Elexant 5010i C-E Controllers should skip this section.

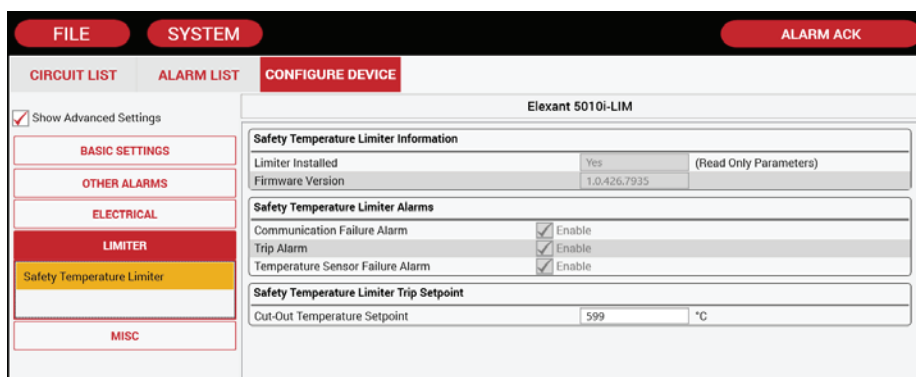


Figure 7.14 Configure Device | Safety Temperature Limiter window

Safety Temperature Limiter Information & Alarm settings are Read Only Parameters.

## Safety Temperature Limiter Trip Setpoint

**Purpose:** The lock out temperature (setpoint) of the safety temperature limiter must be set in such a way that maximum T-class temperature cannot be exceeded. The surface temperature of the heat-tracing cables is limited to the temperature applicable in this T class -5 K for temperatures below or equal to 200°C or -10 K for temperatures greater than 200°C.

**Options:** Data Entry via the dropdown keypad

**Procedure:** Enter the desired temperature and click Apply. A pop up dialogue box will appear with instructions as below. Before this operation, please remove the Front Cover of the NGC-20/ Elexant 5010i Controller to access the Limiter SET button. Keep this button pressed for 3 seconds within 60 seconds to record the new entry.

**Default:** Previous data

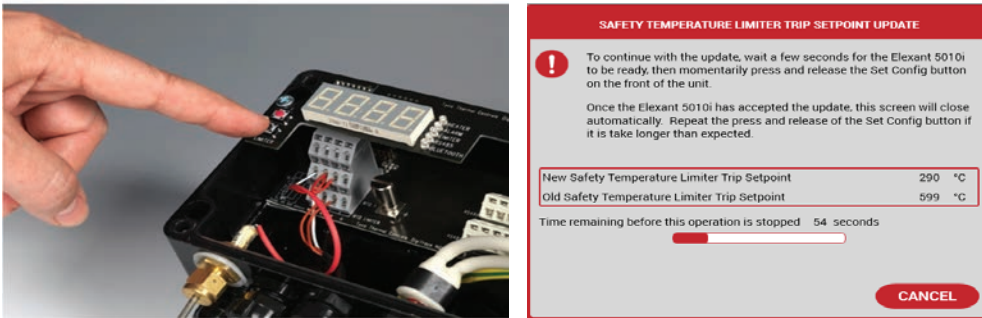


Figure 7.15 Safety Limiter Trip Setpoint update

### 7.2.4.3 Miscellaneous – Load Shedding

Load Shedding settings for NGC-20/ Elexant 5010i Controllers are detailed under Section 5.4.1.

### 7.2.4.4 Miscellaneous – Auto Cycle

**Purpose:** The auto-cycle function momentarily (approximately 10 seconds) applies power to the heating circuit at the selected interval. It is used to test the integrity of the heating circuit. Alarms present at the time of auto-cycle then become latched and remain active after the completion of the auto-cycle function. Auto-cycling effectively eliminates the need for preventive maintenance by automatically verifying the integrity of the heating circuit. Auto-Cycle Interval is the number of hours/minutes between successive heating circuit integrity tests depending on the Auto-Cycle Units specified

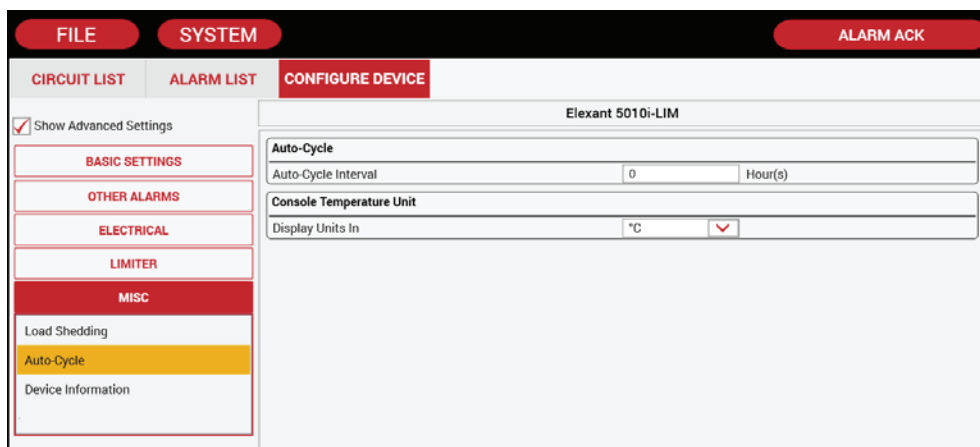


Figure 7.16 Configure Device | Auto-Cycle window

Auto Cycle Interval

**Range:** 0 to 750 Hours

**Procedure:** Using the pop up keypad enter the desired value. The function is disabled when 0 is entered

**Default:** 8 hours

### Miscellaneous – Console Temperature Unit

**Purpose:** To set the temperature units

## **Display Units In**

**Options:** Celsius / Fahrenheit

**Procedure:** Select the temp unit from the drop down box

**Default:** C

### **7.2.4.5 Device Information**

**Purpose:** Allows the user to review the Device Information of NGC-20/ Elexant 5010i which are read only parameters. Device Type, Firmware Version and Serial Number are factory configured and cannot be changed.

#### **Load Configuration Defaults**

**Purpose:** Loads the default settings that are stored in the NGC-20/ Elexant 5010i Controller. On hitting the button, all user input data will be erased and the device will be set to factory defaults. An alarm will occur if Device Reset Alarm option is enabled.



## SECTION 8 – CONFIGURATION OF AN ELEXANT 4010i/ 4020i CONTROLLER

### 8.1 ADDING AN ELEXANT 4010i/ 4020i TO Raychem Touch 1500

Before using the Raychem Touch 1500 software to configure and maintain the Elexant 4010i/ 4020i system, the same must be added manually to Raychem Touch 1500. The Communication ports must first be set in order for the Touch 1500 computer to talk to the Elexant 4010i/ 4020i Controller. If an Elexant 4010i/ 4020i Controller already resides on the system, please ensure that the Elexant 4010i/ 4020i Controller has a unique Modbus address which is different than the existing address of the connected controllers. An Elexant 4010i/ 4020i can also be connected on the Ethernet network, in that case ensure it has a valid IP address. Please refer to the Elexant 4010i/ 4020i user's manual on Elexant 4010i/ 4020i Network Settings.

#### 8.1.1 Communication Ports

The Touch 1500 can be connected to the Elexant 4010i/ 4020i via RS-485 or Ethernet port.

Although the Elexant 4010i/ 4020i allows the user to change the communication settings, in general, the default settings should be used. The user is allowed to change these settings in those cases where an external device is added which has already blocked the Modbus address(s) or ports.

#### 8.1.2 Communications via RS-485 Ports

The Field Port Communication must first be configured in order to connect the Elexant 4010i/ 4020i via RS-485. It is important to note that the RS-485 port is internally configured to COM 3 of the TOUCH Hardware. Retain the default settings.

Go to System | Communications | Scan Field Port window

#### 8.1.3 Communication Port Settings

For details on Com port settings please refer Section 4.1.2.

#### 8.1.4 Communication via Ethernet Port

The Elexant 4010i/ 4020i can be connected to a Touch 1500 using an Ethernet connection.

For details on Ethernet port settings please refer Section 4.1.3. For details on Scanning the Network for Devices refer Section 4.1.4 to 4.1.6.

Address	Tag	Device Type	Firmware Version	Sta
---------	-----	-------------	------------------	-----

Installed Module List			
CAN Network ID	Type	Alarm(s)	Info

Fig 8.1 Scan for Devices | Scan Field Port window

#### Modbus Address

Press Scan for Device tab. A Window opens up giving a range of the Elexant 4010i/ 4020i Modbus address to scan.

**Purpose:** The Modbus Address defines the communication address to be used by the Elexant 4010i/ 4020i Controller when using the Modbus protocol to communicate with a Modbus compatible device

**Range:** 1 to 247

**Procedure:** Click on the 'From Modbus address' to bring up on-screen keypad and change the address to the lowest Modbus address on the Elexant 4010i/ 4020i network. Select 'To Modbus Address' and enter the highest address+1 on the Elexant 4010i/ 4020i network. This is done to shorten the scan time.

**Default:** From address = 1, to address = 247

Start Scan

Press the Start Scan button.

The Touch 1500 program will scan the network for all Elexant 4010i/ 4020i Controller(s) having Modbus addresses in the range specified.

Click OK to accept the same.

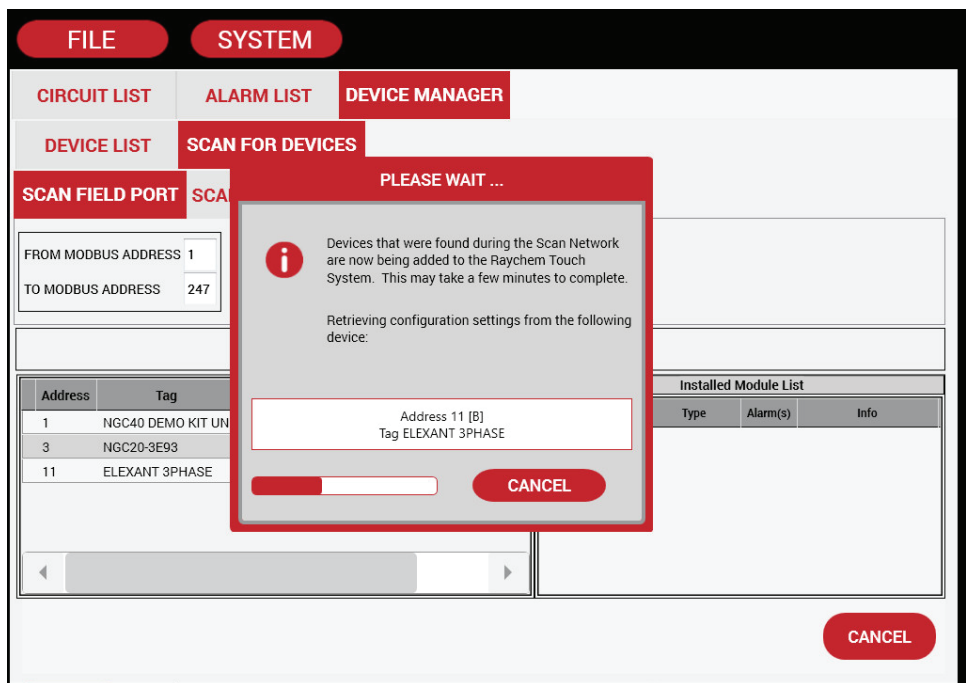


Figure 8.2 Scan for Devices | Scan Field Port window during scan

8.1.5 Scanning Through the Ethernet Port

Scanning through the Ethernet port is the same as RS-485 port. For details on Scanning Through the Ethernet Port please refer Section 4.1.6 to 4.1.7.

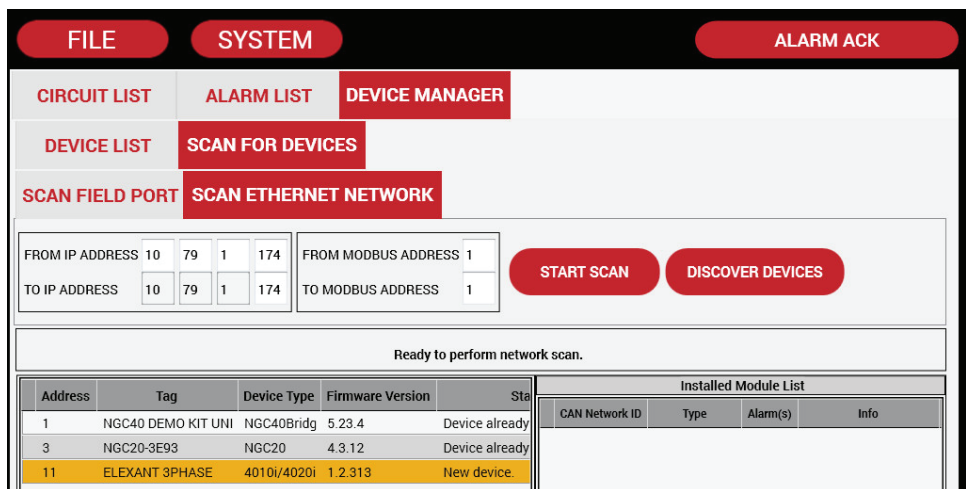


Fig 8.3 Scan for Devices | Scan Ethernet Network window

Additional information on connecting Touch 1500 via Ethernet port can be found on Appendix A ETHERNET CONNECTION TO THE BRIDGE.

## 8.1.6 Configuration of System Preferences

For setting System Preferences please refer Section 4.1.8 to 4.1.10.

## 8.2 CONFIGURATION OF ELEXANT 4010i/4020i CONTROLLERS

This Section provides complete programming instructions for the Elexant 4010i/ 4020i Controller for single and three phase heaters.

### 8.2.1 Identifying and Selecting the Elexant 4010i/ 4020i Controller

Go to System | Device Manager

Click on the desired Elexant 4010i/ 4020i Controller to bring up the option buttons.

Click on the Configure button.

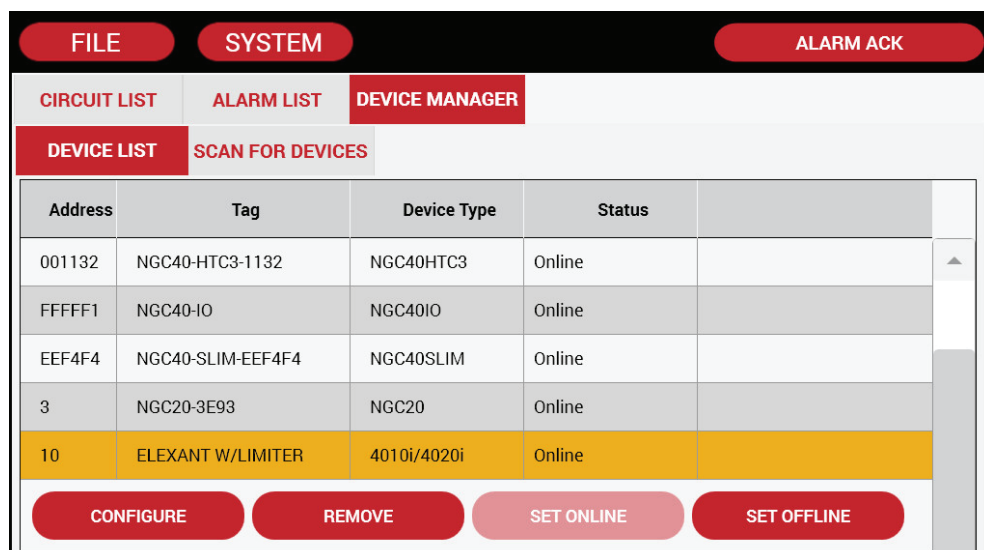


Figure 8.4 System | Device Manager window

### 8.2.2 Basic Settings

The Basic Setting tabs allow the user to review and change only those inputs which are necessary to setup the controller.

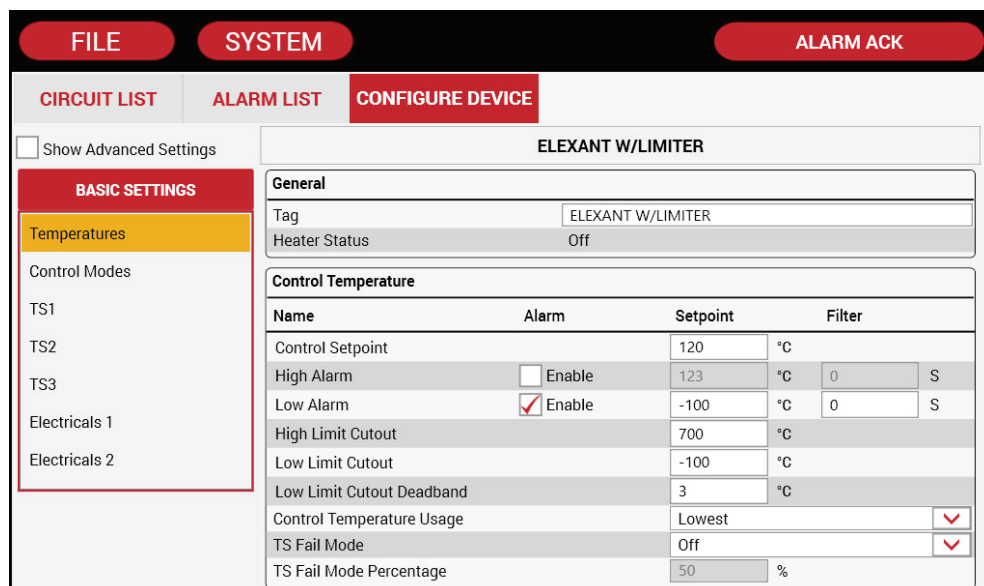


Figure 8.5 Configure Device | Temperatures window

### 8.2.2.1 Basic Settings– Temperatures

#### 4010i/ 4020i Tag

**Purpose:** A 40-character tag may be assigned to the Elexant 4010i/ 4020i to allow it to be easily associated with a pipe, vessel, and process, circuit, drawing name or number.

**Procedure:** To enter a tag name, touch where the default tag name is shown. This will open the keyboard for entering the new tag name.

**Range:** Alpha-numeric characters

**Default:** Elexant 4010i/ 4020i-999999

#### Heater Status

**Purpose:** Indicates whether the heat tracing is powered On or Off

**Procedure:** N/A. this is not a programmable function. It is status only.

**Range:** On or Off

**Default:** N/A

### 8.2.2.2 Control Temperature

#### Control Setpoint

**Purpose:** The Control Temperature Setpoint temperature is the value at which the Heat Trace Controller maintains the circuit temperature using one of the Switch Control Modes. The Control Temperature Setpoint temperature is compared to the measured pipe or ambient temperature. A decision is then made to turn on or turn off the output to control power to the heat trace cable.

**Procedure:** To enter a new set point value, touch the data area to bring up the numerical keypad.

**Range:** -200°C to 700°C (-328°F to 1292°F)

**Default:** 10°C (50°F)



**Important:** The 4010i/ 4020i will switch the output ON and OFF in an attempt to maintain this temperature.

#### High Alarm

**Purpose:** This alarm is used to indicate when the measured temperature goes above a defined threshold. It can be used to indicate when the pipe temperature has risen above a temperature which may have a negative effect on process efficiency or operation. When enabled, this alarm will appear when the Control Temperature exceeds the Control Temperature High Alarm Setpoint. This alarm can be user selectable to be latching or non-latching (refer to Section 8.2.3) if set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Procedure:** To enable Alarm, touch the Check box (a check mark will appear in the box when enabled.) To enter a new set point value, touch the data area to bring up the numerical keypad

**Range:** -200°C to 700°C (-328°F to 1292°F)

**Options:** ENABLE or DISABLE

**Default Alarm Selection:** DISABLED

**Default Alarm Temperature:** 100°C (212°F)



**Important:** If your application is subject to periodic situations where cold or hot product is part of the process, it may be appropriate to configure the 4010i/ 4020i for non-latching temperature alarms to avoid nuisance alarms. If it is important to be aware of any temperature alarm conditions that may have existed in a pipe, then the 4010i/ 4020i should be configured for latching temperature alarms.

#### High Alarm Filter

**Purpose:** The Control Temperature High Alarm Filter will prevent Control Temperature High Alarm from being indicated until the corresponding alarm condition has existed for the duration of the Control Temperature High Alarm Filter time.

**Procedure:** To enter a new set point value, touch the data area to bring up the numerical keypad

**Range:** 0 to 59940 seconds (0 to 999 minutes)

**Default:** 0 second

**NOTE 1:** If an alarm condition appears and then disappears before the alarm filter time has expired, the filter timer is reset and the alarm condition must exist again for the entire alarm filter time before the corresponding alarm will be indicated.

**NOTE 2:** If the user resets an alarm while the alarm condition still exists, then the alarm will not be indicated again until the entire alarm filter time has expired.

## Low Alarm

**Purpose:** This alarm is used to indicate when the measured temperature goes below a defined threshold. It can be used to indicate when the pipe temperature has dropped below a temperature which may have a negative effect on process efficiency or operation. When enabled, this alarm will appear when the Control Temperature decreases below the Control Temperature Low Alarm Setpoint.

**Procedure:** To enable Alarm, touch the Check box (a check mark will appear in the box when enabled.) To enter a new set point value, touch the data area to bring up the numerical keypad

**Range:** -200°C to 700°C (-328°F to 1292°F)

**Options:** ENABLE or DISABLE

**Default Alarm Selection:** ENABLE

**Default Alarm Temperature:** 5°C (40°F)

**NOTE 1:** This alarm can be user selectable to be latching or non-latching as explained under Section 5.2.3. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to Latching the alarm must be cleared by the user. The default alarm latching/non-latching setting for this alarm is latching.

**NOTE 2:** If your application is subject to periodic situations where cold or hot product is part of the process, it may be appropriate to configure the 4010i/ 4020i for non-latching temperature alarms to avoid nuisance alarms. If it is important to be aware of any temperature alarm conditions that may have existed in a pipe, then the 4010i/ 4020i should be configured for latching.

## Low Alarm Filter

**Purpose:** The Control Temperature Low Alarm Filter will prevent Control Temperature Low Alarm from being indicated until the corresponding alarm condition has existed for the duration of the Control Temperature Low Alarm Filter time.

**Range:** 0 to 59940 seconds (0 to 999 minutes)

**Procedure:** To enter a new set point value, touch the data area to bring up the numerical keypad

**Default:** 0 second

**NOTE 1:** If an alarm condition appears and then disappears before the alarm filter time has expired, the filter timer is reset and the alarm condition must exist again for the entire alarm filter time before the corresponding alarm will be indicated.

**NOTE 2:** If the user resets an alarm while the alarm condition is still exists, then the alarm will not be indicated again until the entire alarm filter time has expired.

## High Limit Cutout Setpoint

**Purpose:** This parameter defines the High Limit Cutout Setpoint for each of the 3 Temperature Sensors where the Temperature Sensor configuration has High Limit Cut-out enabled. This feature will override the Control Temperature Setpoint temperature and force the controller output off if any one of the 3 Temperature Sensors temperature exceeds the High Limit Cut-Out temperature setting.

**Procedure:** To enter a new set point value, touch the data area to bring up the numerical keypad

**Range:** -200°C to 700°C (-328°F to 1292°F)

**Default:** 700°C (1292°F)

**NOTE 1:** The High Limit Cutout feature overrides an auto-cycle test. A pending auto-cycle will be initiated immediately after the Temperature Source x temperature drops below the High Cutout Setpoint.

**NOTE 2:** If a Temperature Source Failure occurs and the High Limit Cutout feature is enabled, the switch output will latch off regardless of the Temperature Control Mode setting or the Temperature Fail Mode setting.

## Low Limit Cutout Setpoint

**Purpose:** This parameter defines the Low Limit Cutout Setpoint for each of the 3 Temperature Sensors where the Temperature Sensor configuration has Low Limit Cut-out enabled. This feature will override the Control Temperature Setpoint temperature and force the controller output off if any one of the 3 Temperature Sensors temperature exceeds the Low Limit Cut-Out temperature setting.

**Procedure:** To enter a new set point value, touch the data area to bring up the numerical keypad

**Range:** -200°C to 700°C (-328°F to 1292°F)

**Default:** -70°C (-94°F)

## Low Limit Cutout Deadband

**Purpose:** This parameter defines the Deadband value used with the Low Limit Cutout Setpoint. If the Control temperature falls below the Low Limit Cutout setpoint plus the Deadband value, the output is turned off.

**Procedure:** To enter a new set point value, touch the data area to bring up the numerical keypad

**Range:** 1°C to 50°C (2°F to 90°F)

**Default:** 3°C (5°F)

## Control Temperature Usage

**Purpose:** Allows the selection of one of two possible temperature control modes used by the control module. The different modes are Averaging, or minimum maintain temperature control.

**Procedure:** Touch the drop down selection box to select Control Temperature Usage

**Options:** Use Lowest Temp/Use Average Temp

**Default:** Use lowest temp

## TS Fail mode

**Purpose:** Allows the selection of one of four Fail Safe modes, Fail On, Fail Off, Fixed %, Last %

Touch the drop down selection box to select TS Fail modes

**Options:** Fail On/Fail Off/ Fixed %/ Last %

**Default:** Fail Off

## TS Fail mode %

**Purpose:** Allows the Entry of Fail mode % on Fixed % mode (only)

**Procedure:** Touch the Entry box and enter %

**Range:** 0 to 99%

**Default:** Grayed out until enabled

### 8.2.2.3 Control Modes

Allows user to select various Control Modes.

Figure 8.6 Configure Device | Control Modes window

## Output Switch Type

**Purpose:** Select the type of switching device connected to this 4010i/ 4020i

**Procedure:** Select the type from the drop down list

**Options:** Electro-Magnetic Relay (Contactor), Solid State Relay (SSR) or Analog SSR

**Default:** Contactor

## Switch Control Mode

**Purpose:** This allows selection of the type of algorithm to be used by the 4010i/ 4020i to maintain the Control Setpoint temperature. There are five different control algorithms available. For detail explanation of the different Switch Control Modes, please refer to Appendix B SWITCH CONTROL MODES.

**Procedure:** Select the type from the drop down list

**Options:** On/Off, PASC, Always On, Always Off, Proportional (SSR Switch Type only)

**Default:** On/Off Contactor


## Dead Band—Available only when On/Off Control Mode is selected

**Purpose:** The controller monitors the temperature of the heating circuit and compares it to the Control Temperature. If the control temperature is above the Control Temperature Setpoint by more than the deadband value, the output is turned off. If the control temperature falls below the Control Temperature Setpoint, the output is turned on.

**Procedure:** Click on the box to enter date using the numerical keypad

**Range:** 1 to 50°C (2 to 90°F)

**Default:** 3°C (5°F)

 **Important:** Adjust the DEADBAND setting to the desired level above the Control Setpoint temperature. When the control temperature is above the setpoint + deadband value, the controller will turn off the output to the tracer. If the control temperature drops down below the setpoint, the output will be turned back on. Note that the smaller the deadband setting, the more often the contactor will cycle on and off, decreasing its operational life.

## Proportional Band — Available only when Proportional Control Mode is selected

**Purpose:** The controller monitors the temperature of the heating circuit and compares it to the Control Temperature Setpoint. If the Control Temperature is at or below the Control Temperature Setpoint the power is applied to the trace with a duty cycle of 100% minus the controller output is full on. If the Control Temperature is equal to or greater than the Control Setpoint temperature plus the Proportional Band setting, then the controller output will have a duty cycle of 0%, the output will be off. The temperature of the control sensor is constantly monitored and the output duty cycle is adjusted proportionally according to where the temperature falls within the 0% to 100% band.

### Proportional Control Temperature Band Table

Control Sensor Temperature Duty Cycle

Setpoint + proportional band 0%

Setpoint + proportional band / 2 50%

Setpoint 100%

 **Important:** The Proportional Band is use with the two proportional control modes only (SSR PASC and Analog SSR Proportional).

**Procedure:** Click on the box to enter date using the numerical keypad

**Range:** 1 to 50°C (2 to 90°F)

**Default:** 2°C (4°F)

## PASC Min. Ambient Temperature

**Purpose:** The PASC Min Ambient Temp is the lowest ambient temperature that was used when the heat-tracing system was designed. The entered value should agree with the value used by the design engineer to ensure that the heat tracing system was sized correctly.

**Procedure:** Click on the box to enter date using the numerical keypad

**Range:** -73°C to 51°C (-99°F to 124°F)

**Default:** -40°C (-40°F)

## PASC Min Pipe Size

**Purpose:** PASC Min Pipe Size is the diameter of the smallest heat-traced pipe in the group controlled by this circuit. Small diameter pipes heat up and cool down more rapidly than larger diameter pipe, therefore, the PASC duty cycle is calculated over a shorter time base. Larger diameter pipes heat and cool less rapidly, so the on/off periods for the heater system can be stretched over a longer period. If contactors are being used to control the heater circuit, the longer time base reduces the number of contactor on/off cycles and extends the contactor life.

**Procedure:** Click on the box to enter date using the numerical keypad


**Options:** .50 in (15 mm), 1.0 in (25 mm), >=2.0 in (50 mm)

**Default:** 0.50 in (15 mm)

## PASC Power Adjust

**Purpose:** This allows the PASC control to be adjusted when the heating cable output is greater than the design assumption, or if the pipe insulation proves to be more efficient than assumed. Pipe temperature may run higher or lower than desired if the heating cable has a different output than required to offset the heat loss. The Power Adjust parameter enables a reduction or an increase in the heat-tracing effective power by entering a value less or greater than 100%



 **Important:** If improperly used, the Power Adjust parameter can cause the piping to get too cold or too hot. If unsure, leave at 100%. Do not change this value unless an engineer calculates the temperature impact on the system and determines that it is safe to do so. Be particularly cautious if the circuit has more than one diameter of pipe or type of heat tracing. Contact a Chemelex representative for assistance with this factor.

**Procedure:** Touch the box to enter date using the numerical keypad

**Range:** 10 to 200%

**Default:** 100%

### Contactor Output Under SSR


**Purpose:** This setting affects the behavior of the Contactor output whether it is active or not active when the Output Switch Type is SSR.

**Options:** Inactive or Active

**Default:** Inactive

### 8.2.2.4 Set TS1, TS2 & TS3

This section discusses setting up a TS that is hard-wired into a Elexant 4010i/ 4020i Controller. If no TS is connected directly to the Elexant 4010i/ 4020i Controller, then you can skip this section.

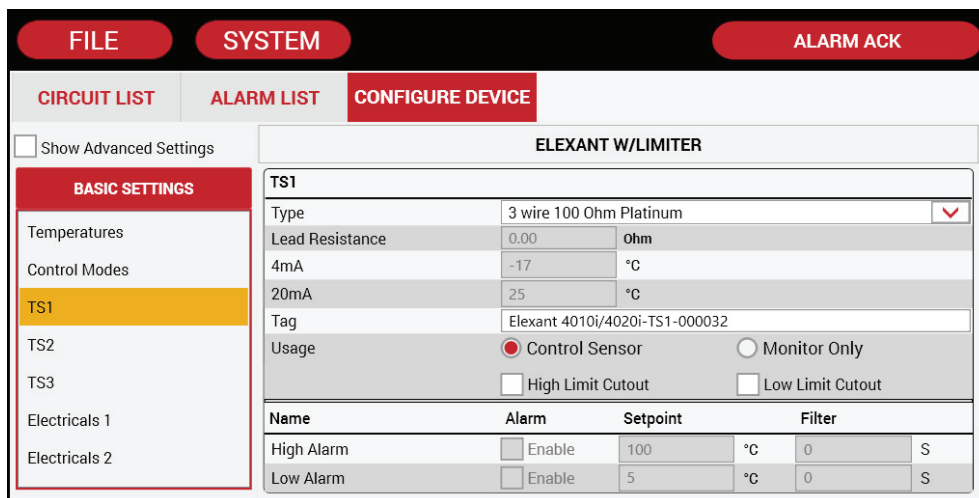

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	100 °C	0 S
Low Alarm	<input type="checkbox"/> Enable	5 °C	0 S

Figure 8.7 Configure Device | TS1 window

### TS Type

**Purpose:** This allows selection of the type of RTD used

**Procedure:** Select the type from the drop down list

**Options:** 3-wire 100-Ohms Platinum, 2 or 3-wire 100-Ohms Nickel Iron, 2 or 3-wire 100-Ohms Nickel, 4-20 mA Loop or Not Used.

**Default:** 3-wire 100-Phms Platinum

### TS Lead Resistance

**Purpose:** This allows the lead wire resistance to be set when using 2 or 3 wire 100-Ohms Nickel Iron. The lead resistance must be entered to ensure accurate temperature measurement.

**Procedure:** Touch the data area and enter the resistance value using the keypad.

**Range:** 0 to 20 Ohms

**Default:** 0 Ohms

### Change TS Tag

**Purpose:** This allows the RTD name to be set to the preferred text

**Procedure:** To enter a tag name, touch where the default tag name is shown. This will open the keyboard for entering the new tag name.

**Range:** Alpha-numeric characters.

**Default:** Elexant 4010i/ 4020i-TS1-999999 (TS1 may also be TS2 or TS3 depending on the selected TS)

### TS Usage

**Purpose:** This allows selection of how the controller will react if an TS fails. If High Temp Cutout or Low Temp Cutout options is selected, the Controller will cut off power when the temp exceeds the limit values.

**Procedure:** Select the type from the drop down list



**Options:** Monitor Only / Control Only / Monitor with High Temp Cut out / Control with High Temp Cut out / Monitor with High and Low Temp Cut out / Control with High and Low Temp Cut out. On Selection of Monitor option, the grayed area will allow data entry.

**Default:** Control Only for TS1, Monitor Only for TS2 and TS3

**High Alarm - TS**

**Purpose:** This setting is exclusively for a TS when set to the Monitor Only option is selected. The high alarm will activate when the temperature exceeds the set value.

**Procedure:** Touch the check box to enable the alarm. When enabled, enter the setpoint by touching the white box and using the numerical keypad. If required set filter in the range in the same way.

**Temperature Range:** -200°C to 700°C (-328°F to 1292°F)

**Filter Range:** 0 to 12 seconds

**Default Setting:** DISABLED

**Default Temperature:** 100°C

**Default Filter:** 0 seconds

**Low Alarm - TS**

**Purpose:** This setting is exclusively for a TS when set to the Monitor Only option selected. The low alarm will activate when the temperature goes below the set value.

**Procedure:** Touch the check box to enable the alarm. When enabled, enter the setpoint by touching the white box and using the numerical keypad. If required set filter in the range in the same way.

**Temperature Range:** -200°C to 700°C (-328°F to 1292°F)

**Filter Range:** 0 to 12 seconds

**Default Setting:** DISABLED

**Default Temperature:** 5°C

**Default Filter:** 0 seconds

**8.2.2.5 Set Electrical 1 Settings**

This section describes the electrical setting for Trace Current(s) for the Elexant 4010i/ 4020i Controllers.

FILESYSTEMALARM ACK

CIRCUIT LISTALARM LISTCONFIGURE DEVICE

Show Advanced Settings

BASIC SETTINGS

Temperatures

Control Modes

TS1

TS2

TS3

Electricals 1

Electricals 2

ELEXANT W/LIMITER

Current Turns Ratio

Current Turns Ratio1.00:1

Trace Current (L1)

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	30.0A	0S
Low Alarm	<input checked="" type="checkbox"/> Enable	1.0A	0S

Figure 8.8 Configure Device | Electricals 1 window

## Trace Current

### Current Turns Ratio

**Purpose:** The Current Turns Ratio is the setting used to match the ratio between the primary input and secondary output of the Current Transformer (CT).

**Procedure:** Enter the current turns ratio by touching the white box and using the numerical keypad.

**Ratio Range:** 0.10 to 10.00

**Default:** 1.00

### High Alarm

**Purpose:** Alarms at current levels which are higher than the High Trace Current Alarm Setpoint. This alarm can be user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Procedure:** Touch the check box to enable or disable this alarm.

**Options:** ENABLE or DISABLE

**Default:** DISABLE



**Important:** The default alarm latching/non-latching setting for this alarm is LATCHING.

### High Alarm Setpoint

**Purpose:** Sets the high alarm currents threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0.1 to 100.0 A (for turn's ratio of 1:1)

**Default:** 30.0 A

### High Alarm Filter

**Purpose:** The Trace Current High Alarm Filter will prevent high Trace current alarms from being indicated until a high current condition has existed for the duration of the high current alarm filter time. This filter helps eliminate nuisance alarms while maintaining the alarm function.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0 to 28 Seconds

**Default:** 0 Second

**NOTE 1:** If an alarm condition appears and then disappears before the alarm filter time has expired, the filter timer is reset and the alarm condition must exist again for the entire alarm filter time before the corresponding alarm will be indicated.

**NOTE 2:** If the user resets an alarm while the alarm condition is still exists, then the alarm will not be indicated again until the entire alarm filter time has expired.

### Low Alarm

**Purpose:** Alarms at current levels which are lower than the Trace Current Low Alarm Setpoint. Monitoring for lower than expected current levels may be an effective means of continuity monitoring. This alarm can be user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Procedure:** Touch the check box to enable or disable this alarm.

**Options:** ENABLE or DISABLE

**Default:** ENABLE

**NOTE 1:** The default alarm latching/non-latching setting for this alarm is latching. To minimize nuisance low current alarms, the 4010i/4020i must detect a current level less than the low current alarm setpoint for a period longer than approximately 20 consecutive seconds.

**NOTE 2:** For series type heating cables, adjusting the low Trace current alarm to 50% of full load current will properly alarm a problem and reduce nuisance alarms due to voltage dips. Parallel heaters should be adjusted to a level as close as possible to full load current but lower than the current at worst case voltage. The low current setting as a percentage of full load current will vary depending on the facility and its power system.

**NOTE 3:** A low trace current alarm may also result from a switch failed open. The controller cannot detect a switch failure due to no current. A no current condition would be identified by a low line current and the latched low Trace current alarm value reported with the alarm will be 0.0 A.

**NOTE 4:** It may be advantageous to consider using the high tracing resistance alarm to indicate a cable fault when using certain types of heaters.

## Low Alarm Setpoint

**Purpose:** Sets the low alarm currents threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0.1 to 100.0 A (for turn's ratio of 1:1)

**Default:** 1.0 A


## Low Alarm Filter


**Purpose:** The Low Trace Current Alarm Filter will prevent low trace current alarms from being indicated until a low current condition has existed for the duration of the low trace current alarm filter time. This filter helps eliminate nuisance alarms while maintaining the alarm function.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0 to 28 Seconds

**Default:** 0 Second

 **NOTE 1:** If an alarm condition appears and then disappears before the alarm filter time has expired, the filter timer is reset and the alarm condition must exist again for the entire alarm filter time before the corresponding alarm will be indicated.

 **NOTE 2:** If the user resets an alarm while the alarm condition is still exists, then the alarm will not be indicated again until the entire alarm filter time has expired.


## Balance 3 Phase

**Purpose:** This setting is for Elexant 4010i/ 4020i controllers for three phase heaters. If Balanced 3 Phase is enabled, the controller will automatically update any 3 phased settings to use the settings from the 1st phase (L1). If the Balanced 3 Phase is disabled, the settings for each phase can be different.

**Procedure:** Touch the check box to enable or disable Balanced 3 Phase

**Options:** ENABLE or DISABLE

**Default:** ENABLE

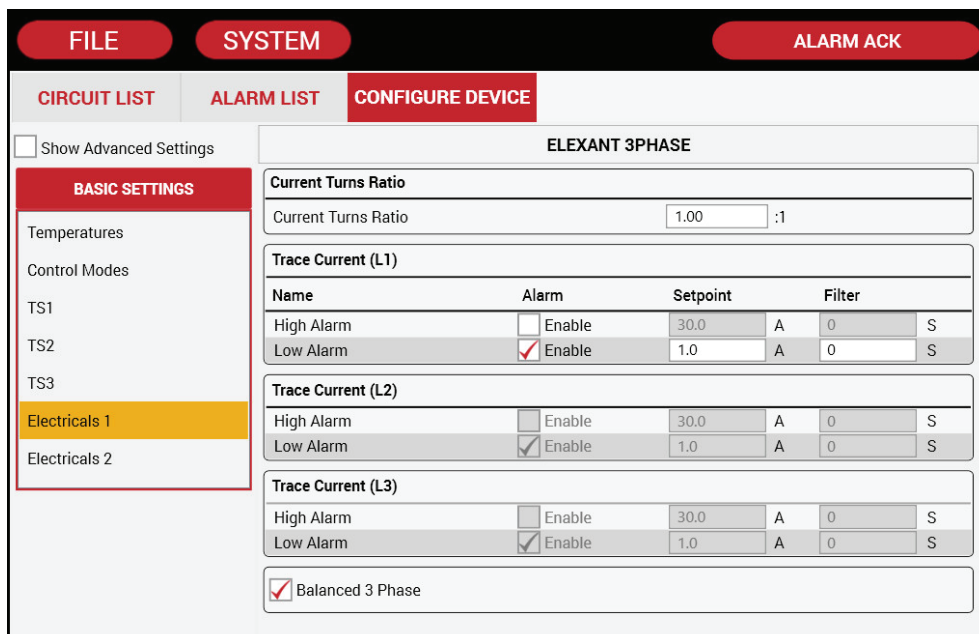

The screenshot displays the configuration interface for an Elexant 3-phase heater controller. The top navigation bar includes 'FILE', 'SYSTEM', and 'ALARM ACK'. Below this, the 'CONFIGURE DEVICE' tab is active, showing 'ELEXANT 3PHASE' settings. A sidebar on the left contains a 'BASIC SETTINGS' section with options for Temperatures, Control Modes, TS1, TS2, TS3, Electricals 1 (highlighted), and Electricals 2. The main configuration area includes a 'Show Advanced Settings' checkbox and several sections: 'Current Turns Ratio' (set to 1.00 :1), 'Trace Current (L1)', 'Trace Current (L2)', and 'Trace Current (L3)'. Each trace current section has a table with columns for Name, Alarm, Setpoint, and Filter. The 'Balanced 3 Phase' checkbox is checked at the bottom.

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	30.0 A	0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	1.0 A	0 S

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	30.0 A	0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	1.0 A	0 S

Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	30.0 A	0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	1.0 A	0 S

☒ Balanced 3 Phase

Figure 8.9 Elexant 4010i/ 4020i controller for 3 phase heaters

### 8.2.2.6 Set Electrical 2 Settings

This section describes the electrical setting for Ground Fault and Trace Voltage for the Elexant 4010i/ 4020i Controllers.

ELEXANT 3PHASE			
Ground Fault Current			
Name	Alarm	Setpoint	Filter
High Alarm	<input checked="" type="checkbox"/> Enable	20	mA 0 S
Ground Fault Trip	<input checked="" type="checkbox"/> Enable	30	mA
Zero Offset		0	mA
Turns Ratio		1.00	:1

Trace Voltage			
Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	300	V 0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	90	V 0 S
Turns Ratio		1.00	:1
Voltage Measurement		L-N	<input checked="" type="checkbox"/>

Figure 8.10 Configure Device | Electricals 2 window

#### Ground-Fault Current


##### High Alarm

**Purpose:** Alarms at ground-fault current levels which are higher than the High GF Current Alarm Setpoint. This alarm can be used to give pre-warning on a circuit whose ground-fault current is increasing but not yet at the point where it will trip and shut down the heat-tracing circuit. It is user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Procedure:** Touch the check box to enable or disable this alarm.

**Options:** ENABLE or DISABLE

**Default:** ENABLE

 **Important:** The default alarm latching/non-latching setting for this alarm is latching.

##### High Alarm Setpoint

**Purpose:** Sets the high alarm currents threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 10 mA to 500 mA (for turn's ratio of 1:1)

**Default:** 20 mA

##### High Alarm Filter

**Purpose:** The high ground-fault current alarm filter will prevent high ground-fault current alarms from being indicated until a high GF current condition has existed for the duration of the high GFI alarm filter time. This filter helps eliminate nuisance alarms while maintaining the alarm function.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0 to 28 Seconds

**Default:** 0 Second

**NOTE 1:** If an alarm condition appears and then disappears before the alarm filter time has expired, the filter timer is reset and the alarm condition must exist again for the entire alarm filter time before the corresponding alarm will be indicated.

**NOTE 2:** If the user resets an alarm while the alarm condition is still exists, then the alarm will not be indicated again until the entire alarm filter time has expired.

#### Ground-Fault Trip Alarm

**Purpose:** This alarm is activated when the ground-fault leakage current exceeds the Ground-Fault Trip Current Setpoint. Exceeding this limit will result in the output switch being latched off.

**Procedure:** Touch the check box to enable or disable this alarm.

**Options:** ENABLE or DISABLE

**Default:** ENABLE

**NOTE 1:** National Electrical Codes may require that all legs of non-neutral based power sources be opened upon detection of a ground fault. Multi-pole switch configurations should be used on non-neutral based power systems. Check the requirements with your local Electrical Authority.

**NOTE 2:** When the Ground-Fault Trip alarm is disabled, ground-fault tripping is disabled as well

### Ground-Fault Trip Setpoint

**Purpose:** Sets the Ground-Fault Trip threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 10 to 500 mA (for turn's ratio of 1:1)

**Default:** 30 mA

### Zero Offset

**Purpose:** Allow for zero offset adjustment of Ground Fault current.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0 to 100 mA (for turn's ratio of 1:1)

**Default:** 0 mA

### Ground Fault Current Turns Ratio

**Purpose:** The Ground Fault Current Turns Ratio is the setting used to match the ratio between the primary input and secondary output of the Current Transformer (CT).

**Procedure:** Enter the current turns ratio by touching the white box and using the numerical keypad.

**Ratio Range:** 0.10 to 10.00

**Default:** 1.00

### Trace Voltage

#### High Alarm

**Purpose:** Alarms at trace voltage levels which are higher than the High Trace Voltage Alarm Setpoint. It is user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Procedure:** Touch the check box to enable or disable this alarm.

**Options:** ENABLE or DISABLE

**Default:** ENABLE



**Important:** The default alarm latching/non-latching setting for this alarm is non-latching.

#### High Alarm Setpoint

**Purpose:** Sets the high alarm voltage threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 80 V to 300 V (for turn's ratio of 1:1)

**Default:** 300 V

#### High Alarm Filter

**Purpose:** The high trace voltage alarm filter will prevent high trace voltage alarms from being indicated until a high trace voltage condition has existed for the duration of the high trace voltage alarm filter time. This filter helps eliminate nuisance alarms while maintaining the alarm function.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0 to 28 Seconds

**Default:** 0 Second

#### Low Alarm

**Purpose:** Alarms at trace voltage levels which are lower than the Low Trace Voltage Alarm Setpoint. It is user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Procedure:** Touch the check box to enable or disable this alarm.

**Options:** ENABLE or DISABLE

**Default:** ENABLE



**Important:** The default alarm latching/non-latching setting for this alarm is non-latching.

## Low Alarm Setpoint

**Purpose:** Sets the low alarm voltage threshold.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 80 V to 300 V (for turn's ratio of 1:1)

**Default:** 90 V

## Low Alarm Filter

**Purpose:** The low trace voltage alarm filter will prevent low trace voltage alarms from being indicated until a low trace voltage condition has existed for the duration of the low trace voltage alarm filter time. This filter helps eliminate nuisance alarms while maintaining the alarm function.

**Procedure:** Touch the data area to display the keypad. Enter the desired value.

**Range:** 0 to 28 Seconds

**Default:** 0 Second

## Voltage Turns Ratio

**Purpose:** The Voltage Turns Ratio is the setting used to match the ratio between the primary input and secondary output of the Voltage Transformer.

**Procedure:** Enter the current turns ratio by touching the white box and using the numerical keypad.

**Ratio Range:** 0.10 to 10.00

**Default:** 1.00

## Voltage Measurement

**Purpose:** The Voltage Measurement is the settings used to identify the source of the voltage input.

**Procedure:** Touch the pull down box and select an option.

**Options:** Line to Neutral (L-N) or Line to Line (L-L)

**Default:** L-N

The screenshot shows the 'ELEXANT 3PHASE' configuration interface. At the top are three red buttons: 'FILE', 'SYSTEM', and 'ALARM ACK'. Below these are three tabs: 'CIRCUIT LIST', 'ALARM LIST', and 'CONFIGURE DEVICE'. The 'CONFIGURE DEVICE' tab is active. On the left is a sidebar with a 'Show Advanced Settings' checkbox and a list of settings categories: 'BASIC SETTINGS' (highlighted in red), 'Temperatures', 'Control Modes', 'TS1', 'TS2', 'TS3', 'Electricals 1', and 'Electricals 2' (highlighted in yellow). The main area displays the 'Ground Fault Current' and 'Trace Voltage' settings. The 'Ground Fault Current' table has columns for Name, Alarm, Setpoint, and Filter. The 'Trace Voltage' table has columns for Name, Alarm, Setpoint, and Filter. The 'Voltage Measurement' setting is set to 'L-N' with a dropdown arrow.

Name	Alarm	Setpoint	Filter
High Alarm	<input checked="" type="checkbox"/> Enable	20	mA 0 S
Ground Fault Trip	<input checked="" type="checkbox"/> Enable	30	mA
Zero Offset		0	mA
Turns Ratio		1.00	:1


Name	Alarm	Setpoint	Filter
High Alarm	<input type="checkbox"/> Enable	300	V 0 S
Low Alarm	<input checked="" type="checkbox"/> Enable	90	V 0 S
Turns Ratio		1.00	:1
Voltage Measurement		L-N	<input checked="" type="checkbox"/>

Figure 8.11 Voltage Measurement for Elexant 4010i/ 4020i with 3 phase heaters

## 8.2.3 Advanced Settings

When the Show Advance Settings box is checked, additional tabs are enabled allowing more programming options. Touch the Show Advanced Setting box to enable the advanced settings mode and display the additional menus.

### 8.2.3.1 Other Alarms

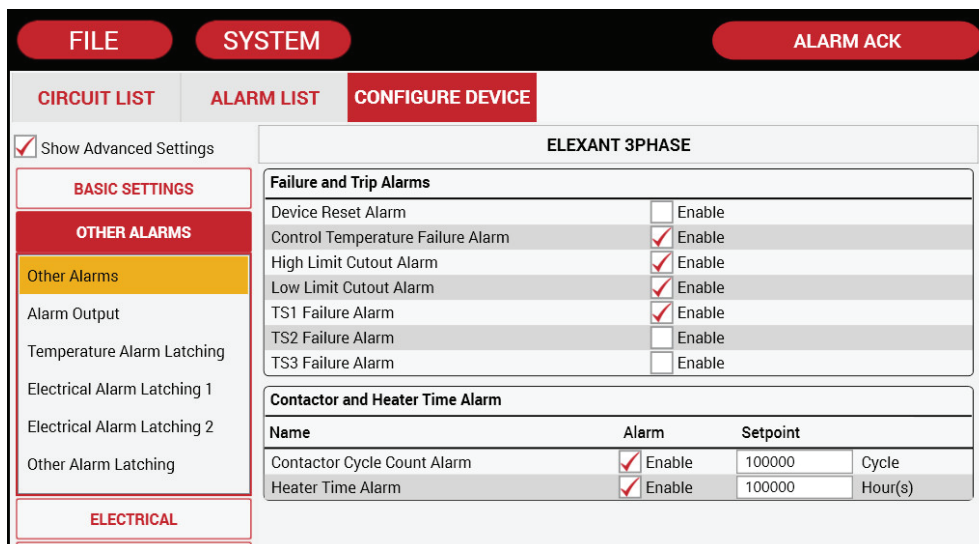

**FILE** **SYSTEM** **ALARM ACK**

**CIRCUIT LIST** **ALARM LIST** **CONFIGURE DEVICE**

☒ Show Advanced Settings

**BASIC SETTINGS**

**OTHER ALARMS**

**Other Alarms**

Alarm Output

Temperature Alarm Latching

Electrical Alarm Latching 1

Electrical Alarm Latching 2

Other Alarm Latching

**ELECTRICAL**

**ELEXANT 3PHASE**

**Failure and Trip Alarms**

Device Reset Alarm	<input type="checkbox"/>	Enable
Control Temperature Failure Alarm	<input checked="" type="checkbox"/>	Enable
High Limit Cutout Alarm	<input checked="" type="checkbox"/>	Enable
Low Limit Cutout Alarm	<input checked="" type="checkbox"/>	Enable
TS1 Failure Alarm	<input checked="" type="checkbox"/>	Enable
TS2 Failure Alarm	<input checked="" type="checkbox"/>	Enable
TS3 Failure Alarm	<input type="checkbox"/>	Enable

**Contactor and Heater Time Alarm**

Name	Alarm	Setpoint	
Contactor Cycle Count Alarm	<input checked="" type="checkbox"/> Enable	100000	Cycle
Heater Time Alarm	<input checked="" type="checkbox"/> Enable	100000	Hour(s)

Figure 8.12 Configure Device | Other Alarms window

#### 8.2.3.1.1 Other Alarms

##### 8.2.3.1.1a Failure and Trip Alarms

**Purpose:** To set advanced Alarm options.

##### Devise Reset Alarm

**Purpose:** The Device Reset Alarm is used to indicate:

1. Power to the Controller has been interrupted and subsequently restored.
2. A transient has caused the Controller's program to restart.
3. An internal condition has caused the Controller's program to restart.

**Procedure:** Check box to enable.

**Default:** DISABLED

##### Control Temperature Failure Alarm

**Purpose:** To indicate failure of one of more Temperature Sensors used for control

**Procedure:** Uncheck box to disable the alarms.

**Default:** ENABLED

##### Load Shed Source Failure Alarm

**Purpose:** To indicate failure of Load Shed Sources

**Procedure:** Uncheck box to disable the alarms.

**Default:** ENABLED



**Important:** The default Alarm Latching/Non-Latching setting for this alarm is LATCHING.

##### Ground Fault Current Transformer Failure Alarm

**Default:** ENABLED

##### High Limit Cutout Alarm

**Purpose:** To control the alarm status in the event that the control temperature has exceeded the high temp cutout temperature.

**Procedure:** Uncheck Box to Disable the Alarms.

**Default:** Enabled

## Low Limit Cutout Alarm

**Purpose:** To control the Alarm status in the event that the control temperature has exceeded the low temp cutout temperature.

**Procedure:** Uncheck box to disable the alarms

**Default:** ENABLED

## TS1 to TS3 Failure Alarm

**Purpose:** To indicate failure of the Temperature sensor.

**Procedure:** Uncheck box to disable the alarms

**Default:** ENABLED

### 8.2.3.1.1b Contactor and Heater Time Alarms

#### Contactor Cycle Count Alarm

**Purpose:** Generates an alarm if the number of off-to-on transitions of a contactor reaches or exceeds the Contactor Count Alarm setting. This serves as a method to perform preventative maintenance on the contactor before a failure is likely to occur.

**Procedure:** Adjust the Contactor Alarm setting to the desired value. Note that the Contactor Cycle Count Alarm must be enabled in order to adjust the Contactor Alarm setting. Uncheck box to disable the Alarms. When enabled, enter the setpoint between 0-999999 cycles

**Default:** ENABLED and set at 100000 cycles

#### Heater Time Alarm

**Purpose:** Generates an alarm if the Heater ON time reaches or exceeds the count setting. This serves as a method to perform preventative maintenance on the Heaters before a failure is likely to occur.

**Procedure:** Adjust the Contactor Alarm setting to the desired value. Note that the Heater Time Alarm must be enabled in order to adjust the Heater Time Alarm setting. Uncheck box to disable the alarms. When enabled, enter the setpoint between 0-250000 Hrs.

**Default:** ENABLED and set at 100000 Hrs

### 8.2.3.2 Alarm Output

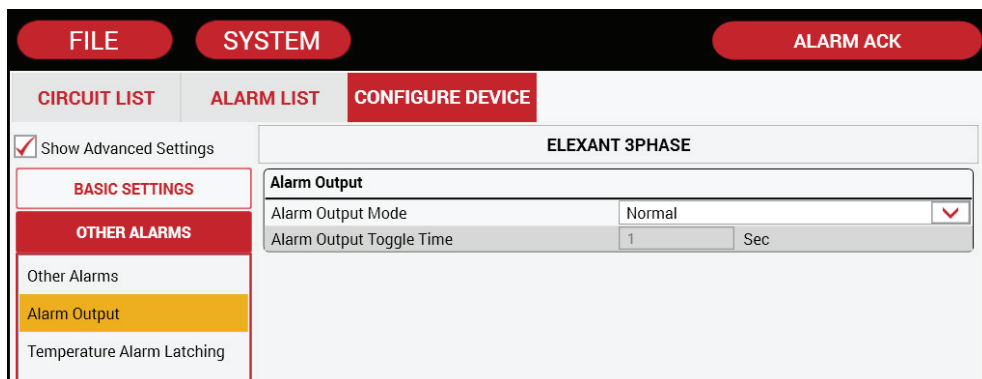


Figure 8.13 Configure Device | Alarm Output window

#### 8.2.3.2.1 Alarm Output

**Purpose:** To assign the output mode option for the Relay.

**Options:** Drop down list Normal Operation/Toggle/Flash

**Default:** Normal

#### Alarm Output – Alarm Output Toggle Time


**Procedure:** Data Entry is possible only when Toggle Mode is selected in the previous operation


**Options:** Enter the desired value using the keypad

**Range:** 1 to 240 seconds



### 8.2.3.3 Temperature Alarm Latching

 **Important:** If the application is subject to periodic situations where cold or hot product is part of the process, it may be appropriate to configure the NGC-20/ Elexant 5010i for non-latching temperature alarms to avoid nuisance alarms. If it is important to be aware of any temperature alarm conditions that may have existed in a pipe, then the control module should be configured for latching temperature alarms.

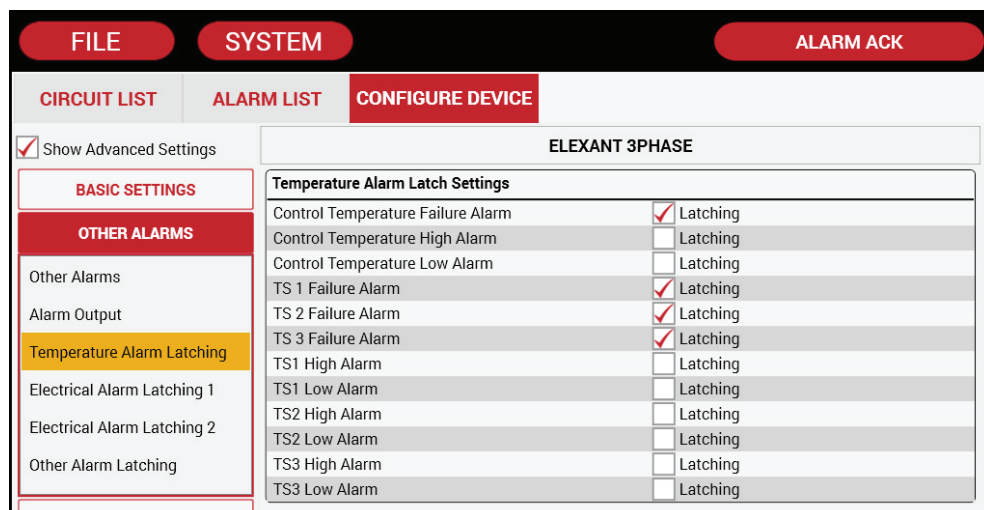


ELEXANT 3PHASE	
Temperature Alarm Latch Settings	
Control Temperature Failure Alarm	<input checked="" type="checkbox"/> Latching
Control Temperature High Alarm	<input type="checkbox"/> Latching
Control Temperature Low Alarm	<input type="checkbox"/> Latching
TS 1 Failure Alarm	<input checked="" type="checkbox"/> Latching
TS 2 Failure Alarm	<input checked="" type="checkbox"/> Latching
TS 3 Failure Alarm	<input checked="" type="checkbox"/> Latching
TS1 High Alarm	<input type="checkbox"/> Latching
TS1 Low Alarm	<input type="checkbox"/> Latching
TS2 High Alarm	<input type="checkbox"/> Latching
TS2 Low Alarm	<input type="checkbox"/> Latching
TS3 High Alarm	<input type="checkbox"/> Latching
TS3 Low Alarm	<input type="checkbox"/> Latching

Figure 8.14 Configure Device | Temperature Alarm Latching window

#### 8.2.3.3.1 Temperature Alarm Latch Settings

**Default:** Latching is ENABLED for all TS Failure alarms.

### 8.2.3.4 Electrical Alarm Latching 1

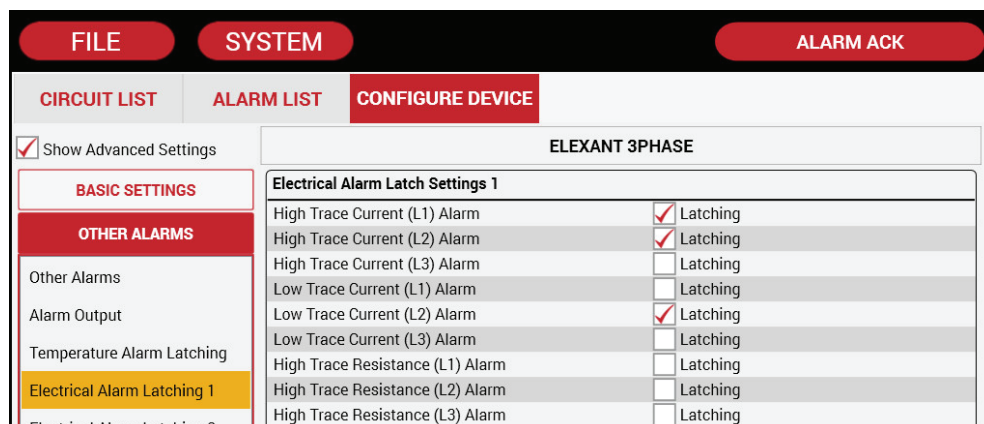

ELEXANT 3PHASE	
Electrical Alarm Latch Settings 1	
High Trace Current (L1) Alarm	<input checked="" type="checkbox"/> Latching
High Trace Current (L2) Alarm	<input checked="" type="checkbox"/> Latching
High Trace Current (L3) Alarm	<input type="checkbox"/> Latching
Low Trace Current (L1) Alarm	<input type="checkbox"/> Latching
Low Trace Current (L2) Alarm	<input checked="" type="checkbox"/> Latching
Low Trace Current (L3) Alarm	<input type="checkbox"/> Latching
High Trace Resistance (L1) Alarm	<input type="checkbox"/> Latching
High Trace Resistance (L2) Alarm	<input type="checkbox"/> Latching
High Trace Resistance (L3) Alarm	<input type="checkbox"/> Latching

Figure 8.15 Configure Device | Electrical Alarm Latching 1 window

#### 8.2.3.4.1 Electrical Alarm Latch Settings 1

**Default:** Latching is ENABLED for all High Trace current alarms, High Trace resistance alarms, and High Ground fault current alarm. If the Balanced 3 phase setting is disabled, the alarms for L2 and L3 will be also be disabled.

8.2.3.5 Electrical Alarm Latching 2

FILESYSTEMALARM ACK

CIRCUIT LISTALARM LISTCONFIGURE DEVICE

☒ Show Advanced Settings

BASIC SETTINGSOTHER ALARMS

Other AlarmsAlarm OutputTemperature Alarm LatchingElectrical Alarm Latching 1Electrical Alarm Latching 2Other Alarm Latching

ELECTRICALLIMITER

ELEXANT 3PHASE

Electrical Alarm Latch Settings 2

Output Limiting Alarm	<input type="checkbox"/> Latching
Circuit Breaker Limiting Alarm	<input type="checkbox"/> Latching
Switch Limiting Alarm	<input type="checkbox"/> Latching

Figure 8.16 Configure Device | Electrical Alarm Latching 2 window

8.2.3.5.1 Electrical Alarm Latch Settings 2

**Default:** Latching is NOT ENABLED for the limiting alarms.

8.2.3.6 Other Alarm Latching

FILESYSTEMALARM ACK

CIRCUIT LISTALARM LISTCONFIGURE DEVICE

☒ Show Advanced Settings

BASIC SETTINGSOTHER ALARMS

Other AlarmsAlarm OutputTemperature Alarm LatchingElectrical Alarm Latching 1Electrical Alarm Latching 2Other Alarm Latching

ELECTRICALLIMITERMISC

ELEXANT 3PHASE

Other Alarm Latch Settings

High Limit Cut-Out Alarm	<input type="checkbox"/> Latching
Low Limit Cutout Alarm	<input type="checkbox"/> Latching

Figure 8.17 Configure Device | Other Alarm Latching window

### 8.2.3.6.1 Other Alarm Latch Settings

**Default:** Latching is NOT ENABLED for both High and Low Limit cutout alarms.

## 8.2.3.7 Electrical

### 8.2.3.7.1 Voltage/Ground Fault

For Ground Fault Current and Trace Voltage settings of Elexant 4010i/ 4020i please refer Section 8.2.2.6

### 8.2.3.7.2 Trace Current

For Trace Current settings of Elexant 4010i/ 4020i please refer Section 8.2.2.5

### 8.2.3.7.3 Circuit Breaker/Output Switch

The screenshot shows the 'ELEXANT 3PHASE' configuration window with the 'CONFIGURE DEVICE' tab selected. On the left, a sidebar contains menu items: 'CIRCUIT LIST', 'ALARM LIST', 'CONFIGURE DEVICE' (highlighted), 'Show Advanced Settings' (checked), 'BASIC SETTINGS', 'OTHER ALARMS', 'ELECTRICAL' (highlighted), 'Voltage/Ground Fault', 'Trace Current', 'Circuit Breaker/Output Switch' (highlighted), 'Trace Resistance', and 'LIMITER'. The main area displays the 'Circuit Breaker and Output Switch Settings' for 'ELEXANT 3PHASE'. The settings are as follows:

Circuit Breaker and Output Switch Settings		
Heater Configuration	3-Phase WYE	
Output Limiting Alarm	<input type="checkbox"/> Enable	
Output Limit Mode (SSR)	<input checked="" type="checkbox"/> SAPC Current Limiting	
SAPC Power Limit Setpoint	45000	W
SAPC Current Limit Setpoint	10.0	A
Max Output Limit Percentage	100	%
Circuit Breaker Limiting Alarm	<input type="checkbox"/> Enable	
Circuit Breaker Type	NEMA	
Circuit Breaker Current Rating	30.0	A
Switch Limiting Alarm	<input type="checkbox"/> Enable	
Switch Current Rating	20.0	A

Figure 8.18 Configure Device | Circuit Breaker/Output Switch window

## Heater Configuration

**Purpose:** Set the electrical heat-tracing configuration as installed in the field.

**Options:** Single-phase, 3-phase WYE, 3-phase DELTA

**Procedure:** Select the desired setting from the drop down options. Note the Single-phase option is reserved for Elexant 4010i/ 4020i for single phase heaters.

## Output Limiting Alarm

**Purpose:** Alarms current levels which are higher than the High Trace Current Alarm Setpoint. This alarm can be user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Procedure:** Check box to enable the alarms

**Default:** DISABLED

## Output Limit Mode

**Purpose:** This user selectable mode limits the maximum amount of power applied to a heating circuit. This is an average power calculated by the control module using the average current and applied voltage. The control module switches the output on and off rapidly to limit the average current to an appropriate level. The maximum power level may be adjusted to eliminate step-down transformers, lower the effective output wattage of a cable, or implement energy management of the heating circuit. Grayed out for when switch mode is Contactor or Analog SSR.

**Options:** Disable Limiting, Power Limiting, Current Limiting, %

**Procedure:** Select the desired setting from the drop down options

SAPC Power Limit Setpoint: Active Only When Switch Mode Is SSR

**Purpose:** This user selectable level limits the maximum amount of power applied to a heat-trace circuit. This is an average power calculated by the controller using the average current and the fixed voltage setting. The HTC switches the output on and off rapidly

to limit the average current to an appropriate level. The maximum power level may be adjusted to eliminate step-down transformers, lower the effective output wattage of a cable, or implement energy management of the heat trace circuit.

**Range:** 1 to 45000 Watts (with Current Turns ratio of 1:1 and Voltage turns ratio of 1:1)

**NOTE 1:** This function may be set within reasonable limits for the particular tracer being powered. The effective resolution of the setting is limited to 1/30th of the calculated full on power.


**NOTE 2:** Do not set the SAPC power limit setpoint below full output for applications that do not require control of power.

#### **SAPC Current Limit Setpoint: Active Only When Switch Mode is SSR**

**Purpose:** This user selectable level limits the maximum amount of current applied to a heat-trace circuit. The HTC switches the output on and off rapidly to limit the average current to an appropriate level.

**Procedure:** Enter the value at which the High Current Alarm will go off.

**Default:** 100 A (with Current Turns ratio of 1:1)

 **Important:** As the 4010i/ 4020i automatically protects itself from overload, it would normally not be necessary to enable this alarm. It can be used effectively to guard against accidental paralleling of heating circuits. In-rush, or cold start currents typically associated with self-regulating cables may cause nuisance High Current Alarms. If this is undesirable this alarm should be disabled.

Max Output Limit Percentage: Active Only When Switch Mode is SSR


**Purpose:** This user selectable level limits the maximum amount of power applied to a heat-trace circuit to a percentage of the maximum that are applied to the circuit for the current settings.

**Procedure:** Enter the desired value.

**Default:** 100 %

#### **Circuit Breaker Limiting Alarm**

**Purpose:** This alarm will only inform the user that switch limiting is currently active and an excessively high current condition is present. The Elexant 4010i/ 4020i will pulse its output switch for a small interval and read the resulting current. If the measured current exceeds the Switch Current Rating setting, then the duty-cycle of its output switch will be varied so that an average current not exceeding the Switch Current Rating setting is maintained.

 **Important:** This alarm should normally be left enabled. Currents in this range cannot be considered normal and should be investigated. This alarm can be user selectable to be latching or non-latching. If set to non-latching, the controller will automatically clear the alarm when the condition no longer exists. If set to latching, the alarm must be cleared by the user.

**Default:** DISABLE

Circuit Breaker Current Rating: Set the current to the desired value within the CB limits.

Switch Limiting Alarms: Check box to enable the alarms.


**Default:** DISABLED

#### **Switch Current Rating**

**Purpose:** This feature is used to provide protection for the output switch. Enabling this alarm will only inform the user of an excessively high current condition and that the output switch has been latched off. During a high current condition, the control module attempts to soft start a heating cable using a technique involving measured in-rush current and the switch current rating. If the control module is unable to start the cable, it will eventually trip the output switch off and will not retry or pulse its output switch again.

**Procedure:** Adjust the Switch Current Rating setting to the actual current rating of the SSR. Note that the Overcurrent Trip Alarm does not have to be enabled in order to adjust the switch current rating setting. The current setting is grayed out when SSR is selected.

**Default:** Set at 30.0 A

 **Important:** This function may be set within reasonable limits for the particular tracer being powered. The effective resolution of the setting is limited to 1/30th of the calculated full on power. Do not set the maximum power level below the full output level for applications that do not require power limiting.

#### **Circuit Breaker Type**

**Procedure:** Select options from drop down list with options, NEMA, TYPE B, TYPE C, TYPE D

**Default:** NEMA

#### 8.2.3.7.4 Trace Resistance

ELEXANT W/LIMITER					
Trace Resistance (L1)					
Name	Alarm	Setpoint		Filter	
High Alarm	<input checked="" type="checkbox"/> Enable	50	%	0	S
Low Alarm	<input checked="" type="checkbox"/> Enable	50	%	0	S
Nominal Tracing Resistance		6.00	Ohm		

Figure 8.19 Configure Device | Trace Resistance window

##### 8.2.3.7.4.1 Trace Resistance Alarm Settings

###### High Alarm

**Purpose:** Alarms trace resistance levels which have increased from the nominal resistance setting by more than the High Tracing Resistance Deviation setting. The High Resistance Alarm may be used to indicate an open or a high resistance connection or, when using constant wattage parallel cables, may indicate the failure of one or more heating zones. It may also be used to monitor a failed series-type cable or connection in 3-phase applications while minimizing nuisance alarms created by voltage fluctuations.

**Procedure:** Check box to enable the alarms. When enabled, enter the Setpoint between 1 to 250%. If required set Filter in the range 0 to 28 seconds.

**Default:** DISABLED



**Important:** High Resistance Alarms will only be generated if the output switch is on.

###### Low Alarm

**Purpose:** Alarms heater resistance levels which have decreased from the nominal resistance setting by more than the Low Tracing Resistance Deviation setting.

**Procedure:** Check box to enable the alarms. When enabled, enter the Setpoint between 1 to 100 %. If required set Filter in the range 0 to 28 seconds.

**Default:** DISABLED

##### 8.2.3.7.4.2 Nominal Tracing Resistance

**Purpose:** This parameter defines the nominal expected heater resistance. A value must be entered by the user to allow the High and Low Tracing Resistance Alarms to be used. Once the controller and the heating cable have been installed, the following procedure should be used to determine the nominal resistance setting.

**Procedure:** Adjust the Control Setpoint temperature to turn on the output switch. Allow the load to come up to design temperature and its power consumption to stabilize. Monitor the resistance reading and record its value. Return the Control Temperature Setpoint temperature to its proper setting. Enter the recorded resistance value as the nominal resistance setting.

**Range:** Value between 1.0 to 3000 Ohms as per design calculations.

Balance 3 Phase

**Purpose:** This setting is for Elexant 4010i/ 4020i controllers for three phase heaters. If Balanced 3 Phase is enabled, the controller will automatically update any 3 phased settings to use the settings from the 1st phase (L1). If the Balanced 3 Phase is disabled, the settings for each phase can be different.

**Procedure:** Touch the check box to enable or disable Balanced 3 Phase

**Options:** ENABLE or DISABLE

**Default:** ENABLE

### 8.2.3.8 Safety Temperature Limiter

The Elexant 4010i/ 4020i Controllers are available in various models. A model that comes with a Safety Temperature Limiter is available. The Elexant 4010i/ 4020i controller with Safety Temperature Limiter uses temperature data to TRIP the HT circuit thereby providing protection against over-heating of heating cables. If the measured temperature exceeds the user defined trip setting, then the Limiter TRIP circuit will open the output relay. The unit remains tripped until it is manually reset. Resetting the unit will only be possible after the normal operating conditions have returned to a safe level.

This section explains configuring of the Limiter circuit equipped in the Elexant 4010i/ 4020i model with Safety Temperature limiter. Users with Elexant 4010i/ 4020i models without Safety Temperature Limiter should skip this section.

The screenshot shows the 'CONFIGURE DEVICE' window for an 'ELEXANT W/LIMITER'. On the left is a sidebar with tabs: 'CIRCUIT LIST', 'ALARM LIST', and 'CONFIGURE DEVICE' (selected). Below these are sub-tabs: 'Show Advanced Settings' (checked), 'BASIC SETTINGS', 'OTHER ALARMS', 'ELECTRICAL', 'LIMITER' (selected), and 'MISC'. Under 'LIMITER', the 'Safety Temperature Limiter' is highlighted. The main area displays the following settings:

ELEXANT W/LIMITER	
<b>Safety Temperature Limiter</b>	
Tag	Elexant 4010i/4020i-TSLIM-000032
Intelligent Limiting	<input checked="" type="checkbox"/> Enable
Trip Alarm	<input checked="" type="checkbox"/> Enable
Failure Alarm	<input checked="" type="checkbox"/> Enable
Setpoint	69 °C
Firmware Version	1.0.426.7935

Figure 8.20 Configure Device | Safety Temperature Limiter window

#### Tag

**Purpose:** A 40-character tag may be assigned to the Safety Temperature Limiter to allow it to be easily associated with a pipe, vessel, process, circuit, drawing name, number etc.

**Range:** Alpha-numeric characters.

**Procedure:** Click on the Tag Entry and an alpha numerical keyboard will drop down for data entry.

**Default:** Elexant 4010i/ 4020i

#### Intelligent Limiting

**Purpose:** Under some conditions, such as when pipes are steam cleaned, the temperature exceeding the limiter cutout setpoint does not indicate a malfunction. The user has the option of letting the limiter reconnect the output automatically upon return to a safe temperature level, under the condition that the main output is turned off for the entire duration of the unsafe temperature level.

**Options:** ENABLE/DISABLE

**Procedure:** Check Box to Disable

**Default:** ENABLED

#### Trip Alarm

**Purpose:** Enabling the trip alarm will provide an indication of a trip on account of high temperature as per Figure 8.20.

**Options:** ENABLE/DISABLE

**Procedure:** Check Box to Disable

**Default:** ENABLED

#### Failure Alarm

**Purpose:** Enabling the Communication Failure Alarm will provide an indication of a Communication loss between the controller and the Safety Temperature Limiter

**Options:** ENABLE/DISABLE

**Procedure:** Check box to disable

**Default:** ENABLED

General – Safety Temp Limiter Trip Setpoint

**Purpose:** The lock out temperature (setpoint) of the safety temperature limiter must be set in such a way that maximum T-class temperature cannot be exceeded. The surface temperature of the heat-tracing cables is limited to the temperature applicable in this T class -5 K for temperatures below or equal to 200°C or -10 K for temperatures greater than 200°C.

**Options:** Data entry via the dropdown keypad

**Procedure:** Enter the desired temperature and click Apply. A pop up dialogue box will appear with instructions. Press the Set Config button on the SLIM within 60 seconds to record the new entry.

**Default:** Previous data

Firmware Version

**Purpose:** Identifies the current Safety Temperature Limiter firmware version

**Procedure:** N/A

8.2.3.9 Miscellaneous

FILESYSTEMALARM ACK

CIRCUIT LISTALARM LISTCONFIGURE DEVICE

☒ Show Advanced Settings

BASIC SETTINGS

OTHER ALARMS

ELECTRICAL

LIMITER

MISC

Load Shedding

Digital Input/Auto-Cycle

Device Information

ELEXANT W/LIMITER

Load Shedding

Load Shedding	<input type="checkbox"/>	Enable
Load Shedding Fail-safe Enable	<input type="checkbox"/>	Enable
Broadcast Timeout	60	Second(s)
Zone 1	<input type="checkbox"/>	Enable
Zone 2	<input type="checkbox"/>	Enable
Zone 3	<input type="checkbox"/>	Enable
Zone 4	<input type="checkbox"/>	Enable
Zone 5	<input type="checkbox"/>	Enable
Zone 6	<input type="checkbox"/>	Enable
Zone 7	<input type="checkbox"/>	Enable
Zone 8	<input type="checkbox"/>	Enable

MONITOR

APPLY

CANCEL

BACK

NEXT

Figure 8.21 Configure Device | Load Shedding window

### 8.2.3.9.1 Load Shedding

Load Shedding settings for Elexant 4010i/ 4020i Controllers are detailed under Section 5.4.1.

### 8.2.3.9.2 Digital Input/Auto Cycle

The screenshot shows the 'Configure Device' window for an 'ELEXANT W/LIMITER'. The interface includes a top navigation bar with 'FILE', 'SYSTEM', and 'ALARM ACK' buttons. Below this, there are tabs for 'CIRCUIT LIST', 'ALARM LIST', and 'CONFIGURE DEVICE'. The 'CONFIGURE DEVICE' tab is selected, displaying settings for 'Digital Input' and 'Auto-Cycle'. The 'Digital Input' section has a dropdown menu currently set to 'Not Used'. The 'Auto-Cycle' section features a checked 'Enable' checkbox and an 'Auto-Cycle Interval' set to 8 hours. A sidebar on the left contains a 'Show Advanced Settings' checkbox and a list of menu items: 'BASIC SETTINGS', 'OTHER ALARMS', 'ELECTRICAL', 'LIMITER', and 'MISC'. Under the 'MISC' category, 'Load Shedding', 'Digital Input/Auto-Cycle' (which is highlighted), and 'Device Information' are listed.

Figure 8.22 Configure Device | Digital Input/Auto-Cycle window

#### 8.2.3.9.2.1 Digital Input

**Purpose:** The digital input offers the option to alarm or override the electrical heat-tracing mode from an external device. The digital input can be configured in different ways. These are:

- None: no action taken
- Alarm when input is closed
- Alarm when input is open
- Force Off when input is closed
- Force Off when input is open
- Force On when input is closed
- Force On when input is open
- Hand/Off/Auto

**Default:** None

Digital Input Source: When selections other than 'Not used' is made, the drop down list will enable selection of appropriate input source.

#### 8.2.3.9.2.2 Auto Cycle

**Purpose:** The auto-cycle function momentarily (approximately 10 seconds) applies power to the heating circuit at the selected interval. It is used to test the integrity of the heating circuit. Alarms present at the time of auto-cycle then become latched and remain active after the completion of the auto-cycle function. Auto-cycling effectively eliminates the need for preventive maintenance by automatically verifying the integrity of the heating circuit. Auto-Cycle Interval is the number of hours/minutes between successive heating circuit integrity tests depending on the Auto-Cycle Units specified

##### Auto Cycle Interval

**Range:** 0 to 750 Hours

**Procedure:** Using the pop up keypad enter the desired value. The function is disabled when 0 is entered

**Default:** 8 hours



8.2.3.10 Device Information

FILESYSTEMALARM ACK

CIRCUIT LISTALARM LISTCONFIGURE DEVICE

☒ Show Advanced Settings

BASIC SETTINGSOTHER ALARMS ELECTRICALLIMITER MISC

Load Shedding

Digital Input/Auto-Cycle

Device Information

ELEXANT W/LIMITER

Device Information

Device Type	4010i/4020i (4010i/4020i-LIM)
Address	10
Firmware Version	1.2.313
Serial Number	32

LOAD DEFAULT PROFILELOAD PROCESS PROFILELOAD AMBIENT PROFILE

LOAD USER PROFILE #1SAVE USER PROFILE #1

LOAD USER PROFILE #2SAVE USER PROFILE #2

MONITOR

APPLY

CANCEL

BACK

NEXT

Figure 8.23 Configure Device | Device Information window

**Purpose:** Allows the user to review the Device Information of Elexant 4010i/ 4020i which are read only parameters. Device Type, Firmware Version and Serial Number are factory configured and cannot be changed.

Load Configuration Profiles

**Purpose:** A set of default settings are stored in the Elexant 4010i/ 4020i Controller. In addition, users can save custom configuration settings that can be loaded into the Elexant 4010i/ 4020i at a later time. When one of the Load profile button is clicked, all user input data will be erased and the device will be set to the settings of the selected profile.

RAYCHEM-IM-H58682-NGC40Touch1500-EN-2504

chemelex.com | 123

## SECTION 9 – FILE & SYSTEM MENU

This section describes the system settings and utilities to configure the Touch 1500 to communicate with other devices, security control, and data backup/restore.

### 9.1 File Menu | Backup | Restore Database, Export Event Log & Exit Program

#### 9.1.1 File – Back up Database

**Purpose:** The TOUCH1500 offers the option to make a backup of the device and settings database to a USB connected flash drive

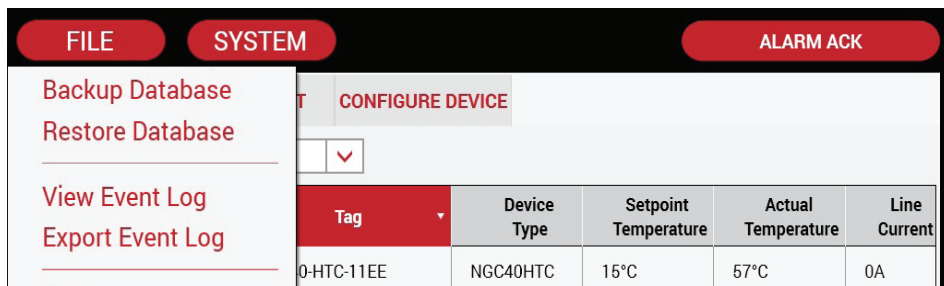


Figure 9.1 File | Backup Database menu

**Procedure:** Ensure that a Flash Drive is available in the USB slot. Select File Menu and click on the dropdown menu button Backup Database. Enter drive letter & file name and click OK.

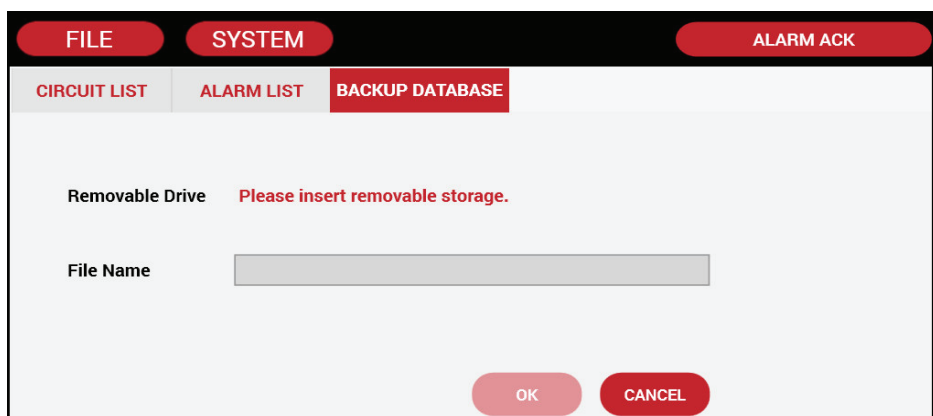


Figure 9.2 File | Backup Database window

#### 9.1.2 File – Restore Database

**Purpose:** To restore the previously backed up database to the TOUCH1500

**Procedure:** Ensure that a Flash Drive is available in the USB slot. Select File Menu and Click on the dropdown menu button Restore Database. Enter drive letter & file name and click OK

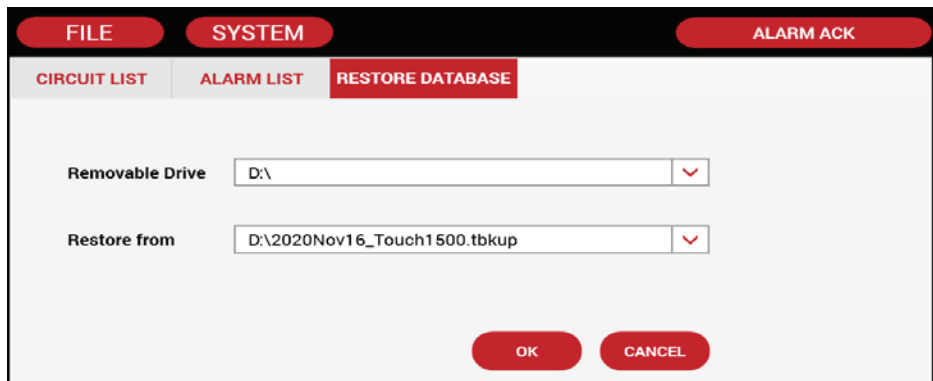


Figure 9.3 File | Restore Database window

9.1.3 File – Export Event Log

**Purpose:** To export the event Log such that it can be viewed remotely

**Procedure:** Ensure that a Flash Drive is available in the USB slot. Select File Menu and click on the dropdown menu button Export Event Log. Enter drive letter & file name and click OK.

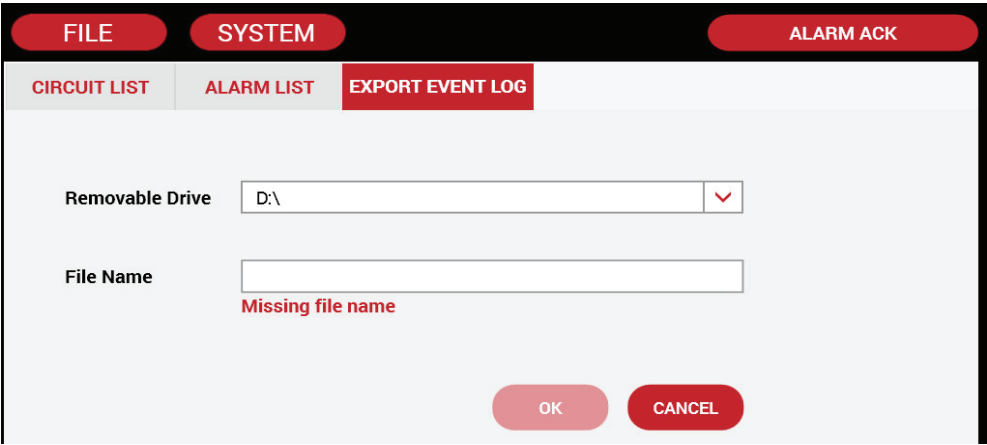


Figure 9.4 File | Export Event Log window

9.1.4 File – Exit Program

**Purpose:** To exit the Touch 1500 software.

**Procedure:** Click on Exit to exit the program.

9.2 System Settings

9.2.1 System | Device Manager Settings

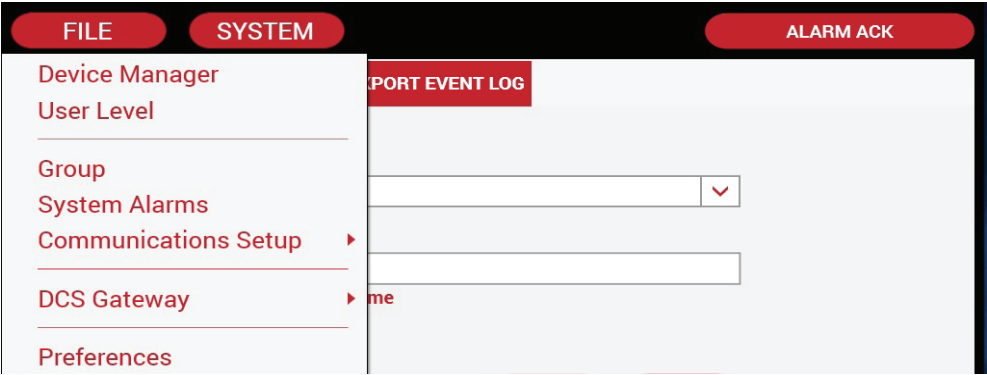


Figure 9.5 System | Device Manager menu

**Procedure:** Refer to Section 4.2 Configuration of NGC-40-BRIDGE Modules, Section 4.3 Configuration of NGC-40 HTC Modules, Section 4.4 Configuration of NGC-40 HTC3 Modules, Section 5.7 Configuration of the NGC-40 I/O Module, and Section 6.1 for NGC-20/ Elexant 5010i Controllers

## 9.2.2 System | User Level settings

The screenshot shows a software interface with a top navigation bar containing three red buttons: 'FILE', 'SYSTEM', and 'ALARM ACK'. Below this, a sub-menu bar has three tabs: 'CIRCUIT LIST', 'ALARM LIST', and 'SECURITY LEVEL SELECTION', with the latter being the active tab. The main content area is light gray and contains a 'Please select' label above a list of four radio button options: '1 - Monitor Only', '2 - Alarms ACK and RESET', '3 - Configuration', and '4 - Admin'. The '4 - Admin' option is selected, indicated by a red dot. Below the list is a 'Password' label and a text input field containing the text 'Not required'. At the bottom of the window, there are four red buttons: 'CHANGE PASSWORD', 'SET DEFAULT LEVEL', 'OK', and 'CANCEL'.

Figure 9.5a System | User Level | Security Level Selection window

### Security Level selection

The Security Level selection window allows the user to access the security level and assign passwords for all levels.

The security levels are

4. Monitor Only – Allows the user to monitor all parameters, export event log, change preferences and has access to the user level option to enable the other users to make changes. This option does not allow user to exit the program.
5. Alarms Ack & Reset. – Allows all of the above plus options to acknowledge & reset alarms.
6. Configuration – This level allows the user to all options except to change passwords and exit the program.
7. Admin – All options are enabled at this level.

**Change Password:** Change password

**Purpose:** To set password for Level 1 to 4

**Procedure:** Click Change Password button which will bring up the window as shown below. Select the Security Level from the dropdown list. Options are security level 1, 2, 3, 4. Enter Old Password (blank for a new system) followed by the new password. Confirm new password and click OK to save and exit. Repeat these steps for all levels.

FILE SYSTEM ALARM ACK

CIRCUIT LIST ALARM LIST CHANGE PASSWORD

Security level 1 ▼

Old Password

New Password

Confirm Password

OK CANCEL

Figure 9.6 System | User Level | Change Password window

**Set Default Level:** The admin user can set the default level at which the Touch 1500 Program will operate on start up.

FILE SYSTEM ALARM ACK

CIRCUIT LIST ALARM LIST SECURITY LEVEL SELECTION

Please select

- ☐ 1 - Monitor Only
- ☐ 2 - Alarms ACK and RESET
- ☐ 3 - Configuration
- ☒ 4 - Admin

Password Not required

CHANGE PASSWORD SET DEFAULT LEVEL

OK CANCEL

Figure 9.7 System | User Level | Security Level Selection window

9.2.3 System | Group settings

**Purpose:** To create a GROUP so that devices in a particular area, process etc. can be viewed together.

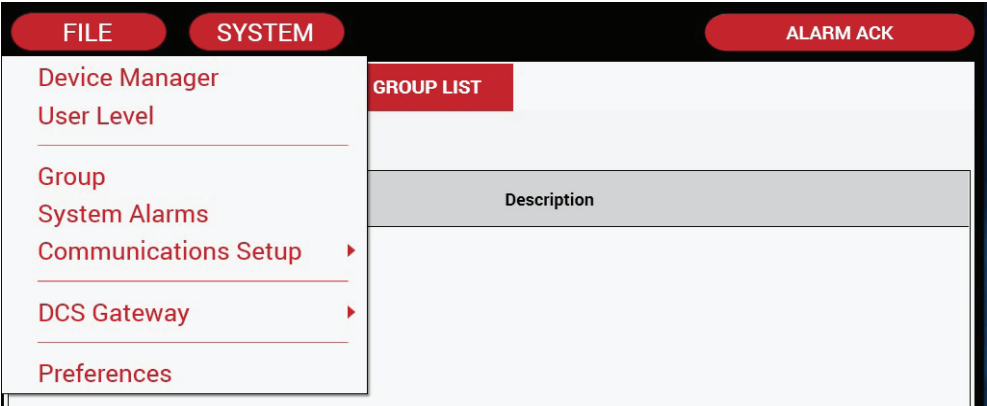


Figure 9.8 System | Group menu

**Procedure:** From the drop down menu, select System | Group and enter name and description. Create as many groups as needed and when done click OK to continue.

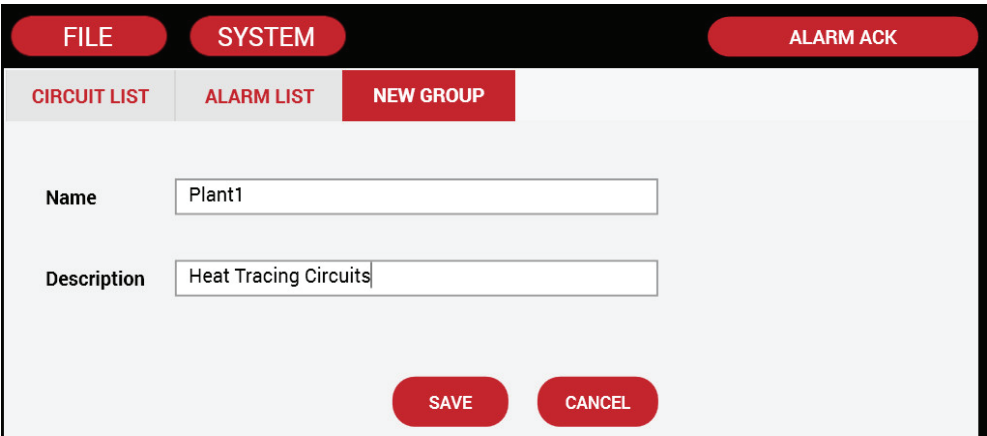


Figure 9.9 System | Group | New Group window

On the next window, select the Group and click on the desired option from the drop down buttons.

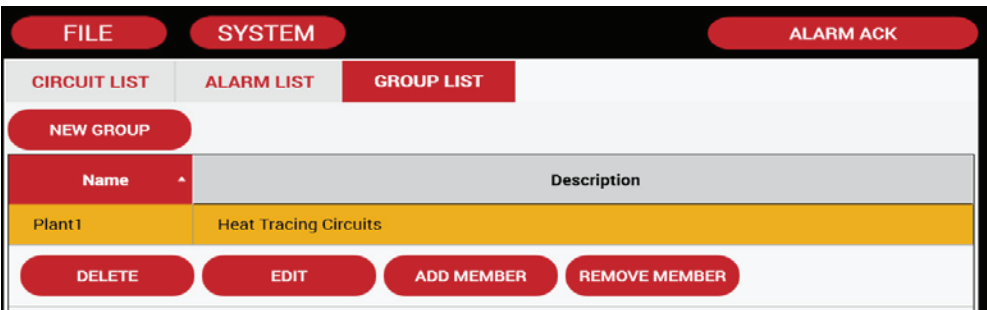


Figure 9.10 System | Group | Group List window

The Delete button on the dropdown menu allows the user to delete the selected group

The Edit button allows editing the group name & description.

**Procedure:** Click on the Edit button and make the necessary changes in the window below and click Save.

**FILE** **SYSTEM** **ALARM ACK**

**CIRCUIT LIST** **ALARM LIST** **EDIT GROUP**

Name: Plant 1

Description: Heat Tracing Circuits

**SAVE** **CANCEL**

Figure 9.11 System | Group | Group List | Edit Group window

The Add Group Member button allows the heat-tracing circuits to be added into the selected group.

**Procedure:** Check the boxes against individual circuits or check Select All to include all circuits in that group.

**FILE** **SYSTEM** **ALARM ACK**

**CIRCUIT LIST** **ALARM LIST** **ADD GROUP MEMBER - Plant 1**

To be Added	Tag	Type	Port	Address
<input type="checkbox"/>	NGC40-HTC-11EE	NGC40HTC	COM2	4590
<input checked="" type="checkbox"/>	NGC40-HTC3-1132	NGC40HTC3	COM2	4402
<input type="checkbox"/>	NGC20-3E93	NGC20	COM2	3
<input type="checkbox"/>	DEFAULT TAG [17]	RMM-DI	COM2	17
<input type="checkbox"/>	DEFAULT TAG [19]	RMM-DI	COM2	19
<input type="checkbox"/>	DEFAULT TAG [22]	RMM-DI	COM2	22

Figure 9.12 System | Group | Group List | Add Member window

The Remove Group Member button allows the Heat Tracing circuits to be removed from the group.

**Procedure:** Check the boxes on the subsequent window to remove the circuits in that group or check Select All to remove all circuits.

**FILE** **SYSTEM** **ALARM ACK**

**CIRCUIT LIST** **ALARM LIST** **REMOVE GROUP MEMBER - Plant 1**

To be Removed	Tag	Type	Port	Address
<input checked="" type="checkbox"/>	NGC40-HTC3-1132	NGC40HTC3	COM2	4402

Figure 9.13 System | Group | Group List | Remove Member window

### 9.3 System | SYSTEM Alarm Settings

**Purpose:** To indicate alarm from either the Touch 1500 or from other control panels connected to the Touch 1500.

**Procedure:** From the drop down menu, select System | System Alarms

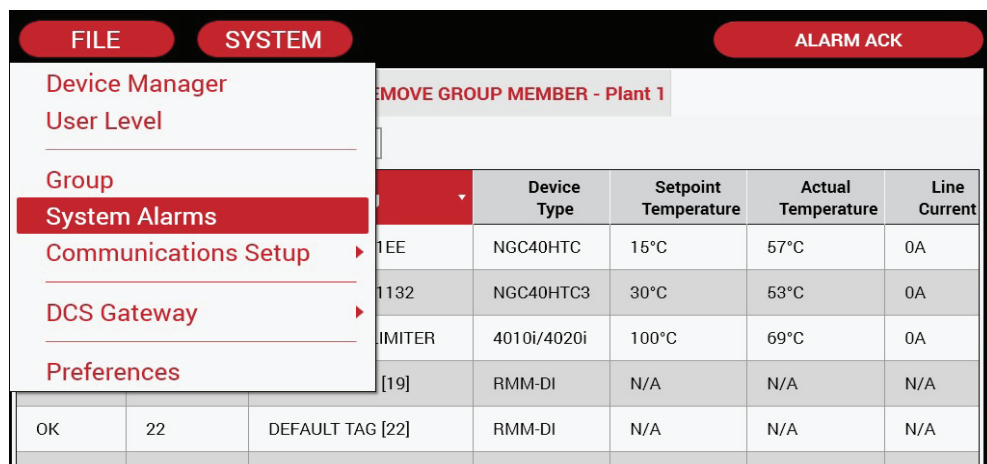


Figure 9.14 System | System Alarms window

Enter the Modbus address of the External ADAM Module connected to the Touch 1500 and select the relay from the drop down list. Check Normally Open/Closed options. By default the alarms are set to turn off when the same is acknowledged on the Touch Window. Uncheck to disable this option. Clicking on Test button will activate the relay and the alarm.

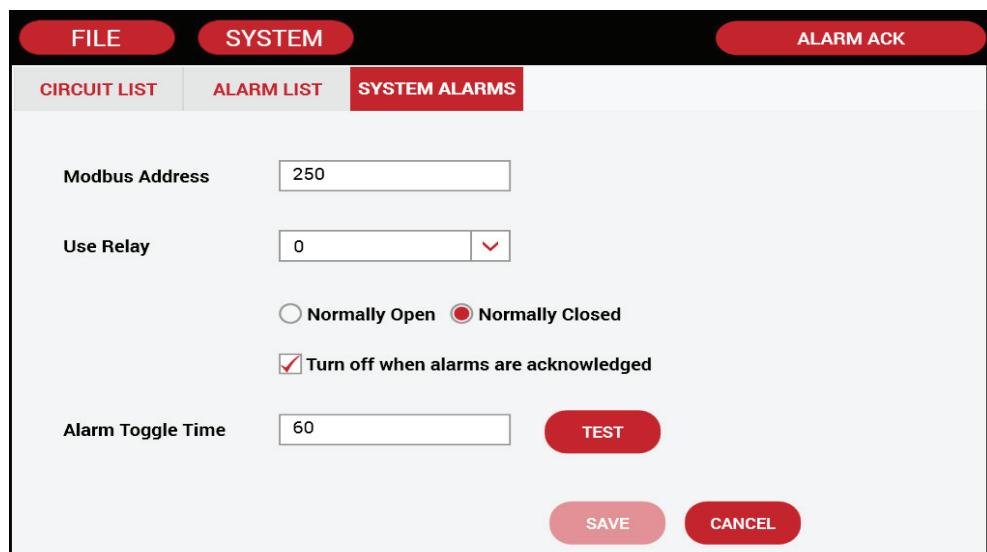


Figure 9.15 System | System Alarms window



9.4 System | Communication Settings

**Purpose:** To set the Serial port and other settings so that the Touch 1500 can communicate with the Bridge and other devices

**Procedure:** Please refer to Section 4.2.2 Communication Ports – Serial (COM Ports 1, 2 & 3) and Ethernet on page 27.

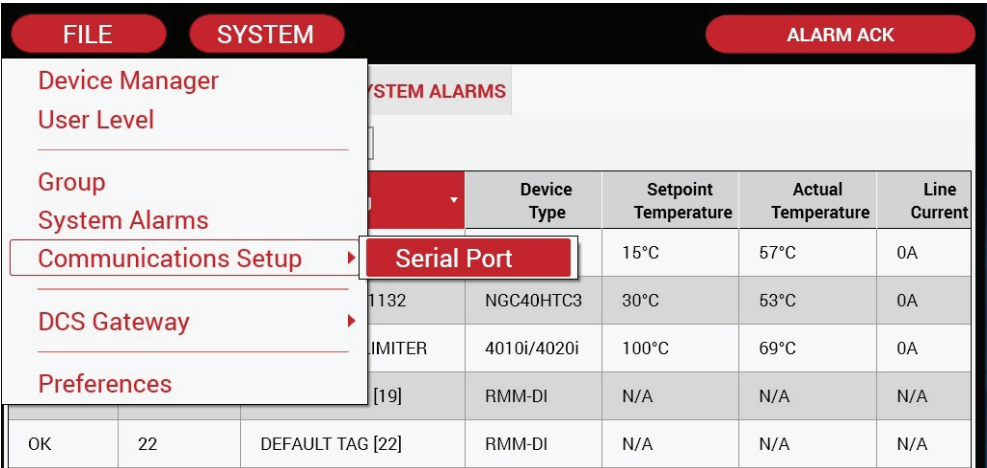


Figure 9.16 System | Communication Setup Serial Port menu

9.5 System | Preferences

**Purpose:** To set the Language, Temperature Units, User activity timeout & Time/Date

**Procedure:** Please refer to Section 4.1.7 Configuration of System Preferences on page 25.

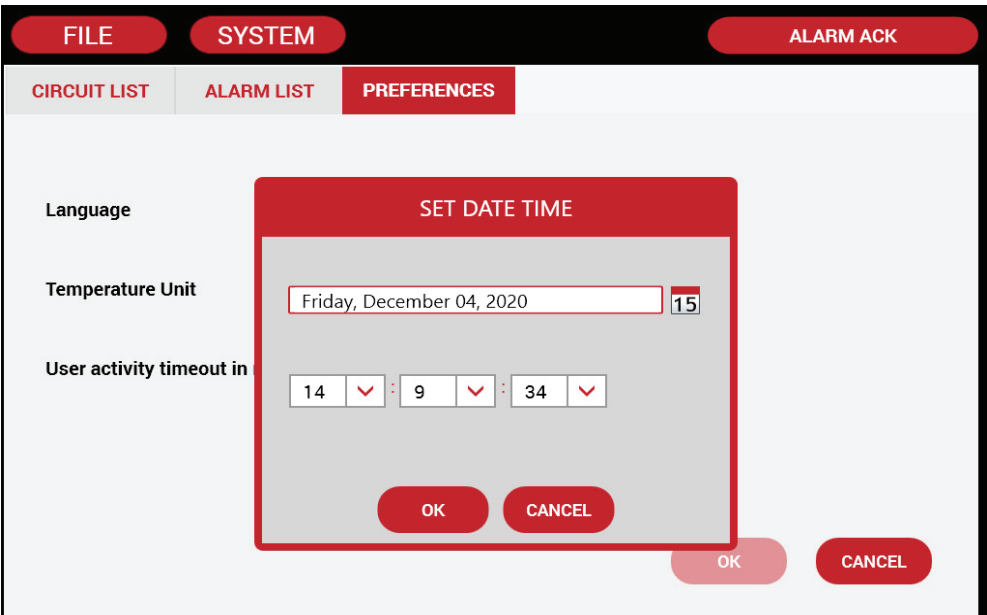


Figure 9.17 System | Preference window

## 9.5.1 Operations

The default window is shown below. Individual circuits can be accessed by selecting the same and clicking on the Overview button.

Status	Address	Tag	Device Type	Setpoint Temperature	Actual Temperature	I Ct
OK	0011EE	NGC40-HTC-11EE	NGC40HTC	15°C	57°C	0A

Figure 9.18 Circuit List window (default window)

## 9.5.2 Circuit Overview of HTC

**Purpose:** To get an overview of the heat-tracing circuit which brings up all the parameters and also make the following minor changes directly on this page;

8. Control Temperature Setpoint
9. Low Alarm Setpoint
10. High Alarm Setpoint
11. Ground-Fault Trip Setpoint
12. Ground-Fault High Alarm
13. Line Current Low Alarm Setpoint

**Procedure:** As explained under Section 3.

CAN Network ID: 11EE Version: 4.8.42  
Device Type: NGC40HTC Alarm(s): 0

NGC40-HTC-11EE

**Controller Status**

Heater Status: Off Control Mode: On/Off SSR  
Control Status: Heat-Tracing is off due to fault condition Deadband: 3 °C  
Safety Temperature Limiter Status: Limiter Tripped Temperature: 0 °C

**Control Temperature**

Actual Value: 57 °C Setpoint: 15 °C High Alarm: 200 °C Low Alarm: 5 °C

**Ground Fault Current**

Actual Value: 0 mA Trip Setpoint: 30 mA High Alarm: 20 mA Highest Measured Value: 0 mA

**Line Currents**

Actual Value: 0.0 A High Alarm: 30.0 A Low Alarm: 0.3 A Power Consumption: 0.0 W

Figure 9.19 Circuit List | Circuit Overview window

**Test Heater:** The Test Heater feature provides an easy method of temporarily overriding the temperature control, without having to modify the Control Temperature Setpoint or any other configuration parameter. The function will force the output switch on for the specified interval. After the test time has expired, the HTC will automatically revert back to normal operation.

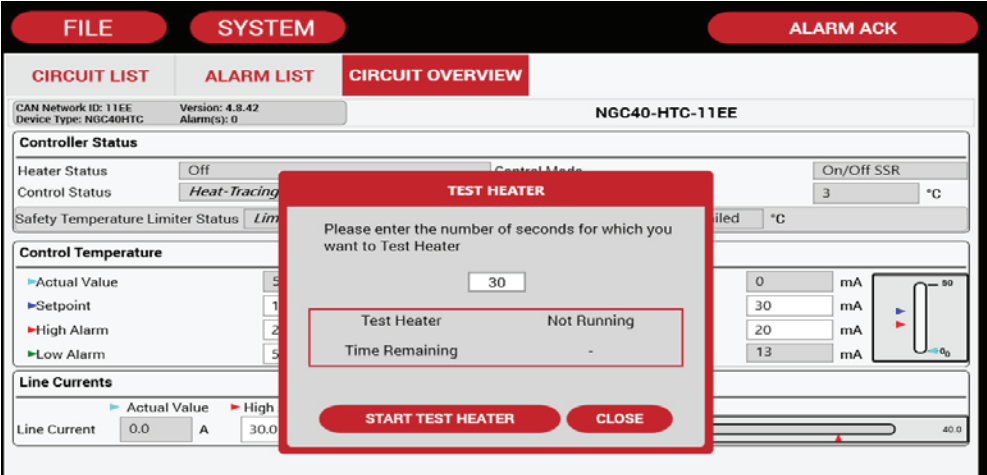


Figure 9.20 Circuit Overview Test Heater window

**Important:** This feature only overrides temperature control, it does not override other control parameters such as power limiting.

**Config:** On clicking the Config button, the user will be directed to the Configuration menu as explained under Section 3.

**Monitor:** On clicking the Config button, the user will be directed a sequence of windows showing various parameters

**Monitor Device – Monitor Data – Control temperature:** The default Monitor window shows Control Temp and other Temp settings and readings.

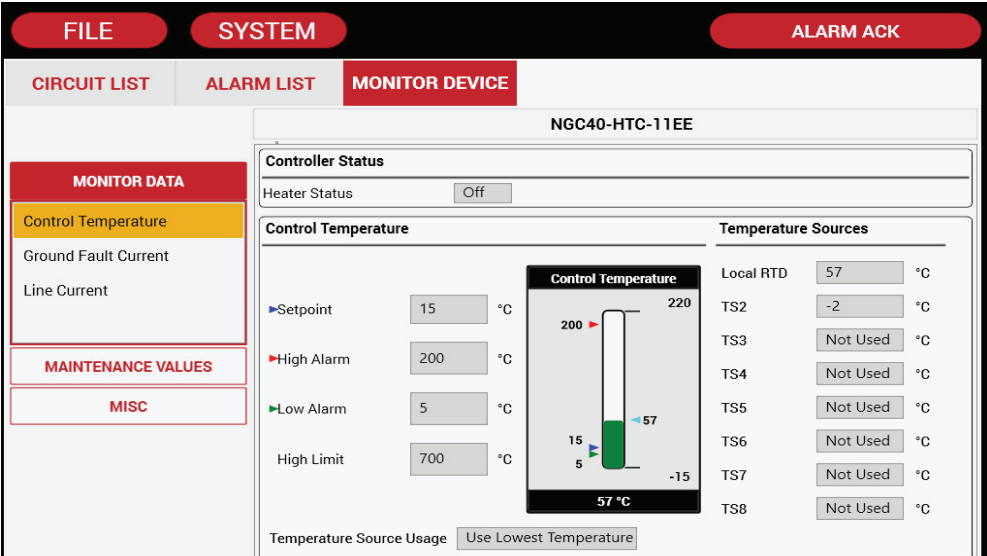


Figure 9.21 Monitor Device | Control Temperature window

**Monitor Device – Monitor Data – Ground-Fault Current:** This selection allows the user to monitor GF settings and current levels.

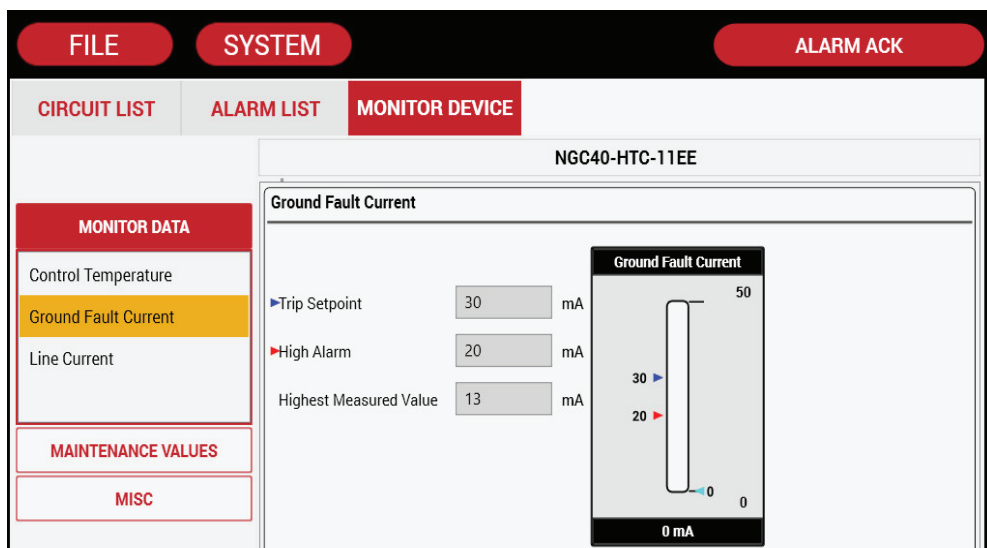


Figure 9.22 Monitor Device | Ground-fault Current window

**Monitor Device – Monitor Data – Line Current:** This selection allows the user to monitor Line Current Settings and current levels.

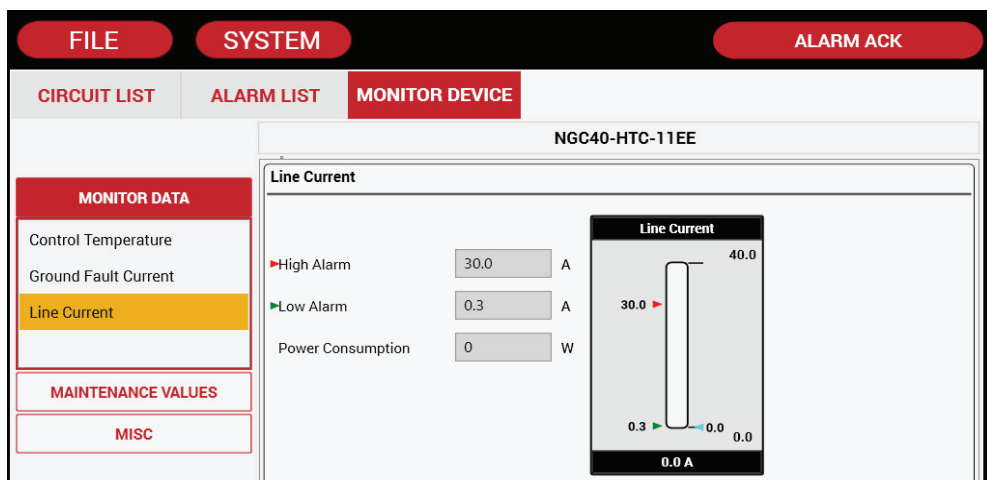


Figure 9.23 Circuit List | Monitor Device | Line Current window

### 9.5.3 Monitor Device – Maintenance Values 1

#### Maintenance Information 1

Power Accumulator

**Purpose:** This feature indicates the total power consumption of the heat-tracing circuit since the last time the Power Accumulator was reset. It may be useful to log the amount of power consumed on a particular heat-tracing circuit for the purposes of energy management or gathering of data for future design criteria. The value of this accumulator is written to the controller's non-volatile memory once every 24 hours or whenever any maintenance data is reset by the user.

#### Heater On Time


**Purpose:** Represents the number of hours that the trace has spent energized

**Procedure:** The In Use hours accumulator can be reset to zero using Reset Maintenance Information.

## Contactactor Cycle Count

**Purpose:** This feature indicates the total number of off-to-on transitions an EMR has done since the last time the Contactactor Cycle Counter was reset. This serves as a method to do preventative maintenance on the EMR according to the manufacturer's specifications. This count value is written to the controller's non-volatile memory once every 24 hours or whenever any maintenance data is reset by the user.

 **Important:** Once the Contactactor Cycle Counter reaches 999,999,999 it will stop counting.

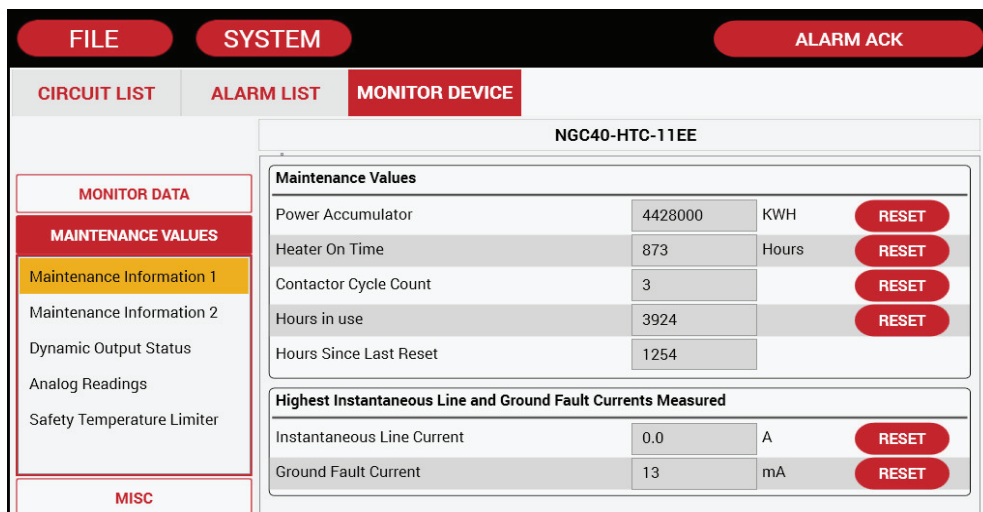

NGC40-HTC-11EE			
<b>Maintenance Values</b>			
Power Accumulator	4428000	KWH	RESET
Heater On Time	873	Hours	RESET
Contactactor Cycle Count	3		RESET
Hours in use	3924		RESET
Hours Since Last Reset	1254		
<b>Highest Instantaneous Line and Ground Fault Currents Measured</b>			
Instantaneous Line Current	0.0	A	RESET
Ground Fault Current	13	mA	RESET

Figure 9.24 Monitor Device | Maintenance Information window

## Number of Hours In

**Purpose:** The purpose of this feature is to indicate the total hours of use of the controller since its initial operation. It may be useful to log the amount of time a particular controller has been in operation for the purposes of maintenance planning or reliability testing. The value of this accumulator is written to the controller's non-volatile memory once every 24 hours or whenever any maintenance data is reset by the user.

**Procedure:** The In Use hours accumulator can be reset to zero using the Reset Hours in Use button.

## Number of Hours Since Last Reset

**Purpose:** This feature indicates the total hours of use of the controller since the last reset. It may be useful to log the amount of time a particular controller has been in operation since the last time the controller's power was cycled for trouble-shooting purposes.

**Procedure:** The Time Since Last Reset hours accumulator can only be reset by cycling the controller's power.

## Highest Instantaneous Line Current Measured

**Purpose:** This feature indicates the highest instantaneous load current measured since the last time the Peak Line Current was reset. This value is written to the controller's non-volatile memory once every 24 hours or whenever any maintenance data is reset by the user.

**Procedure:** The highest Instantaneous Line Current Measured can be reset via the Reset Line Current button.

## Highest Instantaneous Ground Fault Ever Measured

**Purpose:** This feature indicates the highest instantaneous ground-fault current measured since the last time the Peak Ground-Fault Current was reset. This current value is written to the controller's non-volatile memory once every 24 hours or whenever any maintenance data is reset by the user.

**Procedure:** The highest Instantaneous Ground Fault Ever Measured can be reset via the Reset Ground-Fault Current button.

## 9.5.4 Monitor Device – Maintenance Values 2

### Maintenance Information 2

**Purpose:** This feature indicates the maximum and minimum temperatures ever recorded by the HTC since the last time the values were reset. It may be useful to log the maximum/minimum temperatures ever experienced on a particular trace circuit for the purposes of trouble shooting or gathering data for future design criteria. The temperature values are written to the controller's non-volatile memory once every 24 hours or whenever any maintenance data is reset by the user. Max/min temperatures are recorded for the local RTD and Control Temperatures. Temperature measurements can be reset via the buttons on the window.

Maximum/Minimum Temperatures		
Control Temperature Maximum	292	°C
Control Temperature Minimum	37	°C
Local Temperature Maximum	293	°C
Local Temperature Minimum	37	°C

Figure 9.25 Monitor Device | Maintenance Information 2 window

## 9.5.5 Monitor Device – Maintenance Values - Dynamic Output

### Dynamic Output Status

**Control Output Duty Cycle:** 0 to 100% 0 = Full Off, 100 = Full On

**Switch Status:** The current state of the trace switch

### PASC Values

**PASC On Count:** The number of seconds of on-time during the currently calculated PASC cycle

**PASC Off Count:** The number of seconds of off-time during the currently calculated PASC cycle

**PASC Next Switch Action:** The number of seconds until the next switch-state change.

Output Status		
Control Output Duty Cycle	0	%
Switch Status	Off	

PASC Values		
On Count	0	S
Off Count	0	S
Next Switch Action	0	S

Figure 9.26 Monitor Device | Dynamic Output Status window

## 9.5.6 Analogue Readings

NGC40-HTC-11EE		
<b>Last On Measured Values</b>		
Control Temperature	62	°C
Ground Fault Current	0	mA
Instantaneous Line Current	0.0	A
Effective Line Current	0.0	A
<b>Electrical</b>		
Voltage	120	V
Frequency	60	Hertz
Heating Cable Resistance	Open	Ohm

Figure 9.27 Monitor Device | Analog Readings window

### Last On Measured Values

#### Control Temperature

**Purpose:** This is the temperature that the controller uses to determine whether its output switch should be on or off. It is derived from a combination of the 8 configurable temperature sources.

#### Ground-Fault Current in milliamps.

**Line Current:** This is the instantaneous current (equals full Line Current) in A.

**Effective Line Current:** This is the effective current (equals full Line Current multiplied by the output duty cycle) in A.

### Monitor Device – Maintenance Values

#### Safety Temperature Limiter

**Purpose:** This option provides information on the Safety Temperature Limiter settings, the present Temperature values and the status of the Safety Temperature Limiter. If the Status reads Tripped, then the limiter can be reset by clicking on the Reset Tripped Safety Temperature Limiter button.

NGC40-HTC-11EE		
<b>Safety Temperature Limiter Information</b>		
Tag	NGC40-SLIM-EEF4F4	
Firmware Version	3.8.14	
Serial Number	EEF4F4	
Controller CANID	11EE	
<b>Safety Temperature Limiter Values</b>		
Safety Temperature Limiter Temperature	Failed	°C
Safety Temperature Limiter Trip Setpoint	85	°C
Safety Temperature Limiter Status	Limiter Tripped	<b>RESET</b>

Figure 9.28 Monitor Device | Safety Temperature Limiter window

**Procedure:** Click on Reset Tripped Safety Temperature Limiter button and a dialogue box will appear as below. On selecting Yes, another dialogue box will provide an unique 3 digit number (this number is dynamic and will change on subsequent tries/operations). Enter the number using the dropdown keypad and click OK to reset the limiter.



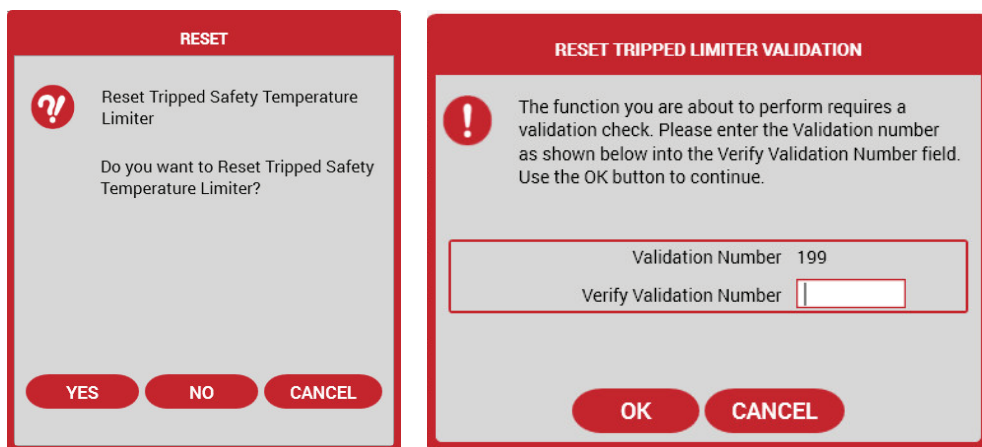


Figure 9.29 Monitor Device | Safety Trip Limiter Reset Limiter window

## 9.5.7 Monitor Device – Maintenance Values

### Device Information

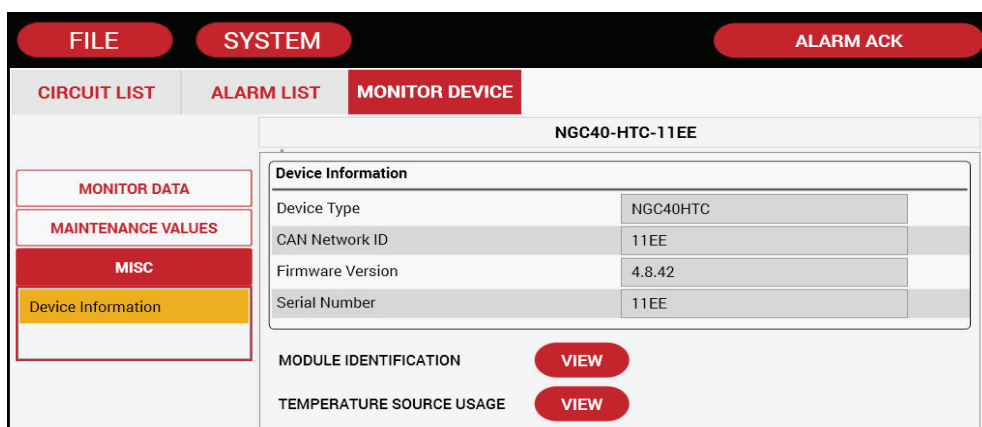


Figure 9.30 Monitor Device – Miscellaneous window

**Purpose:** To provide details of the device, identify the same in HT panel and to look up the temperature source usage

**Procedure:** Click on Module Identification button and select the test duration from the pop up menu. Options are 1 to 5 minutes. Click Start and observe the modules inside the panel. The LEDs on the appropriate module will flash. This will help identify the module. Once identified either wait to complete the identification process or Click Stop to stop the same.

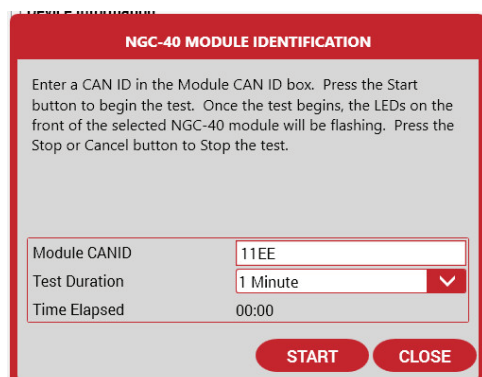


Figure 9.31 Monitor Device | Miscellaneous – Module Identification window



**Procedure:** Click on Temperature Source Usage button to bring up the window which will show the Temperature Sensor Source Usage. If an RTD is connected to the HTC, it will always show up as Source 1.

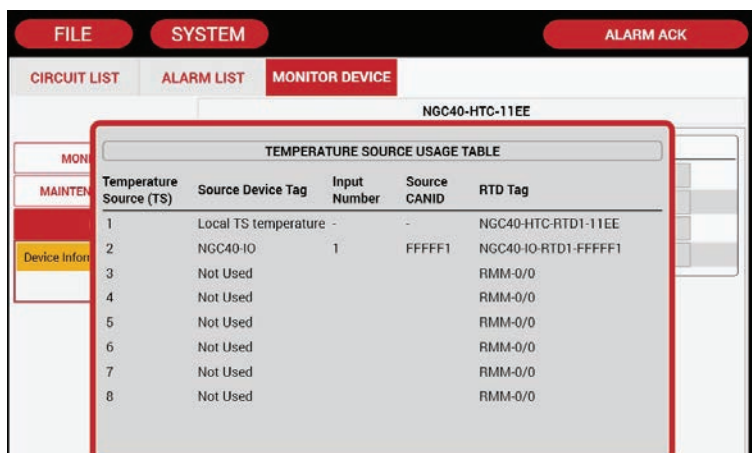


Figure 9.32 Monitor Device | Miscellaneous – Temperature Source Usage window

### 9.5.8 Circuit Overview of HTC3

**Purpose:** To get an overview of the heat-tracing circuit which brings up all the parameters and also make the following minor changes directly on this page the information is TYP to single phase HTC except for Line Current

**Line Currents:** Low Alarm Setpoint for Phase 1 (Line 1), 2, 3

**Procedure:** Click on the values to be changed and input new values as explained under Section 3.

**Test Heater:** Follow the procedures as described for the NGC-40-HTC module.

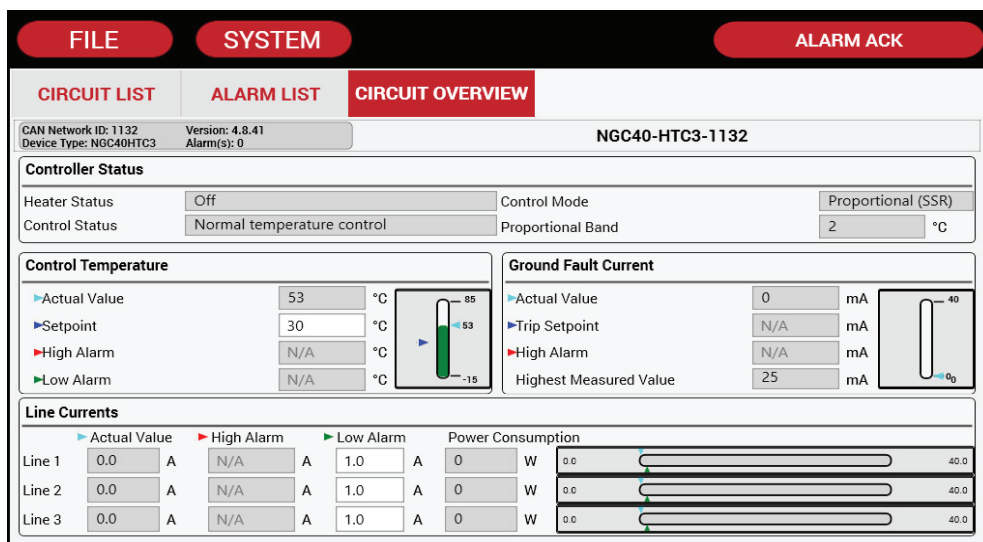


Figure 9.33 Circuit List | Current Overview window for HTC3

**Config:** On clicking the Config button, the user will be directed to the Configuration menu as explained under Section 3.

**Monitor:** On clicking the Monitor button, the user will be directed a sequence of windows showing various parameters

**Monitor Device – Monitor Data – Control temperature:** The default Monitor window shows Control Temp and other Temp settings and readings TYP to Single phase HTC, Figure 9.33.

**Monitor Device – Monitor Data – Ground-Fault Current:** This selection allows the user to monitor GF settings and current levels TYP to Single phase HTC, Figure 9.33.

**Monitor Device – Monitor Data – Line Current:** This selection allows the user to monitor Line Current settings and current levels of all the three phases, Figure 9.33 and 9.34.

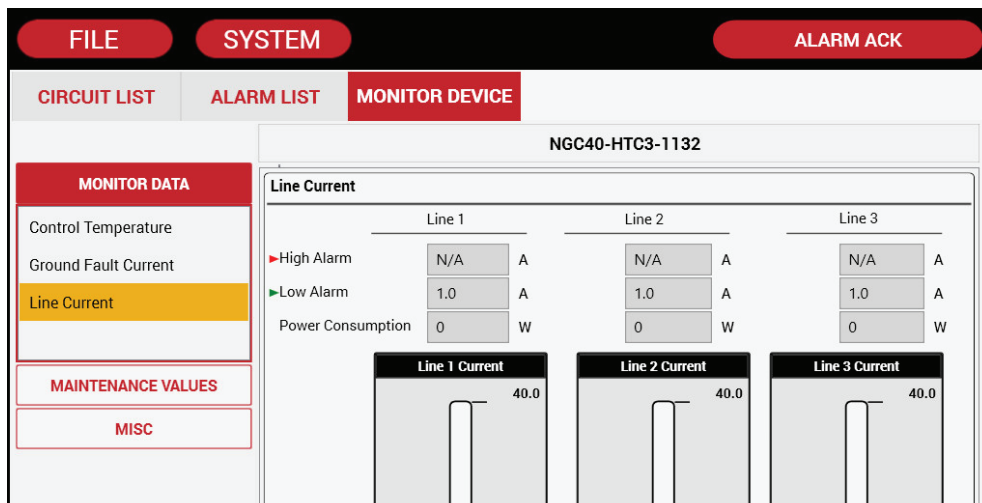


Figure 9.34 Monitor Device | Line Current window for HTC3

## 9.5.9 Monitor Device – Maintenance Values 1

### Maintenance information 1

#### Line 1, 2, 3 Power Accumulator

**Purpose:** This feature indicates the total power consumption of the trace circuit since the last time the Power Accumulator was reset. It may be useful to log the amount of power consumed on a particular trace circuit for the purposes of energy management or gathering of data for future design criteria. The value of this accumulator is written to the controller's non-volatile memory once every 24 hours or whenever any maintenance data is reset by the user.

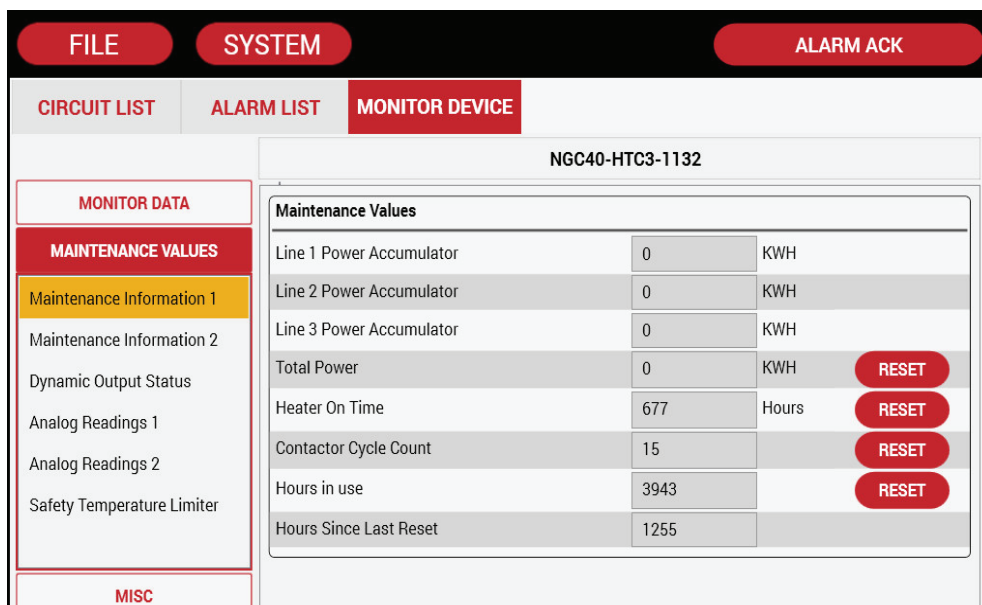


Figure 9.35 Monitor Device | Maintenance Information 1 for HTC3

## 9.6 System | DCS Gateway

The DCS Gateway option if enabled in the Touch 1500 will allow remote data access of Heat Trace Circuit information for upstream devices such as DCS system and other systems that can communicate with the Touch 1500 using the Modbus communication protocol. For more information on how to setup and enable the DCS Gateway in the Touch 1500, please see Section – 9 Remote Data Access With the DCS Gateway.

## SECTION 10 – REMOTE DATA ACCESS WITH THE DCS GATEWAY

The DCS Gateway was introduced in Raychem Touch 1500 version 2.2. It is a feature that must be enabled before it can be used. If there is a need for remote data access of Heat Trace information directly from the Touch 1500 system, the DCS Gateway in the Touch system provides this capability. This section explains what the DCS Gateway is, how to set it up and how to use it for every day operation. For more detail information of the DCS Gateway, please see Appendix C DCS Gateway.

### 10.1 Overview

Remote Data Access (RDA) can be used to link one or more central control systems for continuous monitoring, control and data acquisition. For example in many industrial applications, devices such as PLC(s), remote IO(s), Sensors, Actuators, etc. are continuously being monitored and controlled via SCADA and DCS Systems. With the addition of the DCS Gateway functionality in the Touch 1500, Chemelex Heat Trace systems can now be an integral part of the overall control systems in the plant.

In order to setup the Touch 1500 with the DCS Gateway functionality enabled for remote data access, some knowledge of the overall system architecture is beneficial. An example would be how the Touch 1500, the NGC heat trace systems and the DCS systems are connected together. In addition there are a specific set of instructions that must be followed to make everything work together. This is described in more detail in Section 10.2 General Work Flow Required for Setup and Operation. The rest of this section explains how to setup and use the DCS Gateway. For details on the overall system architecture, please see Appendix C.2 System Architecture.

### 10.2 General Work Flow Required for Setup and Operations

In order to take full advantage of the remote data access capability provided by the DCS Gateway, please follow the work flow presented in this section.

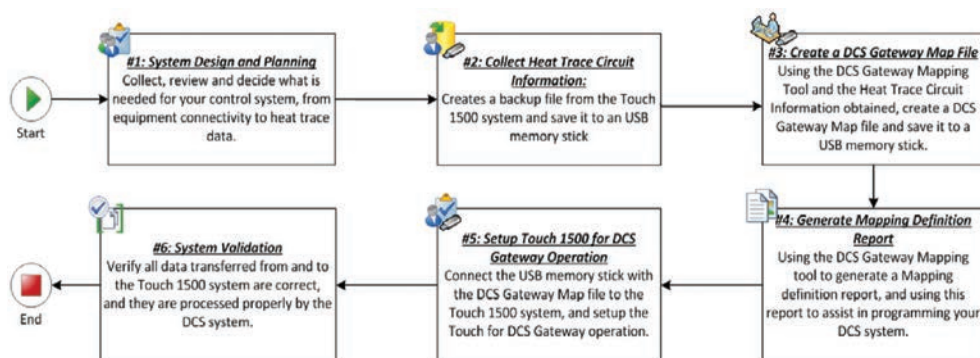


Figure 10.1 Work Flow for Touch 1500 Setup with DCS Gateway Operations

Step	Name	Description
1	System Design and Planning	It is generally a good idea to do some preplanning before the start of any project. This step is to collect, review and decide on what is needed for your control system, from equipment connectivity to heat trace circuit data requirements.
2	Collect Heat Trace Circuit Information	In most cases it is simpler to obtain the heat trace circuit information from the database in the Touch 1500 system. This information is necessary for the creation of the DCS Gateway Map file. A DCS Gateway Map file is a file that contains mapping definitions. Each Mapping definition associates a Modbus register or coil to a parameter/field of a Heat Trace controller (i.e. control setpoint, or control temperature, or High Current alarm for circuit with tag Id LINE2A_CIRCUIT). The circuit tag Id is used to associate the device and it must be correct in order for the DCS Gateway to locate the circuit in the system. In addition, the DCS system that will be remotely accessing the heat trace information must know about this mapping definition.
3	Create a DCS Gateway Map File	A separate tool named DCS Gateway Mapping Tool is used to create the customized DCS Gateway Map file. The Heat trace circuit information obtained in Step #2 will be used to help to define the mapping definitions.
4	Generate Mapping Definition Report	With the DCS Gateway Mapping Tool the DCS Gateway Map report will be generated. With the mapping definitions in the report the connection in DCS System can be created.

Step	Name	Description
5	Setup Touch 1500 for DCS Gateway Operation	With the DCS Gateway Map File created in Step #3, Touch 1500 communication can be setup and enables the DCS Gateway for operation.
6	System Validation	The final step is to perform data validation to ensure everything is working as expected. The data for the DCS Gateway needs to be reviewed and verified that it's correctly processed for both reading and writing from and to the Touch 1500.

### 10.3 Creating the DCS Gateway Map File

A DCS Gateway Map file is needed to setup and enable the DCS Gateway for operation. A DCS Gateway Map File is a file containing the mapping definitions of Heat Trace circuit data and their Modbus register/coil assignments. A Heat Trace circuit data is the name to identify a particular field/parameter for a circuit/device. For example, if the DCS System requires read/write access to the Control Setpoint of a Circuit with the tag 'LINE2A\_CIRCUIT', a Heat Trace Circuit data that include this information needs to be created, followed by assigning the heat trace circuit data to a Modbus register; for example to holding register starting at address 40001. In a typical DCS Gateway Map file, there will be many of these mapping definitions. In order to make the task of creating and editing the mapping definitions as simple as possible, the DCS Gateway Mapping Tool has been created for that purpose. Please contact your Chemelex representative for more information. For more information on mapping definitions see Appendix C.2 DCS Gateway Map.

### 10.4 Setting up the DCS Gateway for Operation

The DCS Gateway is disabled by default and must be enabled to be in operation. Users that DO NOT require the DCS Gateway functionality please skip this section. This section explains how to setup and enable the DCS Gateway for operation. Before starting the setup, ensure a DCS Gateway Map file is available. For more information on creating a DCS Gateway Map File, please see section 10.3 Creating the DCS Gateway Map File.

#### 10.4.1 Setting up the DCS Gateway

Go to System | DCS Gateway | Load Gateway File

For the very first time, the DCS Gateway Map field will be blank and the Gateway Enabled is default to No, as shown below:

Figure 10.2 Load Gateway File screen

DCS Gateway Map

**Purpose:** A DCS Gateway Map is required in order for the DCS Gateway to be in operation. A DCS Gateway Map needs to be created with the DCS Gateway Mapping Tool as describes in section 10.2 Creating DCS Gateway Map File. A DCS Gateway Map holds the mapping definitions of the Modbus data register/coil associated with the Heat Tracing circuit data of the Touch 1500 system.

**Procedure:** This field displays the current DCS Gateway Map File used by the DCS Gateway. This field is read only. In order to select or change the DCS Gateway Map File, use the Browse button located to the right of this field (i.e. See Section 10.3.2 Selecting and Viewing a DCS Gateway Map File). When finished, touch the OK button to save the settings.

**Default:** Blank for the very first time or the current DCS Gateway Map File the next time around.

Gateway Enabled

**Purpose:** This field is used to enable or disable the DCS Gateway. If the DCS Gateway functionality is not required set this to No. If the DCS Gateway functionality is required, then set this to Yes.

**Note:** More computer memory and processing power is required to run the DCS Gateway. If the DCS Gateway function is not required in the control application, leave the setting as default.

**Procedure:** Touch any part of the Gateway Enable selection area. A drop down list displaying Yes and No appears. Make the selection. When finished, touch the OK button to save the settings. Please note the DCS Gateway Map field must NOT be blank otherwise the OK button will not be not accessible.

**Default:** No.

#### 10.4.2 Selecting and Viewing a DCS Gateway Map File

This section describes how to select or view a DCS Gateway Map File.

Go to System | DCS Gateway | Load Gateway File

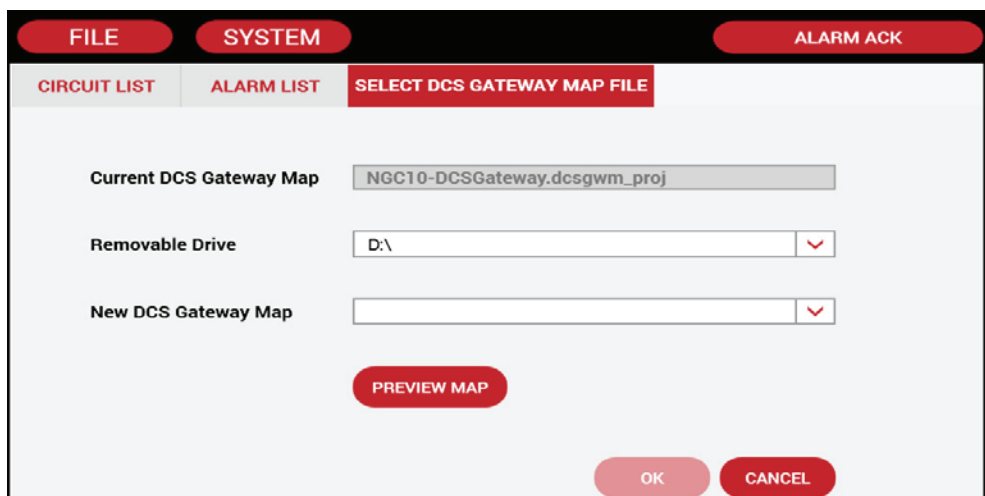


Figure 10.3 Select DCS Gateway Map File screen

**Purpose:** The Select DCS Gateway Map File screen allows the user to select a DCS Gateway Map to be used by the DCS Gateway, or to select a different DCS Gateway Map to use.

**Procedure:** Ensure that a Flash Drive is available in the USB slot. Select System menu and click on the dropdown menu button DCS Gateway. The Load Gateway File screen will appear. On the Load Gateway File screen touch the Browse button to bring up the Select DCS Gateway Map File screen. Select a removable drive then select the DCS Gateway Map file. Click OK to save. This will return you to the Load Gateway File screen with the selected DCS Gateway Map file displayed in the DCS Gateway Map field.

Preview Map Button

**Purpose:** To view the contents of a DCS Gateway Map File.

**Procedure:** The 1st step is to select a DCS Gateway map file to view. Then touch the Preview Map button to display the contents of the selected DCS Gateway Map file. The Preview DCS Gateway Map screen has 2 tabs, a General and Map Region tab. The General tab displays the name and description of the selected DCS Gateway map file. The Map Region tab displays map region information for 1 map region. To view a different Map Region, touch the Name field to select a different Map Region. If there are errors with a Map Region, it will be highlighted in Red text. The actual error message will be displayed on the screen after this map region is selected.

PREVIEW DCS GATEWAY MAP

GENERAL

MAP REGION

Name

FC0de1

Description

Function Code

1 [Output Coil]

Device Type

4010i/4020i

Starting Address

1

Mapping Type

By Devices

Device List

Tag	Parent Tag	Type
NGC10_ThreePhase		4010i/402
NGC10_SinglePhaseLimiter		4010i/402
NGC10_SinglePhase		4010i/402

Data Point List

Description	Group
Circuit Breaker Limiting Alarm	Alarm
Contactor Cycle Count Alarm	Alarm
Control Temperature Failure Alarm	Alarm
Control Temperature High Alarm	Alarm
Control Temperature Low Alarm	Alarm
Device Reset Alarm	Alarm
ExtInputAlarm	Alarm
Factory Configuration Data Lost Alarm	Alarm
GFI Current Transformer Failure Alarm	Alarm

CANCEL

Figure 10.4 Preview DCS Gateway Map

PREVIEW DCS GATEWAY MAP

GENERAL

MAP REGION

Name

FC03\_Test\_Region\_8

Description

fc03 test region 8 with ng

Function Code

3 [Holding Register]

Device Type

NGC40HTC

Starting Address

1

Mapping Type

By Devices

Device List

Tag	Parent Tag	Type	Address
-----	------------	------	---------

Data Point List

Description	Group
-------------	-------

Figure 10.5 Map region with Errors



### 10.4.3 Creating a DCS Gateway Port

A DCS Gateway Port provides the communication channel required for communications between the DCS Gateway and the DCS System. A DCS Gateway Port will make use of a communication port such as COM1, COM2, COMxx or a TCP/IP connection on the Touch 1500. If it is necessary to add more communication ports or TCP/IP connections to the Touch unit, a USB hub can be used which allows for more USB to Serial or USB to Ethernet devices to be connected. The maximum number of DCS Gateway Ports supported by the DCS Gateway is 3. There must be at least 1 DCS Gateway port created in the Touch 1500 system before any remote data access is possible.

Go to System | DCS Gateway | Communications Setup

For the very first time, the screen will show an empty list of DCS Gateway Ports. See below:

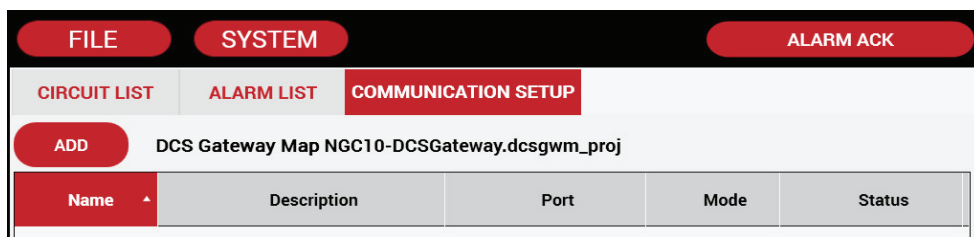


Figure 10.6 DCS Gateway Communication Setup screen

Touch the Add button to bring up the New DCS Gateway Port screen. If you are creating a DCS Gateway port that will use RS-485 communication please see section 10.3.3.1 Communication via Serial RS-485 or RS-232. If you are creating a DCS Gateway Port that will use TCP/IP communication, please see section 10.3.3.2 Communication via Ethernet TCP/IP.

Figure 10.7 New DCS Gateway Port using Serial connection

#### 10.4.3.1 Communication via Serial RS-485 or RS-232

For communications with a DCS system, a DCS Gateway Port can use a Serial COM port that is available on the Touch 1500. Note that Serial ports COM3 and COM4 are already used by the Touch 1500 therefore they are not available for selection.

##### Name

**Purpose:** Up to a 50 character name can be assigned to a DCS Gateway Port. The name is used for identification purpose.

**Range:** Alpha-numeric characters

**Default:** Empty field

##### Description

**Purpose:** A 255 character description can be assigned to a DCS Gateway Port. The description can be used to provide more details about the DCS Gateway map file.

**Range:** Alpha-numeric characters  
**Default:** DCS Gateway port description

## Mode

**Purpose:** The Mode defines if a DCS Gateway port is enabled or disabled. The DCS Gateway Port is enabled if Run is selected, and is disabled if Stop is selected.

**Note:** If a DCS Gateway Port is disabled, a DCS system connected to this port will not be able to perform remote data access with the Touch 1500. If there is another DCS Gateway Port used and is in Run mode, all activities for this port continue to run.

**Options:** Stop or Run

**Default:** Stop

## Connection

**Purpose:** The connection defines the type of communication port used by the Gateway Port. This can either be a Serial port or TCP/IP. User can choose from a list of available serial port as well as TCP/IP.

**Options:** Available Serial ports (COM1, COM2, .etc.) or TCP/IP

**Default:** The first available port in the list.

## Baud Rate

**Purpose:** Defines the data rate at which communications occur on the serial communication port.

**Options:** 9600, 19200, 38400, 57600, 115200

**Default:** 9600

## Parity

**Purpose:** Defines the type of parity bit to be used on the serial communication port.

**Options:** None, Odd, Even

**Default:** None

## Stop Bits

**Purpose:** Defines the number of stop bits used on the serial communication port.

**Options:** 1 or 2

**Default:** 2

## Timeout

**Purpose:** The Timeout defines the maximum time in seconds the DCS Gateway Port will wait for a communication response before a communication timeout error is issued.

**Options:** 1, 2, 3, 4, 5, 6, 7, 8, 9, 10

**Default:** None

## RTU Address

**Purpose:** The RTU address defines the Modbus address for the DCS Gateway Port. The Modbus address identifies the DCS Gateway Port as a Modbus device on the Modbus network.

A DCS system can access the Gateway port remotely once it knows the DCS Gateway Port's Modbus address.

**Note:** On a Modbus network, the Modbus address of devices connected must be unique, otherwise communication errors and data lost will occur.

**Options:** 1 to 247

**Default:** 1



### 10.4.3.2 Communication via Ethernet TCP/IP

A DCS Gateway Port can use the TCP/IP connection available on the Touch 1500.

NEW DCS GATEWAY PORT	
Name	<input type="text"/>
	Missing gateway port name
Description	<input type="text" value="DCS Gateway port description"/>
Mode	<input type="text" value="Stop"/> ▼
Connection	<input type="text" value="TCP/IP"/> ▼
IP Address	<input type="text" value="10.79.1.199"/> ▼
Timeout	<input type="text" value="2"/> ▼
RTU Address	<input type="text" value="1"/> ▼

Figure 10.8 New DCS Gateway Port using TCP/IP connection

#### Name

**Purpose:** Up to a 50 character name can be assigned to a DCS Gateway Port. The name is used for identification purpose.

**Options:** Alpha-numeric characters

**Default:** Empty field

#### Description

**Purpose:** A 255 character description can be assigned to a DCS Gateway Port. The description can be used to provide more details about the DCS Gateway map file.

**Range:** Alpha-numeric characters

**Default:** DCS Gateway port description

#### MODE

**Purpose:** N/A

**Range:** N/A

**Default:** N/A

#### Connection

**Purpose:** The connection defines the type of communication port used by the Gateway Port. This can either be a Serial port or TCP/IP. User can choose from a list of available serial port as well as the TCP/IP selection.

**Options:** Available Serial ports (COM1, COM2, .etc.) or TCP/IP

**Default:** The first available port in the list.

#### IP Address

**Purpose:** The TCP/IP Address defines the address that will be used by the DCS Gateway Port. Normally a TCP/IP address exists for each Ethernet Network adapter installed in the Touch 1500 system. The IP Address selection list will show all available TCP/IP addresses and the user can select the one to use.

**Note:** TCP Port number 502 is automatically used by the DCS Gateway port if a TCP/IP connection is used. Port 502 is generally the accepted port used for Modbus TCP communications.

**Options:** Available TCP/IP addresses

**Default:** The first TCP/IP address on the list.

## Timeout

**Purpose:** The Timeout defines the maximum time in seconds the DCS Gateway Port will wait for a communication response before a communication timeout error is issued.

**Options:** 1, 2, 3, 4, 5, 6, 7, 8, 9, 10

**Default:** 2

## RTU Address

**Purpose:** The RTU address defines the Modbus address for the DCS Gateway Port. The Modbus address identifies the DCS Gateway Port as a Modbus device on the Modbus network. A DCS system can access the Gateway port remotely once it knows the Gateway Port's Modbus address.

**Note:** On a Modbus network the Modbus address of devices connected must be unique, otherwise communication errors and data lost will occur.

**Options:** 1 to 247

**Default:** 1

### 10.4.4 Starting and Stopping the DCS Gateway

To start the DCS Gateway, go to System | DCS Gateway | Load Gateway File. The Load Gateway File screen will be displayed. Touch the white area for the Gateway Enabled field and select Yes from the drop down list. Use the OK button to save the changes.

**Note:** A DCS Gateway Map must be already selected otherwise the OK button is disabled.

To stop the DCS Gateway, go to System | DCS Gateway | Load Gateway File. The Load Gateway File screen will be displayed. Touch the white area for the Gateway Enable field and select No from the drop down list. Use the OK button to save the changes.

**Note:** A warning will appear whenever the DCS Gateway is stopped or disabled. This is to confirm your action since this will stop all DCS Gateway Port communications with DCS systems.

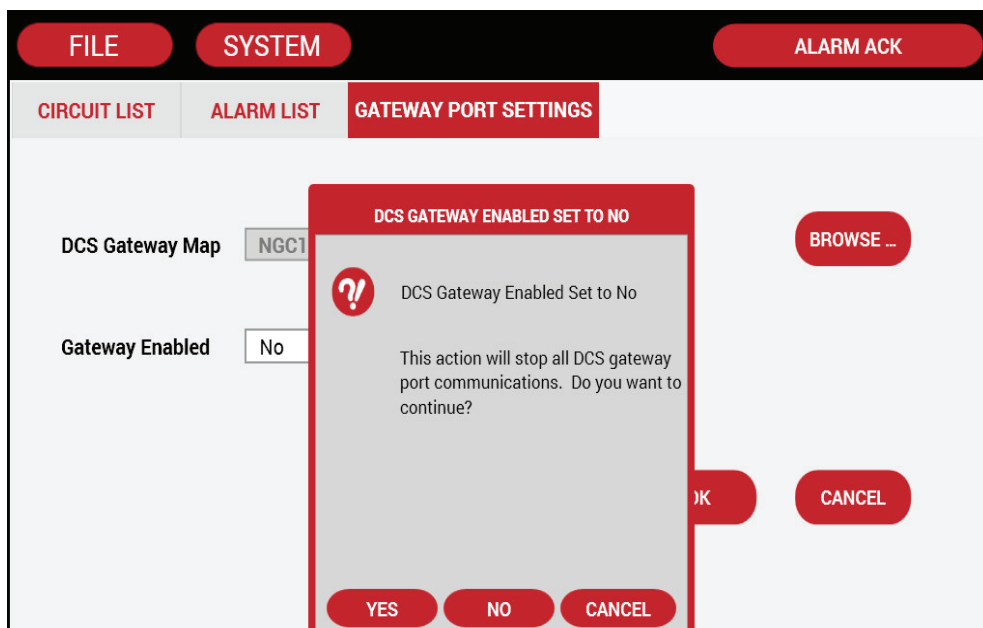


Figure 10.9 Stopping the DCS Gateway Warning

### 10.4.5 Editing a DCS Gateway Port

To change a DCS Gateway Port settings, go to System | DCS Gateway | Communication Setup. The Communication Setup screen with a list of available Gateway Port will be displayed. Select the desired DCS Gateway Port to bring up the Edit button. Touch the Edit button to begin your edit. Use the OK button to save the changes.

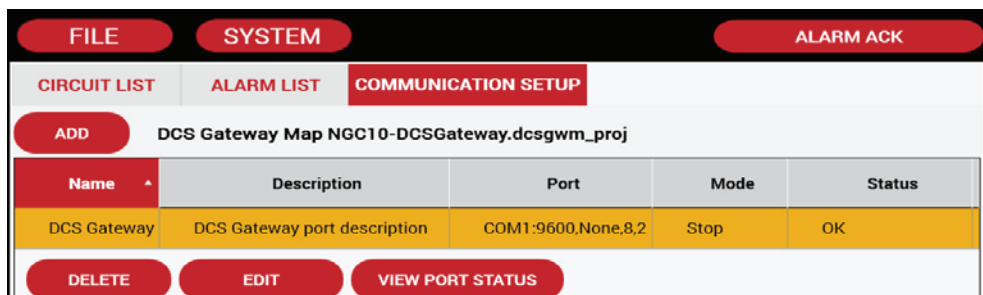


Figure 10.10 Communication Setup screen

Name: DCS Gateway

Description: DCS Gateway port description

Mode: Stop

Connection: COM1

Baud Rate: 9600

Parity: None

Stop Bits: 2

Timeout: 2

RTU Address: 1

OK CANCEL

Figure 10.11 Edit DCS Gateway Port Screen

#### 10.4.6 Starting and Stopping a DCS Gateway Port

To start a DCS Gateway Port, go to System | DCS Gateway | Communication setup. The communication Setup screen with a list of available Gateway Port will be displayed. Select the desired DCS Gateway Port and this row will expand to show the Edit button. Touch the Edit button to bring up the Edit DCS Gateway Port screen. Touch the Mode field and select Run from the drop down list. Use the OK button to save your changes.

To Stop a DCS Gateway Port, follow the same procedure as described above and for the Mode field, select Stop from the drop down list. Use the OK button to save your changes.

**Note:** Starting or Stopping a DCS Gateway Port does not affect the operation of the other DCS Gateway Ports.

### 10.5 Setting up the DCS Gateway for VLINX and Profibus Gateway Operation

For users that are using Profibus devices and would like to remotely access heat trace information from the Touch 1500, a solution is to use a Profibus to Modbus converter or gateway. A suggested choice is the Vlinx ConnectPro Protocol Converter (VFG1000, VFG2000, and VFG3000). The Vlinx ConnectPro purchased along with the VFG9000-PBDP Profibus expansion card provides the Profibus to Modbus conversion solution needed for communication with the DCS Gateway. This section describes a recommended approach on how to setup your VLINX and DCS Gateway Map for Profibus access to Heat Trace information on the Touch 1500.

On a Profibus network, in order to achieve fast and deterministic response times small packets of data are used for data exchange. This restricts the amount of data that can be read and write for a single Profibus device. This limitation restricts how much Heat Trace information a Vlinx unit can transfer from Modbus to Profibus and vice versa. If more data transfer is required, then more Vlinx units are required.

The recommended approach is to use a pre-programmed configuration file that is to be loaded into a Vlinx unit.

### 10.5.1 Pre-programmed Vlinx configuration file

This custom configuration file (i.e. DCS\_GW\_Config.vxd) is included with the DCS Gateway Mapping Tool. Use the Connect Pro Manager software to download the custom configuration file into the Vlinx unit. The following two tables show the preconfigured Profibus input/output areas in the Vlinx custom configuration file.

Function Code	Address range to be used
1	Address 1 – 144
2	Address 1 - 72
3	Not used
4	Address 1 – 108
2; system alarms	Will be picked up automatically

Table 1: Available addresses in Modbus map for transfer via standard Vlinx configuration file to Profibus Master device

Block	Address range
1	Address 0 - 108
2	Address 9 – 13
3	Address 14 - 144

Table 2: Profibus addresses to be used by Profibus master device

### 10.5.2 The Vlinx Custom Configuration File

The custom configuration file included with the DCS Gateway Mapping Tool can be used as a starting point to create a user specific setup for the Vlinx unit. After loading the custom configuration file into your Vlinx unit, the Network Protocol setting needs to match the Touch 1500 system. The Profibus Interface settings for the Profibus adapter also needs to be updated as well. Once both settings are updated then the unit is then ready for operation.

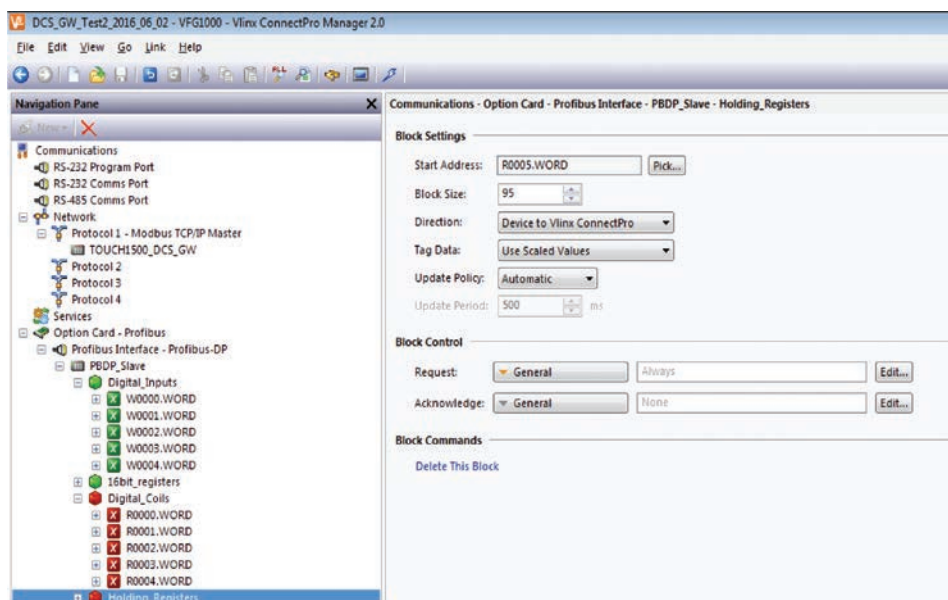


Figure 10.12 Custom Vlinx Configuration

## 10.6 Viewing DCS Gateway Data

Once the DCS Gateway has been setup and the system is up and running, it is necessary to test and verify the connectivity between the Touch 1500 and the DCS Systems. Once the remote data access capability is confirmed with the DCS Systems, the next step is to validate the data retrieved and data written to the Touch 1500 system. This section explains the available screens in the Touch 1500 system that can help you perform these validations. The 2 screens are the View Data Points and View Port Status screen.

**Note:** In this section, there are references to the DCS Gateway Map and the data within the map. To get a better insight in the data type, please see Appendix C DCS Gateway Map for more information.

### 10.6.1 View Data Points

To bring up the View Data Points screen go to System | DCS Gateway | View Data Points. The View Data Points screen will be displayed.

Address	Value	Name	Tag	Parent Tag	Type	Status
1	0	Circuit Breaker Limiting Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
2	0	Contactors Cycle Count Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
3	0	Control Temperature Failure Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
4	0	Control Temperature High Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
5	0	Control Temperature Low Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
6	0	Device Reset Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
7	0	ExtInputAlarm	NGC10_ThreePhase		4010i/4020i	Device nc
8	0	Factory Configuration Data Lost Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
9	0	GFI Current Transformer Failure Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
10	0	Ground Fault Trip	NGC10_ThreePhase		4010i/4020i	Device nc
11	0	Heater Time Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
12	0	High Ground Fault Current Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
13	0	High Limit Cut-Out Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
14	0	High Line 1 Current Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
15	0	High Line 2 Current Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
16	0	High Line 3 Current Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
17	0	High Heating Cable 1 Resistance Alarm	NGC10_ThreePhase		4010i/4020i	Device nc
18	0	High Heating Cable 2 Resistance Alarm	NGC10_ThreePhase		4010i/4020i	Device nc

Figure 10.13 View Data Points Screen

#### Map Region

**Purpose:** The Map Region selection box allows you to selectively view data points for a Map Region. The selection box will have all the Map Regions that are in the current DCS Gateway Map File. In addition there are 6 special Map Region selections that can provide more viewing capabilities. These special map regions include the selections to view all Map Region for a particular Function Code, for example [\*] 4 [Input Register]. When this selection is selected, all available Map Regions that are assigned to Function Code 4 will be displayed in the data list. Amongst the 6 special map regions there are 2 System Map Regions. The System Map Regions are appended to the end of the selection list. These regions occupy Modbus data address 65000 and above and they are reserved for system use only.

#### Start Address

**Purpose:** The Start Address is the 1st Modbus data address for the selected Map Region. The Start Address button has the purpose of displaying the Find Address Window. The Find Address Window can be used to locate a row of data based on the Modbus data address. The lowest Modbus data address assigned is 1. Please see Section 10.6.1.1 Find Window for more information on the Find Address Window.

#### End Address

**Purpose:** The End Address is the last Modbus data address for the selected Map Region. The largest Modbus data address is 65000.

**Note:** An address can be assigned a number up to 65535 for a regular Modbus data address, however in the DCS Gateway, address 65000 and up are reserved for system information.

## Function Code

**Purpose:** The Function Code is the Function Code assigned to the selected Map Region. The Function Code can be one of the following:

- 1 for accessing the Output Coil data
- 2 for accessing the Input Discrete data
- 3 for accessing the Holding Register data
- 4 for accessing the Input Register data

## Mapping Type

**Purpose:** The Mapping Type is the Mapping Type assigned to the selected Map Region. This can be either By Devices or By Data Points. Please note if the selected Map Region is a View All Regions for a Function Code then you may see By Devices/Data Points text if there are both types of Map Regions assigned to the same Function Code. For more information on Mapping Type see Appendix D.5 Mapping Type by Devices vs by Data Points.

## Value Display Option

**Purpose:** The Value Display Option determines how the data is presented on the screen. The following options are available: Show Unsigned Values, Show Signed Values, and Show Engineering Values.

## Use Modbus Addressing Option

**Purpose:** The Use Modbus Addressing Option determines the address format for the address column. If the Use Modbus Addressing option is checked, then addresses are displayed in 0xxxxx, 1xxxxx, 3xxxxx, 4xxxxx format, where xxxxx is a number from 1 to 65535. This type of format is well recognized and accepted in the control and monitoring industries. If the Use Modbus Addressing is not checked, then the addresses are just numbers representing the offset within a Function code memory table (i.e. from 1 to 65535).

## Refresh Time

**Purpose:** The Refresh Time is the time required to collect data for all rows in the current data list. This is an estimated time determined by the system and it is dependent on the number of things such as the number of devices that are in the current list, the number of devices/circuits installed in the system, the current activities such as alarms, and the current user actions.

**Note:** The value -30000 is used as an invalid value indicator. The following conditions can cause this to happen:

- 1) The Device for the data point is not found or not available
- 2) The Device for the data point is in communication failure
- 3) The Data point is not available for the current device
- 4) DCS Gateway is in Communication failure
- 5) The device is offline

**Note:** The column headers can be sorted and the column width and column orders can be changed as well. When you change the column width and column order, these settings are saved the next time you come back to this screen. Also these settings are shared by both the View Data Points and View Port Status screens. If you change them in one screen, it will apply to the other screen automatically.

### 10.6.1.1 Find Address Window

At times there are many rows in the data list displayed in the View Data Points or View Port Status screen, it may be difficult to scroll through the list to find the item you are looking for. In that situation, the Find Address Window may be helpful, as you can use it to locate a row more quickly.

When the View Data Points or View Port Status screen is displayed, touch the Start Address button to bring the Find Address window.

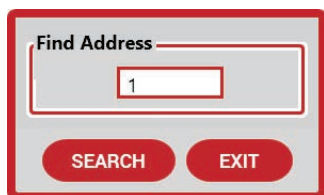
A screenshot of the Find Address window. It features a title bar with the text "Find Address". Below the title bar is a text input field containing the number "1". At the bottom of the window are two red buttons: "SEARCH" and "EXIT".

Figure 10.14 Find Address Window


Enter the address you would like to search by touching the number entry area. A numeric key pad will appear. Enter the address and touch the Search button. If the address is found, the row that contains this address will be visible on the screen. If the address is not found, the content of the list remains the same.

### 10.6.2 View DCS Gateway Port Status

The View Port Status screen can display the DCS Gateway data the same as in the View Data Points screen. However you can find information on the communication activities on a DCS Gateway Port as well. These communication activities may help you to understand the state of your control system and if any optimization is necessary.

To bring up the View Port Status screen, you must first go to the Communication Setup screen by selecting System | DCS Gateway | Communication Setup. On the Communication Setup screen, select a DCS Gateway Port by touching the row it is on. The row will expand and show the View Port Status button. Touch the View Port Status button to bring up the View Port Status screen.


There are 3 tabs on the View Port Status screen; Gateway Port Data, Port Diagnostic Data and Close View Port Status tab.

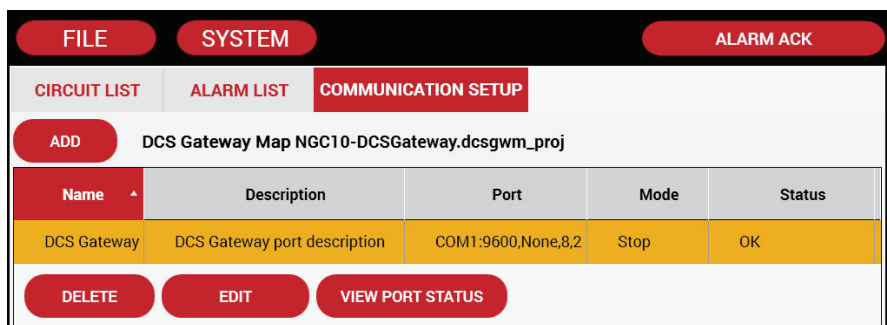A screenshot of the Communication Setup screen. At the top are three red buttons: "FILE", "SYSTEM", and "ALARM ACK". Below these are three tabs: "CIRCUIT LIST", "ALARM LIST", and "COMMUNICATION SETUP". Under "COMMUNICATION SETUP" is an "ADD" button and the text "DCS Gateway Map NGC10-DCSGateway.dcsghwm\_proj". Below this is a table with the following data:

Name	Description	Port	Mode	Status
DCS Gateway	DCS Gateway port description	COM1:9600,None,8,2	Stop	OK

At the bottom of the table are three red buttons: "DELETE", "EDIT", and "VIEW PORT STATUS".

Figure 10.15 Communication Setup Screen

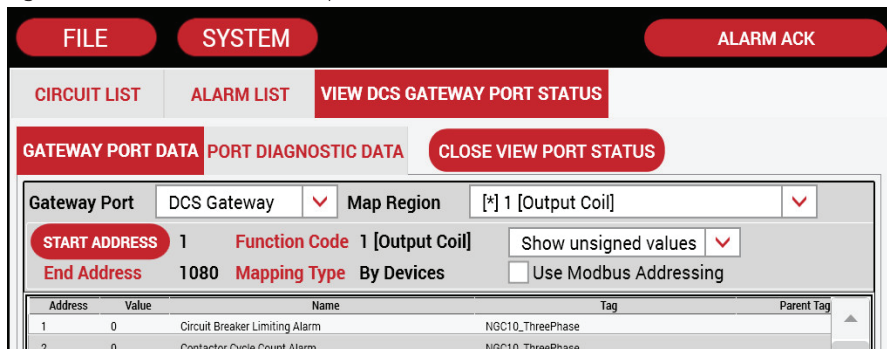A screenshot of the View DCS Gateway Port Status screen. At the top are three red buttons: "FILE", "SYSTEM", and "ALARM ACK". Below these are three tabs: "CIRCUIT LIST", "ALARM LIST", and "VIEW DCS GATEWAY PORT STATUS". Under "VIEW DCS GATEWAY PORT STATUS" are three sub-tabs: "GATEWAY PORT DATA", "PORT DIAGNOSTIC DATA", and "CLOSE VIEW PORT STATUS". Below the sub-tabs is a form with the following fields:

Gateway Port	DCS Gateway	Map Region	[*] 1 [Output Coil]
START ADDRESS	1	Function Code	1 [Output Coil]
End Address	1080	Mapping Type	By Devices
		Show unsigned values	<input checked="" type="checkbox"/>
		Use Modbus Addressing	<input type="checkbox"/>

Below the form is a table with the following data:

Address	Value	Name	Tag	Parent Tag
1	0	Circuit Breaker Limiting Alarm	NGC10_ThreePhase	
2	0	Contact Cycle Count Alarm	NGC10_ThreePhase	

Figure 10.16 View DCS Gateway Port Status Screen



### 10.6.2.1 Gateway Port Data Tab

The Gateway Port Data tab screen is basically the same as the View Data Points screen. It's slightly smaller since it is within a Tab window. The description of the contents and the available user interactions on the screen are described in section 10.5.1 View Data Points. Please see section 10.5.1 for more information.

### 10.6.2.2 Port Diagnostic Data Tab

The DCS Gateway is designed to run silently in the background. When unexpected errors occurred during operation, the system will convert them to system alarms. The Touch will show these system alarms in the Alarms list similar to other alarms. The following system alarms are managed and handled by the Touch 1500 system.

**Note:** If these alarms do appear on your Touch 1500 system, please check your system and correct them as soon as possible.

- Missing DCS Gateway Map
- Corrupted DCS Gateway map File
- DCS Gateway system Failure occurred
- DCS Gateway communication failure occurred
- There are overlapping Map Region in the DCS Gateway Map File
- There are Invalid Map Region settings in the DCS Gateway Map File

In addition to the system alarm management, the system keeps statistics of communication activities while the DCS Gateway is running. To view this statistics, go to the Port Diagnostics Data tab.

Name	Value
Start Time	2020-12-04 2:55:47 PM
Failed responses	0
Total request received	0
Total valid requested received	0
Successful responses	0
Modbus Exception responses	0
Function code 1 transactions	0
Function code 2 transactions	0

Figure 10.17 View DCS Gateway Port Status Screen

#### Start Time

**Purpose:** The Start Time is the time the DCS Gateway is started.

#### Failed Response

**Purpose:** The Failed Response count is the number of failed Modbus responses. Typically if a Modbus transaction results in a Modbus Exception response the count would increase by 1.

#### Total Request Received

**Purpose:** The Total Request Received count is the number of Modbus query messages received.



### **Total Valid Request Received**

**Purpose:** The Total Request Received count is the number of Modbus query messages received. A query message received must be a valid Modbus query message.

### **Successful Response**

**Purpose:** The Successful Response count is the number of successful responses sent to the Modbus Master or DCS System.

### **Modbus Exception Responses**

**Purpose:** The Modbus Exception Responses count is the number of Modbus Exception responses sent to the Modbus Master or DCS System.

### **Function Code 1 Transactions**

**Purpose:** The Function Code 1 Transactions count is the number of Modbus queries received that uses Function Code 1. Function Code 1 is for reading Output Coil statuses.

### **Function Code 2 Transactions**

**Purpose:** The Function Code 2 Transactions count is the number of Modbus queries received that uses Function Code 2. Function Code 2 is for reading Discrete Input statuses.

### **Function Code 3 Transactions**

**Purpose:** The Function Code 3 Transactions count is the number of Modbus queries received that uses Function Code 3. Function Code 3 is for reading Holding Register values.

### **Function Code 4 Transactions**

**Purpose:** The Function Code 4 Transactions count is the number of Modbus queries received that uses Function Code 4. Function Code 4 is for reading Input Register values.

### **Function Code 5 Transactions**

**Purpose:** The Function Code 5 Transactions count is the number of Modbus queries received that are using Function Code 5. Function Code 5 is for changing the status of 1 Output Coil.

### **Function Code 6 Transactions**

**Purpose:** The Function Code 6 Transactions count is the number of Modbus queries received that uses Function Code 6. Function Code 6 is for setting the value of 1 Holding Register.

### **Function Code 15 Transactions**

**Purpose:** The Function Code 15 Transactions count is the number of Modbus queries received that uses Function Code 15. Function Code 15 is for setting the status of 1 or more Output Coils.

### **Function Code 16 Transactions**

**Purpose:** The Function Code 16 Transactions count is the number of Modbus queries received that uses Function Code 16. Function Code 16 is for setting the value of 1 or more Holding Registers.

#### **10.6.2.3 Close View Port Status Window**

Touch the Close View Port Status tab to close the current screen and return to the Communication Setup screen.

### A.1 Introduction

This appendix describes two examples on how to connect and program the Raychem Touch 1500R and NGC-40-BRIDGE using Ethernet. Before you proceed with the description below, a keyboard is required. If a keyboard is not available, a virtual keyboard can be accessed. Go to Start | All Programs | Accessories | Accessibility | On-Screen Keyboard.

#### Example 1: Connection Directly from the NGC-40-BRIDGE to the Touch 1500R using a Static IP Address.

Below are two diagrams on how the NGC-40-BRIDGE can connect directly to the Touch 1500R:

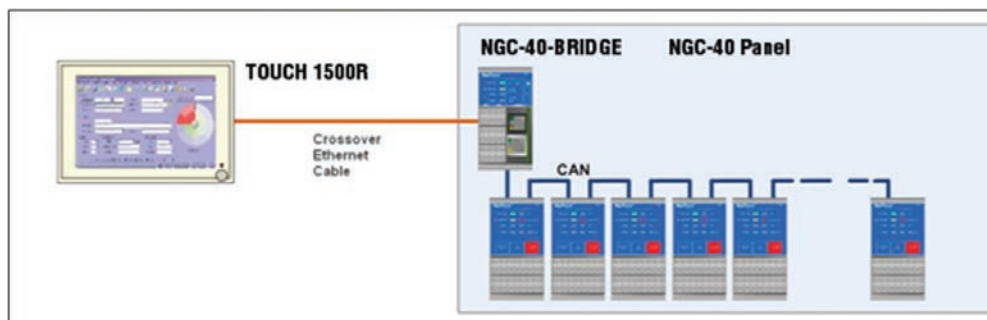


Figure A.1 Connecting directly to NGC-40-BRIDGE using Ethernet crossover cable

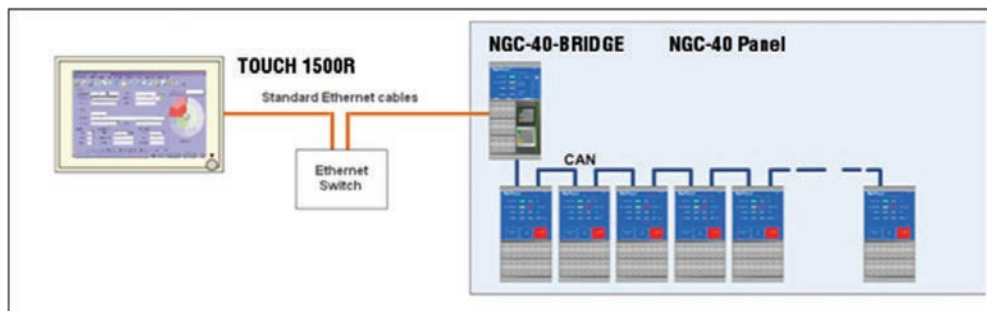


Figure A.2 Connecting to NGC-40-BRIDGE using Ethernet switch and standard Ethernet cable

### A.2 Setting a Static IP on the Touch 1500R

**Step 1:** Exit from the Touch 1500 software.

The Touch 1500 Desktop should now be displayed

**Step 2:** Click on Start | Control Panel | Network Connections

**Step 3:** Double click on the Local Area Connection or Local Area Connection 2 depending on which Ethernet port is connected to the NGC-40-BRIDGE.

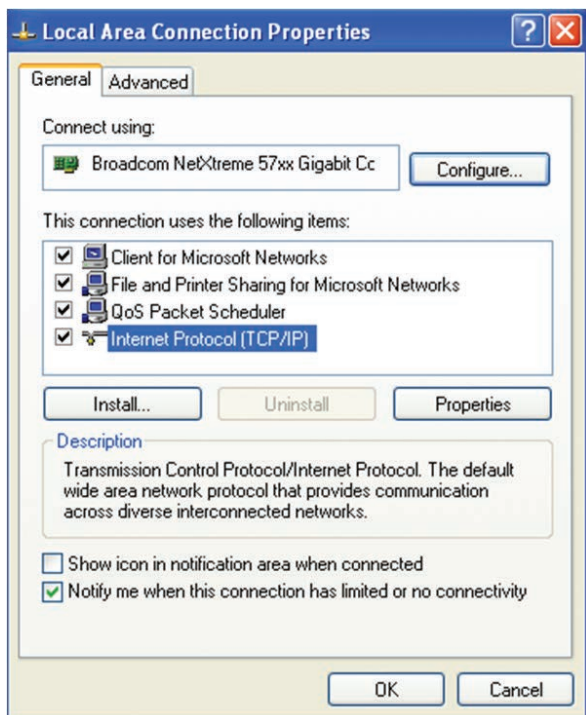


Figure A.3 Local Area Connection Properties window

**Step 4:** Double click on Internet Protocol (TCP/IP)

**Step 5:** Click on Use the following IP address you should see the below window:


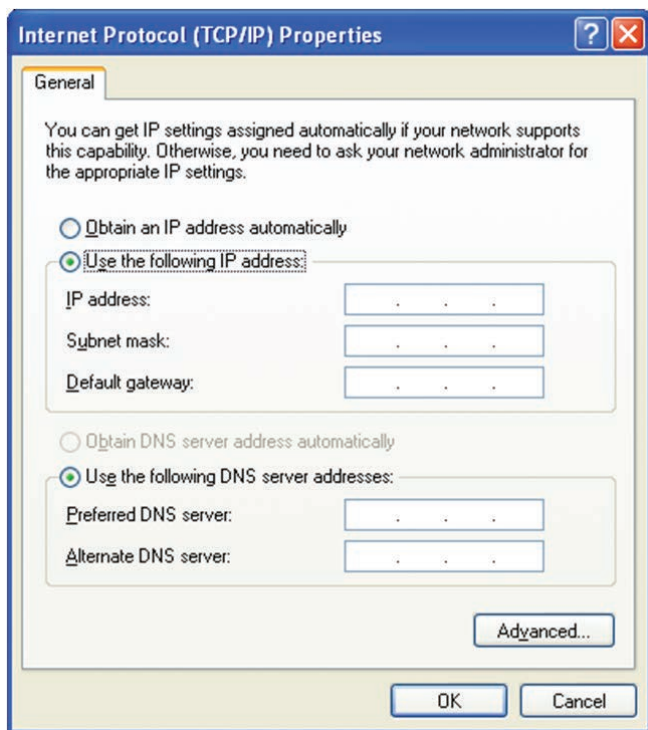


Figure A.4 Internet Protocol Properties window

**Step 6:** Enter the first 3 blocks of the NGC-40-BRIDGE's IP address. The default IP address for the NGC-40-BRIDGE is 192.168.1.100. For the last block, choose a number between 1 and 255, but it cannot be the same address being used by the NGC-40-BRIDGE.


 **Important:** Once the IP address is entered, the Subnet Mask will automatically be entered. No change is required. Press OK.

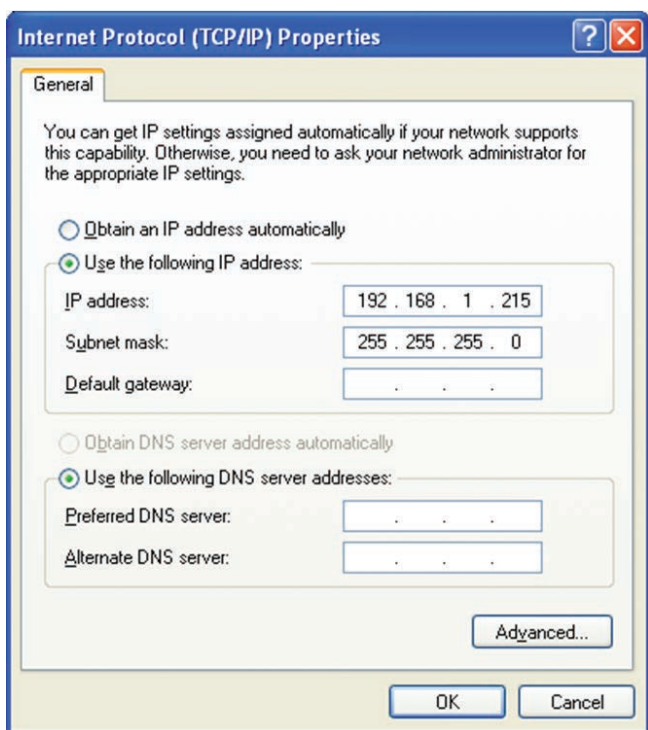

The image shows the 'Internet Protocol (TCP/IP) Properties' window. The 'General' tab is selected. It contains instructions about automatic IP assignment and manual configuration. Under 'Use the following IP address:', the IP address is set to 192.168.1.215 and the Subnet mask is 255.255.255.0. The 'Default gateway' field is empty. Under 'Use the following DNS server addresses:', both 'Preferred DNS server' and 'Alternate DNS server' fields are empty. There is an 'Advanced...' button at the bottom right of the configuration area, and 'OK' and 'Cancel' buttons at the very bottom.

Figure A.5 Internet Protocol Properties window

**Step 7:** Start the Touch 1500 program and go to the System | Device Manager | Scan for Devices | Scan Ethernet Network. You should see the below window:

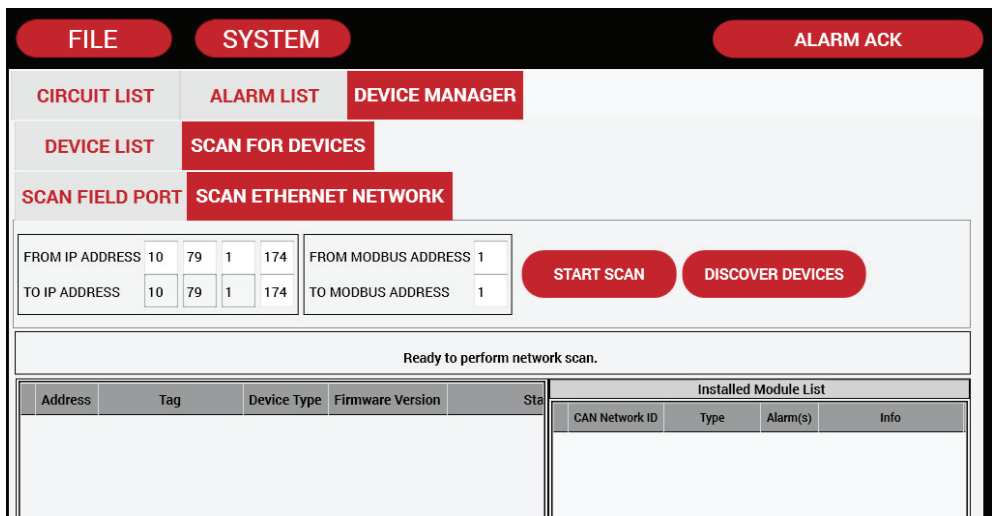

The image shows the 'Device Manager | Scan Ethernet Network' window. It has a top navigation bar with 'FILE', 'SYSTEM', and 'ALARM ACK'. Below this, there are several tabs: 'CIRCUIT LIST', 'ALARM LIST', 'DEVICE MANAGER', 'DEVICE LIST', 'SCAN FOR DEVICES', 'SCAN FIELD PORT', and 'SCAN ETHERNET NETWORK'. The 'SCAN ETHERNET NETWORK' tab is active. It contains two input sections: 'FROM IP ADDRESS' (10, 79, 1, 174) and 'TO IP ADDRESS' (10, 79, 1, 174), and 'FROM MODBUS ADDRESS' (1) and 'TO MODBUS ADDRESS' (1). There are two red buttons: 'START SCAN' and 'DISCOVER DEVICES'. Below these is a status bar that says 'Ready to perform network scan.' At the bottom, there are two tables. The first table has columns: Address, Tag, Device Type, Firmware Version, and Sta. The second table, titled 'Installed Module List', has columns: CAN Network ID, Type, Alarm(s), and Info.

Figure A.6 Device Manager | Scan Ethernet Network window

**Step 8:** Enter in the IP address of the Bridge (default IP 192 168 1 100) and change the To Modbus Address to 1.

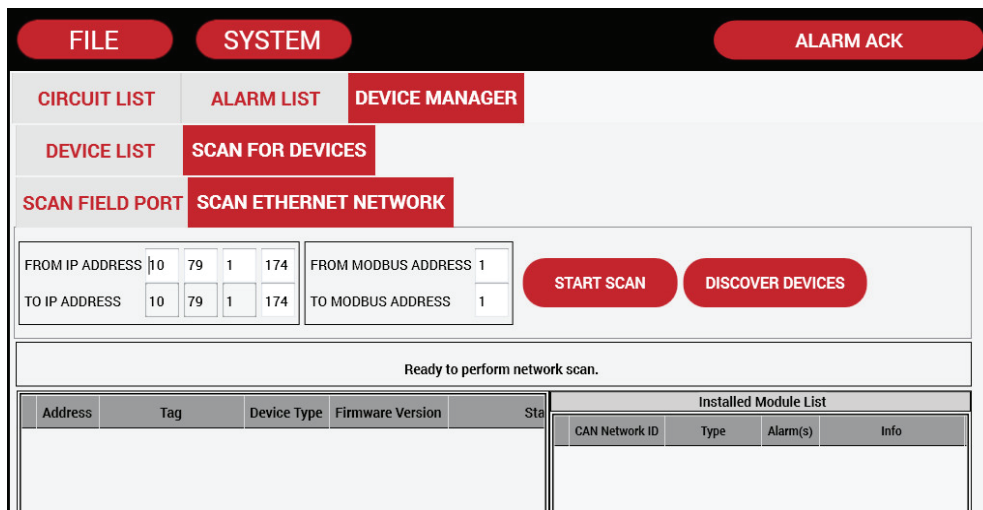


Figure A.7 Device Manager | Scan Ethernet Network window

**Step 9:** Press the Start Scan button to load the modules

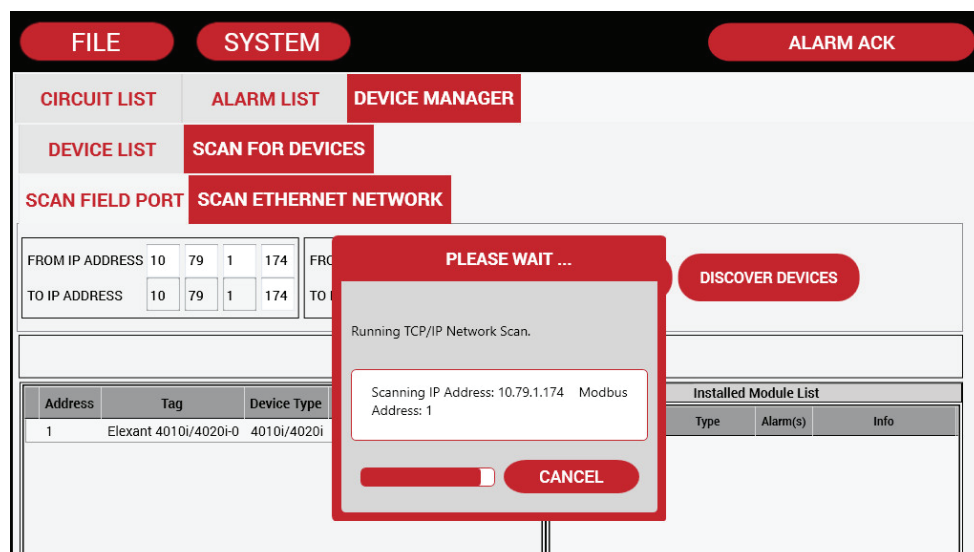


Figure A.8 Device Manager | Scan Ethernet Network | Start Scan window

### Example 2: Connecting NGC-40-BRIDGE and the Touch 1500R together via the Ethernet network using DHCP

Below is diagram on how the NGC-40-BRIDGE and the Touch 1500R can be connected via the Ethernet network. You may require the assistance from IT to complete the following steps. Before you proceed with the below, a keyboard is required. If a keyboard is not available, a virtual keyboard can be accessed. Go to Start | All Programs | Accessories | Accessibility | On-Screen Keyboard.

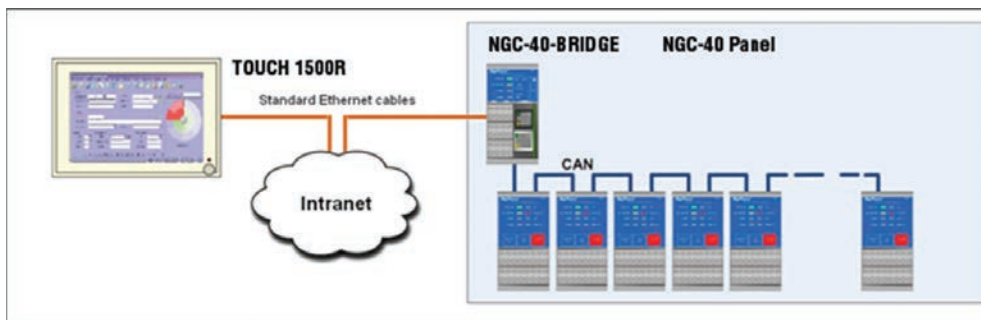


Figure A.9 Connecting to NGC-40-BRIDGE via the intranet

The following only addresses local networks with DHCP. If your network does not have DHCP, you may need to manually setup an IP address in the Touch 1500 which is explained in the previous example.

**Step 1:** Connect the Touch 1500R and the NGC-40-BRIDGE to the Ethernet network.

**Step 2:** Exit the Touch 1500R program and go to Start | All Programs | Accessories | Command Prompt.

**Step 3:** Type ipconfig and press enter. Especially take note of the IP Address and Subnet Mask

```

C:\ Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\dnolte>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : CORPDOMAIN.NET
    IP Address. . . . . : 10.133.212.57
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.133.212.1

Ethernet adapter Wireless Network Connection:

    Media State . . . . . : Media disconnected

C:\Documents and Settings\dnolte>_

```

Figure A.10 Command prompt on Touch 1500

**Step 4:** Using a laptop computer, connect to the NGC-40-BRIDGE via RS-232. Start the Raychem Hardware Manager program and connect to the NGC-40-BRIDGE.

**Step 5:** Change the NGC-40-BRIDGE from RUN to SET by moving the switch located on the front of the NGC-40-BRIDGE module. This will allow you to edit the NGC-40-BRIDGE settings.

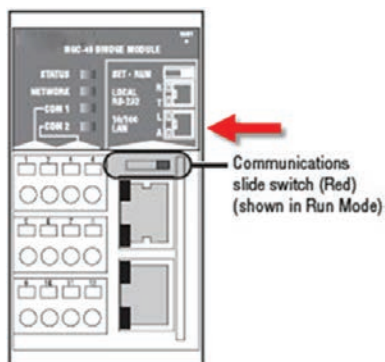


Figure A.11 NGC-40-BRIDGE communication slide switch

**Step 6:** Enter the first 3 blocks of the Touch 1500R's IP address and Subnet Mask that was assigned by the DHCP server in step 3. For the last block of the IP address, choose a number between 1 and 255, but it cannot be the same as the Touch 1500R or any other device on the network. Press OK.



Figure A.12 NGC-40-BRIDGE settings using the HGC-40 Hardware Manager

**Step 7:** Change the switch on the NGC-40-BRIDGE from SET to RUN

**Step 8:** Start the Touch 1500R program and go to the System | Device Manager | Scan for Devices | Scan Ethernet Network. You should see the below window:

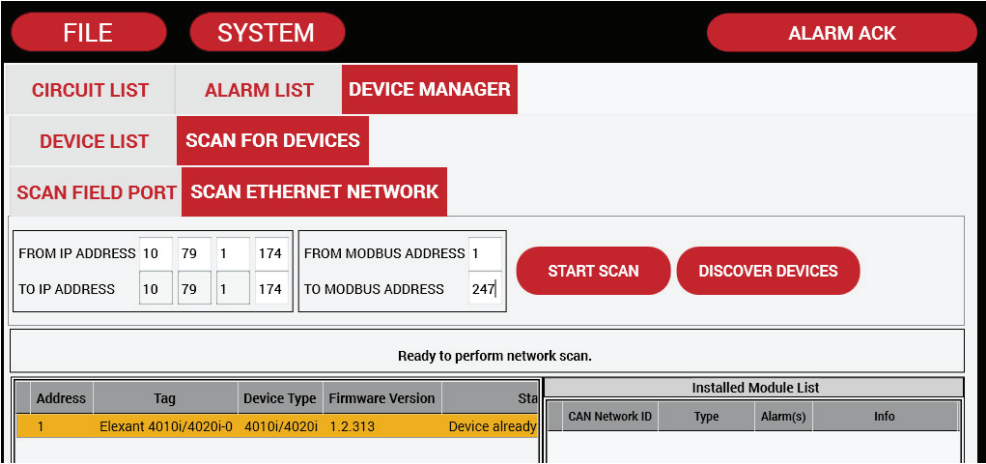


Figure A.13 Device Manager | Scan Ethernet Network window



**Step 9:** Enter in the IP address of the BRIDGE (step 6) and change the To Modbus Address to 1.

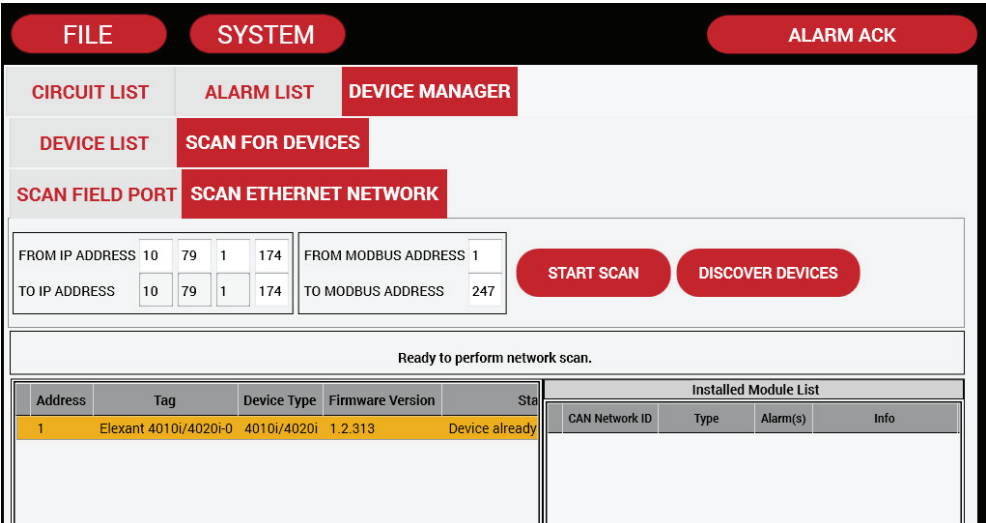


Figure A.14 Device Manager | Scan Ethernet Network window

**Step 10:** Press the Start Scan button to load the modules

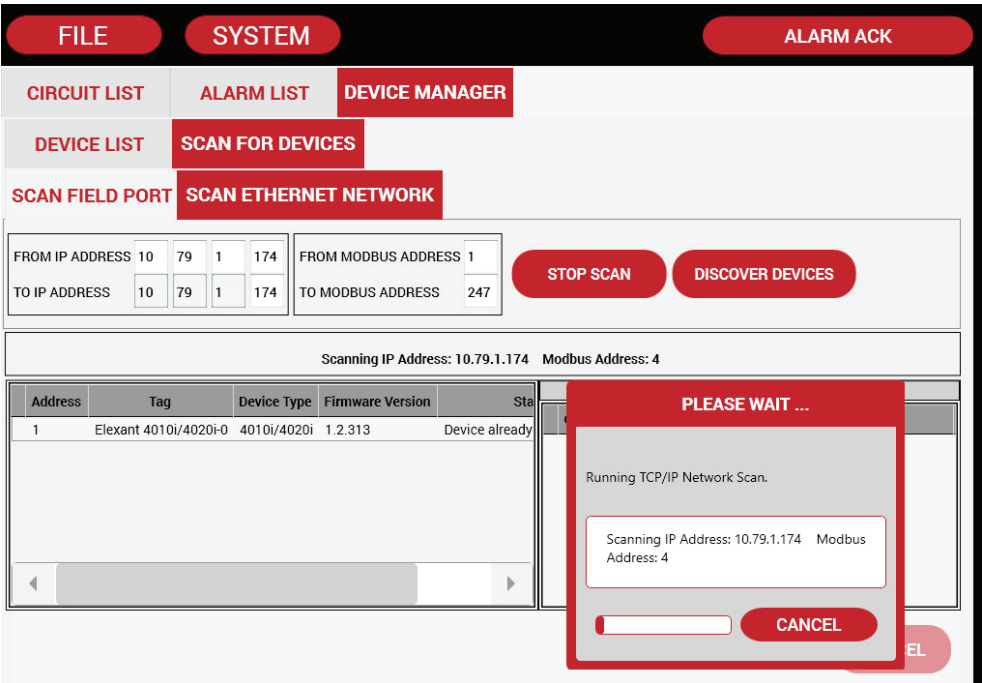


Figure A.15 Device Manager | Scan Ethernet network | Start Scan window



## APPENDIX B SWITCH CONTROL MODES

### B.1 Introduction

There are several types of control modes in the controller. Some of these modes require further explanation in order to fully understand and implement their operation. This section describes the Switch Control Modes available in the HTC/HTC3 and how to set their associated parameters, as well as the Load Shedding Control mode.

### B.2 Switch Control Modes

There are five Switch Control modes associated with the HTC/HTC3. The following is an explanation of their implementation in the controller and the differences between them.

#### B.2.1 Proportional Control

When using SSRs to directly control the power applied to a trace circuit, the output may be switched on/off very rapidly. The controller implements proportional temperature control on a cycle by cycle basis (50 or 60 Hz power line cycle). This algorithm monitors the temperature of the heating circuit and compares it to the Control Setpoint temperature. If the temperature of the control sensor is at or below the Control Setpoint temperature, then power is applied to the trace with a duty cycle of 100% — the controller output is full on. If the temperature sensed by the control sensor is equal to or greater than the Control Setpoint temperature + the PROPORTIONAL BAND setting, then the controller output will have a duty cycle of 0% — the output will be off. The temperature of the control sensor is constantly monitored and the output duty cycle is adjusted proportionally according to where the temperature falls within the 0% to 100% band.

Proportional Control	Temperature Band
Control Sensor Temperature	Duty Cycle
Setpoint + proportional band	0%
Setpoint + proportional band/2	50%
Setpoint	100%

#### B.2.2 On/Off Control

When using the HTC/HTC3 in an application where the controller is used to open and close a contactor, proportional control cannot be used. In these cases a On/Off control algorithm is used. The output duty cycle is not controlled, instead the output is either fully on or completely off. The user can set the deadband value. The controller monitors the temperature of the trace circuit and compares it to the Control Setpoint temperature as in the proportional control. If the control sensor temperature is above the Control Setpoint temperature by more than the deadband value, the output is turned off. If the control sensor temperature falls below the Control Setpoint temperature the output is turned on. This is a very simple control algorithm but it works very effectively in heat trace applications where the temperature of a traced system changes relatively slowly.

Deadband Control	Temperature Band
Control Sensor Temperature	Output State
Setpoint + deadband	Off
Setpoint	On

When the control sensor temperature is within the deadband, the output does not change its state. Also, when using On/Off control a contactor is not allowed to toggle faster than every 2 seconds. If an AC alarm with an alarm filter time greater than 0 is detected, the contactor will not toggle until the alarm filter time has expired.

#### B.2.3 PASC (Proportional Ambient Sensing Control) SSR

When using SSRs to directly control the power applied to a heating circuit, the output may be switched on/off very rapidly. The controller implements PASC-SSR temperature control on a cycle by cycle basis (50 or 60 Hz power line cycle). This algorithm monitors ambient temperature and compares it to the Control Setpoint temperature. If the temperature of the control sensor is at or below the Control Setpoint temperature minus the Proportional Band setting, then power is applied to the trace with a duty cycle of 100% — the controller output is fully on. If the temperature sensed by the control sensor is equal to or greater than the Control Setpoint temperature, then the output will have a duty cycle of 0% — the controller output will be off. The temperature of the control sensor is constantly monitored and the output duty cycle is adjusted proportionally according to where the temperature falls within the 0% to 100% band.

## PASC SSR Control Temperature Band

Control Sensor Temperature	Duty Cycle
Setpoint	0%
Setpoint+proportional band/2	50%
Setpoint+proportional band	100%

**NOTE 1:** The load shedding “fail safe mode” is not supported when using PASC SSR control, since ambient temperature is being monitored rather than pipe temperature.

When an HTC/HTC3 using a SSR is used to control the output based on the ambient temperature this control mode should be used.

**NOTE 2:** The load shedding “fail safe mode” is not supported when using proportional ambient contactor control, since ambient temperature is being monitored rather than pipe temperature.

Also note that if an AC alarm, with an alarm filter time greater than 0, is detected the contactor will not toggle until the alarm filter time has expired.

### B.2.4 PASC (Proportional Ambient Sensing Control) EMR

PASC takes advantage of the fact that the heat loss from a pipe is proportional to the temperature difference between the pipe and the ambient air. This is true regardless of heater type, insulation type, or pipe size. Since the heat tracing and insulation on a pipe has been designed to balance heat input with heat loss and maintain a particular temperature, the main variable in controlling the pipe temperature becomes the ambient air temperature. The NGC-40 HTC/HTC3 has a control algorithm that uses the measured ambient temperature, desired maintain temperature, minimum ambient temperature assumption used during design, and size of the smallest pipe diameter to calculate how long the heater should be on or off to maintain a near-constant pipe temperature.

**Important:** The power to the heat tracing is proportioned based on the ambient temperature. If the ambient temperature is at or below the “minimum design ambient” +1 2/3°C the heaters will be on 100%. If the measured ambient is at or above the “maintain temperature” –1 2/3°C the heaters will be on 0%. For any measured ambient between “minimum design ambient” and “maintain temperature,” the heaters will be on a percentage of the time equal to (maintain temperature – measured ambient) / (maintain temperature – minimum design temperature).

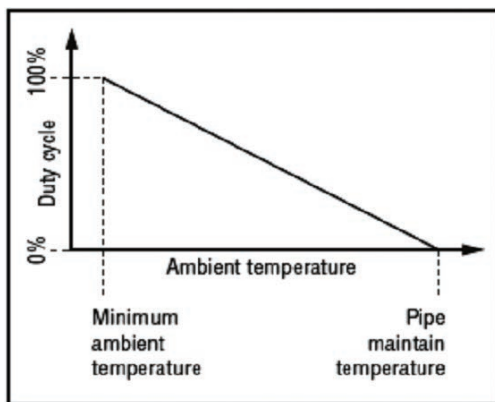


Figure B.1 PASC chart

### B.2.5 Always On/Off

#### Always On

The relay output is switched on (user override), turns on the power to the heater and leaves it on.

**Important:** Monitor the pipe temperatures to avoid overheating. Alarms are still active.

#### Always OFF

The relay output is switched off (user override), turns off the power to the heater, and leaves it off.

**Important:** Monitor the pipe temperatures for low temperature alarms. Alarms are still active

## APPENDIX C INSTALLATION PROCEDURE FOR Raychem TOUCH 1500 SOFTWARE

---

### C.1 Introduction

The section describes the procedures on how to install Raychem Touch 1500 Software on a desktop or laptop computer.

#### C.1.1 Setup

For the installation of the Raychem Touch 1500, you will need the Touch 1500 installation setup file. The naming convention used for the setup file is Raychem\_Touch\_1500\_???\_Setup.exe.

The computer that the Touch 1500 will be installed to should be running Windows 7 or higher; the software will work under Win-XP, however Microsoft .NET Framework 3.5 or higher may need to be installed.

#### C.1.2 Installing the Raychem Touch 1500 (to a computer with no previous versions of Raychem Touch 1500 installed)

Begin the installation by running the Raychem Touch 1500 setup file. Due to company security policy, you will be prompted to provide your credentials in order to continue with the installation.

The installation begins with the Welcome screen. Click next to proceed to the next screen.



Figure C.1 Welcome Screen

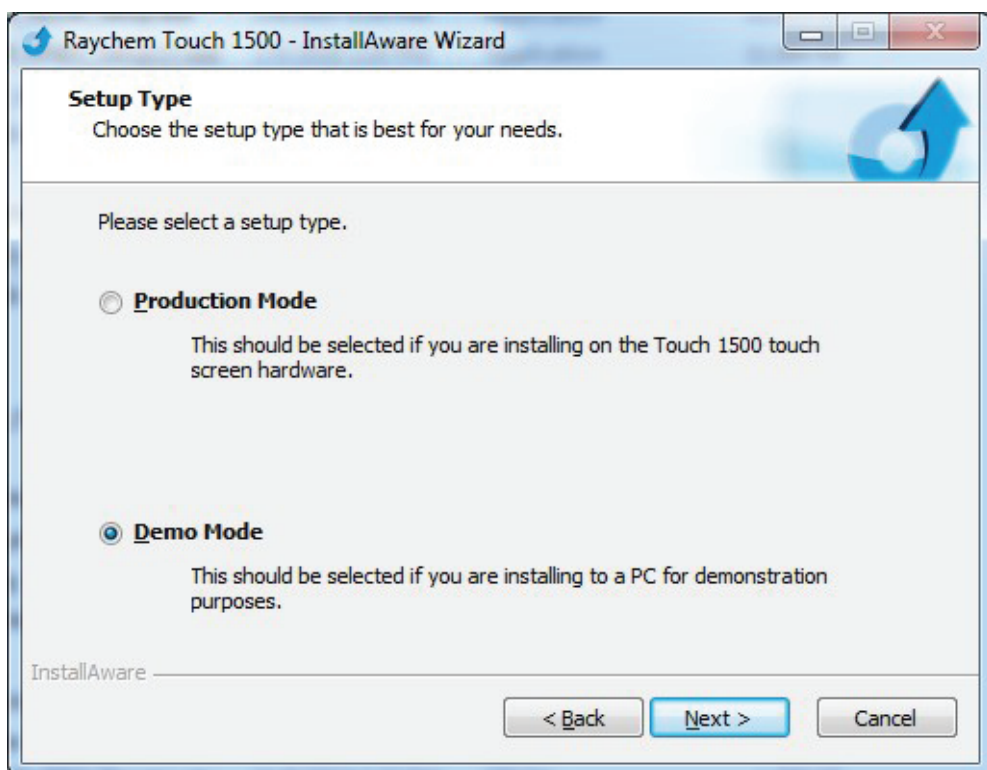


Figure C.2 Setup Installation Type

For the remaining setup screens, it is recommended to use the default settings, therefore continue using the Next button till the installation is completed.

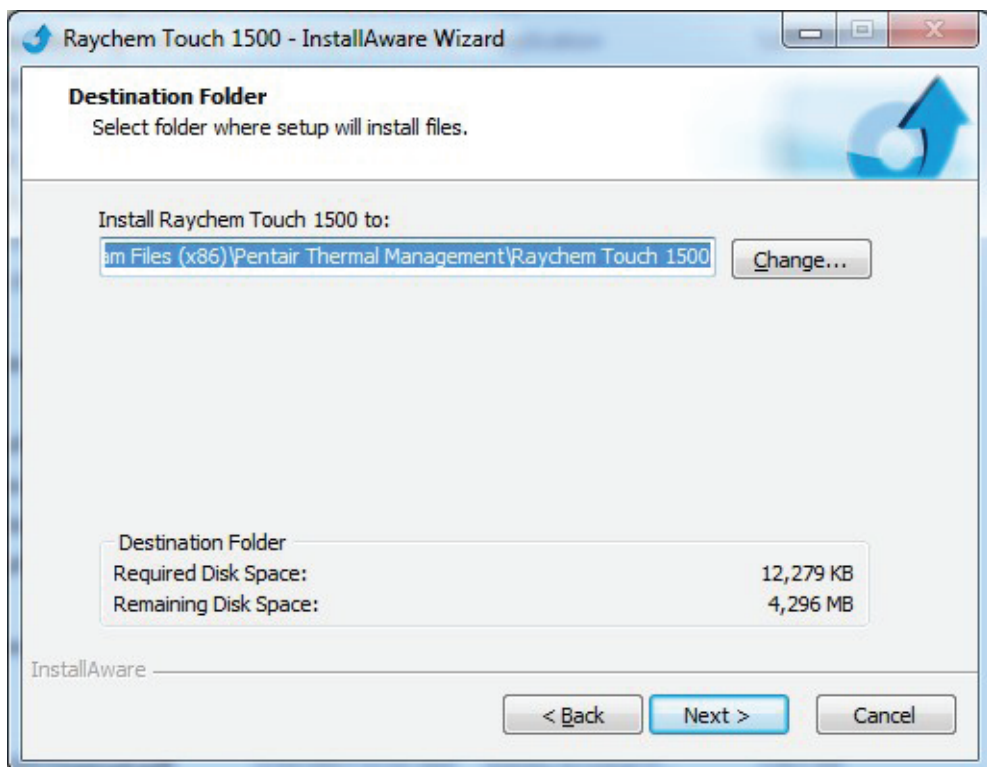


Figure C.3 Destination Folder Setting



Figure C.4 Completing the Installation

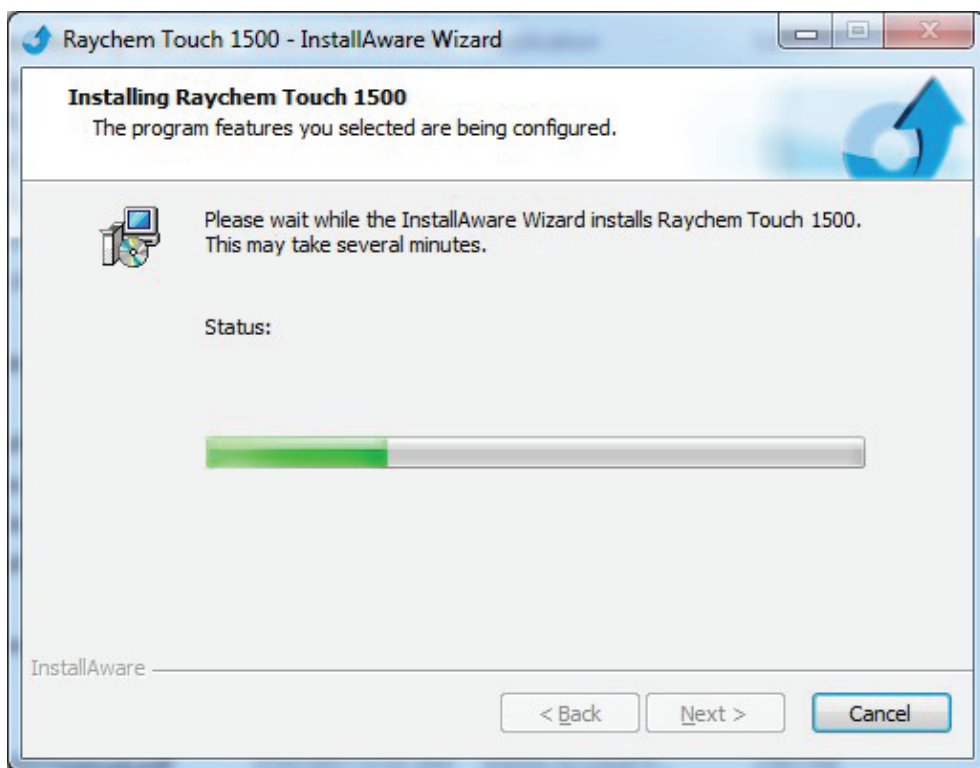


Figure C.5 Installation in Progress

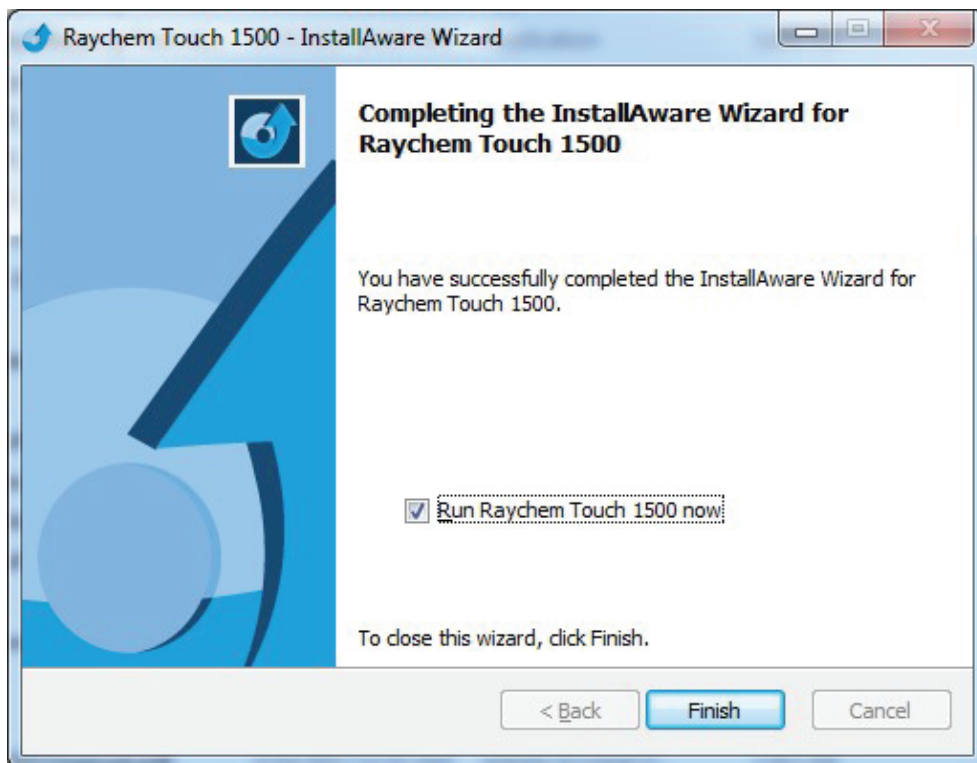


Figure C.6 Installation Completed

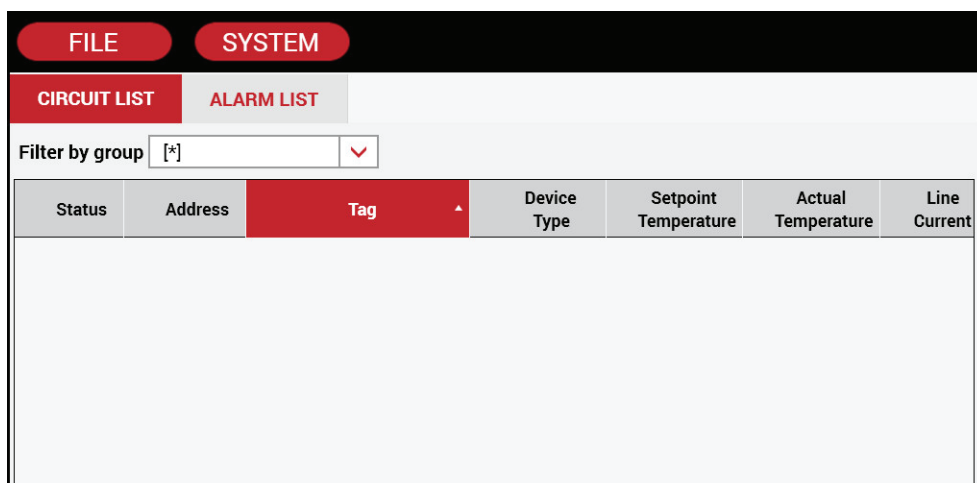


Figure C.7 Raychem Touch 1500 running

### C.1.3 Installing Raychem Touch 1500 over an existing version

If you are updating a computer or laptop with the latest Raychem Touch 1500 (i.e. installing on a computer or laptop that has an installation of Raychem Touch 1500 or Raychem Touch 1500), the procedure is nearly the same as described in Section C.1.2 Installing the Raychem Touch 1500 (to a computer with no previous versions of Raychem Touch 1500 installed).

To begin the update, run the latest Raychem Touch 1500 setup file. The setup file will notify you that an existing Touch 1500 already exists. Select the Uninstall option then click the Next button. The setup will proceed with uninstalling the old version before starting with the new installation.



Figure C.8 Uninstall screen

Once the old version is uninstalled, you will be presented with the same set of screens as in Section 2.2 Installing the Raychem Touch 1500 (to a computer with no previous versions of Raychem Touch 1500 installed).

You can follow the same steps as detailed in Section 2.2 to complete the installation, typically clicking the Next button till the installation completes.





Figure C.9 Welcome Screen


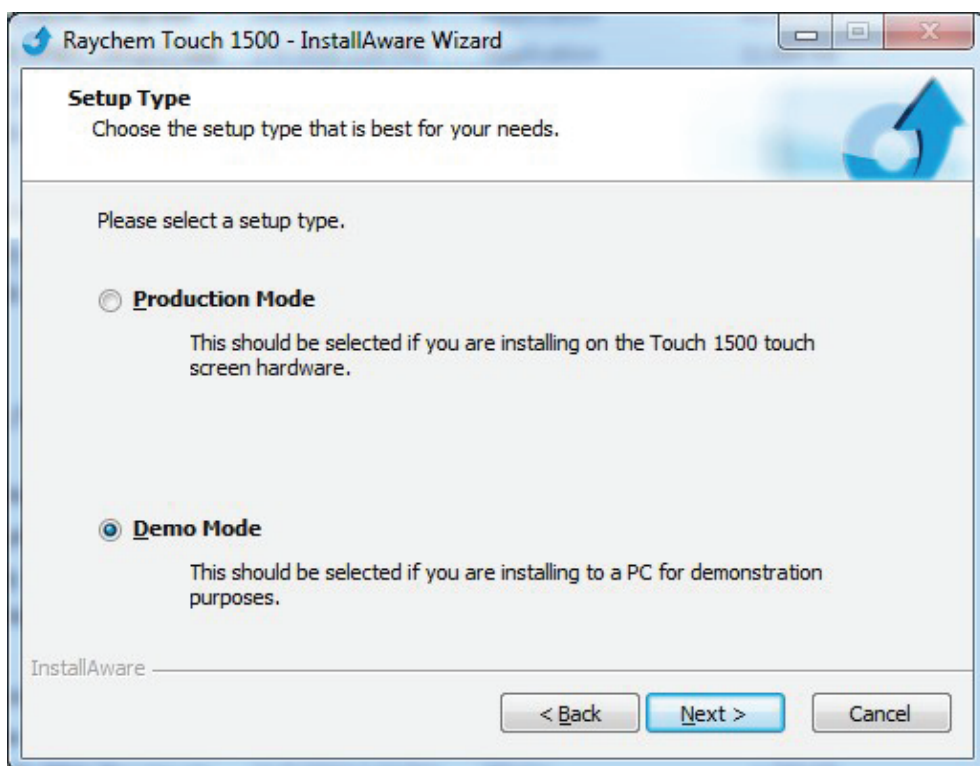


Figure C.10 Setup Installation Type

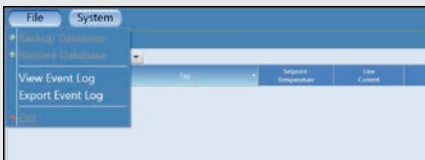

## C.2 Troubleshooting

This section includes troubleshooting tips for issues that has been reported in the past with the Touch 1500 Installation Setup.

Symptom/Problem	Resolution
<p>The Screen menus are disabled and exiting the software is not possible.</p> 	<p>When this occurs, the only choice is to use the Task Manager to end the DTSUIT.exe *32 application since you cannot shutdown the software through its menus.</p> <p>There are several possible causes:</p> <ol style="list-style-type: none"><li>1) You did not start the software as an Administrator. Check the Properties in Touch 1500 short cut and make sure under the Compatibility tab the Run as Administrator is enabled. Note: This is because the Touch 1500 database resides in the c:\Program files folder and the software requires read/write access in this folder. As a work around you can copy the entire Touch installation folder to a different folder; then try running the DTSUIT.exe from that folder.</li><li>2) The Touch cannot connect to the Microsoft SQL Compact database. It appears at times the SQL Compact is not installed correctly or perhaps in conflict with other components installed. By uninstalling and reinstalling the SQL Compact 3.5 will resolve this issue. You can download a copy of the Microsoft SQL Compact SP2 from the Web if one is not available.</li><li>3) If the Touch database is corrupted in any way, this problem will occur. You will need to uninstall and reinstall the Touch to create a new database. The database that is corrupted may or may not be recoverable.</li></ol>

### D.1 Overview

The Raychem Touch 1500 system provides a graphical user interface for our Raychem NGC-40, NGC-20/ Elexant 5010i, and Elexant Heat Tracing Control & Monitoring System. The Touch 1500 system allows the user to configure and monitor NGC-40 HTC, NGC-20/ Elexant 5010i, and Elexant heat-tracing controllers, as well as NGC-40 Bridge, NGC-40 SLIM, and NGC-40 I/O modules. The information that exists in the Touch 1500 can be access via Remote Data Access provided by the DCS Gateway. The DCS Gateway is a running process within the Touch 1500 and is dedicated to manage the Remote Data Access operations. A Touch 1500 system can support up to 3 physical connections from remote devices such as a DCS system, SCADA systems, and others. The physical connections can be either RS-485/RS-232 or Ethernet or both. The communication protocol used for Remote Data Access is Modbus and Modbus TCP.

The DCS Gateway will manage data access with DCS systems based on a user defined mapping definitions file (i.e. DCS Gateway Map file). The user defined mapping definitions translates Heat Tracing information into addressable tables that the DCS Gateway can understand. Please see Appendix D.3 DCS Gateway Map for more information on user defined mapping definitions.

### D.2 System Architecture

The diagram below shows an example of the different hardware and how they can be connected together for remote data access of Heat Tracing information.

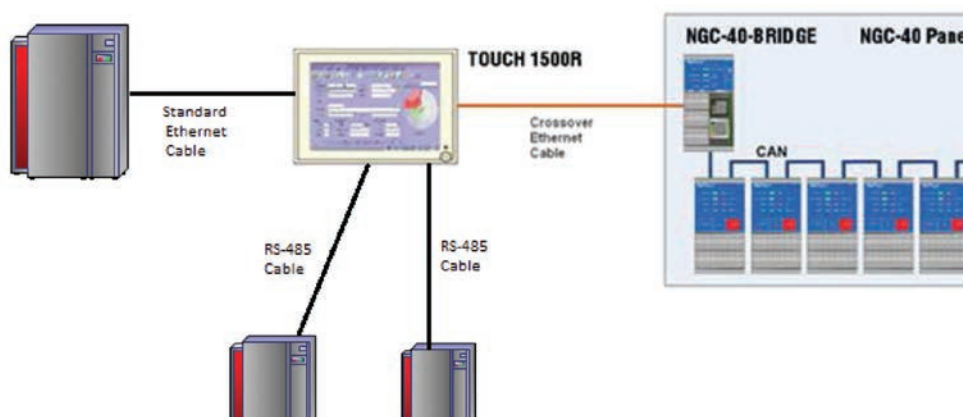


Figure D.1 System Architecture of Touch 1500 system and DCS Gateway systems connected for Remote Data Access

### D.3 DCS Gateway Map File

A DCS Gateway Map File contains a set of user defined mapping definitions. These mapping definitions provide information on what data point, from what circuit and how it can be access remotely through remote data access. An example of a data point is the Control Setpoint or Control Temperature of a circuit. A circuit can be any Heat Tracing circuit currently being controlled and monitor by the Touch 1500 system. Since the DCS Gateway is using the Modbus communication Protocol, a data point will be mapped to a Modbus data address within any of the 4 basic Modbus data type memory tables. The 4 basic Modbus data types used in Modbus communications are the Output Coils, Input Discretes, Holding Registers and Input Registers. Each Modbus data type exists in a virtual memory table that holds 65535 data items.

A set of predefined data points are made available for our user, please see the DCS Gateway Mapping Tool for more information. Below is a diagram showing the data structures within a DCS Gateway Map.

**Note:** This section refers to a mapping region configured for Mapping by Devices. Please see Appendix D.5 Mapping By Device vs By Data Points for an explanation of the Mapping By Data Points option.

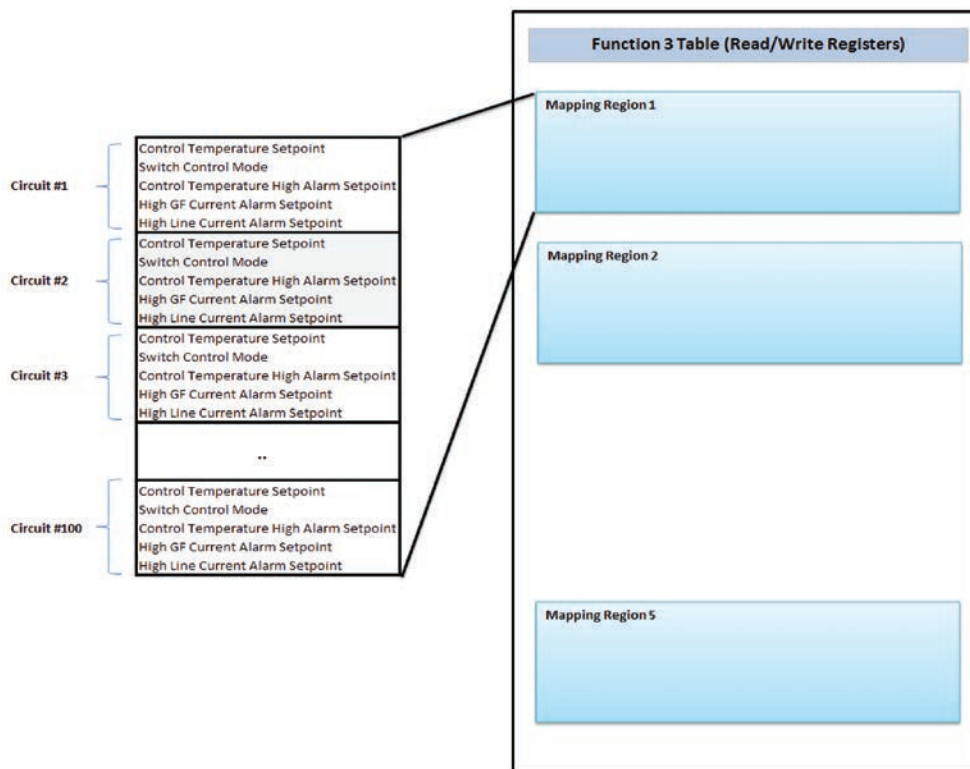


Figure D.2 DCS Gateway Map Data Representation

In a DCS Gateway Map, devices and data points are assigned to a Mapping Region. Typically there will be more than 1 Mapping regions used in a DCS Gateway Map. A Mapping Region can only exist within the boundaries of a Modbus data type memory table. Since there are 4 basic Modbus data type memory tables available to use, it's likely at least 4 Mapping Regions are needed.

For setup and maintenance of the DCS Gateway Map, a standalone Windows application called the DCS Gateway Mapping Tool is used. The tool allows to create Mapping regions and assigning devices and data points to any of the 4 basic Modbus data type memory tables. By using Modbus communications, the Modbus data type memory tables can be accessed with the equivalent Function code and offset. A DCS system can then be programmed to remotely access the mapped data.

## D.4 Mapping Region Definition

A Mapping Region by definition contains a set of data points, a list of devices, a region device type and a mapping type setting. From this definition, a Mapping Region can be translated to an area within a Function Code (Modbus data type memory) Table. Within this area, data points for different devices are available for access by upstream devices such as DCS systems. For example if a Mapping Region is assigned 10 data points, and there are 100 devices in the device list, then this Mapping Region will occupy 10 x 100 or 1000 rows in a Function Code (Modbus data type memory) Table. See Figure D.2 Gateway Map Data Representation. If one has experience using the NGC-30 UIT Modbus map, this follows the same principle. By having a fixed block size for the data points; it would be quite simple to locate the data for a particular device once you know the order of the device. For example, the devices are added to a Map region in the order determined by the user. The user can determine the starting location of the data for the device using a formula such as (block size) x (device order -1). The user can then use this information to program their DCS system. The block size is the total number of data points assigned to a Mapping Region.

When creating a Mapping Region, the user needs to know the device type. The device type will determine the types of data point selectable for this region. Once the Device type is selected, the user selects a set of data points and devices based on the device type for this region. The order of the data points and devices are important as they are grouped and layout in the format as shown in Figure D.2. DCS Gateway Map Data Representation. A device's Tag Id is used for device identification. Once a Mapping region has been filled with the appropriate data, it can then be saved to a DCS Gateway Map file.

Name	Description	Comment
Description	System Design and Planning	
Device Type	The following types are available: <ul style="list-style-type: none"> <li>• Circuit</li> <li>• Elexant</li> <li>• NGC-20/ Elexant 5010i</li> <li>• NGC-40 HTC2</li> <li>• NGC-40 HTC3</li> <li>• NGC-40 IO</li> <li>• NGC-40 SLIM</li> </ul>	A Circuit type is used as generic Heat trace controller type. This type has a basic set of data points which applies to all Heat Trace circuits. For example Control Setpoint, Control Temperature, High Ground Fault Setpoint, etc.
Region Type	4 Modbus data types are available: <ul style="list-style-type: none"> <li>• Read Write Coil (Function Code 1)</li> <li>• Read Only Coil (Function Code 2)</li> <li>• Read Write Register (Function Code 3)</li> <li>• Read Only Register (Function Code 4)</li> </ul>	
Starting Address	The starting address in the Function Code Table this Mapping Region will occupy.	
List of Data Points	A list of data points. The order of the data points in the list are in affect for this Mapping Region.	
List of Devices	A list of devices. Each device has a device tag, a parent tag, and a device type. The parent Tag and device type is optional. The orders of the devices in the list are in affect for this Mapping Region.	

Table: Mapping Region Definition

## D.5 Mapping Type by Devices vs by Data Points

Each DCS Gateway Mapping region has a Mapping Type setting. There are 2 mapping types available, Map by Devices and Map by Data Points. When the DCS Gateway creates a virtual Gateway Map in memory it will take into consideration this Mapping type and pre-arrange the Modbus address within the Gateway Map accordingly. The following example illustrates the format of each Mapping type.

#1) Example of the Modbus addresses generated with the 2 different mapping types; By Device and By Data Point. As shown below, the resulting Function Code table on the right shows the same Modbus data addresses.

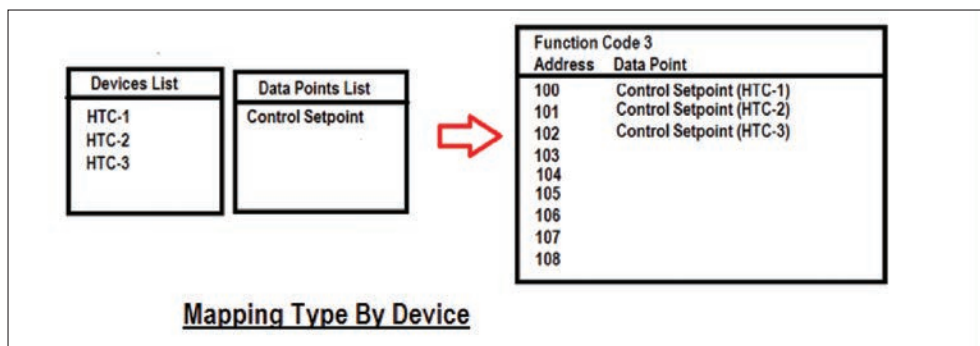


Figure D.3 Two mapping types part 1

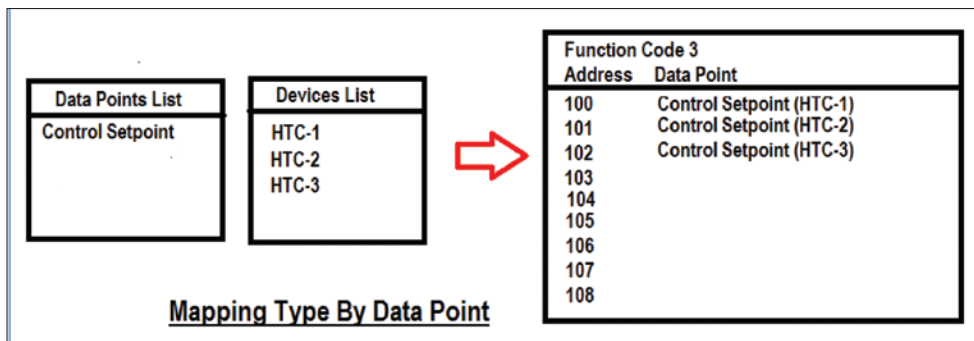


Figure D.4 Two mapping types part 2

#2) In this example there is more than 1 Data point and the results are different as illustrated.

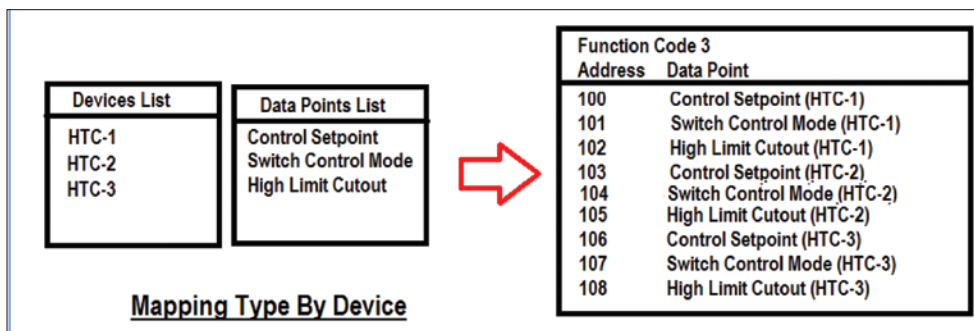


Figure D.5 Two mapping types part 3

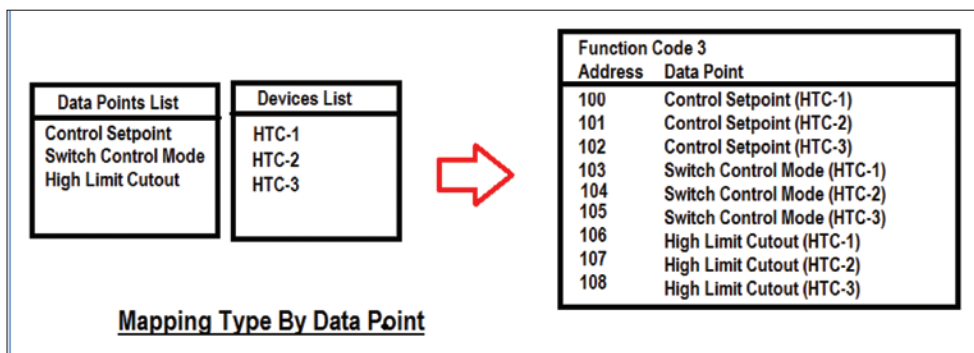


Figure D.6 Two mapping types part 4

**North America**

Tel +1 800 545 6258  
info@chemelex.com

**Latin America**

Tel +1 713 868 4800  
info@chemelex.com

**Europe, Middle East, Africa, India**

Tel +32 16 213 511  
Fax +32 16 213 604  
info@chemelex.com

**Asia Pacific**

Tel +86 21 2412 1688  
infoAPAC@chemelex.com



**Raychem Tracer Pyrotenax Nuheat**