

SONY

5-063-959-11(1)



5063959110

Digital Still Camera

RX1RⅢ

Startup Guide

WW697160/WW402748

Cyber-shot

DSC-RX1RM3

## About the "Help Guide"



For detailed instructions on using the camera, refer to the "Help Guide" (web manual).

[https://rd1.sony.net/help/dsc/2510/h\\_zz/](https://rd1.sony.net/help/dsc/2510/h_zz/)

DSC-RX1RM3 Help Guide

## Preparations


### Checking the supplied items

The number in parentheses indicates the number of pieces.


- Camera (1)
- Rechargeable battery pack NP-FW50 (1)
- Shoulder strap (1)
- Lens cap (1) (attached to the camera)
- Shoe cap (1) (attached to the camera)
- Eyepiece cup (1)
- Wrapping cloth (1)
- Startup Guide (this manual) (1)
- Reference Guide (1)

### Inserting the battery pack (supplied)/memory card (sold separately) into the camera

Open the battery/memory card cover, and insert the battery pack and a memory card into the camera. Then, close the cover.

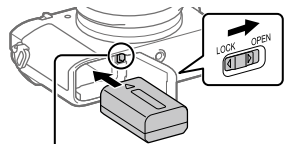


Insert the battery pack while pressing the lock lever.

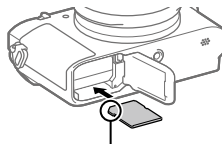

Ensure the notched corner faces correctly.

This camera is compatible with SD memory cards. When you use a memory card with this camera for the first time, format the card using the camera in order to stabilize the performance of the memory card.

### Charging the battery pack

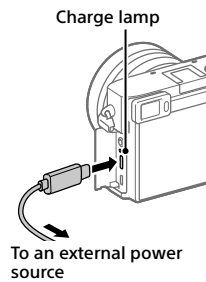

To an external power source

- 1 Turn the power off.
  - If the camera is turned on, the battery pack will not be charged.
- 2 Connect the USB Type-C® terminal of the camera to the USB Type-C terminal of a device compatible with USB PD (USB Power Delivery) using a commercially available USB Type-C cable (USB-C® – USB-C).
  - The charge lamp will light up when charging starts. When the charge lamp turns off, charging is completed.

Use a USB-PD-compatible device with an output of 18 W (9 V/2 A) or more and a USB Type-C cable (USB-C – USB-C) that supports 3 A or more.

### Performing initial setup for the camera

By establishing a Bluetooth connection (pairing) between the camera and a smartphone, you can perform initial camera setup such as date and time settings from the smartphone. Install the smartphone application on your smartphone in advance, and then follow steps 1 to 4 under "Procedures for initial camera setup."


### Installing the smartphone application



Install the application from the following website. Also, update to the latest version of the smartphone application.  
<https://www.sony.net/ca/>

### Procedures for initial camera setup

ON/OFF (Power) switch

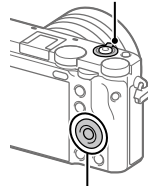

Control wheel/center button

- 1 Set the ON/OFF (Power) switch to "ON" to turn on the camera.
- 2 Select the desired language and then press the center of the control wheel.
  - The setting screen for the screen reader function and a privacy notice will appear. Read the privacy notice regarding biometrics by opening the link using your smartphone, etc.
- 3 Press the center of the control wheel.
- 4 Follow the instructions on the camera screen to connect the camera with your smartphone and perform the initial setup.
  - You can also configure or change the initial settings later from the MENU of the camera.


### Connecting (pairing) the camera with your smartphone later



For details on the connection method, refer to the following Help Guide URL:  
[https://rd1.sony.net/help/dsc/2510\\_pairing/h\\_zz/](https://rd1.sony.net/help/dsc/2510_pairing/h_zz/)

## Shooting

### Shooting still images

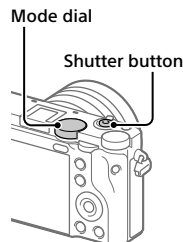

- 1 Select the desired shooting mode by turning the mode dial.
- 2 Press the shutter button halfway down to focus.
- 3 Press the shutter button all the way down.

### Shooting movies

- 1 Turn and set the mode dial to (Movie), and then press the shutter button to start recording.
- 2 Press the shutter button again to stop recording.

### Attaching the eyepiece cup (supplied)



The eyepiece cup shades the area between the viewfinder and your eye to keep out light. Attaching the eyepiece cup improves the visibility of the viewfinder.

Loosen the screw on the eyepiece cup until it can no longer be turned, and then attach the eyepiece cup straight onto the viewfinder and tighten the screw to lock the eyepiece cup into place.

## Viewing and developing RAW images on a computer

Install the computer software from the following website. Update the computer software to the latest version before using it.

<https://www.sony.net/disoft/help/>

## Using the wrapping cloth (supplied)



When carrying the camera, you can protect the camera from scratches and dirt by using the wrapping cloth (supplied). For details on how to use the wrapping cloth, refer to the Help Guide:  
[https://rd1.sony.net/help/dsc/2510\\_wrapping/h\\_zz/](https://rd1.sony.net/help/dsc/2510_wrapping/h_zz/)

## Notes on use

Refer to "Precautions" in the "Help Guide" as well.

### About the applications for smartphones/computers

The specifications of the applications may change without notice.


### Notes on handling the product

- Do not leave the lens or the viewfinder exposed to a strong light source such as sunlight. Because of the lens's condensing function, doing so may cause smoke, fire, or a malfunction inside the camera body or the lens. If you have to leave the camera exposed to a light source such as sunlight, attach the lens cap to the lens.
- If sunlight or other strong light enters the camera through the lens, it may focus inside the camera and cause smoke or fire. Attach the lens cap when storing the camera. When shooting with backlighting, keep the sun sufficiently far away from the angle of view. Even if it is slightly away from the angle of view, smoke or fire may still occur.
- This camera (including accessories) has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this camera close to persons who use such medical devices. Consult your doctor before using this camera if you use any such medical device.
- Increase the volume gradually. Sudden loud noises can damage your ears.
- Do not leave this unit, the supplied accessories, or memory cards within the reach of infants. They may be accidentally swallowed. If this occurs, consult a doctor immediately.
- When shooting with the viewfinder, you may experience symptoms such as eyestrain, fatigue, motion sickness, or nausea. We recommend that you take a break at regular intervals when you are shooting with the viewfinder.
- If the monitor or electronic viewfinder is damaged, stop using the camera immediately. The damaged parts may harm your hands, face, etc.
- When shooting still images continuously, the monitor or viewfinder may flash between the shooting screen and a black screen. If you keep watching the screen in this situation, you may experience uncomfortable symptoms such as feeling of unwellness. If you experience uncomfortable symptoms, stop using the camera, and consult your doctor as necessary.
- When recording for long periods of time or recording 4K movies, if the same part of your skin touches the camera for a long period of time while using the camera, even if the camera does not feel hot to you, it may cause symptoms of a low-temperature burn such as redness or blistering. Pay special attention in the following situations and use a tripod, etc.
  - When using the camera in a high temperature environment
  - When someone with poor circulation or impaired skin sensation uses the camera
  - When using the camera with [Auto Power OFF Temp.] set to [High]

### Sony accessories

Using this unit with products from other manufacturers may affect its performance, leading to accidents or malfunction.

Note on the 5 GHz band for wireless LAN

When using the wireless LAN function outdoors, set the band to 2.4 GHz by following the procedure below. (WW697160 only)  
• MENU →  (Network) → [Wi-Fi] → [Wi-Fi Frequency Band]


How to turn off wireless network functions (Wi-Fi, etc.) temporarily

When you board an airplane, etc., you can turn off all wireless network functions temporarily using [Airplane Mode].

How to turn on or off Wi-Fi function

Select MENU →  (Network) → [Wi-Fi] → [Wi-Fi Connect] → [On] or [Off].

How to turn on or off Bluetooth function

Select MENU →  (Network) → [Bluetooth] → [Bluetooth Function] → [On] or [Off].

For Customers in the U.S.A. and Canada

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that is deemed to comply without testing of specific absorption rate (SAR).

This equipment has been tested and found to comply with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules.


The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research.

For Customers in the U.S.A.

For question regarding your product or for the Sony Service Center nearest you, call 1-800-222-SONY (7669) .

Supplier's Declaration of Conformity

Trade Name : SONY  
Model : WW697160  
Responsible Party : Sony Electronics Inc.  
Address : 16535 Via Esprillo, San Diego, CA 92127 U.S.A.  
Telephone Number : 858-942-2230



# WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 55 °C (131 °F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

This product contains a non-replaceable button/coin cell battery.

Battery type: ML621 or MS621  
Nominal Voltage: 3 V

Important note on use of 5 GHz wireless LAN

Compliance with FCC requirement 15.407(c)  
Data transmission is always initiated by software, which is the passed down through the MAC, through the digital and analog baseband, and finally to the RF chip. Several special packets are initiated by the MAC. These are the only ways the digital baseband portion will turn on the RF transmitter, which it then turns off at the end of the packet. Therefore, the transmitter will be on only while one of the aforementioned packets is being transmitted. In other words, this device automatically discontinue transmission in case of either absence of information to transmit or operational failure.

Frequency Tolerance: ±20 ppm

For Customers in Canada

5 150-5 350 MHz band is restricted to indoor operation only.

High-power radars are allocated as primary users (i.e. priority users) of the bands 5 250-5 350 MHz and 5 650-5 850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

For Customers in Europe

WLAN	2 400 MHz	< 60 mW e.i.r.p.
	5 150 - 5 350 MHz	< 35 mW e.i.r.p.
	5 470 - 5 725 MHz	
Bluetooth	5 725 - 5 850 MHz	< 25 mW e.i.r.p.
	2 400 MHz	< 10 mW e.i.r.p.

Hereby, Sony Corporation declares that this equipment is in compliance with Directive 2014/53/EU.  
The full text of the EU declaration of conformity is available at the following internet address:  
<https://www.compliance.sony.eu>

Hereby, Sony Corporation declares that this equipment is in compliance with the UK relevant statutory requirements.  
The full text of the declaration of conformity is available at the following internet address:  
<https://compliance.sony.co.uk>

For this radio equipment the following restrictions on putting into service or of requirements for authorization of use apply in AT/BE/BG/CY/CZ/DK/EE/FI/FR/DE/EL/HU/IE/IT/LV/LT/LU/MT/NL/PL/PT/RO/SK/SI/ES/SE/UK/UK(NI)/HR/IS/LI/NO/CH/AL/BA/MK/MD/RS/ME/XK/TR:  
5 150 - 5 350 MHz band is restricted to indoor operations only.

The power delivered by the charger must be between min 2.5 Watts required by the radio equipment, and max 27 Watts in order to achieve the maximum charging speed.

USB PD fast charging



Deactivating the power management function will increase the energy consumption of the product.

For Customers in the UK

STATEMENT OF COMPLIANCE

1. Model No.: WW697160
2. Name and address of the manufacturer's authorised representative: Sony Europe B.V., The Heights, Brooklands, Weybridge, Surrey KT13 0XW, United Kingdom
3. This statement of compliance is issued under the sole responsibility of the manufacturer: Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan
4. Object of the statement: Digital Camera
5. The object of the statement described above is in compliance with the applicable security requirements in Schedule 1 of S.I. 2023 No. 1007 (Product Security)
6. Where applicable, references to the relevant standards used in relation to which compliance is declared:
7. Defined support period for security updates: 2028-12-31
8. Additional information: Note(s):  
Signed for and on behalf of:  
Sony Europe B.V.



Kris De Pauw  
Vice President


Weybridge, 2024-08-26

Sony Europe B.V.  
Registered Office: The Heights, Brooklands, Weybridge, Surrey, KT13 0XW, United Kingdom  
· Incorporated in the Netherlands No. 71682147

The support period for security updates can be found on the page linked below. The date given in this document is as of the time of release.  
<https://compliance.sony.co.uk>

For customers who purchased their camera from a store in Japan that caters to tourists

Note

Some certification marks for standards supported by the camera can be confirmed on the screen of the camera.  
Select MENU →  (Setup) → [Setup Option] → [Certification Logo].

Specifications

Camera


[System]

Camera Type: Digital Still Camera  
Lens: ZEISS Sonnar T\* 35mm single focus lens

[Image sensor]

Image format: 35 mm full frame, CMOS image sensor  
Number of effective pixels on camera: Approx. 61 000 000 pixels (still images) / approx. 50 800 000 pixels (movies)  
Total number of pixels on camera: Approx. 62 500 000 pixels

[General]

Rated input: 7.2 V  3.2 W  
Operating temperature:  
0 to 40 °C (32 to 104 °F)  
Storage temperature:  
-20 to 55 °C (-4 to 131 °F)  
Dimensions (W/H/D) (Approx.):  
113.3 × 67.9 × 87.5 mm  
113.3 × 67.9 × 74.5 mm (from front edge of lens to monitor)  
4 1/2 × 2 3/4 × 3 1/2 in.  
4 1/2 × 2 3/4 × 3 in. (from front edge of lens to monitor)

Mass (Approx.):  
498 g (1 lb 1.6 oz) (including battery pack, SD Card)

[Wireless LAN]

WW697160 (see name plate on the bottom of camera)  
Supported format:  
IEEE 802.11 a/b/g/n/ac  
Frequency band: 2.4 GHz/5 GHz


WW402748 (see name plate on the bottom of camera)  
Supported format: IEEE 802.11 b/g/n  
Frequency band: 2.4 GHz

Design and specifications are subject to change without notice.



[Eco and energy saving]

Power consumption (Off mode): Not available  
Power consumption (Standby mode/ Low power mode): 0.5 W  
Power consumption (Networked standby mode): 2.0 W (Bluetooth)/ 2.0 W (all terminals and networks connected)  
Low power mode activated:  
Within 20 minutes (default)  
Networked standby mode activated:  
Within 20 minutes (default)

Rechargeable battery pack  
NP-FW50

Rated voltage: 7.2 V 

Recommended USB-PD-compatible AC adaptor

Input: 100-240 V  50/60 Hz  
Output: 9 V  2 A or more

Compatible iPhone/iPad models

iPhone 16 Pro Max, iPhone 16 Pro, iPhone 16 Plus, iPhone 16, iPhone 15 Pro Max, iPhone 15 Pro, iPhone 15 Plus, iPhone 15, iPhone 14 Pro Max, iPhone 14 Pro, iPhone 14 Plus, iPhone 14, iPhone SE (3rd generation), iPhone 13 Pro Max, iPhone 13 Pro, iPhone 13, iPhone 13 mini, iPhone 12 Pro Max, iPhone 12 Pro, iPhone 12, iPhone 12 mini, iPhone SE (2nd generation), iPhone 11 Pro Max, iPhone 11 Pro, iPhone 11, iPhone XS Max, iPhone XS, iPhone XR, iPad Pro 13-inch (M4), iPad Pro 12.9-inch (2nd through 6th generation), iPad Pro 11-inch (M4), iPad Pro 11-inch (1st through 4th generation), iPad Pro 10.5-inch, iPad Air 13-inch (M2), iPad Air 11-inch (M2), iPad Air (3rd through 5th generation), iPad (6th through 10th generation), iPad mini (A17 Pro), iPad mini (5th through 6th generation)  
(As of January 2025)


Trademarks/Licenses

- **Cyber-shot** is a trademark of Sony Group Corporation.
- Apple, iPhone and iPad are trademarks of Apple Inc., registered in the U.S. and other countries.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- The terms HDMI™, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
- Wi-Fi, the Wi-Fi logo and Wi-Fi Protected Setup are registered trademarks or trademarks of the Wi-Fi Alliance.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation and its subsidiaries is under license.
- QR Code is a trademark of Denso Wave Inc.
- In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers. However, the ™ or ® marks may not be used in all cases in this manual.

IMPORTANT – Read the End User Software License Agreement before using your Sony product.

Using your product indicates your acceptance of the End User Software License Agreement. The software license agreement between you and Sony is available at the following URL:  
([https://rd1.sony.net/help/di/el23/h\\_zz/](https://rd1.sony.net/help/di/el23/h_zz/))

- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.



<https://www.sony.net/SonyInfo/Support/>

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

<https://www.sony.net/>