Installation Instructions

for use by heating contractor




Vitocrossal 200 CM2 Series 400, 500 and 620 Gas condensing boiler with cylinder burner

Heating input: 1445 to 2245 MBH

(423 to 658 kW)

VITOCROSSAL 200

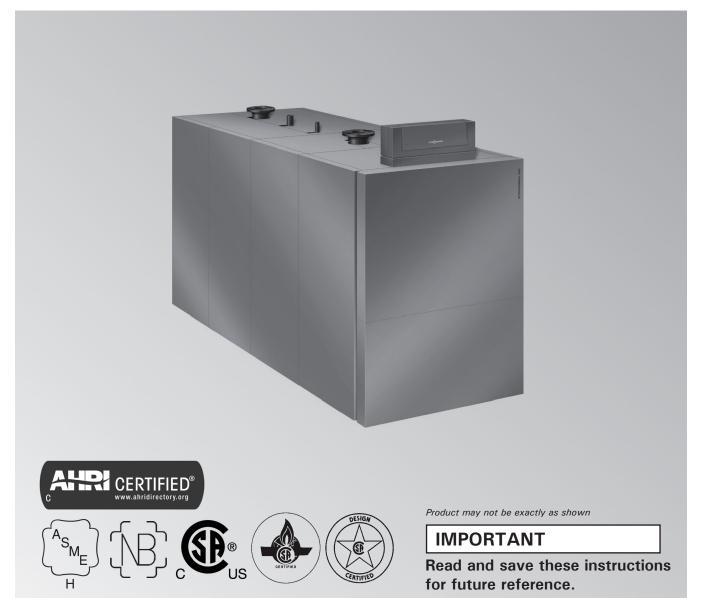

Safety, Installation and Warranty Requirements

Please ensure that these instructions are read and understood before commencing installation. Failure to comply with the instructions listed below and details printed in this manual can cause product/property damage, severe personal injury, and/or loss of life. Ensure all requirements below are understood and fulfilled (including detailed information found in manual subsections).

■ Product documentation

Read all applicable documentation before commencing installation. Store documentation near boiler in a readily accessible location for reference in the future by service personnel.

► For a listing of applicable literature, please see section entitled "Important Regulatory and Safety Requirements".



■ Warranty

Information contained in this and related product documentation must be read and followed. Failure to do so renders the warranty null and void.



Licensed professional heating contractor

The installation, adjustment, service and maintenance of this equipment must be performed by a licensed professional heating contractor.

► Please see section entitled "Important Regulatory and Installation Requirements".



Contaminated air

Air contaminated by chemicals can cause by-products in the combustion process, which are poisonous to inhabitants and destructive to Viessmann equipment.

► For a listing of chemicals which cannot be stored in or near the boiler room, please see section entitled "Mechanical Room". in this manual.



Advice to owner

Once the installation work is complete, the heating contractor must familiarize the system operator/ ultimate owner with all equipment, as well as safety precautions/requirements, shutdown procedure, and the need for professional service annually before the heating season begins.

Carbon monoxide

Improper installation, adjustment, service and/or maintenance can cause flue products to flow into living space. Flue products contain poisonous carbon monoxide gas.


▶ For information pertaining to the proper installation, adjustment, service and maintenance of this equipment to avoid formation of carbon monoxide, please see section entitled "Combustion air supply" and "Venting information" in this manual.



Fresh air

This equipment requires fresh air for safe operation and must be installed ensuring provisions for adequate combustion and ventilation air exist.

► For information pertaining to the fresh air requirements of this product, please see subsection entitled "Mechanical Room" in this manual.

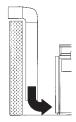

■ Equipment venting

Never operate boiler without an installed venting system. An improper venting system can cause carbon monoxide poisoning.

▶ For information pertaining to venting and chimney requirements, please see section entitled "Venting Information" in this manual. All products of combustion must be safely vented to the outdoors.



WARNING

Installers must follow local regulations with respect to installation of carbon monoxide detectors. Follow the Viessmann maintenance schedule of the boiler in the "Service Instructions" manual.

Safety, Installation and Warranty Requirements

Fiberglass wool and ceramic fiber materials



WARNING

Inhaling of fiberglass wool and/or ceramic fiber materials is a possible cancer hazard. These materials can also cause respiratory, skin and eye irritation.

The state of California has listed the airborne fibers of these materials as a possible cancer hazard through inhalation. When handling these materials, special care must be applied.

Suppliers of ceramic fiber products recommend the following first aid measures:

- Respiratory tract (nose and throat) irritation:
 If respiratory tract irritation develops, move the person to a dust free location.
- Eye irritation: If eyes become irritated, flush immediately with large amounts of lukewarm water for at least 15 minutes. Eyelids should be held away from the eyeball to ensure thorough rinsing.
 Do not rub eyes.
- Skin irritation: If skin becomes irritated, remove soiled clothing. Do not rub or scratch exposed skin.
 Wash area of contact thoroughly with soap and water.
 Using a skin cream or lotion after washing may be helpful.
- Gastrointestinal irritation: If gastrointestinal tract irritation develops, move the person to a dust free environment

Suppliers of fiberglass wool products recommend the following precautions be taken when handling these materials:

- Avoid breathing fiberglass dust and contact with skin and eyes.
- Use NIOSH approved dust/mist respirator.
- Wear long-sleeved, loose fitting clothing, gloves and eye protection.
- Wash work clothes separately from other clothing. Rinse washer thoroughly.
- Operations such as sawing, blowing, tear-out and spraying may generate airborne fiber concentration requiring additional protection.

First aid measures

- If eye contact occurs, flush eyes with water to remove dust. If symptoms persist, seek medical attention.
- If skin contact occurs, wash affected areas gently with soap and warm water after handling.



WARNING

Appliance materials of construction, products of combustion and the fuel contain alumina, silica, heavy metals, carbon monoxide, nitrogen oxides, aldehydes and/or other toxic or harmful substances which can cause serious injury or loss of life and which are known to the State of California to cause cancer, birth defects and other reproductive harm. Always use proper safety clothing, respirators and equipment when servicing or working nearby the appliance.

Codes

The installation of this unit shall be in accordance with local codes. In the absence of local codes, use:

CAN/CSA-B149.1 or .2 Installation Codes for Gas Burning Appliances for Canada. For U.S. installations, use the National Fuel Gas Code ANSI Z223.1. Always use latest editions of codes.

In Canada all electrical wiring is to be done in accordance with the latest edition of CSA C22.1 Part 1 and/or local codes. In the U.S., use the National Electrical Code ANSI/NFPA 70.

The heating contractor must also comply with the Standard for Controls and Safety Devices for Automatically Fired Boilers, ANSI/ASME CSD-1 where required by the authority having jurisdiction.

Mechanical room

Ensure the mechanical room complies with the requirements of the System Design Guidelines and/or Technical Data Manual.

In addition, see section entitled "Mechanical Room" on page 9 in this manual.

Viessmann recommends installation of an additional electrical disconnect switch and a fuel shut-off valve (if possible) outside the mechanical room or enclosed area of installation.

The maximum room temperature of the mechanical room where the boiler is located must not exceed 104°F (40°C).

Page

Safety

General Information

Boiler

Safety, Installation and Warranty Requirements	2
Product documentation	2
Warranty	2
Licensed professional heating contractor	2
Contaminated air	2
Advice to owner	2
Carbon monoxide	2
Fresh air	2
Equipment venting	2
Fiberglass wool and ceramic fiber material	3
First aid measures	3
Codes	3
Mechanical room	3
Important Descriptors and Installation Descriptors	G
Important Regulatory and Installation Requirements About these Installation Instructions	
Product Information	
Mechanical Room	
For Retrofit Applications	
Recommended Minimum Service Clearances	
Preparing the Boiler	
Boiler Insulation	
Boiler Door Insulation	12
Boiler Door	13
Combustion Air Flex Hose	14
Flex Hose Air Intake Adaptor	14
Boiler Connections	15
Water side connection	15
Safety Header	17
Rails and Supports	18
Side Panels	18
Cross Bar	19
Mounting the Burner	19
Combustion Air Adapter Burner Connection	20
Front Side Panels	21
Bottom Plate	21
Electrical Connections	22
Boiler Power Supply	22
Routing Cables	23
Boiler Water Temperature Sensor	24
Flue Gas Temperature Sensor and	
Pipe Coupling Connection	24
Condensate Connection	25
Rear Panels	27
Boiler Control and Junction Box	27
Top Panels	28
Front Panels	28
Control Panel and Covers	29
Gas Flue Adaptor	29
Gas Connections	
Valve leak test	
Boiler Piping in Heating / Cooling Application	
Initial System Fill	
General	
System Layout 1	
System Layout 2	37

Page

Venting

General Venting Information	.38
Installation steps (outline)	.38
Recommended venting practice	38
Approved venting materials	39
Vent termination location requirements	
(for installations in Canada)	40
Vent termination location requirements	
(for installations in the U.S.A.)	40
Flashing and storm collar installation	41
Additional Requirements for Stainless Steel	
Vent Pipe Material	
Exhaust vent/air intake connection to boiler	.41
Requirement for Rigid SS/PP Vent Pipe Material	.42
Requirements for PP and stainless steel	.42
Vent system suppliers	.42
Vent Requirements	.42
Combustion air supply, room air dependant	
application only	
Direct Venting (Two Pipe System)	
Side wall vent termination [stainless steel, CPVC or PP].	
Side Wall Venting	
Side wall vent termination [stainless steel or PP]	
Component Installation Guide	
Flashing and storm collar installation	.46
Vent Termination Location Requirements - Vertical	
Installation of Support System - PP	
Bracing	
Vent system suppliers	
Long Sweep Elbows	
Standard long sweep elbow equivalent length material.	
Two Pipe System-Vertical Exhaust/Vertical Air Intake	
Two Pipe System-Horizontal Exhaust/Horizontal Air Intake	
Two Pipe System-Vertical Exhaust/Horizontal Air Intake	
Two Pipe System-Vertical/Horizontal Installations	
Single Pipe-Vertical Exhaust / Room Air Dependent	
Single Pipe-Horizontal Exhaust / Room Air Dependent	
Single Pipe System-Vertical/Horizontal Installations	53
Maximum allowable equivalent length -	
stainless steel / PP	
Multiple Boiler Installations	
Horizontal vent termination	
Vertical vent termination	53

Venting Options - Stainless Steel/PP

Important Regulatory and Installation Requirements

For Polypropylene venting systems only

Minimum and maximum wall thickness through which the horizontal vent-air intake termination may be installed:

Minimum: 1 in. (25.4 mm) Maximum: 30 in. (762 mm)

Vent-air intake system must be properly installed and sealed. If PP venting system passes through an unheated space, such as an attic, it must be insulated.

The insulation must have an R value sufficient to prevent freezing of the condensate. Armaflex insulation with $\frac{1}{2}$ in. thickness and higher can be used.

Venting clearance to combustibles (Stainless Steel / Polypropylene)

As per vent manufacturer's requirements.



WARNING

Failure to ensure that all flue gases have been safely vented to the outdoors can cause property damage, severe personal injury, or loss of life. Flue gases may contain deadly carbon monoxide.



A CAUTION

Under certain climatic conditions some building materials may be affected by flue products expelled in close proximity to unprotected surfaces. Sealing or shielding of the exposed surfaces with a corrosion resistant material (e.g. aluminum sheeting) may be required to prevent staining or deterioration. The protective material should be attached and sealed (if necessary) to the building before attaching the vent termination. It is strongly recommended to install the vent termination on the leeward side of the building.

Carbon Monoxide Detectors

The installer must verify that at least one carbon monoxide alarm has been installed within a residential living space or home following the alarm manufacturer's instructions and applicable codes before putting the appliance into operation.

Working on the equipment

The installation, adjustment, service, and maintenance of this boiler must be performed by a licensed professional heating contractor who is qualified and experienced in the installation, service, and maintenance of hot water boilers. There are no user serviceable parts on the boiler, burners, or control.

Note: The completeness and functionality of field supplied electrical controls and components must be verified by the heating contractor. This includes low water cut-offs, flow switches (if used), staging controls, pumps, motorized valves, air vents, thermostats, etc.

Ensure main power supply to equipment, the heating system, and all external controls has been deactivated. Close main gas supply valve. Take precautions in all instances to avoid accidental activation of power during service work.

Technical literature

Literature for the Vitocrossal 200 CM2 boiler:

- Technical Data Manual
- Installation Instructions
- Service Instructions
- Operating Instruction
- Instructions of other products utilized and installed
- Installation codes mentioned in this manual and as locally applicable

Note: Leave all literature at the installation site and advise the system operator/ultimate owner where the literature can be found. Contact Viessmann for additional copies.

This product comes with several safety instruction labels attached. Do not remove!

Contact Viessmann immediately if replacement labels are required.

Important Regulatory and Installation Requirements (continued)

ASME CSD-1 Standard

The ASME CSD-1 standard is published by ASME (American Society of Mechanical Engineers) and covers the requirements for the assembly, installation, maintenance, and operation of the controls and safety devices on automatically operated boilers directly fired with gas, oil, gas-oil, or electricity. The gas train of this boiler meets the requirements as set forth in the ASME CSD-1 standard.

IRI (Industrial Risk Insurers)

IRI (Industrial Risk Insurers) requirements for boilers have been replaced by GE Global Asset Protection (GAP) Services requirements, please refer to section describing GE GAP requirements.

GE GAP (Global Asset Protection)

GE GAP Services publishes GE GAP Guidelines for various risks including boiler combustion codes and standards. In many cases, they adopt other existing nationally recognized standards. GE GAP Guidelines replace and eliminate the former IRI requirements. GE GAP requires compliance with ASME CSD-1 up to 12,500,000 BTU.

FM (Factory Mutual) Global

FM Global (formerly Factory Mutual Systems) participates on the ASME CSD-1 Committee and has aligned their requirements with those of ASME CSD-1. FM Gobal will accept a standard UL or ETL Listed Boiler complying with ASME CSD-1 up to 2,500,000 BTU.

From 2.5 to 12.5 Million BTU, they still align with the ASME CSD-1 standard but may require additional FM Global approved components.

Note: The local GE GAP or FM Global Inspectors have the right to request additional safeguards for unusual risks, but the ASME CSD-1 standard as outlined is normally accepted as meeting their requirements.

About these Installation Instructions



Take note of all symbols and notations intended to draw attention to potential hazards or important product information. These include "WARNING", "CAUTION", and "IMPORTANT". See below.



WARNING

Indicates an imminently hazardous situation which, if not avoided, could result in death, serious injury or substantial product/property damage.

► Warnings draw your attention to the presence of potential hazards or important product information.



CAUTION

Indicates an imminently hazardous situation which, if not avoided, may result in minor injury or product/property damage.

Cautions draw your attention to the presence of potential hazards or important product information.

IMPORTANT

► Helpful hints for installation, operation or maintenance which pertain to the product.



- ▶ This symbol indicates that additional, pertinent information is to be found.
- This symbol indicates that other instructions must be referenced.

Product Information



WARNING

Exposing the boiler to pressures and temperatures in excess of those listed will result in damages, and will render warranty null and void.

High efficiency gas-fired hot water condensing boiler.

For operation with modulating boiler water temperatures in closed loop, forced circulation hot water heating systems.

The Vitocrossal 200, CM2 boilers are CSA certified with Viessmann burners which must be used in conjunction with this boiler series.

The proper burner size must be verified and the burner must be adjusted so that the maximum input of the appropriate boiler size is always observed and adjusted. The gas burner must always be installed according to the instructions provided by the burner manufacturer.

The boiler model selected should be based on an accurate heat loss calculation of the building. The boiler selected must be compatible with the connected radiation.

The Vitocrossal 200 boiler is suitable for a maximum operating pressure of 75 psig and a maximum boiler water temperature of 210°F (99°C).

This boiler does not require a flow switch.

Mechanical Room

The Vitocrossal 200, CM2 boiler should be located in a heated indoor space. The boiler should also be located near a floor drain and as close as possible to the vertical chimney or vent.

Whenever possible, install boiler near an outside wall so that it is easy to duct fresh air directly to the boiler area.

Install boiler on flooring capable of supporting the weight of the boiler filled with water.

Do not use exhaust fans without adding additional provisions for fresh combustion air (e.g. fresh air fan) in the boiler room and do not install the Vitocrossal 200 boiler in rooms with refrigeration equipment. This boiler requires uncontaminated air for safe operation - do not install where chemicals are stored.

- Do not operate when air is polluted with halogenated hydrocarbons (e.g. as in aerosols, paints, solvents and cleaning agents)
- Prevent very dusty conditions
- Prevent high levels of humidity
- Prevent freezing and ensure good ventilation.


Otherwise, the system may suffer faults and damage.

For Retrofit Applications

Before boiler is connected to piping/heating system, (which have been previously in service) the piping must be flushed with city pressure water (50-60 psi) to remove sludge and other contaminates.

Failure to flush out the heating system piping may result in restricted flow and/or deposits resulting in boiler failure. This failure is not covered under warranty.

Recommended Minimum Service Clearances

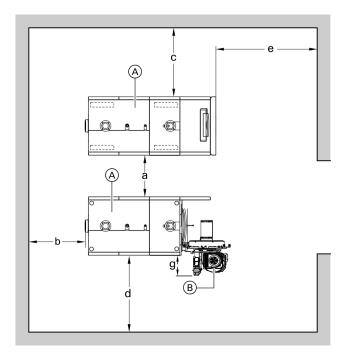

Legend

- A Boiler
- (B) Burner
- *1 Clearance may be reduced to zero in multi-boiler installations, provided the side panel removal is not required.

Note: The burner, boiler control, condensate trap, venting and heat exchanger are still fully accessible from the front and rear of the boiler.

*2 Clearance for vent pipe installation.

To enable convenient installation and maintenance, observe the stated clearance dimensions. Maintain the minimum clearances where space is tight.

In the delivered condition, the boiler door hinge bracket is factory installed on the left side of the door. If required, the boiler door hinge bracket can be reinstalled on the right side of the door.

CM	2	400	500	620
a *1	in. (mm)	20 (500)	20 (500)	20 (500)
b *2	' in. (mm)	30 (760)	30 (760)	30 (760)
С	in. (mm)	20 (500)	20 (500)	20 (500)
d	in. (mm)	20 (500)	20 (500)	20 (500)
е	in. (mm)	24 (600)	24 (600)	24 (600)
f	in. (mm)	11 (280)	11 (280)	11 (280)
g	in. (mm)	15½ (395)	15½ (395)	15½ (395)


Mechanical room

- Avoid air contamination by halogenated hydrocarbons (e.g. as in sprays, paints, solvents and cleaning agents)
- Avoid very dusty conditions
- Avoid high levels of humidity
- Protect against frost and ensure good ventilation, otherwise the system may suffer faults and damage. In rooms where air contamination from halogenated hydrocarbons is to be expected, operate the boiler only in balanced flue mode.

Minimum clearances to combustibles

Boiler model CM2	400	500	620			
Тор	0					
Sides	0					
Flue	As per vent manufacturer's specifications					
Front	0					
Floor	combustible					

Preparing the Boiler

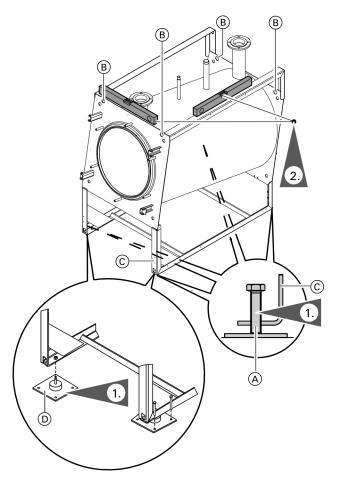

Legend

- (A) Leveling bolt
- B Boiler end plates (lifting holes)
- © Boiler frame
- D Seismic mount (optional accessory)

Note: To install lifting straps, use the lifting holes in the boiler end plates (B).

Observe the minimum clearances, see page 10.

It is recommended that the boiler is to be installed on a concrete base.

A recommended size of the concrete boiler base should be 50 in. (1250 mm) wide x 31 in. (800 mm) long x 4 in. (100 mm) thick for each boiler.



WARNING

If flue gas connection is damaged leakage may occur. Do not lift boiler at the flue gas connection.

 Remove the wooden shipping block from boiler base. Remove the 4 leveling bolts (A) from boiler's accessory package and install into boiler base.

Note: When using seismic mounts (optional accessory) do not install levelling bolts.




Refer to the Seismic bracket Installation Instructions when using the optional seismic mounts.

- 2. It is recommended to place a flat piece of steel plate under each leveling bolt for better weight distribution and adjustment. Level the boiler, by adjusting the floor leveling bolts.
- 3. Remove the wooden block on the boiler doors.

Note: If the boiler is installed even with the ground, install a condensing drain above the ground max. 2 in. (50 mm).

Boiler Insulation

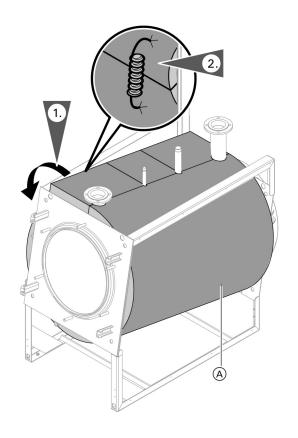


Remove all the components of the boiler jacket from the shipping box.

- 1. Wrap around the insulation blanket (A) (black nylon facing out) and look for boiler's fitting cutouts.
- 2. Secure with spring clips.

IMPORTANT

The insulation blanket is not reversible. Ensure the correct orientation prior to installation.

Boiler Door Insulation

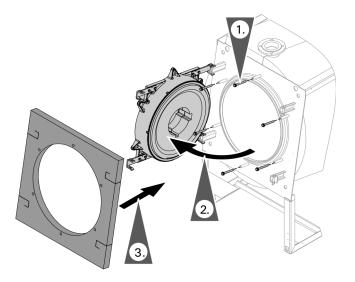


- 1. Remove six boiler door bolts and set aside.
- 2. Swing the boiler door open.
- 3. Apply the boiler door insulation.



CAUTION

The boiler door can cause damage and personal injury if it swings shut. After opening the boiler door take measures to prevent it from swinging shut.

Boiler Door

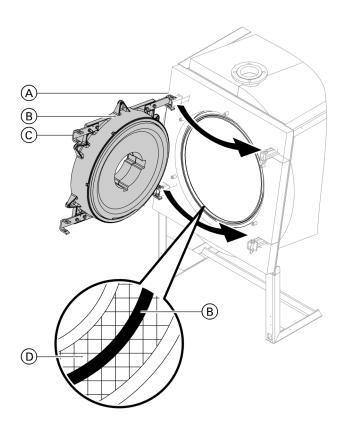

Converting the boiler door


1. To convert the boiler door to the opposite side move hinge pin ${\widehat{\mathbb A}}$ to the RH side.

Note: Ensure that sealing frame (B) presses onto the centre of gasket (D) in the boiler opening. It may be necessary to align mounting brackets (C).

Legend

- A Door hinge pin
- B Boiler door gasket frame
- © Aligning bracket
- D Boiler door gasket


Combustion Air Flex Hose

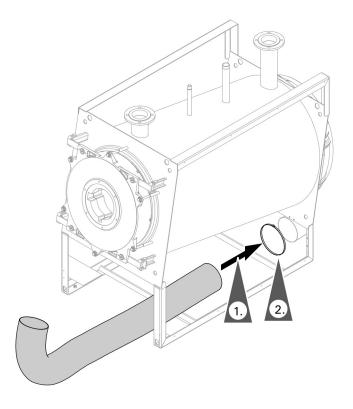

- Attach the flex hose Ø 8 in. (200 mm) to the flex hose adaptor and secure the flex hose to the flex hose adaptor with the retaining clamp.
- 2. Secure the flex hose to the support bracket with the retaining clamp.

Note: Do not squeeze hose when securing it with the retaining clamp.

Flex Hose Air Intake Adaptor

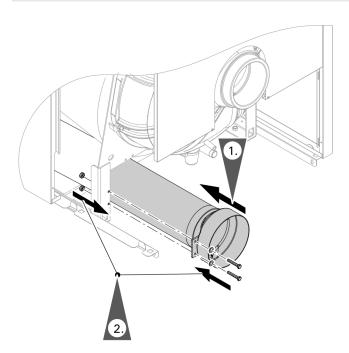

Note: The combustion air intake adapter must be installed before installing the boiler insulation (whether the air for the combustion is drawn directly from the outdoors or a Room Air Dependent combustion system is used).

- Place the flex hose adaptor to the boiler frame bracket.
- 2. Attach using two M8 bolts, nuts and washers.

Boiler Connections

Water Side Connection

Note: Make all connections free of load and torque stresses.

The existing heating system must be properly flushed, especially if the Vitocrossal 200 boiler is connected to an existing heating system in a retrofit application. See page 9 for details.

Connect the system to the boiler according the diagram on page 16.

Note: All connections which are not being utilized for water connections or for controls must be properly closed.

The supplied air vent and pressure relief valve must be installed on the top of the boiler - the alternate pressure relief valve location may be in the boiler supply line. The piping to the precharged expansion tank, as well as any automatic feed water required, must be connected to the boiler drain opening or the safety return connection.

It is recommended that the boiler pump be installed on the return pipe, pumping water into the boiler.


The supplied low water cut-off should be installed directly on top of the boiler or may be installed in the boiler return piping above the pressure vessel.

Note: Piping diagrams for specific system layouts are available. Please enquire with your local Viessmann sales representative.

IMPORTANT

The Vitocrossal 200 is only suited for hot water heating. Do not install a 4-way mixing valve, bypass valve or similar.

Boiler Connections (continued)

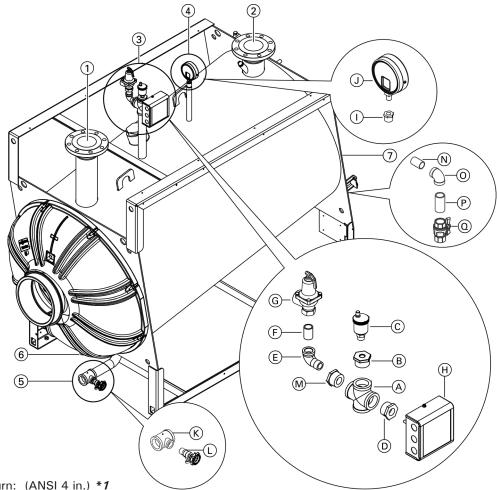

- 1) Boiler return: (ANSI 4 in.) *1
- 2 Boiler supply: (ANSI 4 in.) *1
- 3 Safety port (Safety valve, low water cutoff and automatic air vent) NPT 11/4
 - (A) Cross 11/4 in.


Legend

- B Hex bushing 11/4 in. x 3/8 in.
- © Air vent with shut-off base
- D Hex bushing 11/4 in. x 3/4 in.
- (E) 90° Street elbow 1 in.
- F Nipple 1 in. x 2 in.
- G Pressure relief valve, 75 psi
- (H) Low water cutoff *3
- 4) Pressure gauge fem. connection NPT ½ in.
 - Hex bushing ½ in. x ¼ in.
 - (J) Pressure gauge
- 5 Drain and fitting for membrane expansion tank
- 6 Condensing water drain NPT 1/2 in.
 - \bigcirc Tee 1½ in x 1½ in. x ¾ in.
 - (L) Sediment faucet 3/4 in.
 - M Hex bushing $1\frac{1}{4}$ in. x 1 in.
- 7 Gas line fittings
 - Nipple, 11/4 in. x 21/2 in.
 - © 90° Elbow, 1¼ in.
 - P Gas ball valve, 11/4 in.
 - \bigcirc Reduction tee 1½ in x 1½ in. x ¾ in.

Thermometer *2 (not shown)

- *1 Counter flanges ANSI 4 in., gaskets and hardware (field supplied)
- *2 Install anywhere in the supply piping near boiler (not shown)
- *3 The low water cutoff may be installed on the safety port as shown, or installed in the boiler return piping above the pressure vessel.

Boiler Connections (continued)

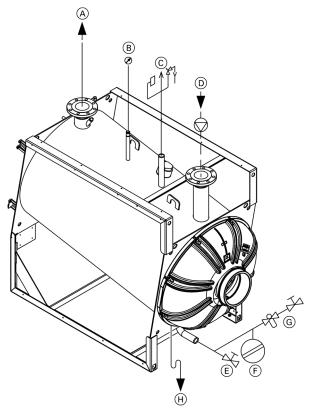

Legend

- (A) Boiler supply
- B Pressure gauge
- © Pressure relief valve
- (D) Boiler return
- (E) Drain valve
- (F) Precharged expansion tank
- (G) Automatic fill
- (H) Condensing water drain

All Vitocrossal 200 boilers are hydrostatically factory tested to ASME requirements.

Safety Header



CAUTION

Do not connect heating system to safety header.

- 1. Locate safety port on boiler.
- 2. Install safety header to safety port.

Note: The minimum water pressure is necessary for safe operation.

Safety valve: All boilers must have a pressure relief valve.




WARNING

Exposing the boiler to pressures and temperatures in excess of those listed will result in damages, and will render warranty null and void.

Note: Make all connections free of load and torque stresses.

Rails and Supports

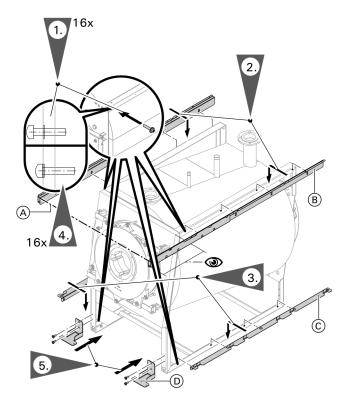


- Insert four M6 x 10 screws halfway into each side of the top and base frame.
- 2. Hook the top LH and RH rails onto the top frame using the keyholes.
- 3. Hook the bottom LH and RH rails onto the base frame, so that the rails protrude to the rear.
- Make sure the top rails are aligned at the front (see (A)). Then tighten all screws to secure each rail.
- 5. Install bottom plate brackets using two M6x15 screws per bracket. Pre fit the side and top panels to allow for rail alignment. Once rails are aligned, remove the side and top panels and tighten screws (see pages 18 and 27 for panel installation).

Legend

- A Rail alignment
- (B) Rails on top frame
- © Rails on base frame
- D Body supports (included with the boiler)

Side Panels

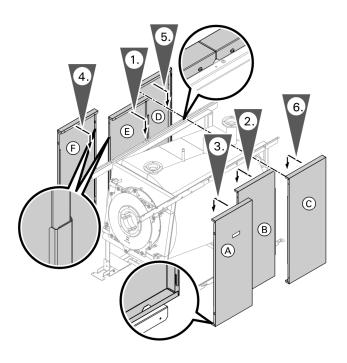


Note: Adjust the side panels to line up with the front panel (A) before securing with screws.

- Install left center side panel (E). Observe aligning notches and cutouts.
- Install right front side panel (A). Observe aligning notches and cutouts.
- 4. Install left front side panel (F). Observe aligning notches and cutouts.
- Install rear left side panel D. Observe aligning notches and cutouts.
- Install right rear side panel ©. Observe aligning notches and cutouts.
- 7. Secure side panels to the top rails with two 2.8 mm screws per panel.

Legend


- (A) Side panel, front
- B Side panel, centre
- © RH rear side panel
- D LH rear side panel
- E Side panel, centre
- F Side panel, front


Cross Bar

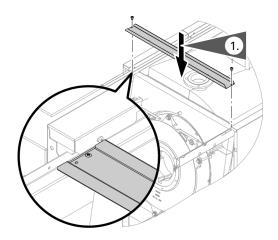

 Install the cross bar (using the rear holes) to the top rail with two screws.

Mounting the Burner

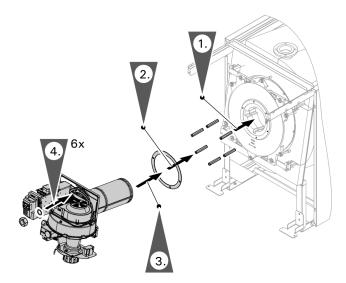

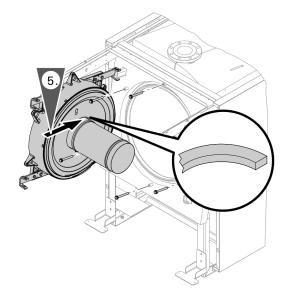

- 1. Insert six M12 threaded studs into the boiler door.
- 2. Put gasket in place.
- Position the burner at the boiler door, guiding the burner gauze assembly carefully through the opening.

Note: Do not remove the burner gauze assembly protection during the installation to the boiler door. Ensure that the burner gauze assembly is kept free from the thermal insulation block fibres.

Note: The burner should be fitted by two people or with the use of a lifting aid. Take care not to damage the electrodes and burner gauze assembly.

4. Tighten the six nuts M12 diagonally and torque to a minimum of 13 lb.ft (18 Nm).

Note: All parts required for installing the burner are contained in the burner carton.

Open the boiler door and carefully remove the burner gauze assembly protection and carefully fill the gap between the door refractory and the burner using the mineral wool insulation provided.

Note: Insure the blast tube insulation is packed in such a fashon that it is flush with the combustion chamber door.




CAUTION

Faults may occur if the burner gauze assembly is contaminated or incorrectly installed. Ensure that the combustion chamber and the burner gauze assembly are kept free from the thermal insulation block fibres.




Refer to the Service Instructions when checking for electrode gap or burner gauze damage.

Mounting the Burner (continued)

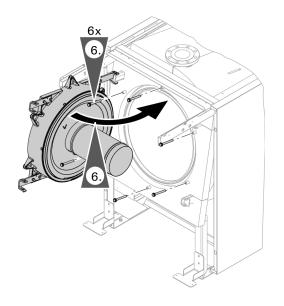


6. Close boiler door and tighten diagonally the six M12 bolts. Torque to 29.5 lb.ft (40 Nm).

Combustion Air Adapter Burner Connection

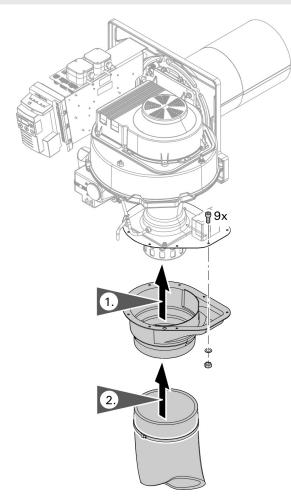

- Secure intake connector with hex head screws, washers and nuts to the flange of the rotary damper.
- 2. Secure ventilation air hose DN 200 with hose clip \varnothing 8 in. (\varnothing 200 mm) on the intake connector.

Front Side Panels

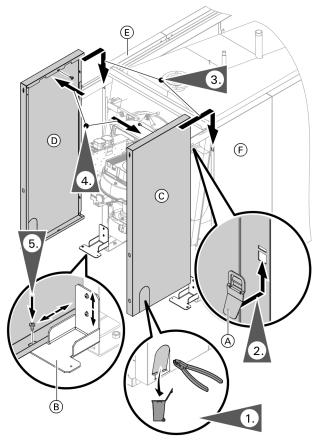

The gas train on the burner meets the requirement of ASME/CSD-1.

 Cut out the aperture in front side panel either left or right.


Note: For ease during burner maintenance, route the gas supply pipe from the opposite side of the burner hinges (otherwise the panel cannot be removed when swinging burner left or right). See page 13.

- 2. Fit two clips (A) per side panel (included in the accessory pack).
- 3. Using the clips hook front side panels \bigcirc and \bigcirc into side panels \bigcirc and \bigcirc .
- 4. Loosely secure front side panels © and D to the top rails with one screw M6 x 10 per panel.
- 5. After hooking in the side panels, align supports B and secure to the side panels with one screw M6 x 10 each.

Legend


A Clips (included in the accessories package).

Bottom Plate

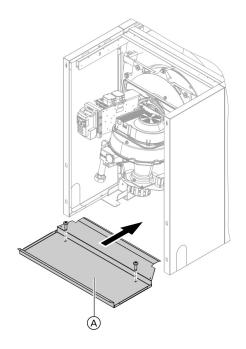

- 1. Install bottom plate (A) between the side panels.
- 2. Align and secure with screws.

Electrical Connections

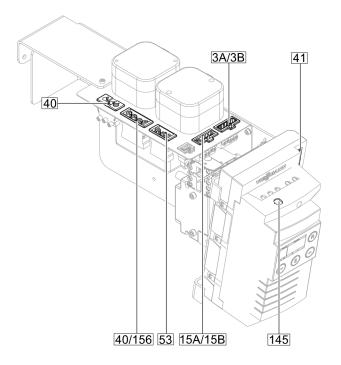


- 3A/3B Boiler water temperature sensor
- 15A/15B Flue gas temperature sensor
- 40 Power cable to junction box
- 40/156 Vitotronic power supply
- 41 Burner cable to Vitotronic control
- 53 Rotary vent damper connection (optional accessory)
- 145 KM BUS cable to Vitotronic control

Note: Never allow cables or leads to come into contact with hot components. Secure all cables and leads with cable ties.

- 1. Route the burner cables to the burner; apply strain reliefs or cable connectors as required.
- 2. Plug burner cable 41 and KM BUS cable 145 into the burner control unit.
- Plug control unit connecting cable 40/156, boiler sensor leads 3A/3B, flue gas sensor lead 15A/15B and power cable 40 and flue gas damper cable 53 into the couplings on the mounting plate on the burner side.
- 4. Plug control unit connecting cable 40/156, 41 and KM BUS cable 145 into the corresponding connections of the Vitotronic control.

Note: For details of lead and cable routing see page 23.

Boiler Power Supply

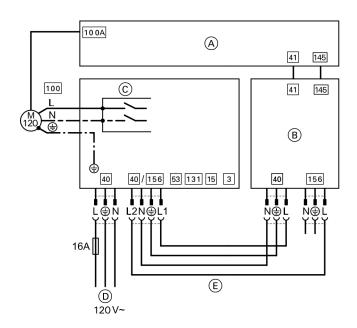

Note: Route 120V cables and low voltage leads separately.

Connect power cable with plug 40 to the power supply.




WARNING

Incorrect core allocation can result in serious injury and damage to the appliance. Never interchange cores "L1", "L2" and "N".

Legend

- (A) Burner control unit
- (B) Vitotronic control
- © Mounting plate with mains filter
- D Power supply (cable with plug 40)
- E Connecting cable 40/156

Routing Cables

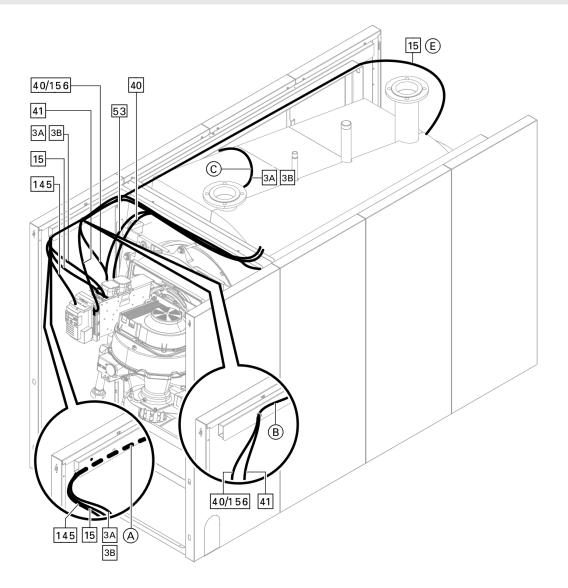

Boiler water temperature sensor (supplied with the control unit) For installation see page 25.

15 Flue gas temperature sensor

40/156 Control unit connecting cable

41 Burner cable

145 KM BUS cable

53 Flue gas damper

Note: Route 120V cables and low voltage leads separately.


Route along the top rail (A) in a bundle using plug-in cable retainers.

Route to the sensor well \bigcirc above the thermal insulation without looping the lead. Secure with a clamp. For installation of the sensor see page 24.

Route to the flue gas collector E.

Note: Insert the boiler water temperature sensor as far as possible into the sensor well.


Boiler Water Temperature Sensor

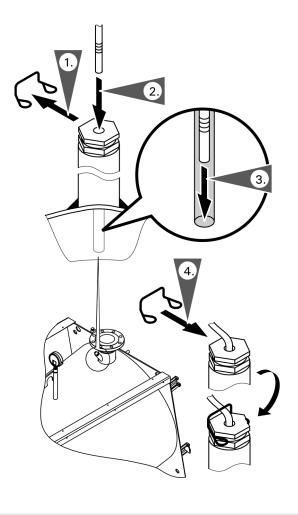

Note: The boiler water temperature sensor is located at the boiler supply connection.

- 1. Remove spring clip (set aside).
- 2. Insert 6 in. (150 mm) temperature sensor.
- 3. Observe the inserted depth.
- 4. Secure sensor lead with spring clip.
- Insert the 3A and 3B plug to the burner electrical connector.

Flue Gas Temperature Sensor and Pipe Coupling Connection

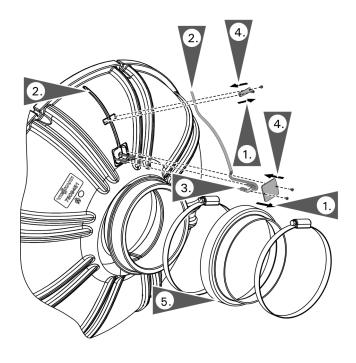


For boilers equipped with individual temperature sensors

- Remove the screws, the cable strap and connector cover from the flue gas collector and set aside.
- 2. Route the flue gas temperature sensor cable along the channel in the flue gas collector.
- 3. Connect the individual cable connectors to the flue gas collector 15A and 15B sensor connectors.
- 4. Install the cable strap and connector cover with screws and tighten.
- 5. Install the flue gas pipe coupling to the flue gas collector using the supplied gear clamp.

IMPORTANT

When inspecting or servicing the flue gas pipe coupling inspect the coupling for leaks using a certified leak detector.

Flue Gas Temperature Sensor and Pipe Coupling Connection (continued)

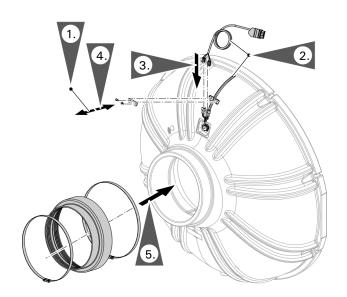


For boilers equipped with single combined temperature sensors

- 1. Remove the screws, and cable strap from the flue gas collector and set aside.
- 2. Route the flue gas temperature sensor cable along the channel in the flue gas collector.
- 3. Connect the individual cable connectors to the flue gas collector 15A and 15B sensor connectors.
- 4. Install the cable strap and connector cover with screws and tighten.
- 5. Install the flue gas pipe coupling to the flue gas collector using the supplied gear clamp.

IMPORTANT

When inspecting or servicing the flue gas pipe coupling inspect the coupling for leaks using a certified leak detector.

Condensate Connection

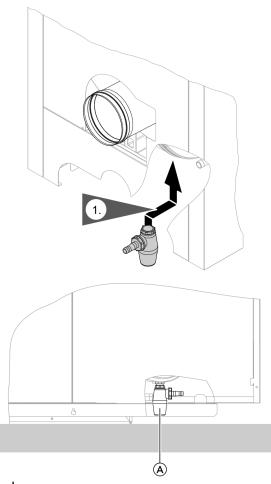

1. Fill the siphon with water and attach to boiler.


IMPORTANT

The condensate drain must be able to be inspected.

Legend

A Condensate drain


Condensate Connection (continued)

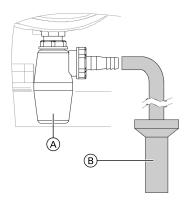

Legend

- (A) Condensate drain (must be able to be inspected)
- B Open or vented field supplied drainage system

Note: If the boiler is installed even with the ground, install a condensing drain above the ground max. 2 in. (50 mm).

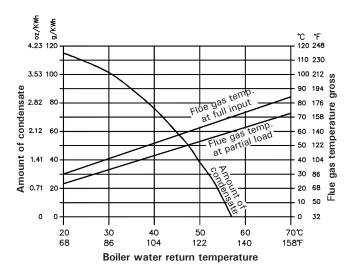

Note: The 'amount of condensate" and the "flue gas temperature gross" graphs are independent of each other.

The Vitocrossal CM2 boiler comes with a built-in condensate trap (field installed). An external trap is not required when connecting the field drain to the P-trap. Discharge tubing (field supplied) must be 1 in. diameter. Use CPVC, PVC or other material approved by code listed below.

The drain pipe and fittings must conform to ANSI standards and ASTM D1785 or D2846. CPVC or PVC cement and primer must conform to ASTM D2564 or F493. In Canada use CSA or ULC listed schedule 40 CPVC or PVC drain pipe, fittings and cement.

- Install the condensate drain pipe with a suitable gradient.
- 2. Discharge condensate from the boiler into the drain system, either directly or (if required) via a neutralization unit (accessory).

IMPORTANT

Do not connect the drain pipe from any other appliance, such as a water softener backwash pipe, to the CM2 condensate drain pipe.

IMPORTANT

Pipe ventilation must take place between the siphon trap and the neutralization unit (if applicable).

IMPORTANT


Always connect the drain with a P-trap or siphon to prevent flue gas from escaping into the space.

Connection (external): Ø ¾ in. (19 mm) barb fitting

The amount of condensate to be expected during the operation of the boiler and can be read from the chart.

If the condensate outlet of the Vitocrossal 200 boiler is lower than the drain, a condensate pump must be installed. Select a pump which is approved for condensing boiler applications. To avoid condensate spillage, select a pump with an overflow switch. The drain connection must terminate into an open or vented drain as close to the boiler as possible to prevent siphoning of the boiler drain.


Rear Panels

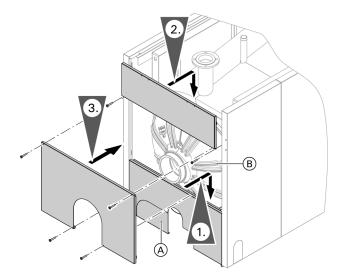

- 1. Install rear lower panel and secure with screws.
- 2. Install rear upper panel and secure with screws.
- 3. Install rear middle panel and secure with screws.

Note: The gap in the middle rear panel is for inspection of the flue gas temperature sensor.

Boiler Control and Junction Box

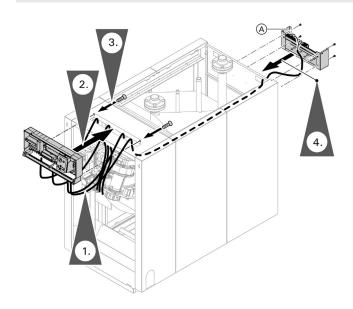

3. Mount the control to the control panel.

metal components.

4. Secure the control to the control panel with screws.

Note: Never allow cables to come in contact with hot

 Install the junction box to the rear panel either right or left. Secure the junction box with four 4.8 mm metal


 Route cables from control through the opening in the control panel. Guide the cables to the junction box through the opening in the rear panel and along the top rail to the control. Secure all cables to the rail with cable ties. Insert temperature probe into the sensor

Note: Screws to secure control are included in control's shipping box.

Legend


(A) Junction box

Top Panels

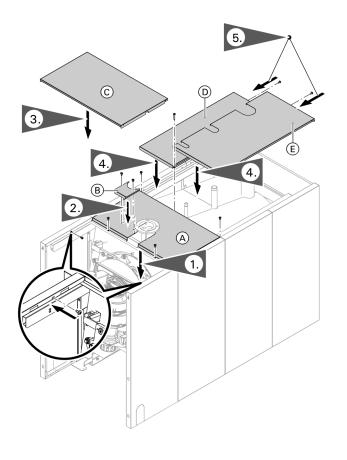


- Secure the front edge of central top panel (A) to the tie-bar with two 4.8 mm screws and secure the back of the panel to the LH and RH top rails with one 4.8 mm screw each.
- 2. Secure cover (B) to the tie-bar with two 4.8 mm screws.
- Secure front top panel © to the front side panels with two M6 screws.
- 4. Position LH rear top panel ①. Then position RH rear top panel ②. Where they overlap in the middle, secure both rear top panels to the central top panel with one 4.8 mm x 38 mm screw.
- 5. Secure RH rear top panel (E) and LH rear top panel (D) to the back panel with one 4.8 mm screw each.

Front Panels

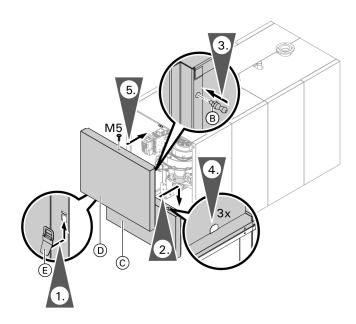

- 1. Attach four clips (included with the fixings) to the bottom front panel.
- Hook bottom front panel © into the front side panels.
- 3. Screw two profile studs (B) into top front panel (D).

Control Panel and Covers

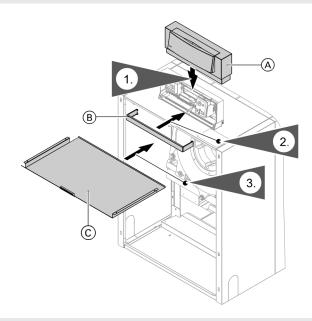


- 1. Plug in control interface cable and install cover.
- 2. Install control cosmetic cover.
- Install buffer panel to the top rail and secure with 4.8 mm metal screws.

Legend

- (A) Control interface with cover
- B Buffer panel
- © Cosmetic cover

Gas Flue Adaptor

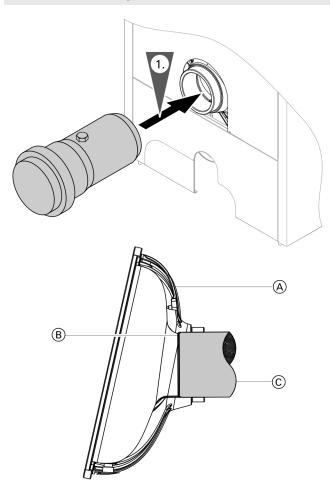

Legend

- $_{N}^{4}$ A Flue gas collector
- B Vent stop (integrated into flue gas collector)
- (B) Vent stop (integrated into

 Fully insert flue gas adapter inside the flue outlet (if used with stainless steel piping).

IMPORTANT

Ensure that the venting system is fully inserted into the flue gas collector, approximately 4 in. (100 mm) insertion. The venting system needs to be installed to the vent stop of the flue gas collector. Once installed, verify that the vent and the vent pipe coupling connections are free of leaks by using a certified leak detector.

Note: Connect the flue outlet with the flue pipe via the shortest possible run, with slight rise (min 3°). Avoid sharp bends.

2. Connect flue system. Size: 10 in. (250 mm).


Note: Support all venting components; make all connections free of load and torque stresses. The venting system must be securely supported by an anchoring system as outlined by the venting manufacturer.

IMPORTANT

The boiler flue gas collector vent is not designed to support the weight of the venting system.

Note: The flue gas adaptor is not included with the boiler and if required must be supplied by the venting manufacturer.


Gas Connections

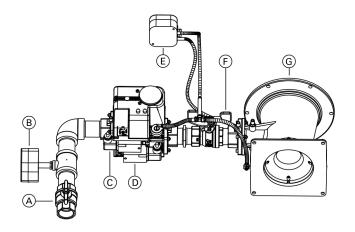


Legend


- A Gas shut-off valve
 B Aux. low gas pressure sw
 C Low gas pressure switch
 D High gas pressure switch
 E Fan trissure switch Aux. low gas pressure switch

- Test fire valve
- Venturi

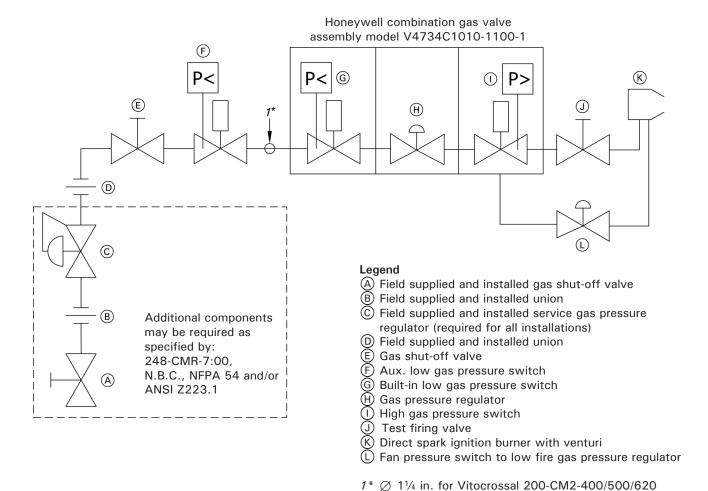

Gas Connections (continued)

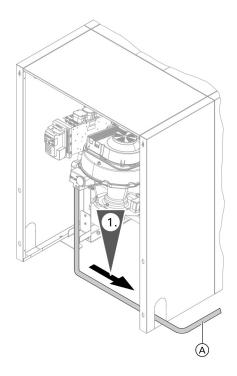

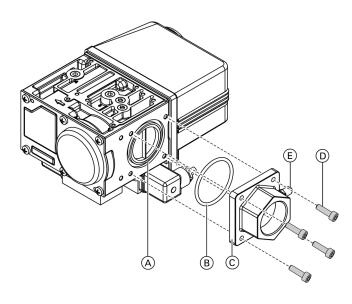

Legend

- A O-ring groove
- B O-ring
- _t © Gas valve flange
- N D Mounting bolts
- E Pressure measurement port

The gas line on the burner meets the requirements of ASME/CSD-1.

Note: For ease during burner maintenance, route the gas supply pipe from the opposite side of the burner hinges (otherwise the panel cannot be removed when swinging burner left or right). See page 13.

1. Connect gas pipe (A) to the gas valve.

Gas connection:

Boiler models 400, 500 and 620: 11/4 in. NPT

- The inlet gas connection flange kit is included with the burner (field mounted). The flange kit provides an inlet connection for the gas valve. The flange kit consists of:
 - Gas valve flange (D) with measurement port (F)
 - O-ring (C)
 - Screws (E) (x4)
- 3. Test leak tightness of gas pipe connection.



WARNING

If test pressure is too high burner and gas fittings may get damaged.



WARNING

Escaped gas may lead to explosion, which could cause severe injuries. Do not vent gas pipe above combustion chamber of boiler.

Purge gas line in a safe manner using an approved purge burner.




CAUTION

If gas pipe contains dirt it is recommended to install a gas filter into the gas pipe.

Gas valve flange installation

- 1. Make sure the O-ring surfaces (B) are clean.
- Apply a moderate amount of good quality pipe dope, resistant to the action of liquid propane gas (LPG) on the gas threads.
- 3. Screw the flange into the pipe.
- Using general purpose lithium grease, grease the O-ring © provided with the flange kit and install at the inlet of the valve.
- 5. Tighten the nuts to secure the flange ① to the valve body. Torque screws ② to 30 in.lb (3.5 Nm).

Gas Connections (continued)

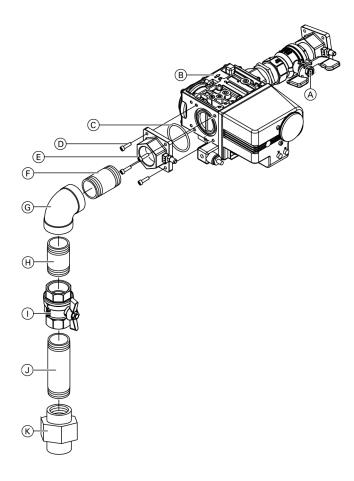

Legend

- A Manual test firing valve
- (B) Gas Valve
- © 0-ring
- D Gas valve flange
- (E) Mounting nuts
- (F) Nipple
- G Elbow
- (H) Nipple
- Manual gas shutoff valve
- Nipple (field supplied)
- K Ground joint union (recommended) (field supplied)



WARNING

Escaped gas may lead to an explosion, which could cause severe injuries or property damage.

Note: Drip pocket shall be installed accordingly to CAN/CSA B149.1 or National Fuel Code ANSI Z223.1 / NFPA 54.

- Refer to current CAN/CSA B149.1 and .2 or National Fuel Gas Code ANSI Z223.1/NFPA 54, as well as local codes for gas piping requirements and sizing. Pipe size to the boiler must be determined based on:
- pipe length
- number of fittings
- type of gas
- maximum input requirements of all gas appliances in the residence.

Note: For installation of the low gas pressure switch refer to the instructions included with the low gas pressure switch kit.

IMPORTANT

Design piping layout in such a way that piping does not interfere with serviceable components.

- Before connecting boiler to gas line, install ground joint union, capped drip leg and a manual equipment shutoff valve. Valves must be listed by a nationally recognized testing agency. Make boiler gas connection as shown.
- 3. Perform gas piping pressure test as described in the following subsection.

IMPORTANT

Max. gas supply pressure: 14 "w.c.

4. Identify shutoff valves as such with a tab and familiarize operator/ultimate owner of boiler with these valves.



See Vitocrossal 200 CM2 Series 400 to 620 Service Instructions for applicable system coding information.

Valve leak test


This is a test for checking the leakness tightness of the valve and flange connections. It is recommended that this test be included in the scheduled inspection and maintenance procedures.

IMPORTANT

This test should only be performed by a trained licensed heating contractor.

- 1. Close the manual test firing valve (A).
- 2. Open the manual gas shutoff valve G.
- 3. Leak test all connections with a certified leak detector.
- 4. Close the manual gas shutoff valve (G).
- 5. Open the manual test firing valve (A).
- 6. Repair any leaks if necessary.

Boiler Piping in Heating / Cooling Application

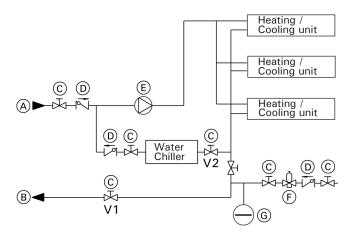

Legend

- A System supply
- B System return
- © Valve
- (D) Flow check valve
- (E) Circulation pump
- F Automatic feed valve
- G Pre-charged expansion tank

The boiler, when used in connection with a refrigeration system, must be installed so that the chilled medium is piped in parallel to the boiler and with appropriate valves to prevent the chilled medium from entering the boiler.

The boiler piping system of a hot water heating boiler is connected to the heating coils located in the air handling units. The boiler piping system may be exposed to refrigerated air circulation and must be equipped with flow control valves or other automatic means to prevent gravity circulation of the boiler water during the cooling cycle.

Check the installation instructions of the chiller manufacturer carefully for additional requirements.

Cooling season starts: Close valve V1 and open valve V2.

Heating season starts: Close valve V2 and open valve V1.

Metal tags labelling these valves should be attached.

IMPORTANT

In the above system, the circulating pump must be operated from a separate on/off switch - not from the boiler control.

Initial System Fill

Treatment of boiler feed water should be considered in areas of known problems, such as high mineral content and hardness. In areas where freezing might occur, an antifreeze may be added to the system water to protect the system (maximum mix ratio - 50% / 50%). Please adhere to the specifications given by the antifreeze manufacturer for hydronic heating systems.

IMPORTANT

Only use antifreeze specific for hydronic heating systems. Do not use automotive glycol!

Please observe that an antifreeze/water mixture may require a backflow preventer within the automatic water feed and influence components such as diaphragm expansion tanks, radiation etc. A 40% antifreeze content will provide freeze-up protection to -10°F (-23°C).

The heating system may also contain components which may be negatively affected by antifreeze. Check entire system frequently when filled with antifreeze. Read boiler service instructions for further information on water quality.



CAUTION

Before the heating boiler is installed and piped into an existing system, the heating system itself must be properly flushed to remove dirt and system sludge. Accumulations in old heating systems will tend to settle in the boiler and can lead to deposits which can cause hot spots, noise and water-side corrosion. For damages resulting from those kinds of impurities, the warranty will be null and void.

The Vitocrossal 200 boiler is only suitable for closed hot water heating systems with pumps.

It is strongly recommended to install boiler isolation valves and above these isolation valves, drain valves in the system supply and return. With this installed, any maintenance work on the boiler or heating system, will not require draining the entire system.

When the boiler is utilized to supply heat to an indirectly heated domestic hot water tank, it is necessary that the heating loops (without a mixing valve) are equipped with flow check valves on the discharge side of the pumps to avoid reverse flow.

IMPORTANT

All system pumps must be installed from boiler supply to the system.

The pressure relief valve must be attached to the top of the boiler or the safety supply of the boiler, see page 15. No valve, shut-off device or obstruction of any kind and no construction must be used between boiler and relief valve or on the discharge side of the pressure relief valve.

The discharge side of the pressure relief valve must continue in the same size as the outlet horizontally over the side of the boiler, and then vertically downwards to end approximately 1 ft. (300 mm) above the floor, and piped as close to a floor drain as possible. Do not install this discharge pipe to the outdoors or any area where freezing might occur or the discharge pipe could endanger life and equipment.

IMPORTANT

Secure the discharge piping from the pressure relief valve with the appropriate hangers or brackets.

The boiler should be filled and properly bled of air and the cold water fill pressure should not exceed 18-20 psig.

IMPORTANT

Cold water fill pressure must equal expansion tank pressure.

The boiler should be filled and properly bled of air and the cold water fill pressure should not exceed 18-20 psig. All openings, as well as pipe connections on the boiler, should be observed for possible leaks. Once all connections are tight, the insulation can be mounted.

IMPORTANT

Ensure that there is no leak on any of the connections which are covered by the insulation.



WARNING

Fill only suitable water in boiler (refer to Service instruction). Unsuitable water quality may damage boiler.

General

The schematics on the following pages are to be seen as guidelines only. They further do not display all system varieties, safety devices, or concepts possible. Specific system layouts may be further discussed with the local Viessmann sales representative office.

Clearances

A minimum of 2 in. (51 mm) circumferential clearance from non-insulated hot water pipes to combustible construction must be maintained. In cases where the pipes are insulated with pipe insulation of appropriate and sufficient thickness and insulation values, the above clearance may be reduced to 0 in. (refer to local gas codes).



CAUTION

For underfloor heating applications, an additional immersion or strap-on aquastat must be installed in the low temperature underfloor loop (downstream of the mixing valve) to de-energize the pump and/or boiler to prevent overheating. High water temperatures can damage concrete slabs.

IMPORTANT

The examples on the following pages depict possible piping layouts of the Vitocrossal 200 CM2 boiler equipped with Viessmann System Technology.

For boiler and tank combinations, please install only feasible combinations listed in the Viessmann Price List.

Please note that the following examples are simplified conceptual drawings only!

Piping and necessary componentry must be field verified. A low water cut-off (LWCO) must be installed where required by local codes.

Proper installation and functionality in the field is the responsibility of the heating contractor.



WARNING

If a DHW storage tank other than a Viessmann Vitocell 100 or 300 tank is used, the installer must verify proper operation of the Viessmann DHW tank temperature sensor with the original manufacturer of the tank. Viessmann strongly recommends the installation of a temperature tempering valve in the DHW supply line.

IMPORTANT

DHW supply and return piping between boiler DHW connections and the Viessmann DHW tank connections, shall be a minimum of 1½ in. pipe size. This will ensure the residual head of the field supplied pump is fully utilized to overcome the resistance of the DHW heat exchanger coil and to provide sufficient water flow to the boiler heat exchanger.


In non-Viessmann DHW tank applications, perform, in addition to the above, accurate calculations for DHW tank coil pressure drop versus boiler pump (field supplied) residual head to ensure sufficient water flow to the boiler heat exchanger. Failure to heed the above instructions may cause boiler short-cycling and inadequate DHW supply.


Note: In the following piping layout examples all pumps are field supplied.

System Layout 1

Vitocrossal 200 CM2 with...

- DHW storage tank
- one heating circuit without mixing valve
- two heating circuits with a mixing valve

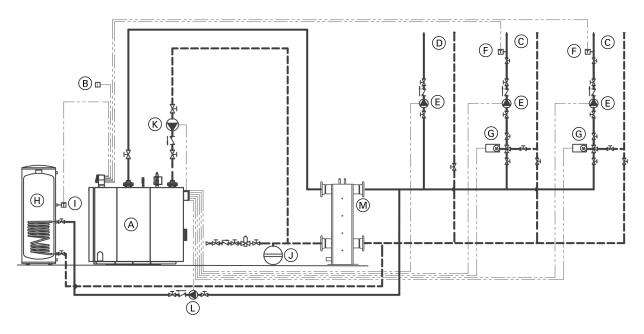

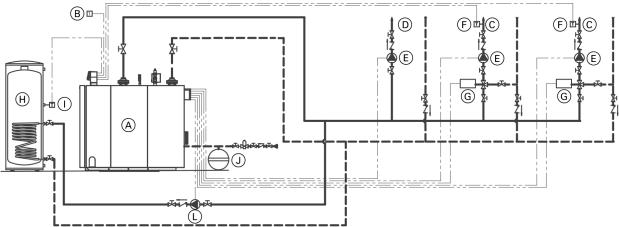

Legend

- Vitocrossal 200 CM2 boiler
 - Outdoor temperature sensor 1
- © Low temperature heating circuit
 - High temperature heating circuit
- Heating circuit pump
- Mixing valve temperature sensor 2
- Mixing valve with actuator
- (H) Domestic hot water storage tank
- DHW tank temperature sensor 5
- (J) Expansion tank
- K Boiler pump 29
- DHW pump 21
- M Low loss header

Installation of different heating circuits...

- high-temp. circuit (radiator heating circuit)
- low-temp. circuit (under floor heating circuit with 3-way mixing valve)
- DHW production

The 3-way mixing valve, built-in to achieve the lowtemperature level of the under floor heating circuit, is controlled by an accessory kit for a heating circuit with mixing valve.


IMPORTANT

System separation is required of underfloor heating systems employing non-oxygen diffusion barrier tubing. All components on the secondary side of the heat exchanger must be made of corrosion-resistant materials.

System Layout 2

Multiple (up to eight) Vitocrossal 200 CM2 with...

- multiple heating circuits with mixing valves
- low-loss header

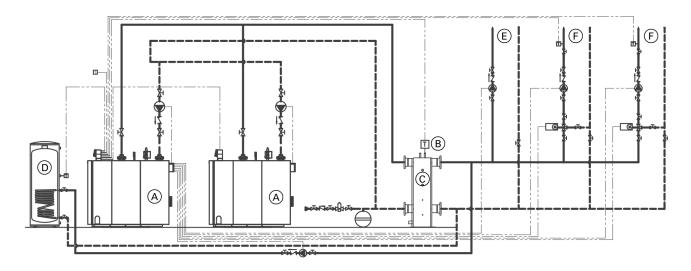

Legend

- A Vitocrossal 200 CM2 boiler
- B Low-loss header/common supply temperature sensor
- © Low-loss header
- D DHW storage tank
- E High temperature heating circuit
- Low temperature heating circuit

When designing a multiple Vitocrossal 200 CM2 system as shown above, please reference applicable multiple Vitocrossal 200 CM2 technical documentation, and contact your local Viessmann Sales Representative for further assistance.

This installation example depicts a possible piping layout for multiple Vitocrossal 200 CM2 boilers equipped with Viessmann System Technology. Please note that this example is based on a simplified conceptual drawing only! Piping and necessary componentry must be field verified. A low water cut-off (LWCO) must be installed where required by local codes.

Proper installation and functionality in the field is the responsibility of the heating contractor.



WARNING

If a DHW storage tank other than a Viessmann Vitocell 100 or 300 tank is used, the installer must verify proper operation of the Viessmann DHW tank temperature sensor with the original manufacturer of the tank. Viessmann strongly recommends the installation of a temperature tempering valve in the DHW supply line.

General Venting Information

Installation steps (outline)



WARNING

Ensure that the entire venting system is protected from physical damages. A damaged venting system may cause unsafe conditions.



WARNING


Consult the vent manufacturer on use of venting systems suitable for outdoors.

IMPORTANT

Boiler operation in marine environments (damp, salty coastal areas):

The service life of the boiler's exposed metallic surfaces, such as the casing and fan housing, is directly influenced by proximity to damp and salty marine environments. In such areas, higher concentration levels of chlorides from sea spray, coupled with relative humidity, can lead to degradation of the exposed metallic surfaces mentioned above. Therefore, it is imperative that boilers installed in such environments not be installed using direct vent systems which draw outdoor air for combustion. Such boilers must be installed using room air dependent vent systems; (i.e. using room air for combustion). The indoor air will have a much lower relative humidity and, hence, the corrosion will be minimized.



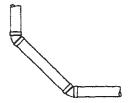

- Route vent pipe as directly as possible and with as few bends as possible to the boiler.
- Check proper location of gaskets in rigid PP pipe collars. (Only use supplied parts with the polypropylene venting system.) Apply water to lubricate the joint ends of the vent pipe collar and if used, the air intake pipe collar.
- Slide pipes into each other with a gentle twisting motion.
- Condensate must drain from the flue pipe to the boiler. Ensure a suitable gradient of at least 3° [approx. 2 in. per 3.3 ft. (50 mm per 1 m)].
- Use a hacksaw or sheet metal snips (for stainless steel) to cut pipes to length (if necessary). Use a file to smooth rough edges. Pipe must be round and not bent into an oval shape.

IMPORTANT

When cutting pipes to length, deburr and clean pipes.

For stainless steel and PP venting systems: In conjunction with these instructions, follow the installation instructions supplied by the special venting manufacturer.

Combustion air intake, flex hose and adaptor must be installed. If using room air-independent venting system, connect the air intake pipe (from outdoors)to the adaptor provided. If room air-dependent venting system is used, the air is drawn into the burner inlet through adaptor and flexible pipe. (See figure from page 14).

Recommended venting practice

When installing a venting system the following recommended venting practices apply:

- Keep length and number of 90° elbows to a minimum.
- Try not to use back-to-back 90° elbows.
- Use 45° elbows where possible to minimize the number of 90° elbows in case redirection of flue gas is required.
- The special vent system shall not be routed into, through, or within any other vent such as an existing masonry or factory-built chimney.

Exception:

A masonry chimney flue may be used to route the venting system only if no other appliance is vented in the same flue.

General Venting Information (continued)

Combustion air intake materials

Part	Material	Certified to Standards	Applicability	
Combustion air intake pipe	Stainless steel	No applicable standards		
and fitting	Galvanized steel	Suitable for outdoor use		
	PVC-DWV Schedule 40	ANSI/ASTM D2661 CSA B181.1 ULC S102.2 ANSI/ASTM D2665, D1785 CSA B137.3, B181.2 ANSI/ASTM F441		
	CPVC Schedule 40	ANSI/ASTM D2661 CSA B181.1 ULC S102.2 ANSI/ASTM D2665, D1785 CSA B137.3, B181.2 ANSI/ASTM F441		
	ABS-DWV Schedule 40	ANSI/ASTM D2661 CSA B181.1 ULC S102.2 ANSI/ASTM D2665, D1785 CSA B137.3, B181.2 ANSI/ASTM F441		
	PP Polypropelene	UL1738 "Venting systems for gas-burning appliances, Categories II, III, IV"		
		ULC S636 "Standard for Type BH gas venting systems" Class IIC 110°C		
Pipe cement, primer (for combustion air intake pipe)	PVC	ANSI/ASTM D2564 CSA B137.3		
	CPVC	ANSI/ASTM F493 CSA B137.6		
	ABS	ANSI/ASTM D2235 CSA B181.1/B182.1		



A CAUTION

On the job site, ensure that non-listed combustion air pipe materials are not inadvertently used instead of listed vent pipe material.



A CAUTION

Do not use cellular (foam) core pipe material to vent this Vitocrossal boiler.

General Venting Information (continued)

Vent termination location requirements (for installations in Canada)

The vent must be installed observing local regulations in addition to National Codes, CAN/CSA-B149.1 or 2. The flexible vent pipe can only be used in vertical installations. A vent must **NOT** terminate...

- 1.....directly above a paved sidewalk or paved driveway which is located between two single-family dwellings and serves both dwellings.
- 2....less than 7 ft. (2.13 m) above a paved sidewalk or a paved driveway located on public property.
- 3.....within 6 ft. (1.83 m) of a mechanical air supply inlet *1 to any building (dryer vents, non-sealed combustion furnace and hot water heater vents are considered to be mechanical air inlets).
- **4**.....above a meter/regulator assembly within 3 ft. (0.9 m) horizontally of the vertical centerline of the regulator vent outlet and to a maximum vertical distance of 15 ft. (4.5 m).
- 5....within 3 ft. (0.9 m) of any gas service regulator vent outlet.
- **6....**less than 1 ft. (0.3 m) above grade level or anticipated snow level (consult local building authorities or local weather office). Locate the vent termination in such a way that it cannot be blocked by snow.
- 7.....within the following distances of a window or door which can be opened in any building, any non-mechanical air supply inlet to any building or the combustion air inlet of any other appliance:
- 1 ft. (0.3 m) for inputs up to and including 100 000 Btu/h / 30 kW.
- 3 ft. (0.9 m) for input exceeding 100 000 Btu/h / 30 kW.

- 8.....underneath a veranda, porch or deck, unless:
- the veranda, porch, or deck is fully open on a minimum of two sides beneath the floor, and
- the distance between the top of the vent termination and the underside of the veranda, porch, or deck is greater than 1 ft. (0.3 m).
- 9.....in areas where condensation may cause problems, such as above planters, patios, or adjacent to windows where flue gases may cause fogging.
- **10**....within 3 ft. (0.9 m) to the property line (advisable, not mandatory; please check with local building authorities and municipal bylaws).
- 11....at a location where ice formation on the ground can present a hazard.
- 12....so that the flue gases are directed toward brickwork, siding, or other construction, in such a manner that may cause damage from heat or condensate from the flue gases.
- 13....where discharging hot flue gases may cause property damage or personal injury.
- 14....within 3 ft. (0.9 m) from an inside corner of outside walls.
- *1 Including heat recovery units.

Vent Termination Location Requirements (for installations in the U.S.A.)

The vent must be installed observing local regulations in addition to National Codes, ANSI-Z223.1 or NFPA 54. The flexible vent pipe can only be used in vertical installations. A vent must **NOT** terminate...

- 1.....less than 7 ft. (2.13 m) above a paved sidewalk or a paved driveway located on public property.
- 2....within 4 ft. (1.2.m) horizontally from service regulator vents, electric and gas meters as well as relief equipment.
- 3....at least 3 ft. (0.9 m) above any forced air inlet located within 10 ft. (3 m).
- 4....less than 1 ft. (0.3 m) above grade level or anticipated snow level (consult local building authorities or local weather office). Locate the vent termination in such a way that it cannot be blocked by snow.
- 5.....within 1 ft. (0.3 m) of a window or door which can be opened in any building, any non-mechanical air supply inlet to any building or the combustion inlet of any other appliance.

- **6**....in areas where condensation may cause problems, such as above planters, patios, or adjacent to windows where flue gases may cause fogging.
- 7.....within 3 ft. (0.9 m) to the property line (advisable, not mandatory; please check with local building authorities and municipal bylaws).
- 8.....at a location where ice formation on the ground can present a hazard.
- 9.....so that the flue gases are directed toward brickwork, siding, or other construction, in such a manner that may cause damage from heat or condensate from the flue gases.
- 10....where discharging hot flue gases may cause property damage or personal injury.
- 11.... within 3 ft. (0.9 m) from an inside corner of outside walls.

General Venting Information (continued)

Flashing and storm collar installation

Flashings and storm collars are field supplied. Flashings and storm collars suitable for Type B vent materials (or better) may be used.

To obtain flashings and storm collars, please contact your local vent material supplier. Follow the installation instructions supplied by the special venting manufacturer.

Follow local codes to properly isolate the exhaust vent pipe when passing through floors, ceiling and roof.

Always check the marking on the pipe to make sure you are using the correct material.

Additional Requirements for Stainless Steel Vent Pipe Material

Use stainless steel venting system (UL/ULC listed for category IV) for horizontal or vertical venting of the Vitocrossal boilers.

Contact one of the suppliers (see listing on right) to order.

Prior to installation, check that the correct single-wall vent parts were ordered and supplied.

For sealed combustion systems that are vertically vented, a Viessmann vacuum relief damper may be needed to protect the vent system against vacuum conditions. This very rare occurrence can happen when a boiler is firing at maximum capacity and the burner cycle is suddenly interrupted.(ie. power failure) For more information on this device, or questions specific to your application, please consult with the vacuum relief damper installation instructions or contact your local Viessmann representative.

Exhaust vent/air intake connection to boiler

The vent connection to the Vitocrossal boiler must be made with the starter stainless steel adaptor (supplied by others).

Combustion air intake, flex hose and adaptor must be installed. If using room air-independent venting system, connect the air intake pipe (from outdoors)to the adaptor provided. If room air-dependent venting system is used, the air is drawn into the burner inlet through adaptor and flexible pipe. (See figure from page 11 and 17).

IMPORTANT

For exhaust vent pipe material: Do not use any other vent material.

Duravent	ICC - Industrial Chimney Co.
www.duravent.com	www.icc-rsf.com
Selkirk Canada Corporation www.selkirkchimney.com	Z-Flex U.S. Inc (Flexmaster Canada) www.Z-Flex.com
Jeremias Inc.	Van-Packer Co. Inc.
www.jeremiasinc.com	www.vpstack.com
Security Chimneys	Enervex Inc.
International Ltd.	(formerly Exhausto)
www.securitychimneys.com	www.enervex.com
Metal-Fab Inc. www.mtlfab.com	

Note: For SS venting system order transition adaptors from the above mentioned suppliers.

Requirement for Rigid SS/PP(s) Vent Pipe Material

Requirements for PP and stainless steel

The venting system must be installed by a licensed professional heating contractor familiar with the operation and maintenance of heating appliances and venting. Before installing, ensure that the complete installation literature has been read. Failure to follow proper installation procedures as stated in these instructions, including vent pitch and proper appliance connections, may violate local, provincial/state, or national codes and cause unsafe conditions which may lead to severe property damage or personal injury.

The venting system must be installed in accordance with local building code requirements as well as national codes. For installations in Canada use CAN/CSA-B149.1 Natural Gas Installation Code or CAN/CSA-B149.2

Propane Installation Code as applicable; in the U.S. use the National Fuel Gas Code ANSI Z223.1 or NFPA Standard 54.

To ensure safe operation of the appliance, Viessmann recommends that the system be inspected once a year by a qualified service technician.

Every venting system must be planned and installed for optimum performance and safety. These Installation Instructions are designed to help you determine venting requirements and limitations with respect to installation. Please read and follow these instructions carefully.

It is the responsibility of the installer to contact local building and fire officials concerning any installation restrictions and/or inspection requirements that may apply. Permits may be required before commencement of the installation.

The vent termination for side wall vent installations should be located on a wall that is least affected by prevailing winds. High winds may affect boiler operation and/or degrade the exterior finish of the wall. They may also cause recirculation of the appliance's own flue products. Recirculation of flue products can result in poor combustion and inlet condensation problems.

If wind is a problem, steps must be taken to shield the vent termination from high winds, such as building a fence or planting shrubs. Ensure that the total equivalent vent length is not exceeded.

Because of its sealed combustion chamber, the Vitocrossal 200 gas-fired condensing boiler is suitable for operation with balanced flue (when using air intake system).

Use only material listed in table on page 39, entitled "Approved venting materials".

The remaining space surrounding a chimney liner, gas vent, or special gas vent or plastic piping installed within a masonry, metal or factory-built flue shall not be used to supply combustion air to the boiler. A separate combustion air intake pipe routed back to the boiler can be used in the remaining space if required, the boiler venting system is approved for zero clearance, and can be run directly beside the combustion air intake pipe.

IMPORTANT

Potential gaps between the vent/air intake pipes and the surrounding construction which may cause air, rain or flue gases to leak into the wall or the building, must be sealed with approved sealant /caulking to prevent leakage of any kind.

This PP vent system is constructed from flame-retardant plastic [polypropylene rated for a maximum temperature of 230°F (110°C)].

The PP venting system components must be listed to ULC S636 / UL-1738 (contact one of the venting suppliers below).

DO NOT mix pipe, fittings, or joining methods from different vent system manufacturers.

The vent length requirements stated in this manual (on page 46 for two pipe vent installations and page 48 for single pipe installations) must be observed.

The venting material can be extended (without exceeding the maximum equivalent length) beyond the outside wall of the structure, provided that the venting material is installed in an enclosed, insulated and waterproof chase that is acceptable for outdoor installation. The vent termination location must comply with the instructions and codes stated in this manual.

IMPORTANT

Side wall vent installations must include a protective screen.

Vent System Suppliers

Use special venting system (UL/ULC listed for Category IV) for exhaust vent material of the Vitocrossal boilers. Contact one of the following suppliers to order parts.

Both suppliers deliver PP(s) rigid and flexible vents in a variety of sizes.

Duravent	Centrotherm InnoFlue
www.duravent.com	www.centrotherm.us.com
Z-Flex U.S. Inc (Flexmaster Canada) www.Z-Flex.com	ECCO Manufacturing www.eccomfg.com

Vent Requirements

Combustion air supply, room air dependent application only

This boiler requires fresh air for safe operation and must be installed in a mechanical room where there are provisions for adequate combustion and ventilation air.

Provisions for combustion and ventilation air must be made in accordance with CAN/CSA-B149.1 or .2 Natural Gas Installation Codes (latest edition) (for installations in Canada) or in accordance with sections for Combustion and Ventilation Air, of the National Fuel Gas Code, ANSI Z223.1 (latest edition) or applicable provisions of local codes (for installations in the U.S.A.)

Follow local codes to properly isolate the vent pipe when passing through floors, ceilings and roof.

Whenever possible, install boiler near an outside wall so that it is easy to duct fresh air directly to the boiler area. Refer to national codes for duct sizing. Round ducts may be used.

The boiler must be vented and supplied with combustion air and exhaust vents as described in this section. Ensure the vent and combustion air supply comply with these instructions. (See also page 38).



WARNING

Failure to provide an adequate supply of fresh combustion air can cause poisonous flue gases to enter living space, which can cause severe personal injury or loss of life.

The boiler location should never be under negative pressure. Exhaust fans, attic fans, or dryer fans may cause air to be exhausted at a rate higher than the air can enter the structure for safe combustion. Corrective action must be taken to ensure enough air is available. Never cover the boiler or store debris or other materials near the boiler, or in any way block the flow of adequate fresh combustion air to the boiler.

You must know the free area of louvers used to cover up the combustion and ventilation openings in closet installations. If you do not know the free area, assume 20% for wood louvers and 60%-75% free area for metal louvers. When using louvers, the openings have to be made larger.

For example, a free 14 in. \times 6 in. (356 mm \times 152 mm) opening becomes a 14 in. \times 10 in. (356 mm \times 254 mm) opening for a grill containing metal louvers.





CAUTION


Do not store chemicals containing chlorine or other corrosive materials near the boiler, such as bleach, cleaning solvents, detergents, acids, hair spray, spray cans, paint thinners, paint, water softener salt, perchloroethylene, or carbon tetra chloride.

Direct Venting (Two Pipe System)

Side wall vent termination [stainless steel, CPVC or PP]

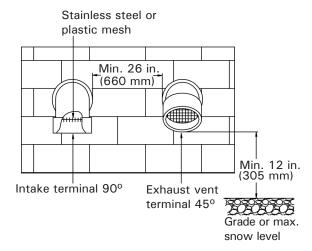

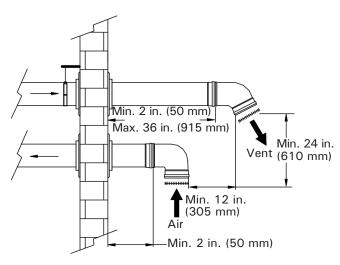

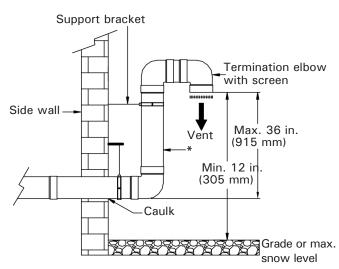

* Field fabricated vent riser

IMPORTANT

The exhaust vent/air intake system must terminate so that proper clearances are maintained as cited in local codes or the latest edition of the "Natural Gas and Propane Installation Code" CAN/CSA-B149.1 (Canada), or the "National Fuel Gas Code" ANSI Z223.1 (NFPA 54) (U.S.A.).

IMPORTANT


For PP systems, all exhaust vent and air intake piping and elbows exposed outside, must be UV resistant polypropylene (supplied by the vent manufacturer).

A

WARNING

Vent termination must be at least 12 in. (305 mm) above the anticipated snow level (consult your local building authorities or local weather office). Locate vent termination in such a way that it cannot be blocked by snow.

Combustion Air Intake Filter (field supplied)

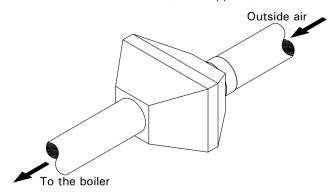

A combustion air inlet filter may be installed at any point in the combustion air inlet ducting (field supplied). Sized for 16" X 25" X 1" high performance furnace filter acceptable filters include 3M 1000, 1500, or 1900 series filters or equivalent. Ensure location of installation allows for adequate services clearance for filter inspection and maintenance.

Refer to filter manufactures instructions for cleaning replacement intervals, filter care, etc.


Do not decrease the combustion air intake diameter, the diameter must be maintained through the combustion air intake ducting.

Using combustion air filters remove dust particles from supplied combustion air. It is the responsibility of installing contractor/designer or engineer to make sure any impurities contain in combustion air supply to the boiler, that can affect the operation or life expectancy of the components, are removed and dealt with.

Note: The boiler combustion air inlet connection is not designed to support the weight of the combustion air ducting, filter or filter housing ensure that the combustion air ducting is properly supported.


Side Wall Venting


Side wall vent termination [stainless steel or PP]

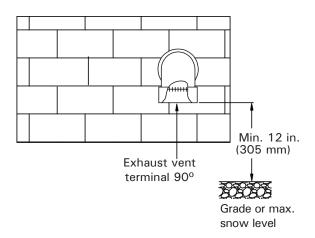

IMPORTANT

For PP systems, all exhaust vent and air intake piping and elbows exposed outside, must be UV resistant polypropylene (supplied by the vent manufacturer).

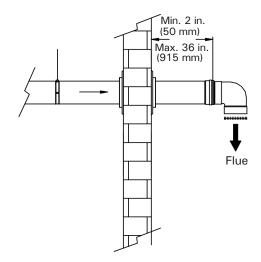

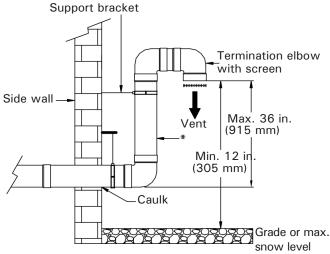

* Field fabricated vent riser


Component Installation Guide

Flashing and storm collar installation


Flashings and storm collars are field supplied. Flashings and storm collars suitable for Type B vent materials (or better) may be used.

To obtain flashings and storm collars, please contact your local vent material supplier. Follow the installation instructions supplied by the special venting manufacturer.


Vent Termination Location Requirements - Vertical

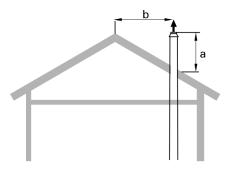

For sloped roof applications with distance b greater than 18 in. (450 mm)

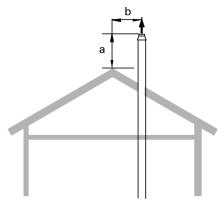

For sloped roof applications with distance b less than 18 in. (450 mm)

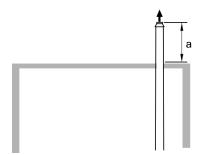

For flat roof applications

- a minimum 18 in. (450 mm)
- b <18 in. (450 mm)

The vent must be installed observing local regulations in addition to National Codes, CAN/CSA-B149.1 or 2 (for installations in Canada) or ANSI-Z223.1 or NFPA 54 (for installations in the U.S.A.).



WARNING

Vent termination must be at least 12 in. (305 mm) above the anticipated snow level (consult your local building authorities or local weather office). Locate vent termination in such a way that it cannot be blocked by snow.

A vent used in a special venting system with positive vent pressure and passing through a roof shall extend at least 18 in. (450 mm) above the highest point where it passes through the roof and any other obstruction within a horizontal distance of 18 in. (450 mm).

The special vent system shall not be routed into, through, or within any other vent such as an existing masonry or factory-built chimney.

IMPORTANT

A masonry chimney flue may be used to route the venting system only if no other appliance is vented in the same flue.

Installation of Support System - PP

Bracing

Contact your local vent material supplier for more information specific to your installation. Braces are required to stabilize an installation. There are different types and their use and spacing vary.

The following types of braces are available at your local vent material supplier:

- wall band
- wall band extension
- guy wire band
- roof brace.

IMPORTANT

Ensure that the venting system is properly supported; the boiler is not designed to support the weight of the venting system.

Vent system suppliers

To order approved PP(s) vent system contact the following suppliers.

Duravent www.duravent.com	Centrotherm InnoFlue www.centrotherm.us.com
Z-Flex U.S. Inc (Flexmaster Canada)	ECCO Manufacturing www.eccomfg.com
www.Z-Flex.com	_

The venting system must be securely supported by a support system suitable for the weight and design of the materials employed. Contact your vent material supplier for more information specific to your installation.

Supports are used to transfer the weight of an installation to the building structure. There are different types of supports and their capacity varies with each type and diameter.

The following support types are available at your local vent material supplier:

- anchor plate
- wall support
- roof support
- floor support
- suspension band (hanger).


Long Sweep Elbows

Standard long sweep elbow equivalent length material

Equivalent Length

Elbow type	4 in. (100 mm)	6 in. (150 mm), 8 in. (200 mm), 10 in. (250 mm), 12 in. (300 mm), 14 in. (350 mm)
45°	1 ft. (0.3 m)	5 ft. (1.5 m)
90°	1.6 ft. (0.5 m)	10 ft. (3 m)


Two Pipe System - Vertical Exhaust / Vertical Air Intake

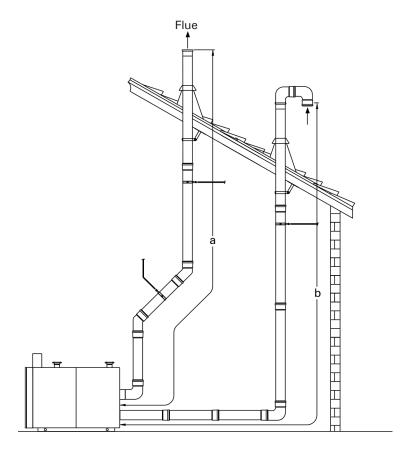


- a Equivalent length (exhaust)
- b Equivalent length (air intake)

Note: See table on page 51.

Two Pipe System - Vertical Exhaust / Vertical Air Intake

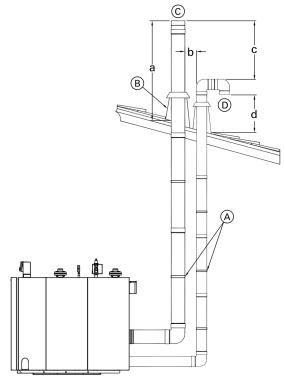

Vertical Vent Installation Sloped Roof

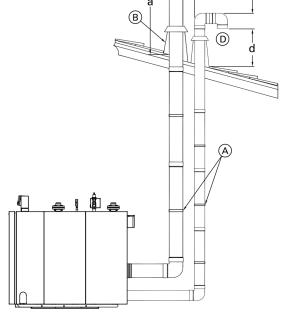

IMPORTANT

All PP(s) vent termination elbows, must be secured in place as specified by manufacturer.

IMPORTANT


For PP(s) systems, all exhaust vent and air intake piping and elbows exposed outside, must be UV resistant polypropylene (supplied by the vent manufacturer).

Legend

- A Support system
- (B) Flashings
- © Exhaust with screen
- (D) Combustion air intake with screen


Dimensions

- a min. 18 in. / max. 48 in.
- b min. 0 in.
- c min. 12 in.
- d 6 in. over max. local snow level (check with your local weather office for details)

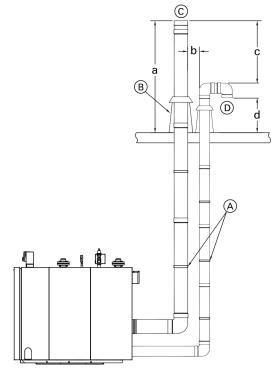


Vertical Vent Installation Flat Roof

Two Pipe System - Horizontal Exhaust / Horizontal Air Intake

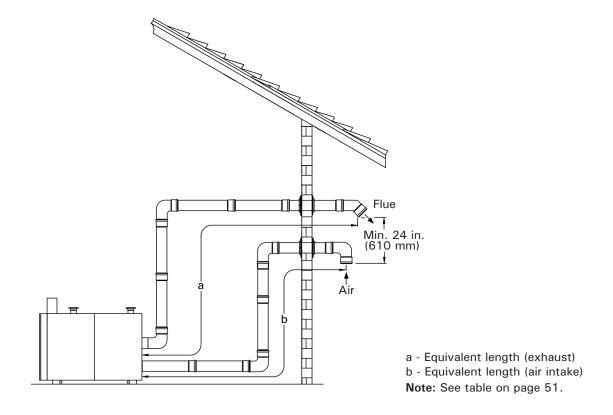

Two Pipe System - Vertical Exhaust / Horizontal Air Intake

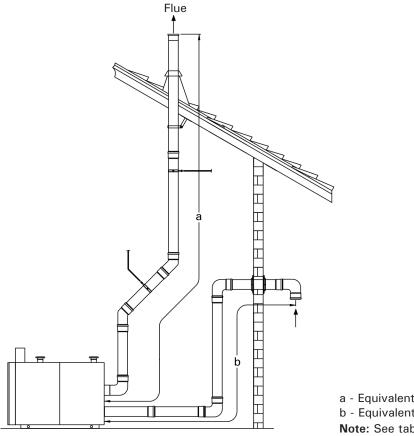

- a Equivalent length (exhaust)
- b Equivalent length (air intake)

Note: See table below.


Two Pipe System - Vertical / Horizontal Installations

Maximum allowable equivalent length - Stainless steel / PP


Boiler Models CM2-400, 500, 620 (standard connection)		
Flue gas	in. (mm)	10 (250)
combustion air	in. (mm)	8 (200)
Max. equivalent length a + b	ft. (m)	198 (60)

For Venting systems that exceed 198 ft. equivalent length or alternative vent size options, please contact Viessmann.

Single Pipe System - Vertical Exhaust / Room Air Dependant

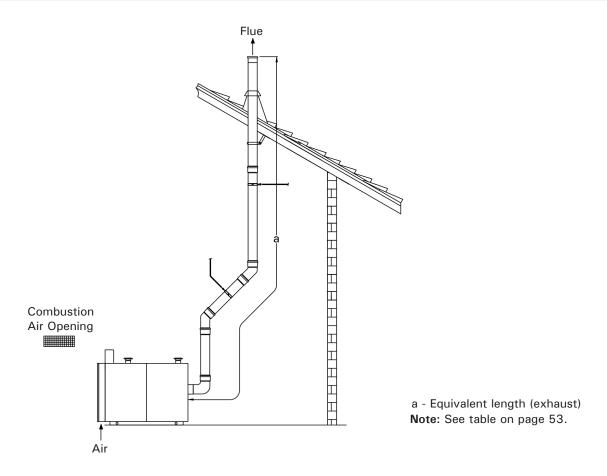

Single Pipe System - Horizontal Exhaust / Room Air Dependant

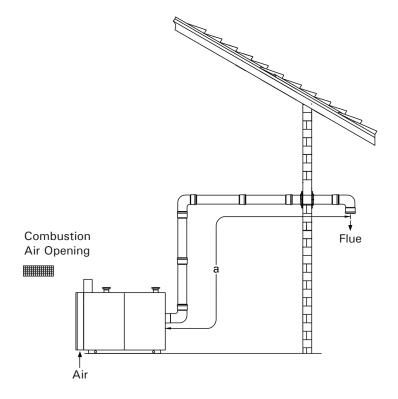

a - Equivalent length (exhaust)Note: See table on page 53.

Single Pipe System - Vertical / Horizontal Installations


Maximum allowable equivalent length - Stainless steel / PP


Boiler Models CM2-400, 500 and 620 (standard connection)		
Flue gas	in. (mm)	10 (250)
Max. equivalent length	ft. (m)	198 (60)

For Venting systems that exceed 198 ft. equivalent length or alternative vent size options, please contact Viessmann.


Multiple Boiler Installations


Horizontal vent termination

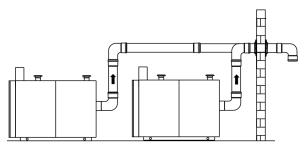

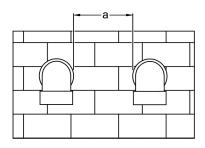

- a for installation in Canada min. 36 in. (915 mm)
 - for installation in U.S.A. min. 12 in. (305 mm)

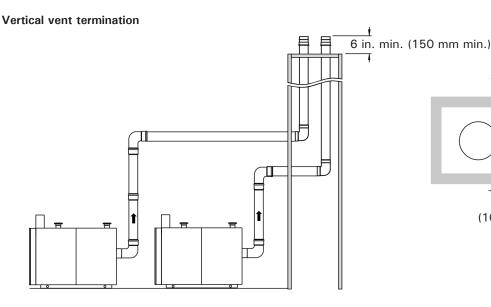

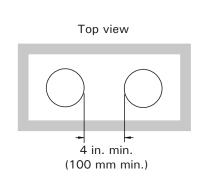

Technical information subject to change without notice.