



MASTER MT-DP96HMF Digital Multifunction Meter User Manual

[Home](#) » [MASTER](#) » MASTER MT-DP96HMF Digital Multifunction Meter User Manual 



Make a difference

**MT-DP96HMF Digital Multifunction Meter
User Manual**



Contents

- [1 MT-DP96HMF Digital Multifunction Meter](#)
- [2 Function introduce](#)
- [3 Technical parameter](#)
- [4 Installation and correction](#)
- [5 Display & Buttons](#)
- [6 Programme operation](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

MT-DP96HMF Digital Multifunction Meter

Thanks for choosing our product – MT-DP96HMF, Please read this manual carefully and pay attention to below caution matters.

CAUTION

- ✓ This product should be installed and maintained by professional person
- ✓ Before operating this product inside or outside, please cut off the input signal and power supply;
- ✓ Please make sure all parts of the product don't have voltage by suitable voltage detection device
- ✓ The power supply should be within the rated range

The below situation will result in device damage and abnormal working

- ✗ Auxiliary power source voltage over range
- ✗ Distribute system frequency over range
- ✗ Current, voltage input polarity incorrect
- ✗ Disconnect the communication plug under charged situation
- ✗ No according requirement to connect terminal



Please don't touch the terminals when the meter is in operation!

Function introduce


Measure function		Remark
Realtime measure	Three phase voltage (L-L, L-N)	Basic function/
	Three phase current and neutral current	
	System Frequency	
	P, Q, S, PF (per phase & total	
Electric energy	KWh import	
	KVARh import	
	KWh export, KVARh export	
Harmonics	THDU per phase	
	THDI per phase	
	HDI per phase from 2nd to 31st order	
	HDI per phase from 2nd to 31st order	
Communication	RS485 Port MODBUS-RTU	
Maximum Demand/	U,I,P,Q	Expand option/
Analog output/	0-20mA/ 4-20mA/ 0-5V/ 0-10V	
Digital input/	Dry contact type/	
Relay output/	AC250V 5A Remote/ Alarm	
Display type/		LCD

Technical parameter


Parameter			
Signal Input/ t/	Connection system		3P3W/ 3P4W
	Voltage	Measurement range	519V L-L
		Over load	Continuous: 1.2 Vn; Instantaneous: 2Vn
		Power consumption	< 1VA
	Current	Measurement range	5A/ 1A
		Over load	Continuous: 1.2In; Instantaneous: 2In
		Power consumption	< 1VA
	Frequency		45 – 65Hz
Auxiliary power supply		AC85-265V DC100-300V	
Communication		RS485 communication port, physical layer isolation. According international standard MODBUS-RTU agreement. Communication speed 1200-38400 (Default 9600) Test type N81, E81, 081 (Default N81)	
Analog output		0-20mA/ 4-20mA/ 0-5V/ 0-10V	
Relay output		Programme remote/ Alarm switching output Capacity 5A at 25 0VAC/ 30VDC	

Digital input	Remote switch input signal, dry contact input. Program relate alarm output
Measure class	Current, Voltage, Active power, Energy: 0.5S; Reactive power: 1S; Frequency: ± 0.1 Hz
IP protection	IP53 for indoor type and IP65 for outdoor type
Environment	Working temperature: -10÷55°C Store temperature: -20÷75°C Relative Humidity:<80%RH
Safe	Isolation: Signal, auxiliary power supply, output terminal crust resistance >5MW and withstand voltage pulse >AC2KV


Installation and correction

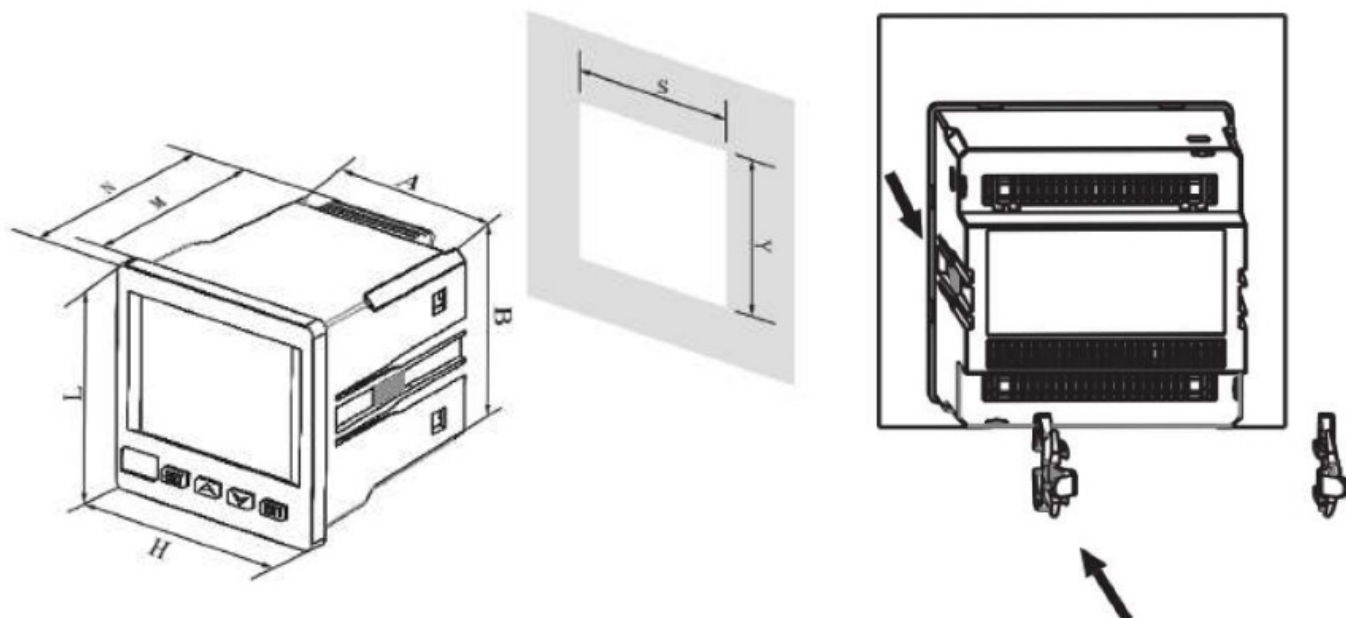


LxH (mm)	AxB (mm)	SxY (mm)	SxY (mm) IP65	N (mm)	M (mm)
96×96	90.5×90.5	91×91	91.5×91.5	94	88

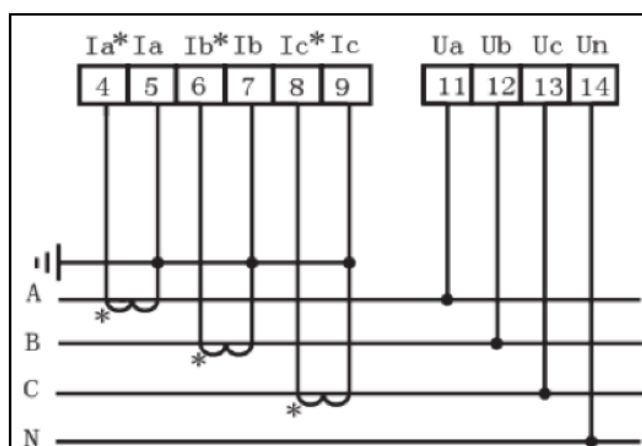


3P4W System: 3PT, Direct Volt input

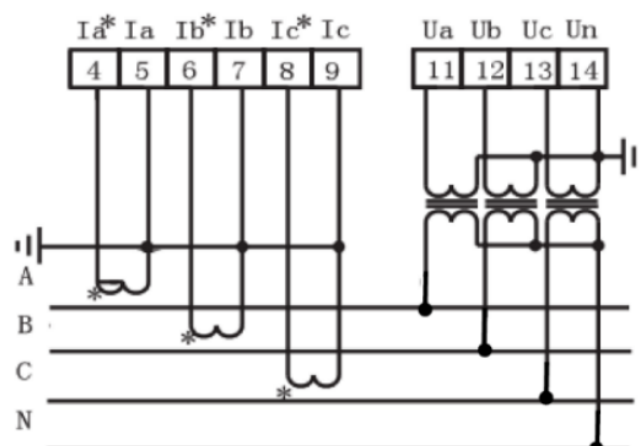

3P4W System: 3PT, 3VT

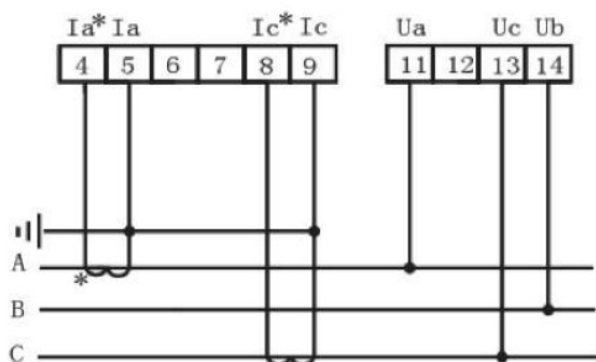


3P3W System: 2PT, Direct Volt input

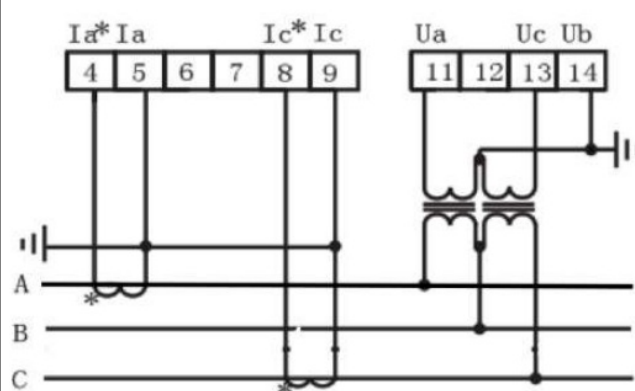


3P3W System: 2PT, 2VT

Active Pulse		Reactive Pulse			RS485			Aux. Power Suply	
Ep-	Ep+	Ep-	Ep+		B	A		N(V-)	L(V+)
48	47	50	49		59	58		2	1



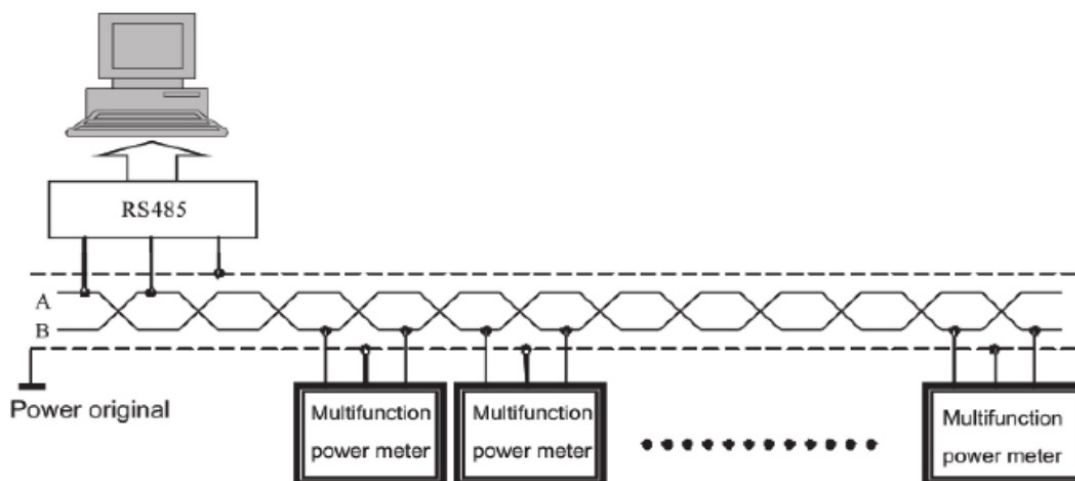

Relay Output								Digital input					Analog output				
DO1		DO2		DO3		DO4		CO M	DI1	DI2	DI3	DI4	A0-	A01 +	A02 +	A03 +	A04 +
15	16	17	18	19	20	21	22	70	71	72	73	74	30	31	32	33	34

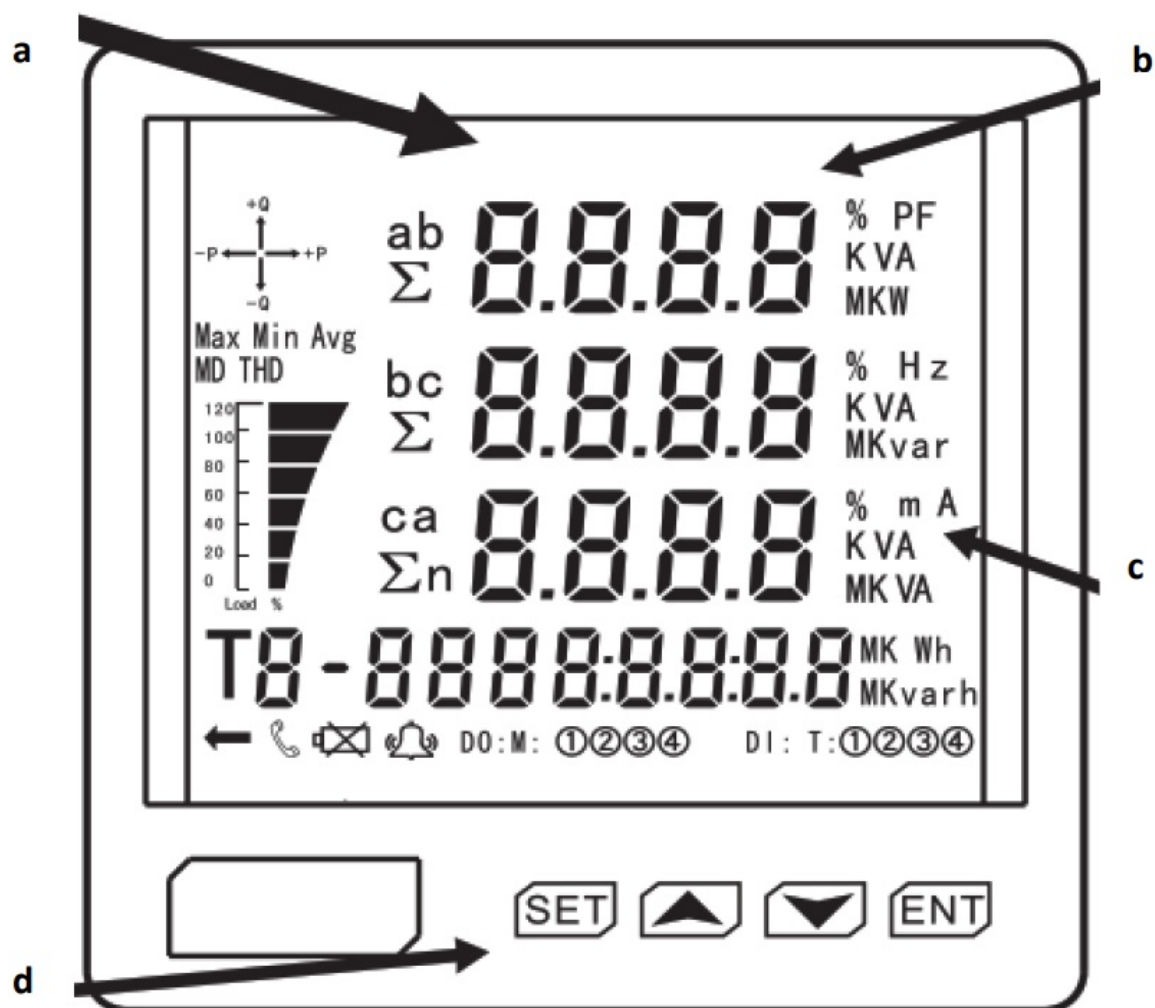

Display & Buttons


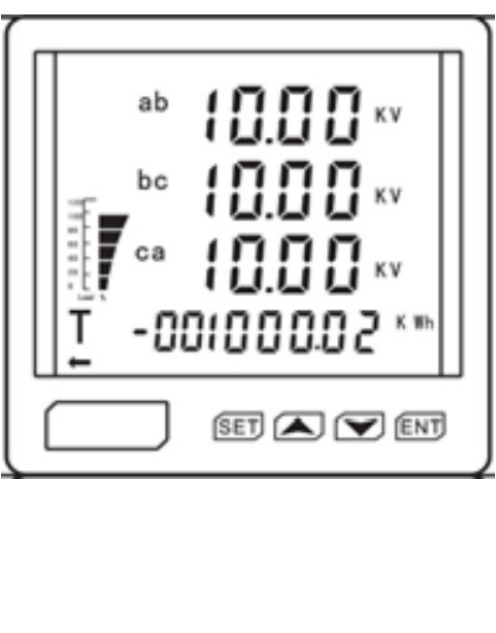







- a. Four lines digital display measure information: Three phase voltage, three phase current, active power, reactive power, power factor, frequency, switch input, output, other switch input, two way active power, two way reactive power, analog input, demand
- b. K is light mean practice value is display value is 1.000 times. M is light mean practice value is display value is 1.000.000 times
- c. Measure item unit or characteristic: three phase voltage V, three phase current A, active power W, reactive power VAR...
- d. Buttons use in change or programme set:




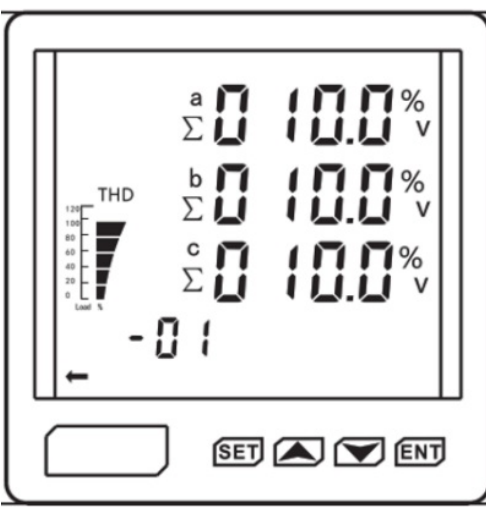
 	is change page button or value increase or decrease button
	is enter programme status
	is select confirm button

If there is no relative symbol display or the set data not working, It means the product without the relative function


Board	Content	Explain
-------	---------	---------

<p>DISP=1 -Three phase voltage -Forward active energy Kwh</p>	 <p>The display shows three-phase voltage readings: a 5774 V, b 5774 V, and c 5774 V. The forward active energy is displayed as 002908.05 KWh. A small bar graph on the left indicates the voltage level. The bottom of the display features a small rectangular indicator and four buttons labeled SET, an up arrow, a down arrow, and ENT.</p>	<p>Separate display voltage Ua, Ub, Uc (in the 3P4W) In left fig. Ua=5774V Ub=5774V Uc=5774V Forward active energy = 2908.05KWh</p>
<p>DISP=2 -Three phase voltage -Reverse active energy Kwh</p>	 <p>The display shows three-phase voltage readings: ab 10.00 KV, bc 10.00 KV, and ca 10.00 KV. The reverse active energy is displayed as -001000.02 KWh. A small bar graph on the left indicates the voltage level. The bottom of the display features a small rectangular indicator and four buttons labeled SET, an up arrow, a down arrow, and ENT.</p>	<p>Separate display voltage Uab, Ubc, Uca (in the 3P4W) In left fig. Uab=10KV Ubc=10KV Uac=10KV Reverse active energy = 1000.02 Kwh</p>
<p>DISP=3 -Three phase current -Forward reactive energy Kvarh</p>	 <p>The display shows three-phase current readings: a 5.000 A, b 5.000 A, and c 5.000 A. The forward reactive energy is displayed as 000050.00 Kvarh. A small bar graph on the left indicates the current level. The bottom of the display features a small rectangular indicator and four buttons labeled SET, an up arrow, a down arrow, and ENT.</p>	<p>Separate display current Ia, Ib, Ic (in the 3P4W) In left fig. Ia=5A Ib=5A Ic=5A Reverse reactive energy = 50 Kvarh</p>

<p>DISP=4</p> <ul style="list-style-type: none"> -Total active power -Total reactive power -Total apparent power 		<p>Total active power = 86.6KW Total reactive power = 0000Kvar Total apparent power =86.6KVA Reverse reactive energy =100.08Kvarh</p>
<p>DISP=5</p> <ul style="list-style-type: none"> – Active power phase A -Reactive power phase A -Apparent power phase A 		<p>Active power of phase A = 28.87KW Reactive power of phase A = 0000Kvar Apparent power of phase A =28.87KV A Forward active energy =2908.05KWh</p>
<p>DISP=6</p> <ul style="list-style-type: none"> – Active power phase B -Reactive power phase B -Apparent power phase B 		<p>Active power of phase B = 28.87KW Reactive power of phase B = 0000Kvar Apparent power of phase B =28.87KV A Reverse active energy =1000.02KWh</p>
<p>DISP=7</p> <ul style="list-style-type: none"> – Active power phase C -Reactive power phase C -Apparent power phase C 		<p>Active power of phase C = 28.87KW Reactive power of phase C = 0000Kvar Apparent power of phase C =28.87KVA Forward reactive energy =50.00KVARh</p>

<p>DISP=8 – Average current -Zero sequence current</p>		<p>Average current = 5A Zero sequence current = 0.06A Reverse reactive energy =50.00KVAR h</p>
<p>DISP=9 – Three phase total power factor -Frequency -Voltage unbalance</p>		<p>Three phase total power factor =1.000 Frequency = 50Hz Voltage unbalances = 9V Forward active energy =2908.05KWh</p>
<p>DISP=10 Split phase power factor</p>		<p>Power factor of phase A =0.999 (inductive load) Power factor of phase B =0.999 (inductive load) Power factor of phase C =0.999 (inductive load) Reverse active energy =1000.02KWh</p>
<p>DISP=11 Total voltage harmonic</p>		<p>In the left fig: a.b.c phase total voltage harmonic =10 %</p>

DISP=12
2nd voltage harmonic

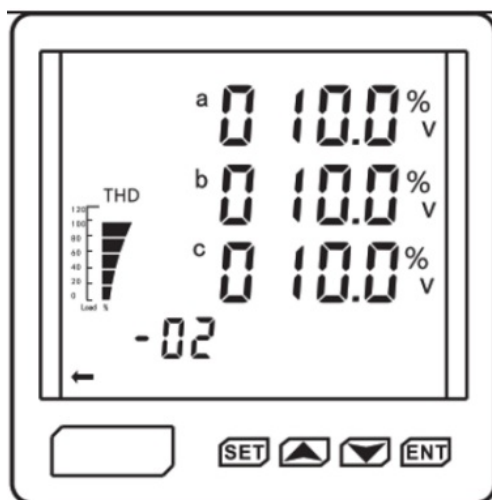


In the left fig:
2nd voltage harmonic of a.b.c phase = 10%

DISP= 41
31st voltage harmonic







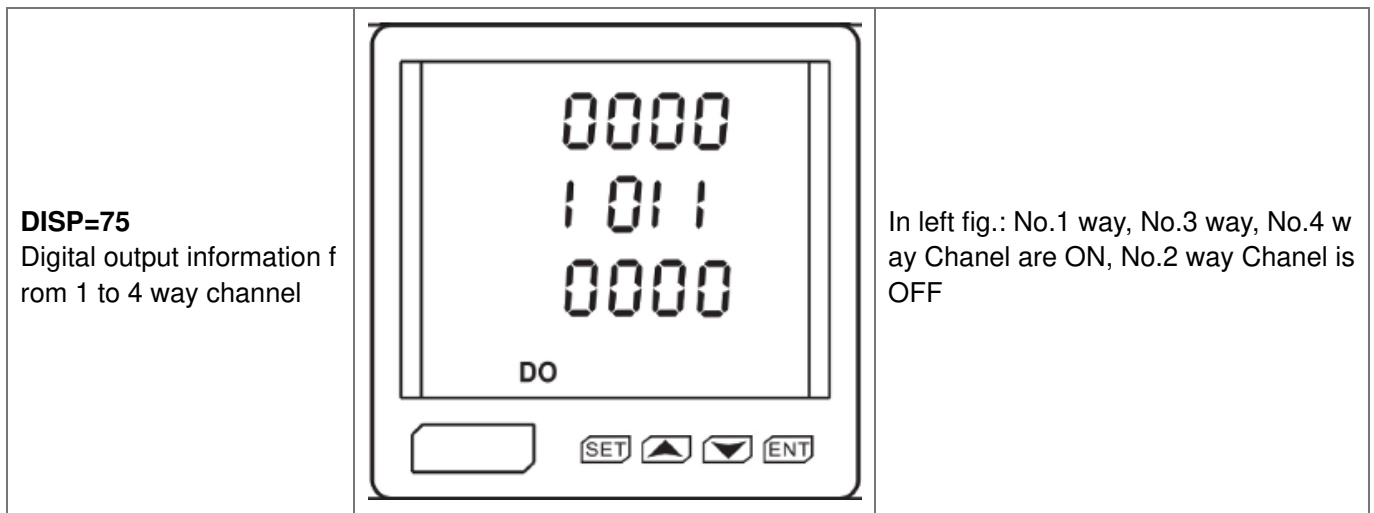
In the left fig: 31st voltage harmonic of a, b, c phase =10%

DISP=42
Total current harmonic

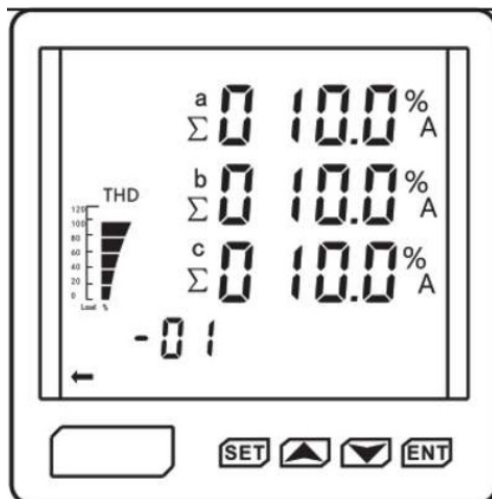

In the left fig: a.b.c phase total current harmonic =10%
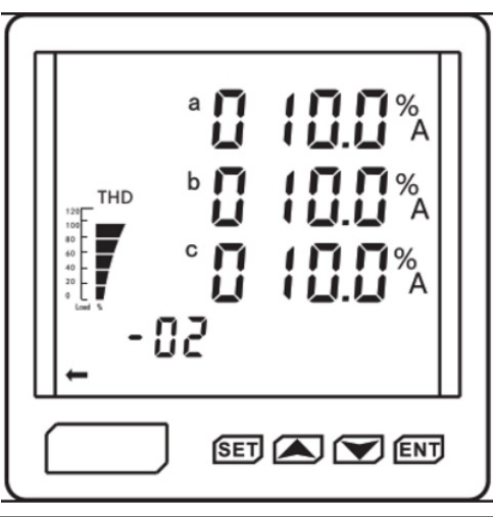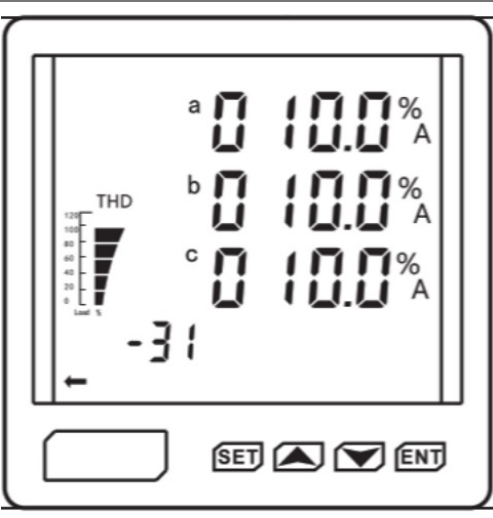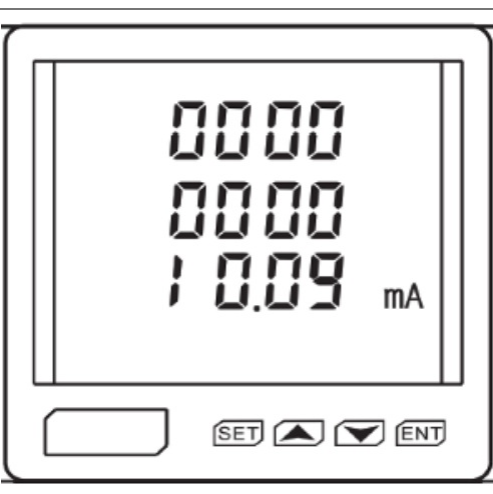
<p>DISP =43 2nd current harmonic</p>		<p>In the left fig: 2nd current harmonic of a, b, c phase =10%</p>
<p>DISP= 72 31st current harmonic</p>		<p>In the left fig: 31st current harmonic of a, b,c phase =10%</p>
<p>DISP=73 Residue current</p>		<p>In left fig. display Residual current value: 10.09m A</p>
<p>DISP=74 Digital input information from 1 to 12 way channel</p>		<p>First line: 1-4 way channel Second line: 5-8 way channel Third line: 9-12 way channel In left fig.: No.5 way, No.6 way, No.8 way Channel are ON, other way Channel is OFF</p>



Programme operation

In programme status, digital interface adopt layers structure menu type, meter supply three lines number display (see fig. 5)

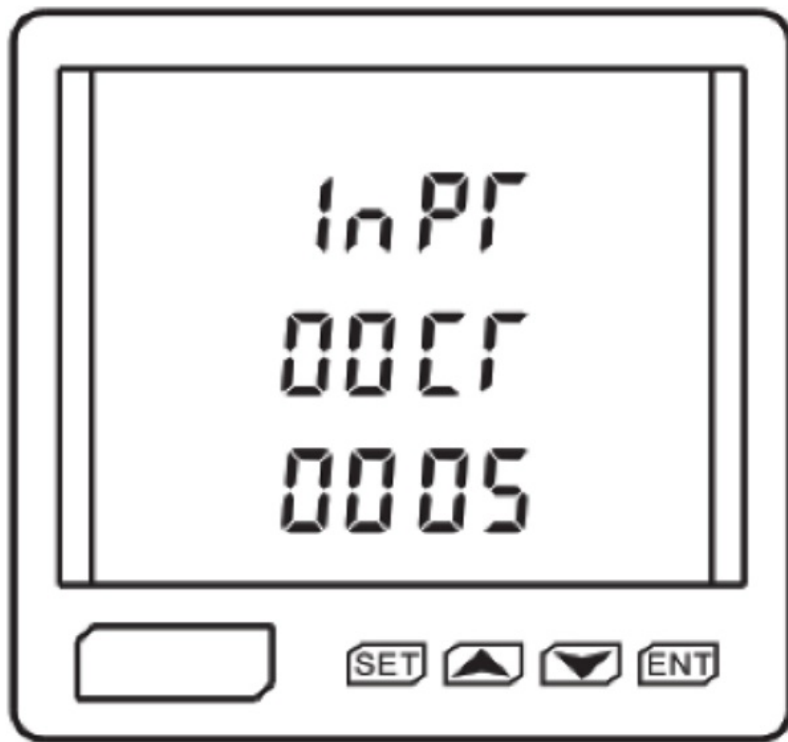


Fig.5

No.1 line is first layer menu information;

No.2 line is second layer menu information;

No.3 line is third layer menu information;

Exp: The fig.5 shown: No.1 layer: INPT = Signal input; No.2 layer: CT = current transformer; No.3 layer: current value is 5, It means ratio of CT is 25/5A.

The digital display interface menu has the following organizational structure, the user can choose the appropriate setting parameters according to the actual situation.

No.1 Layer	No.2 Layer	No.3 Layer	Description
System SET	Display DISP	0000-0017	0000 mean automatic cycling display. Each board connect see table 6
	DISL	0001-0003 or 0000-0120	0000-0120 is keening time of LCD back light. 0000 means the backlight keeping ON
	Data clear CL r. E	1111	1111 means the data clear other value is invalid


Signal Input INPT	Wiring type Net	0000 or other value	0000 mean 3P4W system. Other value is mean 3P3W system
	Voltage trans. ratio PT	1 ~ 9999	PT value= PT primary value/ secondary value
	Current trans. ratio PT	1 ~ 9999	CT value= CT primary value/ secondary value


Communication Set CON i (i is 1 ~ 2)	Address SN	1 ~ 247	Meter address range 1 to 247
	Communication speed BAUD	0001 ~ 0004	0001 is 1200; 0002 is 2400; 0003 is 4800; 0004 is 9600; 00005 is 9200; 00006 is 38400
	Data format DATA	0001 ~ 0003	0000 is E,8, 1; 0001 is 0,8,1; 00002 is N,8,1

Digital output Set DO- i (i is 1 ~ 4)	Choose alarm item or close alarm	Set alarm item's specific threshold value	Choose alarm item, and set relative threshold value (when alarm item is digital value, no need set threshold value), once meet alarm condition, switch output working
Analog output Set AO—i (i is 1 ~ 4)	Chosen transmitter item or close analog output (refer to 8.2 analog output)	Set the full scale value of analog item	Choose transmitter item's and relative electrical parameter (0-20mA, 4-20mA, 4-12-20mA) For example, set "A0-1" TYPE"0135" UAL"5000", which means A phase current 0-5A corresponds to the transmitter output signal of first loop 4-20mA

Note: The above menu is applied to the product with complete functions. If you find there is no such menu in the product or the menu is not working, It means the product not supporting the function.

Programme menu
Structure diagram

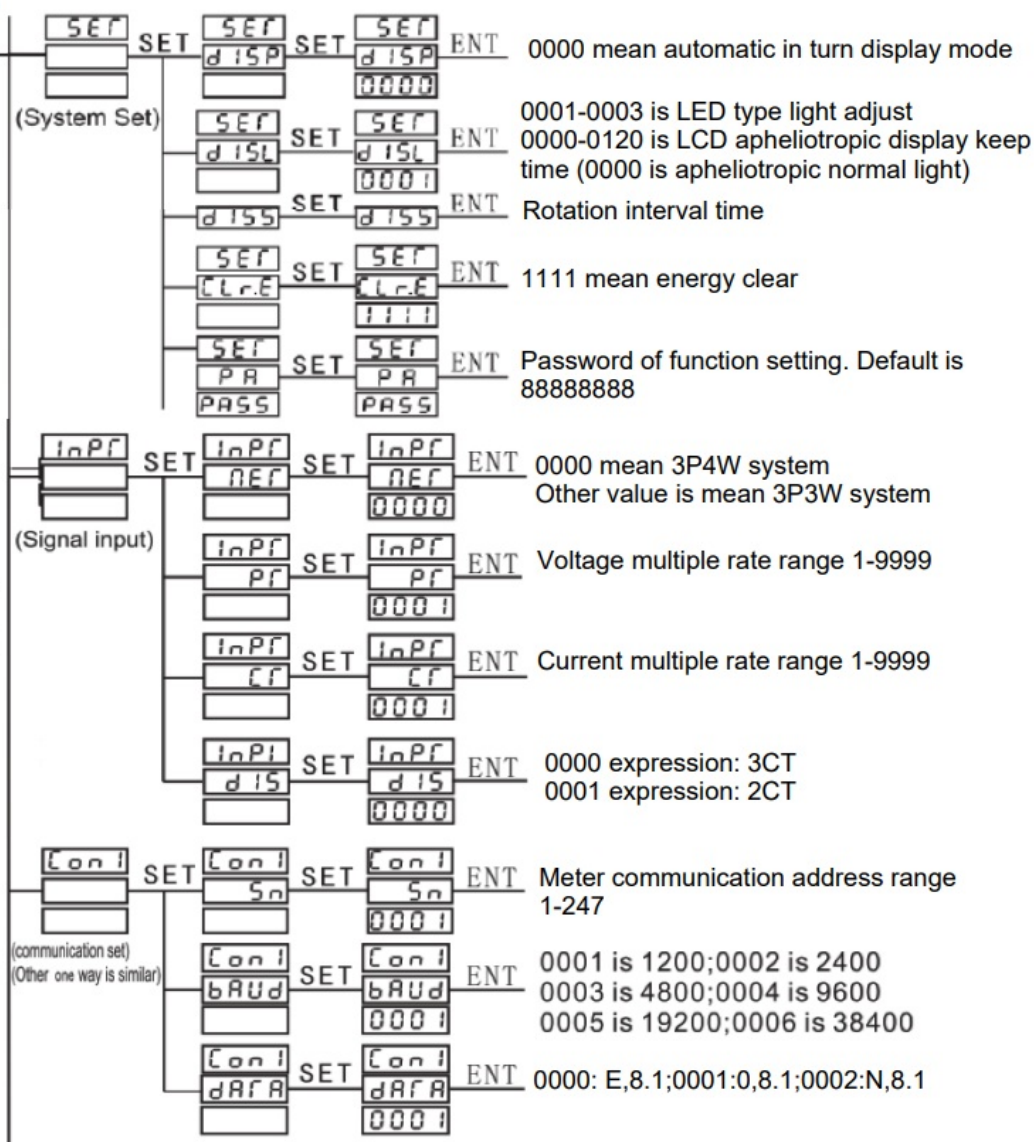

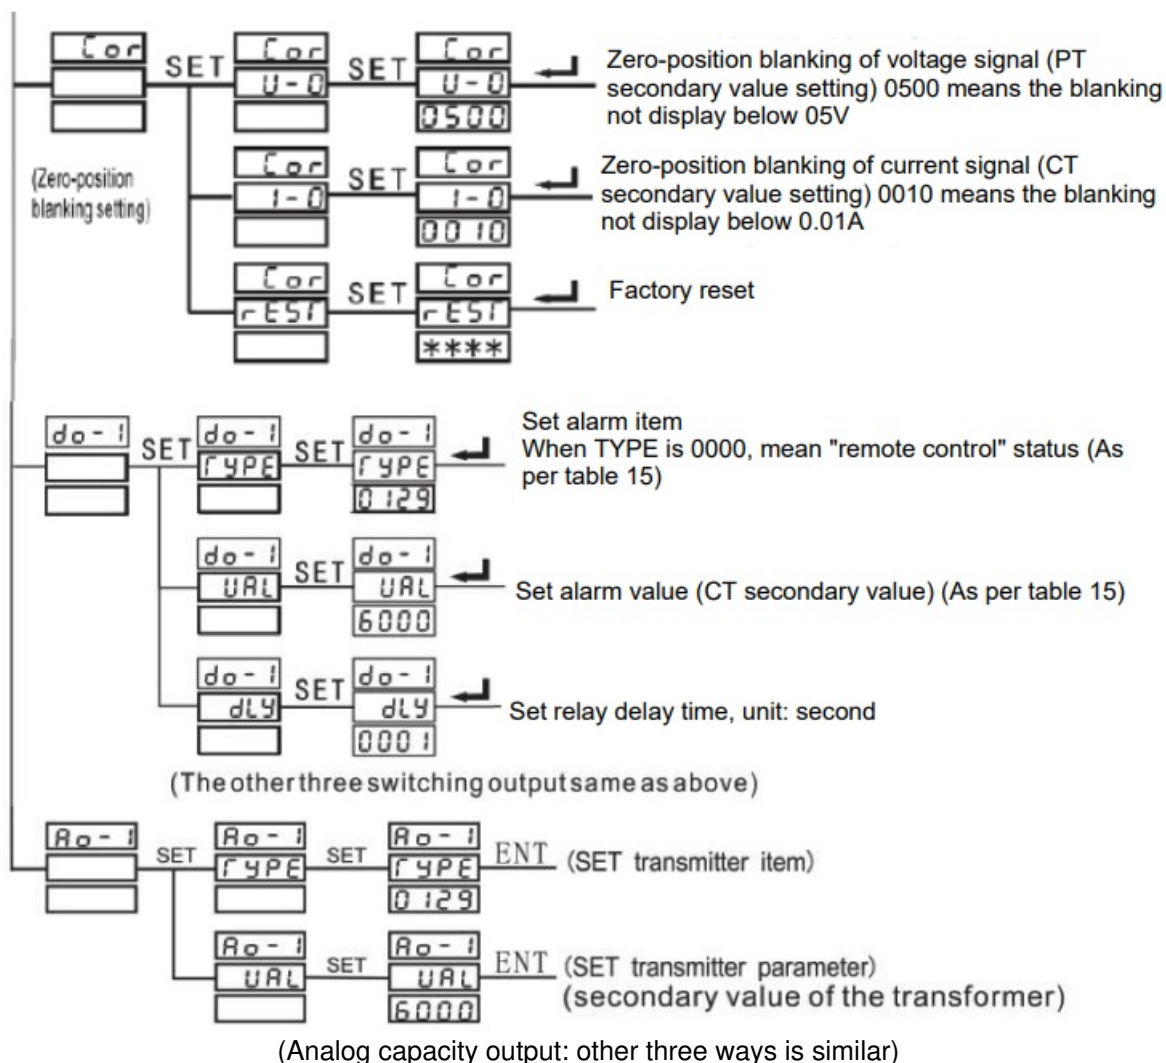

Make a difference

Version 1.0

Documents / Resources

	<p>MASTER MT-DP96HMF Digital Multifunction Meter [pdf] User Manual</p> <p>MT-DP96HMF, MT-DP96HMF Digital Multifunction Meter, Digital Multifunction Meter, Multifunction Meter, Meter</p>
---	---