

Milesight EM320 Tilt Sensor User Guide

Home » Milesight » Milesight EM320 Tilt Sensor User Guide 🏗



- Sensor
- 2 FAQs
- **3 Safety Precautions**
- **4 Product Introduction**
- **5 Hardware Introduction**
- **6 Dimensions**
- 7 Operation Guide
- 8 Installation
- 9 Device Payload
- **10 CONTACT INFORMATION**
- 11 Documents / Resources
 - 11.1 References
- **12 Related Posts**



Milesight EM320 Tilt Sensor



FAQs

- · How do I change the device password?
 - To change the default password (123456), refer to the user manual for instructions on updating the device password securely.
- · What should I do if the battery needs replacement?
 - If the battery needs replacement, follow the guidelines in the user manual for safely removing and replacing the battery to ensure device functionality.

Safety Precautions

Milesight will not shoulder responsibility for any loss or damage resulting from not following the instructions of this operating guide.

- The device must not be disassembled or remodeled in any way.
- In order to protect the security of the device, please change the device password when first configuring. The default password is 123456.
- Do not place the device close to objects with naked flames.
- Do not place the device where the temperature is below/above the operating range.
- The device is not intended to be used as a reference sensor, and Milesight will not be responsible for any

damage that may result from inaccurate readings.


- The battery should be removed from the device if it is not to be used for an extended period. Otherwise, the battery might leak and damage the device. Never leave a discharged battery in the battery compartment.
- Make sure all batteries are newest when installed, or battery life will be reduced.
- The device must never be subjected to shocks or impacts.

Declaration of Conformity

EM320-TILT is in conformity with the essential requirements and other relevant provisions of the CE, FCC, and RoHS.

Copyright © 2011-2023 Milesight. All rights reserved.

All information in this guide is protected by copyright law. Whereby, no organization or individual shall copy or reproduce the whole or part of this user guide by any means without written authorization from Xiamen Milesight IoT Co., Ltd.

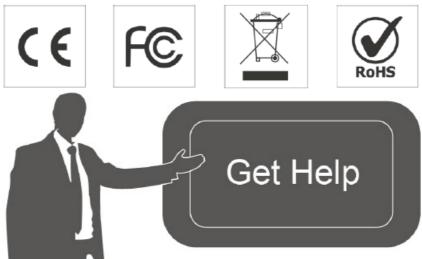

- For assistance, please contact
- · Milesight technical support:
- Email: iot.support@milesight.com
- Support portal: support.milesight-iot.com
- Tel: 86-592-5085280Fax: 86-592-5023065
- Address: Building C09, Software Park III, Xiamen 361024, China

Revision History

Date	Doc Version	Description
Feb.14, 2023	V 1.0	Initial version
Aug. 15, 2023	V 1.1	Add pole mounting plate and installation

Product Introduction

Overview


EM320-TILT is a LoRaWAN® tilt sensor mainly for angle measurement and asset movement detection. With a compact size and 3-axis accelerometer, EM320-TILT can be installed to the objects easily to measure its X,Y,Z tilt angles. In addition, EM320-TILT supports customizing the initial position to detect movement based on angle changes and send threshold alarms. Compliant with the Milesight LoRaWAN® gateway and Milesight IoT Cloud solution, users can know the angles and tilt threshold alarms in real-time via browser or mobile app remotely. EM320-TILT can be widely used in tree monitoring, pole lean detection, landslide monitoring, etc.

Features

- Built-in MEMS accelerometer sensor to measure the 3-axis angles of any objects
- Flexible threshold condition settings, suitable for different kinds of applications
- Easy to install, suitable for various types of objects as trees, poles, grounds, etc.
- IP67 waterproof enclosure for outdoor applications
- · Anti-theft design on back cover to secure firm and sturdy installation
- Ultra-wide-distance wireless transmission up to line of sight of 15km
- Equipped with NFC for one-touch configuration
- Function well with standard LoRaWAN® gateways and network servers
- Compliant with Milesight IoT Cloud


Hardware Introduction

Packing List

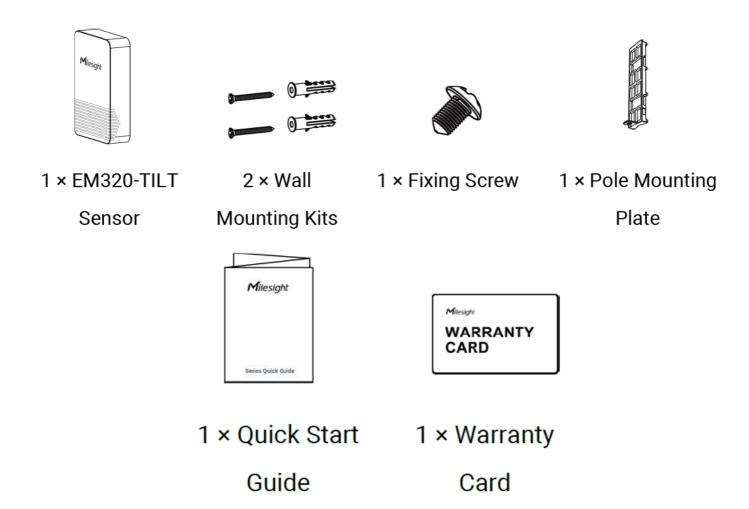


If any of the above items is missing or damaged, please contact your sales Representative.

Hardware Overview

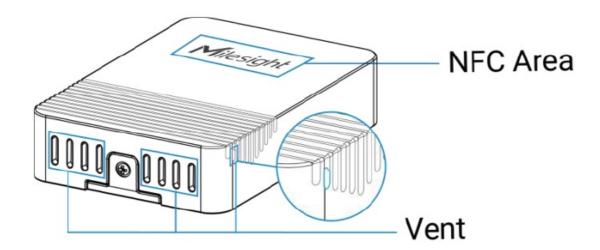


When you install EM320-TILT on site, below is the angle number you can expect with corresponding device gesture.

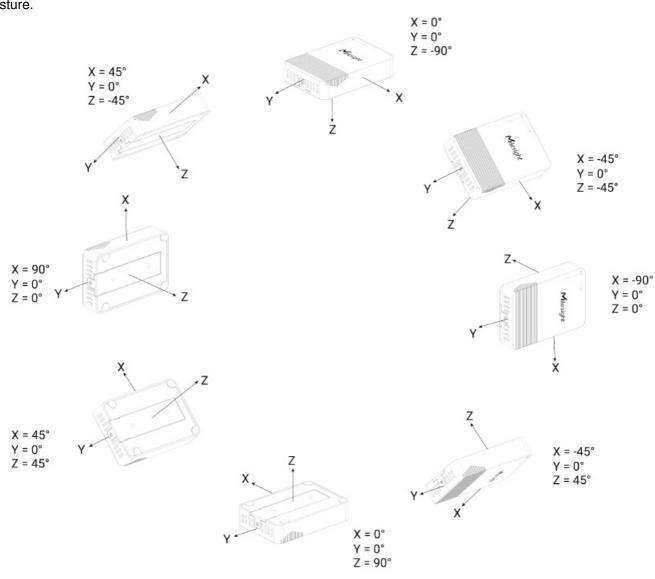

Dimensions

Dimensions(mm)

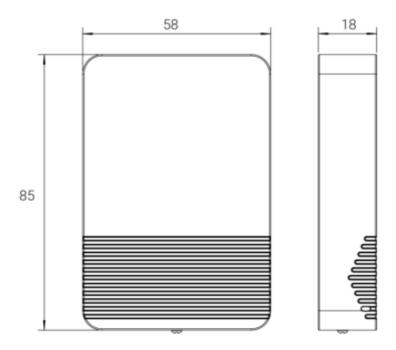

Power Button

The LED indicator and power button are inside the device. Switch on/off and reset can also be configured via NFC.


Function	Action	LED Indication
Turn On	Press and hold the button for more than 3 seconds.	Off → On
Turn Off	Press and hold the button for more than 3 seconds.	On → Off
Reset	Press and hold the button for more than 10 seconds.	Blink 3 times.
Check		Light On: Device is on.
On/Off Status	Quickly press the power button.	Light Off: Device is off.

Operation Guide

NFC Configuration

EM320-TILT sensor can be monitored and configured via NFC. Please refer the following steps to complete the configuration.

- 1. Download and install "Milesight ToolBox" App from Google Play or Apple App Store.
- 2. Enable NFC on the smartphone and launch Milesight ToolBox.
- 3. Attach the smartphone with NFC area to the device to read device information. Basic information and settings of the device will be shown on the ToolBox App if it's recognized successfully. You can read and configure the device by tapping the Read/Write device on the App. In order to protect the security of the device, please change the password when first configuration. The default password is 123456.

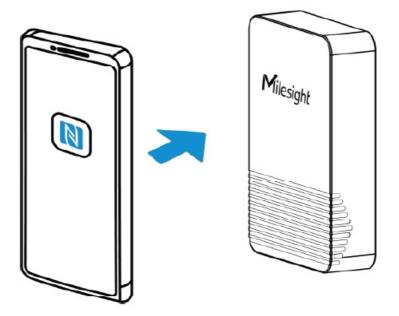

Note:

- 1. Ensure the location of smartphone NFC area and it's recommended to take off phone case.
- 2. If the smartphone fails to read/write configurations via NFC, keep the phone away and back to try again.
- 3. EM320-TILT sensor can also be configured by dedicated NFC reader, which can be purchased from Milesight IoT.

LoRaWAN Settings

LoRaWAN settings is used for configuring the transmission parameters in LoRaWAN® network.

Basic LoRaWAN Settings:

Go to Device > Settings > LoRaWAN Settings of ToolBox App to configure join type, App EUI, App Key and other information. You can also keep all settings by default.

Device EUI 24E124785C381440 * APP EUI 24e124c0002a0001 - 85 * Application Port Join Type OTAA * Application Key ********** LoRaWAN Version V1.0.3 Work Mode Class A Confirmed Mode (1) Rejoin Mode Set the number of detection signals sent (1) 32 ADR Mode (i) Spreading Factor (1) SF10-DR2 **TXPower**

TXPower0-16 dBm

Parameters	Description
Device EUI	Unique ID of the device which can also be found on the label.
App EUI	Default App EUI is 24E124C0002A0001.
Application Port	The port is used for sending and receiving data, default port is 85.
Join Type	OTAA and ABP mode are available.
Application Key	Appkey for OTAA mode, default is 5572404C696E6B4C6F52613230313823.
Device Address	DevAddr for ABP mode, default is the 5th to 12th digits of SN.
Network Session	
Key	Nwkskey for ABP mode, default is 5572404C696E6B4C6F52613230313823.
Application	
Session Key	Appskey for ABP mode, default is 5572404C696E6B4C6F52613230313823.
LoRaWAN Version	V1.0.2, V1.0.3 are available.
Work Mode	It's fixed as Class A.
RX2 Data Rate	RX2 data rate to receive downlinks.
RX2 Frequency	RX2 frequency to receive downlinks. Unit: Hz
Spread Factor	If ADR is disabled, the device will send data via this spread factor.
	If the device does not receive ACK packet from network server, it will resend
Confirmed Mode	data once.
Rejoin Mode	Reporting interval ≤ 35 mins: the device will send a specific number of LinkCheckReq M AC packets to the network server every reporting interval or 2*reporting interval to validate connectivity; If there is no response, the device will re-join the network. Reporting interval > 35 mins: the device will send a specific number of


	LinkCheckReq MAC packets to the network server every reporting interval to
	validate connectivity; If there is no response, the device will re-join the network.
Set the number of	When rejoin mode is enabled, set the number of LinkCheckReq packets sent.
packets sent	Note: the actual sending number is Set the number of packet sent + 1.
ADR Mode	Allow network server to adjust data rate of the device.
Tx Power	Transmit power of the device.

Note:

- 1. Please contact sales for device EUI list if there are many units.
- 2. Please contact sales if you need random App keys before purchase.
- 3. Select OTAA mode if you use Milesight IoT cloud to manage devices.
- 4. Only OTAA mode supports rejoin mode.

LoRaWAN Frequency Settings:

Go to Settings > LoRaWAN Settings to select supported frequency and select channels to send uplinks. Make sure the channels match the LoRaWAN® gateway.

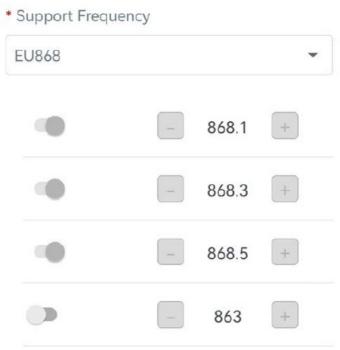

• If frequency is one of CN470/AU915/US915, you can enter the index of the channel that you want to enable in the input box, making them separated by commas.

Examples:

- 1, 40: Enabling Channel 1 and Channel 40
- 1-40: Enabling Channel 1 to Channel 40
- 1-40, 60: Enabling Channel 1 to Channel 40 and Channel 60
- · All: Enabling all channels
- Null: Indicates that all channels are disabled



Basic Settings

• Go to Device > Settings > General Settings to change the reporting interval, etc.



Parameters	Description
	Reporting interval of transmitting current sensor values to network
Reporting Interval	server. Default: 1080 mins, Range: 1-1080 mins
	Change the password for ToolBox App or software to read/write this
Change Password	device.

Threshold Settings

Go to Device > Settings > Threshold Settings to enable the threshold settings and input the angle threshold. You can set a relative initial surface to measure the deviance from an initial one and if the device detects the angle of a certain axis reaches the threshold based on the initial position, it will upload the current data instantly.

Relative Initial Surface (1) Setting Classical Action (1) Setting Classica	Deflection Angle	(i)	- CI-
(0.00°, 0.00°, -90.00°) X-axis Over / ° Below / ° Y-axis	Relative Initial Surface (Setting	Cle
Over / ° Below / ° Y-axis	The triaxial angle relative (0.00°, 0.00°, -90.00°)	e to the init	ial face
Below / ° Y-axis	X-axis		
Y-axis	Over / °		
	Below / °		
	Y-axis		
	Alarm Condition (1)		
Alarm Condition (1)	Alarm Reporting Interval	- 1	+ r
		- 2	

Parameters	Description
	Click Setting to set current position of device as initial position to measure the deflection angle.
	Click Clear to change the initial position back to (0.00°, 0.00°, -90.00°).
Relative Initial Surface	Note: after writing Setting or Clear configuration, click Read to read the device to check if the initial position changes successfully.
Over / °	The maximum/upper limit of angle threshold.
Below / °	The minimum/lower limit of angle threshold.
	Acceptable elements are "X", "Y", "Z", "and", "or" "only", it takes 2 or 3 axes to complete an expression and the device will only read from left to right. If left blank, it will consider the condition as "or".
	Example:
	1) XandYorZ means (X and Y) or Z, that is XandY meets the threshold or Z meets the threshold.
	2) XorYandZ means (X or Y) and Z, that is XandZ meets the threshold or YorZ
Alarm Condition	meets the threshold.

Alarm Reporting	After the threshold is triggered, the device will detect if the threshold is
Interval	triggered again according to this reporting interval.
Alarm Reporting Tim es	After the threshold is triggered, the device will detect according to Alarm Reporting Inter val and if still triggered, the device will send the certain number of alarms to NS.

Example:

When X axis is detected to 0° ($0^{\circ} - 1.91^{\circ} = -1.91^{\circ} < -1^{\circ}$), it will trigger the threshold and upload a alarm package right away. If it changes back to normal, the device will also upload a data package immediately; if not, it will send alarm package after 1 minute. This process will repeat 2 times.



Maintenance

Upgrade

- 1. Download firmware from Milesight website to your smartphone.
- 2. Open ToolBox App and click Browse to import firmware and upgrade the device.

Note:

1. Operation on ToolBox is not supported during the upgrade.


2. Only Android version ToolBox supports the upgrade feature.



Backup

EM320-TILT sensor supports configuration backup for easy and quick device configuration in bulk. Backup is allowed only for devices with the same model and LoRaWAN® frequency band.

- 1. Go to Template page on the App and save current settings as a template. You can also edit the template file.
- 2. Select one template file that is saved in the smartphone and click Write, then attach it to another device to write the configuration.

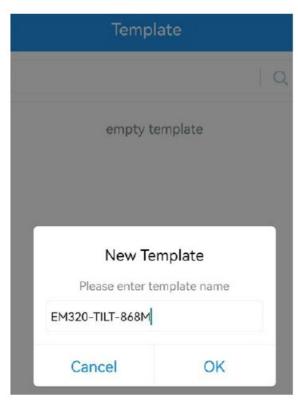

Note: Slide the template item to the left to edit or delete it. Click the template to edit the configurations.



Reset to Factory Default


- Please select one of following methods to reset device:
- Via Hardware: Hold on reset button inside the device more than 10s.
- Via ToolBox App: Go to Device > Maintenance > Reset to click Reset, then attach smart phone with NFC area to device to complete reset.




Installation


Wall Mounting:

1. Remove the backplate on the back of the device, screw the wall plugs into the wall and fix the backplate with screws on it, then install back the device. Note that the vent of device should not face upwards when installing.

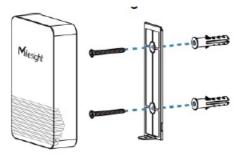

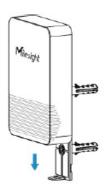


2. Fix the bottom of the device to the cover with a fixing screw.

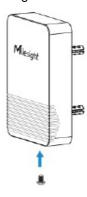


Pole Mounting:

• Switch the backplate on the back of the device to the pole mounting plate and fix the plate with a screw, then pass a cable tie through the plate and wrap it with device to the pole.

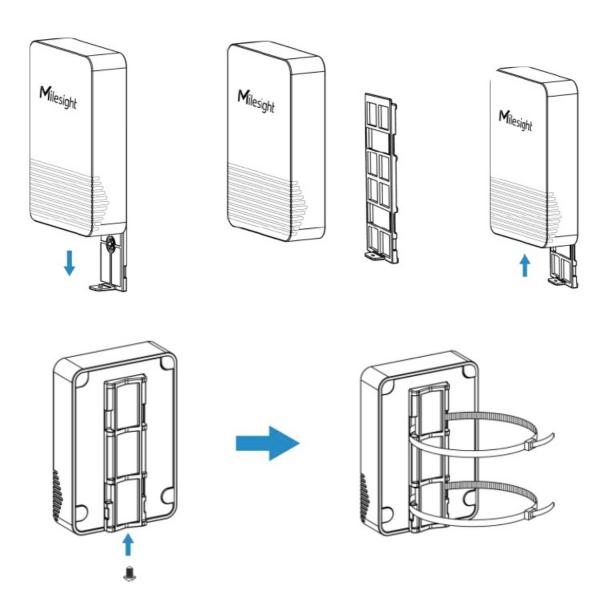

Installation Location:

- Ensure the location of device is within the communication range of LoRaWAN® gateway and keep it away from metal objects.
- Ensure that the device is tightly attached without any gap to the surface to be measured of a certain object, and one of the 3 axes should be paralleled with the measuring axis of the object, otherwise, the result may not be correct.

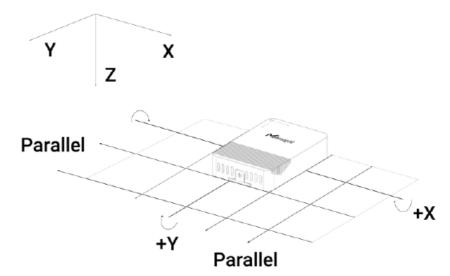

Device Payload

• All data are based on following format (HEX), the Data field should follow little-endian:

Channel1	Type1	Data1	Channel2	Type2	Data2	Channel 3	
1 Byte	1 Byte	N Bytes	1 Byte	1 Byte	M Bytes	1 Byte	

For decoder examples please find files on https://github.com/Milesight-loT/SensorDecoders.

Basic Information

EM320-TILT sensors report basic information of sensor whenever joining the network.

Channel	Туре	Description
	01(Protocol Version)	01=>V1
	09 (Hardware Version)	01 40 => V1.4
	0a (Software Version)	01 14 => V1.14
	0b (Power On)	Device is on
ff	Of (Device Type)	00: Class A, 01: Class B, 02: Class C
	16 (Device SN)	16 digits

Example:

ff0bff ff0101 ff166785c38144050018 ff090110 ff0a0101 ff0f00							
Channel	Туре	Value	Channel	Туре	Value		
ff	0b (Power On)	ff (Reserved)	ff	01 (Protocol Version)	01 (V1.0)		
Channel	Туре	Value	Channel	Туре	Value		
ff	16	6785c381440	ff	09	0110		

	(Device SN)	50018		(Hardware version)	(V1.1)
Channel	Туре	Value	Channel	Туре	Value
	0a (Software				00
ff	version)	0101 (V1.1)	ff	Of (Device Type)	(Class A)

Sensor Data

EM320-TILT sensors report sensor data according to reporting interval (1080mins by default).

Item	Channel	Туре	Description	
Battery Level	01	75	UINT8, Unit: %	
			6 Bytes, INT16	
			angle_x (2B) + angle_y(2B) + angle_z(2B), Unit:°, Resolution: 0.	
			angle_x bit0: 0-normal; 1-trigger angle_y bit0: 0-normal; 1-trigger angle-z bit0: 0-normal; 1-trigger	
			Note: the angles are based on relative initial	
Angle	03	d4	surface.	

Example:

017564 03d498fd 44ff 6b22					
Channel	Туре	Value	Channel	Туре	Value
					X: 98 fd => fd 98
					= (-616-0)/2 * 0.01
					= -3.08°
					Y: 44 ff => ff 44
					= (-188-0)/2 * 0.01
					= -0.94°
	75				Z: 6b 22 => 22 6b
01	(Battery Level)	64=>100%	03	d4 (Angle)	= (8811-1)/2 * 0.01
					= 44.05°
					X=fd 98 => 1111 1101
					1001 1000
					X_bit0: 0 => normal
					Y_bit0: 0 => normal
					Z_bit0: 1 => trigger

Downlink Commands

EM320-TILT sensors support downlink commands to configure the device. The application port is 85 by default.

Command	Channel	Туре	Description
Reporting Interval		03	2 Bytes, unit: s
Reboot		10 ff	
			9 bytes:
			CTRL (1B) + Min (2B) + Max (2B) + Alarm Reporting Interval (2B) + Alarm Reporting Times(2B)
			CTRL:
			Bit 2~0:
			00- disable
			01- below (minimum threshold) 010-over (maximum threshold) 011-within
			100-below or over Bit 5~3:
			001: X-axis angle
			010: Y-axis angle
			011: Z-axis angle
Threshold Alarm		06	Bit 6~7: 00
Tilleshold Alaim		06	Min./Max. Threshold: INT16/100, Unit: °
			ff-set current position as initial position
Initial Position		62	fe-set the initial position to (0.00°, 0.00°, -90.00°)
			8 bytes, hex string of ASCII expression; if ASCII expression take s less than 8 bytes, add 0 in the end to meet the size.
	ff		Note: before setting the condition, ensure the
Alarm Condition		63	corresponding axis threshold is enabled, or this condition will not work.
Alami Condition		03	

Example:

• Set reporting interval as 20 minutes.

ff03b004

Channel	Туре	Value
ff	03 (Set Reporting Interval)	b0 04=>04 b0=1200s =20 minutes

• Set X-axis threshold between 10° and 20°, it will detect the threshold every 1 minute, send alarm 3 times at

most.

ff060ce803d0073c000300			
Channel	Туре	Value	
		$0c \Rightarrow 00\ 001\ 100 = \text{when X axis angle is below or over, } e803 \Rightarrow 03e$ $8=1000/100 = 10.00^{\circ}$	
		d007 => <u>07d0=</u> 2000/ <u>100</u> = 20.00°	
ff 06 (Set Threshold)		3c00 => 60 s = 1 min 0300 => 00 03 = 3 times	

• Reboot the device.

ff10ff			
Channel	Туре	Value	
ff	10 (Reboot)	ff (Reserved)	

• Set the alarm condition to be X and Y or Z, before setting ensure X, Y, and Z thresholds are enabled.

ff635826597c5a000000			
Channel	Туре	Value	
ff	63 (Set Alarm Condition)	5826597c5a000000 = X&Y Z	

• Set current position as the initial position.

ff62ff			
Channel	Туре	Value	
ff	62 (Set Initial Position)	ff = set current position as initial position	

CONTACT INFORMATION

• Tel: +33 477 92 03 56

• Email: contact@rg2i.com

• www.rg2i.com

Documents / Resources



Milesight EM320 Tilt Sensor [pdf] User Guide EM320-TILT, EM320 Tilt Sensor, Tilt Sensor, Sensor

References

- Support : IoT Support
- O GitHub Milesight-IoT/SensorDecoders: Payload Codec for Milesight Sensors
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.