



MSD PN8280 Series High Output Coil Instruction Manual

[Home](#) » [MSD](#) » MSD PN8280 Series High Output Coil Instruction Manual 

MSD PN8280 Series High Output Coil Instruction Manual



ONLINE PRODUCT REGISTRATION: Register your MSD product online and you'll be entered in our monthly 8.5mm Super Conductor Spark Plug Wire give-away! Registering your product will help if there is ever a warranty issue with your product and helps the MSD R&D team create new products that you ask for! Go to www.msperformance.com/registration.

IMPORTANT: Read the instructions before attempting the installation.

Parts Included, PN 8280, PN 82803:

1 – Coil Mounting Hardware

Parts Included, PN 82808, PN828038:

8 – Coils Mounting Hardware

WARNING: During installation, disconnect the battery cables. When disconnecting the battery, always remove the Negative cable first and install it last.

Note: This high output coil is meant to be used with MSD's Pro 600 CDI (PN 8000). The coil will be wired to the Pro 600 CDI harness.

Contents

[1 WIRING](#)

[2 MOUNTING](#)

[3 COIL SPEC](#)

[4 Limited Warranty](#)

[5 Service](#)

[6 Documents /](#)

[Resources](#)

[7 Related Posts](#)

WIRING

There are three terminals on top of the coil. The terminals are marked by a positive, and negative sign, and by the letters "CS". Two of the three wires used for the coil are integral to the Pro 600 CDI harness, the third will be a ground wire that must be connected to the associated cylinder head in which the corresponding spark plug is installed. Each wire requires a ring terminal to be crimped at the end in order to be connected to the coil. The ring terminals for each of the three wires are supplied with the coil. The brown and the grey wires coming from the harness must use the #10 ring terminals, and the black wire uses the #8 ring terminal. The brown and the grey wires attach with the 10-32 x .375 pan head screws and the #10 lock split washers. The black wire attaches with the 8-32 x .375 screw and #8 lock split washer. MSD recommends using black 14-16 gauge wire to connect the "CS" terminal to the cylinder head associated with the corresponding spark plug. The grey wire from the Pro 600 CDI harness attaches to the negative terminal of the coil, and the brown wire attaches to the positive coil terminal (**Figure 1**).

Note: CS = Current Sensing feature will be available on future products, and will have its own designated wire.

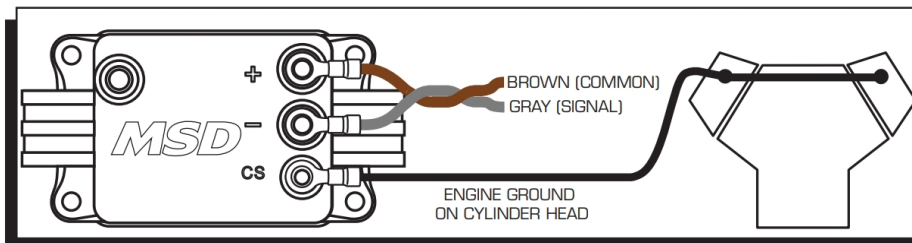


Figure 1 Coil Wiring.

MOUNTING

The coils come supplied with a variety of hardware to accommodate different mounting locations, and orientations. The coils are designed to be mounted on Holley's LS valve covers, or OEM LS passenger car coil brackets, using the two side mounts (**Figure 2**). The coils can be remotely mounted. When mounting the coils on Holley valve covers or OEM brackets, use the supplied M6 x 1.0 40mm bolts. If the coils will be remotely located, they can be placed using either the bottom or side tabs, and should be mounted out of the way of any excessive

heat (**Figure 3**).

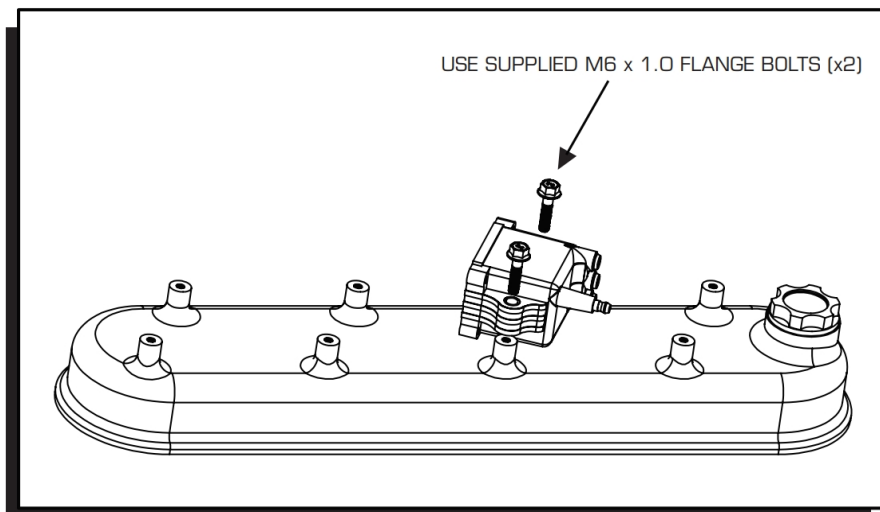


Figure 2 LS Valve Cover Mounting.

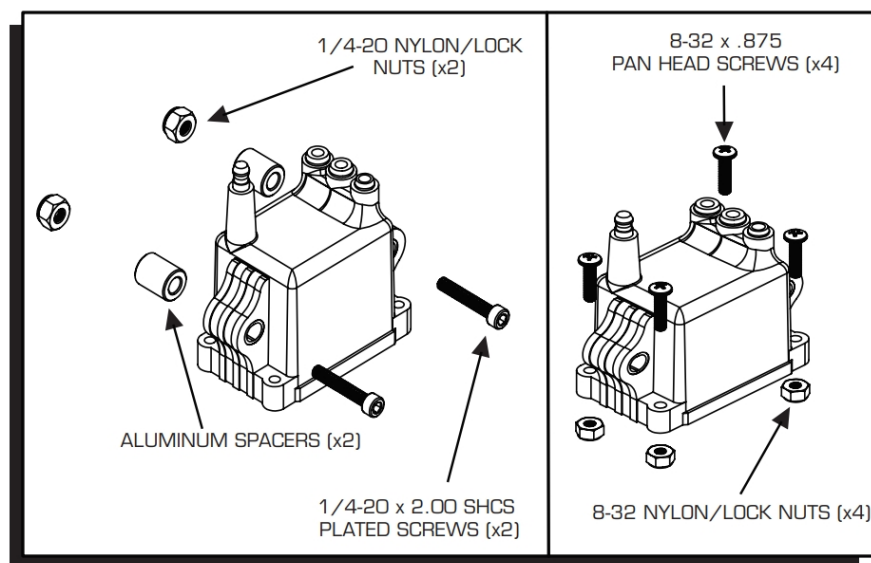


Figure 3 Remote Mounting Options.


COIL SPEC

The following specifications show coil performance using the PRO 600 CDI operating at 600 millijoules.

- Maximum Secondary Voltage with 50 pF load – 50 kilovolts.
- Peak Secondary Current – 1.7 Amps
- Spark Duration – 345 microseconds
- Spark Gap Energy – 208 millijoules.

Values stated above are for reference only. Actual values may vary across different applications.

A template is supplied (**Figure 4**) in order to mock up the four mounting holes located on the bottom side of the coil.

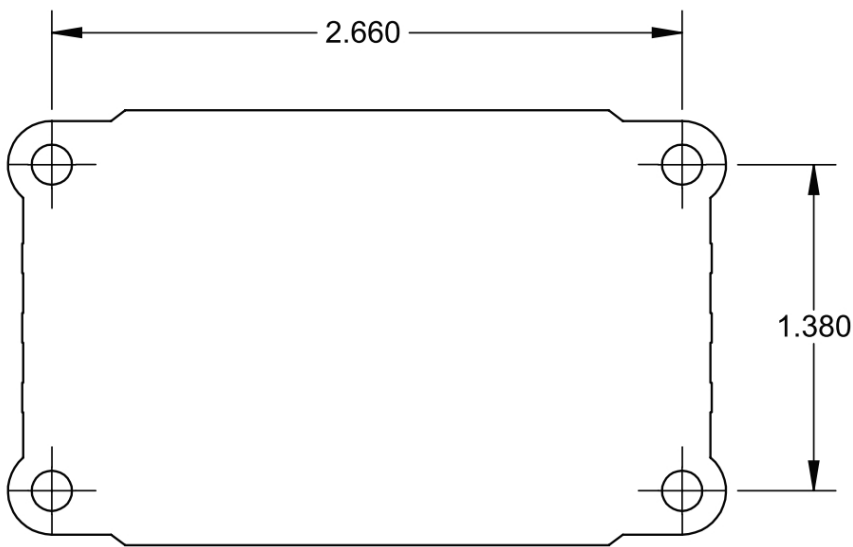

Limited Warranty

MSD warrants this product to be free from defects in material and workmanship under its intended normal use*, when properly installed and purchased from an authorized MSD dealer, for a period of one year from the date of the original purchase. This warranty is void for any products purchased through auction websites. If found to be defective as mentioned above, it will be repaired or replaced at the option of MSD. Any item that is covered under this warranty will be returned free of charge using Ground shipping methods.

This shall constitute the sole remedy of the purchaser and the sole liability of MSD. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representation whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall MSD or its suppliers be liable for special or consequential damages.

*intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD. Any modifications to this item or if it is used on an application other than what MSD markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD will accept no liability for custom applications.

Service

In case of malfunction, this MSD component will be repaired free of charge according to the terms of the warranty. When returning MSD components for warranty service, Proof of Purchase must be supplied for verification. After the warranty period has expired, repair service is based on a minimum and maximum fee.

All returns must have a Return Material Authorization (RMA) number issued to them before being returned.

To obtain an RMA number please contact MSD Customer Service at 1 (866) 464-6553 or visit our website at www.msdpower.com/rma to automatically obtain a number and shipping information.

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle.

The repaired unit will be returned as soon as possible using Ground shipping methods (*ground shipping is covered by warranty). For more information, call MSD at (888)258-3835. MSD technicians are available from 7:00 a.m. to 5:00 p.m. Monday – Friday (mountain time).


WWW.MSDPERFORMANCE.COM

(915)855-7123

1-888-258-3835



Documents / Resources

 A small thumbnail image of the instruction manual cover for the MSD PN8280 Series High Output Coil. The cover is white with black text and a small diagram of the coil at the bottom.	<p>MSD PN8280 Series High Output Coil [pdf] Instruction Manual PN 8280, PN 82808, PN 82803, PN 828038, High Output Coil, Output Coil, High Coil, Coil, PN8280 Series High Output Coil, PN8280 Series Coil</p>
---	---

[Manuals+](#)