



PCE Instruments 2X BT Series Car Measuring Device User Manual

[Home](#) » [PCE Instruments](#) » PCE Instruments 2X BT Series Car Measuring Device User Manual 

Contents

- [1 PCE Instruments 2X BT Series Car Measuring Device](#)
- [2 Safety notes](#)
- [3 Technical specifications](#)
- [4 Delivery scope](#)
- [5 Display description](#)
- [6 Power supply](#)
- [7 Measurement](#)
- [8 Menu](#)
- [9 Calibration](#)
- [10 Five-point calibration](#)
- [11 Data group](#)
- [12 Limit value alarm](#)
- [13 App transfer](#)
- [14 Troubleshooting](#)
- [15 PCE Instruments' contact information](#)
- [16 Documents / Resources](#)
 - [16.1 References](#)
- [17 Related Posts](#)





Specifications

The PCE-CT 2X BT Series Coating Thickness Gauge is a versatile device designed for measuring the thickness of coatings on various surfaces. Below are the technical specifications of the product:

Technical Specifications

- Model: PCE-CT 2X BT Series
- Measurement Range: 0 – 2000 µm
- Accuracy: $\pm (2\% + 2 \mu\text{m})$
- Resolution: 0.1 µm (up to 999.9 µm), 1 µm (above 999.9 µm)
- Measurement Principle: Magnetic Induction (Ferrous) / Eddy Current (Non-Ferrous)
- Probe Type: Built-in
- Display: LCD with backlight
- Power Supply: 2 x AAA batteries
- Operating Temperature: 0 – 40°C
- Dimensions: 120 x 60 x 25 mm
- Weight: 120 g

Delivery Scope

The PCE-CT 2X BT Series Coating Thickness Gauge comes with the following items:

- PCE-CT 2X BT Series Coating Thickness Gauge
- User Manual

Display Description

The device features an LCD with a backlight for easy reading in different lighting conditions. The display shows the measured coating thickness in µm or mils.

Key Description

The device has the following keys:

- Power/Menu: Turns the device on/off and accesses the menu.
- Up/Down: Navigate through menu options and increase/decrease values.
- Enter: Confirms selections or saves settings.

Power Supply

The PCE-CT 2X BT Series Coating Thickness Gauge is powered by 2 AAA batteries. To install or replace the batteries, follow these steps:

1. Locate the battery compartment on the back of the device.
2. Slide the battery cover in the direction indicated to open it.
3. Insert the batteries, ensuring correct polarity.
4. Close the battery cover securely.

On / Off

To turn on the device, press and hold the Power/Menu key for a few seconds until the display lights up. To turn off the device, press and hold the Power/Menu key again until the display turns off.

Measurement

The PCE-CT 2X BT Series Coating Thickness Gauge offers different measurement modes:

Continuous Measurement

In continuous measurement mode, the device continuously measures and displays the coating thickness as you move it over the surface. Follow these steps to perform a continuous measurement:

1. Turn on the device.
2. Select "Continuous Measurement" from the menu.
3. Hold the probe against the surface and move it smoothly over the area to be measured.
4. Observe the real-time measurements displayed on the screen.

Menu

The device has a menu system that allows you to access various functions and settings. To access the menu, press the Power/Menu key. The menu options will be displayed on the screen.

Menu Structure

The menu is structured as follows:

- Option 1

- Option 2
- Option 3

Calibration

Calibration ensures accurate measurements. The PCE-CT 2X BT Series Coating Thickness Gauge offers different calibration options:

Zero Point Calibration

Zero point calibration is used to set the device to zero when there is no coating on the surface. Follow these steps to perform zero point calibration:

1. Select “Zero Point Calibration” from the menu.
2. Place the probe on a non-coated reference surface.
3. Press Enter to perform the calibration.

One-point Calibration

One-point calibration is used to calibrate the device using a reference sample with a known coating thickness. Follow these steps to perform one-point calibration:

1. Select “One-point Calibration” from the menu.
2. Place the probe on the reference sample with a known coating thickness.
3. Enter the known thickness using the Up/Down keys.
4. Press Enter to perform the calibration.

Five-point Calibration

Five-point calibration is used to calibrate the device using multiple reference samples with known coating thicknesses. Follow these steps to perform five-point calibration:

1. Select “Five-point Calibration” from the menu.
2. Place the probe on each reference sample and enter the known thickness using the Up/Down keys.
3. Press Enter after each measurement to save the calibration values.

PC Transfer

The PCE-CT 2X BT Series Coating Thickness Gauge can be connected to a PC for data transfer. For detailed instructions on how to transfer data to a PC, please refer to the PC Transfer section in the user manual.

App Transfer

The PCE-CT 2X BT Series Coating Thickness Gauge can also transfer data to a mobile app. For detailed instructions on how to transfer data to the app, please refer to the App Transfer section in the user manual.

Troubleshooting

If you encounter any issues with the device, please refer to the Troubleshooting section in the user manual for possible solutions.

Contact

If you have any further questions or need assistance, please contact PCE Instruments using the following contact details:

- **Phone:** +1 123-456-7890
- **Email:** info@pce-instruments.com
- **Website:** www.pce-instruments.com

Disposal

When disposing of the device, follow local regulations and guidelines for electronic waste disposal. Do not dispose of the device in regular household waste.

FAQ (Frequently Asked Questions)

- **Q:** Can I use the PCE-CT 2X BT Series Coating Thickness Gauge on both ferrous and non-ferrous surfaces?
A: Yes, the PCE-CT 2X BT Series Coating Thickness Gauge is designed to measure the thickness of coatings on both ferrous and non-ferrous surfaces using different measurement principles.
- **Q:** How do I change the unit of measurement from μm to mils?
A: To change the unit of measurement, go to the menu and select the "Unit" option. From there, you can choose between μm and mils as the desired unit.
- **Q:** Can I save and recall measurement data on the device?
A: No, the PCE-CT 2X BT Series Coating Thickness Gauge does not have built-in memory to save measurement data. However, you can transfer the data to a PC or mobile app for further analysis and storage.
- **Q:** How often should I calibrate the device?
A: It is recommended to calibrate the device regularly, especially if you notice any deviations in measurements or when working with critical applications. The frequency of calibration depends on your specific requirements and industry standards.

User manuals in various languages (français, italiano, español, português, nederlands, türk, polski, русский,) can be found by using our product search on: www.pce-instruments.com



Safety notes

Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. Damage or injuries caused by non-observance of the manual are excluded from our liability and not covered by our warranty.

- The device must only be used as described in this instruction manual. If used otherwise, this can cause

dangerous situations for the user and damage to the meter.

- The instrument may only be used if the environmental conditions (temperature, relative humidity, ...) are within the ranges stated in the technical specifications. Do not expose the device to extreme temperatures, direct sunlight, extreme humidity or moisture.
- Do not expose the device to shocks or strong vibrations.
- The case should only be opened by qualified PCE Instruments personnel.
- Never use the instrument when your hands are wet.
- You must not make any technical changes to the device.
- The appliance should only be cleaned with a damp cloth. Use only pH-neutral cleaner, no abrasives or solvents.
- The device must only be used with accessories from PCE Instruments or equivalent.
- Before each use, inspect the case for visible damage. If any damage is visible, do not use the device.
- Do not use the instrument in explosive atmospheres.
- The measurement range as stated in the specifications must not be exceeded under any circumstances.
- Non-observance of the safety notes can cause damage to the device and injuries to the user.

We do not assume liability for printing errors or any other mistakes in this manual.

We expressly point to our general guarantee terms which can be found in our general terms of business.

If you have any questions please contact PCE Instruments. The contact details can be found at the end of this manual.


Technical specifications

Model	PCE-CT 21BT	PCE-CT 22BT	PCE-CT 23BT
Measurable substrates	Fe	Fe, NFe	Fe, NFe
Probe	external	internal	external
Measurement range	0 ... 1500 µm		
Resolution	0.1 µm (within meas. range 0 ... 99.9 µm) 1 µm (within meas. range 100 ... 1500 µm)		
Accuracy	±(1 µm + 2 % of the coating thickness)		
Units	µm, mil		
Min. curvature	convex 5 mm, concave 5 mm		
Min. measuring area	10 x 10 mm		
Min. thickness of substrate	0.4 mm		
Interface	Bluetooth, micro USB		
Memory space	10 groups of 60 measured values each		
Power supply	2 x 1.5 V AA battery, 5 V USB interface		
Environmental conditions	-10 ... 50 °C, 10 ... 85 % RH		
Dimensions	126 x 69 x 35 mm (without sensor)		
Weight	approx. 97 g (without batteries)		

Delivery scope

- 1 x coating thickness gauge PCE-CT 2x BT series
- 5 x calibration foil reference
- 1 x Fe zero standard
- 1 x NFe zero standard (only for PCE-CT 22BT and PCE-CT 23BT)
- 1 x transport loop
- 2 x 1.5 V AA batteries
- 1 x carrying case
- 1 x user manual

Display description

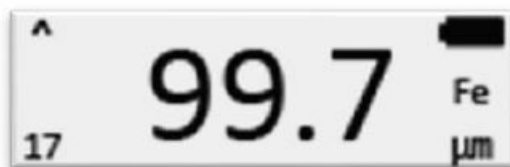

Symbol	Designation	Description
99.7	Measured value	Display of the current measured value
	Battery indicator	Batteries charged or the meter is operated via the USB interface. Batteries are 2/3 charged Batteries are 1/3 charged Batteries are discharged. Please replace the batteries.
Fe NFe	Substrate	Fe: magnetic material NFe: non-magnetic material
μm	Unit	Adjustable units μm and mil
Λ / v	Limit value	Is displayed when the set limit value is exceeded or fallen below.
17	Number of measurements	Number of measured values

Key description


Symbol	Designation	Description
	On and off switch	Press and hold this key for more than one second to switch the meter on and off
	Menu key, enter key	Open the menu, apply changes to the settings.
	Calibration key, back	Press this key to enter the calibration menu. Press this key to go back one step and exit the menu.
	Arrow keys	Change parameters and select the desired function in the menu.

Power supply

To start using the meter, first insert 2 x 1.5 V AA batteries into the battery compartment on the back. Make sure the polarity is correct when inserting them.

The meter can also be supplied with power via the micro USB port. Thus, the coating thickness gauge can be operated via the USB port of a computer, for example.

On / off

To switch the meter on/off, press and hold the  key for more than 1 second. When the meter is not in use, it will automatically turn off within 3 minutes.

Measurement

To make a measurement, place the tip of the sensor on the surface to be measured. A measured value will be displayed directly. Make sure that you place the sensor on the sample vertically and quickly. The meter will detect automatically whether the base material is magnetic (Fe) or non-magnetic (nFe). During a measurement, the sensor must not be moved, otherwise incorrect measurements may occur. To carry out further measurements, place the sensor on the next measuring spot.

Important:

In order to obtain the best results, it is important to take measurements on a smooth and non-slip surface. Do not impact the sensor head too forcefully on the test object, otherwise you could damage the probe.



Continuous measurement

To perform a continuous measurement, place the sensor on the object to be measured. A measured value will be displayed. Now keep the sensor on the current measuring spot for three seconds. The continuous measurement starts automatically. To stop the continuous measurement, lift the sensor.

Important:

- Do not make continuous measurements on sensitive surfaces to create sequences, otherwise you could damage the surface.
- Do not carry out continuous measurements on rough surfaces as this could damage the sensor.

Menu

To open the menu, press the  key. The upper part of the display shows you the menu level currently open. The lower part of the display shows the currently selected function at the menu level. You can use the arrow keys to select between the functions and also change parameter values. Press the key  to open the corresponding function. Press the back key to go back one level.

Menu structure

Menu	Calibration (Calib)	Zero point calibration (Zero Calib)
		Factory calibration (Factory calib)
		1-point calibration (1 point calib)
		5-point calibration (5-point calib)
	Data groups (Data Group)	History
		Selected group (Select Grp XXX)
		Delete last value (Remove latest)
		Delete group (Erase group)
		Clear memory completely (Erase all)
	Limit value alarm (Limit Alarm)	Activate alarm (alarm on)
		Upper limit value (Up limit)
		Lower limit value (Low limit)
	Unit	µm, mil
	Device information (About)	Sensor type (Type)
		Serial number (Serial)
		Hardware version (Hardware)
		Software version (Software)

Calibration



To perform a calibration, the meter has various functions.

- Factory calibration
- Zero point calibration
- One-point calibration
- Five-point calibration

In order to obtain the most accurate measurement result over the entire measuring range, a five-point calibration is recommended. A calibration of magnetic (Fe) and non-magnetic substrates (nFe) is independent on each other. After each calibration, check the measured values again with the references. If the measured values are still not within the accuracies, repeat the calibration if necessary.



Zero point calibration

To perform a zero point calibration, press the  key. Now place the sensor on the corresponding zero

reference. When “Lift probe up” appears on the display, remove the sensor from the reference. You will then be asked if you want to accept the calibration. Press the  key to save the change. To discard the setting, press the  key.




One-point calibration

To perform a 1-point calibration, first go to the calibration menu and select “1-point calib”. Now place the sensor on the corresponding zero reference. When “Lift probe up” appears on the display, remove the sensor from the zero reference. Now place a foil reference on the zero reference. Now measure the reference by positioning the probe on the foil. When “Lift probe up” appears on the display, remove the sensor from the reference. The display will now show the measured value. With the arrow keys, you can now set this value to the calibration reference.

Confirm the set value with the  key. You are then asked whether you want to accept the calibration. Press the  key to save the change. To discard the setting, press the key.

Five-point calibration

To perform a five-point calibration, first go to the calibration menu and select “5-point calib”. Now place the sensor on the corresponding zero reference. When “Lift probe” appears on the display, remove the sensor from the zero reference. Now place a foil reference on the zero reference. Now measure the reference by positioning the probe on the film. When “Lift probe” appears on the display, remove the sensor from the reference. The display will now show the measured value. With the arrow keys, you can now set this value to the value of the calibration

reference. Confirm the set value with the  key. The second calibration point will follow now. Now use another calibration reference and repeat the calibration procedure until you reach the last calibration point. Then you are asked whether you want to accept the calibration. Press the  key to save the change. To discard the setting, press the  key.

Important: When instructed to lift the probe, lift the probe quickly and place it 30 cm away from the reference before changing the reference film.

Data group

With this coating thickness gauge, the measured values are saved automatically. Various data groups are available for this purpose. To make settings to the data memory, go to the menu under the item “Data Group”. Here, you can make the following settings:

Course (History)	Here you can view the last measured values belonging to the set measuring group.
Selected group (Select Grp XXX)	Here you set the current measuring group. If you make settings in the menu item "Data group", these always refer to the data group selected here. The measured values are also saved in the data group selected here.
Delete last value (Remove latest)	With this function, you can delete the last measured value.
Delete group (Erase group)	The entire measuring group is deleted here.
Erase memory completely (Erase all)	Here, you can clear the entire memory.

Limit value alarm

To set limit values, first go to the "limit alarm" menu. Under the item "Alarm on", you can activate the limit alarm function. You can set the limits as follows:

Upper limit value (Up limit)	Here, you can set the upper limit value.
Lower limit value (Low limit)	Here, you can set the lower limit value.

If the measured value is within the limit range, the LED indicator briefly flashes in green. If the measured value is outside the limit values, the LED indicator briefly flashes in red. The display shows whether the current measured value is too high or too low.

Convert unit

To change the unit, go to the menu. Under the item "Unit", you can choose between the units μm and millimetre.

Backlight

The backlight switches on and off automatically. It is not possible to adjust this.

Software

The data from the coating thickness gauge can also be exported. For this purpose, there is the possibility of Bluetooth transfer to an Android or iOS device. It is also possible to transfer the data to a PC via the micro USB interface.


PC transfer

First connect the meter to the PC using a micro USB cable.


Note: You can also find the software on the download page on <https://www.pce-instruments.com>.

Then open the "Coatingmaster" software. Under "Port" select "Silicon Labs CP210x USB to UART Bridge". If this is not available, the driver may be missing. You can find the driver in the program folder under the "driver" folder. If you have a 64-bit system, use the installation file "CP210xVCPInstaller_x64". If you have a 32-bit system, use the installation file "CP210xVCPInstaller_x86" to install the driver.


Now click on "Connect". The software now establishes a connection to the meter.

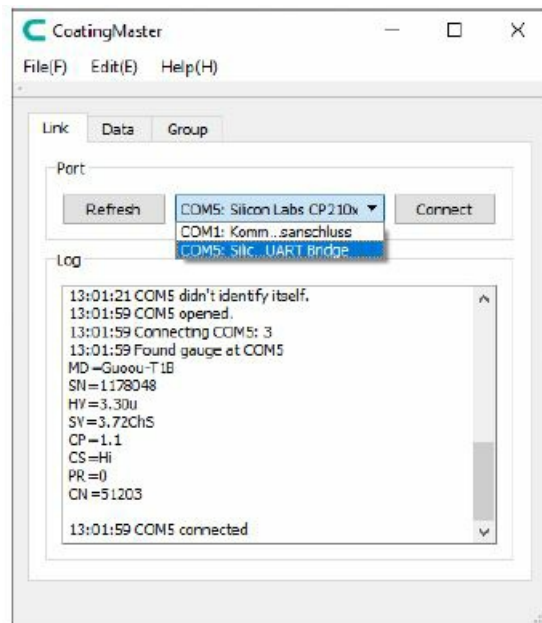

Under the tab “Data”, the displays on the meter are now shown mirrored in the programme. This means that the data are live-transferred to the PC. The software is synchronised with the meter via the “Sync” button.

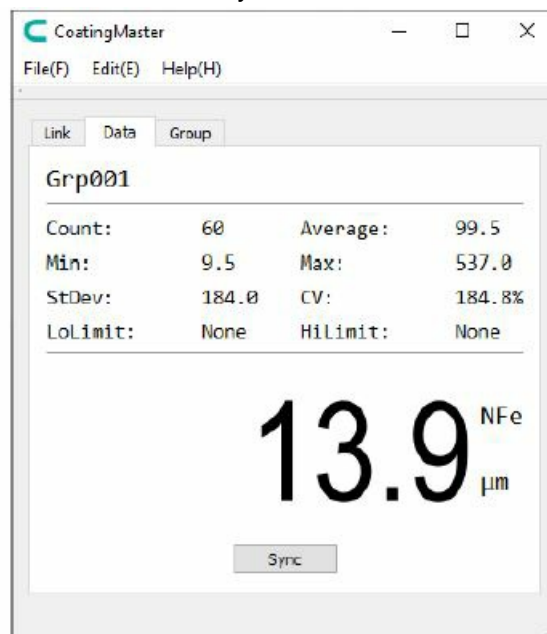

The “Group” tab displays all data saved on the meter. To export these data now, click on “Export”. The data can now be saved to the PC as a CSV file. Click the “Sync” button to synchronise the software with the test instrument

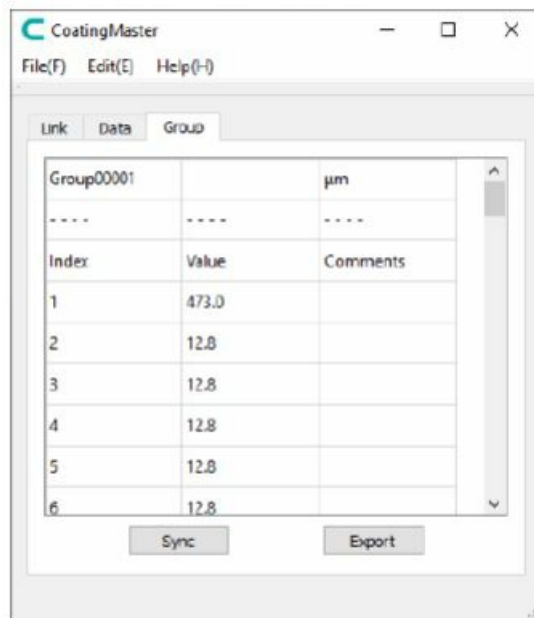

App transfer

To establish a connection with a mobile device, first download the “Coatingmaster” app. Then switch on the Bluetooth function in the measuring device. Now connect the coating thickness gauge via the app. To do this, select “Coating_XXXX” in the app.


NULL	-67dbm
73:BA:3A:AF:70:B2	
Coating_8048	-67dbm
7B:D8:2F:13:31:68	
NULL	-70dbm
2A:D6:6E:67:71:80	
NULL	-85dbm
E6:8B:8A:60:3E:9E	

Note:

- The Bluetooth connection is always active and cannot be disabled.
- You will then be taken directly to the measurement window where the current measured value is displayed. Via the “Master” function, the meter is synchronized with the mobile device.



- Under the “Group” tab, the measurement data stored in the meter is displayed. Via the “Export” function, you can save the data on the mobile device as CSV, PDF and also as a TXT file

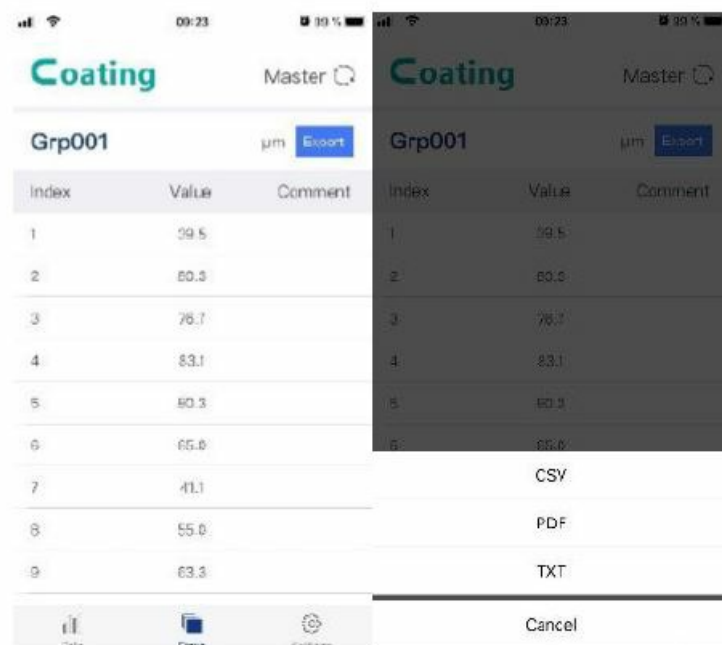

Under the tab “Settings”, you can make some settings to the app

Setting	Meaning
Measuring sounds	During a measurement, a sound can be heard.
Measuring vibration	When a measurement is made, the vibration alarm is activated.
Alarm sounds	When the limit is reached, a sound can be heard.
Alarm vibration	When the limit value is reached, the vibration alarm is activated.
Paired gauge	Click here for more information about this meter.
About CoatingMaster	Here you can find more information about the app.



Troubleshooting

Fault	Cause	Solution
Unit does not power on	Batteries discharged	Insert new batteries.
	Batteries are not inserted correctly	Check that the batteries are inserted correctly.
	Batteries inserted with reverse polarity	Check the polarity of the inserted batteries.
Measured value inaccurate or not stable	Base material has varied electromagnetic properties	The test instrument cannot perform measurements on base materials the electromagnetic properties of which are varied.
	Magnetic fields in the environment	Do not carry out measurements in the vicinity of magnetic fields, for example near magnets, microwaves or audio equipment.
	Edge effect	Measurements should be made in the middle of the sample. Do not perform any measurements at the edge.
	Incorrect placement of the probe	Always align the probe vertically and quickly with the surface. Do not perform a measurement by force. The probe must touch the test object and must not swing.

	The base material is too narrow or the measuring surface is too small or too round	Only carry out measurements on test objects with the properties indicated in the specifications. Otherwise, inaccuracies may occur.
	Surface is too rough	Carry out measurements on a surface that is as smooth as possible.
Measurements not possible	Different environmental conditions change measurement	Perform a zero calibration.
Inaccurate measured values		
Display is difficult to read	The meter is used under the wrong environmental conditions	The coating thickness gauge may only be located in a reas with the specified environmental conditions. Otherwise damage can occur.
Other technical problems	–	Please contact PCE Instruments' technical support.

Contact

If you have any questions, suggestions or technical problems, please do not hesitate to contact us. You will find the relevant contact information at the end of this user manual.

Disposal

For the disposal of batteries in the EU, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose. To comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company that disposes of the devices in line with law. For countries outside the EU, batteries, and devices should be disposed of by your local waste regulations. If you have any questions, please contact PCE Instruments.

PCE Instruments' contact information

Germany

PCE Deutschland GmbH Im Langel 26 D-59872 Meschede Deutschland

Tel.: +49 (0) 2903 976 99 0

Fax: +49 (0) 2903 976 99 29 info@pce-instruments.com

www.pce-instruments.com/deutsch

United Kingdom PCE Instruments UK Ltd Unit 11 Southpoint Business Park Ensign Way, Southampton Hampshire United Kingdom, SO31 4RF

Tel: +44 (0) 2380 98703 0

Fax: +44 (0) 2380 98703 9

info@pce-instruments.co.uk www.pce-instruments.com/english

The Netherlands PCE Brookhuis B.V. Institutenweg 15 7521 PH Enschede Nederland

Telefoon: +31 (0)53 737 01 92 info@pcebenelux.nl

www.pce-instruments.com/dutch

Spain

PCE Ibérica S.L. Calle Mayor, 53 02500 Tobarra (Albacete) España

Tel. : +34 967 543 548

Fax: +34 967 543 542

info@pce-iberica.es

Turkey

PCE Teknik Cihazları Ltd.Şti. Halkalı Merkez Mah. Pehlivan Sok. No.6/C 34303 Küçükçekmece – İstanbul Türkiye

Tel: 0212 471 11 47

Faks: 0212 705 53 93


info@pce-cihazlari.com.tr

www.pce-instruments.com/turkish

Last change: 9 February 2022

v1.0

Documents / Resources

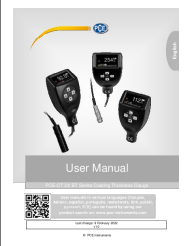	<p>PCE Instruments 2X BT Series Car Measuring Device [pdf] User Manual PCE-CT 23BT-ICA, PCE-CT 2X BT Series, 2X BT Series Car Measuring Device, 2X BT Series, Car Measuring Device, Measuring Device, Device</p>
---	--

References

- France.fr : Actualités, destinations et infos du tourisme en France
- iberica.es
- [Make an offer on the domain instruments.co.uk - Domains.co.uk](http://domains.co.uk)
- [Computer Instruments | Home](#)
- [Discover Italy: Official Tourism Website - Italia.it](http://Italia.it)
- [Industrial Measurement Products and Solutions | PCE Instruments](#)
- [PCE Deutschland GmbH Prüfgeräte vom Hersteller | PCE Instruments](#)
- [PCE Brookhuis B.V. | PCE Instruments](#)
- [PCE Americas Inc. : Test Instruments | PCE Instruments](#)
- [PCE Iberica S.L. Instrumentación | PCE Instruments](#)
- [PCE Instruments France | PCE Instruments](#)
- [PCE Italia s.r.l. / Strumenti di Misura | PCE Instruments](#)
- [PCE Teknik Cihazlar Paz. Tic. Ltd.Şti. | PCE Instruments](#)
- [PCE Americas Inc. : Test Instruments | PCE Instruments](#)
- [Industrial Measurement Products and Solutions | PCE Instruments](#)
- [Industrial Measurement Products and Solutions | PCE Instruments](#)
- [PCE Americas Inc. : Test Instruments | PCE Instruments](#)
- [User Manual](#)