

V5 Pytes V Series LFP Battery



V5 Pytes V Series LFP Battery User Manual

[Home](#) » [Pytes](#) » V5 Pytes V Series LFP Battery User Manual 

Contents

- 1 V5 Pytes V Series LFP Battery
- 2 Product Specifications
- 3 Product Usage Instructions
- 4 Frequently Asked Questions (FAQ)
- 5 Before Using
- 6 Symbols
- 7 Specifications
 - 7.1 Product standard configuration
- 8 Interface and protection functions
- 9 Operating Environment
- 10 Packaging, transportation, storage requirements
- 11 Installation and configuration
 - 11.1 Installation preparation
 - 11.2 Installation
 - 11.3 Procedure of starting/Shut down the whole system
- 12 Communication
- 13 Troubleshooting
- 14 Warranty Card
- 15 ABOUT COMPANY
- 16 Documents / Resources
 - 16.1 References
- 17 Related Posts

Pytes

V5 Pytes V Series LFP Battery



Product Specifications

Battery Model	Power Terminal	Chemistry	Nominal Voltage	Voltage Range	Nominal Capacity	Nominal Energy	Unit Dimension	Unit Weight	Recommended Charge/Discharge Current	Max Charge/Discharge Current	Round-Trip Efficiency	Communication Protocol	Cycle Life	Calendar Life	Operating Temperature	Certificates	Storage Temperature	Heating System
LFP	PHOENIX C-ESFT B25-70	LFP	51.2V	47.5V ~ 57.6V	100Ah	5.12kWh	L442mm*W530mm*H140mm(3.2U) L17.40in*W20.87in*H5.51in(3.2U)	44KG / 97lbs	75A	100A	95%	RS485, CAN, Wi-Fi (W/Optional Device)	6000 cycles	10 years	-10°C to 55°C	UN38.3, CE, UL1973, UL9540A, UL9540, IEC62619, CEC, SGIP	-20°C to 60°C	Heating System [4]

Product Usage Instructions

Installation and Configuration:

- **Installation Preparation:** Ensure you have read the manual carefully and have necessary tools.
- **Unpacking:** Carefully unpack the battery pack and accessories.
- **Installation:** Follow the step-by-step guide provided to install the battery pack correctly.
- **Starting/Shut Down:** Follow the specified procedure to start or shut down the system.

Operating Environment:

The battery pack operates within a temperature range of -10°C to 55°C. Ensure the operating environment meets these conditions for optimal performance.

Communication:

The battery pack features RS232, RS485, and CAN ports for communication purposes. Refer to the manual for

detailed communication protocols.

Troubleshooting:

If you encounter issues such as unable to start, charge, or discharge, refer to the troubleshooting section of the manual for solutions.

Frequently Asked Questions (FAQ)

- **What should I do if the battery pack fails to charge?**

Check the connections, ensure proper installation, and verify that the charging current is within the specified limits.

- **How can I extend the battery pack's lifespan?**

Follow recommended charging and discharging practices, maintain proper operating temperatures, and adhere to storage guidelines.

- **Can I connect multiple battery packs in parallel?**

Yes, you can connect multiple battery packs in parallel using the provided busbars for enhanced capacity.

Dear valued customer,

- Thank you for purchasing our Pytes V series LFP battery for home energy storage system. Our V series battery pack is designed to provide safe, high-performance energy storage solutions for a variety of applications. The compact and easy-to-install battery pack can be used as a basic building block in an energy storage system by connecting in parallel. It is widely used in residential, small commercial, and industrial energy storage systems, as well as telecommunication stations.
- We strongly recommend that you carefully read this manual before using the product. This manual provides all the necessary information on installation, usage of the V series battery pack. Please be advised that only qualified personnel(such as an electrician) should install and perform maintenance on the battery pack.
- It is important to keep in mind the boundaries of use, as described in this manual. The V series battery pack is not intended for use in medical or aviation-related applications, and should only be used for its intended purpose as described in this manual. Improper use of the battery pack will void the warranty of the product, and Pytes cannot be held responsible for any damage caused by improper or incorrect use of the product.
- For your safety and the safety of others, please follow all user safety instructions during the use of this product. This manual is intended for the installers and users of the V series battery pack.
- Please keep this manual in a safe location, as it is the original manual. For the latest version of all manuals, please visit our website at <http://www.pytesgroup.com>.
- Thank you again for choosing Pytes, and please do not hesitate to contact us if you have any questions or concerns about your V series battery pack.
- Best regards,
 - Pytes
 - Shanghai Pytes Energy CO., LTD.
 - Add: No.3492 Jinqian Road, Fengxian District, Shanghai, China.
 - **Website:** <http://www.pytesgroup.com>
 - **Email:** ess_support@pytesgroup.com

Before Using

Please read and follow these instructions carefully:

Warning

- This equipment should only be installed, operated by qualified personnel (electricians).
- The local safety regulations and relevant operating procedures must be followed during the installation, operation and maintenance of the equipment, otherwise the equipment may be damaged. The safety precautions mentioned in this manual are supplementary to the local safety regulations.









Caution

- Do not short-circuit the Li-ion battery.
 - Follow the positive (+) and negative (-) marks on the Li-ion battery and equipment and ensure correct use. Do not reverse the Li-ion battery.
 - Do not dismantle, crush, puncture, open, or shred the Li-ion battery.
 - Before removing or reconnecting with the running system, make sure to turn off the power and shut down the system to avoid the risk of electric shock.
 - Do not expose the Li-ion battery to heat or fire. In case of fire, use a dry powder fire extinguisher.
 - Do not dismantle any part of the system without contacting PYTES or PYTES authorized technical engineers. System failure caused by such actions will not be covered by the warranty.
 - Before operating the inverter, ensure that all batteries have been started up.
 - The following precautions should be taken when working on batteries:
 - Shut down the power and loads before connecting or disconnecting battery terminals.
 - Do not wear any metal objects such as watches and rings.
 - Use tools with insulated handles.
 - Do not lay tools or metal parts on top of batteries.
 - Wear personal protective equipment.
 - Make sure the battery is well grounded. Contact with any part of a poorly grounded or ungrounded battery can cause electric shock and burns by high short-circuit current.
- The battery should be charged within 12 hours when it's fully discharged or over-discharging protection mode is activated. Fail to follow this instruction will damage the battery and is not covered by warranty.

Danger

- Do not dispose of batteries in fire, as the batteries may explode.
- Keep the Li-ion battery away from water, dust, and contamination to avoid explosion or other harmful conditions that may even lead to personal injury.
- Do not open or mutilate batteries. Released electrolyte can be harmful to the skin and eyes and may be toxic.
- A battery can pose a risk of electric shock and burns due to high short-circuit current.
- A malfunctioning battery can reach temperatures that exceed the safe contact level.

Symbols

	Read the instruction manual before starting installation and operation.
	Caution, do not dispose of batteries in a fire, the battery may explode.
	caution, a battery can present a risk of electric shock and burns by high short-circuit current. do not short-circuit the Li-ion battery.
	Caution, do not dispose the product with household wastes.
	Danger, keep the Li-ion battery away from water, dust and contamination, otherwise it may cause explosion or lead to personal injury.
	Danger, do not place near open flame or flammable materials.
	Danger, do not place at children or pets touchable areas.
	Recyclable.

Specifications

Table 1-1 Battery Pack Specifications





Battery Model	V5°	V5°α
Power Terminal	PHOENIX M6 Bolt	Amphenol SurLok Plus 8.0mm
Chemistry	LFP	
Nominal Voltage	51.2V	
Voltage Range	47.5V~57.6V	
Nominal Capacity	100Ah	
Nominal Energy	5.12kWh	
Unit Dimension	L442mm*W530mm*H140mm(3.2U) L17.40in*W20.87in*H5.51in(3.2U)	
Unit Weight	44KG / 97lbs	
Recommended Charge/ Discharge Current [1]	75A	
Max Charge/ Discharge Current [2]	100A	
Peak Charge/ Discharge Current	101A~120A (3min); 121A~180A (15sec)	
Round-Trip Efficiency	≥95%	
Communication Protocol	RS485, CAN, WiFi (W/ Optional Device)	
Cycle Life [3]	≥6000cycles	
Calendar Life	≥10years	
Operating Temperature	Charge: 0°C~45°C(32°F~113°F) Discharge: -10°C~50°C(14°F~122°F)	
Certificates	UN38.3, CE, UL1973, UL9540A, UL9540, IEC62619, CEC, SGIP Within 1month: -20°C~50°C(-4°F~122°F)	
Storage Temperature	1-3months: -10°C~40°C(14°F~104°F) 3-12months: > 0°C~30°C(32°F~86°F)	
Heating System [4]	Temperature Rise 10°C(18°F)/Hour, Operation Temperature -18°C~10°C(-0.4°F~50°F)	

1. The recommended and Max continuous charge and discharge current is for a battery cell temperature within

- 10°C~40°C(50°F~104°F)to consider. It will result in a derating on current if out of the temperature range.
2. Test conditions 0.2C Charging/Discharging, @25°C(77°F), 80% DOD.
 3. Optional Device. Specified on Battery package whether integrated. Working with some inverters, heating system may consume energy from battery when there's voltage difference among system modules, between 0°C/32°F to 5°C/41°F. Follow 5.3.3 of this manual for multiple batteries power cable connection to minimize influence of the circular current, thus decrease battery energy loss.

Product standard configuration

V5° Version

Items	Quantity	Specifications	Pictures
V5° Battery	1pc	LFP battery pack Voltage: 51.2V Capacity: 100Ah Energy:5.12kWh Power Terminal: PHOENIX C-ES-FTB 25-70	
Flexible Busbar	2pc	Busbar for parallel connection between batteries: Length: 190mm/Ampacity: 300A	
Cascade Communication Cable	1pc	Function: cascade communication between batteries Length: 350mm Communication protocols: CAN / RS485	
Grounding Cable	1pc	10AWG/1000mm/SC10-6	

V5°α Version


Items	Quantity	Specifications	Pictures
V5 α Battery	1pc	LFP battery pack Voltage: 51.2V Capacity: 100Ah Energy:5.12kWh Power Terminal: Amphenol Surlok 8.0mm Socket	
Power Cable	1set	Cable for parallel connection between batteries; UL10269- 0AWG / 180mm / Amphenol Surlok 8.0mm; Ampacity: 200A	
Cascade communication Cable	1pc	Function: cascade communication between batteries Length: 350mm Communication protocols: CAN / RS485	
Grounding Cable	1pc	10AWG/1000mm/SC10-6	

BMS Functions



Protection and Alarm	Management and Monitor
Charge / Discharge End Cut-off	Cells Balance
Charge over Voltage Protection	Intelligent Charge
Discharge under Voltage Protection	Charge/Discharge Current Limitation
Charge / Discharge over Current Protection	Remaining Power Calculation
High / Low Temperature Warning Over / Under Temperature Protection	Administrator Monitoring
Short Circuit Protection	Log Record
Power Cable Reverse Protection	

Interface and protection functions

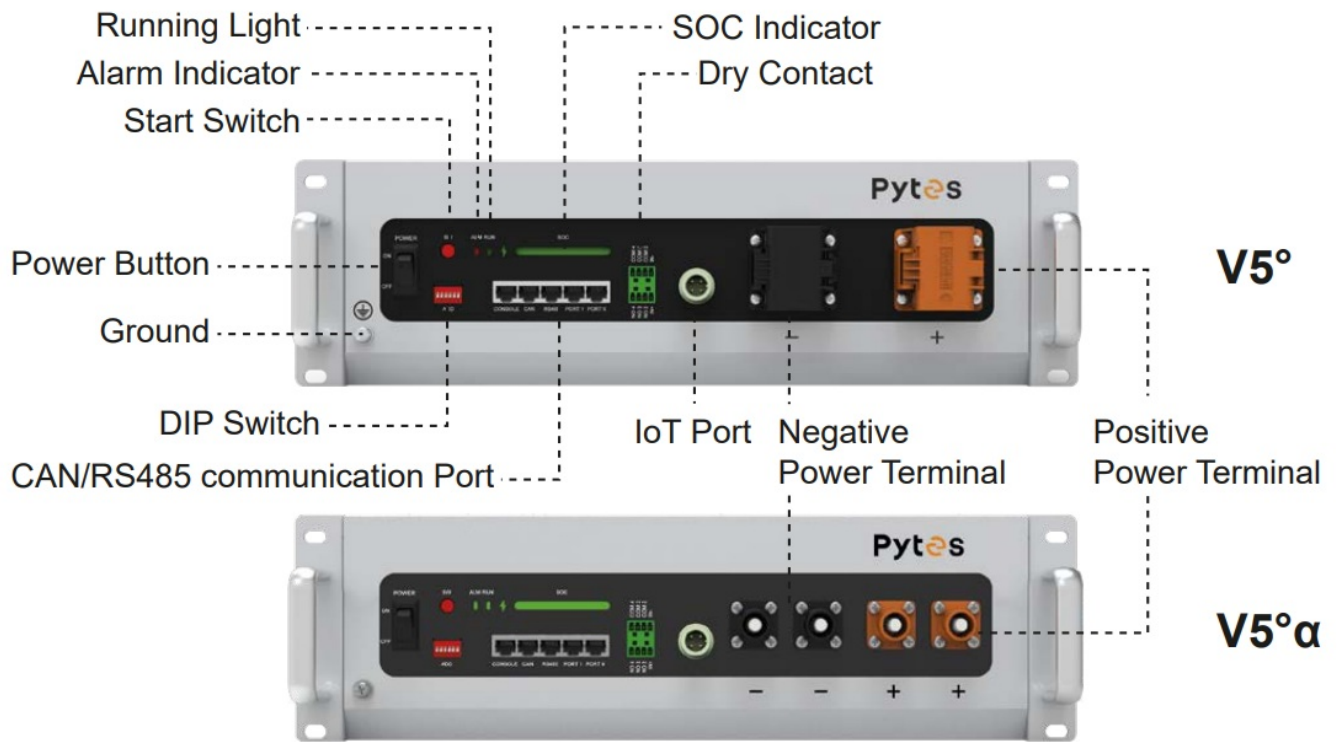Battery front panel schematic



Components

No.	Name	Label	Functions description
1	Ground		Connection for ground cable
2	Power button	POWER	When switched to "ON", the system can be activated by the "SW" key or external power supply; when switched to "OFF", the system is off.
3	Soft start switch	SW	When the on/off button is "ON", press and hold this button for 1 second to enter the startup or sleep mode.
4	DIP Switch	ADD	Set according to inverter brand, see checking list
5	Running Light	RUN	Green light. The light flashes when Standby. The light is constantly on when charging. The light blinks when discharging.
	Alarm Indicator	ALM	Red light. The light flashes when Alarming. The light is continuously on when protected.
	SOC indicator	SOC	Light bar shows current remaining capacity.
6	External CAN communication port	CAN	RJ45 port, follows CAN protocol, for outputting battery information.
7	External RS-485 communication port	RS485	RJ45 port, follows RS485 protocol, for outputting battery information.
8	Cascade communication port	Prot 1/0	RJ45 ports, connect Port 1 of the previous battery to Port 0 of the next one. The Port 0 of the master battery is vacant.
9	Negative Power Terminal	"-"	Negative input and output interface
10	Positive Power Terminal	"+"	Positive input and output interface
11	Dry Contact	IN1-/IN1+ COM2/NO2 COM3/NO3 COM4/NO4	1 way input and 3 ways output dry contact signal.
12	LoT port		Real-time monitoring of battery status and remote upgrade

Operating Environment

- Battery operating environment requirements:
 - Operating Temperature:** -10°C~50°C(14°F~122°F)
 - Relative Humidity:** 20%-80%, no condensation
 - Altitude:** 4000m
- Site environment requirements: Away from heat source, avoid direct sunlight, no corrosive gases, no explosive gases, no insulating gases, no insulating conductive dust.
- Install in cabinet which shall not be opened without dedicated tools
- Install in a restricted access area.

Packaging, transportation, storage requirements

Transportation

- Always check all applicable local, national, and international regulations before transporting Li-ion Batteries.

- During transportation, protect the battery from severe vibration, shock or squeezing, and from exposure to sunlight and rain.
- During the loading and unloading process, the battery should be handled gently to prevent it from falling, rolling and being subjected to heavy pressure.

Storage

- Relative humidity: 20%-80%, no condensation
- Altitude: <4000m
- Store the battery in a cool, dry place, away from heat sources and no direct sunlight. Keep away from conductive substances such as conductive dust
- For long-term storage (>6 months), charge the LFP battery to more than 90% of its rated capacity. The battery needs to be charged to more than 90% of its rated capacity every 6 months.
- Keep the SOC of the battery at 40%-60% during storage. The Self-discharge of the LFP battery pack is 1-2% per month. If there is no power left when checking the LFP battery, do not charge or use it without permission, contact your installer for the next step.
- Follow the storage instructions in this section and refer to Table 1-1 Battery Pack Specifications for storage temperature to optimize the battery lifespan during storage. Any failure or damage to the battery caused by failure of following these instructions is not covered by the warranty.

Disposal

Disposal of the batteries should be in accordance with local laws and regulations and should be carried out by an expert with specialized knowledge and experience in electrical and environmental safety, at designated waste disposal facilities using safe and appropriate method.

Installation and configuration

Installation preparation

Safety Requirements

- Only those who have received training in the power system and possess a comprehensive understanding of the same are allowed to install the equipment. It is imperative to follow the safety regulations defined by local authorities and adhere to the safety requirements listed below during the installation process.
- Before installing or removing the battery, make sure that the system is disconnected from any power source and that the battery system is turned off. Distribution cabling needs to be handled carefully with essential protective measures to avoid any safety hazards during the maintenance and operation.

Checking the operation environment

The operation environment must comply with the requirements outlined in Chapter 3, "Operation Environment." If not, necessary adjustments must be made and subsequently reevaluated.

Tools

The tools that may be used are shown in Table 5-1.

Table 5-1 Tools

Tools	
Screwdriver (Slotted, Phillips)	Multimeter
Wrench	Clip-on ammeter
Diagonal pliers	Insulating tape
Thermometer	Pliers
Anti-static wrist ring	Clip Pliers
Tapes	Strippers

Technical preparation

• Electrical interface settings:

- If the battery is directly connected to the energy storage inverter or DC charger, please verify:
- if the operating voltage, current, and power of the equipment align with the battery parameters listed in “Table 1-1 Battery Pack Specifications”.

• Safety inspection:

Fire-fighting equipment such as portable dry powder fire extinguishers in proximity to the battery is mandatory. Dangerous substances such as flammable or explosive materials must not be stored near the battery.

Unpacking

- When the battery arrives at the installation site, it must be unloaded and stored properly and prevented from the direct sunshine and rain. Before installation, check if there is any component missing according to 1.1 product standard configuration and check whether the box appearance is intact;
- Carefully handling the unpacking to preserve the insulation coating on the casing’s surface.
- Please contact PYTES if there is any damage or missing of products and / or components.

Installation

Install the battery

The V series can be installed either vertically or horizontally. The instructions in this chapter are only for horizontal installation, while vertical installation follows a similar process. All equipment must be placed steadily after installation.

Connect Ground cable

- Loosen the screw on the grounding position of the front panel of the battery and attach the lug of the ground cable over the screw. Use a screwdriver to tighten the screw and connect the other end of the ground cable to a reliable grounding point.
- External Bi-polar over current protection devices and Bi-polar external isolator shall be equipped. The diameter of the ground cable must be $\geq 6\text{mm}^2$ / 12kcmil. External Bi-polar over current protection devices and Bi-polar external isolator shall be equipped.
- The minimum diameter must be $\geq 6\text{mm}^2$.

Note: The grounding resistance should be less than 0.1Ω .

Connecting the power cable

- Before connecting the power cable, connect and disconnect the cable to identify the positive and negative terminals, then make a mark respectively. After the cable is connected, measure whether there is short-circuit or reverse connection.
- Select the correct cable based on your loads by referencing to the table below

AWG	Area		Standard Current	Max. Current
	(kcmil)	(mm ²)	A	A
4/0	211.48	107.22	423.2	482.6
3/0	167.67	85.01	335.5	382.6
2/0	133	67.43	266.2	303.6
1/0	105.5	53.49	211.1	240.7
1	83.65	42.41	167.4	190.9
2	66.31	33.62	132.7	161.3
3	52.6	26.67	105.2	120.0
4	41.7	21.15	83.5	95.2

- Please select suitable power cable according to maximum current that may pass through the circuit. If you need advice, please contact your installer for help.
- Connecting the power cables:

1. Power cable connection instructions of Single-Rack:

- **Single battery:**

Connect the positive and negative terminals of the battery to the battery port of the energy storage inverter with power cables.

- **Multiple batteries (Max number 16):**

- The connection of multiple batteries is only permitted in parallel. Firstly, connect the positive and negative terminals of the batteries in parallel with the supplied flexible busbar (for up to three batteries, no additional accessories are required). Next connect the positive and negative terminals of the battery port of energy storage inverter to one of the batteries with power cables. But due to limitations in battery communication and power cables, a maximum of 16 batteries can be connected in parallel, and a busbar or junction box should be used for convergence.
- Regardless of the number of batteries in parallel, the standard charging and discharging current for a single battery remains the same, please refer to “Table 1-1”. The capacity can be increased by connecting the batteries in parallel, but due to the limitations of BMS and power cable, a maximum of 16 batteries can be connected in parallel and a busbar or junction box should be used for confluence.

Warning: Connecting batteries in series is forbidden, as it can create a high voltage that

poses a hazardous shock risk.



Figure 5-1 Schematic diagram of power cable connection

Note: When multiple batteries are connected in parallel, in order to minimize the influence of the circular current, each battery can be connected to a busbar with power cable. The length, thickness, material, and resistance of the cables connected in parallel must be the same.

2. Power cable connection instructions of Multi-Rack:

- Connect the overall power cables of each rack to the convergence bus bar (or junction box) in parallel, then connect them to the energy storage inverter.
- It is recommended to add a circuit breaker for protection between battery system and inverter.
- Rated voltage $U \geq 60V$ DC; Rated current to consider maximum DC current on inverter side.

Connecting communication cables

1. Communication cable connection instructions of Single-Rack:

• Single battery:

Select the corresponding port based on the communication protocol between the battery and energy storage inverter (RS485/CAN), and then insert the communication cable into the port.

• Multiple batteries (Max number 16):

The communication between the master and the slaves is carried out in a cascade mode, wherein one battery acts as the master while the others are slaves. Please refer to the picture below for the cascade connection. Users need to insert the communication cables into the relevant link ports between the batteries and keep in mind that:

1. Keep the master Port 0 free;
2. Keep the end slave Port 1 free;


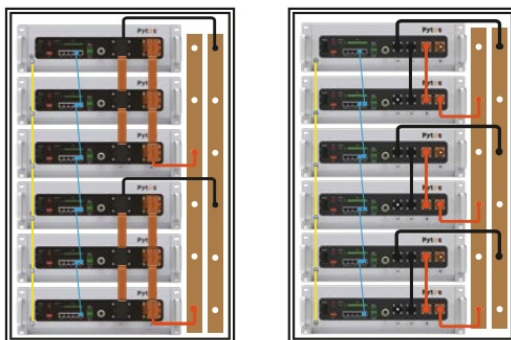


Figure 5-2 Schematic diagram of communication cable connection

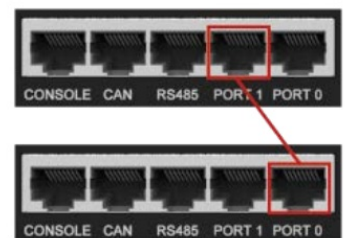

2. Communication cable connection instructions of Multi-Rack:

Connect the master battery of each rack to a hub with a standard communication cable. A Hub is required for to build up the communication between inverter and battery (more than 16 batteries or more than one rack)

WiFi Connection

The battery provides a WiFi port for data collection and upload to the monitoring cloud platform, which supports remote viewing of battery data and enables remote firmware upgrades. This product can be purchased separately from PYTES authorized resellers/distributors/installers.

1. Diagram




2. Connecting steps:

- **Step 1:** Insert the WiFi stick into the LoT Port on the battery panel.
- **Step 2:** Create an account on the cloud platform and bind the WiFi stick.
- **Step 3:** Pair the WiFi stick with a wireless network (see WiFi stick user manual for details).

Procedure of starting/Shut down the whole system

Make sure that all batteries have been powered on prior to running the inverter. This is to avoid battery shock by the in-rush current of the large capacitors of the inverter.

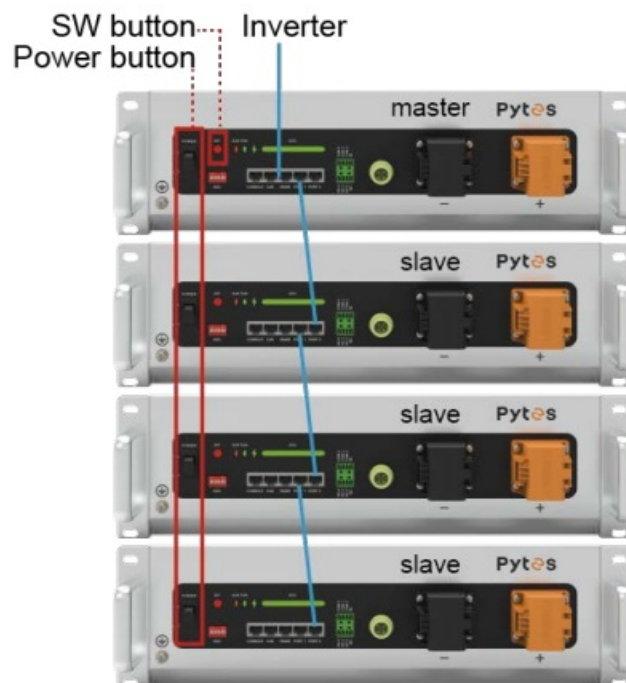

Power on Procedure

- Step 1: Turn on all power buttons.
- Step 2: Press only the master battery SW button for one second.

Please ensure that all batteries have been activated before turning on the inverter. This will help prevent battery shock caused by the inrush current of the large capacitors in the inverter.

Shut down Procedure

- **Step 1:** Press and hold the SW button of the master battery for three seconds.
- **Step 2:** Turn off all power buttons.

Please wait for all battery lights to go out before turning off the power buttons.

Note: Batteries must be placed in a locked cabinet or room with a 25mm/1inch horizontal gap for ventilation

between them. The battery cabinet needs to support the total weight of the batteries and necessary accessories.

Communication

The battery features RS-232C, RS-485, and CAN communication ports. The battery status can be obtained.

- **CAN**

- The CAN communication terminal (RJ45 port) follows CAN protocol, to output batteries information.
RS485
- The RS485 communication terminal (RJ45 port) follows RS485 protocol, to output batteries information.
RS232
- The RS232 communication terminal (RJ45 port) follows RS232 protocol, to upgrade the software and to communicate with your PC.

- **Link Port 0,1**

The Port 0 and Port 1 communication terminals (RJ45 ports) follow the CAN/RS485 protocol for cascade communication between multiple parallel batteries.

- **LoT Port**

4 Pin Circular Connector for connecting with WiFi sticks


RS232 port

Default baud rate of RS-232C ports: 115200bps.


RS485 port and CAN port.

Default baud rate of RS-485 port: 9600bps

Default baud rate of CAN port: 500K

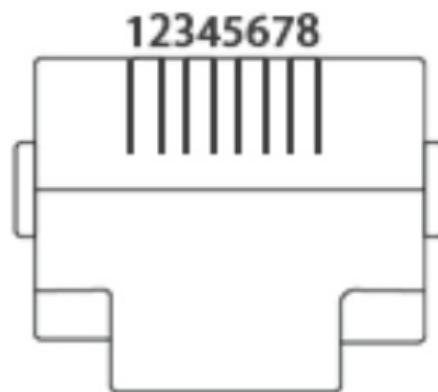

Pin number	RS-232C port
1	
2	
3	RXD
4	GND
5	
6	TXD
7	
8	

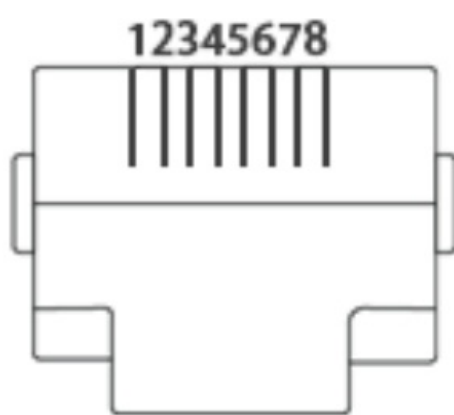

Pin number	Serial	CAN
1	RS485B	
2	RS485A	
3	GND	
4		CANH
5		CANL
6	GND	
7	RS485A	
8	RS485B	

Troubleshooting

Please refer to the troubleshooting methods mentioned below. Please read the “Table 7-1 LED indication” of this manual before troubleshooting to avoid false operations.

For example, the blinking or constant red light of the ALM alarm on the front panel does not necessarily indicate a faulty battery. In most cases, the “alarm” indication signifies normal operation and requires no troubleshooting. Furthermore, if the battery indicates “protection,” it will resume normal operation automatically once the “protection” status is released.

Battery status	Protection / Alarm / Normal	ALM	RUN	Capacity LED	Descriptions
		●	●		
Shut down		OFF	OFF	OFF	All off
Power-on	Normal	ON	ON	ON	All lights stay on simultaneously for one second
Standby	Normal	OFF	Blink 1	OFF	standby
	Alarm	Blink 3	OFF	OFF	Low voltage
Charging	Normal	OFF	Light	Base on capacity	
	Alarm	Blink 3	Light		
	Protection	Light	OFF	OFF	Protection triggered, charging stops
Discharge	Normal	OFF	Blink 3	Base on capacity	
	Alarm	Blink 3	Blink 3		
	Protection	Light	OFF	OFF	Protection triggered, discharging stops

Unable to start

Problem	Troubleshooting Steps	Solution
Press the POWER button to the “ON” state and press the SW button for 1 second, but the LED indicator doesn’t respond or all the LEDs are off after this 1s duration	<ol style="list-style-type: none"> 1. Confirm that the POWER button remains in the “ON” state; 2. Charge the battery correctly and observe if the battery can be charged properly. 	<ol style="list-style-type: none"> 1. If the battery enters into charging mode, it should return to its normal state after completing the charging process. 2. If not, please contact the local reseller or Pytes.

Unable to charge

Problem	Troubleshooting Steps	Solution
The not fully charged battery cannot be charged properly.	1. Confirm that the battery is turned on;	If the battery still
	2. Inspect the power cable to make sure that it is correctly plugged in and that the charging circuit is functioning properly;	does not charge properly after following the steps, please contact the local reseller or Pytes.
	3. Check the battery indicator LED to determine if the battery is under “Protection” state. If so, unplug the battery power cable, find the cause of the protection, and correct the issue before restarting the battery.	
	4. Ensure that the charging voltage meets the battery’s charging requirements. If not, adjust the power supply voltage to the	
	proper range.	

Unable to discharge

Problem	Troubleshooting Steps	Solution
	1. Confirm that the battery is turned on;	If the battery still
	2. Check the power cables to ensure that they are properly	does not discharge
The battery	connected.	properly after
cannot be	3. Unplug the battery power cable and measure the battery power	following the above
discharged	output voltage. If the battery voltage is too low, charge it immedi-	steps, please
properly.	ately.	contact the local
	4 Check the battery indicator LED to see if the battery is under	reseller or Pytes.
	“Protection” state. If so, unplug the battery power cables, find the	
	cause of the protection, resolve the issue, and thereafter restart	
	the battery.	

ALM indicator(alarm) constantly on

When the ALM indicator is constantly red and the other indicators are off, the battery is in the “Protection” state. Once the condition that triggered protection is released, the battery will automatically return to normal operation. However, there are a few issues requiring immediate measures.

Problem	Troubleshooting Steps	Solution
	1.Check the power cables to ensure that	If the battery protection
The ALM indicator remains in a constant state of red, while all other indicators remain inactive.	they are properly connected. 2.Check whether the charging voltage, charging/discharging current, battery/cell voltage and temperature meet the relevant protection conditions, and release the “protection” state to ensure that the	state cannot be released, or if the ALM indicator is constantly on when the battery is properly charged after it is restarted, please contact your local reseller or
	voltage, current and temperature are within	Pytes.
	the normal working range.	


Warranty Card

Customer Information			
Contact Name			
Phone Number		Email	
Address			
Product Information			
Battery Model		Inverter Brand/Model	
Battery Quantity		Inverter Quantity	
Purchase Date		Inverter Using Time	
Serial Number		on/off Grid	
Installer Information			
Installer Name		Installation Date	
Problem Description			
Photos of Battery Wiring			
Photos of Inverter Wiring and Panels			

ABOUT COMPANY

- Shanghai PYTES Energy Co., LTD
- **Add No.3492** Jinqian Road, Fengxian District, Shanghai, China
- **Tel:** +86 21 5747 5852
- **Email:** ess_support@pytesgroup.com

Documents / Resources

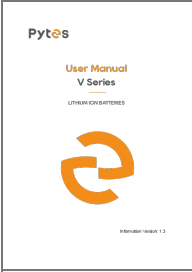 The image shows the cover of a user manual for the Pytes V Series LFP Battery. It features the Pytes logo at the top, followed by the text 'User Manual V Series LITHIUM ION BATTERIES'. Below this is a large orange circular logo with a stylized 'P' inside. At the bottom, it says 'Information Version 1.2'.	<p>Pytes V5 Pytes V Series LFP Battery [pdf] User Manual</p> <p>V5 Pytes V Series LFP Battery, V5, Pytes V Series LFP Battery, Series LFP Battery, LFP Battery, Battery</p>
--	---

References

- [Pytes](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.