

**Contents** [[hide](#)][1 SENECA Z-PASS2-RT IoT Gateway](#)[2 Product Usage Instructions](#)[3 CONTACT INFORMATION](#)[4 MODULE LAYOUT](#)[5 SIGNALS VIA LED ON FRONT PANEL](#)[6 TECHNICAL SPECIFICATIONS](#)[7 INSTALLATION REGULATIONS](#)[8 ModBUS CONNECTION RULES](#)[9 IDC10 CONNECTOR](#)[10 ELECTRICAL CONNECTIONS ON: Switch the module off before connecting inputs and outputs. To meet the electromagnetic immunity requirements:](#)[11 SETTING THE DIP-SWITCHES](#)[12 FAQs](#)[13 Documents / Resources](#)[13.1 References](#)**SENECA Z-PASS2-RT IoT Gateway**



Specifications

- Weight: 250 g
- Enclosure: PA6, Black

Product Usage Instructions

Installation

1. Read the full content of the manual before any operation.
2. Only qualified electricians should handle the module.
3. For specific documentation, use the QR code provided on page 1.

Module Layout

The module layout includes various components such as a USB port, a mobile antenna, a SIM card slot, a LAN port, a WAN port, a GPS antenna, and LED indicators on the front panel.

LED Indicators:

The LED indicators on the front panel have different meanings based on their status. For example, green indicates the device is powered correctly, flashing green means the device is booting, and so on.



Electrostatic Discharge:

The product is sensitive to electrostatic discharges. Take appropriate measures to prevent any damage during handling or operation.




Waste Disposal:

Dispose of electrical and electronic waste properly by surrendering the product to an authorized collection center for recycling.

PRELIMINARY WARNINGS

The word WARNING, preceded by the symbol  indicates conditions or actions that put the user’s safety at risk. The word ATTENTION, preceded by the symbol  indicates conditions or actions that might damage the instrument or the connected equipment.

The warranty shall become null and void in the event of improper use or tampering with the module or devices supplied by the manufacturer as necessary for its correct operation, and if the instructions contained in this manual are not followed.

	WARNING: The full content of this manual must be read before any operation. The module must only be used by qualified electricians. Specific documentation is available using the QR-CODE shown on page 1.
	The module must be repaired and damaged parts replaced by the Manufacturer. The product is sensitive to electrostatic discharges. Take appropriate measures during any operation.
	Electrical and electronic waste disposal (applicable in the European Union and other countries with recycling). The symbol on the product or its packaging shows the product must be surrendered to a collection centre authorized to recycle electrical and electronic waste.



DOCUMENTATION
Z- PASS2-RT



DOCUMENTATION
Z- PASS2-RT-S




CONTACT INFORMATION

Technical support	support@seneca.it	Product information	sales@seneca.it
-------------------	--	---------------------	--

This document is the property of SENECA srl. Copies and reproductions are prohibited unless authorised. The content of this document corresponds to the described products and technologies.



Stated data may be modified or supplemented for technical and/or sales purposes.

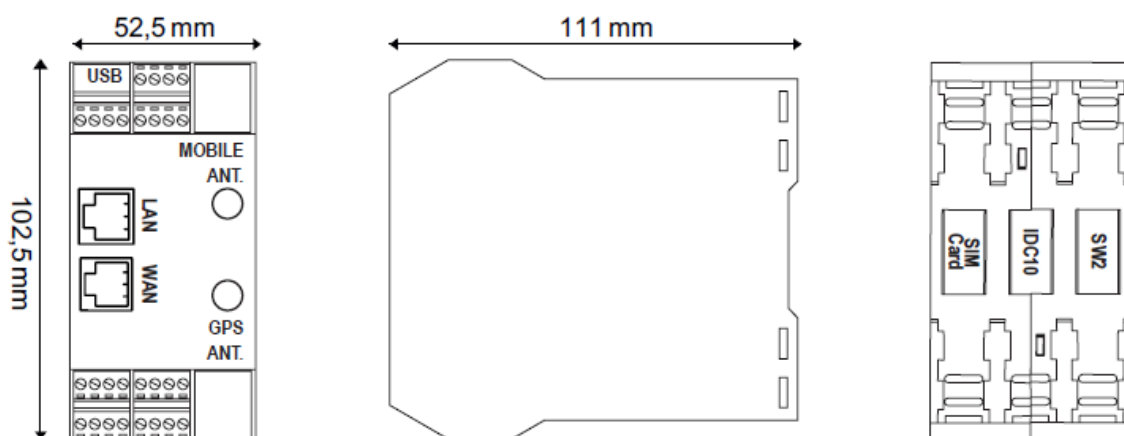MODULE LAYOUT






SIGNALS VIA LED ON FRONT PANEL

LED	STATUS	LED meaning
PWR	On	Device powered correctly
	Off	Device not powered
RUN	On	Locking system
	Flashing	The module is working correctly
	Off	System Locked / Booting
DIDO1.. DIDO6	On	Input or output activated
	Off	Input or output deactivated
	On	VPN connection active

VPN	Flashing	VPN connection problems	
SRV	On	VPN BOX “SERVICE” connection is working correctly	
	Flashing	VPN BOX “SERVICE” connection in error	
	Off	VPN BOX “SERVICE” connection disabled	
RX1 / RX2 / RX4	On	Incorrect RS485/ RS232 connection	
	Flashing	Reception of data packet completed on RS-485/RS-232	
TX1 / TX2 / TX4	Flashing	Transmission of data packet completed on RS-485/RS-232	
ETH ACT (Green)	Flashing	Packet transit on the Ethernet port	
ETH LNK (Yellow)	On	Ethernet port connected	
	On	Signal level reporting	
	Flashing (Only )		The modem is not correctly adjusted.
NET	On	Modem adjusted to 4G network	
	Flashing	Modem adjusted to 2G or 3 G network	
	Off	Modem off or not adjusted	
DATA	On	Data connection enabled and correctly adjusted	
	Flashing	Data connection is enabled but in error	
	Off	Data connection disabled	

GPS	On	GPS signal present
	Off	GPS signal absent
BAT	On	Battery connected and working properly
See the user manual	Flashing	Low or faulty battery
	Off	Battery not in use (UPS not active)
PWR (MODEM)	On	Device powered correctly
	Off	Device not powered

TECHNICAL SPECIFICATIONS

CERTIFICATIONS	  
POWER SUPPLY	11 ÷ 40Vdc; 50 ÷ 60Hz; Max absorption: 11 W
ENVIRONMENTAL CONDITIONS	Operating temperature: from -25°C to +65°C; Humidity: 10% ÷ 90 % noncondensing. Storage temperature: from -30°C to +80°C; Degree of protection: IP20
ASSEMBLY	35mm DIN rail IEC EN60715
CONNECTIONS	Removable 3.5 mm pitch terminal block, 1.5 mm ² max cable section
PROCESSOR	ARM 32-bit
MEMORY	512MB RAM and ≥ 4GB Flash; PUSH-PUSH type slot for micro SD
FEATURES	Integrated Web Server and update via Web Server

<p>COMMUNICATION PORTS</p>	<p>COM1: RS232 / RS485 (on terminals), COM2: RS485 (on terminals or IDC10)</p> <p>COM4: RS485 (on terminals); maximum Baud rate 115kbps; minimum 200 bps; USB HOST type A ETH1 and ETH2 Fast Ethernet RJ 45 10/100Mbps, Maximum connection distance: 100 m</p> <p>CAN on terminals or IDC10 (May not be present on all models)</p>				
<p>ISOLATION</p>					<div data-bbox="810 1086 1121 1344"> <p>The diagram shows a central control unit with various ports and internal components. On the left, there are three input lines for DI/DO, Analog Input, and USB. On the right, there are two output lines for ETH LAN and ETH WAN. At the top, there are three output lines for RS485/RS232, RS485, and CAN. Inside the unit, there are labels for Input, Output, Analog Input, USB, Power Supply, and three Comm. (Communication) blocks. The unit is represented by a rounded rectangle with a diagonal line from the top-left to the bottom-right.</p> </div> <div data-bbox="1241 1243 1460 1344"> <p>— 500 V~</p> <p>— 1500 V~</p> </div>

DIGITAL INPUTS OUTPUTS	<p>Number of inputs: 6 max.; Number of outputs: 6 max.; Absorbed current: 3mA @ 12Vdc, 5mA @ 24Vdc.</p> <p>Voltage OFF<4V, ON>8V MAX. current (Vout+) 50mA</p> <p>Voltage (Vext+): 10 ÷ 28Vdc. MAX. Current: 200 mA per channel. Protect the outputs using a 1.5A fuse as shown in the wiring diagrams</p>
ANALOGUE INPUTS	Voltage 0 ÷ 30Vdc, impedance 200kΩ Current 0 ÷ 25mA, impedance ~ 50Ω
AUXILIARY VOLTAGE OUTPUT	V AUX: 12Vdc; Max. 50 mA
4G MODEM FREQUENCIES	<p>Global coverage Model 4G/LTE</p> <p>LTE-FDD: B1/B2/B3/B4/B5/B7/B8/B12/B13/B18/ B19/B20/B25/B26/B28</p> <p>LTE-TDD: B38/B39/B40/ B41; WCDMA: B1/B2/B4/B5/B6/B8/B19/ GSM: B2/B3/B5/B</p>
OUTPUT POWER	GSM900: 32.75dBm, DCS1800: 29.07dBm, WCDMA: 23.13dBm, 23.27 dBm, LTE: 23.1dBm, 23.2dBm, 21.7dBm, 23.19dBm, 23.14dBm, 23.7dBm, 23.39dBm.
GNSS	GPS / GLONASS / BeiDou (compass) / Galileo / QZSS; Accuracy (Open Sky): 2.5m (CEP50).
SIM CARD SLOT	Push-push type for mini SIM card 15 X 25 mm (on instrument case back)

INSTALLATION REGULATIONS

The module has been designed for vertical installation on a DIN 46277 rail. For optimal operation and long life, adequate ventilation must be provided. Avoid positioning ducting or other objects that obstruct the ventilation slots. Avoid mounting modules over heat-generating equipment. Installation in the bottom part of the electrical panel is recommended.

ATTENTION: These are open-type devices intended for installation in a final casing/panel that offers mechanical protection and protection against the spread of fire.

ModBUS CONNECTION RULES

1. Install the modules in the DIN rail (120 max)
2. Connect the remote modules using cables of an appropriate length. The following table shows cable length data:
 - Bus length: maximum length of the Modbus network according to the Baud Rate. This is the length of the cables that connect the two farthest modules (see Diagram 1).
 - Derivation length: maximum length of a derivation 2 is m.


For maximum performance, it is recommended to use special shielded cables, designed specifically for data communication.

WARNING

This is a Class A product. In a residential environment, this equipment may cause radio interference. In this case, the user may have to take adequate countermeasures.

IDC10 CONNECTOR

Power supply and Modbus interface are available also using the Seneca DIN rail bus, via the IDC10 rear connector, or the Z-PC-DINAL2-52,5 accessory.

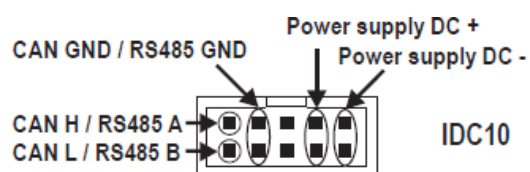


Back connector (IDC 10)

The illustration shows the meanings of the various IDC10 connector pins if signals are to be sent via them directly.

ELECTRICAL CONNECTIONS ON: Switch the module off before connecting inputs and outputs. To meet the electromagnetic immunity requirements:

CUse shielded signal cables;

- Connect the shield to a preferential instrumentation earth system.
- separate shielded cables from other cables used for power installations (transformers, inverters, motors, etc).

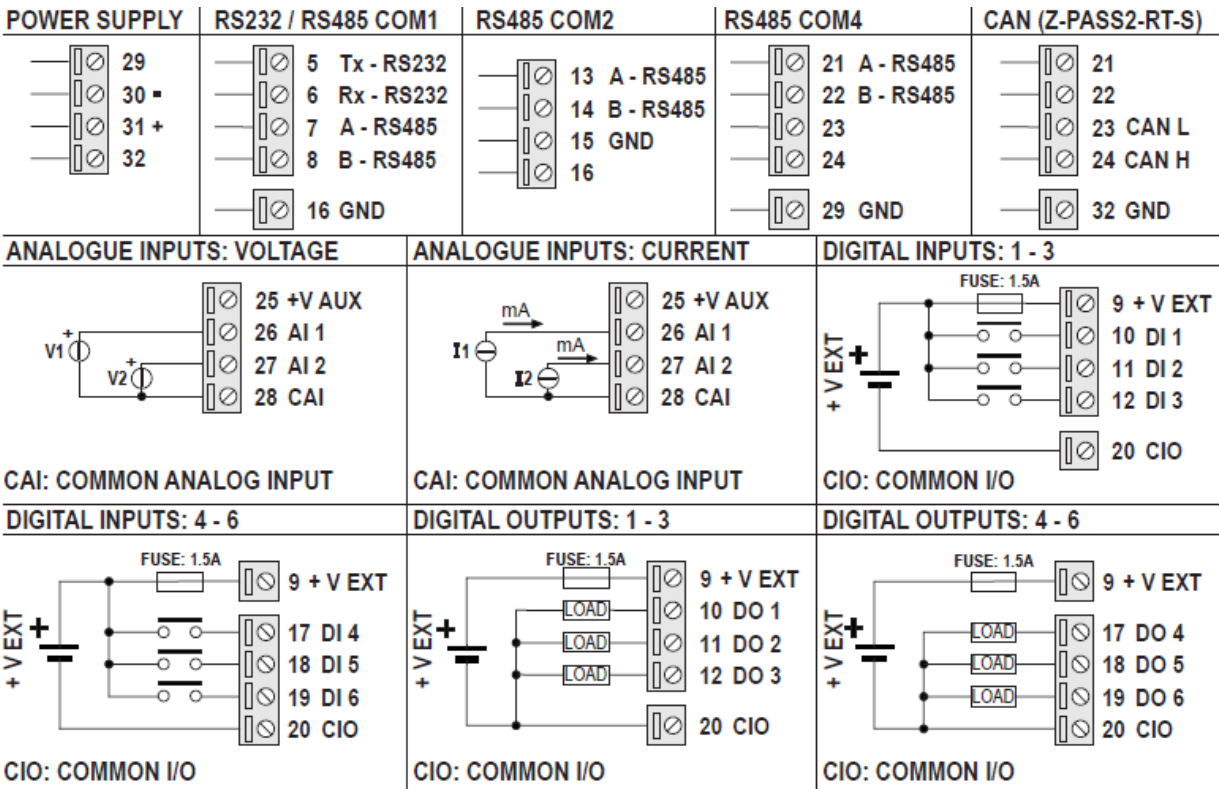

SETTING THE DIP-SWITCHES


WARNING

The DIP-switch settings are read only at boot time. At each change, perform a restart.
For use and settings via DIP-SWITCH SW1 see the user manual available on the website on the web page dedicated to the product.

SW2 DIP SWITCH SETTING: (Z- PASS2-RT-S ONLY):

Through DIP SWITCH SW2, it is possible to select RS485 or CAN communication

through the IDC10 connector:

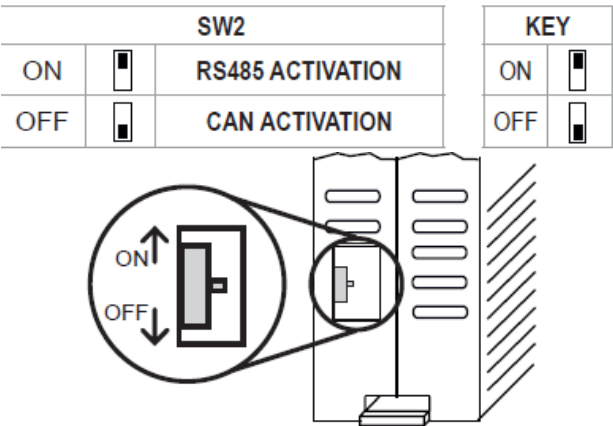

FAQS

- **Q: Can I repair the module myself if it gets damaged?**
A: No, the module must be repaired and damaged parts replaced by the Manufacturer to ensure proper functionality and safety.
- **Q: What should I do if the LED indicators show VPN connection problems?**
A: Check your VPN settings and connections. If issues persist, contact technical support at support@seneca.com for assistance.
- **Q: How can I know if the GPS signal is present?**
A: The LED indicator for GPS signal will be on if the GPS signal is present and off if it's absent.

Documents / Resources



[SENECA Z-PASS2-RT IoT Gateway \[pdf\]](#) Installation Guide
Z-PASS2-RT, Z-PASS2-RT IoT Gateway, IoT Gateway, Gateway

References

- [User Manual](#)

SENECA Z-PASS2-RT-S IoT Edge Gateways Installation Guide

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

[Manuals+](#), [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.