

SIGENERGY TP – SZR Sigen Gateway Home TP Installation Guide

Home » Sigenergy » SIGENERGY TP – SZR Sigen Gateway Home TP Installation Guide 🖺

Contents

- 1 SIGENERGY TP SZR Sigen Gateway Home
- **2 Product Usage Instructions**
- **3 Product Description**
- **4 Pre-installation Check**
- 5 Requirement
- **6 Equipment Installation**
- **7 Cable Connection**
- **8 Equipment Power-On**
- 9 More Info
- 10 FAQs
- 11 Documents / Resources
 - 11.1 References



SIGENERGY TP - SZR Sigen Gateway Home TP



Specifications

Product: Sigen Gateway Home TP
 Installation Guide Version: 03

Product Description

Appearance and Dimensions

• The Sigen Gateway Home TP has a compact design with the following dimensions: [Insert dimensions here].

Port Description

Bottom view:

• GRID: Wire-in port of power grid

• BACKUP: Wire-in port of backup household loads

• INV: Wire-in port of inverter

• COM: Wire-in port of communication

Product Usage Instructions

Pre-installation Check

- Before starting the installation process, ensure you have the following protective equipment and tools:
 - Safety hat
 - Safety glasses
 - Installation tool set

Site Selection Requirements


Ensure that the installation site meets all safety requirements and complies with relevant laws and regulations. Installation planning should be done by a professional installer or as per EPC contracts.

Caution

- Trained or experienced electrical personnel are required to operate the equipment.
- Operators should be familiar with national/regional laws, regulations and standards, the structure and working principle of relevant systems.
- Please read carefully the operating requirements and precautions in this document and Important Notice before
 operating. Failure to do so may result in damage to the equipment that is not covered by the warranty.


Product Description

Appearance and Dimensions

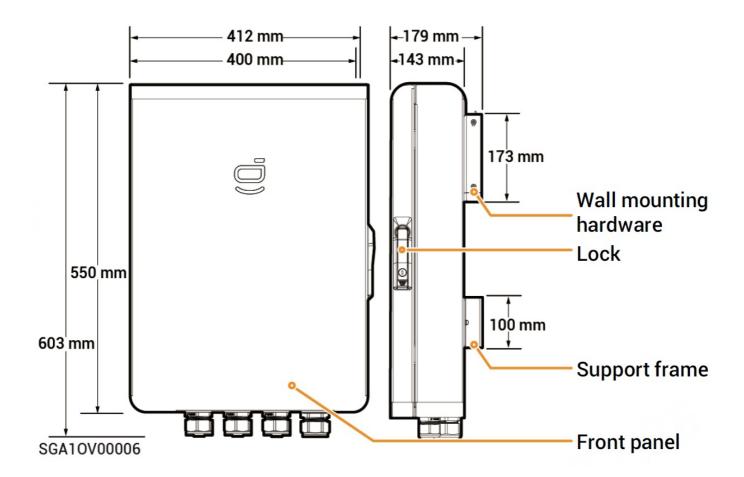


Port Description

Bottom view

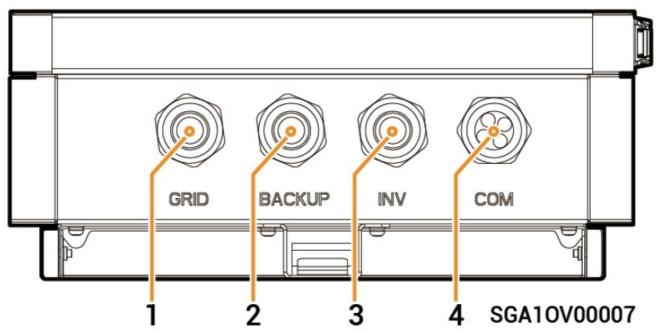

S/N	Name	Marking
1	Wire-in port of power grid	GRID
2	Wire-in port of backup household loads	BACKUP
3	Wire-in port of inverter	INV
4	Wire-in port of communication	COM

Interior view

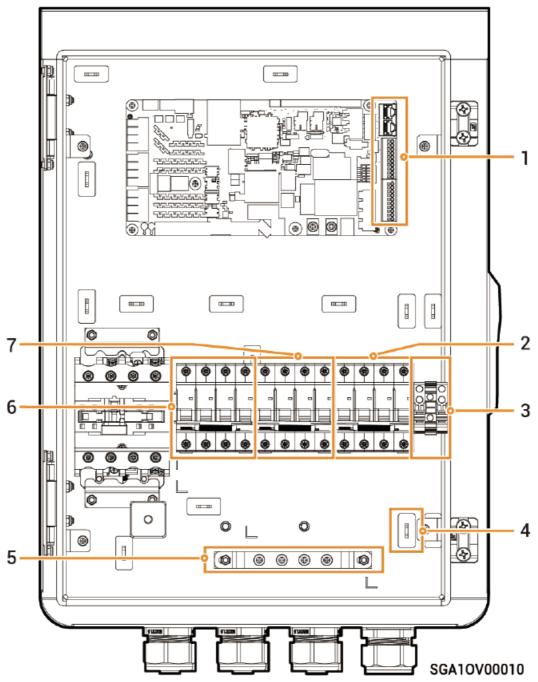

S/N	Label	Description
1	1	FE, RS485, DI, and DO interfaces
2	QF30	Miniature circuit breaker (Inverter)
3	GND	GND
4	1	Cable clamp
5	1	Grounding bar
6	QF10	Miniature circuit breaker (Power grid)
7	QF50	Miniature circuit breaker (Backup household loads)

Please check that all switches are turned off at the factory. Always avoid hot-line work.

Pre-installation Check

- Check whether the components are entirely supplied against the packing list and whether the appearance is in good condition. For any problem, contact your sales representative.
- Parts and accessories supplied with the packing box are personal assets of the owner and must not be taken away from the installation site.
- Check personal protective equipment and installation tools to ensure that they are complete; If not, please make them up.
- Check and ensure the completeness of personal protective equipment and installation tools; replenish if necessary.

Protective equipment













Safety hat

Safety glasses


Dust mask

Protective gloves

Insulating gloves

Insulating shoes

Installation tool

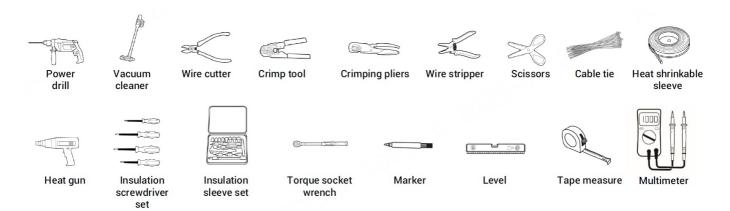

Caution

- The specifications of the Installer-provided cable must comply with the cable regulations and standards of the country/region standards.
- L1, L2, L3, N and PE should be connected to other equipment in sequence without mixing.

Installer-provided cable

S/N	Cable name		Recommended specifications	
1	Functional ground cable		Outdoors single-copper flexible cable Cross-sectional area of core conductor: 6–10 mm²; Outer diameter: 5–8 mm	
2	AC cable	Connected to inverter	Outdoors five-core copper flexible cable (L1, L2, L3, N, PE) SigenStor EC/SigenStor AC/Sigen Hybrid (5.0–15.0) TP: Cross-sectional area of core conductor: 4–6 mm²; outer diameter: 10–21 mm SigenStor EC/SigenStor AC/Sigen Hybrid (17.0–20.0) TP: Cross-sectional area of core conductor: 6–10 mm²; outer diameter: 19–22 mm SigenStor EC/SigenStor AC/Sigen Hybrid 25.0 TP: Cross-sectional area of core conductor: 10–16 mm²; outer diameter: 22–25 mm	
3	6	Connected to backup household loads	Outdoor five-core copper flexible copper cable(L1, L2, L3, N, PE) Cross-sectional area of core conductor: 10–16 mm²; Outer diameter: 22–25 mm	
4		Connected to power grid		
5	RJ45 network cable		Outdoor eight-conductor shielded twin-twisted pair cable Cross-sectional area of core conductor: 0.13−0.2 mm²; Outer diameter: 4−7.5 mm Single Cable length: ≤ 100 m ^[1] RJ45 network cables are EIA/TIA 568B standard network cables	
6	DI/DO signal cable (Optional)		Outdoor two-conductor shielded cable Cross-sectional area of core conductor: 0.2–1.5 mm²; Outer diameter: 2–4 mm	

Note [1]: The cable length should be limited for good communication. Too long cable degrades the communication effect. FE communication distance: ≤ 100 m.

Requirement

Site Selection Requirements

Tips

- The warranty applies when the equipment has been installed properly for its intended use and in accordance with the operating instructions.
- During actual installation, the selection of installation location should comply with local firefighting, environmental protection regulations, and other relevant laws. The specific installation location planning should be subject to the installer or engineering, procurement, and construction (EPC) contracts.

Installation environment

- Do not install the equipment in smoky, flammable, or explosive environments.
- Avoid exposing the equipment to direct sunlight, rain, standing water, snow, or dust. Install the equipment in a sheltered place. Take preventive measures in operating areas prone to natural disasters such as floods, mudslides, earthquakes, and typhoons.
- Do not install the equipment in an environment with strong electromagnetic interference.
- Ensure that the temperature and humidity of the installation environment comply with the equipment's requirements.
- The equipment should be installed in an area that is at least 500 m away from corrosion sources that may result in salt damage or acid damage (corrosion sources include but are not limited to seaside, thermal power plants, chemical plants, smelters, coal plants, rubber plants, and electroplating plants).


Installation position

• Do not tilt or overturn the equipment to ensure that it is installed horizontally.


- Do not install the equipment in places easily touched by children.
- Do not install the equipment in places with fire or damp.
- Please keep away from the daily work and living places.
- Do not install the equipment in a sealed, poorly ventilated location without fire protection measures and difficult access for firefighters.
- The equipment is hot when it is running. If the equipment is installed indoors, please ensure good indoor ventilation and avoid significant indoor temperature rise by 3°C while the equipment is running. Otherwise, the equipment will be derated.
- Do not install the equipment in mobile scenarios such as RVS, cruise ships, and trains.
- You are advised to install the equipment in places that are easy to access, install, operate, maintain status.


Mounting surface


- Do not install the equipment on a flammable carrier.
- The installation carrier must meet load-bearing requirements. Solid brick-concrete structure, concrete walls is recommended.
- The surface of the installation carrier must be smooth and the installation area must meet the installation space requirements.
- No water or electricity is routed inside the carrier to prevent drilling hazards during equipment installation.

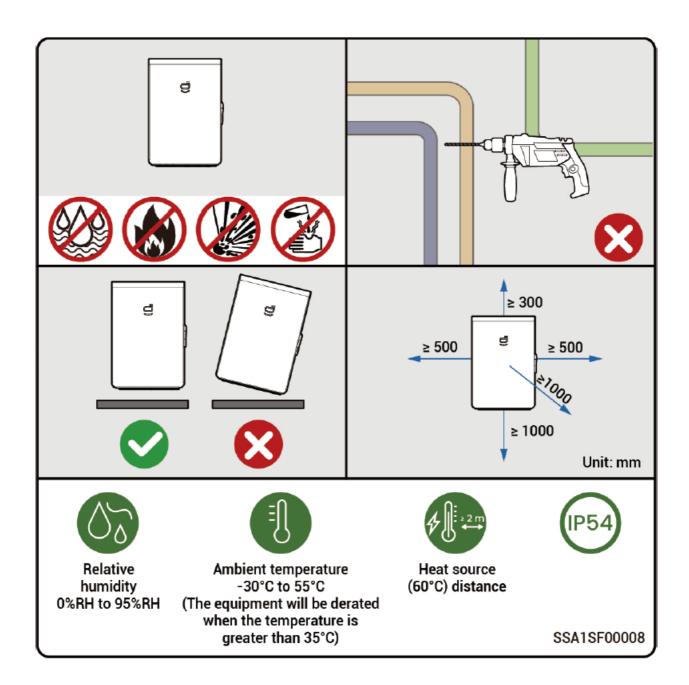

Equipment Installation

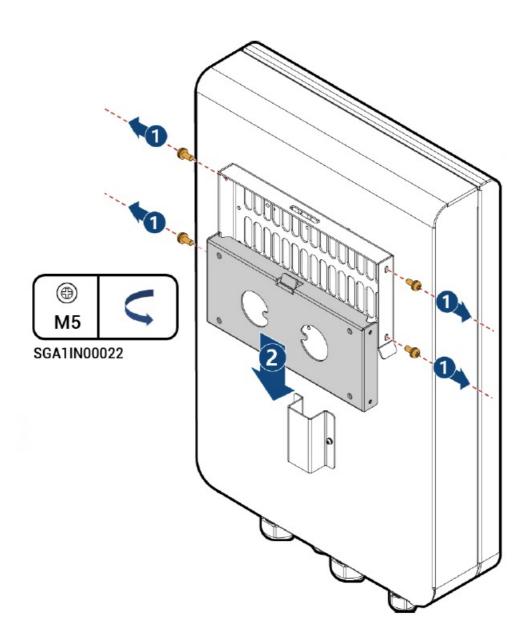

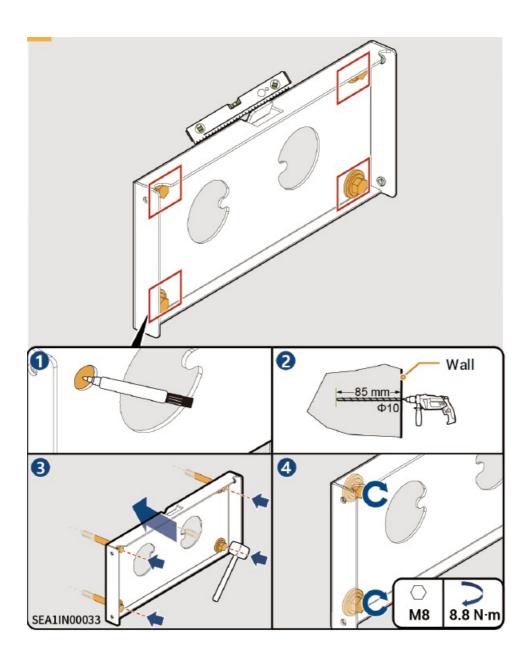

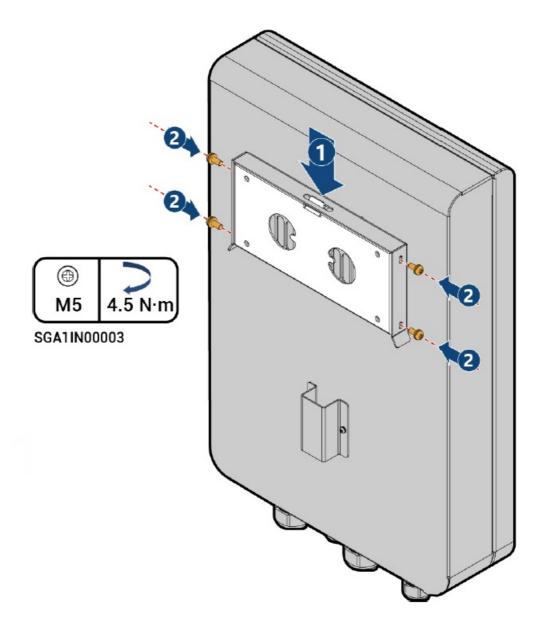

Cable Connection


Recommended Routing

Danger


• Do not perform operations on the equipment with power on. Before operation, please make sure all power supplies to the equipment have been disconnected, including but not limited to the grid side, inverter and diesel generator power switches.


Caution

- Connect cables according to the corresponding labels to prevent personal injury and equipment damage caused by incorrect cable connection.
- To ensure that the inverters, loads, and the Gateway are connected to the common ground point, connect the PE cable.

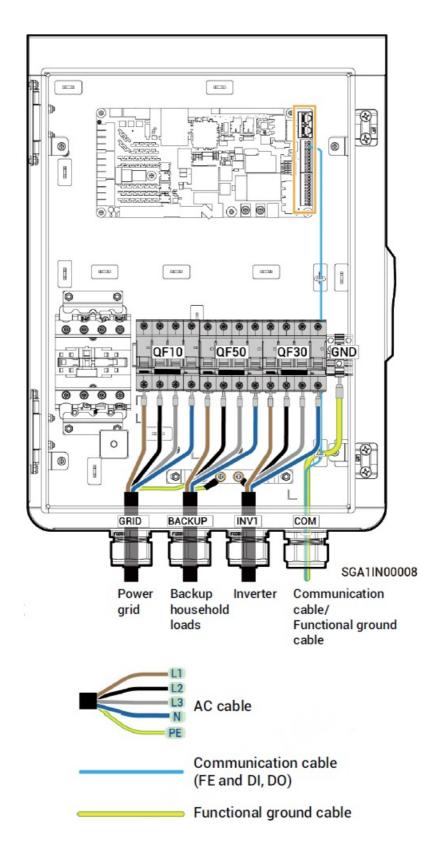

Opening Equipment Door

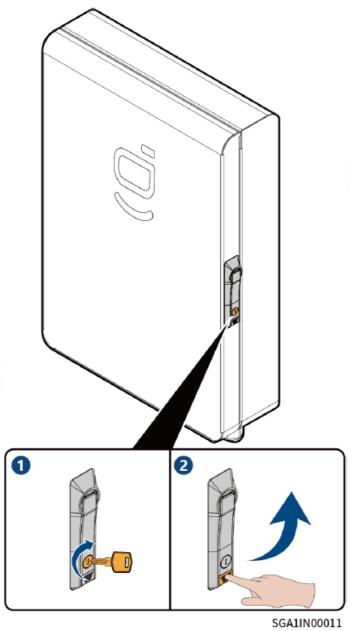


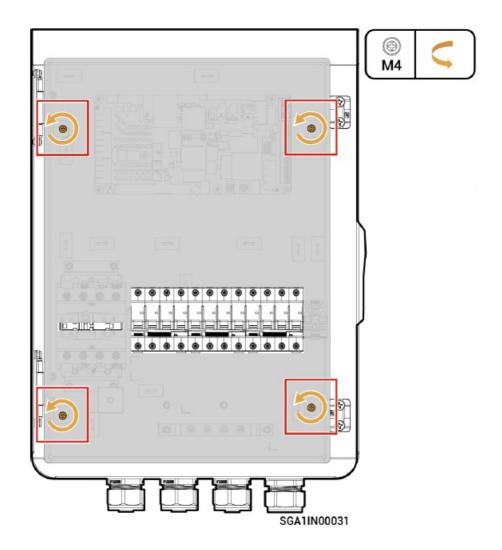

Connecting Functional ground cable

Caution


• In off-grid mode, the N wire in the system is short-connected to the functional grounding wire through the relay to create a grounding system. When earth leakage or short circuit occurs in loads, leakage protection and overcurrent protection devices are triggered to prevent these faults.

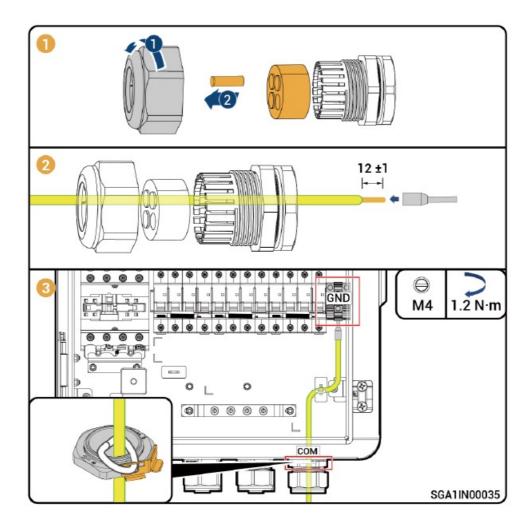

Connecting Power Grid / Backup household loads / Inverters

Caution

• To ensure that the inverters, loads, and the Gateway are connected to the common ground point, connect the PE cable.

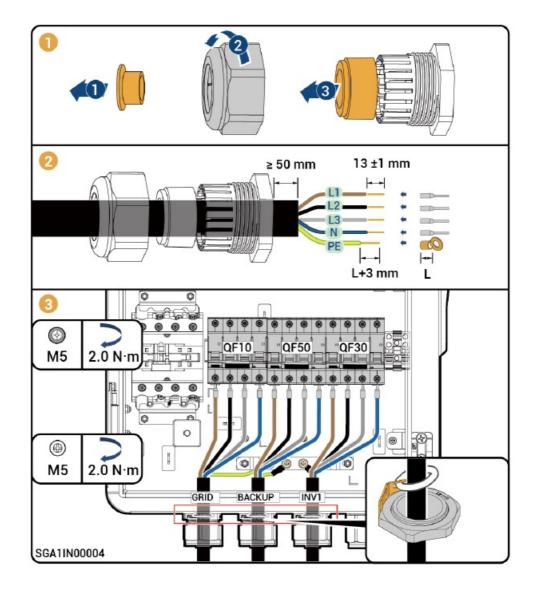


Introductions to FE, RS485, DI, and DO Terminals


Tips

- Refer to Appearance 1 when the label bottom is printed with SGW1PWR3 and Appearance 2 when the label bottom is not printed with SGW1PWR3.
- Identify the cable connection and table content suiting you according to the label appearance.

Appearance 1

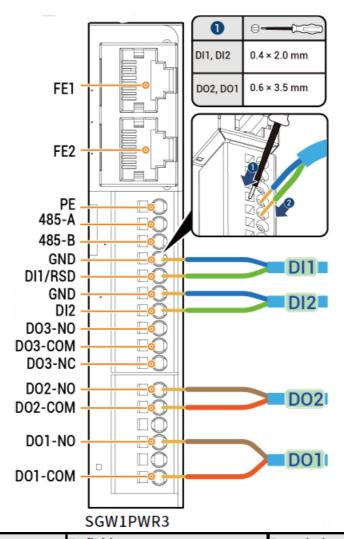


Label		Definition	Description
FE	FE1	Fast Ethernet 1	Used to connect an inverter.
(Network cable interface)	FE2	Fast Ethernet 2	Reserved
(Reserved)485 (RS485 interface)	PE	PE signal shielding ground	Used to connect the equipment over
	485-A	RS485 signal 2_A+	RS485.
	485-B	RS485 signal 2_B-	
DI1	GND	Signal GND	 Universal digital input interfaces.
(Digital input 1)	DI1	Digital input 1	 DI1 is used to connect the feedback contact of the bypass switch.
DI2 (Digital input 1)	GND	Signal GND	
	DI2	Digital input 2	~ fb
D03	DO3-NO	Digital output 3 - Normal Open	Universal digital output interface.
(Dry contact 3)	DO3-COM	Digital output 3 - Common	 DO1 has a contact capacity of 250 Va.c./1 A or 30 Vd.c./1 A.
	DO3-NC	Digital output 3 - Normal Close	 DO2 and DO3 have a contact capacity of 30 Vd.c./1 A. NO/COM is normally open contact and NC/COM is normally
D02	DO2-NO	Digital output 2 - Normal Open	close contact.
(Dry contact 2)	DO2-COM	Digital output 2 - Common	
DO1 (Dry contact 1)	-	-	
	DO1-NO	Digital output 1 - Normal Open	
	-	-	
	DO1-COM	Digital output 1 - Common	

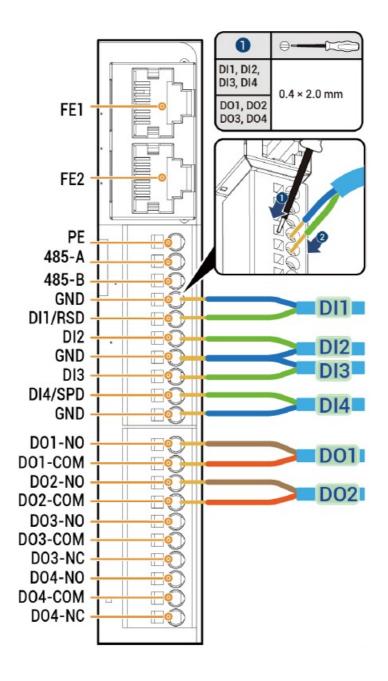

Label		Definition	Description
FE	FE1	Fast Ethernet 1	Used to connect an inverter.
(Network cable interface)	FE2	Fast Ethernet 2	Reserved
(Reserved)485	PE	PE signal shielding ground	Used to connect the
(RS485 interface)	485-A	RS485 signal 2_A+	equipment over RS485.
	485-B	RS485 signal 2_B-	
DI	GND	Signal GND	 Universal digital input
(Digital input)	DI1/RSD	Digital input 1 / Rapid shutdown	interfaces. • DI1 support rapid
	DI2	Digital input 2	shutdown input signal.
	GND	Signal GND	DI4 support surge
	DI3	Digital input 3	protection device status feedback input signal,
	DI4/SPD	Digital input 4 / Surge protection device	among others.
	GND	Signal GND	
DO1	D01-N0	Digital output 1 - Normal Open	 Universal digital output
(Dry contact 1)	DO1-COM	Digital output 1 - Common	interface. The contact capacity of 24 Vd.c./40
DO2	D02-N0	Digital output 2 - Normal Open	mA.
(Dry contact 2)	DO2-COM	Digital output 2 - Common	 NO/COM is normally open contact and NC/COM is
DO3 (Dry contact 3)	D03-N0	Digital output 3 - Normal Open	normally close contact.
	DO3-COM	Digital output 3 - Common	
	DO3-NC	Digital output 3 - Normal Close	
D04	D04-N0	Digital output 4 - Normal Open	1
(Dry contact 4)	DO4-COM	Digital output 4 - Common	
, 7,2	DO4-NC	Digital output 4 - Normal Close	


Connecting RJ45 Network Cable

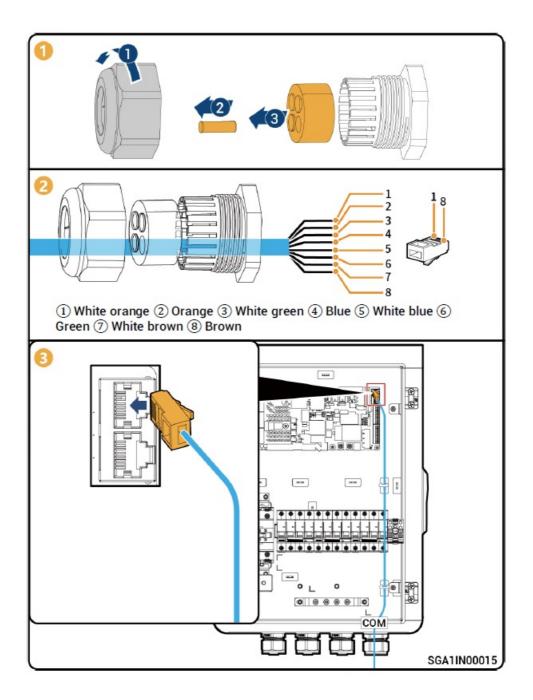

Connecting DI, DO Cable

Tips


• DI and DO interfaces are available in two appearances. Please make connections based on your actual needs. For details, refer to "5.5 Introductions to FE, RS485, DI, and DO Terminals."

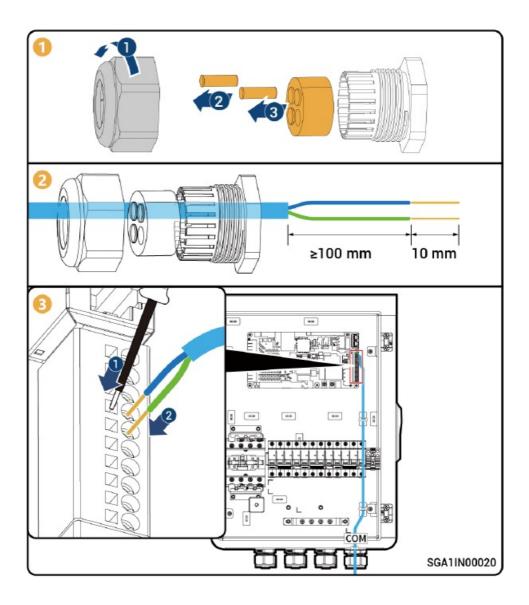

Installing Inner panel


Check the following items against the provided table, tighten routing holes, and install the protective covers.


S/N	Check Item
1	The equipment has been securely installed.
2	Ground cables, DC cables, signal cables, etc. are installed accurately without leftovers.
3	The cable fastening screws or terminals are properly installed.
4	There are no sharp spikes or acute angles at the cut point of the cable tie.
5	The Gateway protective cover is locked.
6	There is no construction left inside or outside the equipment.

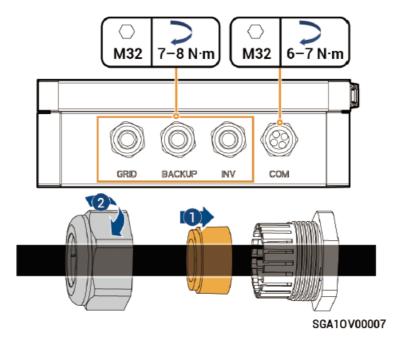

Caution

 Measure the voltage of the switch QF1 on the power grid side and check that the measured value is within the allowable range. Ensure that the cable is connected properly, tighten routing holes, and install protective covers.

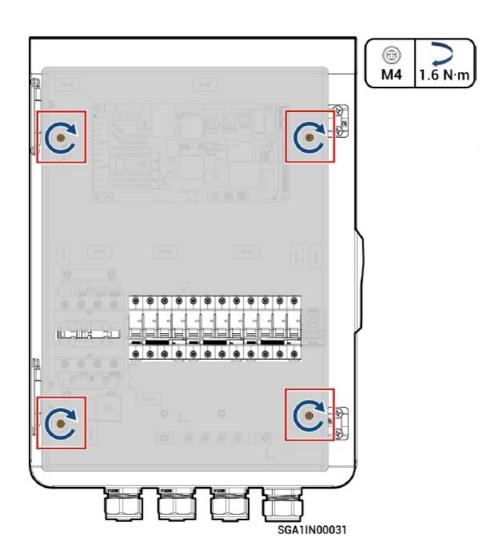

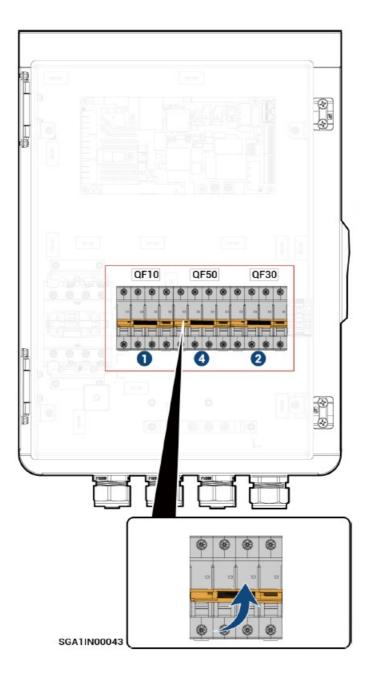

Tips

- Turn on the front switch of the equipment.
- There is a risk of electric shock if the Gateway is left ungrounded.
- If the surge protective device is not switched on, failure of surge protection may lead to damage to household loads and Gateway.

Caution

Do not turn on the miniature circuit breaker when it is not connected to its corresponding device.

- 1. Switch on the miniature circuit breaker (Power grid) QF10.
- 2. Switch on the miniature circuit breaker (Inverter) QF30.
- 3. Wait until inverter is powered on.
- 4. Switch on the miniature circuit breaker (Backup household loads) QF50.

Upon completion of the operation, close the front panel of the Gateway and lock the sides with the key delivered

with the case; the power-on is completed.

More Info

Sigenergy Technology Co., Ltd.



www.sigenergy.com

Copyright © Sigenergy Technology Co., Ltd. 2024. All rights reserved.

Description in this document may contain predictive statements regarding financial and operating results, product portfolio, new technology, configurations and features of product. Several factors could cause difference between actual results and those expressed or implied in the predictive statements. Therefore, description in this document is provided for reference purpose only and constitutes neither an offer nor an acceptance. Sigenergy Technology Co., Ltd. may change the information at any time without notice.

FAQs

- Q: What should I do if I encounter a short circuit during installation?
 - **A:** If a short circuit occurs during installation, immediately disconnect all power supplies and consult a professional for assistance.

Documents / Resources



SIGENERGY TP - SZR Sigen Gateway Home TP [pdf] Installation Guide

TP - SZR Sigen Gateway Home TP, TP - SZR, Sigen Gateway Home TP, Gateway Home TP, Home TP

References

- Residential ESS | Commercial Solar Solution | Sigenergy
- User Manual

Manuals+, Privacy Policy