




THINKCAR thinkobd 500 Check Engine Car Code Reader User Guide

[Home](#) » [THINKCAR](#) » THINKCAR thinkobd 500 Check Engine Car Code Reader User Guide 

Contents


- [1 THINKCAR thinkobd 500 Check Engine Car Code Reader](#)
- [2 OVERVIEW](#)
- [3 Update](#)
- [4 Start Diagnostics](#)
- [5 Warranty Card](#)
- [6 FCC Requirement](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

THINKCAR

THINKCAR thinkobd 500 Check Engine Car Code Reader



OVERVIEW

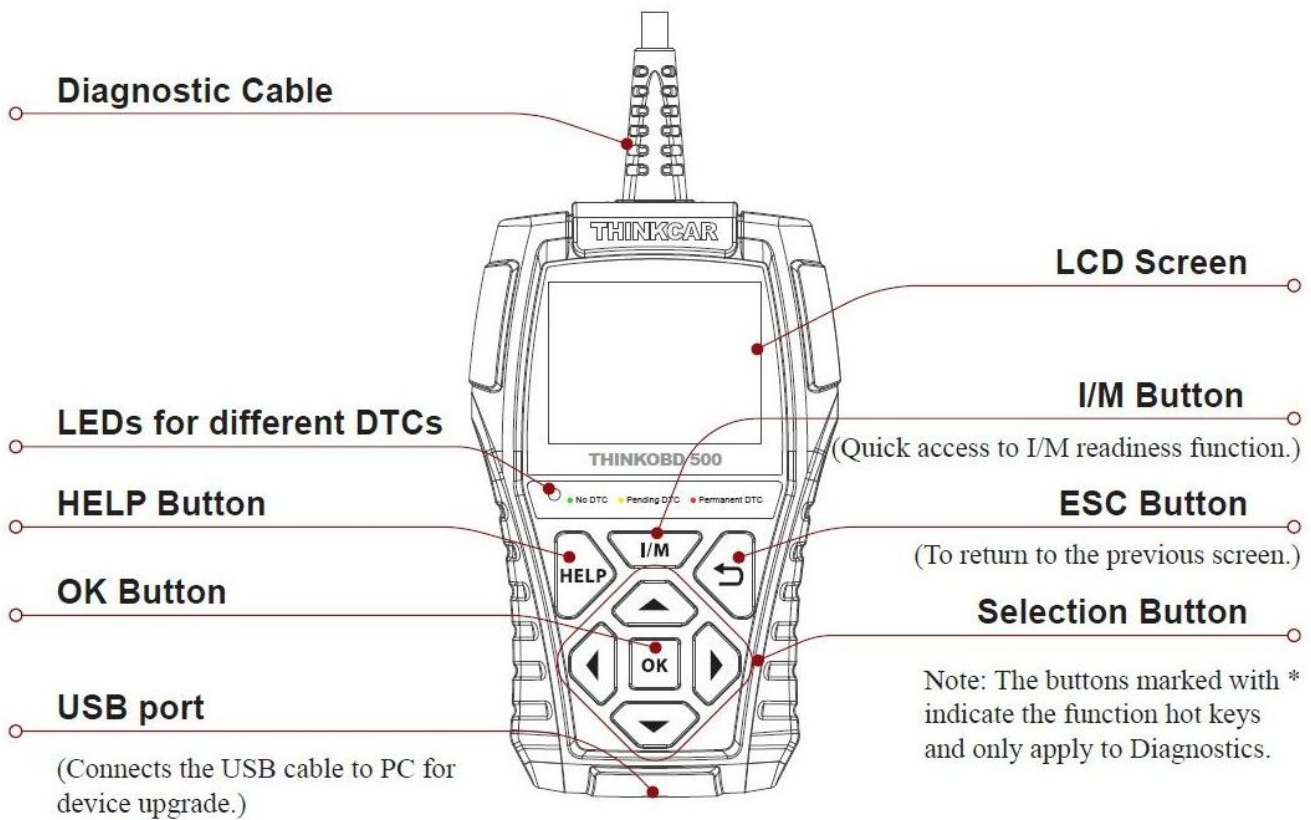

Update

The tool can be updated via USB cable.

Note: Make sure the computer has an Internet connection.

1. Go to <http://www.mythinkcar.com> and download the update tool to the computer. Decompress and install it on your computer (compatible with Windows XP, 7, 8 & 10).
2. After installation, connect one end of the USB cable to the USB port of the computer, and the other end to the tool.
3. Once the tool is powered up, launch the update tool on your computer, the system starts reading the tool. Once it obtains the tool information, click [Device Upgrade], a registration window will pop up.
4. Fill in the required information and click [Submit] to directly navigate to the update center.
5. Click [Upgrade] to start updating until the update is completed.

Start Diagnostics

Preparation

- Turn the vehicle ignition on.
- Vehicle battery voltage range should be 9-18Volts. |
- Throttle should be in a closed position.

Vehicle Connection

1. Locate vehicle's DLC socket: The DLC (Diagnostic Link Connector) is usually located 12 inches from the center of the steering wheel, under or around the driver's side for most vehicles. If the DLC cannot be found, refer to the vehicle's service manual for the location.
2. Connect the diagnostic cable to the vehicle's DLC, the tool will be automatically powered up.
3. The tool is now ready to work.

Warranty Card

1. For non-human quality problems, we accept return in one month without any reason. Within one year, free warranty.
 2. Before replacement, please ensure complete packaging; Before replacement/repair, please call the service number to get the shipping address.
 3. Product warranty starting date is based on the payment date.
- Service Line: 1-833-692-2766

Customer Service

Email: support@thinkcarus.com

Products tutorial, videos, FAQ and coverage list are available on Thinkcar official website. Follow us [thinkcar.official](#)

ObdThinkcar

Note: This Quick Start Guide is subject to change without written notice.

FCC Requirement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Documents / Resources

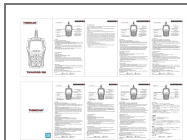

[THINKCAR thinkobd 500 Check Engine Car Code Reader](#) [pdf] User Guide
thinkobd 500 Check Engine Car Code Reader, thinkobd 500, Check Engine Car Code Reader