

# How to use Reboot schedule

## Contents

- [1 How to use Reboot schedule?](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)


## How to use Reboot schedule?

It is suitable for: **N600R, A800R, A810R, A3100R, T10, A950RG, A3000RU**

**Application introduction:** The schedule function allows you to setup the time that the router will reboot automatically. What's more, it allows you to setup the time WiFi on and off while by the other times beyond this period WiFi will be off. It is very convenient for users who often access the Internet very regularly.

### STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering `http://192.168.0.1` into the address bar of your browser.

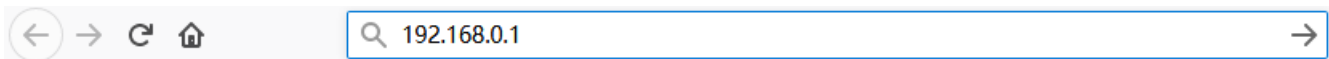


Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.


### STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

## USER LOGIN

[Forget Password?](#)

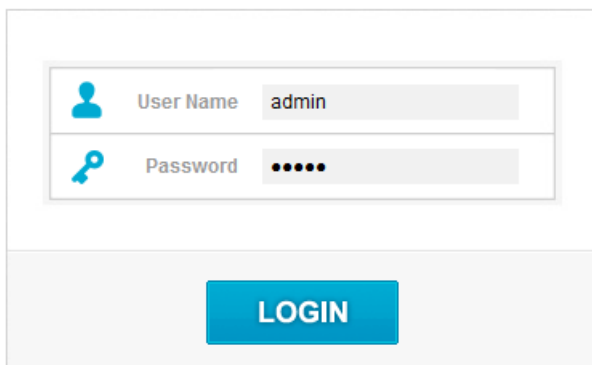 User Name


 Password

**LOGIN**

### STEP-3: Check Time Setting

Before you configure the schedule, you should make sure that the NTP Server is enabled.

3-1. Click **Management->Time Setting** in the sidebar.

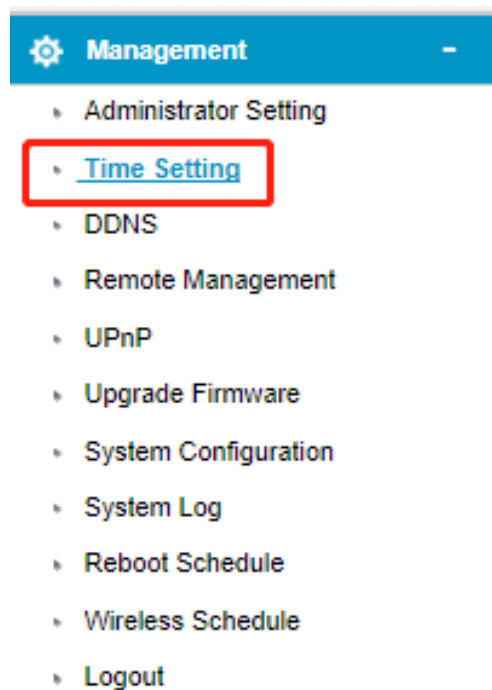

3-2. Choose Enable NTP and click Apply.


#### Time Setting

You can maintain the system time by synchronizing with a public time server over the Internet.

Current Time	9 - 25 - 2018 22 : 05 : 40
	<input type="button" value="Copy PC's Time"/>
Time Zone	(UTC+08:00) Beijing, HongKong, Taipei, Philippines, Singapore, Australia(WA) ▼
	<input checked="" type="checkbox"/> NTP Client Update
NTP Server 1	<input type="text" value="pool.ntp.org"/>
NTP Server 2	<input type="text" value="cn.pool.ntp.org"/>
NTP Server 3	<input type="text" value="europe.pool.ntp.org"/>
	<input type="button" value="Apply"/>

### STEP-4: Reboot Schedule Setup

4-1. Click **Management->Reboot Schedule** in the navigation menu.

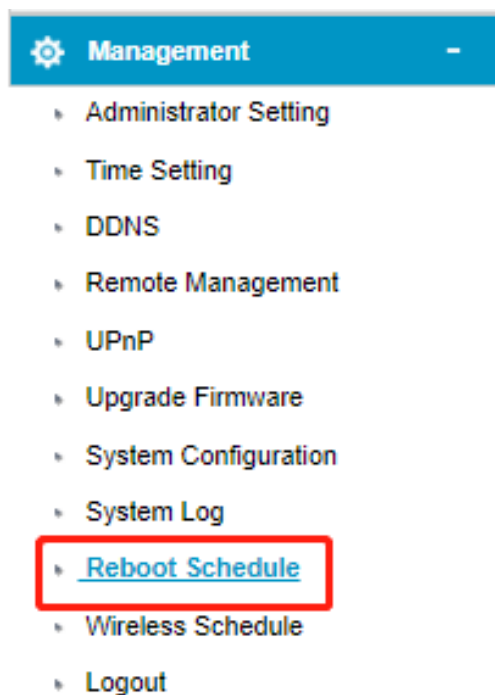

4-2. In the schedule interface, you can setup the time when the router will reboot time.

#### Reboot Schedule

This page is used to set Reboot schedule.

Reboot mode ☐ Disable ☒ Specified Time ☐ Countdown

Week **Date** ← Sun

Time **Time** ← 00 : 00 (hour:minute)

Apply

4-3. Or set the countdown time.

#### Reboot Schedule

This page is used to set Reboot schedule.

Reboot mode ☐ Disable ☐ Specified Time ☒ Countdown

Countdown **Time** ← [ ] hour (Rang 1 - 240)

System Uptime 0 day, 2 hours, 22 minutes, 53 seconds

Apply

DOWNLOAD

How to use Reboot schedule – [[Download PDF](#)]

