



Vent-Axia 1.5A Electronic Single Phase Speed Controller Installation Guide


[Home](#) » [Vent-Axia](#) » Vent-Axia 1.5A Electronic Single Phase Speed Controller Installation Guide 

Vent-Axia 1.5A Electronic Single Phase Speed
Controller Installation Guide

Vent-Axia®

1.5A Electronic Single Phase Speed Controller

INSTALLATION AND WIRING INSTRUCTIONS

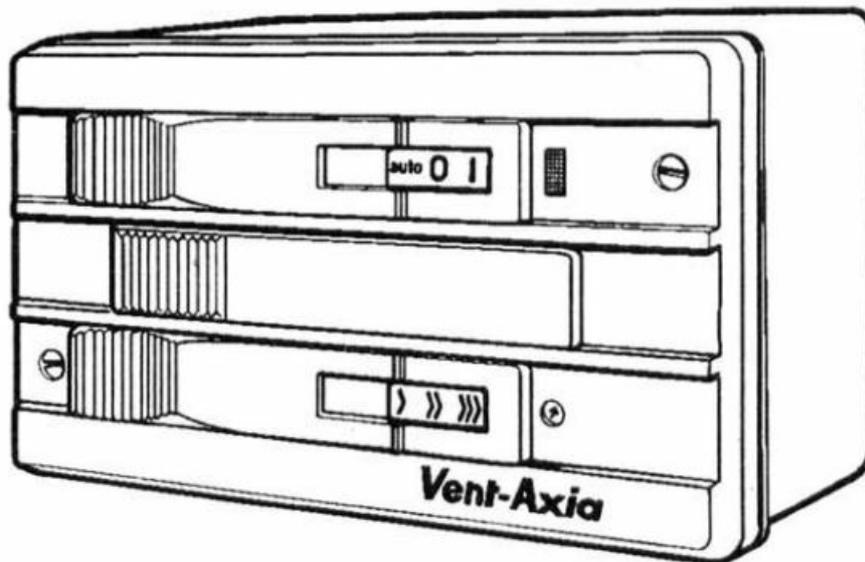

- On receipt of your Controller, check that:
- it is the correct rating for the size of motor.
 - the voltage and frequency are correct.



IMPORTANT

WARNING THIS EQUIPMENT MUST BE EARTHED MAINS SUPPLY MUST BE ISOLATED BEFORE MAKING CONNECTION CONNECTION TO MAINS SUPPLY MUST BE IN ACCORDANCE WITH BS 7671 :1992, CURRENT I.E.E WIRING REGULATIONS, LOCAL BUILDING AND FACTORY REGULATIONS, OR THE APPROPRIATE STANDARDS IN YOUR COUNTRY.

ENSURE SAFETY REGULATIONS AND PRACTICES ARE ADHERED TO WHEN INSTALLING AND USING THIS EQUIPMENT.

IMPORTANT

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE COMMENCING INSTALLATION.

Contents

1 MOUNTING

2 WIRING INSTRUCTIONS

3 NOTES ON RUNNING

4 MINIMUM SPEED

5 VENT-AXIA SALES CENTRES

6 Documents / Resources

6.1 References

MOUNTING

The controller may be sited in any convenient position that is unaffected by direct heat sources such as radiators boilers etc. Do not site the controller where it may be subject to water spray, condensation, damp or wet conditions.

Ensure that the controller is installed in a ventilated area.

Ensure that the enclosure is securely mounted using appropriate fixing screws or bolts.

If the enclosure is mounted on a metal surface or partition, ENSURE THAT THE SURFACE IS EARTHED.

WIRING INSTRUCTIONS

WARNING: THIS APPLIANCE MUST BE EARTHED

Ensure the main supply is isolated before proceeding with the wiring.

The installation must be provided with a double-pole isolator switch, having a contact separation of not less than 3mm, and be protected with a 3 amp fuse (U.K.). Remove land connections in accordance with wiring diagrams overleaf.

When using surface wiring that is not being contained in conduit, the supply and output cable must be securely clipped to the rounding surface close to the controller.

If using automatic control via electro-mechanical ON/OFF switched sensor e.g. electro. mechanical thermostat, timer, relay etc. ensure sensor switch is adequately rated for the switched load.

After making wiring connections, check that they are all correct and secure, replace lid.

NOTES ON RUNNING

Before switching on CHECK: Control unit and motor/fan are secure Earth connections have been made and are secure

Switch on mains Slide control to maximum and down to minimum to ensure motor/fan operates accordingly.

MINIMUM SPEED


The control unit has been factory set to Vent-Axia's recommended minimum speed.

A minimum speed adjuster is located on the front of the controller and is exposed when the bottom slide bar is moved fully to the left.

This adjuster is used to vary the lowest speed setting if the fan does not revolve when the controller is set to minimum speed.

Using a small screwdriver, turn the adjuster clockwise to increase the minimum speed setting.

After any adjustment, make sure the fan will start from stationary condition by using the ON/OFF switch with the variable speed slide knob set fully to the left (minimum speed).

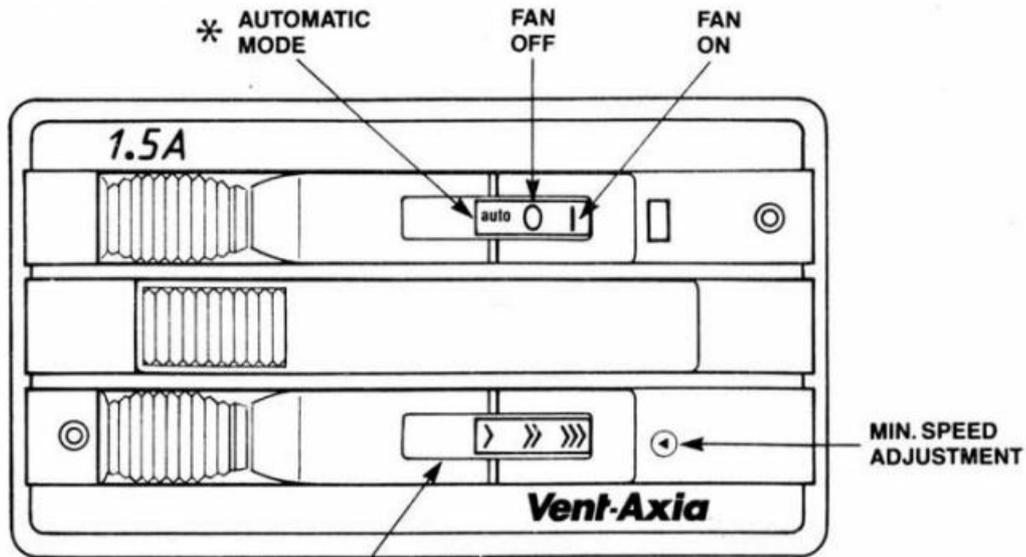

VARIABLE FAN SPEED

*


For AUTOMATIC REMOTE SWITCHING (if required) see also relevant sensor wiring instructions.

Note:

Only mechanical or electro-mechanical switched sensors should be used, rated at 1.5A inductive 220-240V AC.

Connect sensor switch leads to L4 and L5 in the connector block 2.

When slide switch is in the position marked **auto** automatic switching from sensor/switch (if fitted) is obtained.

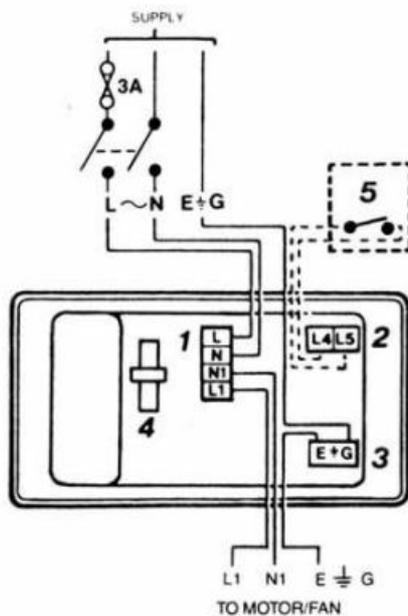

- 1 Main connector block
- 2 Sensor connector block
- 3 Earth connector block
- 4 Fuse (3 AMP)
- 5 Sensor switch

VENT-AXIA SALES CENTRES

SCOTLAND 12 Lambhill Quadrant,
Scotland Street Trading Estate,
Kinning Park, Glasgow G41 1 SB.
Telephone: 0141 429 1166 Fax: 0141 429 6616.

NORTH WEST Unit 2 Caledonia Way,
Stretford Motorway Est.
Barton Dock Road, Manchester M32 0ZH.
Telephone: 0161 865 8421 Fax: 0161 865 0098.

NORTH EAST 5 Dolly Lane, Leeds LS97TT
Telephone: 0113 245 2985 Fax: 0113 242 4430.

MIDLANDS 70 Albert Road,
Stechford, Birmingham B33 9AH.
Telephone: 0121 783 8601 Fax: 0121 784 7506.

SOUTH WEST 1340 Aztec West,
Almondsbury, Bristol BS12 4RX.
Telephone: 01454 612000 Fax: 01454 612020.

SOUTHEAST Newton Road,
Crawley, West Sussex RH 10 2JA.
Telephone: 01293 530202 Fax: 01293 565169.

EASTERN Newton Road,
Crawley, West Sussex RH10 2JA.
Telephone: 01293 530202 Fax: 01293 565169.

LONDON Newton Road,
Crawley, West Sussex RH10 2JA.
Telephone: 0181 549 2271 Fax: 01293 565169.

NORTHERN IRELAND 11 Sydenham Road,
Belfast BT3 90H.
Telephone: 01232 455528 Fax: 01232 452529.

REPUBLIC OF IRELAND
Vent-Axia Ventilation Ltd.
921 Western Industrial Estate, Naas Road, Dublin 12.
Telephone: 01 450 4133 Fax: 01 450 4570.

Internet site at: www.vent-axia.com email: info@vent-axia.com

The Vent-Axia Guarantee

Applicable only to products installed and used in the United Kingdom. For details of guarantee : outside the United Kingdom contact your local supplier.

Vent-Axia Limited guarantees its products for two years from the date of purchase against faulty materials or workmanship. In the event of any part found to be defective, the product will be repaired, or at the Company's option replaced, without charge, provided that the product:

1. has been installed and used in accordance with the instructions given with each unit
2. has not been connected to an unsuitable electricity supply. (The correct electricity supply voltage is shown on the product rating label attached to the unit.)
3. has not been subject to misuse, neglect or damage.
4. has not been modified or repaired by any person not authorised by the company.

IF CLAIMING UNDER TERMS OF GUARANTEE

please return the complete product, carriage paid to your original supplier or nearest Vent-Axia : Centre, by post or personal visit. Please ensure that it is adequately packed and accompanied by a letter clearly marked 'Guarantee

Claim' stating the nature of the fault and providing evidence of date and source of purchase.

This guarantee is offered to you as an extra benefit, and does not affect your legal rights.

A& pert of 1h11 policy of continuous product improvement Vent-Axia reserves the right to after specifications without notice.

Vent-Axia[®]



Vent-Axla Ltd
Head Office: Fleming Way, Crawley, West Sussex RH10 2NN
Tel: 01293 526062 Fax: 01293 551188

Documents / Resources



[Vent-Axia 1.5A Electronic Single Phase Speed Controller](#) [pdf] Installation Guide
1.5A Electronic Single Phase Speed Controller, Electronic Single Phase Speed Controller, Single Phase Speed Controller, Phase Speed Controller, Controller

References

- [User Manual](#)

[Manuals](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.