Manuals+ — User Manuals Simplified.

AJAX Systems
MotionProtect Curtain Motion Detector

Ajax Systems MotionProtect Curtain Motion Detector User Manual

Contents

AJAX Systems

Ajax Systems MotionProtect Curtain Motion Detector

Product Using Instructions

- MotionProtect Curtain's IR sensors detect intrusion by sensing moving objects with body temperature.
- When armed, it sends alarm signals if motion is detected. The hub triggers alerts and notifications upon receiving these signals.
- To avoid false alarms, the detector requires matching signals from both IR sensors before sending alarm states.
- This feature can be enabled/disabled in settings.
- Ensure the hub is on and connected to the internet.
- Install the Ajax app on your smartphone, create an account, and add the hub.
- Hub status should be disarmed and not updated.
- In the Ajax app, tap Add Device.
- Name the device, scan or enter the QR code, select room, and tap Add.
- Power on the detector by holding the button for 3 seconds.
- If the connection fails, the device auto-powers down after 6 seconds. Retry without turning it off.

FAQ

- **What is correlation signal analysis and how does it work?**
    - The correlation signal analysis ensures alarm states are sent only when both IR sensors detect the same motion signal, reducing false alarms. This feature can be enabled/disabled in the detector's settings.

MotionProtect Curtain is a curtain-type wireless motion detector. Thedetector has a narrow horizontal detection angle and is designed for indoor perimeter control: windows, doorways, and other entrances or exits of the guarded facility. The maximum motion detection distance is 15 m.

MotionProtect Curtain integrates into Ajax systems, connecting to a **hub** through the **Jeweller** secure protocol. Wireless coverage may reach up to 1,700m line-of-sight. The pre-installed battery ensures up to 3 years of autonomous operation.

An iOS or Android **app** is used for detector setup. It also notifies the user about any events with push notifications, SMS, or calls (if enabled).

Ajax can be connected to the central monitoring station of a securitycompany.

- Connection to **ocBridge** Plus and **uartBridge** integration modules is not provided.

Buy curtain type motion detector MotionProtect Curtain

Functional Elements
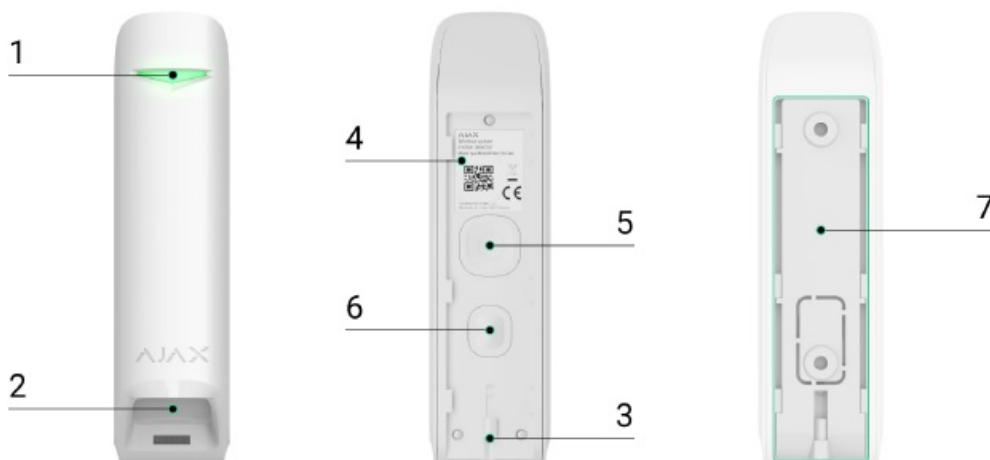
1. LED indicator.
2. Motion detector lens.
3. Hole for fixing the SmartBracket mounting panel with the bundled screw.
4. QR code with the device ID. Used to connect to the Ajax system.
5. Button to turn on/off the device.
6. **Tamper button** Triggers when trying to tear off the detector from thesurface or remove it from the mount.
7. SmartBracket mounting plate. To remove the plate, slide it down.

Operating Principle

00:00   00:12

MotionProtect Curtain's IR sensors detect intrusion into the premises detecting moving objects having a temperature close to that of the human body.

Once the system is armed, the detector starts polling its two IR sensors. If amotion is detected, an alarm state is

instantly sent to the hub, and a green LED starts flashing on the device. Having caught an alarm state, the Hub triggers sirens and notifies the user and the security company.

Motion alarms are sent every 5 seconds

To prevent false alarms, MotionProtect Curtain has a Correlation SignalProcessing functionality that can be enabled in the detector's settings Once it is active, the detector starts sending alarm states to the hub only if an identical motion signal is registered by both IR sensors. If it is disabled, MotionProtect Curtain sends an alarm state even with one of the two IR sensors triggered.

[What is correlation signal analysis and how does it work](#)

Pairing the Detector with a hub

Before you start pairing the detector

1. Turn on your hub and check the Internet connection (via Ethernet and/or GSM).
2. Install the **Ajax application** on your smartphone. Create an account, add your hub to the app, and create at least one room.
3. Check the status of the hub in the app to make sure it is disarmed and is not updating.

Please note that only a user with admin permissions can add devices to the hub

Pairing MotionProtect Curtain with a hub

1. In the Ajax mobile app, tap Add Device.
2. Name the device, scan the QR code, or enter it manually (placed on theback of the detector body or its packaging), select the room for placement, and tap Add. The countdown will start.

3. Turn on the detector by holding its power button for 3 seconds.

- For detection and pairing to occur, the device must be within a hub's wireless coverage (at the same facility). The connection request will be sent to theHub only once the device turns on.
- If the MotionProtect Curtain fails to connect to the hub, it will automatically power down within 6 seconds after turning on. There is no need to turn off the device to retry.
- If the MotionProtect Curtain has already been paired with another hub, turn off the detector, and then follow the standard pairing procedure.
- After pairing, the detector will appear on the app's hub device list. The frequency of the device status updates depends on the polling interval indicated in the hub's settings (36 seconds by default).
- If the detector identifies movement before the system is armed, it willactivate not immediately but the next it is polled by the hub.

States

The states display information about the device and its operating parameters. MotionProtect Curtain states are available in the Ajax app. To view them:

1. Sign in to the Ajax app.
2. Select the hub if you have several of them or use a PRO app.
3. Go to the Devices ⬛ menu.
4. Select MotionProtect Curtain from the list.

Parameter	Value
Temperature	Detector temperature. It is measured on the processor of the detector and changes gradually. The acceptable error between the value in the app and the ambient temperature is 2°C. The value is updated as soon as the detector identifies a temperature change of at least 2°C. You can configure a scenario by temperature to control automation devices. **Learn more**
Jeweller Signal Strength	Signal strength between the detector and the hub or the range extender via the Jeweller channel. The recommended value is 2–3 bars. Jeweller is a protocol for transmitting MotionProtect Curtain events and alarms.
Connection via Jeweller	Connection status on the Jeweller channel between the detector and the hub or the range extender: **Online** — the detector is connected to the hub or the range extender. **Offline** — the detector is not connected to the hub or the range extender. Check the detector connection.

ReX	Displays the status of using a **radio signa range extender**

Battery Charge	The battery charge level of the device: **OK** **Battery low** The Ajax apps and the security company will receive appropriate notifications when the batteries are low. After sending a low battery notification, the detector can work for up to 2 months. **How the battery charge is displayed** **Battery life calculator**
Lid	The status of the detector's tamper that responds to detachment of the device from the surface or opening of the body: **Open** — the detector was removed from the SmartBracket panel, or the integrity of its body was compromised. Check the mounting of the detector. **Closed** — the detector is installed on the SmartBracket mounting panel. The body's integrity and the mounting panel weren't compromised—normal state. **Learn more**
Sensitivity	The sensitivity level of the motion detector: Low Normal

	High The sensitivity is selected based on the results of the **detection zone test**.
Correlation signal processing	Status of the **signal correlation processing** functionality
Always Active	When this option is enabled, the detector is always armed. This means that the detector will constantly respond to motion and raise alarms regardless of the system arming mode. **Learn more**
Permanent Deactivation	Shows the status of the device's permanent deactivation function: **No** — the device operates normally and transmits all events. **Lid only** — the hub administrator has disabled notifications about triggering on the device body. **Entirely** — the device is completely excluded from the system operation by the hub administrator. The device does not follow system commands and does not report alarms or other events. **By number of alarms** — the device is automatically disabled when the number of alarms is exceeded (specified in the settings for **Devices Auto Deactivation**). The feature is configured in the Ajax PRO app. **Learn more**

Alarm Reaction	
Operating Mode	Shows how the detector reacts to alarms: **Instant Alarm** — the armed detector immediately reacts to a threat and raises the alarm. **Entry/Exit** — when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends. **Follower** — the detector inherits the delay from Entry/Exit detectors. However, when the Follower is triggered individually, it immediately raises the alarm.
Delay When Entering, sec	Delay time when entering: from 5 to 120 seconds. Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the secured area. **Learn more**
Delay When Leaving, sec	Delay time when leaving: from 5 to 120 seconds. Delay when leaving (arming delay) is the time the user has to leave the secured area after the security system arms. **Learn more**
Firmware	The detector's firmware version.
Device ID	Device identifier. It is also available on the QR code on the detector enclosure and its package box.
Device No.	The number of the device loop (zone).

Detector Setup

To change the detector settings in the Ajax app

1. Select the hub if you have several of them or use a PRO app.

2. Go to the Devices ▬ tab.

3. Select MotionProtect Curtain from the list.

4. Go to Settings by clicking on the gear icon ⚙.

5. Set the required parameters.6. Click Back to save the new settings.

Setting	Value
Name	Detector name. It is displayed in the list of hub devices, SMS text, and notifications in the event feed. To change the detector name, click on the text field next to the name. The name can contain up to 12 Cyrillic characters or up to 24 Latin characters.
Room	Select the virtual room to which the MotionProtect Curtain is assigned. The room name is displayed in the text of SMS and notifications in the events feed of the Ajax apps.
Sensitivity	The motion detector sensitivity level. The choice depends on the type of the object, the presence of probable sources of false alarms, and the species of the protected area:

	Low — there are likely sources of false alarms in the protected area. **Normal** (default value) — recommended value, suitable for most objects. Do not change it if the detector works correctly. **High** — there is no interference in the protected area; the maximum range of detection and the alarm detection speed are important. For example, if the detector is installed in a narrow passage. Before selecting the sensitivity level, conduct the **detection zone test**. If during the test, the detector doesn't react to movement in 5 cases out of 5, the sensitivity should be increased.
Correlation signal processing	When this option is enabled and motion is detected, MotionProtect Curtain additionally analyzes the received signals from two infrared sensors to protect against false alarms. **Learn more**
Always Active	When this option is enabled, the detector is permanently in armed mode. This means that the detector will constantly respond to motion and raise alarms regardless of the system arming mode. **Learn more**

Alarm LED indication	Allows you to disable the flashing of the LED indicator during an alarm. Available for devices with firmware version 6.53.1.1 or higher **How to find the firmware version or the ID of the detector or device**
Alert with a siren if motion detected	If active, **sirens added to the system** are activated if the motion is detected
Alarm Reaction	
Operating Mode	Specify how this device will react to alarms: **Instant Alarm** — the armed detector immediately reacts to a threat and raises the alarm. **Entry**/**Exit** — when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends. **Follower** — the detector inherits the delays from Entry/Exit detectors. However, when the Follower is triggered individually, it immediately raises the alarm.
Delay When Entering, sec	Delay time when entering: from 5 to 120 seconds. Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the secured area. **Learn more**
Delay When Leaving, sec	Delay time when leaving: from 5 to 120 seconds.

	Delay when leaving (arming delay) is the time the user has to leave the secured area after the security system arms. **Learn more**
Arm in Night Mode	If active, the detector becomes armed once the system enters **Night Mode**
Night Mode Delay When Entering, sec	Delay time when entering in **Night Mode**: 5 to 120 seconds. Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the premises. **Learn more**
Night Mode Delay When Leaving, sec	Delay time when leaving in **Night Mode**: 5 to 120 seconds. Delay when leaving (arming delay) is the time the user has to leave the premises after arming. **Learn more**
Jeweller Signal Strength Test	Switches the detector to the Jeweller signal strength test mode. The test allows you to check the signal strength between the detector and the hub or the range extender over the Jeweller wireless data transfer protocol to determine the optimal installation location for the device. The recommended value is 2–3 bars. **Learn more**
Detection Zone Test	Switches the detector to the detection zone test mode.

	The test enables users to check how the detector responds to movement and to determine the optimal installation location.
	If, during the test, the detector does not respond to motion in 5 cases out of 5, increase the sensitivity or change the detector's location.
	Learn more
Signal Attenuation Test	Switches the detector to the signal attenuation test mode.
	During the test, the transmitter power is decreased or increased to simulate a change in the environment to test the communication stability between the detector and the hub.
	Available in detectors with firmware version **3.50 or later.**
	Learn more
Permanent Deactivation	Allows the user to disable the device without removing it from the system.
	Three options are available:
	No.
	Entirely — the device does not execute system commands and does not participate in automation scenarios, and the system ignores alarms and other device notifications.
	Lid only — the system ignores the detector tamper triggering notifications.
	More about permanent deactivation

| | The system can also automatically deactivate devices when the preset number of alarms is exceeded.

More about auto deactivation |
|---|---|
| User Guide | Opens the MotionProtect Curtain User Guide in the Ajax app. |
| Unpair Device | It unpairs the detector: disconnects it from the hub, and deletes its settings. |

Detector Indication

00:00   00:03
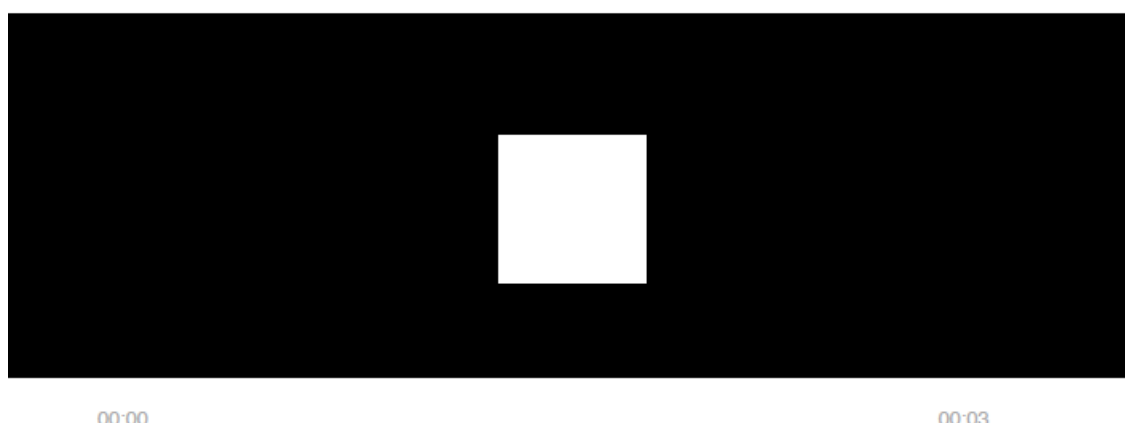
- The MotionProtect Curtain indicator LED may turn red or green, depending onthe status of the device.

Indication when pressing the power button

Event	Indication
The power button is pressed (detector is on)	Lights up red while the button is held
Turning on	Lights up green while the device is turning on

Turning off	Lights up red, then flashes three times

Active detector indication

Event	Indication	Note
Connecting the detector to the hub	Lights up green for a few seconds	
Hardware error	Flashes red continuously	The detector needs to be repaired, contact support
Motion or tamper alarm triggered	Lights up green for about 1 second	
attery replacement needed	Smoothly lights up green and goes off	For the battery replacement procedure, see **Battery replacement** manual

Integrity Testing

Ajax systems can run tests to verify the integrity of connected devices.
The tests start instantly, but no later than within 36 seconds by default. The test start time depends on the detector polling interval setting (see the Jeweller section in the Hub settings).

- **Jeweller Signal Strength Test**
- **Detection Zone Test**
- **Signal Attenuation Test**

Detector Placement

- The effectiveness of the security system depends on detector placement. Choosing a location to install the MotionProtect Curtain, consider the directionof the light filter and obstacles that may affect the detector's field of view and the radio signal transmission.
- Consider the detection range as well as the beam width when installing thedetector. Incorrect device placement can lead to false alarms or improper operation of the device.

Up to 15 m

2.4 m

90°

1.2 m

0 m

0 m   3 m   6 m   9 m   12 m   15 m

Up to 15 m

0.8 m

6°

0.6 m

0.8 m

0 m   3 m   6 m   9 m   12 m   15 m
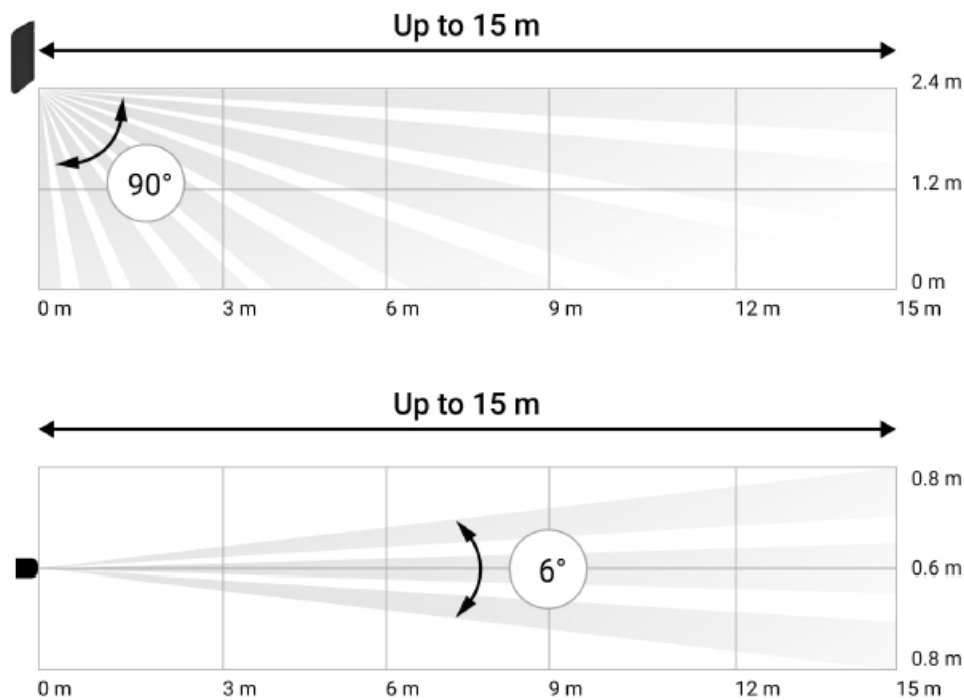
Horizontal and vertical detector's angles of view

Detection range	Beam width
3 meters	0.3 meters
6 meters	0.6 meters
9 meters	0.9 meters
12 meters	1.25 meters
15 meters	1.55 meters

The device was developed only for indoor use.

Do not install the detector

- Outside the premises (outdoors)
- In front of the windows within reach of direct sunlight
- Opposite of the objects that rapidly change temperature (e.g., electric and gas heaters)
- Opposite of the moving objects having a temperature close to that of the human body (curtains swaying above a heating radiator)
- In places with fast air circulation (near fans, open windows or doors)
- Near metal objects and mirrors that cause attenuation or interfere with radio signals
- Within any premises with a temperature and humidity beyond the permitted range
- Closer than 1 m to a hub

If the detector keeps reacting to interference and raising false alarms, but it is impossible to install it anywhere else, the Correlation Signal Processing can be enabled in the settings.

Please note that if the Correlation Signal Processing is enabled, the range of motion detection is reduced depending on the detector sensitivity chosen

Sensitivity	Motion detection range w/ Signal Correlation Processing *	Motion detection range w/o Signal Correlation Processing *
Low	Up to 6 m	Up to 11 m
Normal	Up to 7 m	Up to 13 m
High	Up to 8 m	Up to 15 m

at an ambient temperature of 23°C

If possible, avoid situations where the detector identifies movement at a longer distance than required. The best place to install it is within an enclosed place. For instance, to detect movement in an archway, install thedetector in it. This way, the detector will be triggered only by a person who enters it.

- To prevent the detector from reacting to domestic animals, install it upside down, leaving space for the free

  movement of animals below the detection zone.
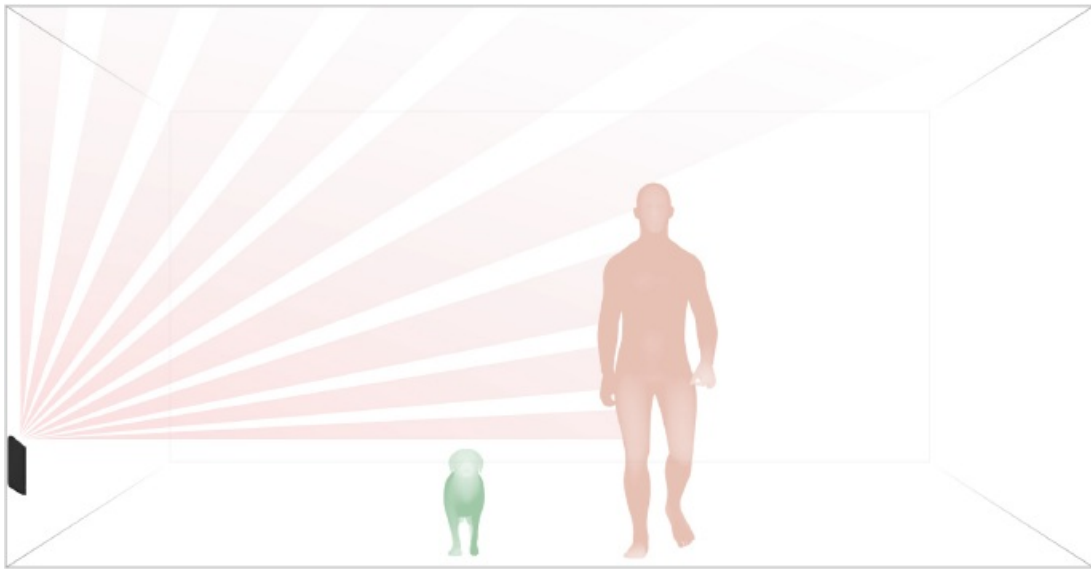
- The placement of a MotionProtect Curtain also depends on the distance to a hub and whether there are any obstacles between the devices that may hinder the radio signal, e.g., walls, floor deck, or large objects in the room.
- Check the signal strength at the placement location. If you have a signal level of one bar, there is no guarantee of the security system's stable operation. Take all necessary precautions to ensure maximum signal level. At least try moving the device—even 20 cm can make a difference.

If after moving the device still has a low or unstable signal strength, use a **radio signal range extender**

- The detector's light filter should be directed perpendicularly to the expected entry path to the room!
- Make sure that no furniture, home plants, vases, or decorative or glass structures are blocking the detector's field of view.
- We recommend installing the detector at a height of 2.4 m

Installing the detector at any other height will narrow the detection zone, affecting the quality of motion detection. Keep in mind that MotionProtect Curtain does not detect movement behind the glass. Therefore, do not install the detector in places where glassstructures may block its range of view, e.g., in places where an open window may obstruct the device's field of view.

Detector Installation

- Before installing the detector, make sure that you have chosen an appropriate location as indicated in this manual.

There are two options for installing MotionProtect Curtain

- directly to a surface
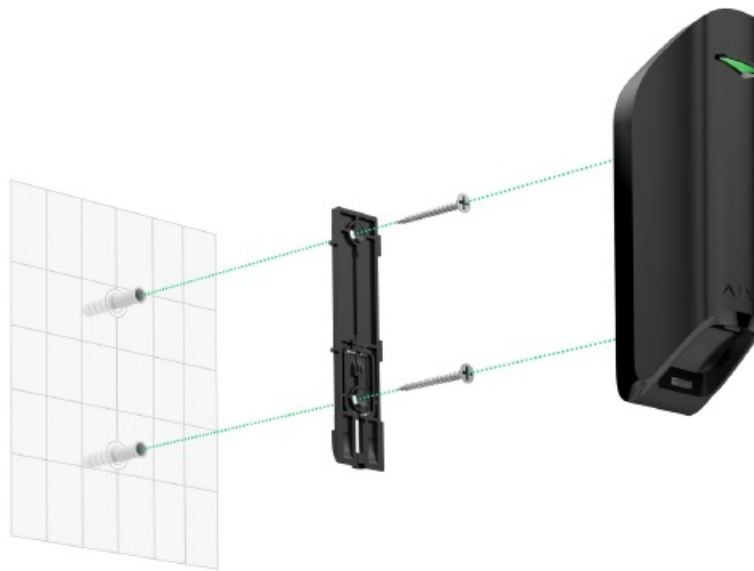
- to the included bracket.
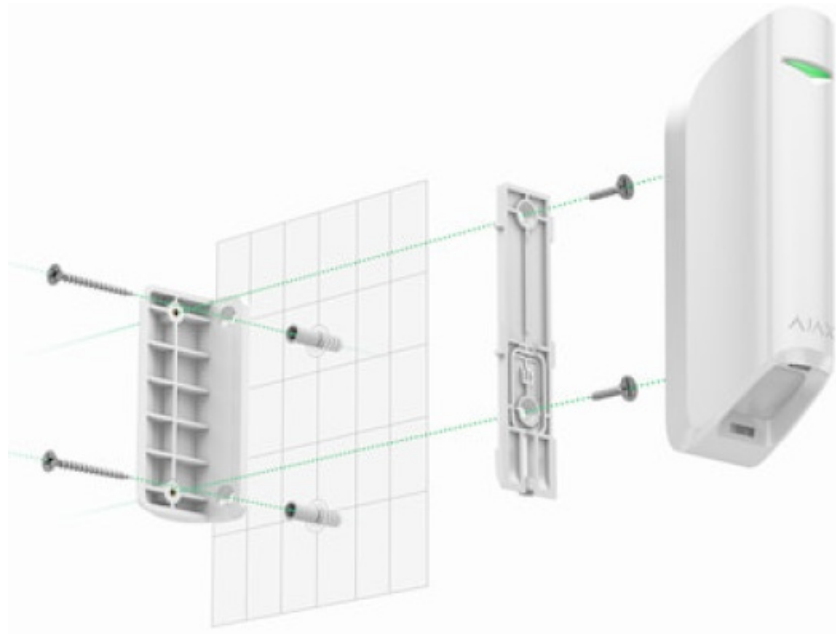
Installation procedure

1. Attach the SmartBracket panel or a bracket to the surface with the included screws or other equally reliable fasteners. Screw theSmartBracket panel onto the included bracket.
2. Attach the detector to the SmartBracket attachment panel.
3. Mount the detector on the SmartBracket attachment panel using Ascrew.

The double-sided adhesive tape should be used only for the temporary installation of the detector. It will dry out eventually, becoming unable to reliably hold the detector and possibly causing false alarms in the security system. The fall of the device may also result in its damage.
If the detector's LED fails to light up after the device is attached to the theSmartBracket, check the tamper status in the Ajax app and then check if it fits tightly onto the attachment panel. If you try to detach the detector from the surface or the panel, you will receive a notification.

Having installed the detector, run the **Detection Zone Test** In case of incorrect operation, the detector needs to be relocated.

Detector Care and Battery Replacement

Check the integrity of the MotionProtect Curtain detector regularly. Clean thedetector body from dust, spider webs, and other contaminations as they appear. Use a soft dry cloth suitable for equipment care.
Do not clean the detector with any substances containing alcohol, acetone, gasoline, or any other active solvent.
Wipe the lens carefully and gently—any scratches on the plastic may reduce the detector's sensitivity.
The pre-installed battery ensures up to 3 years of autonomous operation (at a polling interval of 3 min). If the detector battery is nearly depleted, these security systems will send a notification, and the LED will smoothly light up and go out when the detector detects any motion or if the tamper is activated.

- **How long Ajax devices operate on batteries, and what affects this Battery replacement**

Technical specifications

- **All technical specifications of MotionProtect Curtain Jeweller Compliance with standards**

Warranty

The warranty for the Limited Liability Company "Ajax SystemsManufacturing" products is valid for 2 years after the purchase and does not apply to the pre-installed battery.
If the device does not work correctly, contact our customer support first—in 50% of the cases, technical issues can be solved remotely!

- **The full text of the warranty**
- **User Agreement**
- Technical support: **support@ajax.systems**

Documents / Resources

MotionProtect Curtain user manual	**Ajax Systems MotionProtect Curtain Motion Detector** [pdf] User Manual MotionProtect Curtain Motion Detector, Curtain Motion Detector, Motion Detector, Detector

References

- ✉ **End user agreement - Ajax Systems**
- ✉ **Security system control panels | Ajax Systems**
- ✉ **MotionProtect Curtain — Curtain motion detector for indoor use**
- ✉ **Signal range extenders in the security system | Ajax Systems**
- ✉ **Alarm sirens for Ajax security systems**
- ✉ **uartBridge — Module for Ajax devices integration with third-party wireless alarms systems**
- ✉ **Software | Ajax Systems**
- ✉ **Warranty - Ajax Systems**
- ✉ **How battery charge is displayed in Ajax apps | Ajax Systems Support**
- ✉ **What is correlation signal processing and how it works | Ajax Systems Support**