Manuals+ — User Manuals Simplified.

LOREX Halo Series IP Wired 4K AI Smart Security Bullet Camera User Guide

LOREX

Halo SeriesLorex H14, H15, H16
E894AB, E894ABB, E895AB, E896AB, E896DD,
E896DDB
Quick Start Guide
lorex.com

Contents

Safety Precautions

- Follow all instructions for safe use and handling of the product.
- Use the camera within given temperature, humidity and voltage levels noted in the camera specifications.
- Do not disassemble the camera.
- Do not point the camera directly at the sun or a source of intense light.
- Periodic cleaning may be required. Use a damp cloth only. Do not use any harsh, chemical-based cleaners.
- The supplied cable is rated for surface mounting only (Non-UL). Cables for in-wall and floor-to-floor installations are sold separately (CMR type). These and other cables are available at **lorex.com**. [tis recommended to connect the camera to the NVR or an external PoE switch. If using a power adapter with this camera, a REGULATED power supply is REQUIRED (not included). Use of a norm regulated, non-conforming power supply can damage this product and voids the warranty.

Disclaimers

- Use the camera only with compatible Lorex recorders. For a full list, visit **lorex.com/compatibility**.
- Not intended for submersion in water. Installation in a sheltered location recommended.
- This camera includes an Auto Mechanical IR Cut Filter. When the camera changes between Day/Night viewing modes, an audible clicking noise may be heard from the camera. This clicking is normal, and indicates that the camera filter is working.
- Audio recording and/or face recording without consent is illegal in certain jurisdictions. Lorex Corporation assumes no liability for use of its products that does not conform with local laws.

What's Included

Note: Based on 1 camera
E894AB, E895AB, E896AB

4K Bullet Camera	Mounting Template	Anchors & Screws (4×)	Ethernet Extension Cable

Tools Needed
* Drill * Screwdriver
Perce use
E896DD, E896DDB

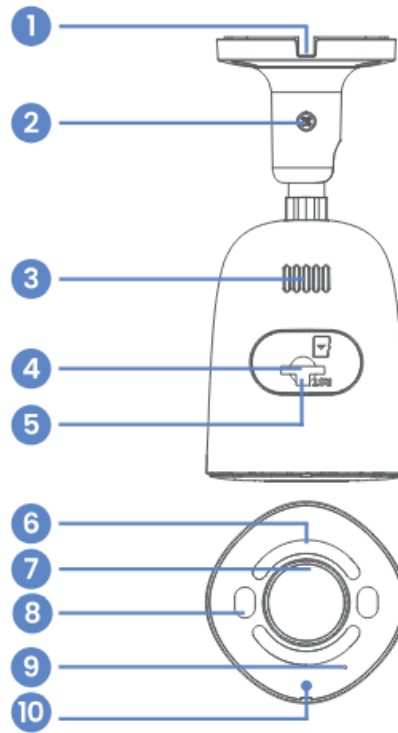|				
4K Dome Camera	Mounting Template	Anchors & Screws (4×)	Ethernet Extension Cable	Allen Key

Overview :

E894AB, E895AB, E896AB

1. Cable Notch
2. Adjustment Screw
3. Speaker & Siren
4. MicroSD Card Slot
5. Reset Button
6. Smart Security Lighting*
7. Camera Lens
8. Warning Lights
9. Microphone
10. IR (Infrared) Light

*Design differs per model
E896DD, E896DDB

1. Adjustment Screw
2. Smart Security Lighting
3. Microphone
4. IR (infrared) Light
5. Warning Lights
6. Camera Lens
7. Cable Notch
8. MicroSD Card Slot
9. Reset Button
10. Speaker & Siren
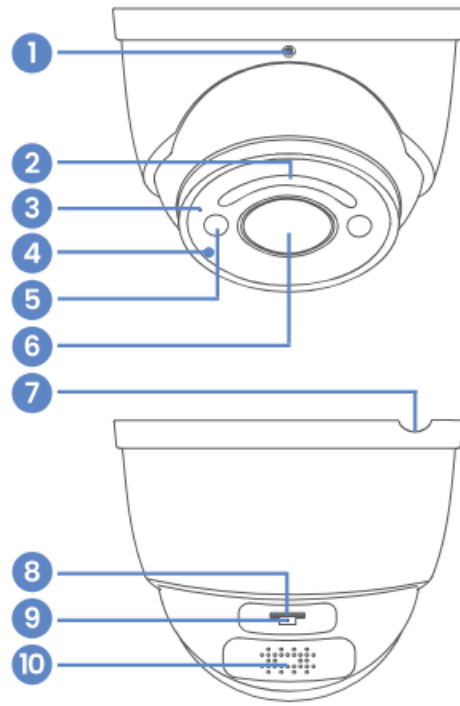
Camera Placement Tips

- Install the camera in a location that is difficult for thieves and vandals to reach.
- Secure cabling so that it is not exposed or easily cut.
- Point the camera where there is the least amount of obstructions (i.e. tree branches).
- Take into consideration what you want to monitor and where is the best coverage area.
- Place your camera close to the area of interest. The best position is 10ft/3m above ground, angled 15° down.
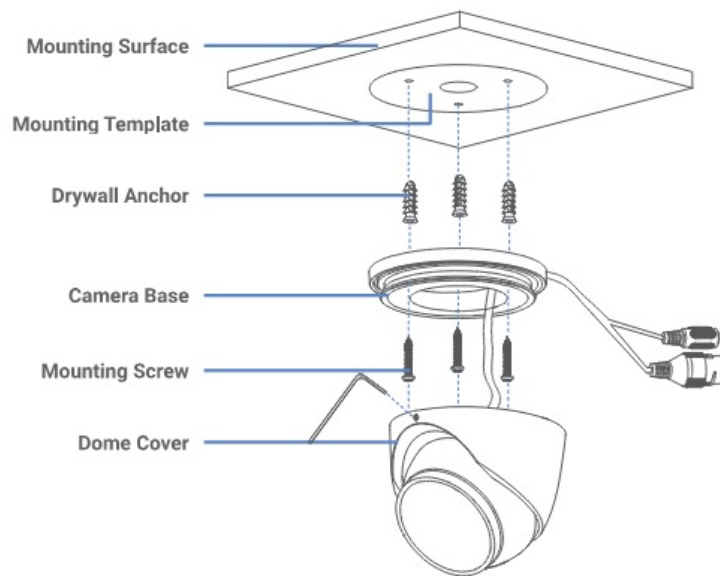
Camera Mounting

Test your camera prior to selecting a permanent mounting location, see page 17.

E894AB, E895AB, E896AB
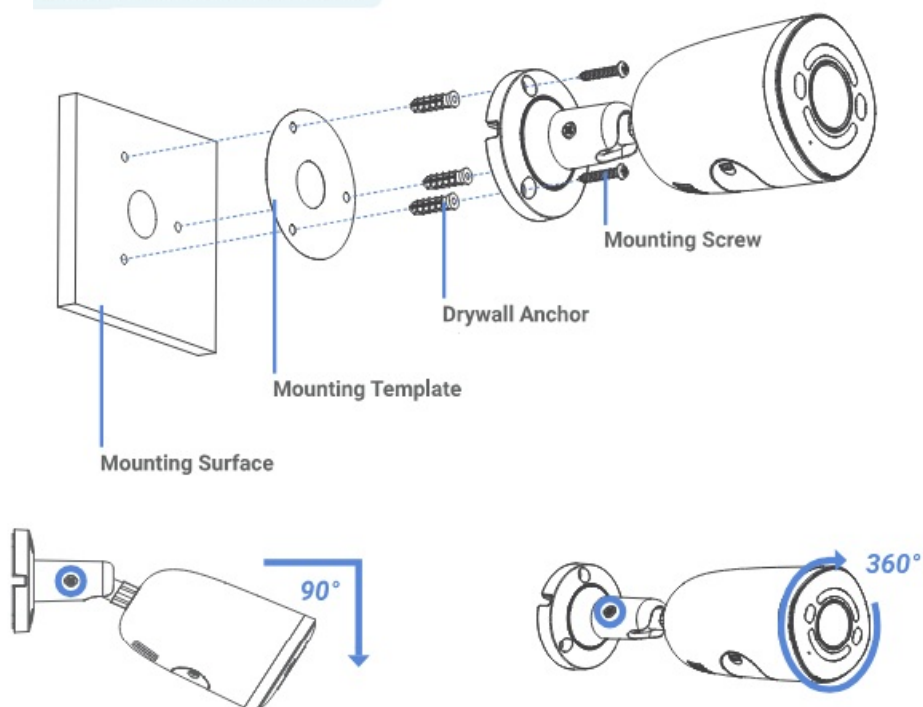
Mounting Screw

Drywall Anchor

Mounting Template

Mounting Surface

90°

360°

1. Use the mounting template to drill holes for screws, then insert the drywall anchors. Drill a hole for the camera's cable if you plan to run it through the mounting surface.
2. Use the screws to mount the camera base to the surface. If you are running cables along a wall/ceiling, make sure to pass the cable through the cable notch.
3. Feed the camera's cable through the camera base, then connect the cables (see page 17).
4. Loosen the adjustment screw and position your camera as needed, then tighten to secure it in place.
5. Remove the vinyl film from the camera lens once your installation is complete.

8009683 'a09683

1. Use the mounting template to drill holes for screws, then insert the drywall anchors. Drill a hole for the camera's cable if you plan to run it through the mounting surface.
2. Use the Allen key to loosen the camera's adjustment screw, then remove the dome cover from the camera base.
3. Use the screws to mount the camera base to the surface. If you are running cables along a wall/ceiling, make sure to pass the cable through the cable notch.
4. Feed the camera's cable through the camera base, then connect the cables (see page 17).
5. Angle your dome camera, then use the Allen key to tighten the dome cover firmly onto the camera base.
6. Remove the vinyl film from the camera lens once your installation is complete.

Camera Connection
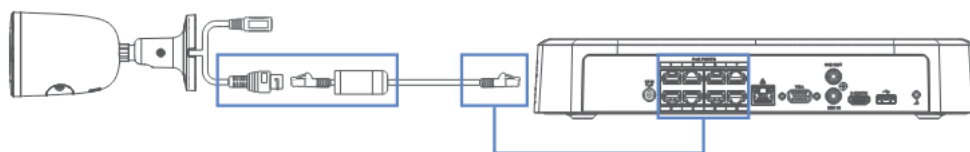
Connect your camera directly to your recorder using the camera's Ethernet extension cable.

Weather-resistant Cap

Twist the Ethernet extension cable's pre-attached weather-resistant cap securely onto your camera's Ethernet connector. If exposed to regular precipitation seal the cap with silicone and electrical tape.
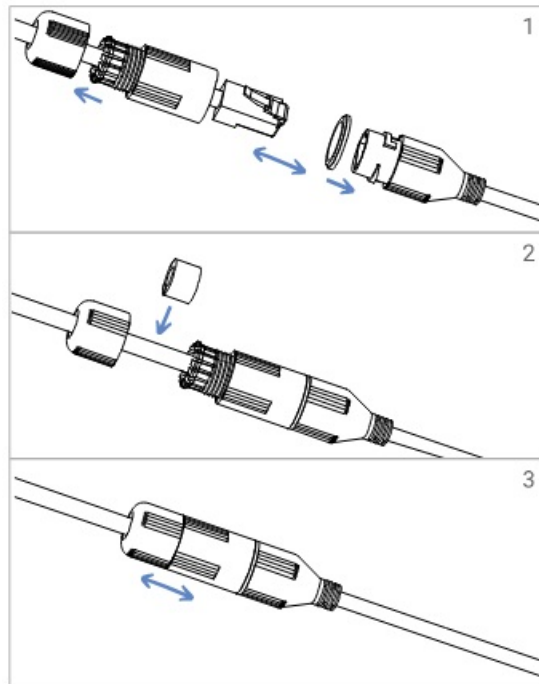
Need Help?
For related support, scan the QR code or visit:

help.lorex.com/E894AB

help.lorex.com/E895AB

help.lorex.com/E896AB

help.lorex.com/E896DD

Register Your Product
Please see our full Terms of Service and Limited Hardware Warranty Policy at: **lorex.com/warranty**

lorex.com
help.lorex.com

Documents / Resources

  LOREX	**LOREX Halo Series IP Wired 4K AI Smart Security Bullet Camera** [pdf] User Guide E89-Series, Halo Series IP Wired 4K AI Smart Security Bullet Camera, Halo Series, IP Wired 4K AI Smart Security Bullet Camera, Wired 4K AI Smart Security Bullet Camera, AI Smart Security Bullet Camera, Security Bullet Camera, Bullet Camera, Camera

References

- **User Manual**