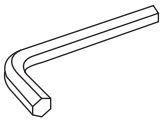# KELVIN
THE THERMOKENNEL

AURORA RUN

Thank you for purchasing a Aurora Run. We hope your Dog enjoys it. The product assembles with an Allen Key. In keeping with our approach we assume you have these, or can get it from someone you know. Rather than sending you a single use tool that ends up in the third drawer down collection of ancient relics.

Rosie & the Team

BEFORE YOU START

Before you start get a couple of things organised to make your life easy. The Aurora Run is constructed from Aluminum and is assembled with CSK Screws which require a 5mm Alan Key.
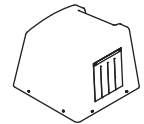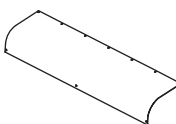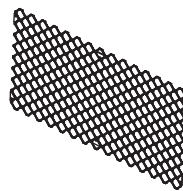
(1) 5 MM ALLEN KEY

---

https://kelvin.dog
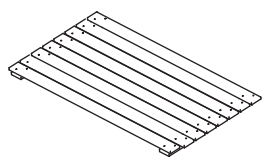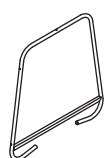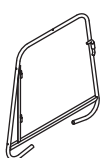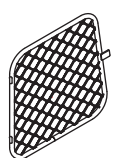
info@thermokennel.co.nz

Kelvin Thermokennel

kelvinthermokennel

FASTENERS

(H) M6x25 BUTTON HEAD SCREW x 17

(I) M6x12 BUTTON HEAD SCREW x 5

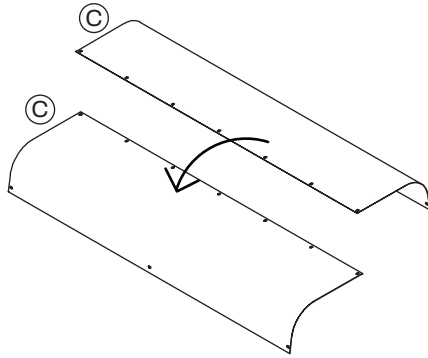(J) M6 FLAT WASHER x 26

(K) M6 SPRING WASHER x17

(L) M6 DOME NUT x 5

COMPONENTS

(A) THERMOKENNEL x 1

(B) KENNEL BACKET x 2

(C) ROOF PANEL x 2

(D) SIDE PANEL x 2

(E) TIMBER FLOOR x 1
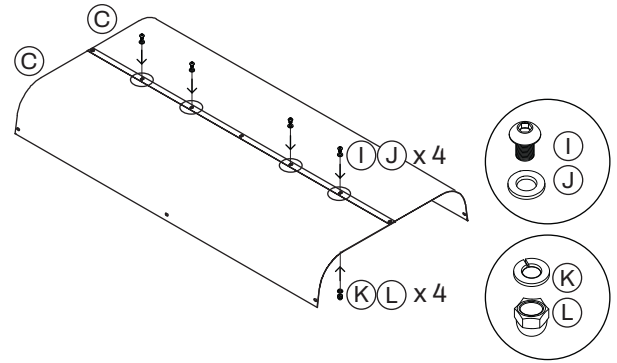
(F) ALLOY FRAME x 2

(G) DOOR FRAME x 1

(G) DOOR x 1
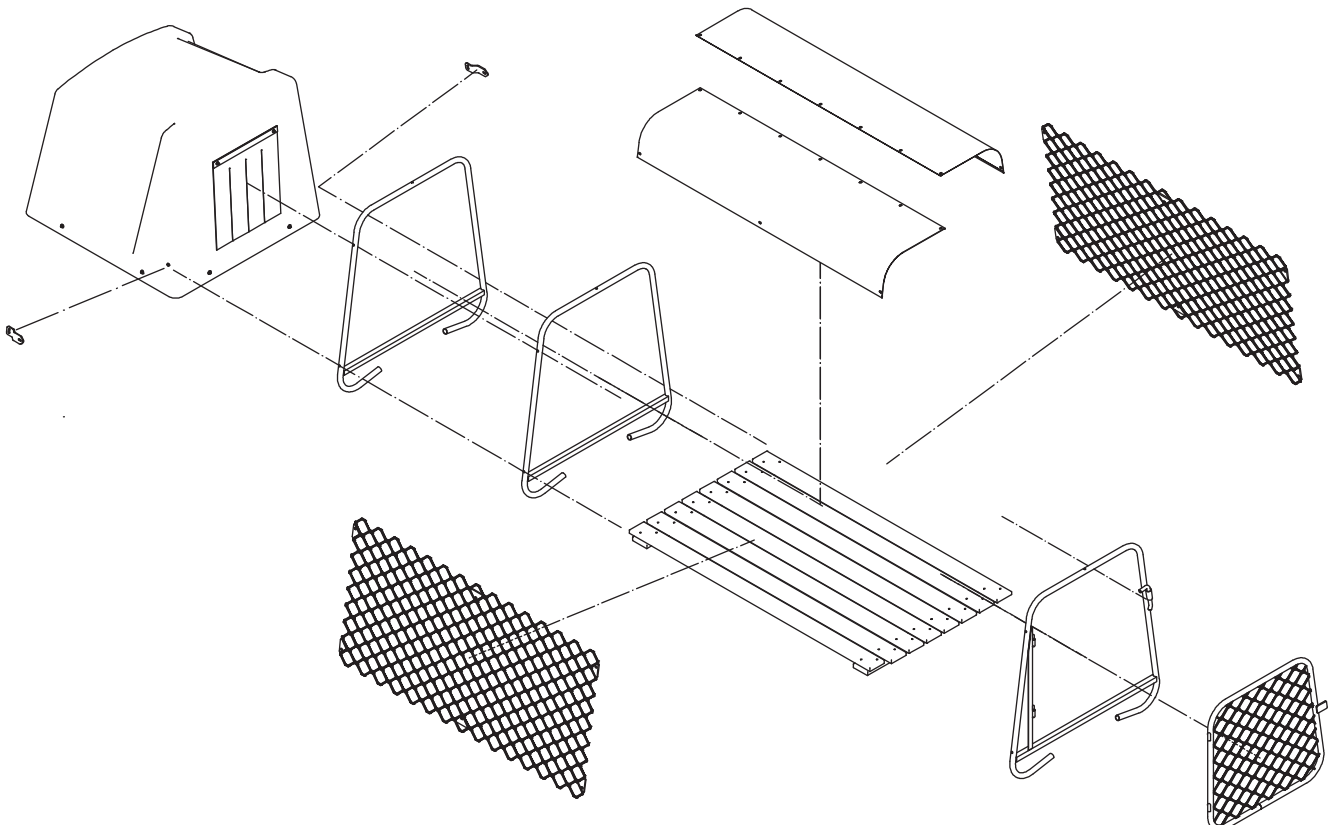
1 ASSEMBLE THE ROOF AND SET ASIDE
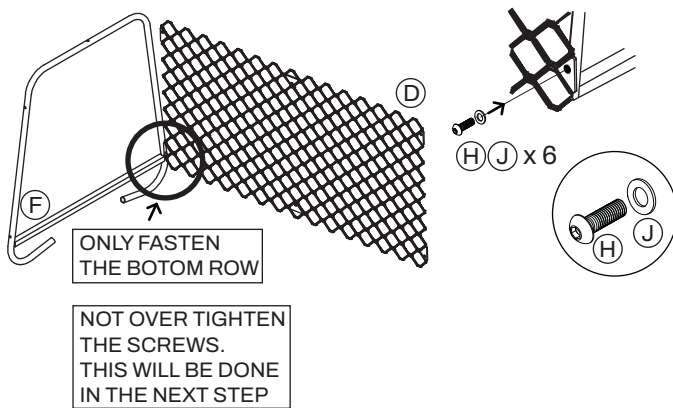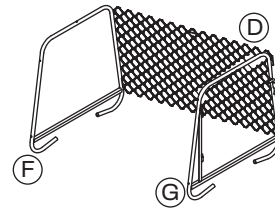
1.1 ALIGN PERFORATIONS

C

C

1.2 ASSEMBLE ROOF

C

C

(I)(J) x 4

(K)(L) x 4

I
J

K
L

2 ATTACH SIDE PANELS TO ALLOY FRAMES

2.1 FIRST PANEL AND ALLOY FRAME

D

F

(H)(J) x 6

H J

ONLY FASTEN THE BOTOM ROW

NOT OVER TIGHTEN THE SCREWS. THIS WILL BE DONE IN THE NEXT STEP

2.2 FIRST PANEL AND DOOR FRAME

D

F

G

2.3 FIRST PANEL AND SECOND FRAME

D

F

F

G
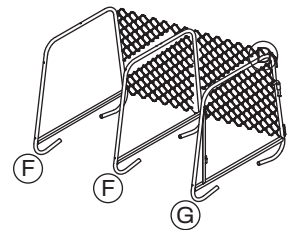
2.3 SECOND PANEL AND ALLOY FRAMES

D

F

F

G
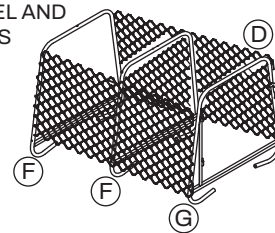
3 PLACE ASSEMBLED ROOF ON TO THE FRAMES

H J K

C

C

(H)(J)(K) x 9

D

F

D

F

G

TIGHTEN ALL SCREWS IN TO THE FRAME
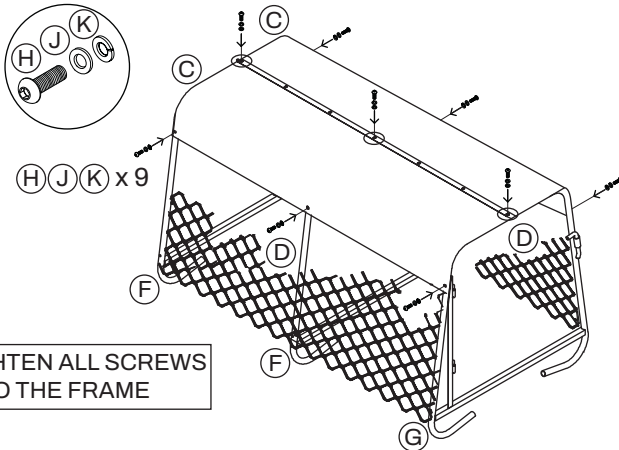
4 PLACE TIMBER FLOOR IN TO THE FRAME ON THE ANGLE WITH THE LONG BOARDS UP
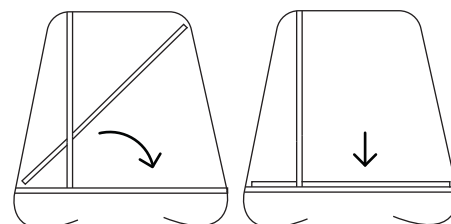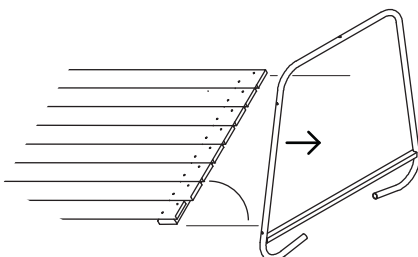
WHEN THE BOARDS GENERALLY ALIGN WITH THE ENDS, ROTATE TO FLAT AND ADJUST TO SUIT THE LENGHT

PRODUCT CODE: KR-AP-0-1
ASSEMBLY INSTRUCTIONS REVISION 1.0

KELVIN
THE THERMOKENNEL