





## **AES GLOBAL V1 EU Gate Intercoms User Guide**

Home » AES GLOBAL » AES GLOBAL V1 EU Gate Intercoms User Guide 12

## Contents

- 1 AES GLOBAL V1 EU Gate Intercoms
- **2 Product Usage Instructions**
- **3 Install Preparation**
- 4 Install
- 5 Download the programming/user app. 'AES
- **OPYN**
- **6 INTERCOM MAINTENANCE**
- **7 WARRANTY**
- 8 Alexa & Google Integration Instructions
- 9 FAC
- 10 Documents / Resources
  - 10.1 References



**AES GLOBAL V1 EU Gate Intercoms** 



## Specifications:

• Product Name: Opyn – IP Intercom with Integrated WiFi

• Maximum Distance: 100m (320ft) LAN (extendable with ethernet cable extender)

• Power Input: 24V AC-DC 2 AMP

• Power Consumption: Standby = 170mA, Max = 300mA

• IP Rating: IP54

## **Product Usage Instructions**

## **Install Preparation:**

- 1. Mount the antenna at a high point away from obstructions for optimal signal strength.
- 2. Do not cut or join the antenna cable.

## Site Wiring:

Ensure proper site wiring for optimal performance.

## WiFi Setup:

- Check WiFi signal strength at the installation site.
- Use LAN/CAT5 cable if WiFi signal is weak.

## **Power Supply:**

Use the recommended power cable to avoid technical issues.


## **Ingress Protection:**

Seal all entry points to prevent insect ingress and maintain IP54 rating.

## **Lightning Protection:**

Install surge protection in lightning-prone areas for power supply.

## **Install Preparation**

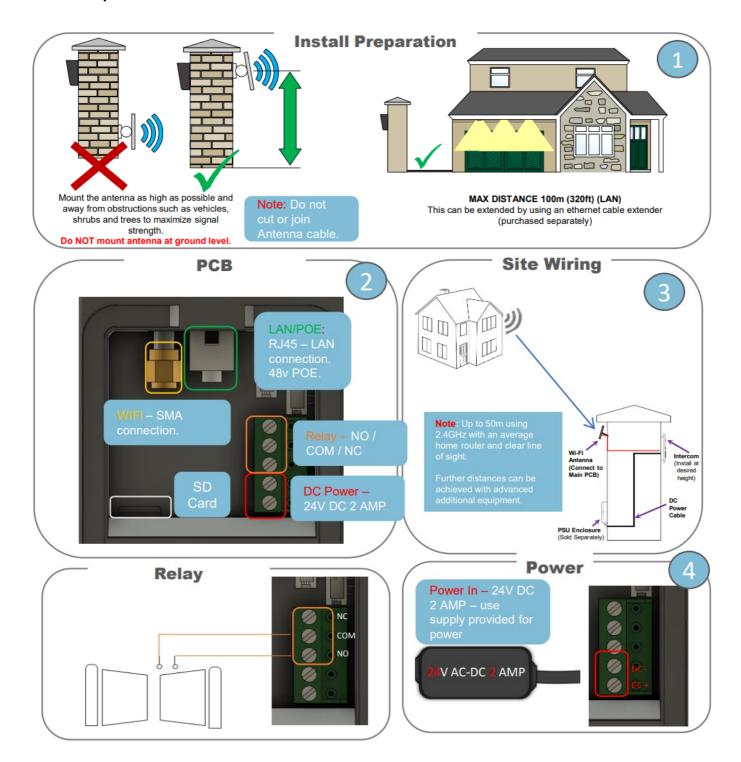

## STILL HAVING TROUBLE?

Find all of our support options such as Web Chat, Full Manuals, Customer Helpline and more on our website: **WWW.AESGLOBALONLINE.COM** 

## SITE SURVEY (WiFi)


• I have some WiFi signal at the gate with my phone! If not, STOP. Use LAN/CAT5 cable!



My WiFi Internet Security is WPA, WPA2, WPA3 or better.



• We recommend a minimum UPLOAD speed of 1.5 Mbps!

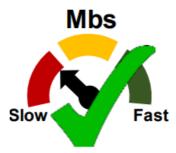

• The higher the upload speed the higher the quality of your video stream will be. However, you can adjust the video stream quality should you still find it dropping frames or a little slow.

## **POWER CABLE**

KEEP POWER SUPPLY AS CLOSE AS POSSIBLE.

TIP: Most technical calls received are due to installers using CAT5 or alarm cable to power the unit.

NEITHER are rated to carry enough power! (1.2amp peak)

## Please use the following cable:

- Up to 2 metres ( 6 feet ) Use minimum 0.5mm2 ( 18 gauge )
- Up to 4 metres (12 feet) Use minimum 0.75mm2 (16 gauge)
- Up to 8 metres (24 feet) Use minimum 1.0mm2 (14 gauge)

## **Power Consumption:**

- Standby = 170mA
- Max = 300mA

#### **INGRESS PROTECTION**

• We recommend sealing all entry holes for prevention of insects that can cause issues with a risk of shorting out

## components.

• To maintain the IP54 rating please follow the sealing instructions included. (also available online)

## LIGHTNING-PRONE AREAS MUST USE SURGE PROTECTION FOR POWER SUPPLY!

## NEED MORE ASSISTANCE?

- +44 (0)288 639 0693
- SCAN THIS QR CODE TO BE BROUGHT TO OUR RESOURCES PAGE.



• VIDEOS | HOW-TO GUIDES | MANUALS | QUICK START GUIDES

## Install




#### **EARTHING & INGRESS**

This product MUST be EARTHED in the following states in order to qualify for manufacturer's warranty FL, LA, MS, AR, OK, MO, AL, IL, KY, TN, IN, KS, SC, GA, IA, TX, OH, NC, NE, MD, WV, VA, DE


- We recommend sealing all entry holes for prevention of insects that can cause issues with a risk of shorting out components.
- To maintain the IP54 rating please follow the sealing instructions included. (also available online)

## Relay 2 and exit button

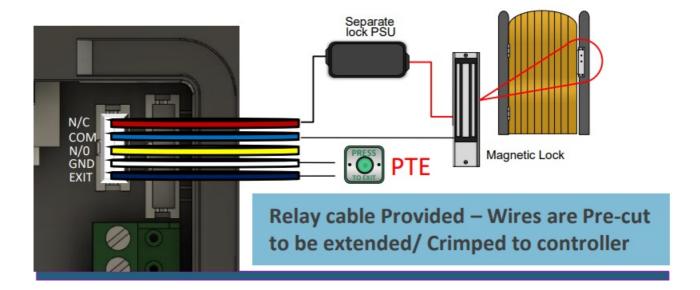

Download the programming/user app. 'AES OPYN'

Add Intercom to Device (WIFI)

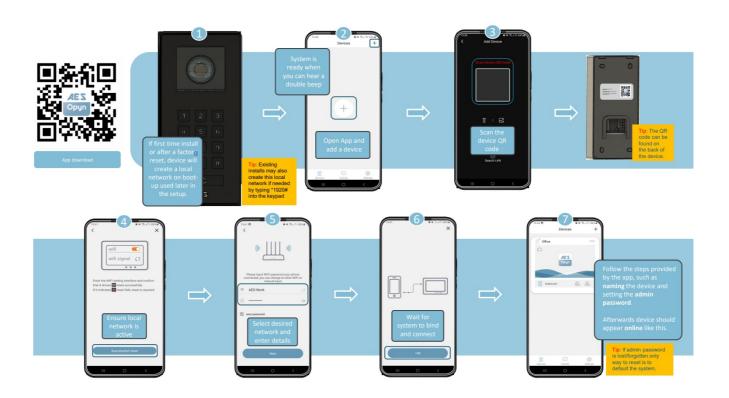


Add Intercom to Device (LAN)




## Add Keypad or QR Code



## **Test Keypad Code**

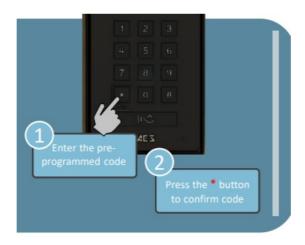

**Hold Open Relay** 

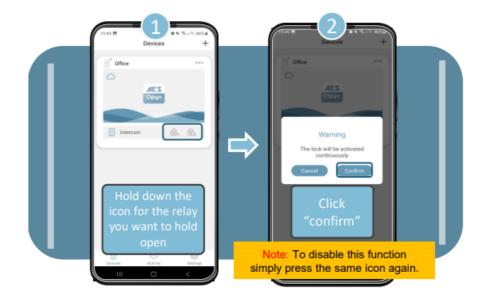

## **Change Unlock Duration**



## · Additional Android Settings

Note: Call may appear in one of two ways depending on phone type, software version, settings and more.

## • Answering on iOS (Apple)


**Note**: Call may appear in one of two ways depending on phone type, software version, settings and more.




**Note**: Slight differences will be seen between the Android and iOS app versions, any major differences will be highlighted in the screenshots below.



## **Sharing Device - Search Account**

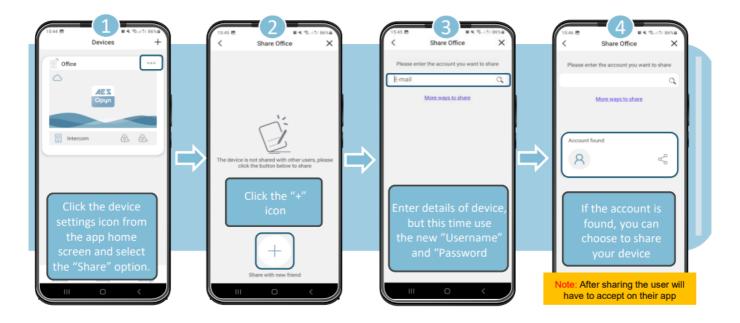

## Sharing Device - QR Code

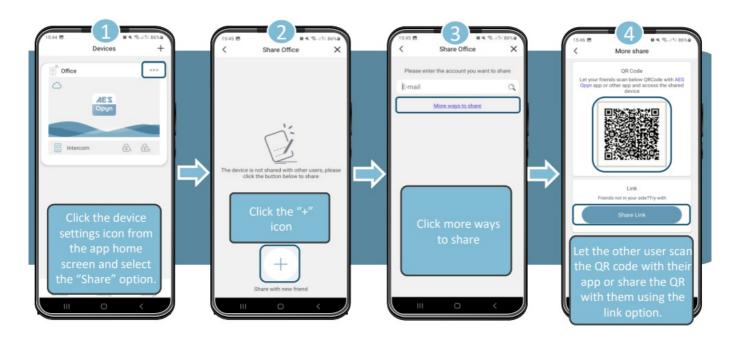

## **INTERCOM MAINTENANCE**

Bug ingress is a common issue in unit failures. Ensure that all components are sealed accordingly and check occasionally. (Do not open the panel in the rain / snow unless correctly equipped to keep the internals dry. Ensure

#### **ENVIRONMENTAL INFORMATION**

The equipment that you bought has required the extraction and use of natural resources for its production. It may contain hazardous substances for the environment. In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems. Those systems will reuse or recycle most of the materials of your end-of-life equipment. The crossed-bin symbol marked in your device invites you to use those systems. If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administration. You can also contact AES Global Ltd for more information on the environmental performances of our products.

#### WARRANTY

Bug ingress is a common issue in unit failures. Ensure that all components are sealed accordingly and check occasionally. (Do not open the panel in the rain / snow unless correctly equipped to keep the internals dry. Ensure the unit is securely closed after maintenance)

## Please note, by installing this product, you are accepting the following warranty terms:

- 1. The manufacturer's warranty is a "return to base" 2-year warranty from date of manufacture. This means that any suspected defective components or items are returned to the manufacturer's agent for investigation and diagnosis and returned at the cost of the customer.
- 2. The warranty does not cover, nor is the manufacturer or agent responsible for any of the following whatsoever: Storm damage, lightning or surge damage, flooding, accidental damage, vandalism or deliberate damage, unexplained corrosion or unusually harsh environments, failure of telephone networks, future un-interoperability between the product and network providers which cause malfunction due to changes implemented by the phone providers after manufacture of the product, or that which is outside of control of the manufacturer (e.g. 2G, 3G switch off, removal or inability to obtain VOLTE service), and damage due to not proper installation.
- 3. The manufacturer in no way accepts liability for any of the following incurred due to a product defect: Cost of attending site, inconveniences, labour rates, time lost, loss to or damage to property, security breaches, late payment clauses or breaches of any contracts between the installer and the client.
- 4. This is a profession install product only. The product is a component of an overall system. Therefore, it is the responsibility of the installer to certify the safety and compliance of the overall finished system. As soon as this product is fixed to another item, or connected to another third-party device, then the product has been modified, and compliance with local regulations in the country of install is strictly the responsibility of the installer.
- 5. Re-stocking fees may apply to items returned that are found to be non-defective. Complete units will also attract a re-stocking fee if returned for credit, regardless if a defect is discovered or not. Re-stocking fees may vary depending on the condition of the item being returned, and whether it can be determined as in brand new condition. The warranty terms do not entitle customers to an automatic full refund. For more details on returns procedures and re-stocking fees, contact the agent.
- 6. Items with physical signs of surge damage are not covered by warranty. Items with visible signs of surge damage will only be covered by warranty if photographic evidence is provided from site, showing surge protection has been installed. Full warranty terms and conditions available upon request to AES Technical Department.

#### Alexa & Google Integration Instructions

#### **Alexa**

- 1. Download the "AES Opyn" app via Google Play or App Store.
- 2. Launch the app and register an account (or login if you have already registered)
- 3. Connect and set up your AES Opyn device(s) via the app.
- 4. Search for the "AES Opyn" skill in the "Amazon Alexa" app skill directory.
- 5. Click "Enable" and proceed to link your AES Opyn and Amazon account.
- 6. Once successfully linked you can add your device(s) using the "discover devices" option on the Alexa app.
- 7. After adding the device(s) you can rename them to your liking and start using the voice control commands.

#### Google

- 1. Download the "AES Opyn" app via Google Play or App Store.
- 2. Launch the app and register an account (or login if you have already registered)
- 3. Connect and set up your AES Opyn device(s) via the app.
- 4. Search for the AES Opyn service in the "Google Home", home control service directory.
- 5. Connect/Link your AES Opyn and Google Home accounts.
- 6. The Opyn devices you had connected to your "Opyn" app should then automatically appear in your Google Home app.

#### Reset / Default Device

If you need to default the system back to factory settings this can be done by entering the reset code sequence into the keypad.

• Default Sequence: \*1590#

(Note: This code can be changed)

#### Unbind Device

If you wish to clear the device of all users and do not have access to their app you can delete them manually by entering the unbind code sequence into the keypad.

**Default Sequence:** \*1910# (Note: This will remove admin and all shared users)

#### · Change "Reset Code"

If you wish to change the reset code from its default value this can be done entering the following sequence into the keypad

Sequence: Sequence: XXXX#CODE# (XXXX = Current Code, CODE = New Code)

(Note: If you lose or forget this code a master reset on the system will be needed)

#### Create Local Network

If you need to configure WIFI again due to changing router or network password, but device is already "offline" then use this sequence to create local network used in setup.

**Sequence:** \*1920# (Note: This will not remove any programming)

Note: For legal reasons, telephone support by AES Global is for registered and qualified product installers only.

Home owners and end-users should contact their installer/dealer for direct product technical support.

#### Master Reset

# Press tamper alarm button 5 times within 3 seconds



If you need to default the system and do not know the reset code due to it being changed from its default value, you can use this process to fully reset the system.

**Note**: Performing this process will remove all current programming including saved users & access codes.

- Manufacturer: Advanced Electronic Solutions Global Ltd
- Address: Unit 4C, Kilcronagh Business Park, Cookstown, Co Tyrone, BT809HJ, United Kingdom

#### Complies with the following essential requirements for 2014/53/EU:

- EN 301 489-1 V2.2.0 (2017-03) (Electro-Magnetic compliance)
- EN 301-489-17 V3.2.0 (2017-03) (Electro-Magnetic compliance)
- EN 62479:2010 (Maximum output power)
- EN60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013 (Electrical Safety)
- Notified body: Shenzhen HUAK Testing Technology Co., Ltd.
- CNAS Number: L9589

This declaration is issued under the sole responsibility of the manufacturer.

· Signed by:

Paul Creighton, Managing Director.

• Date: 18th July 2024

FCC ID: 2ALPX-OPYNIPIBK

Grantee: Advanced Electronic Solutions Global Ltd

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

- 1. this device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

Output power listed is conducted. This device must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

#### **RF Exposure Statement**

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be colocated or operation in conjunction with any other antenna or transmitter

#### STILL HAVING TROUBLE?

Find all of our support options such as Web Chat, Full Manuals, Customer Helpline and more on our website:

#### WWW.AESGLOBALONLINE.COM

+44 (0)288 639 0693

#### **FAQ**

#### Q: What should I do if I encounter technical issues during installation?

A: Contact our support options including Web Chat, Full Manuals, and Customer Helpline on our website.

## Q: How should I connect the Opyn IP Intercom?

A: Attach the back box securely, connect wires, scan the QR code for device pairing, and secure the front to the back box using SMA for WiFi or RJ45 for LAN.

### Q: Why is it important to use the recommended power cable?

A: Using the correct power cable ensures proper power supply and prevents technical issues during operation.

#### **Documents / Resources**



AES GLOBAL V1 EU Gate Intercoms [pdf] User Guide V1 EU Gate Intercoms, V1 EU, Gate Intercoms, Intercoms

#### References

- Region | AES Global Ltd | AES Gate Intercoms | United Kingdom
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.