



# Altronix ALTV1224C4 AC/DC Dual Output Power Supply Installation Guide

[Home](#) » [Altronix](#) » Altronix ALTV1224C4 AC/DC Dual Output Power Supply Installation Guide 



More than just power.™  
ALTV1224C4  
AC/DC Dual Output Power Supply  
Installation Guide

## Contents

- [1 ALTV1224C4 AC/DC Dual Output Power Supply](#)
- [2 Overview:](#)
- [3 Specifications:](#)
- [4 Installation Instructions:](#)
- [5 Terminal Identification:](#)
- [6 Enclosure Dimensions:](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

## ALTV1224C4 AC/DC Dual Output Power Supply

**Rev. 062906**

Installing Company: \_\_\_\_\_

Service Rep. Name: \_\_\_\_\_

Address: \_\_\_\_\_

Phone #: \_\_\_\_\_

## Overview:

Altronix ALTV1224C4 AC/DC Dual Output Power Supply is designed to provide both 12VDC and 24VAC outputs where a combination of both AC and DC outputs is required. It provides two (2) 12VDC outputs with a total current of 2A and two (2) 24VAC outputs with a total current of 4A.

## **Specifications:**

### **Input:**

- 115VAC 50/60 Hz, 2A.

### **Output:**

- Four (4) individually fuse protected outputs:
  - Two (2) outputs @ 12VDC.
  - Two (2) outputs @ 24VAC.
- 2A supply current at 12VDC (Fig. 1).
- 4A supply current at 24VAC (Fig. 1).
- Output fuses are rated at:
  - AC fuses: 3.5A / 250VAC.
  - DC fuses: 1A / 250VAC.

### **Visual Indicators:**

- AC/DC power LED indicators.

### **Features:**

- Power ON/OFF switch.
- Spare fuses included.
- The unit maintains camera synchronization.
- Ease of installation saves time and eliminates costly labor.

Enclosure Dimensions (H x W x D): 13.5" x 13" x 3.25" (342.9mm x 330.2mm x 82.6mm).

## **Installation Instructions:**

1. Mount the unit in the desired location. Mark and predrill holes in the wall to line up with the top two keyholes in the enclosure. Install two upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two upper screws, level and secure. Mark the position of the lower two holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the two upper screws. Install the two lower screws and make sure to tighten all screws (Enclosure Dimensions, pg. 4). Secure enclosure to earth ground.
2. Slide switches SW1 and SW2 to the OFF position.
3. Connect the AC (115VAC 50/60Hz) to the two black and white flying leads of the transformers.
4. Measure output voltage before connecting devices. This helps avoid potential damage.
5. Connect devices to the output terminals using the following procedure: Connect DC cameras to terminals

marked [ + OUT1 –], [+ OUT2 –], carefully observing the correct polarity.

Connect AC cameras to terminals marked [F1 COM1, F2 COM2].

6. Slide switches SW1, and SW2 to the ON position.
7. The green LED on the circuit board will illuminate when power is present.
8. Upon completion of wiring, secure enclosure door with screws (supplied).

**WARNING:** To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture. This installation should be made by qualified service personnel and should conform to the National Electrical Code and all local codes.

#### **Fuse Replacement:**


1. Before replacing fuses slide switches SW1, and SW2 to the OFF position.
2. Replace AC outputs fuses F1 or F2 with fuses rated @ 3.5A/250VAC.

Replace DC outputs fuses F3 or F4 with fuses rated @ 1A/250VAC.

#### **Terminal Identification:**

Terminal Legend	Function/Description
XFMR IN	Low voltage AC input from two (2) 24VAC / 100VA transformers.
+ OUT1 –, + OUT2 –	DC power outputs.
F1 COM1, F2 COM2	AC power outputs.

Fig. 1

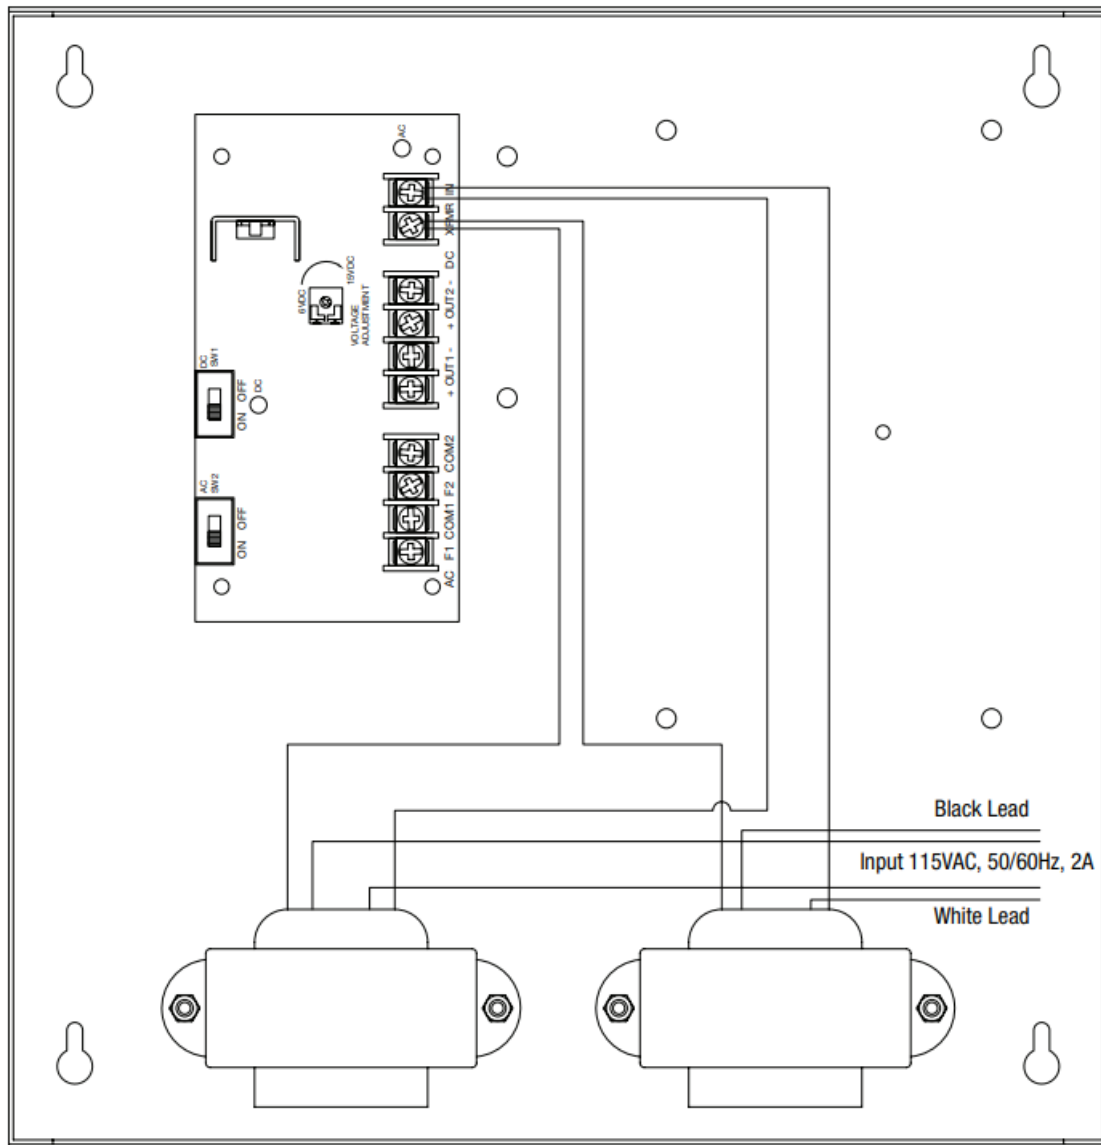

The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of an insulated **DANGEROUS VOLTAGE** within the product's enclosure that may be of sufficient magnitude to constitute an electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN




**CAUTION:** To reduce the risk of electric shock do not open the enclosure.

There are no user-serviceable parts inside.

Refer servicing to qualified service personnel.

### Enclosure Dimensions:

13.5" x 13" x 3.25" (342.9mm x 330.2mm x 82.6mm)

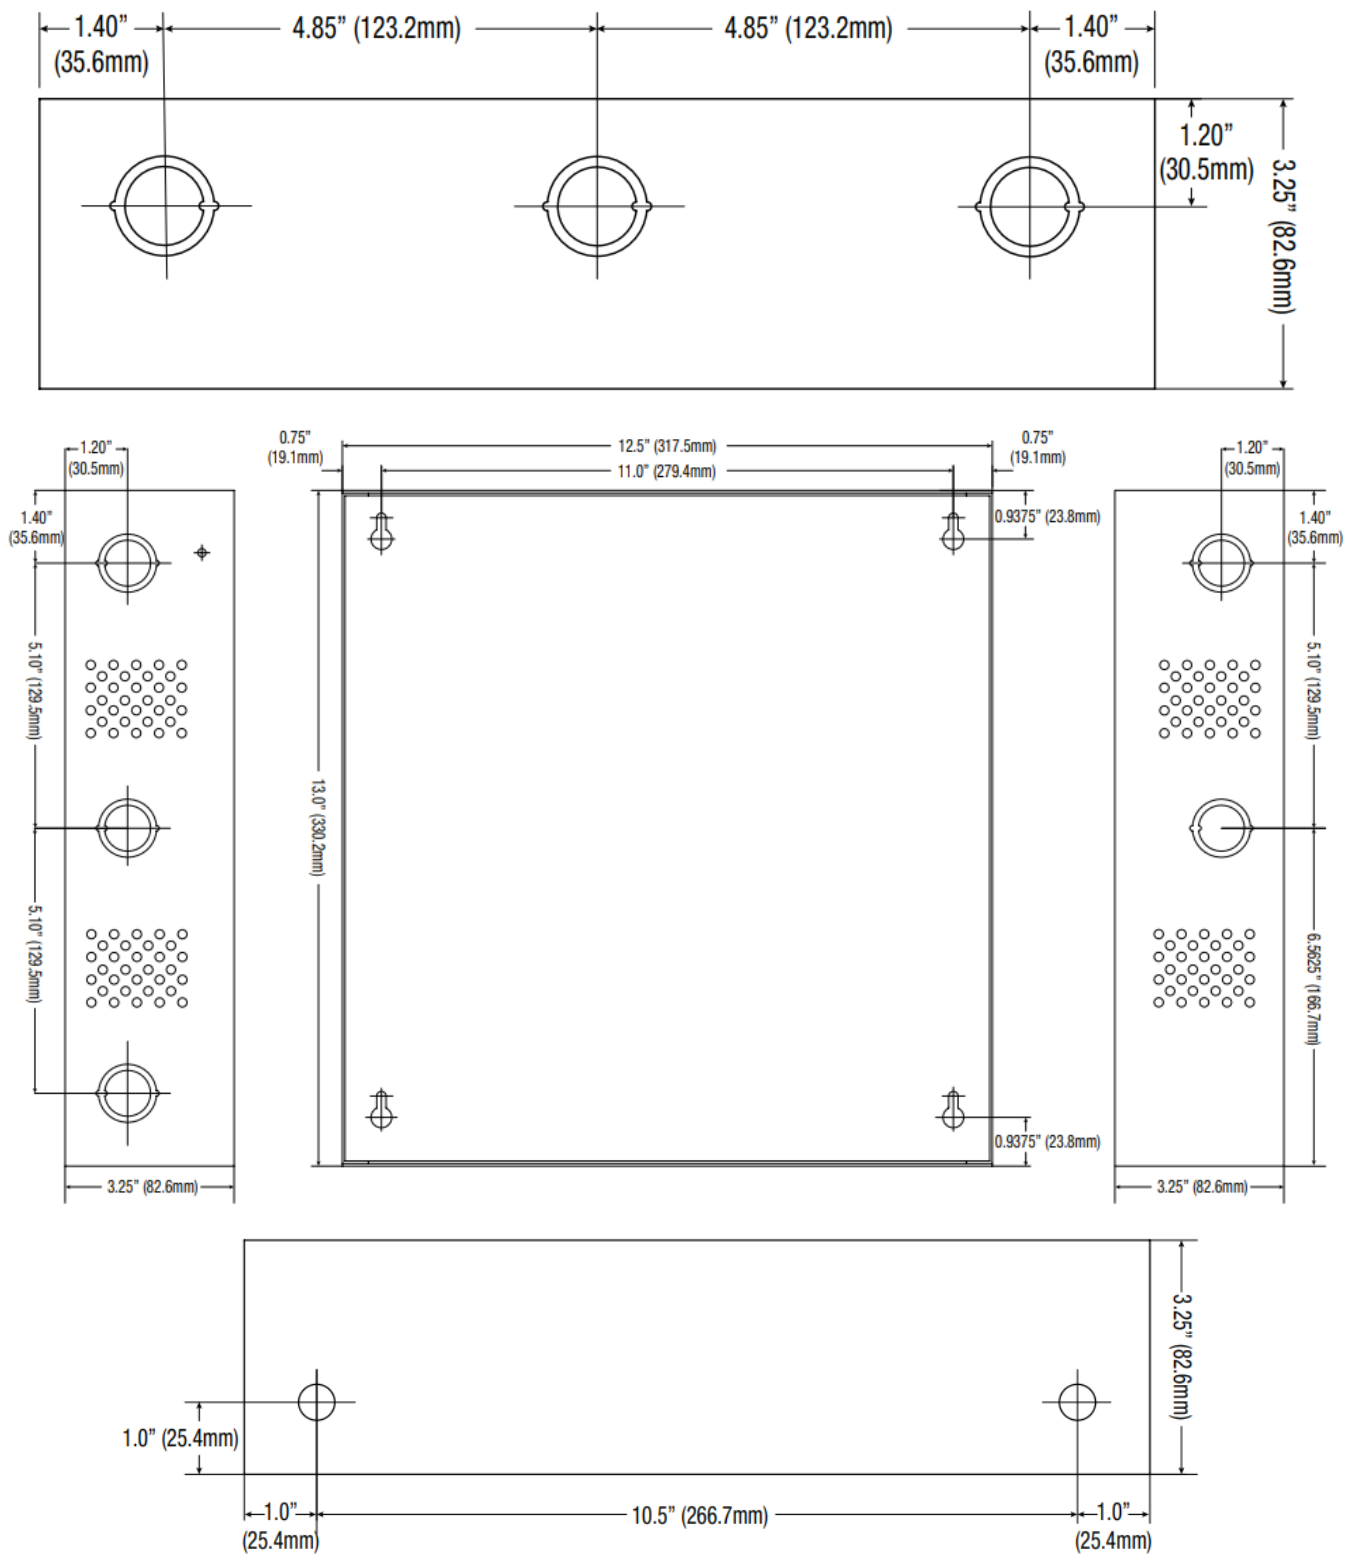

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | 718-567-8181 | fax: 718-567-9056

website: [www.altronix.com](http://www.altronix.com)

e-mail: [info@altronix.com](mailto:info@altronix.com)

Lifetime Warranty


IIALTV1224C4 J26U



**MEMBER**

ALTV1224C4 Installation Guide

## Documents / Resources

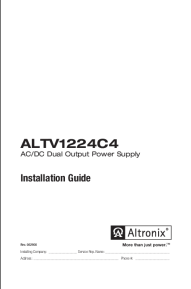	<p><a href="#">Altronix ALTV1224C4 AC/DC Dual Output Power Supply</a> [pdf] Installation Guide</p> <p>ALTV1224C4 AC DC Dual Output Power Supply, ALTV1224C4, Dual Output Power Supply, Out put Power Supply, Power Supply</p>
---	---

## References

-  [Altronix Home](#)

Manuals+