

# Altronix T2AGK78V 8 Door Kit with Fused Outputs Installation Guide

## Contents

- [1 T2AGK78V 8 Door Kit with Fused Outputs](#)
- [2 Altronix/AMAG M4000 Kits Models Include:](#)
  - [2.1 Installation Guide](#)
  - [2.2 Overview:](#)
  - [2.3 Configuration Chart:](#)
  - [2.4 Installation Instructions:](#)
  - [2.5 Hardware:](#)
  - [2.6 T2AGK78\(D\)V: Configuration of AMAG M4000 Modules:](#)
  - [2.7 Enclosure Dimensions \(H x W x D approximate\): 27.25" x 21.75" x 6.5" \(692.2mm x 552.5mm x 165.1mm\)](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)
- [4 Related Posts](#)

## T2AGK78V 8 Door Kit with Fused Outputs



Access & Power Integration

### Altronix/AMAG M4000 Kits Models Include:

#### T2AGK78V

##### 8 Door Kit with Fused Outputs

##### Fully assembled kit includes:

- Trove2 enclosure with TAG2 Altronix/AMAG backplane
- One (1) AL1024XB2V – Power Supply/Charger
- One (1) ACM8 – Fused Access Power Controller
- One (1) VR6 – Voltage Regulator
- One (1) PDS8 – Dual Input Fused Power Distribution Module

#### T2AGK78V

##### 8 Door Kit with Fused Outputs

##### Fully assembled kit includes:

- Trove2 enclosure with TAG2 Altronix/AMAG backplane
- One (1) AL1024XB2V – Power Supply/Charger
- One (1) ACM8 – Fused Access Power Controller
- One (1) VR6 – Voltage Regulator
- One (1) PDS8 – Dual Input Fused Power Distribution Module

## Installation Guide

All registered trademarks are property of their respective owners. More than just power.™ Rev. 050322

Installing Company: \_\_\_\_\_ Service Rep. Name: \_\_\_\_\_  
Address: \_\_\_\_\_  
Phone #: \_\_\_\_\_

### Overview:

Altronix T2AGK78V and T2AGK78V Trove AMAG kits are pre-assembled and consist of Trove2AG2 enclosure/backplane with factory installed Altronix power supply/charger and sub-assemblies. These kits also accommodate up to two (2) AMAG M4000 modules for up to eight (8) doors in a single enclosure.

### Configuration Chart:

Altronix Model Number	220VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Maximum Supply Current for Main Output on Power Supply board and ACM8(CB) Access Power Controllers' outputs	Nominal DC Output Voltage Range (VDC)	Fail-Safe/ Fail-Secure Outputs	Additional Fused Outputs	ACM8 and ACM8CB Board Input Fuse Rating	ACM8 Board Output Fuse Rating	ACM8CB Board Output PTC Rating	PDS8 Board Input Fuse Rating	PDS8 Board Output Fuse Rating	PDS8CB Board Input PTC Rating	PDS8CB Board Output Fuse Rating
T2AGK78V	2.5	5A/ 250V	15A/ 32V	24VDC @ 9.7A	20.17- 26.4	8	8	10A/ 250V	2.5A/ 250V	–	10A/ 32V	3A/ 32V	–	–
T2AGK78DV										2.5A	–	–	9A	2.5A


### Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.
2. Mark and predrill holes in the wall to line up with the top three keyholes in the enclosure. Install three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the three upper screws, level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the three upper screws. Install the three lower screws and make sure to tighten all screws.
3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge.

Slide the tamper switch bracket onto the edge of the enclosure, approximately 2" from the right side (Fig. 1, pg. 2). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device.

Fig. 1

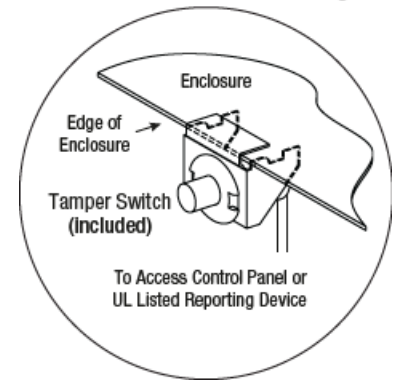


To activate alarm signal open the door of the enclosure.

4. Mount AMAG M4000 modules to TAG2 backplane, refer to page 3. 5. Refer to the XBV Power Supply/Charger Installation Guide for

AL1024XB2V and corresponding Sub-Assembly Installation Guides for the following models: ACM8(CB), PDS8(CB) and VR6 for further installation instructions.

### Hardware:



### T2AGK78(D)V: Configuration of AMAG M4000 Modules:



1. Align the AMAG M4000 modules on the backplane to match the boards' mounting holes with corresponding pems.

2. Fasten spacers (provided) onto metal pems (Fig. 2a, pg. 3).


3. Mount AMAG M4000 modules to spacers utilizing pan head screws (provided) (Fig. 2a, pg. 3).

Note: AMAG M4000 modules have one (1) screen. Please make sure that they are mounted correctly, as shown in Fig. 2 below.

4. Fasten TAG2 backplane to Trove2 enclosure utilizing hardware (provided).

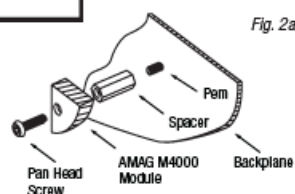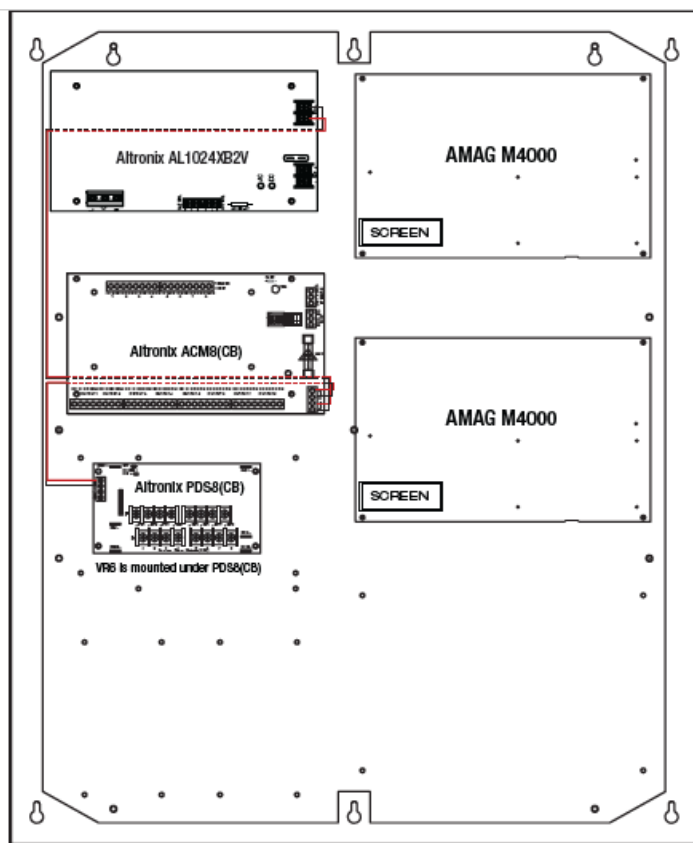


**Enclosure Dimensions (H x W x D approximate):**  
27.25" x 21.75" x 6.5" (692.2mm x 552.5mm x 165.1mm)

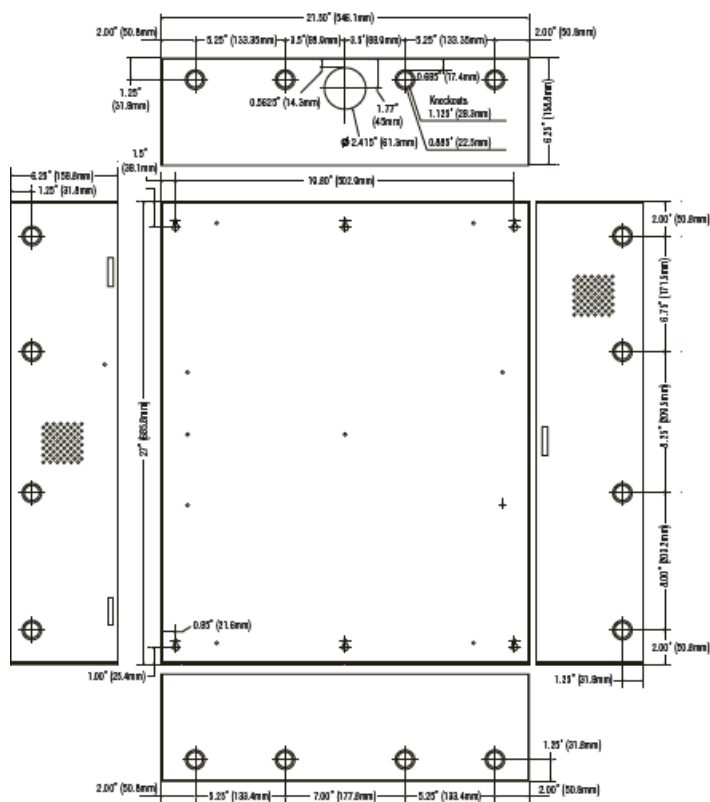

Altronix is not responsible for any typographical errors.  
140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056  
web site: [www.altronix.com](http://www.altronix.com) | e-mail: [info@altronix.com](mailto:info@altronix.com) | Lifetime Warranty  
IIT2AGK78(D)

Documents / Resources

	<p><a href="#">Altronix T2AGK78V 8 Door Kit with Fused Outputs</a> [pdf] Installation Guide</p> <p>T2AGK78V 8 Door Kit with Fused Outputs, T2AGK78V, 8 Door Kit with Fused Outputs, Kit with Fused Outputs, Fused Outputs</p>
---	---

References

-  [Altronix Home](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.