



# Altronix T2HWK78V 8 Door Kit with Fused Outputs Installation Guide

[Home](#) » [Altronix](#) » Altronix T2HWK78V 8 Door Kit with Fused Outputs Installation Guide 

Altronix T2HWK78V 8 Door Kit with Fused Outputs



## Contents

- [1 Models Include](#)
- [2 Installation Guide](#)
- [3 Overview](#)
- [4 Configuration Chart](#)
- [5 Installation Instructions](#)
- [6 Hardware](#)
- [7 Customer Support](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

## Models Include

### T2HWK78V 8 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove2 enclosure with THW2 Altronix/Honeywell backplane
- One (1) AL1024XB2V – Power Supply/Charger

- One (1) ACM8 – Fused Access Power Controller
- One (1) VR6 – Voltage Regulator
- One (1) PDS8 – Dual Input Fused Power Distribution Module

### **T3HWK7516V 16 Door Kit with Fused Outputs**

Fully assembled kit includes:

- Trove3 enclosure with THW3 Altronix/Honeywell backplane and THWD2 Honeywell door backplane
- One (1) AL1024XB2V – Power Supply/Charger
- One (1) AL1012XB220 – Power Supply/Charger
- Two (2) ACM8 – Fused Access Power Controllers
- One (1) PD8UL – Fused Power Distribution Module
- One (1) RSB2\* – Rocker Switch Bracket with Two (2) Rocker Switches

### **T2HWK78DV 8 Door Kit with PTC Outputs**

Fully assembled kit includes:

- Trove2 enclosure with THW2 Altronix/Honeywell backplane
- One (1) AL1024XB2V – Power Supply/Charger
- One (1) ACM8CB – PTC Access Power Controller
- One (1) VR6 – Voltage Regulator
- One (1) PDS8CB – Dual Input PTC Power Distribution Module

### **T3HWK7516DV 16 Door Kit with PTC Outputs**

Fully assembled kit includes:

- Trove3 enclosure with THW3 Altronix/Honeywell backplane and THWD2 Honeywell door backplane
- One (1) AL1024XB2V – Power Supply/Charger
- One (1) AL1012XB220 – Power Supply/Charger
- Two (2) ACM8CB – PTC Access Power Controllers
- One (1) PD8ULCB – PTC Power Distribution Module
- One (1) RSB2\* – Rocker Switch Bracket with Two (2) Rocker Switches

## **Installation Guide**

All registered trademarks are property of their respective owners.

### **Overview**

Altronix Trove Honeywell kits are pre-assembled and consist of Trove enclosures/backplanes with factory installed Altronix power supply/chargers and sub-assemblies. All kits accommodate a variety of Honeywell modules for up to eight (T2HWK78(D)) or sixteen (T3HWK7516(D)) doors in a single enclosure.

### **Configuration Chart**

Altronix Model Number	220V AC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Maximum Supply Current for Main Outputs on Power Supply board and ACM8(CB) Access Power Controllers' outputs	Nominal DC Output Voltage Range (VDC)	Fail-Safe/ Fail-Secure or Dry Form "C" Outputs	Additional Fuse d (PTC) Outputs	ACM8(CB) Board Input Fuse Rating	ACM8(CB) Board Output Fuse (PTC) Rating	PDS8(CB) Board Input Fuse (PTC) Rating	PDS8(CB) Board Output Fuse (PTC) Rating	PD8UL(CB) Board Output Fuse (PTC) Rating
T2HWK78V	2.5	5A/250V	15A/32V	24VDC @ 9.7A	20.17-26.4	8	8	10A/250V	2.5A / 250V	10A/32V	3A/32V	—
T2HWK78DV									2.5A	9A	2.5A	—
T3HWK7516V	3.8		15A/32V	24VDC @ 9.4A	20.17-26.4	16	8	10A/250V	2.5A / 250V	—	—	3.5A/250V
T3HWK7516DV									2.5A			2.5A

## Installation Instructions

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

1. Remove backplane from enclosure. Do not discard hardware.


If your application requires a raised backplane, re-mount it using metal spacers and screws (provided).

2. Mark and predrill holes in the wall to line up with the top two/three keyholes in the enclosure. Install two/three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two/three upper screws; level and secure.

Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the two/three upper screws. Install the three lower screws and make sure to tighten all screws.

3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (Fig. 1, pg. 2). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
4. Mount Honeywell modules to backplane(s), refer to pages 3, 4, 5.
5. Refer to the XBV Power Supply/Charger Installation Guide for AL1024XB2V and AL1012XB220 and corresponding Sub-Assembly Installation Guides for ACM8(CB), PDS8(CB), VR6 and PD8UL(CB) for further

*Fig. 1*

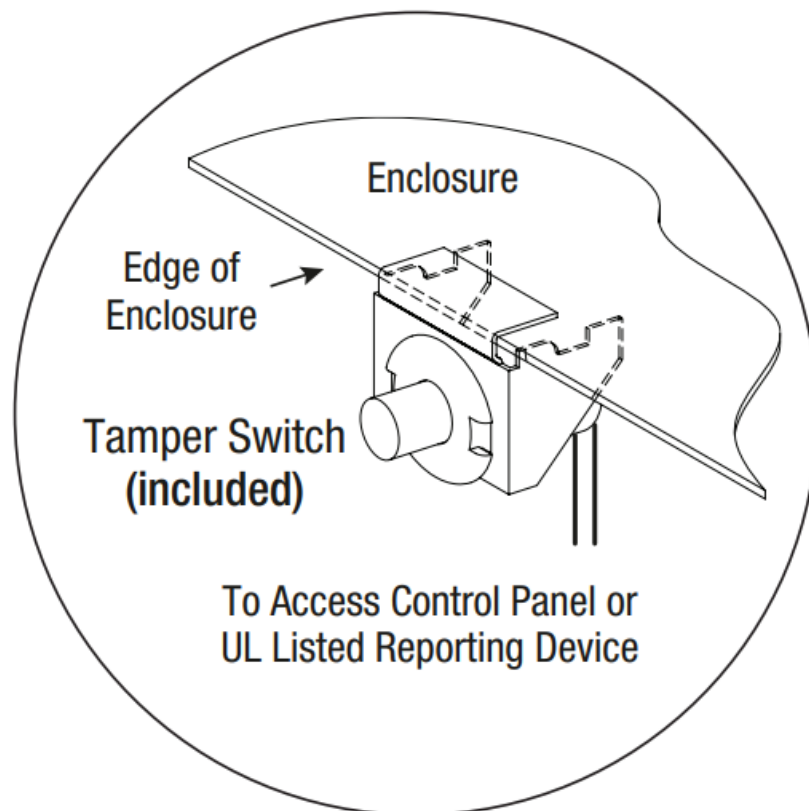


installation instructions.

## Hardware

- Nylon Spacer



- 5/16" Pan Head Screw

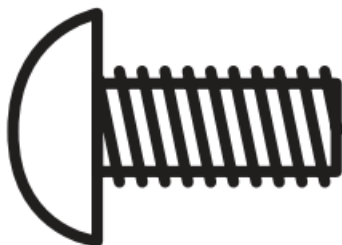

- Lock Nut




## T2HWK78(D)V: Installation Instructions for Honeywell Access Controllers


1. Fasten spacers (provided) into Pem configuration (A) or (B) of backplane (Fig. 2, pg. 3).
2. Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 2a, pg. 3).
3. Mount backplane to enclosure with hardware.

### Honeywell ProWatch/Win Pak Access Controller Position Chart for the Following Models:

Honeywell Board	Pem Mounting
3200 Series or WIN-PAK Series	<b>A</b>
PW6K1ICE or PW6K1R1E	<b>B</b>

Fig. 2

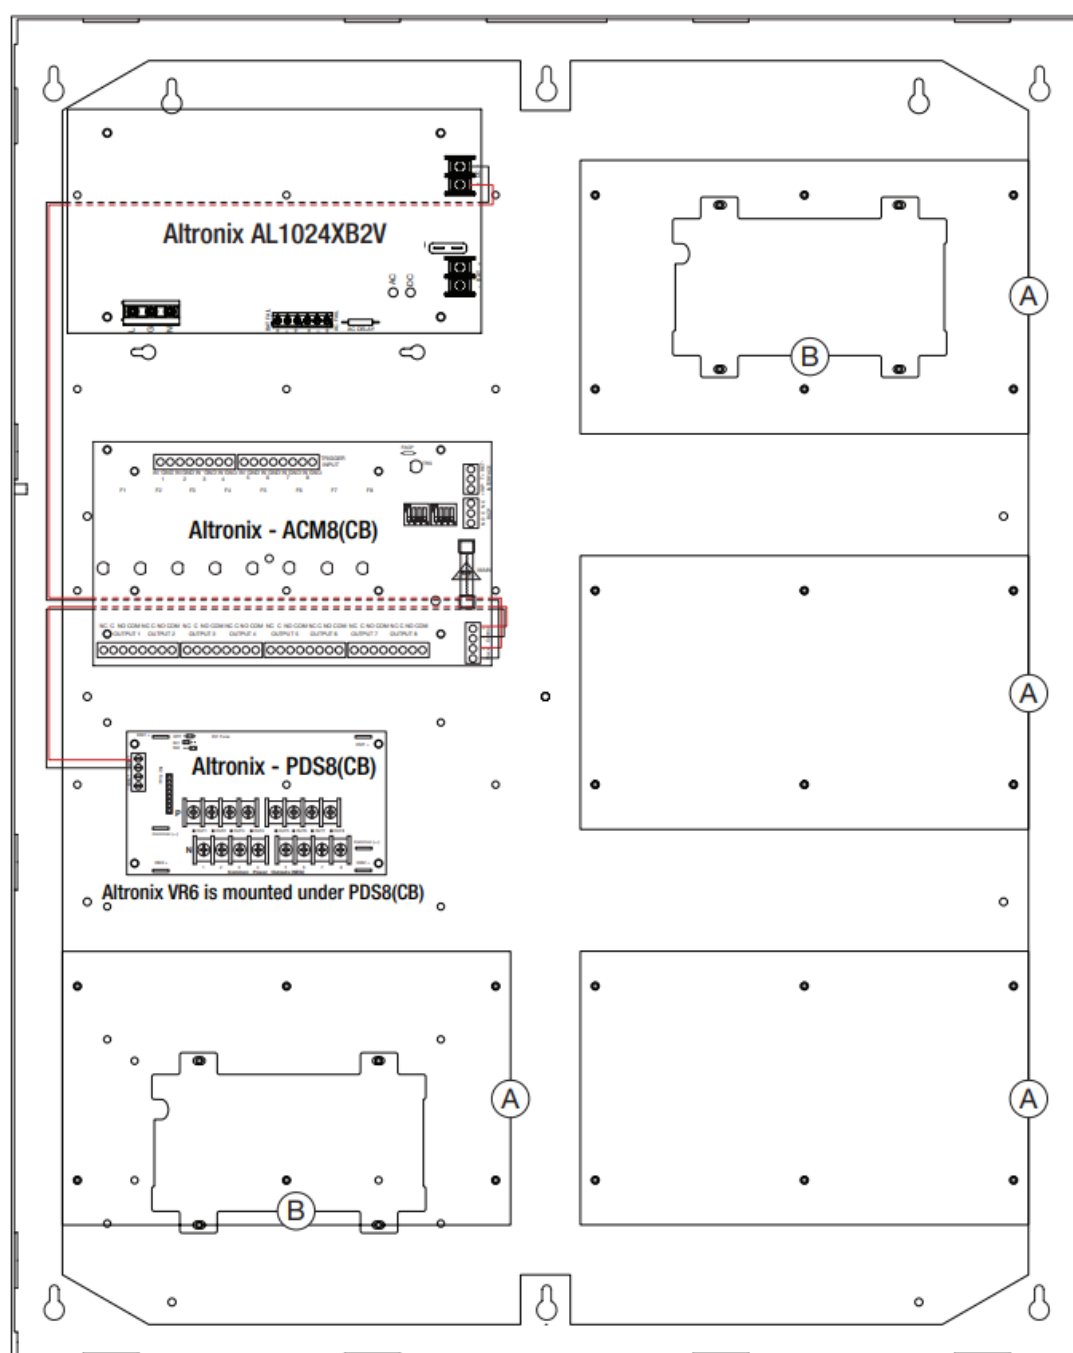

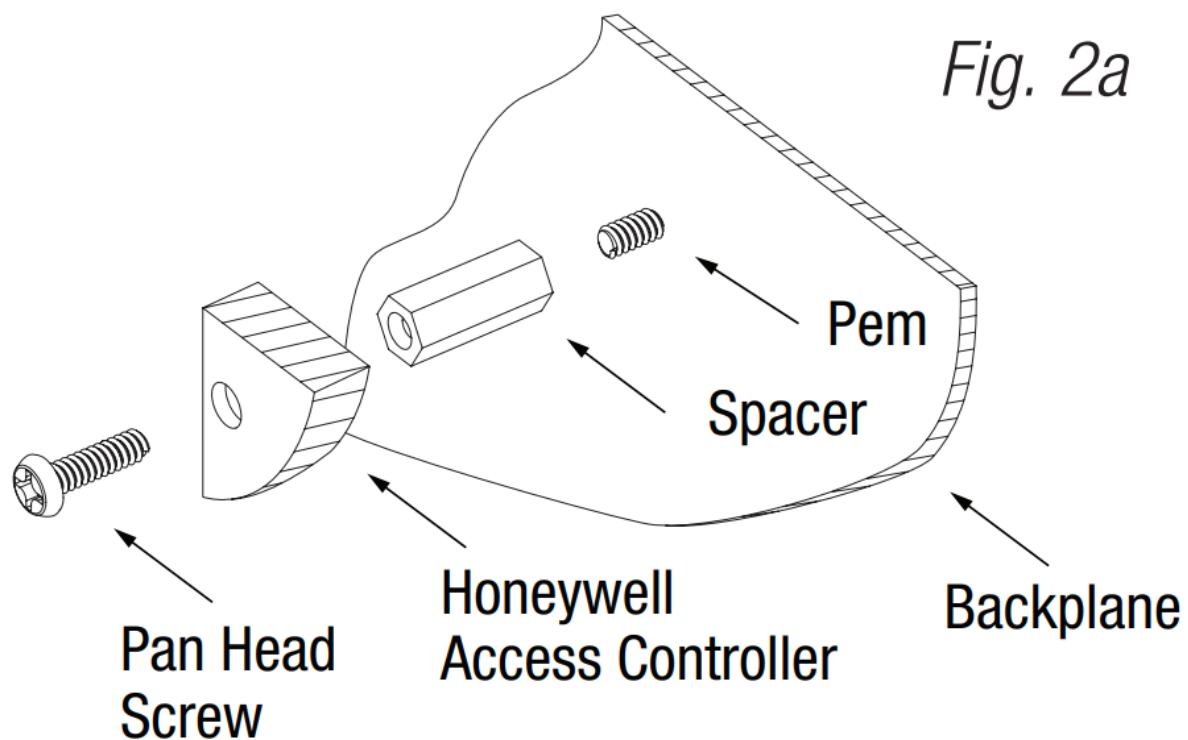


**T3HWK7516(D)V: Installation Instructions for Honeywell Access Controllers**

1. Fasten spacers (provided) into Pem configuration (A) or (B) of backplane (Fig. 3, pg. 4).
2. Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 3a, pg. 4).
3. Mount backplane to enclosure with hardware.

**Honeywell ProWatch/Win Pak Access Controller Position Chart for the Following Models:**

Honeywell Board	Pem Mounting
3200 Series or WIN-PAK Series	<b>A</b>
PRO22MX8	<b>B</b>

Fig. 3

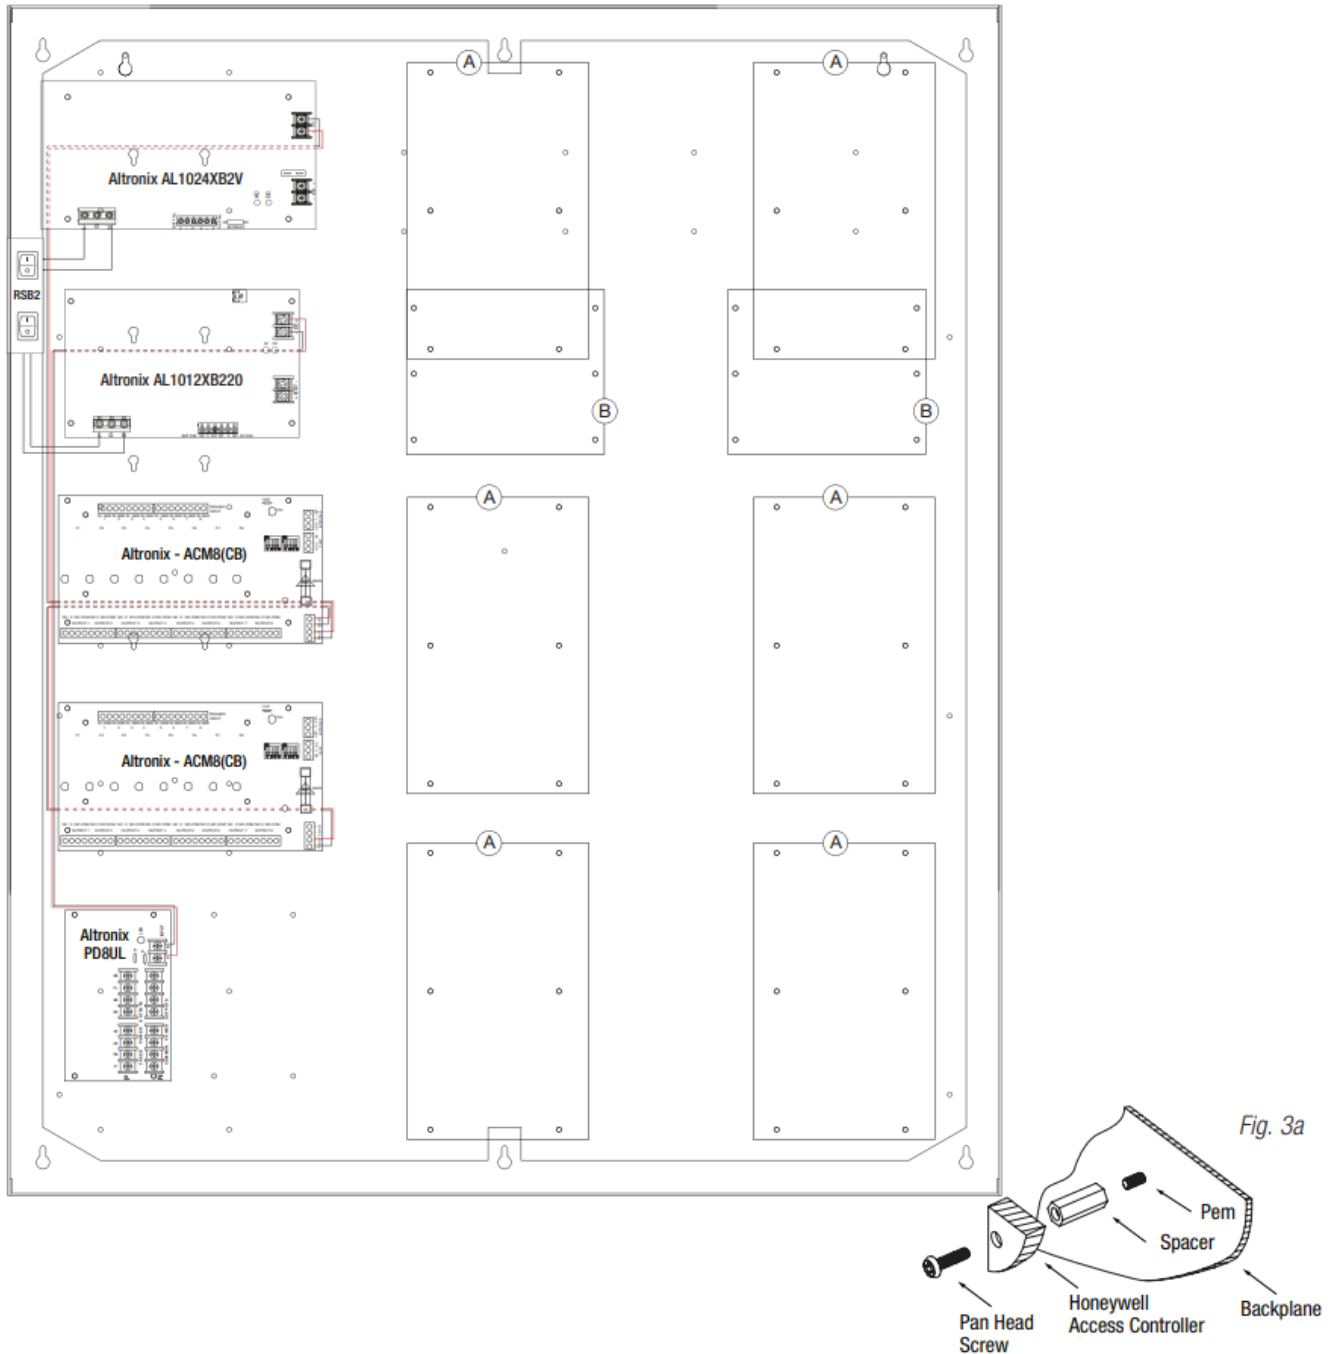

### T3HWK7516(D)V: THWD2 (Door Backplane) Configuration of Honeywell ProWatch/Win Pak Boards:

#### Honeywell ProWatch/Win Pak Access Controllers:



- Fasten spacers (provided) into pem configuration (A) or (B) of backplane (Fig. 4, pg. 5).
- Mount boards to spacers utilizing 5/16" pan head screws (provided) (Fig. 4a, pg. 5).
- Mount backplane to enclosure with hardware.

#### Honeywell ProWatch/Win Pak Access Controller Position Chart for the Following Models:


Honeywell Board	Pem Mounting
3200 Series or WIN-PAK Series	<b>A</b>
PRO22MX8	<b>B</b>




Fig. 4

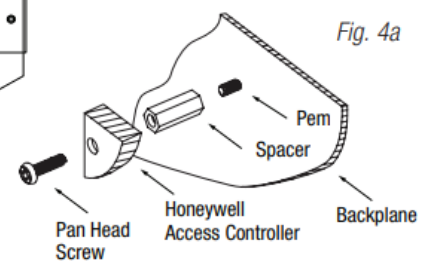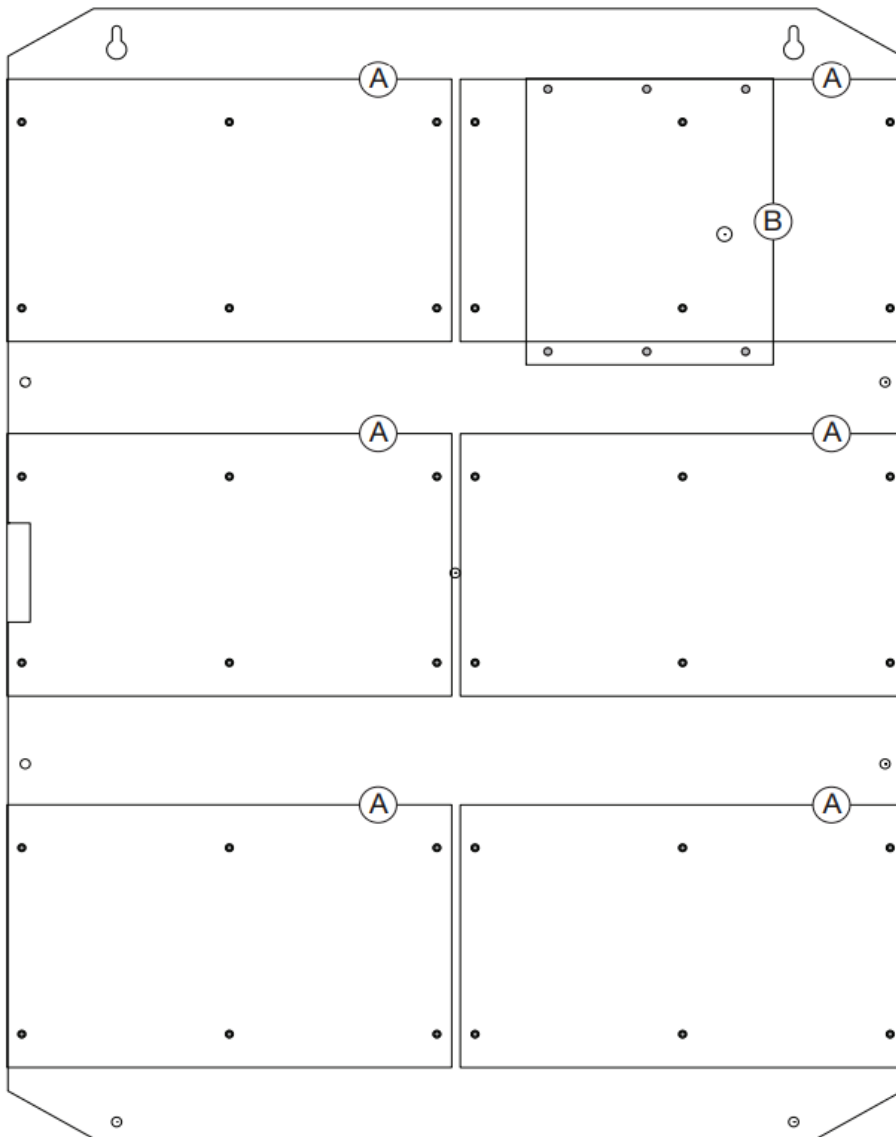

**T2HWK78(D)V (Trove2) Enclosure Dimensions (H x W x D approximate):**  
 27.25" x 21.75" x 6.5" (692.2mm x 552.5mm x 165.1mm)

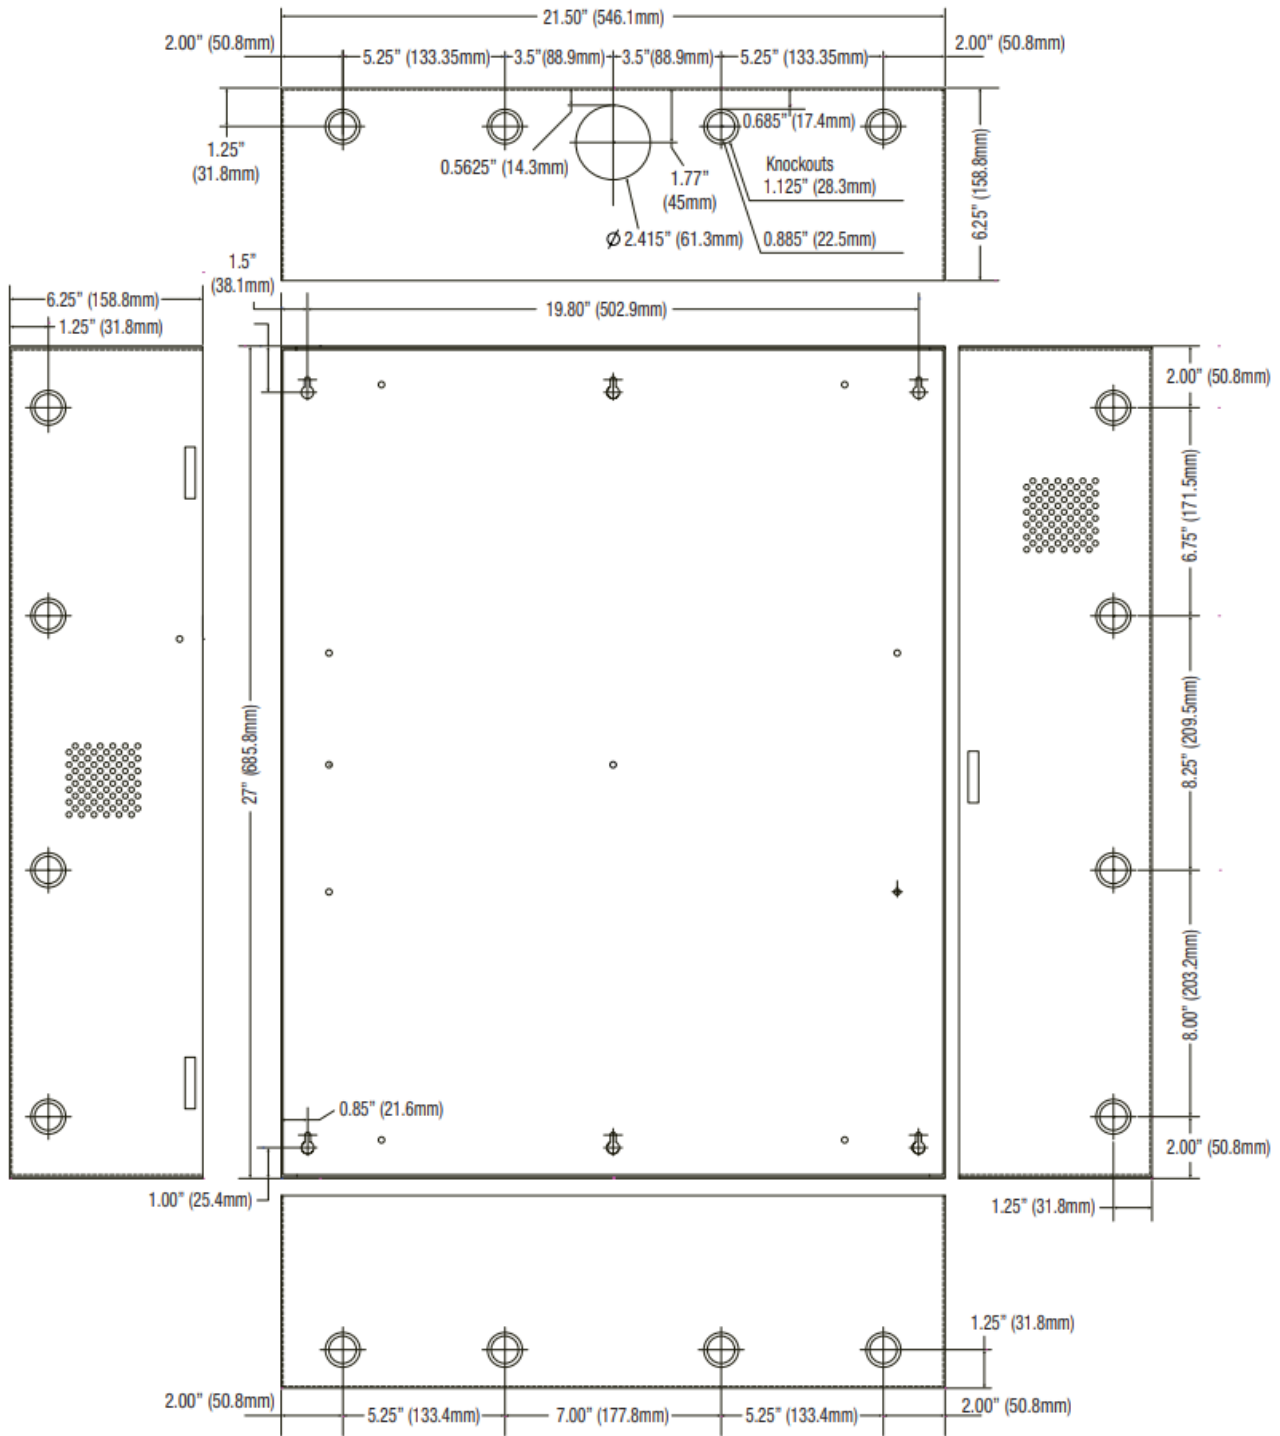

**T3HWK7516(D)V (Trove3) Enclosure Dimensions (H x W x D approximate):**  
 36.12" x 30.125" x 7.06" (917.5mm x 768.1mm x 179.3mm)

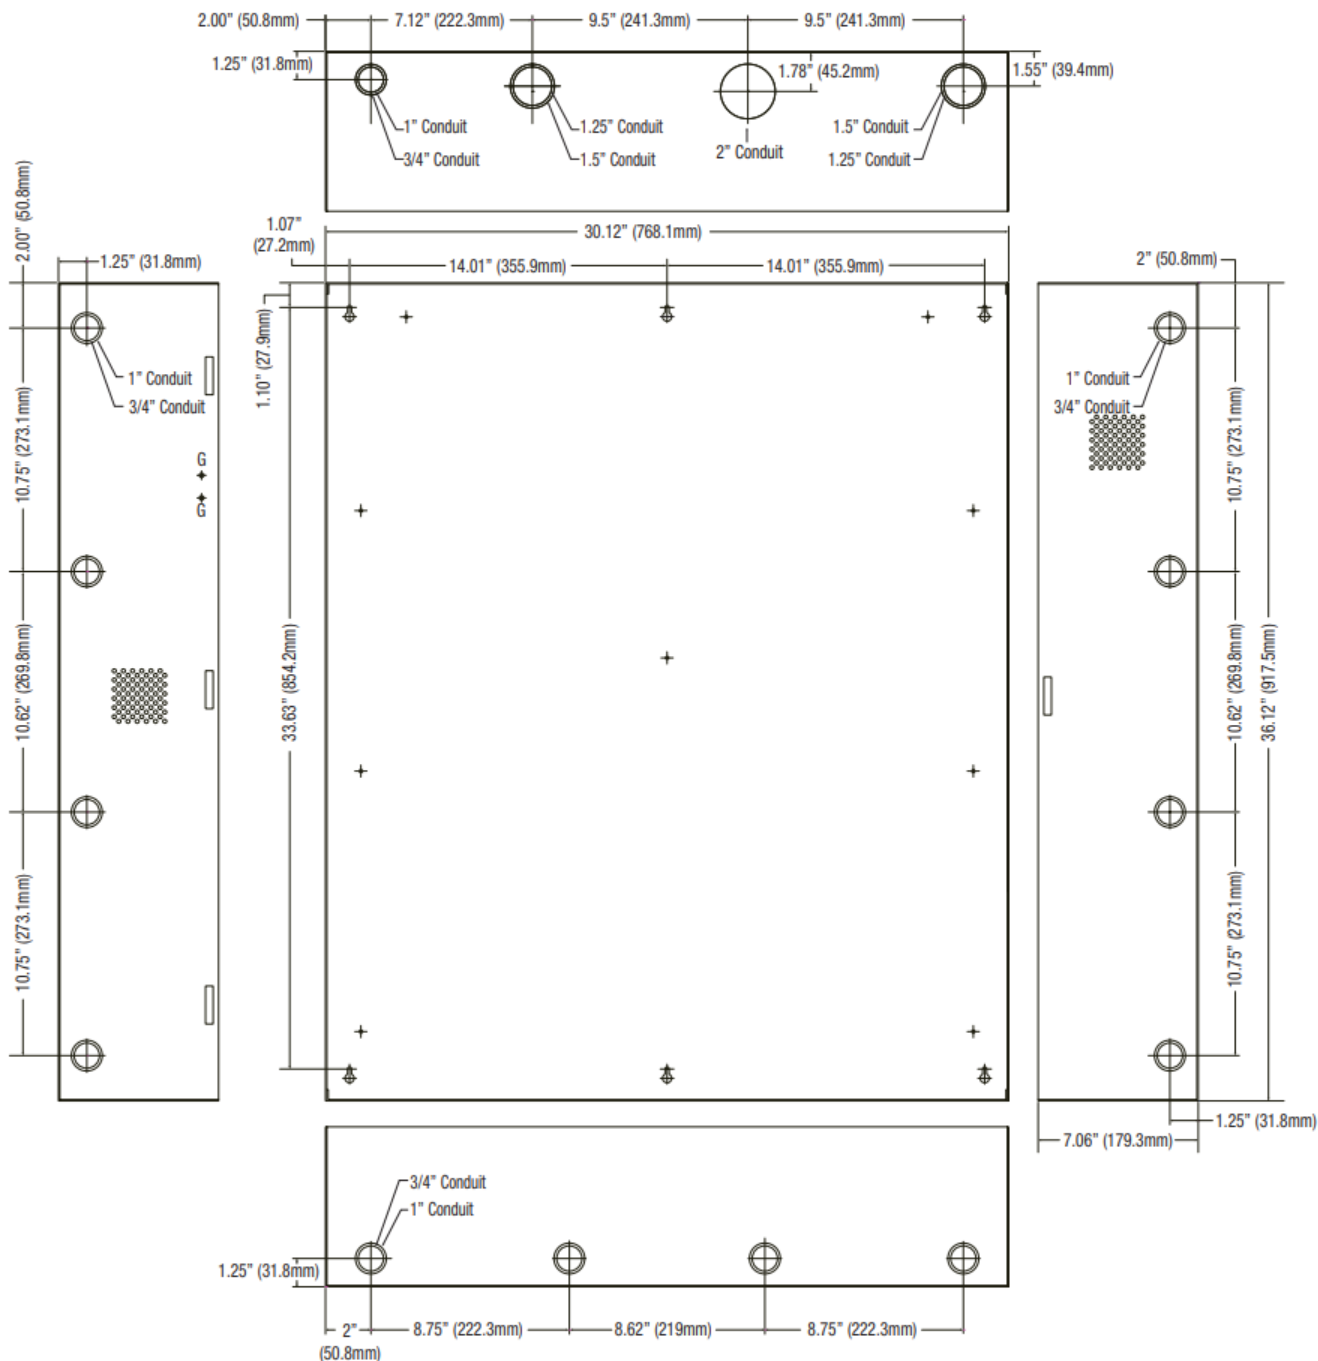

## Customer Support



Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice  
 140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056 website:  
[www.altronix.com](http://www.altronix.com) | e-mail: [info@altronix.com](mailto:info@altronix.com) | Lifetime Warranty IITrove Honeywell XBV Kits




# TRIVE™

## Access & Power Integration

---

### Documents / Resources

	<p><a href="#">Altronix T2HWK78V 8 Door Kit with Fused Outputs</a> [pdf] Installation Guide T2HWK78V 8 Door Kit with Fused Outputs, T2HWK78V, 8 Door Kit with Fused Outputs, Kit with Fused Outputs, Fused Outputs</p>
---	--

### References

-  [Altronix Home](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.