



Altronix T2ZK7F8 8 Door Kit with Fused Outputs Installation Guide

[Home](#) » [Altronix](#) » Altronix T2ZK7F8 8 Door Kit with Fused Outputs Installation Guide 

Contents

[1 Altronix T2ZK7F8 8 Door Kit with Fused Outputs](#)

[1.1 Features:](#)

[2 Documents / Resources](#)

[2.1 References](#)

[3 Related Posts](#)



Altronix T2ZK7F8 8 Door Kit with Fused Outputs



Access & Power Integration

Altronix/ZKTeco Kits

Models Include:

T2ZK7F8

Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove2 enclosure with TZ2 Altronix/ZKTeco backplane
- One (1) eFlow104NB – Power Supply/Charger
- One (1) ACM8 – Access Power Controller
- One (1) VR6 – Voltage Regulator
- One (1) PDS8 – Dual Input Fused Power Distribution Module

T2ZK7F16**16 Door Kit with Fused Outputs****Fully assembled kit includes:**

- Trove2 enclosure with TZ2 Altronix/ZKTeco backplane
- One (1) eFlow104NB – Power Supply/Charger
- Two (2) ACM8 – Access Power Controllers
- One (1) VR6 – Voltage Regulator
- One (1) PDS8 – Dual Input Fused Power Distribution Module

All components of this Trove kit are UL Listed sub-assemblies. Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

Installation Guide

All registered trademarks are property of their respective owners.

Rev. TZK_041019

Installing Company: _____ Service Rep. Name: _____

Address: _____ Phone #: _____

Overview:

Altronix T2ZK7F8 and T2ZK7F16 Trove ZKTeco kits are pre-assembled and consist of Trove enclosures/backplanes with factory installed Altronix power supply/chargers and sub-assemblies. T2ZK7F8 accommodates up to two (2) ZKTeco modules for up to eight (8) doors in a single enclosure. T2ZK7F16 accommodates up to four (4) ZKTeco modules for up to sixteen (16) doors in a single enclosure.

Configuration Chart:

Altronix Model Number	120VAC 60Hz Input Current (A)	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	Maximum Supply Current for Main and Aux. Outputs on Power Supply board and ACM8 Access Power Controllers' outputs	Nominal DC Output Voltage		Fail-Safe/Fail-Secure or Dry Form "C" Outputs	Additional Fused Outputs	ACM8 Board Input Fuse Rating	ACM8 Board Output Fuse Rating	PDS8 Board Input Fuse Rating	PDS8 Board Output Fuse Rating
					[DC]	[Aux]						
					Output Range (VDC)	Output Range (VDC)						
T2ZK7F8	4.5	6.3A/ 250V	15A/ 32V	24VDC @ 9.7A	20.17-26.4	20.28-26.4	8	8	10A/ 250V	2.5A/ 250V	10A/ 32V	3A/ 32V
T2ZK7F16				24VDC @ 9.4A			16					

Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.


1. Remove backplane from enclosure. Do not discard hardware.

2. Mark and predrill holes in the wall to line up with the top two/three keyholes in the enclosure. Install two/three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two/three upper screws; level and secure. Mark the position of the lower three holes. Remove the enclosure. Drill the lower holes and install the three fasteners. Place the enclosure's upper keyholes over the two/three upper screws. Install the three lower screws and make sure to tighten all screws.
 3. Mount included UL Listed tamper switch (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (Fig. 1, pg. 2). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
- Enclosure
4. Mount ZKTeco modules to backplane, refer to pages 3 – 6.
 5. Refer to the eFlow Power Supply/Charger Installation Guide for eFlow104NB and corresponding Sub-Assembly Installation Guides for ACM8, PDS8 and VR6 for further installation instructions.

Hardware:

- **Nylon Spacer |**
- **5/16" Pan Head Screw |**
- **Lock Nut**

Fig. 1

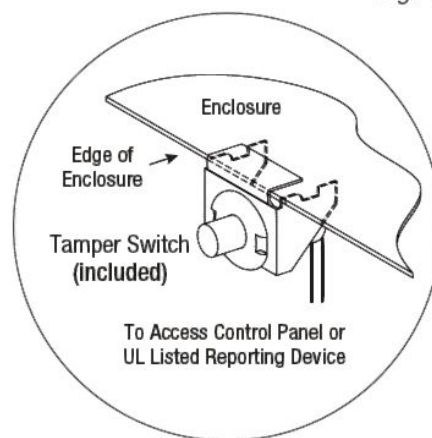


T2ZK7F8: Configuration of ZKTeco inBio Modules:

1. Fasten DIN Rail (provided by ZKTeco) to poem spacers, utilizing 5/16" pan head screws (included) (Fig. 2, pg. 3).
2. Mount ZKTeco modules to DIN Rail (refer to below chart for model number, Fig. 2, pg. 3).
3. Fasten TZ2 backplane to Trove2 enclosure utilizing lock nuts (provided by Altronix).

ZKTeco Model Pem Mounting

inBio-160, inBio-160 Pro, inBio-260, inBio-260 Pro, inBio-460, inBio-460 Pro

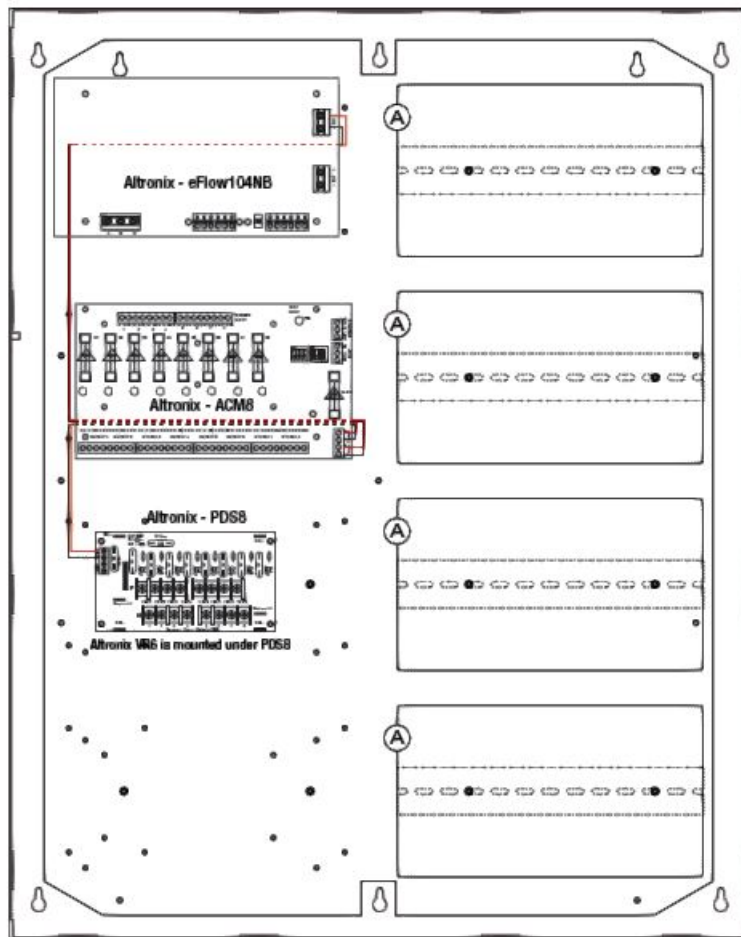

T2ZK7F8: Configuration of ZKTeco C3 Modules:

1. Fasten spacers (provided) to pems that match the hole pattern for ZKTeco boards. Refer to below chart for model number and Fig. 3, pg. 4.
2. Mount ZKTeco boards to spacers utilizing 5/16" pan head screws (included) (Fig. 3a, pg. 4).
3. Fasten TZ2 backplane to Trove2 enclosure utilizing lock nuts (included).

ZKTeco Model Pem Mounting

C3-400, C3-400 Pro

C3-100, C3-100 Pro, C3-200, C3-200 Pro


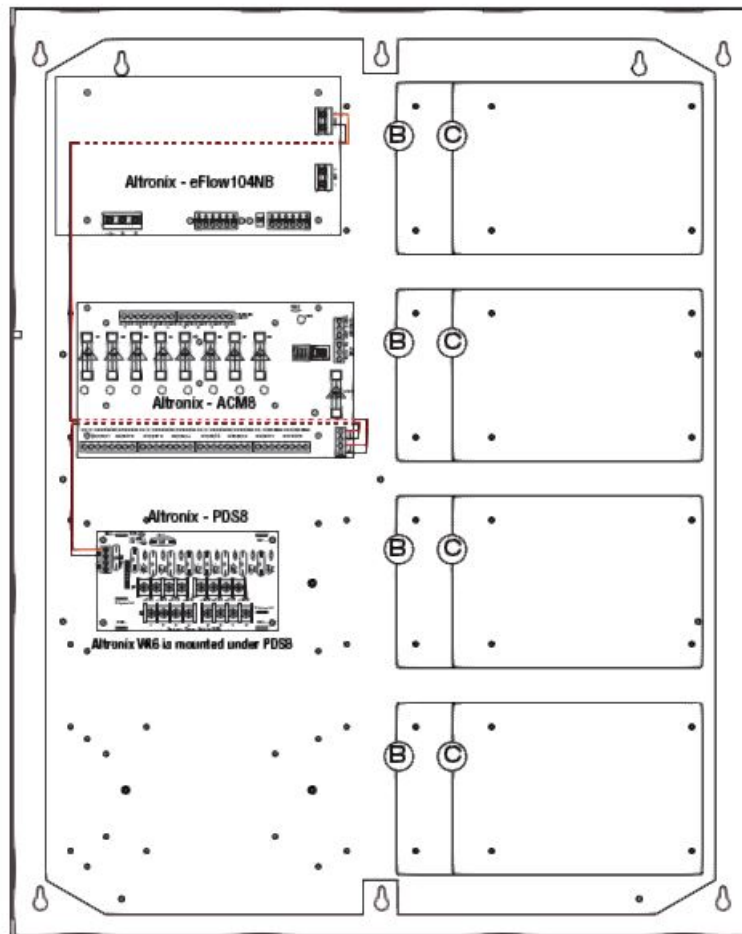


Fig. 3a

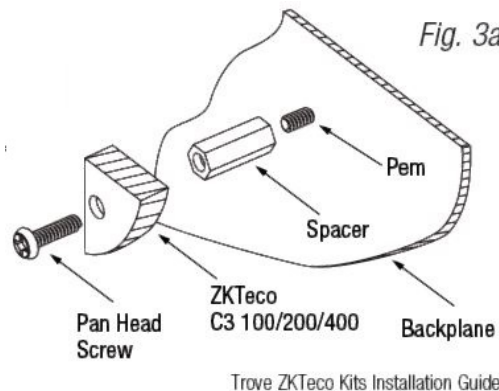


T2ZK7F16: Configuration of ZKTeco inBio Modules:

1. Fasten DIN Rail (provided by ZKTeco) to pem spacers, utilizing 5/16" pan head screws (included) (Fig. 4, pg. 5).
2. Mount ZKTeco modules to DIN Rail (refer to below chart for model number, Fig. 4, pg. 5).
3. Fasten TZ2 backplane to Trove2 enclosure utilizing lock nuts (provided by Altronix).

ZKTeco Model Pem Mounting

inBio-160, inBio-160 Pro, inBio-260, inBio-260 Pro, inBio-460, inBio-460 Pro

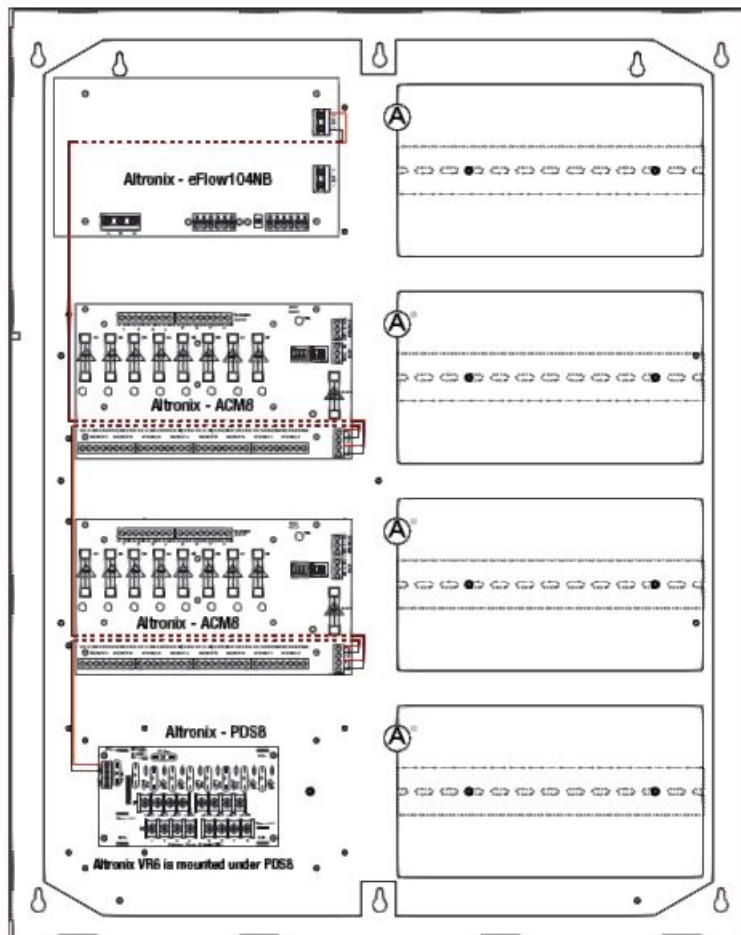

T2ZK7F16: Configuration of ZKTeco C3 Modules:

1. Fasten spacers (provided) to pems that match the hole pattern for ZKTeco boards. (refer to below chart for model number, Fig. 5, pg. 6).
2. Mount ZKTeco boards to spacers utilizing 5/16" pan head screws (included) (Fig. 5a, pg. 6).
3. Fasten TZ2 backplane to Trove2 enclosure utilizing lock nuts (included).

ZKTeco Model Pem Mounting

C3-400, C3-400 Pro

C3-100, C3-100 Pro, C3-200, C3-200 Pro


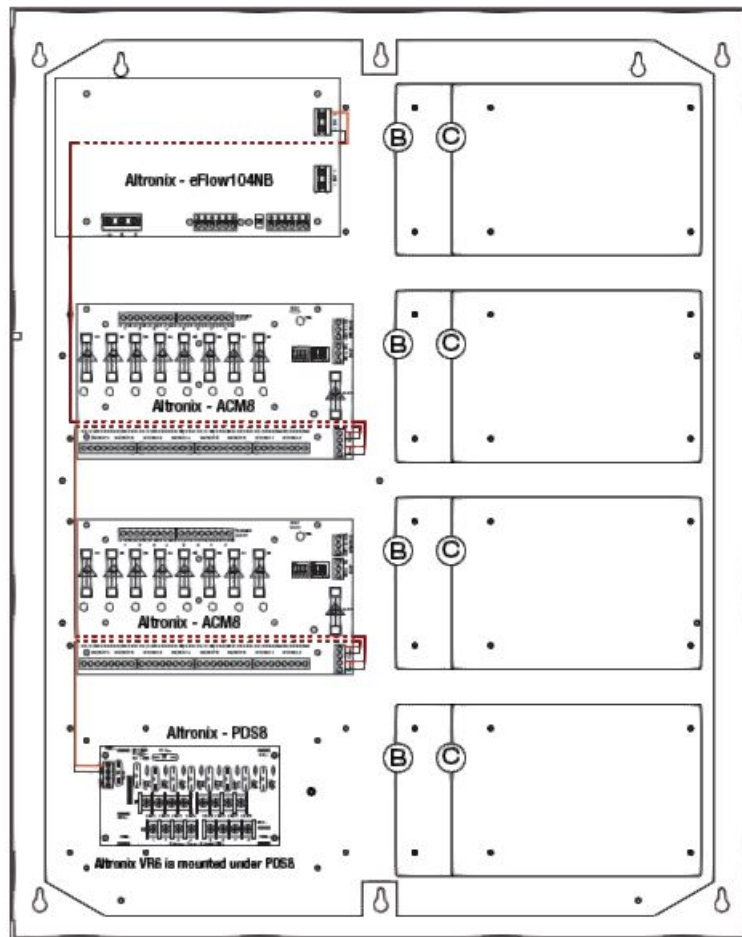



Fig. 5a

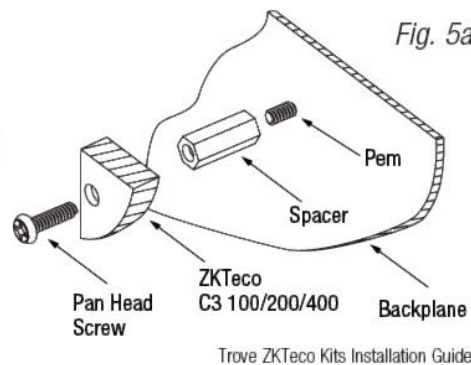

Flow Power Supply/Chargers can be Controlled and Monitored while Reporting Power/Diagnostics from Anywhere over the Network...

LINQ2 – Network Communication Module


LINQ2 provides remote IP access to real-time data from fellow power supply/chargers to help keep systems up and running at optimal levels. It facilitates fast and easy installation and set-up, minimizes system downtime, and eliminates unnecessary service calls, which helps reduce Total Cost of Ownership (TCO) – as well as creating a new source of Recurring Monthly Revenue (RMR).

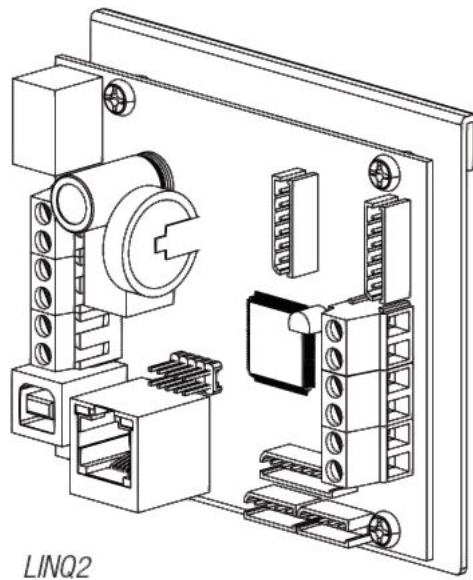

Features:


- UL Listed in the U.S. and Canada.
- Local or remote control of up to (2) two Altronix eFlow power output(s) via LAN and/or WAN.
- Monitor real time diagnostics: DC output voltage, output current, AC & battery status/service, input trigger state change, output state change and unit temperature.
- Access control and user management: Restrict read/write, Restrict users to specific resources
- Two (2) integral network controlled Form "C" Relays.
- Three (3) programmable input triggers: Control relays and power supplies via external hardware sources.
- Email and Windows Dashboard notifications
- Event log tracks history.
- Secure Socket Layer (SSL).
- Programmable via USB or web browser – includes operating software and 6 ft. USB cable.

LINQ2 Mounts Inside any Trove Enclosure

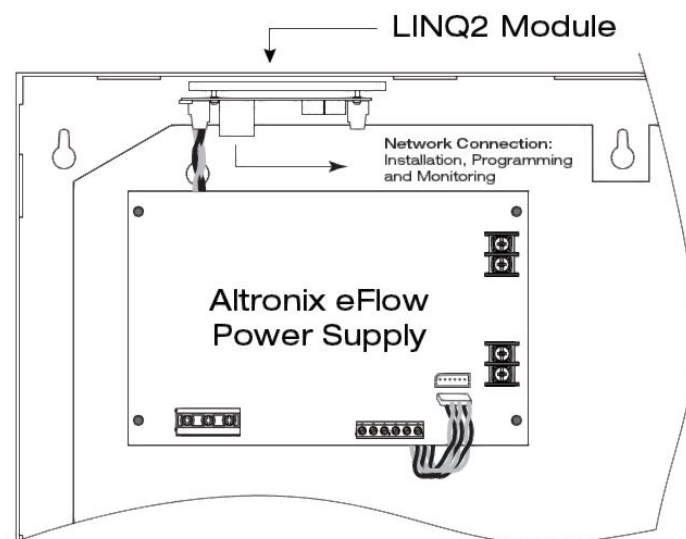

Enclosure Dimensions (H x W x D):

27.25" x 21.75" x 6.5" (692.2mm x 552.5mm x 165.1mm)

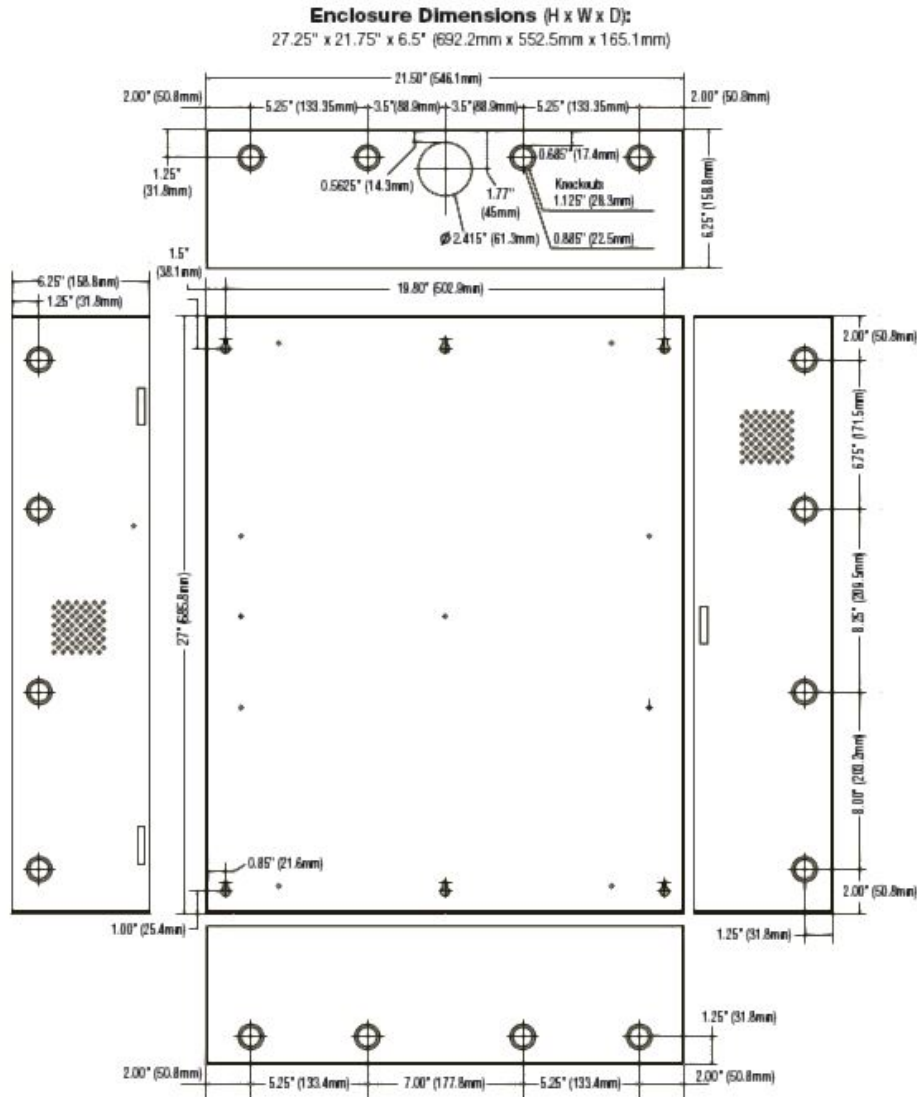

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York

11220 USA

phone: 718-567-8181

fax: 718-567-9056

website: www.altronix.com

e-mail: info@altronix.com

Lifetime Warranty IITrove ZKTeco Kits

Documents / Resources

<p>TROVE Access & Power Integration Altronix ZKTeco Kits</p> <p>Warranty:</p> <p>T2ZK7F8 8 Door Kit with Fused Outputs Lifetime Warranty</p> <p>T2ZK7F16 16 Door Kit with Fused Outputs Lifetime Warranty</p> <p>Installation Guide</p> <p>Altronix</p>	<p>Altronix T2ZK7F8 8 Door Kit with Fused Outputs [pdf] Installation Guide</p> <p>T2ZK7F8 8 Door Kit with Fused Outputs, T2ZK7F8, 8 Door Kit with Fused Outputs, Fused Outputs</p>
---	--

References

- [Altronix Home](#)

