

Amico
Low Voltage
Controller with
Dimming



Amico Low Voltage Controller with Dimming Instruction Manual


[Home](#) » [Amico](#) » Amico Low Voltage Controller with Dimming Instruction Manual 

Contents

- [1 Amico Low Voltage Controller with Dimming](#)
- [2 Introduction](#)
- [3 Symbols Used in This Manual](#)
- [4 Safety Instructions](#)
- [5 Tools/Materials Required](#)
- [6 Functions of Low Voltage Controller with Dimming](#)
- [7 Notes](#)
- [8 Modes of Low Voltage Controller with Dimming](#)
- [9 Mounting Drawings](#)
- [10 Technical Data](#)
- [11 Warranty Policy](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)

Amico

Amico Low Voltage Controller with Dimming

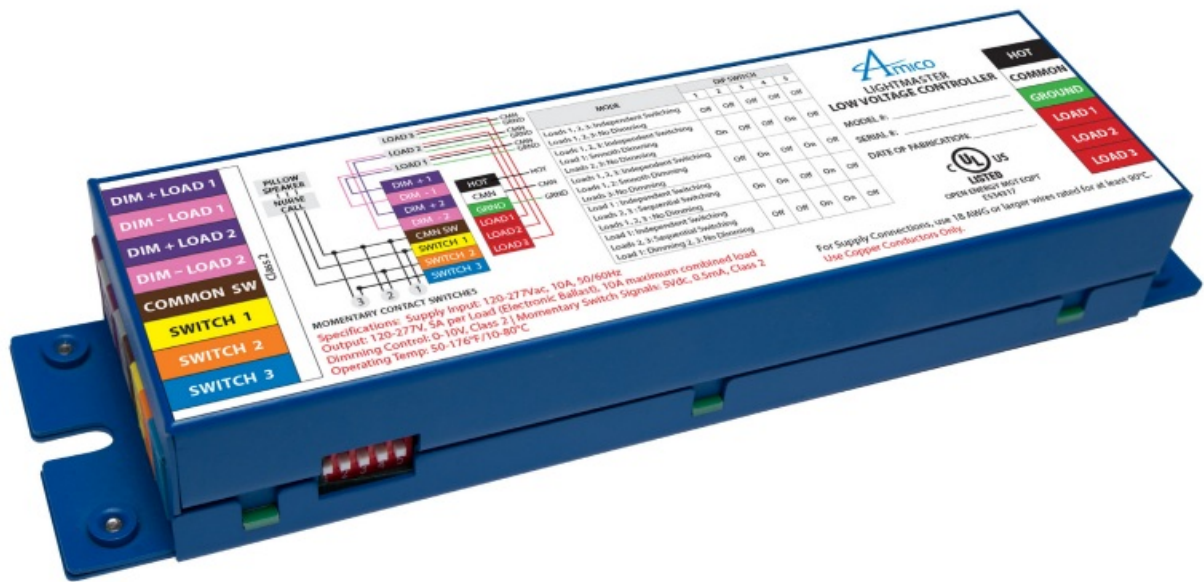




Introduction

Thank you for your purchase of the Low Voltage Controller with Dimming. This installation manual gives you instructions on the different functions and modes of the Low Voltage Controller with Dimming. Please read the following instructions carefully and adhere to the safety guidelines and standards. If you need information for further instructions on operation, maintenance, and/or descriptions of the product please feel free to contact Amico's Customer Service at: alt-customerservice@amico.com For technical support please contact: alt-techsupport@amico.com To learn more about Amico's portfolio of healthcare lighting products, visit <https://www.amico.com/lights>

Symbols Used in This Manual

The warning symbols indicate all instructions that are important for safety. Failure to comply with them can lead to injury, damage to the luminaire or the equipment. In combination with the following signal words the warning symbols means:

 DANGER	Can lead to death or serious injury
 WARNING	Can lead to injury
	UL Listed certification mark

Trademarks: All trade names mentioned in these instructions are the exclusive property of the relevant manufacturers.

Safety Instructions

Intended Use

The Low Voltage Controller is designed to allow users to operate high voltage lights found in healthcare facilities using a low voltage device such as a keypad or pillow speaker. The Low Voltage Controller can be used and is compatible with all nurse call systems and low voltage momentary contact switches.

User Profiles

No modifications can be carried out by the end user. Doing so will void warranty, ETL approval, and may cause severe risks. Serviceable parts must be replaced with factory OEM parts. The user must comply with all building safety codes and disinfection requirements.

Warning Levels

DANGER

Indication of hazards that can lead to death or serious injury if measures are disregarded.

WARNING

Indication of hazards that can lead to injury if measures are disregarded.

CAUTION


Indication of hazards that can lead to damage to property if measures are disregarded.

ELECTRIC SHOCK

The above is an electric shock warning symbol. Non-compliance with this symbol may result in damages or injuries due to electric shock.

Tools/Materials Required


Use 6-32 (or) 8-32 screw and nut along with the washer for mounting it with the driver plate

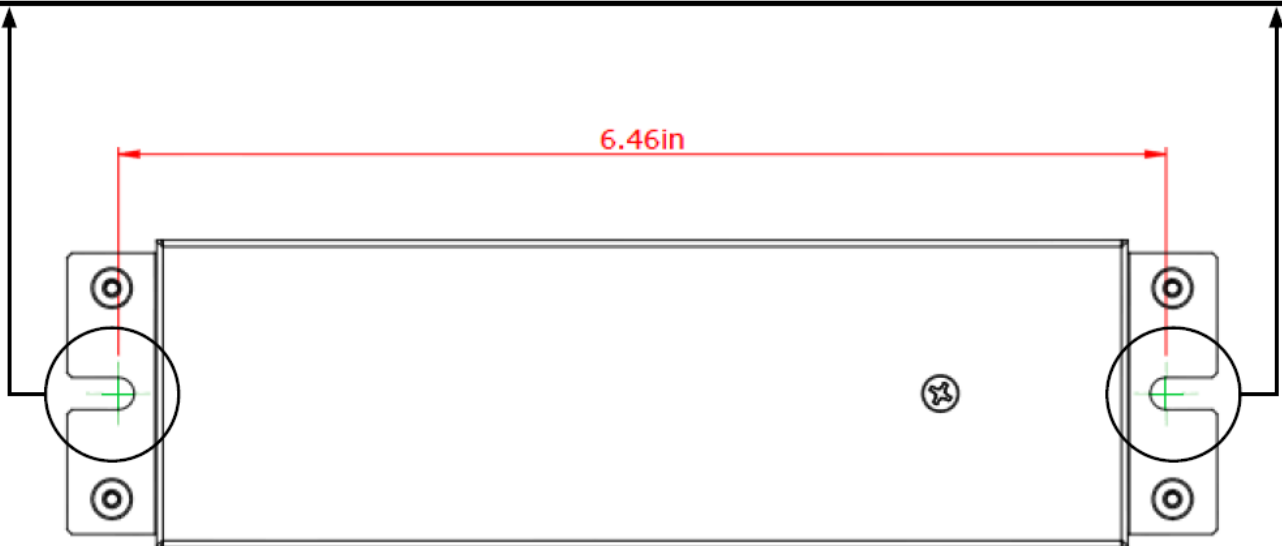

- 18-gauge wires.
- Wire stripper and wire cutter
- Silicone Wire Nuts


Note: Before proceeding with the installation, make sure to remove the power to the electrical power supply.

Functions of Low Voltage Controller with Dimming

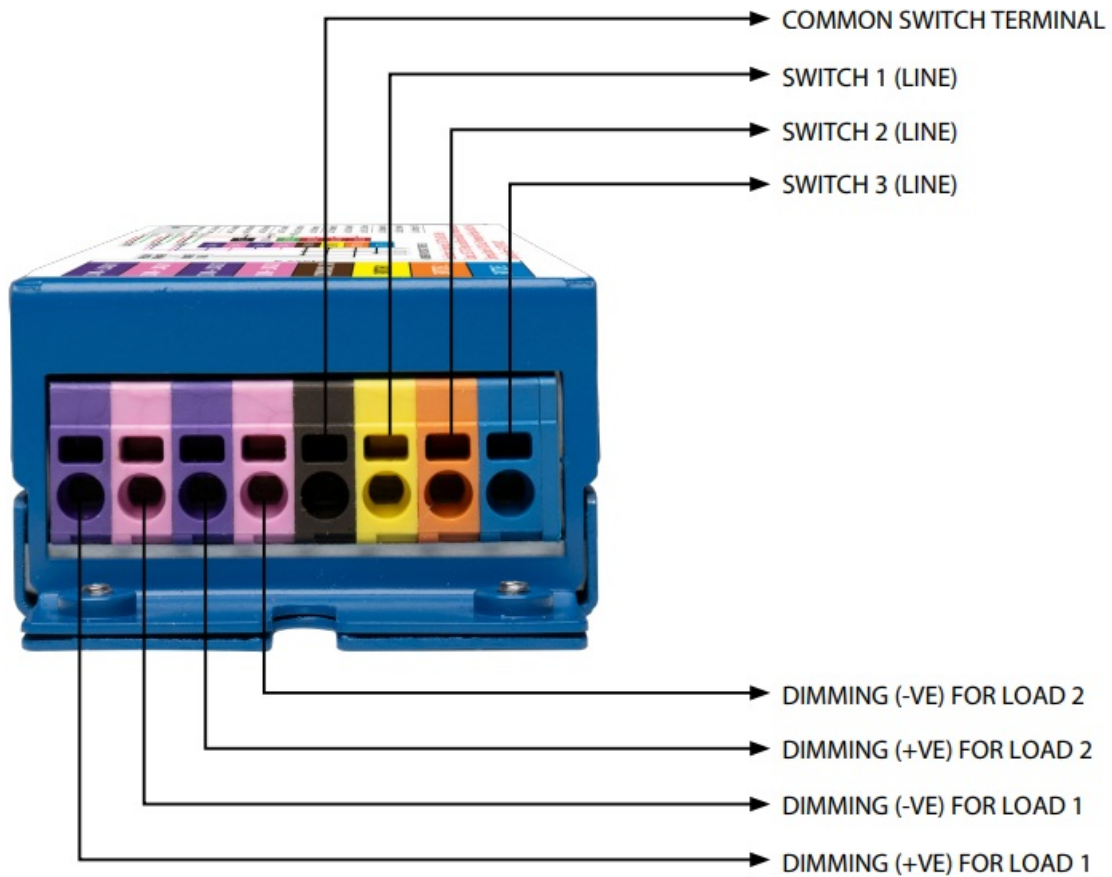


Notes

- The common switch terminal is the single terminal for all the Switch common wires.
- Please note that the dimming option is applicable only for load 1 and load 2. (Refer to page 6).
- Independent switching means all the loads are connected to the switches independently.
- Sequential switching means two loads can be connected to one switch and act as one switch for two loads.

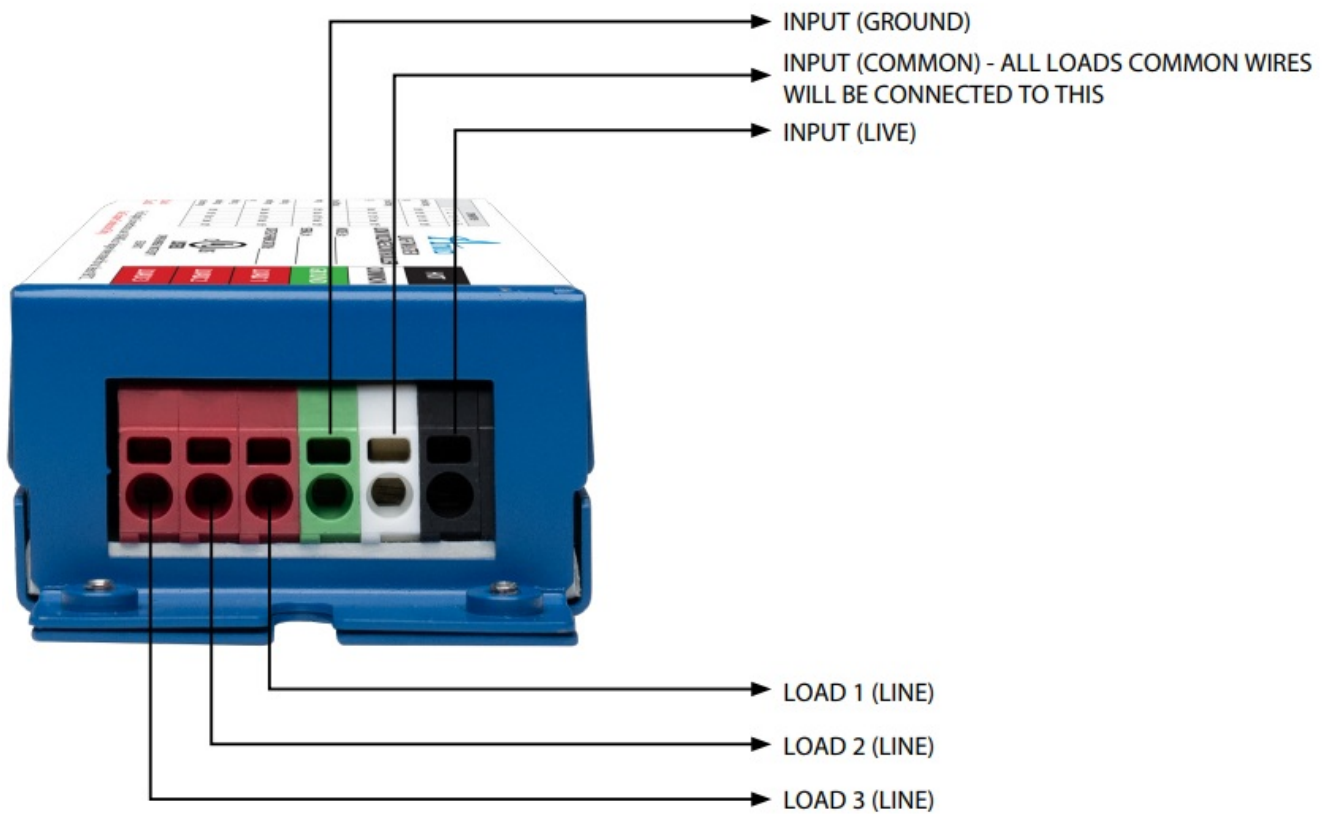

Notes

- The input common terminal is the single terminal for all loads common wires.
- Carefully connect all the load connections according to the label information in the LVD.
- Only Load 1 and Load 2 can be connected to dimming (Refer to page 5).
- Connect the ground wire from the main line power to the ground wire in the fixture.

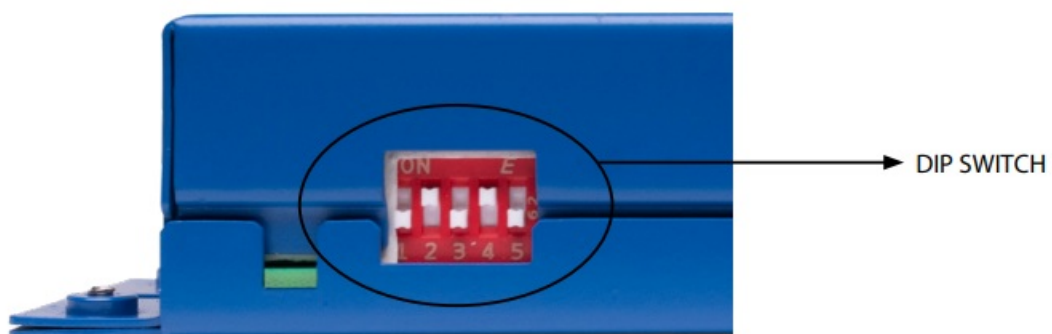

Note

- Refer the Mode chart on Page 8 for changing the dip switch.


Modes of Low Voltage Controller with Dimming


Mode Chart

Mode		Dip Switch				
		1	2	3	4	5
1	Loads 1, 2, 3: Independent Switching	Off	Off	Off	Off	Off
	Loads 1, 2, 3: No Dimming					
2	Loads 1, 2, 3: Independent Switching Load 1: Smooth	On	Off	Off	On	Off
	Dimming Loads 2, 3: No Dimming					
3	Loads 1, 2, 3: Independent Switching Loads 1, 2: Smooth	Off	On	Off	On	Off
	Dimming Load 3: No Dimming					
4	Load 1: Independent Switching Loads 2, 3: Sequential	On	On	Off	On	Off
	switching Loads 1, 2, 3: No Dimming					
5	Loads 1: Independent Switching Loads 2, 3: Sequential	Off	Off	On	On	Off
	Switching Load 1: Dimming 2, 3: No Dimming					

- Wiring drawings and wire connections for each mode are explained further.
- Carefully read the instructions and follow the steps.


Mode 1

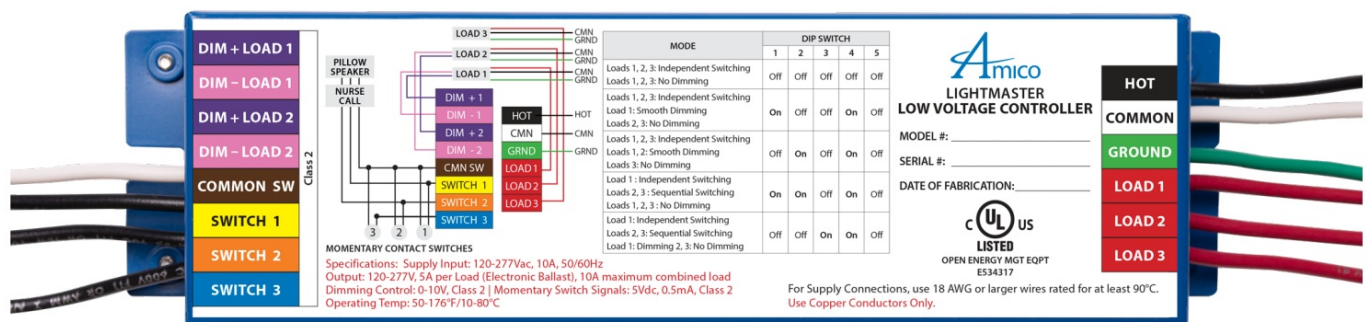


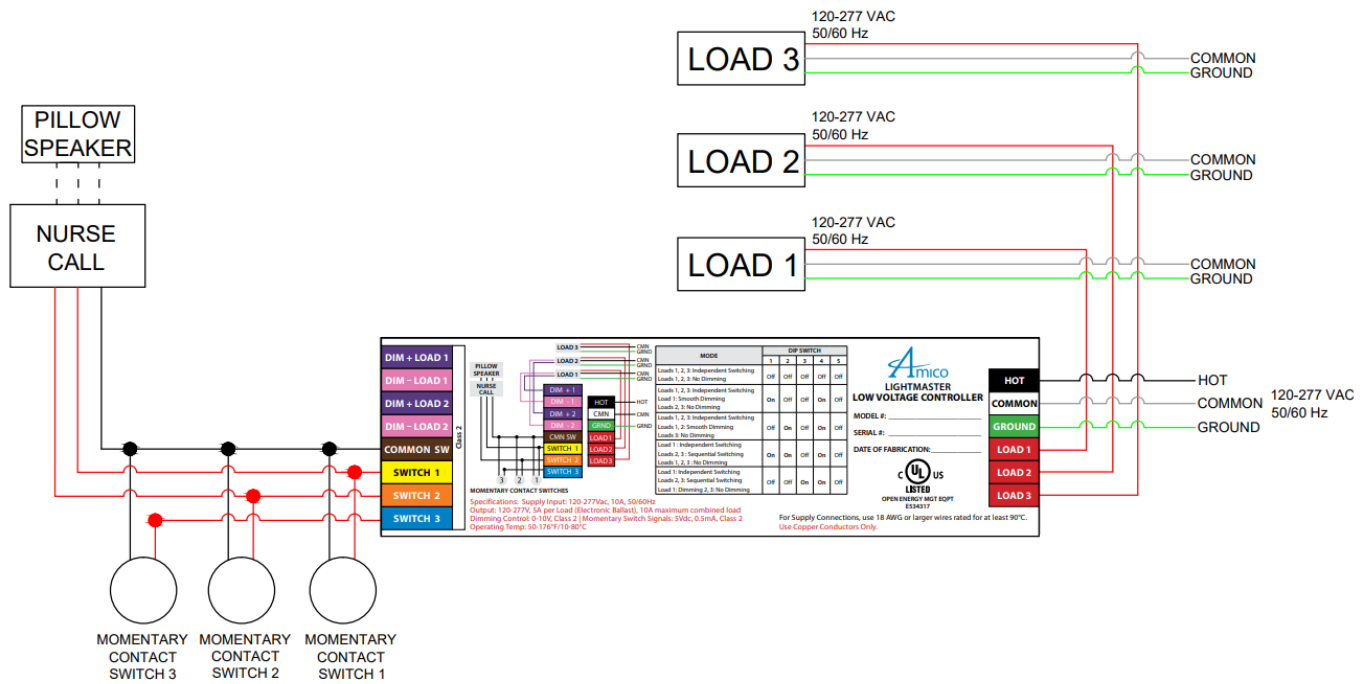

Mode		Dip Switch				
		1	2	3	4	5
1	Loads 1, 2, 3: Independent Switching					
	Loads 1, 2, 3: No Dimming	Off	Off	Off	Off	Off


Mode 2

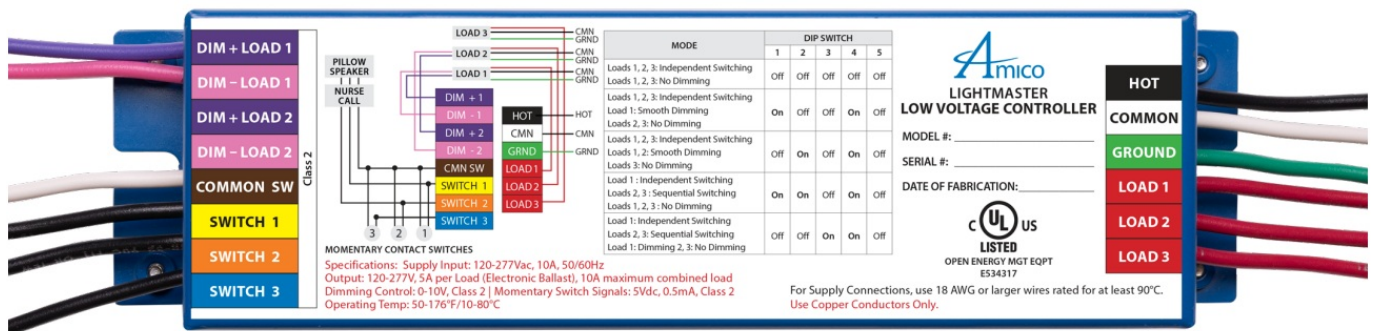


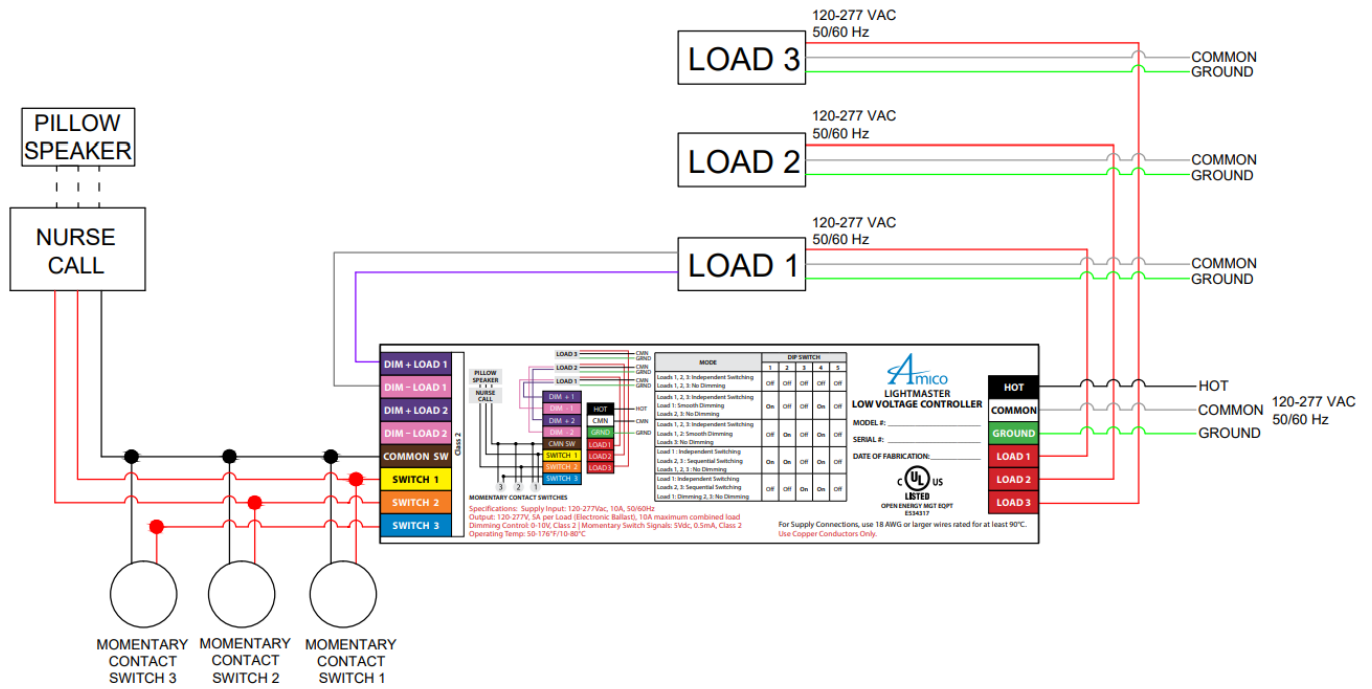

Mode		Dip Switch				
		1	2	3	4	5
2	Loads 1, 2, 3: Independent Switching Load 1: Smooth	On	Off	Off	On	Off
	Dimming Loads 2, 3: No Dimming					


Mode 3

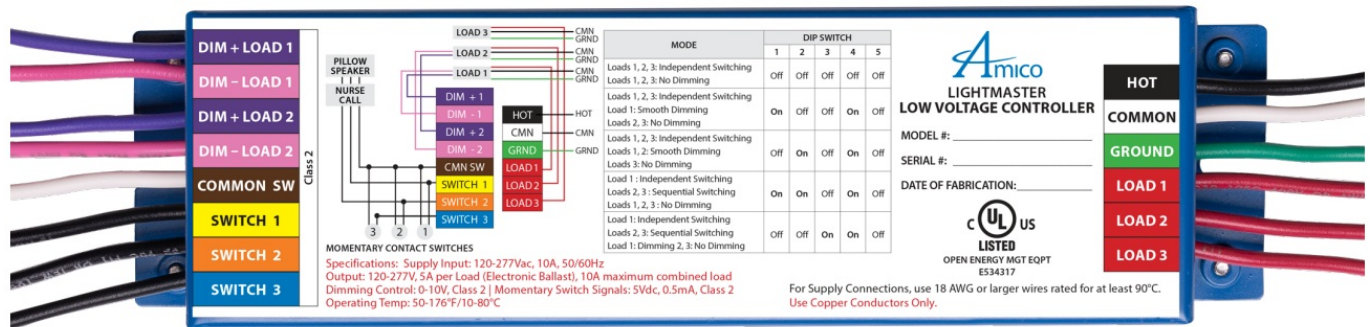


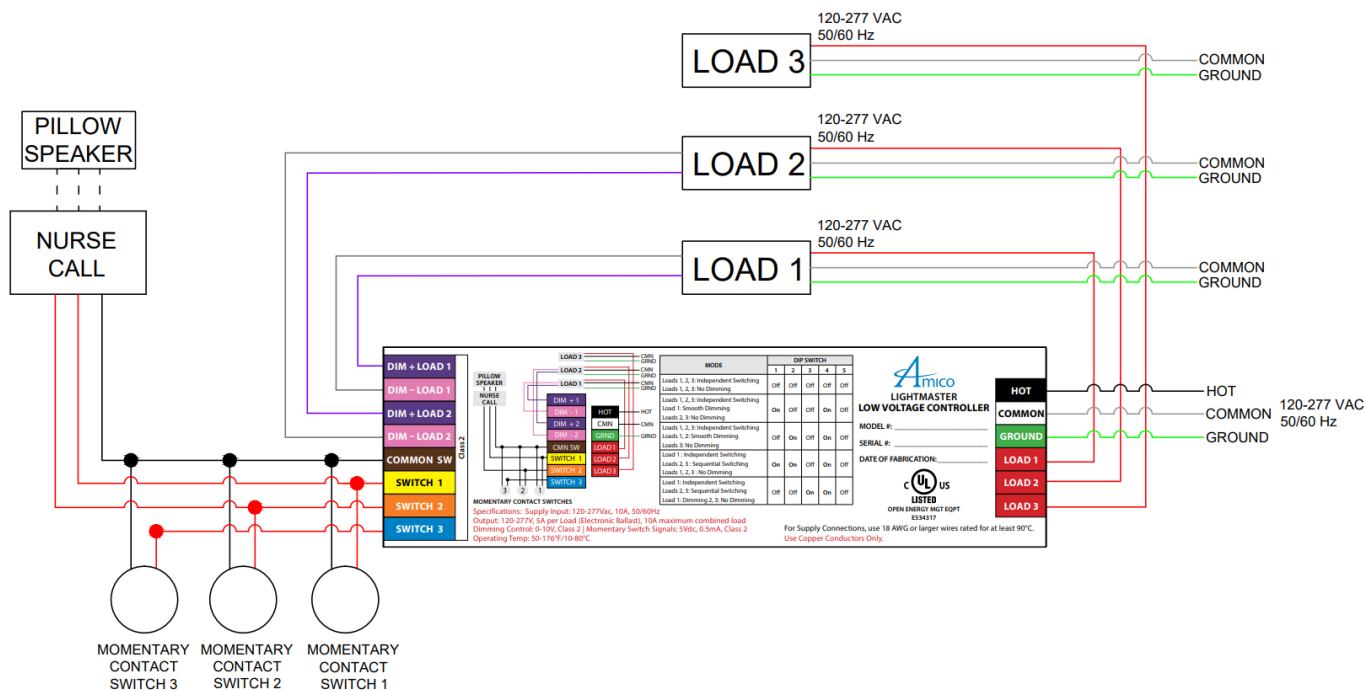

Mode		Dip Switch				
		1	2	3	4	5
3	Loads 1, 2, 3: Independent Switching Loads 1, 2: Smooth Dimming Load 3: No Dimming	Off	On	Off	On	Off


Mode 4

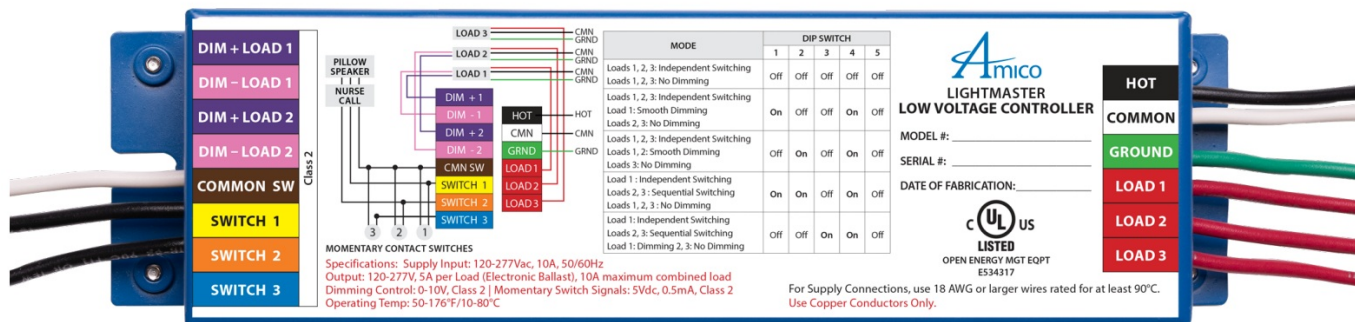


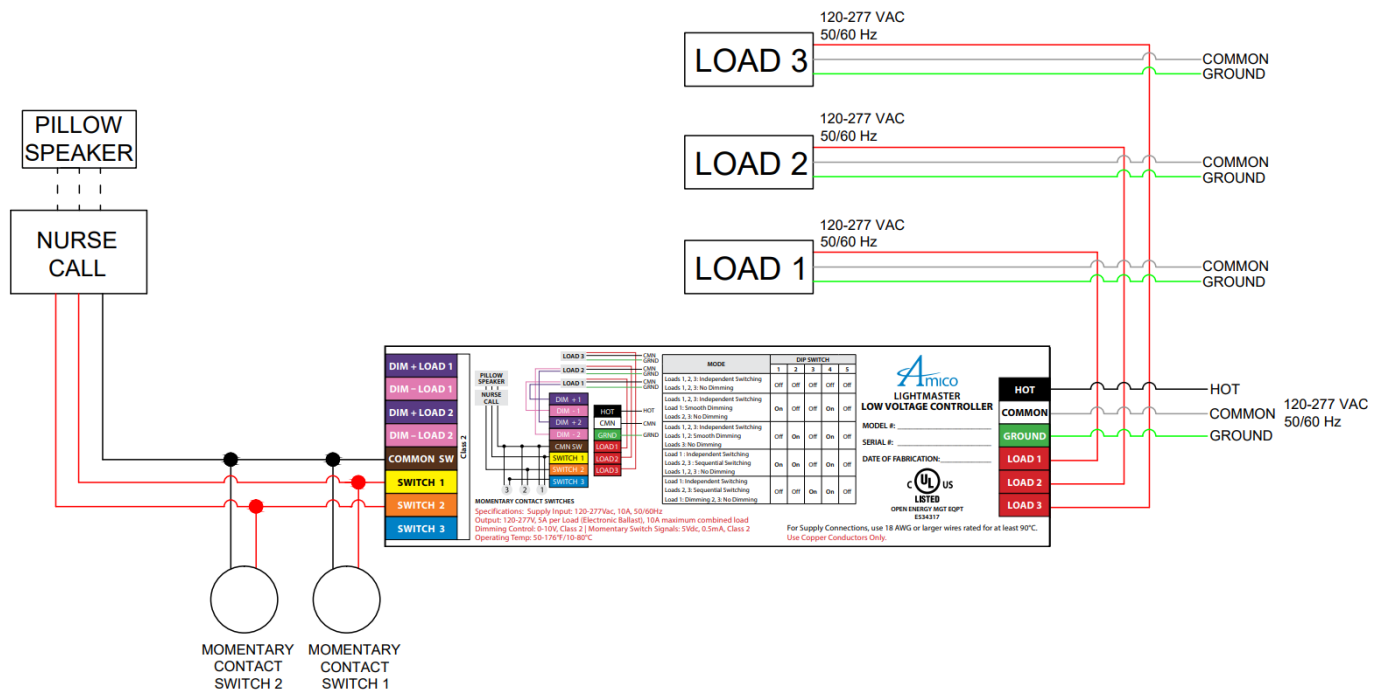

Mode		Dip Switch				
		1	2	3	4	5
4	Load 1: Independent Switching Loads 2, 3: Sequential switching Loads 1, 2, 3: No Dimming	On	On	Off	On	Off


Mode 5

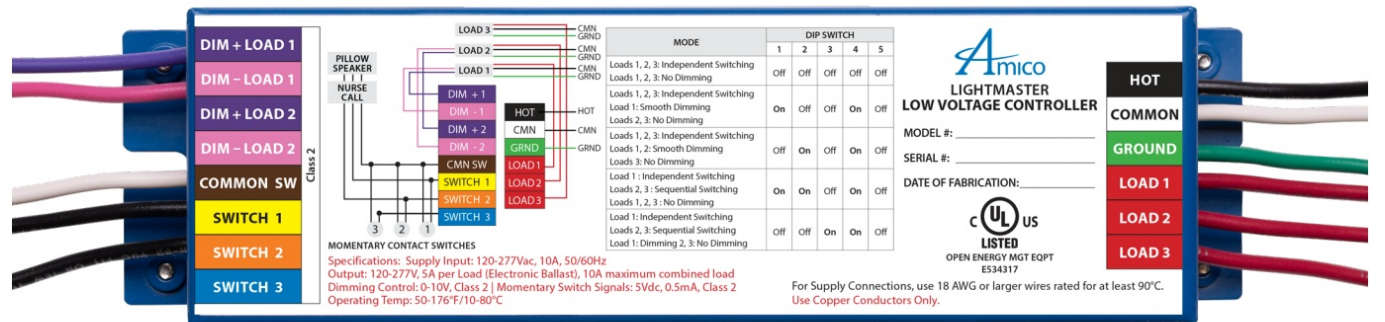


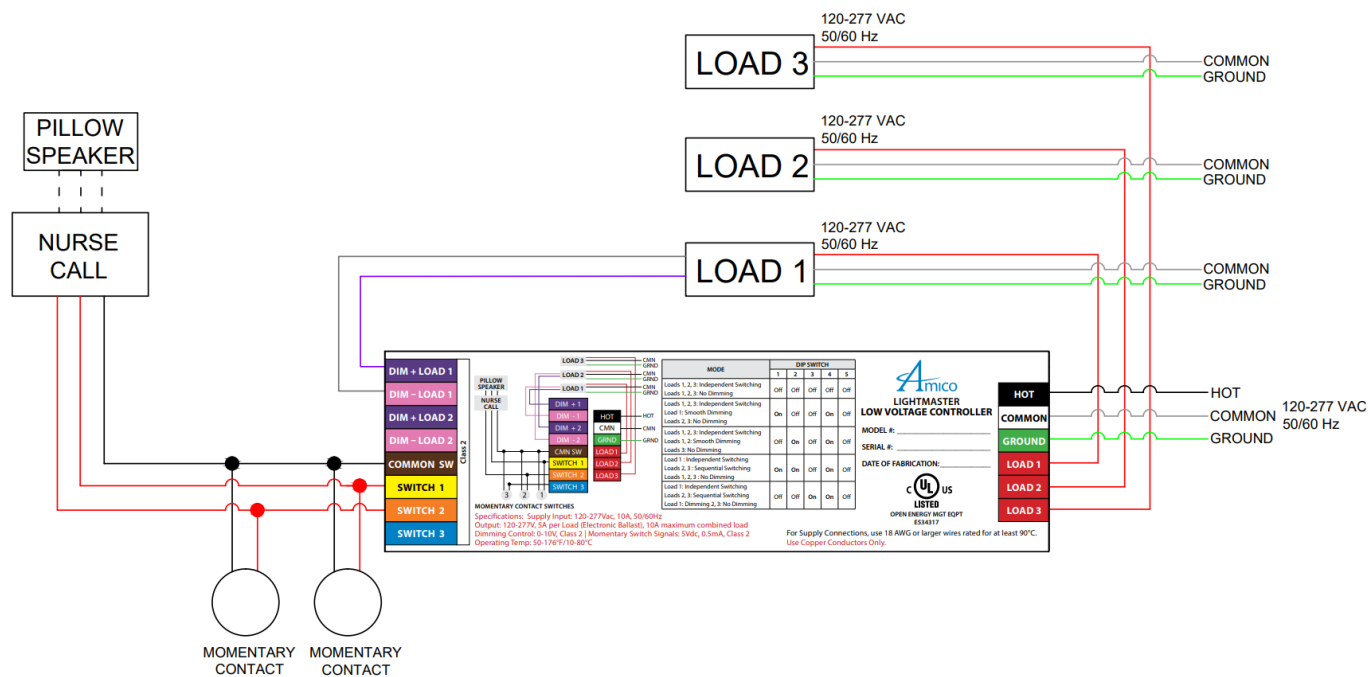

Mode		Dip Switch				
		1	2	3	4	5
5	Loads 1: Independent Switching Loads 2, 3: Sequential					
	Switching Load 1: Dimming 2, 3: No Dimming	Off	Off	On	On	Off

Mounting Drawings

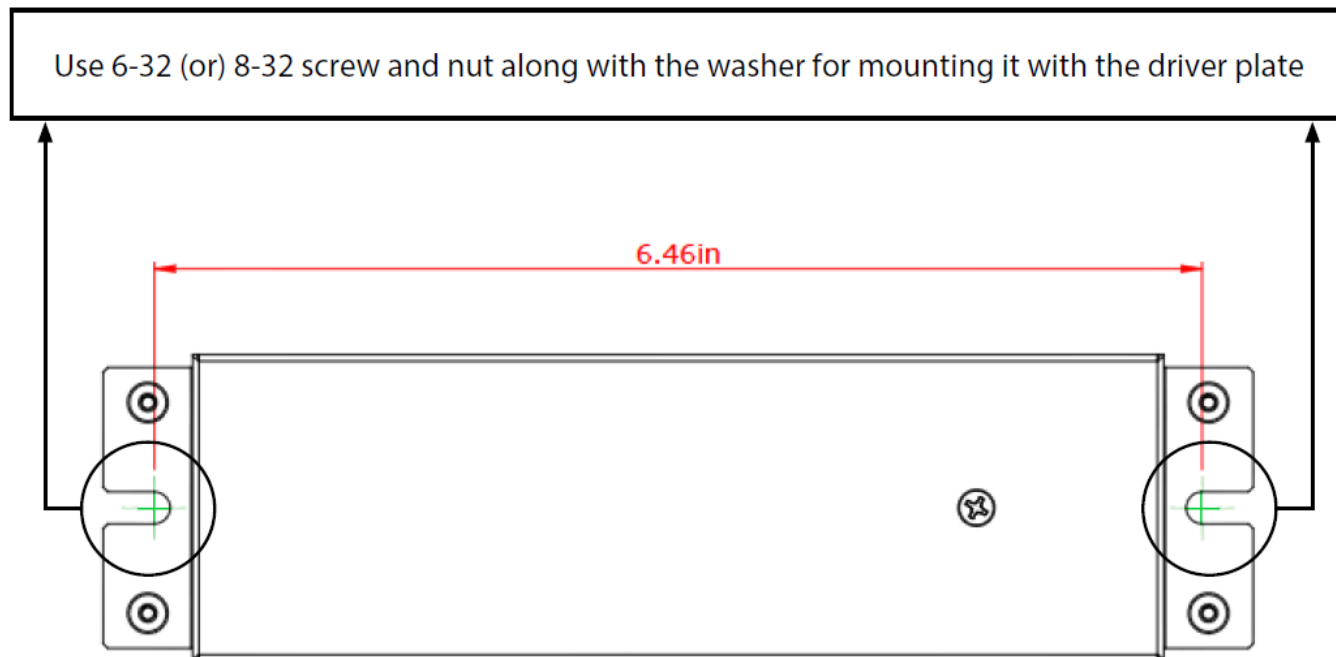

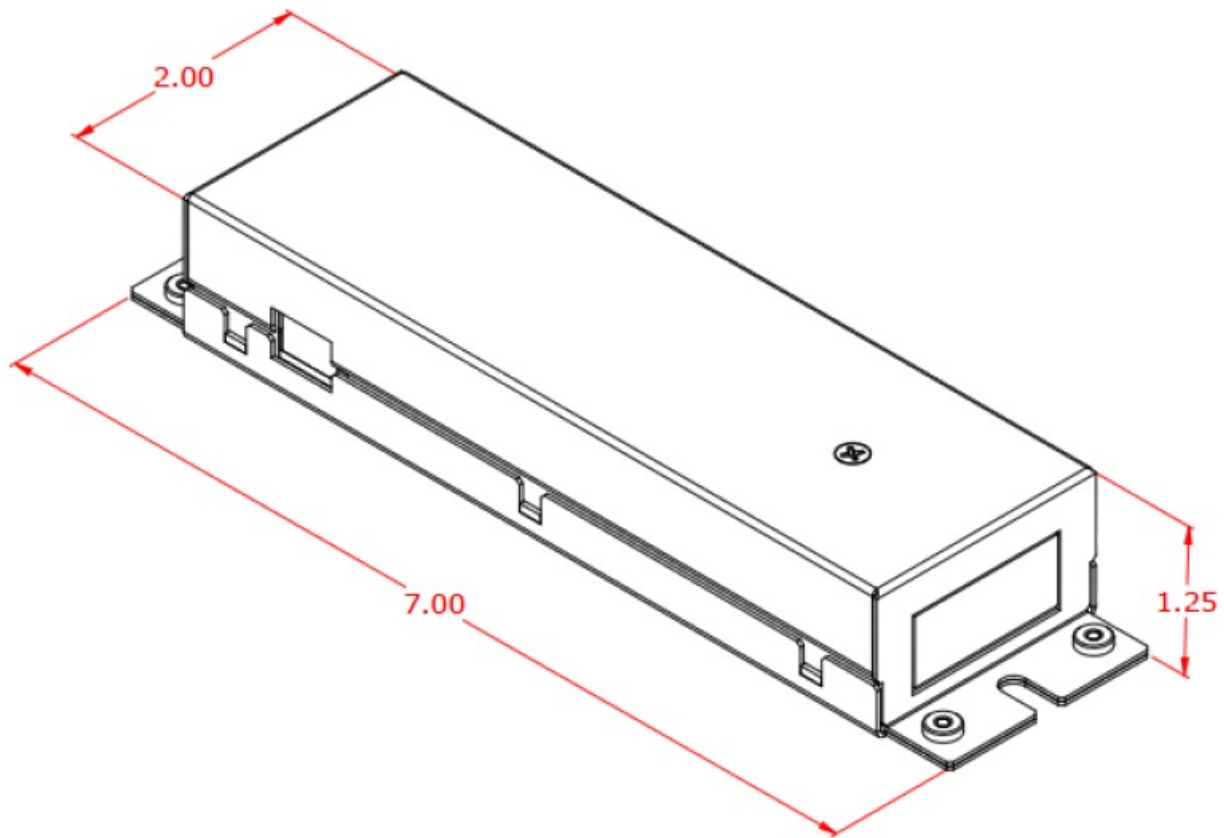

Technical Data

Standard Specifications

- **Voltage:** 120 – 277 Vac, 10A, 50/60Hz
- **Output:** 120 – 277 Vac, 5A per load, 10A Max Combined Load
- **Dimming Control:** 0-10V, Class 2
- **Operating Temperature:** 50°F to 176°F (10°C to 80°C)
- **Momentary Switch Signals:** 5vdc, 0.5mA, Class 2
- **Dimensions:** (L) 7" x (W) 2" x (H) 1 ¼"
- **Modes:** Five (5) modes of operation
- **Listing:** UL Listed
- **Warranty:** Limited five (5) year warranty

Warranty Policy

Architectural Lighting Solutions (LightMaster, Lunar Series, Skyline Series, Solar Series, Solar Eclipse Series, Solar Duo Med Series, Solar Surgical, Behavioral Series)



Amico Lights Corporation warrants its products against defective materials and workmanship for twelve (12) months from the date of shipment. Within this period, Amico Lights Corporation will repair or replace any part on-site or at the factory which is proven to be defective at Amico Lights Corporation's cost. Furthermore, Amico Lights Corporation will warrant its material to be free from defect for an additional period of four (4) years (five [5] years from the date of shipment). Within this period, Amico Lights Corporation will replace any part at no charge, which is proven to be defective. Shipping and installation costs after the first twelve (12) months will be borne by the customer. The warranty applies to normal usage and does not apply to any product that has been subject to

alteration, abuse, negligence, or use (including voltage and/or current) other than that for which the product was designed. Amico Lights Corporation shall not be liable for incidental or consequential damages resulting from the use of the equipment. All claims for warranty must first be approved by Amico Lights Corporation. A valid Return Goods Authorization (RGA) number must be obtained from Amico Lights Corporation prior to the commencement of any service work. Warranty work which has not been pre-authorized by Amico Lights Corporation will not be reimbursed. 14 Amico Lights Corporation.

- www.amico.com

Amico Lights Corporation | 122-B East Beaver Creek Road, Richmond Hill, ON L4B 1G6, Canada Toll Free Phone: 1.877.462.6426 | Toll Free Fax: 1.866.440.4986 | Tel: 905.764.0800 | Fax: 905.764.0862 Email: alt-sales@amico.com | www.amico.com ALT-IM-LIGHTMASTER-LVD 02.13.2024

Documents / Resources

<div><div>Operating and Maintenance Instructions Low Voltage Controller with Dimming</div><div></div><div></div></div>	<div>Amico Low Voltage Controller with Dimming [pdf] Instruction Manual Low Voltage Controller with Dimming, Low Voltage Controller with Dimming, Controller with Dim ming, with Dimming, Dimming</div>
--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [↗ Amico Group of Companies | Home Page](#)
- [↗ Lights](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.