

# **Angry Audio Chameleon C4 Livestream Audio Processor User** Guide

Home » Angry Audio » Angry Audio Chameleon C4 Livestream Audio Processor User Guide 🖔



### **Contents**

- 1 Angry Audio Chameleon C4 Livestream Audio **Processor**
- 2 C4 Livestream Audio Processing Gadget
- 3 Documents / Resources
- **4 Related Posts**



## **Angry Audio Chameleon C4 Livestream Audio Processor**




## **C4 Livestream Audio Processing Gadget**

#### **Preliminary User Guide**


Thanks for purchasing the C4 Livestream Audio Processing Gadget. We are grateful! The user guide is in the queue and should be published in a few months. Meantime, here are some operating notes to help you enjoy your new gadget.



For safety and mounting information, please see the Failsafe Gadget user guide: <a href="https://angryaudio.com/wp-content/uploads/2020/08/AA">https://angryaudio.com/wp-content/uploads/2020/08/AA</a> FailsafeGadgetUserGuide 2008271.pdf

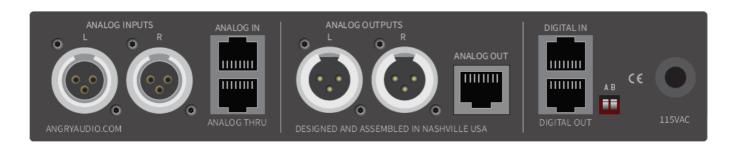

The C4 has an internal power supply, configured at the factory for either 115V or 230V. The captive power cable is fitted with the appropriate plug for the intended region. Do not attempt to modify the plug or the power supply. If your Gadget does not have the proper plug/voltage for your region, contact the factory to arrange a return/replacement. C4 is equipped with both analog and digital audio inputs and outputs. Best performance will be achieved using the digital input and output (AES/EBU) on StudioHub+ RJ45 connectors. To select the DIGITAL IN as the audio source, flip DIPswitch B to the up position. Analog inputs and outputs are presented on both XLR and StudioHub+ RJ45 connectors. A convenient ANALOG THRU is useful for daisy chaining the same source to multiple devices. The Analog Output on the StudioHub+ RJ45 connector also provides ±15VDC to certain types of connected devices. It is possible for example, to feed power and processed audio over a single CAT5 cable from this output to an Angry Audio Headphone Gizmo. The front panel controls are straightforward. The headphone amplifier with volume control has both 6.3mm and 3.5mm jacks. The jacks are mutually exclusive. Exercise caution with headphone volume! It is possible to cause permanent hearing damage with excessive volume!The graphic below explains the processing functions.

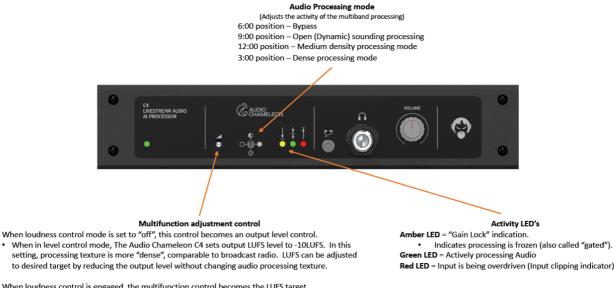

When loudness control is engaged, the multifunction control becomes the LUFS target.

At 20 turns clockwise (maximum), LUFS target is -14 LUFS. At 20 turns Counter-clockwise, LUFS target is -24 LUFS. As LUFS target is reduced, so is audio density texture. The lower LUFS, the more "open" sounding the processing becomes. -24 LUFS is useful for more transparent "upstream" audio leveling applications

The C4 Precision Loudness Controller can be engaged or bypassed via the rear panel DIPswitch. Place DIPswitch A in the up position to engage the Loudness Controller. Disengage by placing DIPswitch A in the down position.



A: 1770 Loudness control mode:

Up = Engaged Down= "Off"

B: Audio Input:

Up = AES/EBU Input <u>Down</u> = Analog Input

That's it. If you have any questions, give us a shout at: <a href="mailto:answers@angryaudio.com">answers@angryaudio.com</a> Use your new gadget in good health! Your friends @ Angry Audio

#### **Documents / Resources**



<u>Angry Audio Chameleon C4 Livestream Audio Processor</u> [pdf] User Guide Chameleon C4 Livestream Audio Processor, C4 Livestream Audio Processor, Audio Processor

Manuals+,