




ANOLiS Eminere 1 LED Light User Manual

[Home](#) » [ANOLiS](#) » ANOLiS Eminere 1 LED Light User Manual 

ANOLiS Eminere 1 LED Light

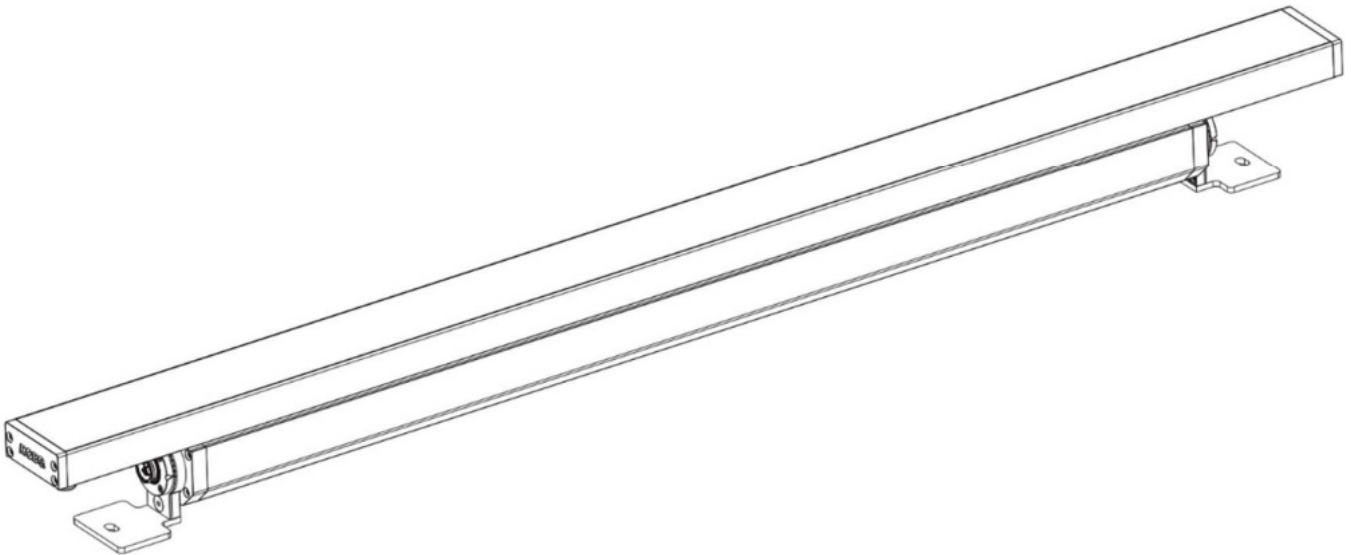

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE POWERING OR INSTALLING YOUR Eminere ! Save it for future reference.

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure safe operation, it is absolutely necessary for the user to follow the safety instructions and warnings written in this manual.

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

Unauthorized modification will void warranty.

Contents

- 1 Safety instructions
- 2 Fixture exterior view
- 3 Installation
 - 3.1 Mounting the fixture
 - 3.2 Connection to mains
 - 3.3 The Booster box
 - 3.4 The Booster box installation
- 4 Technical specifications
- 5 Cleaning and maintenance
 - 5.1 Disposing of the product
 - 5.2 ChangeLog
- 6 Documents / Resources
- 7 Related Posts

Safety instructions

DANGEROUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITHIN THIS UNIT!

This fixture should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied, consult your authorized distributor or local power company. Always disconnect the fixture from AC power before cleaning, servicing or installing. Make sure the data/power cable is not damaged by sharp edges. Check the fixture and the power cord from time to time.

Do not install the unit near an open flame.
During operation the housing becomes hot.
Refer servicing to qualified service personnel.

This fixture falls under protection class I. Therefore this fixture has to be connected to a mains socket outlet with a protective earthing connection.

Do not connect this fixture to a dimmer pack.

LED light emission. Risk of eye injury. Do not look into the beam from a short distance without suitable protective eyewear. Do not look at LEDs with magnifiers or similar optical instruments that may concentrate the light output.

The fixture was designed for outdoor use. This fixture must not be used for underwater installation.

When choosing the installation spot, please make sure that the fixture is not exposed to extreme heat or dust.

Avoid using the unit in locations subject to possible impacts. The fixture body never must be covered with cloth or other materials when the fixture is under operation.

Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.

The fixture becomes hot during operation. Allow the fixture to cool approximately 30 minutes prior to servicing or maintenance.

Operate the fixture only after having familiarized yourself with its functions. Do not permit operation by persons not qualified to operate the fixture. Most damages are the result of unprofessional operation!

Immunity of the equipment is designed for electromagnetic environments E1, E2, E3 according to the standard EN55103-2 ed.2 Electromagnetic compatibility. Product family standard for audio, video, audiovisual and entertainment lighting control apparatus for professional use. Part 2: Immunity.

The product (covers and cables) must not be exposed to a high frequency electromagnetic field higher than 3V/m

The installation company should check levels of possible interferences above the tested levels E1,E2,E3 given by this standard (e.g. transmitters in surrounding area) before installing the equipment.


Emission of the equipment complies with the standard EN55032 Electromagnetic compatibility of multimedia equipment – Emission Requirements according to class B.

Please consider that unauthorized modifications on the fixture are forbidden due to safety reasons!

Please use the original packaging if the fixture is to be transported.

If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the warranty becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burns, electric shock etc.

Fixture exterior view

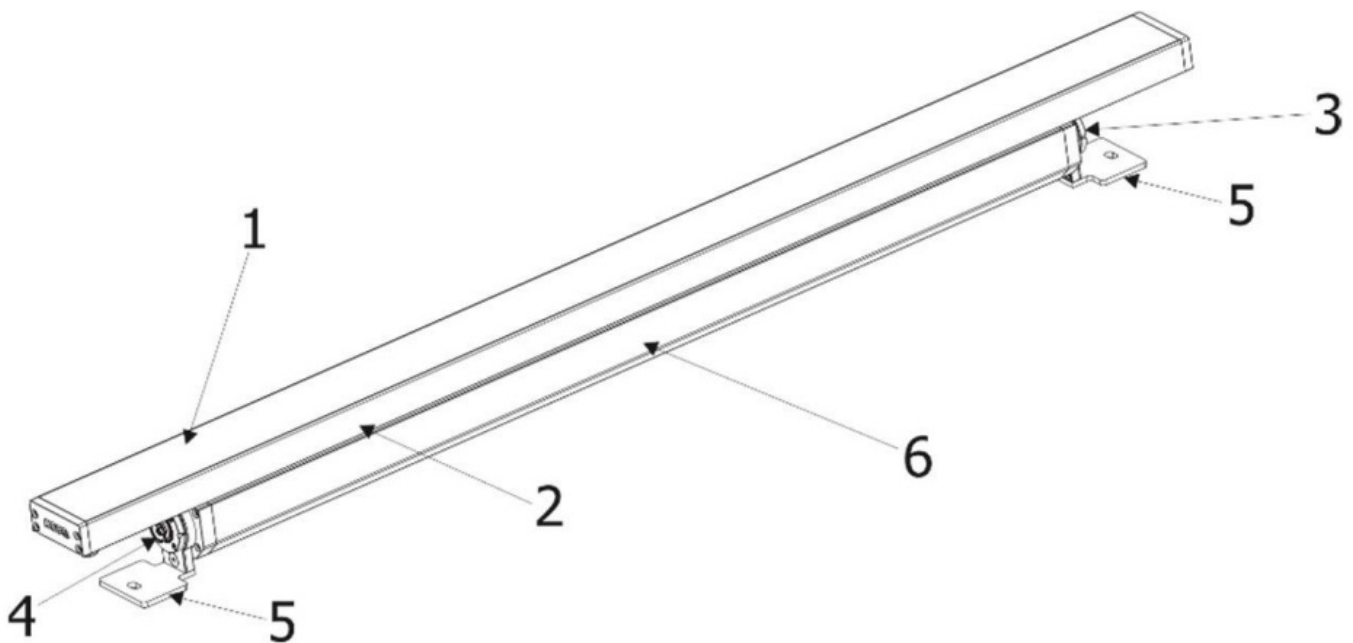


1. Transparent glass cover
2. LED module
3. Output connector
4. Input connector
5. Mounting brackets
6. Aluminium base

Installation

Mounting the fixture

The Eminere can be arranged in any orientation on a flat, non-flammable surface by means of two mounting brackets (5), the LED module (2) can be tilted ($+95^{\circ}/-95^{\circ}$) to get access to mounting brackets (5).

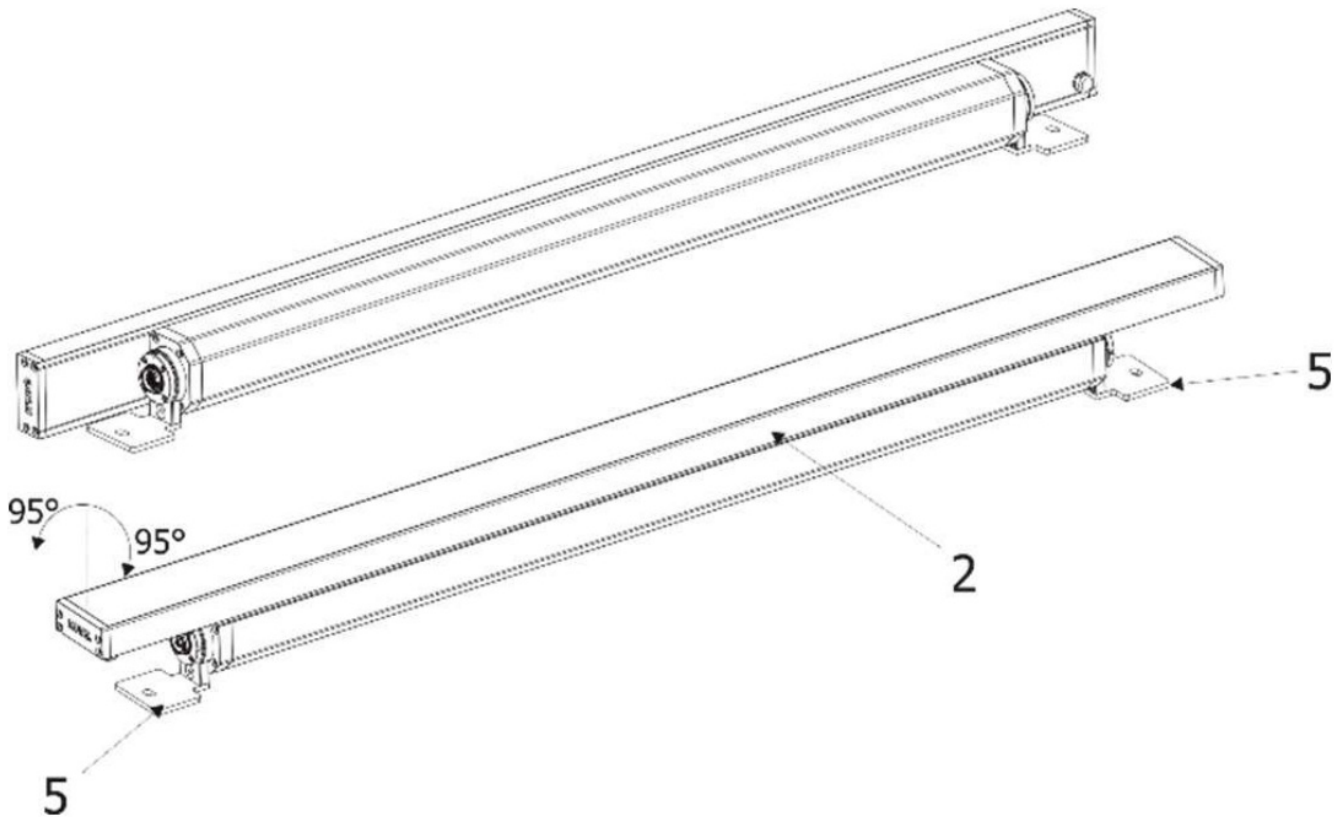

Ensure that the structure to which you are attaching the unit is secure.

Connection to mains

The unit must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations. This device falls under class one and must be grounded!

The Eminere is equipped with auto-switching power supply that automatically adjusts to any 50/60Hz AC power source from 120-277 Volts.

The following wiring of the input/output connectors applies to the fixtures marked **X** on their labels only. Older versions of the Emineres have swapped D- and D+ and do not have mark **X** on their labels.

ANOLIS 
A ROBE LIGHTING COMPANY

TYPE: EW 80 IP67 06/2020

Eminere 4 RGBCW 9°

POWER CONS.: 90W max.

POWER SUPPLY: 120-277V~ /50-60Hz

Made in CZECH REPUBLIC by ROBE LIGHTING s.r.o.,
Palackého 416/20, CZ 75701 Valtice u Mězírčie


S.No.2000724350




X ←

E.g.

Input – panel connector (front view)

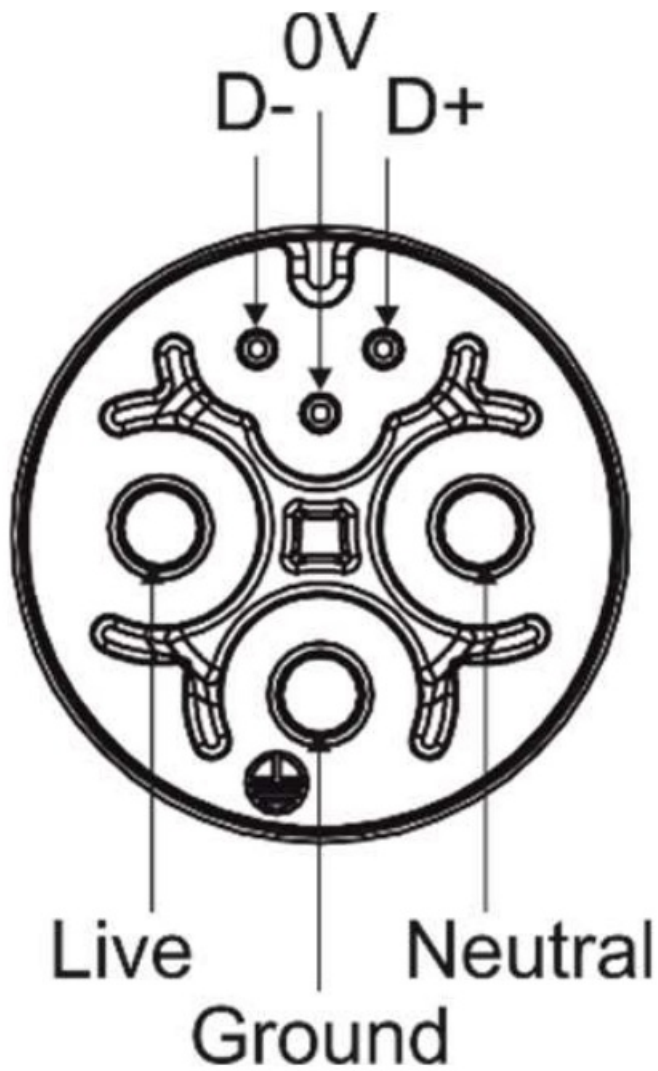

Output – panel connector (front view)

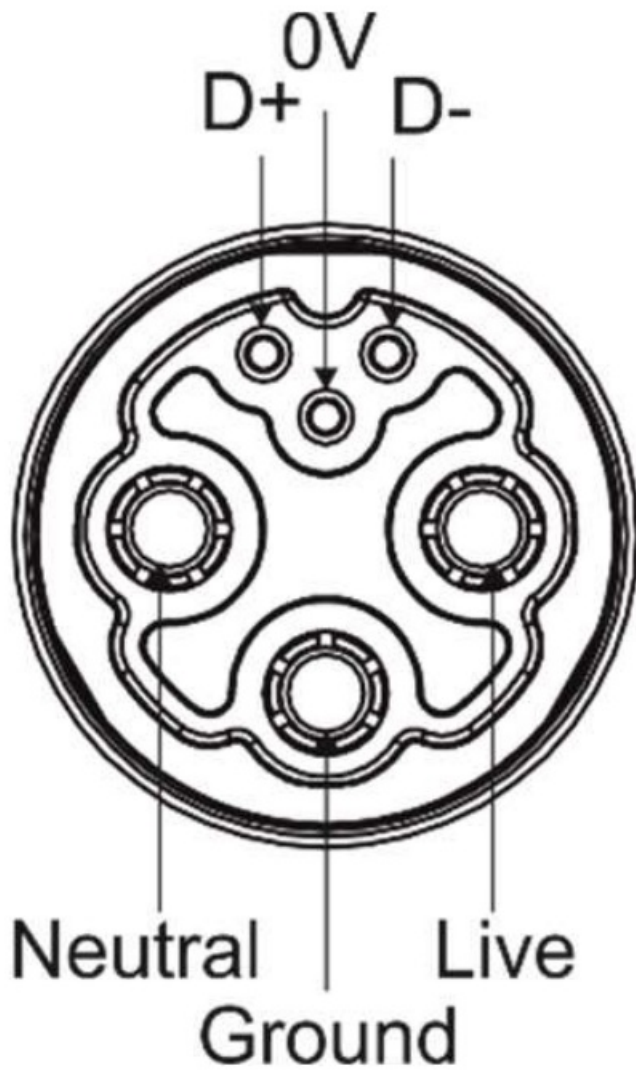

Fixture's Amphenol connectors are dust and water protected according to IP 67 by mating with related Amphenol connectors.

They cannot stay disconnected outdoor.

The output panel connector at last fixture in the Eminere chain has to always be covered with the water-tight cap to keep declared IP rating.

The Eminere modules should be connected to the E-box which allows power supply of the Eminere modules and their control.

Do not connect (disconnect) Emineres to the E-box or Booster box and each other when they are under voltage !


When you change any setting of the E-box, disconnect the E-box from power and connect it to power again to activate changes which you have made.

Examples of connection for various versions of the E-box.


Please read the E-box user manual for more information about its setting and connection to Eminere modules.

Needed cables are stated in the chapter “Technical information”. E-box Daisy


- **E-box Star**

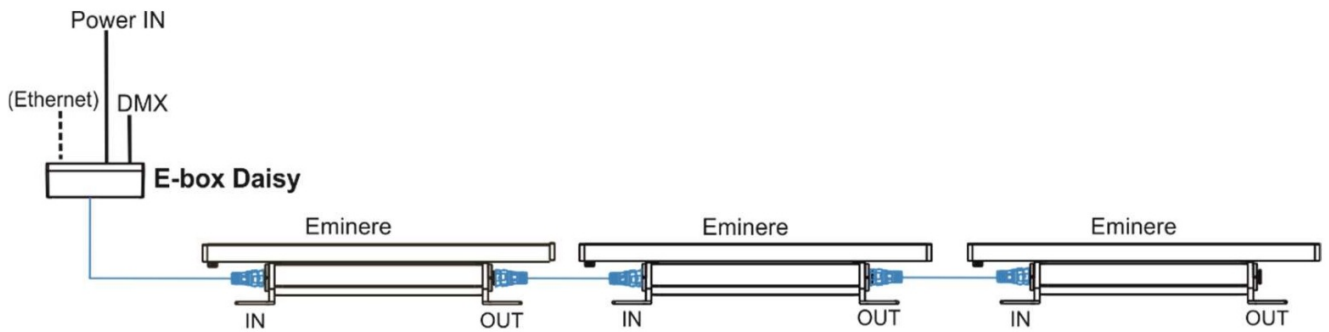


- **E-box Star**

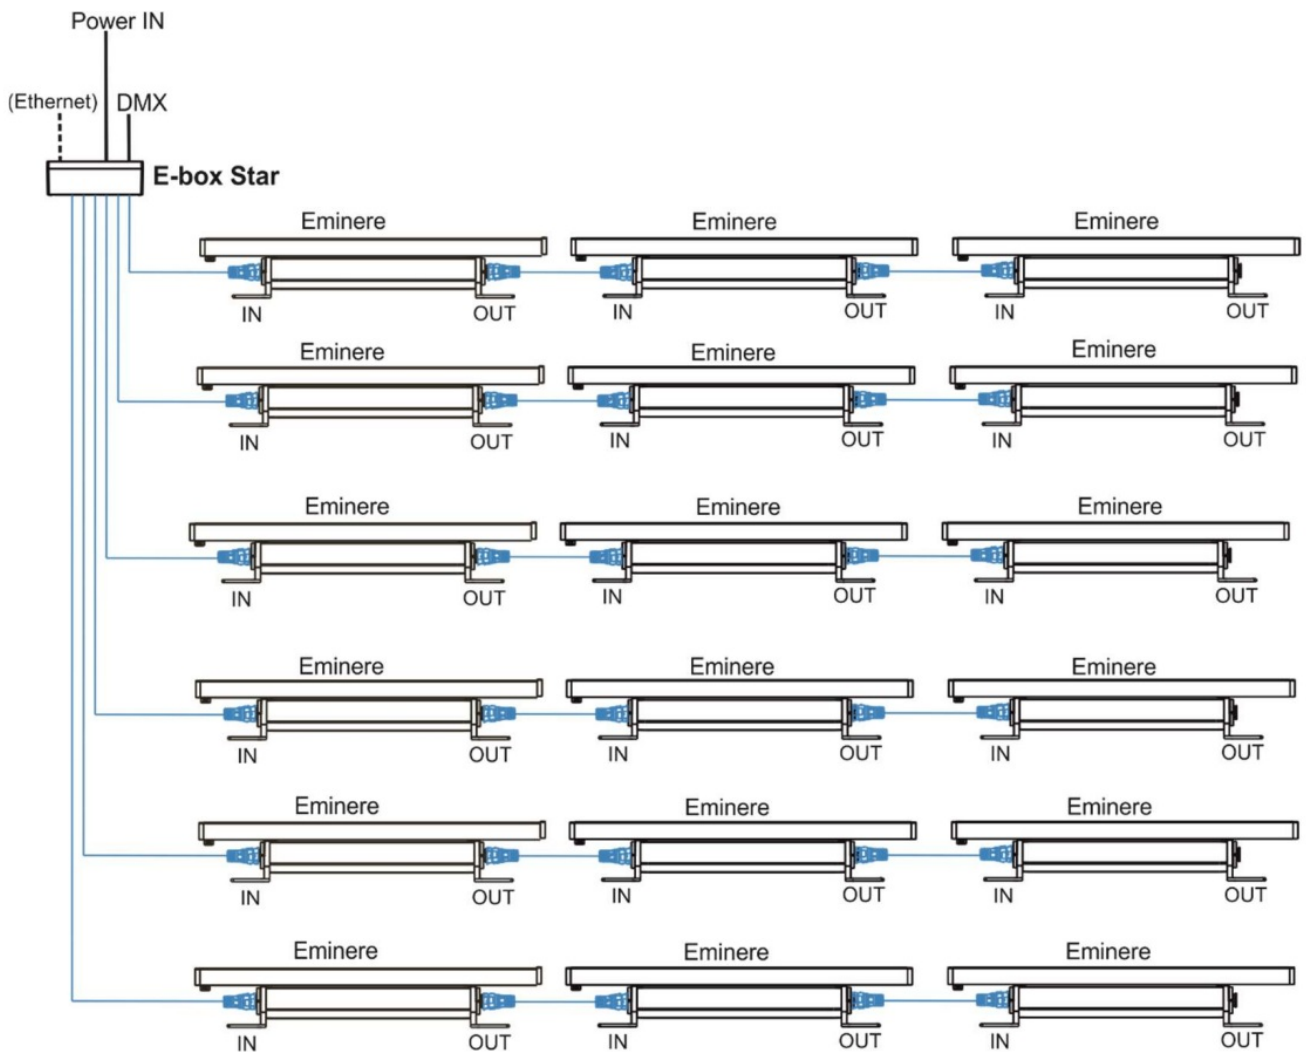

- **E-box Pro**

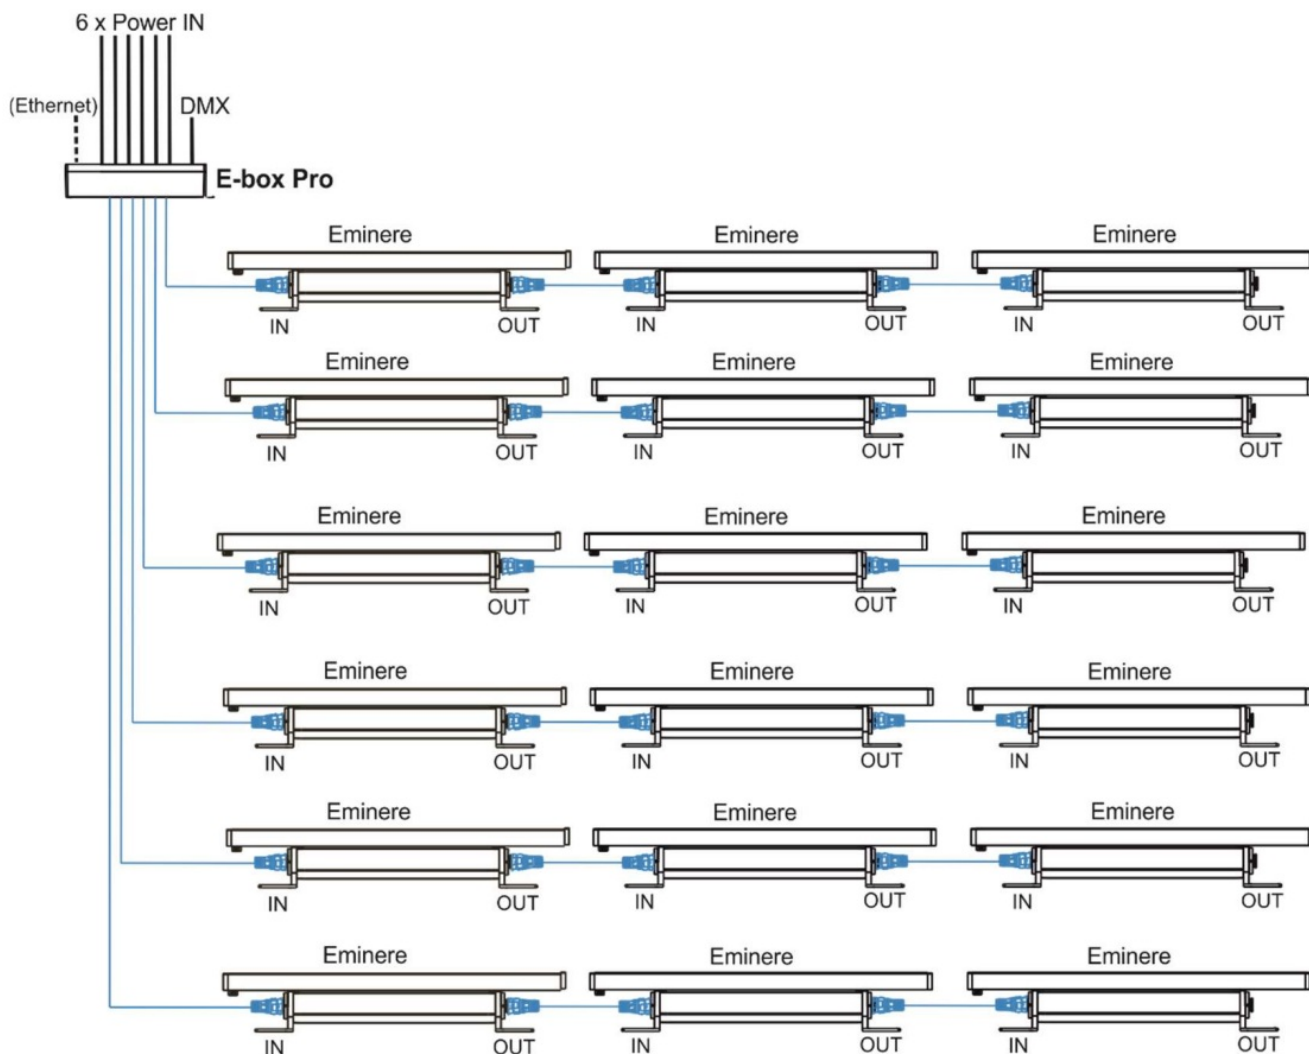

• E-box Lite

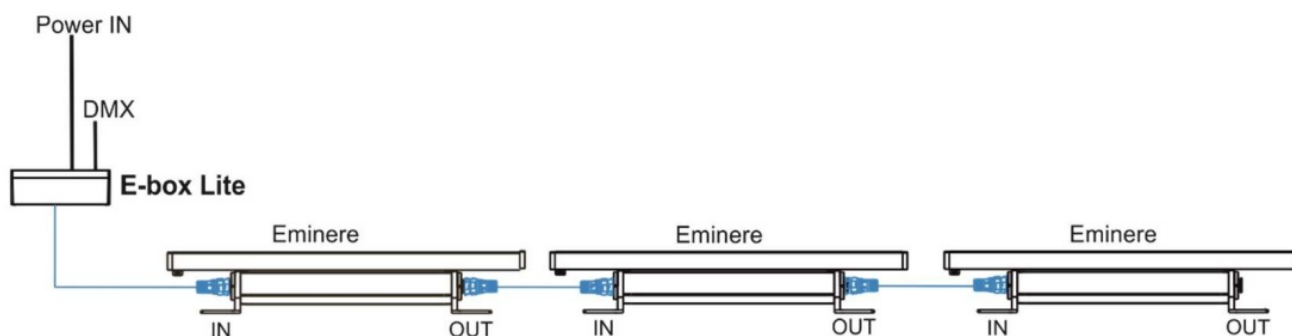

Number of connected Emineres to one E-box output depends on a cable length, power voltage, type of Eminere and E-box and operation mode.

The tables below state max. theoretical number of Emineres connected to the one LED output of the E-box without

Booster boxes. The following tables apply for the Standard mode of E-boxes.

EMINERE 1	Voltage			
Cable length *	120V	190V	230V	277V
10 m	83	131	159	191
20 m	83	131	159	191
30 m	58	131	159	191
50 m	35	88	128	186
70 m	25	63	92	133
100 m	17	44	64	93
200 m	9	22	32	47


EMINERE 2	Voltage			
Cable length *	120V	190V	230V	277V
10 m	41	64	78	94
20 m	41	64	78	94
30 m	28	64	78	94
50 m	17	43	63	91
70 m	12	31	45	65
100 m	9	21	31	46
200 m	4	11	16	23

EMINERE 3	Voltage			
Cable length *	120V	190V	230V	277V
10 m	28	44	53	64
20 m	28	44	53	64
30 m	19	44	53	64
50 m	12	29	43	62
70 m	8	21	31	44
100 m	6	15	21	31
200 m	3	7	11	16

EMINERE 4	Voltage			
Cable length *	120V	190V	230V	277V
10 m	21	33	40	48
20 m	21	33	40	48
30 m	15	33	40	48
50 m	9	22	32	47
70 m	6	16	23	38
100 m	4	11	16	23
200 m	2	5	8	12

* Cable length is a total cable length between E-box and last connected Eminere. Example: Total cable length=L1+L2+L3

E-box

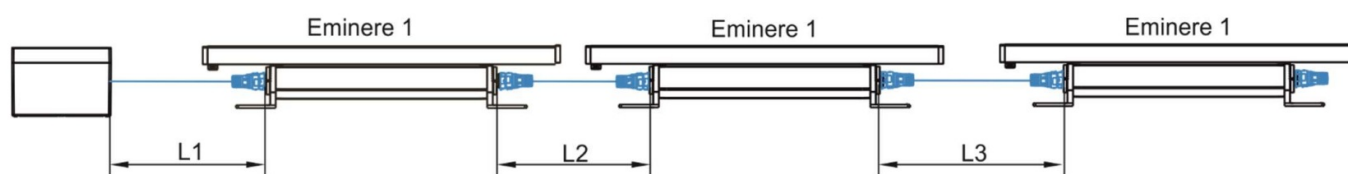

Notice for the E-box Star: The tables above state max. total number of Emineres connected to 6 LED outputs of the E-box Star (or max. number of Emineres connected to one output if the rest of outputs is not connected). The E-box Star has only one power input!

The Booster box

To compensate a voltage drop in large installation, the Booster boxes have to be connected in the chain of

Emineres at every LED output of the E-box.

The following tables give numbers of Emineres after which the Booster box has to be installed in the chain of Emineres (at one LED output of the E-box). The following tables apply for the Standard mode of E-boxes.


EMINERE 1	Max. number of Emineres 1= 191			
	Voltage			
Cable length	120V	190V	230V	277V
10 m	83,166	131	159	–
20 m	83,166	131	159	–
30 m	58,116,174	131	159	–
50 m	35,70,105,140,175	88,176	128	186
70 m	25,50,75,100,125,150,175	63,126,189	92,184	133
100 m	17,34,51,68,85,102,119, 136,153,170,187	44,88,132,176	64,128	93,186
200 m	9,18,27,36,45,54,60,72,81 90,99,108,117,126,135,144 153,162,171,180,189,	22,44,66,88,110, 132,154,176	32,64,96,128, 160	47,94,141, 188

EMINERE 2	Max. number of Emineres 2= 94			
	Voltage			
Cable length	120V	190V	230V	277V
10 m	41,82	64	78	–
20 m	41,82	64	78	–
30 m	28,56,84	64	78	–
50 m	17,34,51,68,85	43,86	63	91
70 m	12,24,36,48,60,72,84	31,62,93	45,90	65
100 m	9,18,27,36,45,54,60,72,81, 90	21,42,63,84	31,62,93	46,92
200 m	4,8,12,16,20,24,28,32,36 40,44, 48,52,56,60,64,68,72 76,80,84,8 8,92	11,22,33,44,55, 66, 77,88	16,32,48,64,80	23,46,69,92

EMINERE 3	Max. number of Emineres 3= 64			
	Voltage			
Cable length	120V	190V	230V	277V
10 m	28,56	44	53	–
20 m	28,56	44	53	–
30 m	19,38,57	44	53	–
50 m	12,24,36,48,60	29,58	43	62
70 m	8,16,24,32,40,48,56	21,42,63	31,62	44
100 m	6,12,18,24,30,36,42,48,54, 60	15,30,45,60	21,42,63	31,62
200 m	3,6,9,12,15,18,21,24,27,30, 33,36,39,42,45,48,51,54,57 60,63	7,14,21,28,35,42 49,56,63	11,22,33,44,55	16,32,48,

EMINERE 4	Max. number of Emineres 4= 48			
	Voltage			
Cable length	120V	190V	230V	277V
10 m	21,42	33	40	–
20 m	21,42	33	40	–
30 m	15,30,45	33	40	–
50 m	9,18,27,36,45	22,44	32	47
70 m	6,12,18,24,30,36,42	16,32	23,46	38
100 m	4,8,12,16,20,24,28,32,36, 40,44	11,22,33,44	16,32	23,46
200 m	2,4,6,8,10,12,14,16,18,20, 22,24 .26,28,30,32,34,36,38 40,42,44, 46	5,10,15,20,25,30 35 ,40,45	8,16,24,32,40	12,24,36

Example: E-box Daisy, Power supply= 230V, Cable length=70m, fixture=Eminere 2
The Booster box has to be connected after every 45th Eminere 2 (fixture 45 and fixture 90) from 94 fixtures.

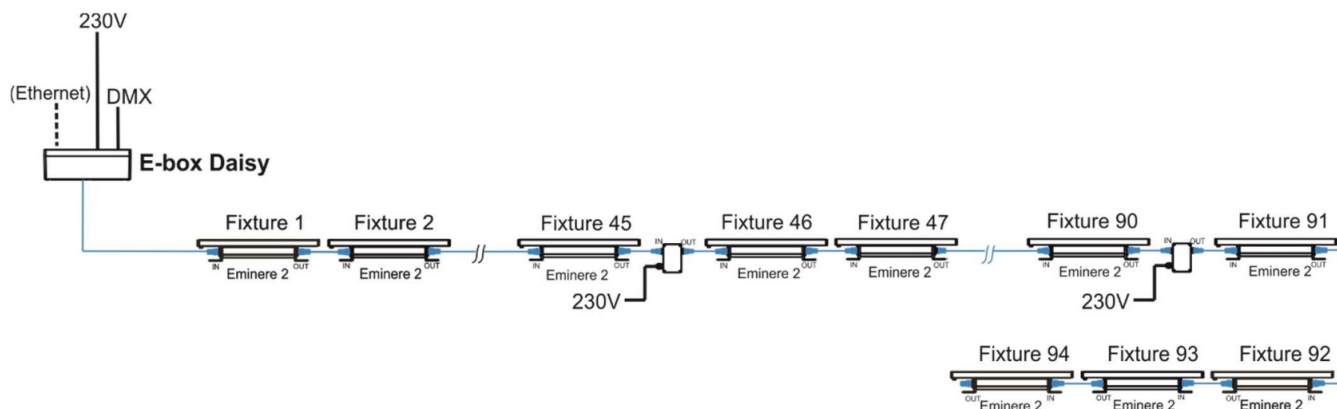


The Booster box installation

ALWAYS DISCONNECT THE EMINERES FROM MAINS BEFORE CONNECTING/DISCONNECTING THE BOOSTER BOX.


The Booster box falls under protection class I. Therefore, every Booster box has to be connected to a mains socket outlet with a protective earthing connection.

1. Unscrew the four screws (1) from the cover (2) on the Booster box to get access to the terminal block (3) and two mounting holes of diameter of 4.6 mm (4).
2. Screw the Booster box on a non-flammable flat surface and connect cables.

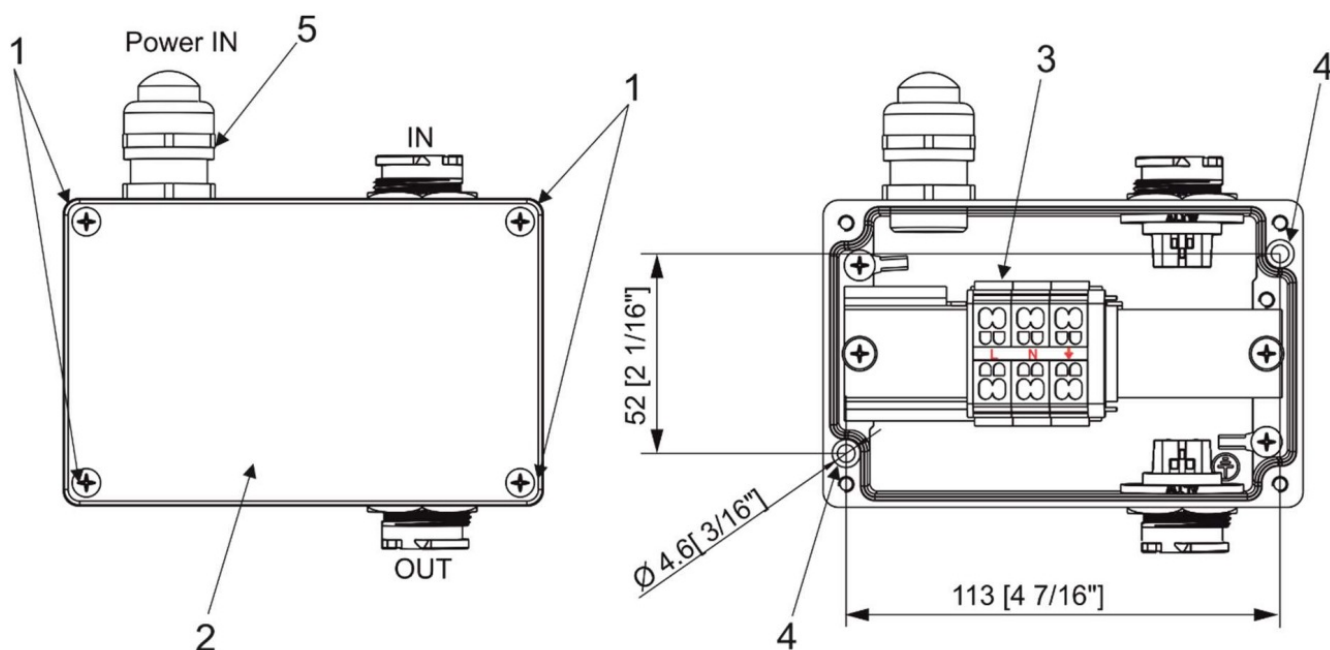


The Cable gland M20x1.5 for Power IN (5) is intended for a cable of a diameter of 7-13mm. Remove the end cap from the cable gland before passing the cable.

Power connection

	L	N	 (earth)
Core (EU)	Braun	Blue	Green/yellow
Core (US)	Black	White	Green


We recommend to apply an adequate layer of the paste LOCTITE 5331 on the plastic holder of the cable gland before inserting it into the body of the gland and an adequate layer of the paste LOCTITE 577 on the thread of the gland body.

Cable gland M20 MS:

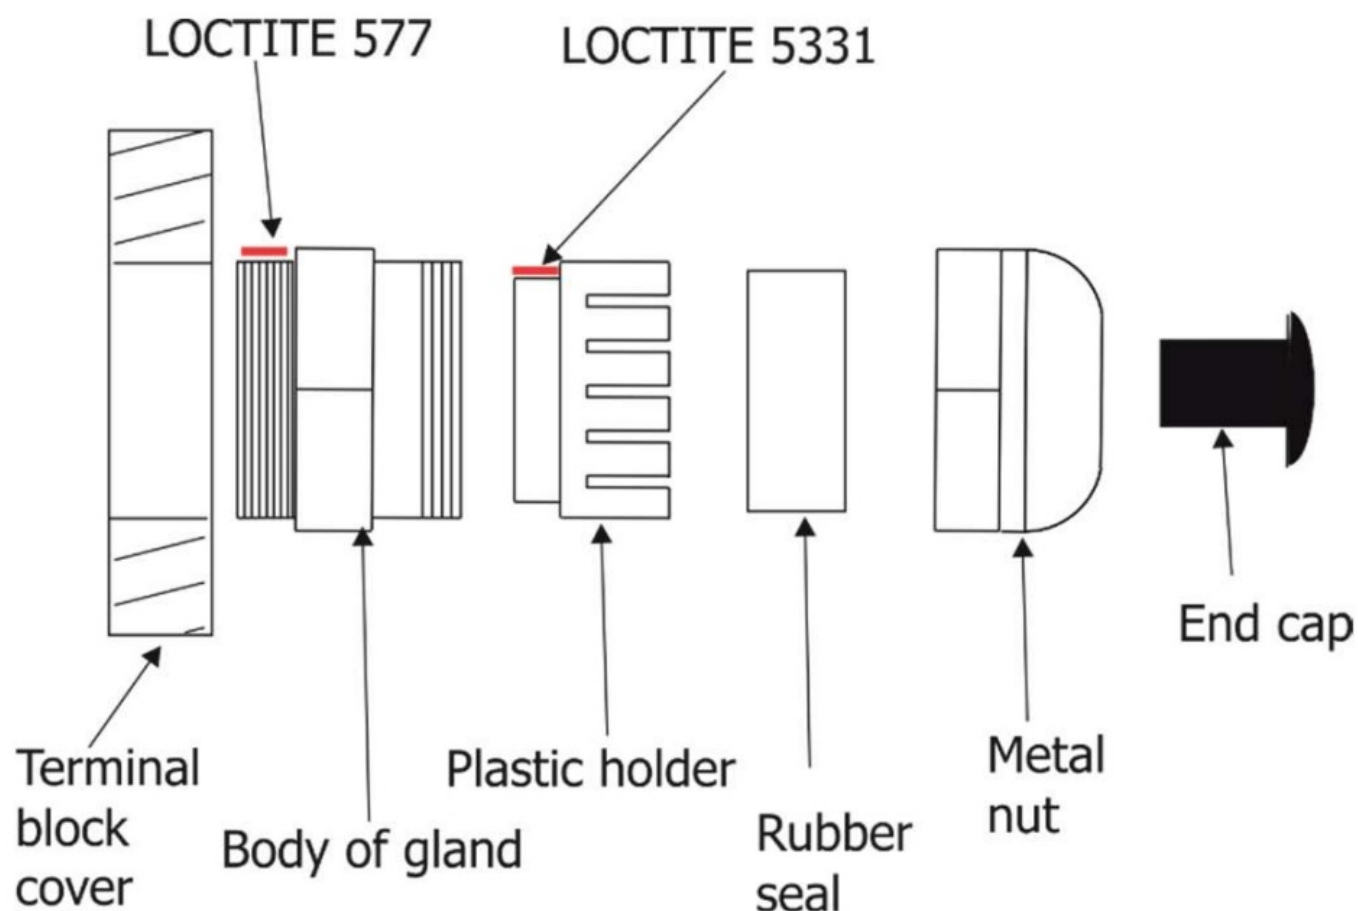


The cable gland M20 MS with a standard seal serves for a cable of diameter of 6-12mm, for smaller diameter of cable (4-8mm) you have to remove the original seal from the cable gland M20 and use the enclosed reducing seal instead of it. The reducing seal for diameter of cable 4-8mm (P/N 13051388) is enclosed in the Booster box.

1 x standard seal – part of cable gland M20 MS
(for diameter of cable: 6-12mm)

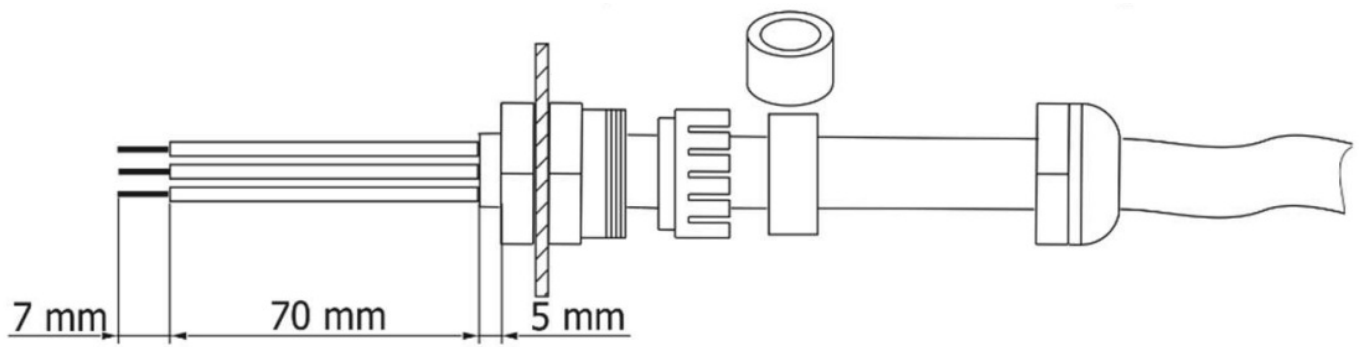

1 x reducing seal (P/N 13051388) – enclosed, standard seal has to be removed before installing this seal.
(for diameter of cable: 4-8mm)

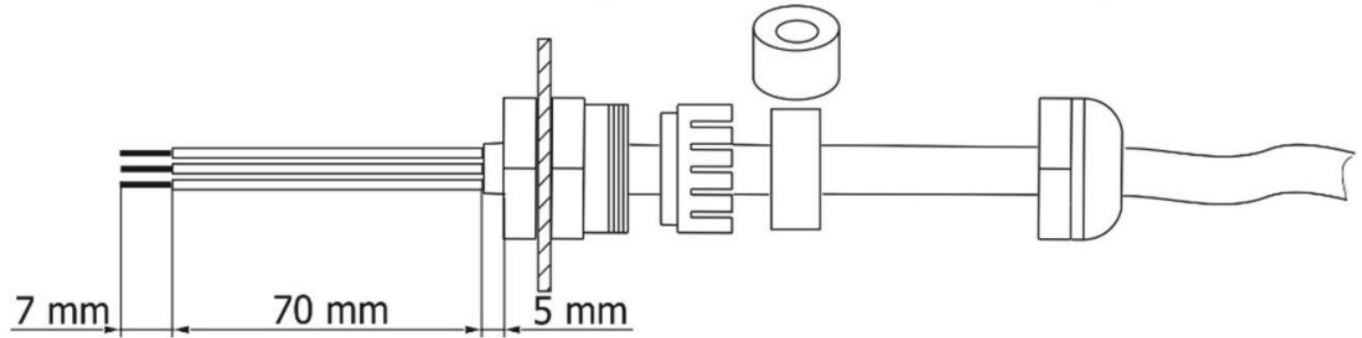

3. Screw the cover (2) back on the Booster box.

Technical specifications

Power supply

- Electronic auto-ranging
- Input voltage: 120 – 277V AC, 50/60 Hz
- Power consumption:
 - Eminere 1: 25W
 - Eminere 2: 45W
 - Eminere 3: 65W
 - Eminere 4: 85W
- Inrush current:
 - Eminere 1: <70A/250μs
 - Eminere 2: <70A/250μs
 - Eminere 3: <100A/200μs
 - Eminere 4: <100A/200μs

Optic

- Light source:
 - Eminere 1: 12 x high power LEDs
 - Eminere 2: 24 x high power LEDs
 - Eminere 3: 36 x high power LEDs

- Eminere 4: 48 x high power LEDs
- Colour variants: RGBW, RGBA, single colour
- Beam Angle:
 - Symetrical: 9°, 15°, 30°, 50°, 65°, 100°
 - Bi-symetrical: 10° x 30°, 30° x 10°, 10° x 60°, 60° x 10°, 35° x 70°, 70° x 35°, 15° x 90°, 90° x 15°
 - Wallwasher, Wide Wallwasher
- Projected LED Life: 60.000 Hrs (L70@25°/C77F)

Compatible drivers

- **E-box Daisy**
 - 1 Output
 - 1 Main power Input
 - Control: DMX, Art-Net, sACN , W-DMX control, RDM
 - Pixel control (1px= 1ft)
 - 120-277V Input
 - Connection via terminal blocks, inlets via grommet
 - IP67
- **E-box Star**
 - 6 outputs
 - 1 Main power Input
 - Control: DMX, Art-Net, sACN , W-DMX control, RDM
 - Pixel control (1px= 1ft)
 - 120-277V Input
 - Connection via terminal blocks, inlets via grommet
 - IP67
- **E-box Pro**
 - 6 outputs
 - 6 Main power Inputs
 - Control: DMX, Art-Net, sACN , W-DMX control, RDM
 - Pixel control (1px= 1ft)
 - 120-277V Input
 - Connection via terminal blocks, inlets via grommet
- **E-box Lite**
 - 1 output
 - 1 Main power Input
 - Control: DMX, W-DMX control, RDM
 - Pixel control (1px= 1ft)
 - 120-277V Input
 - Connection via screw terminal blocks, inlets via grommet
 - IP67

Mounting method

- Via two L-shape brackets
- LED module “tilt” adjustment range: -95°/+95°

Sizes

- Eminere 1 (300mm / 1ft)
- Eminere 2 (600mm / 2ft)
- Eminere 3 (900mm / 3ft)
- Eminere 4 (1200mm / 4ft)

Housing

- Aluminium extruded body with die-casted end caps
- Tempered glass

Cooling system

- Convection

Total heat dissipation

- Eminere 1: 61 BTU/h (calculated)
- Eminere 2: 130 BTU/h (calculated)
- Eminere 3: 177 BTU/h (calculated)
- Eminere 4: 228 BTU/h (calculated)

Protection factor

- CE: IP 67
- US: Suitable for wet location

Impact rating

- CE: IK06

Operating ambient temperature range

- -20°C /+40°C (-4°F /+104°F)

Operating temperature

- +67°C @ Ambient +40°C (+153°F @ Ambient +104°F)


Connection

- Input: panel connector Amphenol ABAB-DMQ06000021-IN (P/N13052952)
- Output: panel connector Amphenol ABAB-DAQ06000021 (P/N13052953) + water-tight cap


Weight

- Eminere 1: 2.5 kg (5.5 lbs)
- Eminere 2: 4 kg (8.82 lbs)
- Eminere 3: 6.02 kg (13.27 lbs)
- Eminere 4: 7.7 kg (17 lbs)

Dimensions (All dimensions in mm [inch])

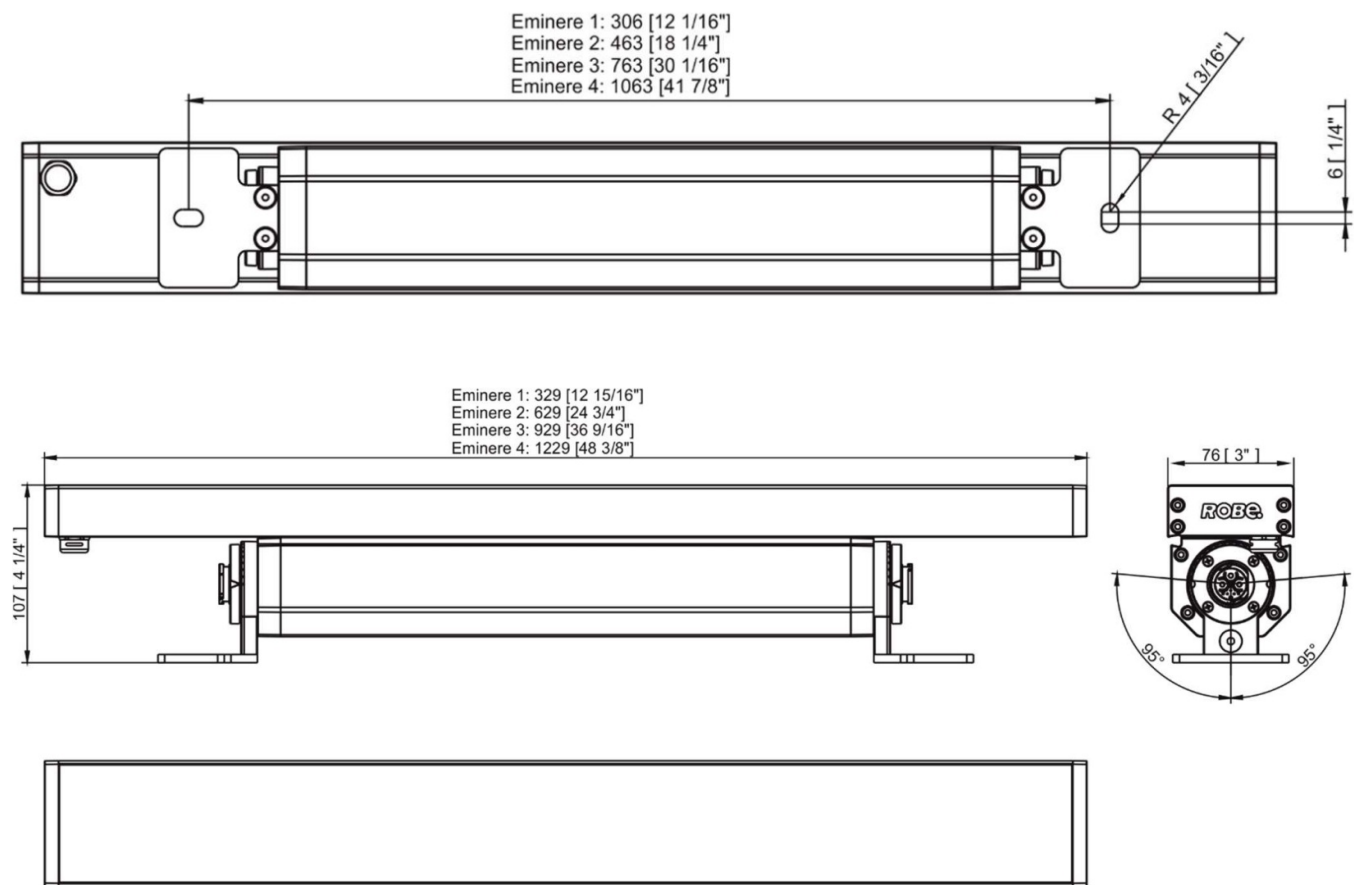

- **Booster box**

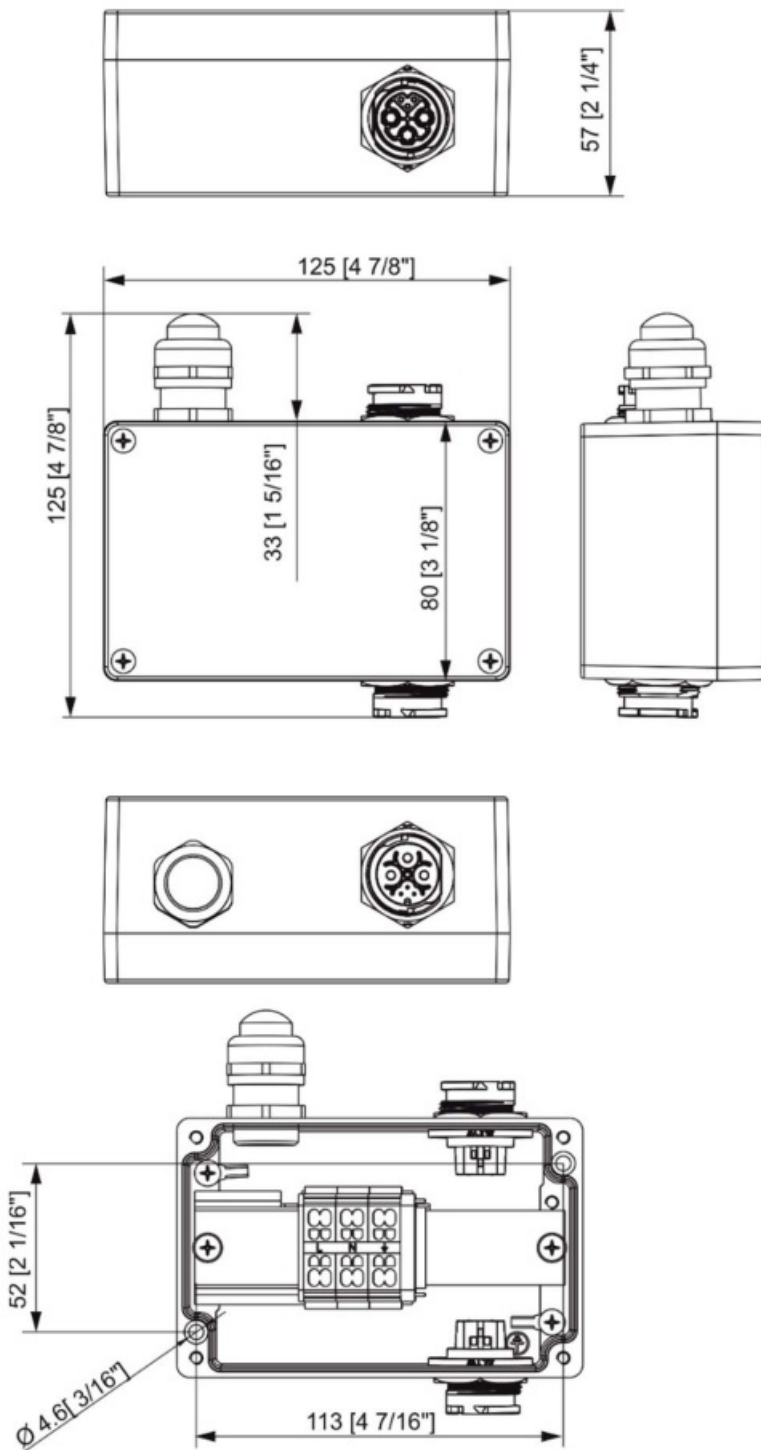

Included items

- 1 x Eminere
- 1 x User manual

Optional accessories

Leader cables:

P/N 13053005 Cable CE Leader FF 2m ABB1-DFQ06

P/N 13053006 Cable CE Leader FF 5m ABB1-DFQ06

P/N 13053007 Cable CE Leader FF 10m ABB1-DFQ06

P/N 13053008 Cable CE Leader FF 25m ABB1-DFQ06

P/N 13053009 Cable CE Leader FF 50m ABB1-DFQ06

P/N 13053010 Cable US Leader FF 2m ABB1-DFQ06
P/N 13053011 Cable US Leader FF 5m ABB1-DFQ06
P/N 13053012 Cable US Leader FF 10m ABB1-DFQ06
P/N 13053013 Cable US Leader FF 25m ABB1-DFQ06
P/N 13053014 Cable US Leader FF 50m ABB1-DFQ06
P/N 13053015 Cable CE Leader MM 2m ABB1-DMQ06

P/N 13053016 Cable CE Leader MM 5m ABB1-DMQ06
P/N 13053017 Cable CE Leader MM 10m ABB1-DMQ06
P/N 13053018 Cable CE Leader MM 25m ABB1-DMQ06
P/N 13053019 Cable CE Leader MM 50m ABB1-DMQ06
P/N 13053020 Cable US Leader MM 2m ABB1-DMQ06
P/N 13053021 Cable US Leader MM 5m ABB1-DMQ06
P/N 13053022 Cable US Leader MM 10m ABB1-DMQ06
P/N 13053023 Cable US Leader MM 25m ABB1-DMQ06
P/N 13053024 Cable US Leader MM 50m ABB1-DMQ06
P/N 13053025 Cable CE Leader FM 2m ABB1-DBQ06
P/N 13053026 Cable CE Leader FM 5m ABB1-DBQ06
P/N 13053027 Cable CE Leader FM 10m ABB1-DBQ06
P/N 13053028 Cable CE Leader FM 25m ABB1-DBQ06
P/N 13053029 Cable CE Leader FM 50m ABB1-DBQ06
P/N 13053030 Cable US Leader FM 2m ABB1-DBQ06
P/N 13053031 Cable US Leader FM 5m ABB1-DBQ06
P/N 13053032 Cable US Leader FM 10m ABB1-DBQ06
P/N 13053033 Cable US Leader FM 25m ABB1-DBQ06
P/N 13053034 Cable US Leader FM 50m ABB1-DBQ06
P/N 13053035 Cable CE Leader MF 2m ABB1-DAQ06
P/N 13053036 Cable CE Leader MF 5m ABB1-DAQ06
P/N 13053037 Cable CE Leader MF 10m ABB1-DAQ06
P/N 13053038 Cable CE Leader MF 25m ABB1-DAQ06
P/N 13053039 Cable CE Leader MF 50m ABB1-DAQ06
P/N 13053040 Cable US Leader MF 2m ABB1-DAQ06
P/N 13053041 Cable US Leader MF 5m ABB1-DAQ06
P/N 13053042 Cable US Leader MF 10m ABB1-DAQ06
P/N 13053043 Cable US Leader MF 25m ABB1-DAQ06
P/N 13053044 Cable US Leader MF 50m ABB1-DAQ06

Jumper cables:

P/N 13053052 Cable Jumper FF/FM 0,25m ABC1-DFQ06
P/N 13053053 Cable Jumper FF/FM 0,5m ABC1-DFQ06
P/N 13053054 Cable Jumper FF/FM 1m ABC1-DFQ06
P/N 13053055 Cable Jumper FF/FM 2m ABC1-DFQ06
P/N 13053056 Cable Jumper FF/FM 3m ABC1-DFQ06
P/N 13053057 Cable Jumper FF/FM 5m ABC1-DFQ06
P/N 13053058 Cable Jumper FF/FM 10m ABC1-DFQ06

E-boxes:

P/N 10063655 E-box Daisy
P/N 10063638 E-box Daisy/W
P/N 10063657 E-box Lite
P/N 10063653 E-box Lite/W
P/N 10063654 E-box PRO
P/N 10063621 E-box PRO/W
P/N 10063656 E-box Star
P/N 10063644 E-box Star/W
P/N 10063712 Booster box
P/N 10980484 Cable Cover for Eminere 1 RAL9011
P/N 10980485 Cable Cover for Eminere 2 RAL9011

P/N 10980486 Cable Cover for Eminere 3 RAL9011
P/N 10980487 Cable Cover for Eminere 4 RAL9011
P/N 10980488 Shield for Eminere 1 RAL9011
P/N 10980489 Shield for Eminere 2 RAL9011
P/N 10980490 Shield for Eminere 3 RAL9011
P/N 10980491 Shield for Eminere 4 RAL9011

Cleaning and maintenance

DANGER !

Disconnect from the mains before starting any maintenance or cleaning work

Rinse off loose dirt with low pressure water spray. Wash the housing with a soft brush or sponge and a mild, nonabrasive washing detergent. Rinse it.

Maintenance and service operations are only to be carried out by a qualified person.

Should you need any spare parts, please use ROBE OEM parts.

Disposing of the product

To preserve the environment please dispose or recycle this product at the end of its life according to the local regulations and codes.

ChangeLog

This section summarizes changes in the user manual.

Version of manual	Date of issue	Description of changes
1.1	07/10/2019	Inrush current added to chapter Technical Specifications
1.2	25/11/2019	Booster box added
1.3	06/01/2020	Electromagnetic emission information
1.4	22/04/2020	Technical specifications more specified
1.5	18.05/2020	Wiring of input/output connectors changed
1.6	22/06/2020	Voltage range change
1.7	10/09/2020	Booster box seal overview added
1.8	16/12/2020	New dimensions picture
1.9	22/07/2021	New accessories added
2.0	19/08/2021	Jumper cables changed in Optional accessories
2.1	13/10/2021	Technical specifications changed

Specifications are subject to change without notice.

October 13, 2021

Copyright © 2019-2021 Robe Lighting – All rights reserved

Made in CZECH REPUBLIC by ROBE LIGHTING s.r.o. Palackeho 416/20 CZ 75701 Valasske Mezirici



Documents / Resources

	<p>ANOLiS Eminere 1 LED Light [pdf] User Manual</p> <p>Eminere 1, Eminere 2, Eminere 3, Eminere 4, Eminere 1 LED Light, Eminere 1, LED Light, Light</p>
	<p>ANOLiS Eminere 1 LED Light [pdf] User Manual</p> <p>Eminere 1, Eminere 2, Eminere 3, Eminere 4, Eminere 1 LED Light, LED Light, Light</p>