

## Contents [ [hide](#) ]

- 1 [antaira RS232 Serial to USB Type C Adapter Cable](#)
- 2 [Introduction](#)
- 3 [Connector Layout](#)
- 4 [Features](#)
- 5 [Plugging the Adapter Cable](#)
- 6 [Installing Drivers](#)
- 7 [Male DB9 Pin Assignments and Cable Wiring](#)
- 8 [Environmental Specifications](#)
- 9 [FAQ](#)
- 10 [Documents / Resources](#)
  - 10.1 [References](#)



## antaira RS232 Serial to USB Type C Adapter Cable



## Specifications

- Provides 1 RS232 Serial Port over USB Port
- Provides 1 DTE, DSUB-9 Male Connector with Exchangeable Screw and Hex Nut Option
- Supports USB2.0 Type-C Full Speed (12Mbps) Data Rate
- Baud Rate from 300bps to 921.6Kbps
- Supports 7, 8 Data Bits, 1 or 2 Stop Bits
- Odd, Even, Mark, Space, or None parity mode
- Supports USB Bus Power
- Supports TXD and RXD Activity LED Indicators
- Supports Win98, Me, XP, CE, Win2000, 2003, Vista, Win 7, 8.x, 10, 11, Linux, and Mac OS

## **Introduction**

Thank you for purchasing this RS232 Serial to USB2.0 Type-C Adapter Cable with DB9 Male Connector (the “Adapter Cable”). It is an intelligent expansion cable that connects to a PC or server via the Universal Serial Bus (USB), providing high-speed serial connectivity. The serial port is fully compatible with RS232 DTE serial standard by the bundled virtual COM port drivers. With its compact size and exchangeable hex nut and screw connection options, it is an ideal and instant solution for most critical applications.

## **Connector Layout**




## Features

- Provides 1 RS232 Serial Ports over USB Port
- Provides 1 DTE, DSUB-9 Male Connector with Exchangeable Screw and Hex Nut Option
- Supports USB2.0 Type-C Full Speed (12Mbps) Data Rate
- Baud Rate from 300 bps to 921.6Kbps
- Supports 7,8 Data Bits, 1 or 2 Stop Bits
- Odd, Even, Mark, Space, or None parity mode
- Supports USB Bus Power
- Supports TXD and RXD Activity LED Indicators
- Supports Win98, Me, XP, CE, Win2000, 2003, Vista, Win 7, 8.x, 10, 11, Linux and Mac OS

## Plugging the Adapter Cable

1. Plug the USB Type-C end of the Adapter Cable into the USB host port of your PC or into an available USB port on a USB hub.

2. Connect the RS232 Serial Device to the DB9 male connector of the Adapter Cable.
3. In case the opposite side DB9 to connect has screws, then you may need to replace the 2 screws of this Adapter Cable with hex nuts to match it. Simply removing the screw by turning it counterclockwise while pulling it out, then install the hex nut in the front side.
- 4.

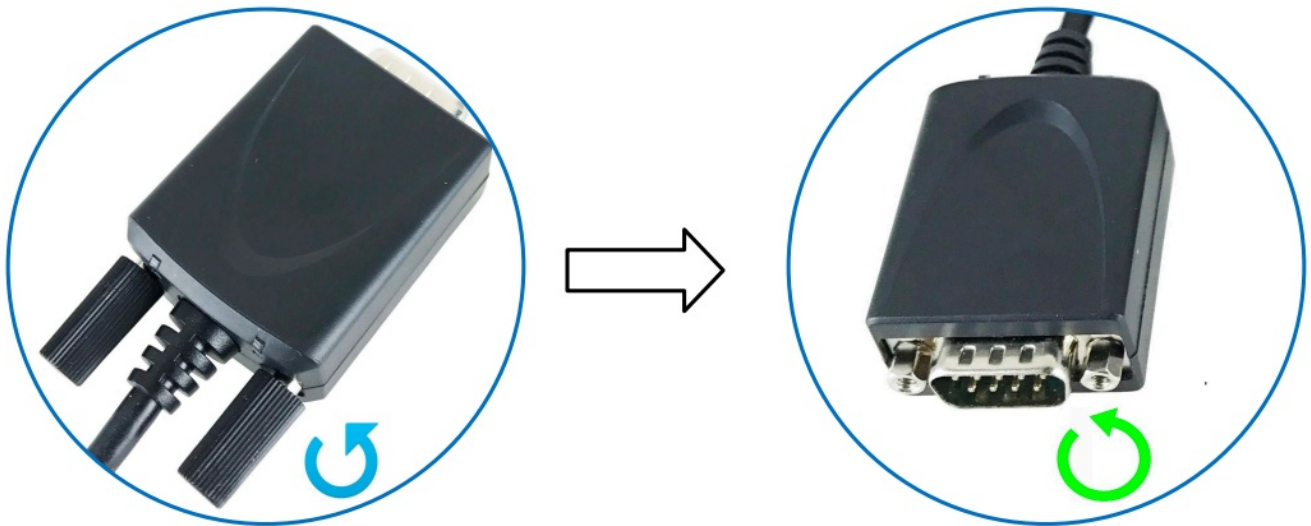


Proceed with the next section “Installing Drivers” to install the virtual COM port drivers for your Operating System.

## Installing Drivers

The Adapter Cable can be hot-plugged to the USB port of your computer due to the specifications of USB. It supports the following operating systems. The drivers are shipped in the following folder on the supplied driver CD.

### 1. Driver Locations on the CD


These instructions are for installing the drivers from the CD supplied with the product. If you are installing Windows drivers, when prompted for the location of the drivers, specify your CD-ROM drive and the locations according to the following table:

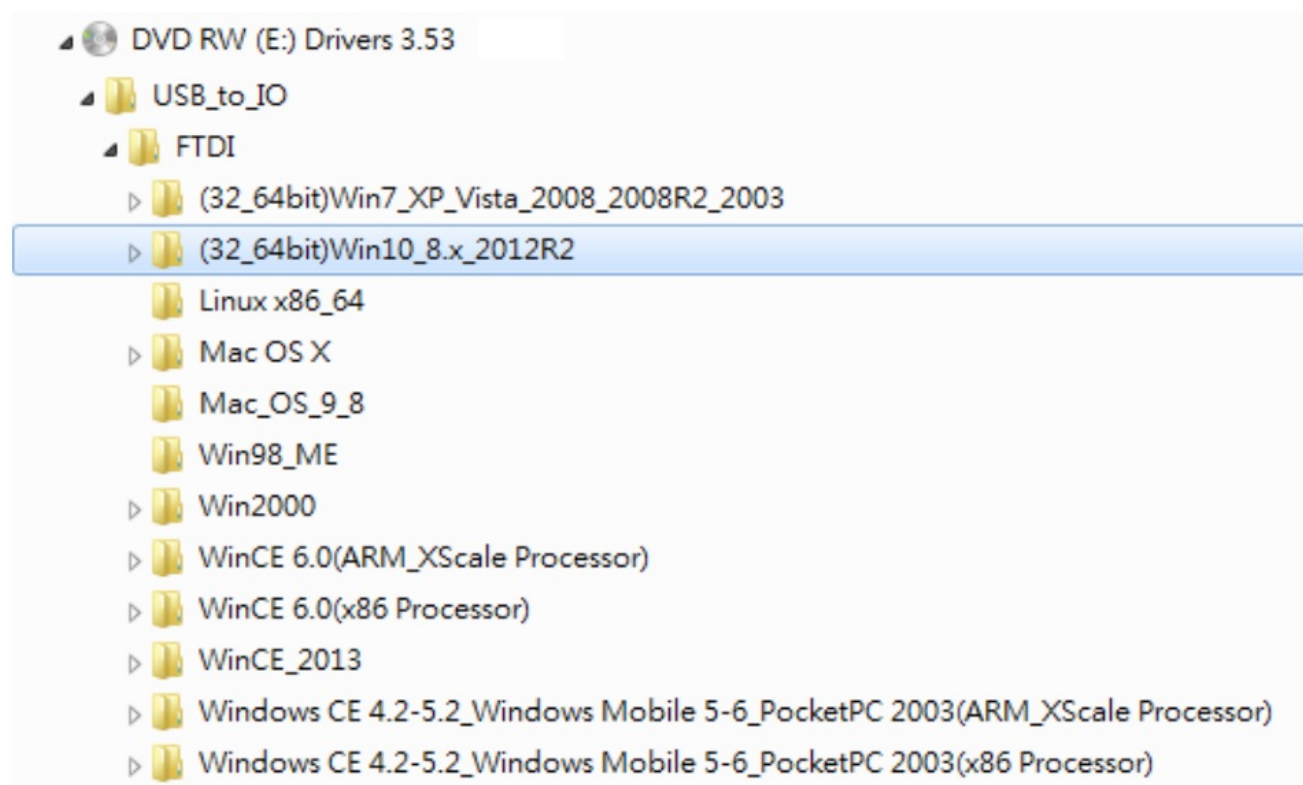

## 2. Installing Drivers with Installer:


- Insert the Driver CD supplied with the Adapter Cable.
- Run (or double click) the Installer Program (e.g. CDM v2.12.06 WHQL Certified.exe ) in the corresponding folder for the OS on the driver CD:
- Follows the instructions of the installer program to complete the setup procedures.
- Plugging the Adapter Cable will hook the drivers into the Windows kernel automatically.

## Male DB9 Pin Assignments and Cable Wiring

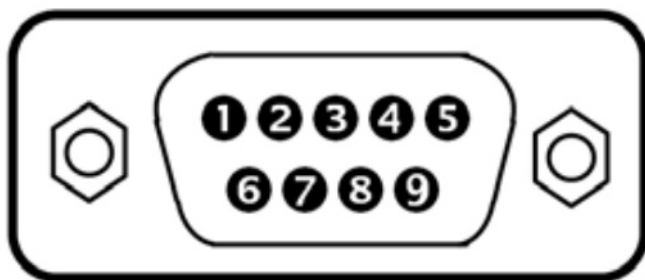

| <u>9 Pins</u> | <u>Signal</u> |
|---------------|---------------|
| 1             | DCD           |
| 2             | RXD           |
| 3             | TXD           |
| 4             | DTR           |
| 5             | GND           |
| 6             | DSR           |
| 7             | RTS           |
| 8             | CTS           |
| 9             | RI            |

DB9(Male) to DB9(Male) Wiring

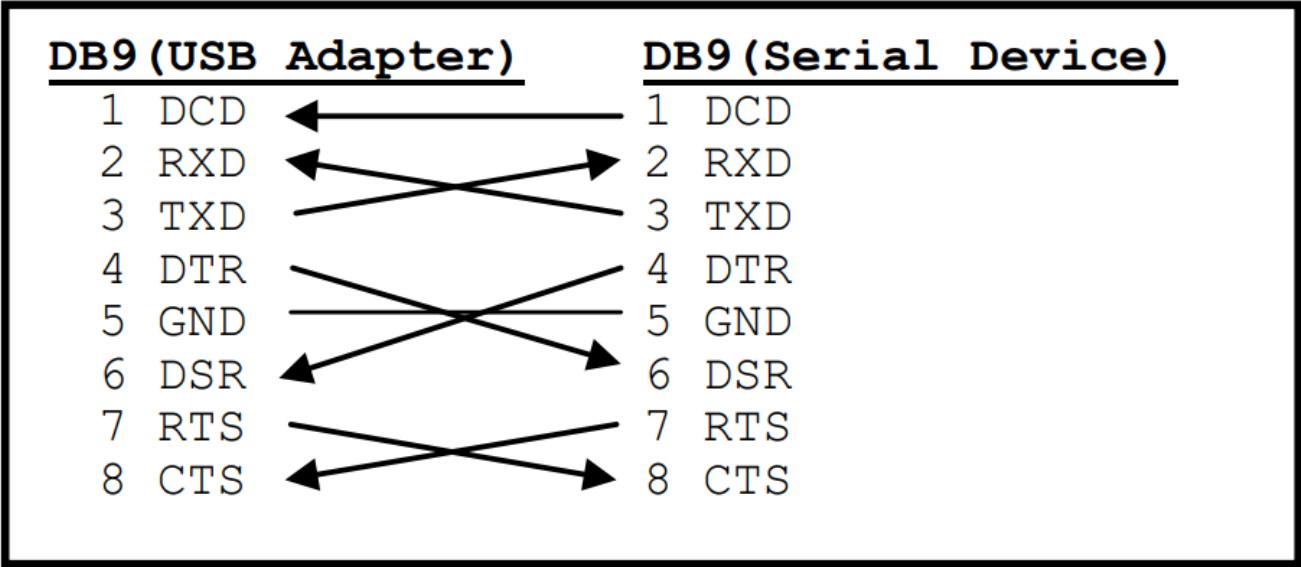


Environmental Specifications

- Power requirements: 5V DC, 135mA (max)
- Operating temperature: 0 to 55°C (32 to 131°F)
- Operating humidity: 5 to 95% RH

FAQ

- **Q: Can this adapter cable work with Windows 10?**  
A: Yes, this adapter cable supports Windows 10 among other operating systems like Win98, Me, XP, CE, Win2000, 2003, Vista, Win 7, 8.x, and 11.
- **Q: What is the maximum baud rate supported by this adapter cable?**  
A: The adapter cable supports baud rates from 300bps to 921.6Kbps.

Documents / Resources

|   |  |
|---|--|
|  | <p><a href="#">Antaira RS232 Serial to USB Type C Adapter Cable [pdf]</a> Installation Guide</p> <p>UTS-USBC-DB9M-A, RS232 Serial to USB Type C Adapter Cable, RS232, Serial to USB Type C Adapter Cable, USB Type C Adapter Cable, Adapter Cable, Cable</p> |
|---|--|

## References

- [User Manual](#)

■ antaira

◆ Adapter cable, antaira, Cable, RS232, RS232 Serial to USB Type C Adapter Cable, Serial to USB Type C Adapter Cable, USB Type C Adapter Cable, UTS-USBC-DB9M-A

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.