

AOC GAMING CU34G2XE-BK LCD Monitor



# AOC GAMING CU34G2XE-BK LCD Monitor User Manual

[Home](#) » [AOC GAMING](#) » AOC GAMING CU34G2XE-BK LCD Monitor User Manual 

## Contents

- 1 AOC GAMING CU34G2XE-BK LCD Monitor
- 2 Safety
- 3 Setup
  - 3.1 Contents in Box
  - 3.2 Stand & Base Setup
  - 3.3 Adjusting Viewing Angle
  - 3.4 Connecting the Monitor
  - 3.5 Wall Mounting
  - 3.6 Adaptive-Sync function
- 4 Adjusting
  - 4.1 Hotkeys
  - 4.2 OSD Setting
  - 4.3 LED Indicator
- 5 Troubleshoot
- 6 Specification
- 7 Documents / Resources
  - 7.1 References



AOC GAMING CU34G2XE-BK LCD Monitor



## Specifications

- **Model:** CU34G2XE/BK
- **Brand:** AOC
- **Website:** [www.aoc.com](http://www.aoc.com)

## Safety

Ensure the following safety guidelines are adhered to while using the monitor:

1. Operate the monitor only from the specified power source.
2. Use a three-pronged grounded plug and do not defeat its safety feature.
3. Unplug the unit during lightning storms or long periods of inactivity to prevent damage.
4. Avoid overloading power strips and extension cords to prevent fire hazards.

## Installation

Follow these installation instructions for proper setup:

1. Use a stable cart, stand, tripod, bracket, or table recommended by the manufacturer.
2. Avoid pushing objects into monitor slots and spilling liquids on the monitor.
3. Do not place the monitor on the floor and ensure proper ventilation.
4. If wall-mounting, use an approved mounting kit and follow the instructions provided.
5. Maintain a minimum distance around the monitor to allow for adequate air circulation.
6. Avoid tilting the monitor downward beyond -5 degrees to prevent damage not covered under warranty.

## FAQ

- **Q: Can I use a different power source than indicated on the label?**

A: It is recommended to use only the specified power source to avoid damage to the monitor.

- **Q: What should I do if I spill liquid on the monitor?**

A: Immediately power off the monitor, unplug it and allow it to dry completely before attempting to use it again.

- **Q: How much space should I leave around the monitor for ventilation?**

A: Follow the recommended distances of 12 inches (30cm) on the sides and 4 inches (10cm) on the top and bottom for proper ventilation.

## Safety

### National Conventions

The following subsections describe national conventions used in this document.

### Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or italic type. These blocks are notes, cautions, and warnings, and they are used as follows:

- **NOTE:** A NOTE indicates important information that helps you make better use of your computer system.
- **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.
- **WARNING:** A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.


## Power

- The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- The monitor is equipped with a three-pronged grounded plug and a plug with a third (grounding) pin.
- This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.
- Unplug the unit during a lightning storm or when it will not be used for long periods. This will protect the monitor from damage due to power surges.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- To ensure satisfactory operation, use the monitor only with UL-listed computers that have appropriate configured receptacles marked between 100-240V AC, Min. 5A.
- The wall socket shall be installed near the equipment and shall be easily accessible.

## Installation

- Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.
- Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.
- Do not place the front of the product on the floor.

- If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.
- Leave some space around the monitor as shown below. Otherwise, air circulation may be inadequate hence overheating may cause a fire or damage to the monitor.
- To avoid potential damage, for example, the panel peeling from the bezel, ensure that the monitor does not tilt downward by more than -5 degrees. If the -5 degree downward tilt angle maximum is exceeded, the monitor damage will not be covered under warranty.
- See below the recommended ventilation areas around the monitor when the monitor is installed on the wall or the stand:

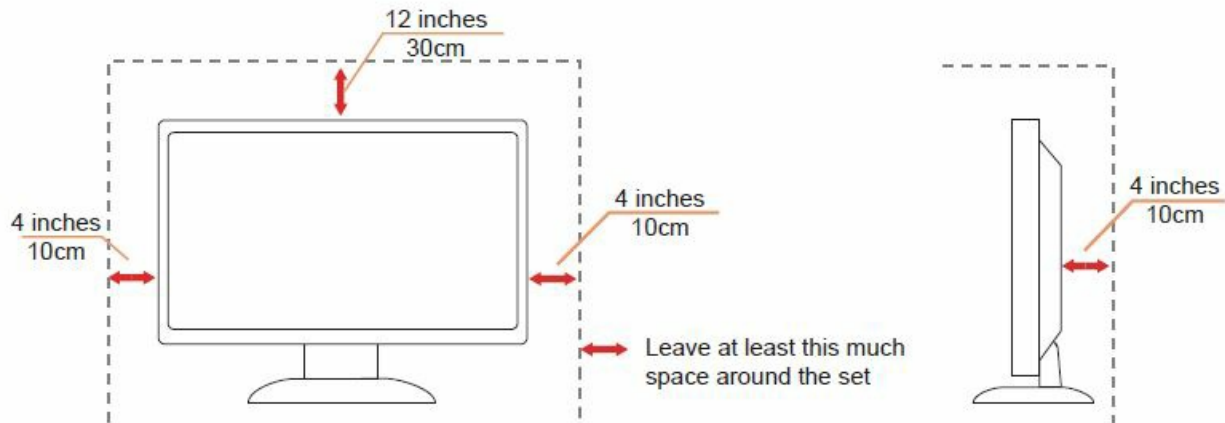

- Please purchase a suitable wall mount to avoid the lack of distance between the back signal cable and the wall.

## Cleaning

- Clean the cabinet regularly with a water-dampened, soft cloth.
- When cleaning use a soft cotton or microfiber cloth. The cloth should be damp and almost dry, do not allow liquid into the case.



- Please disconnect the power cord before cleaning the product.


## Other

- If the product is emitting a strange smell, sound, or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.
- Make sure that the ventilating openings are not blocked by a table or curtain.
- Do not engage the LCD monitor in severe vibration or high-impact conditions during operation.
- Do not knock or drop the monitor during operation or transportation.
- Excessive sound pressure from earphones and headphones can cause hearing loss. Adjustment of the

equalizer to maximum increases the earphones and headphones output voltage and therefore the sound pressure level.

## Setup

### Contents in Box

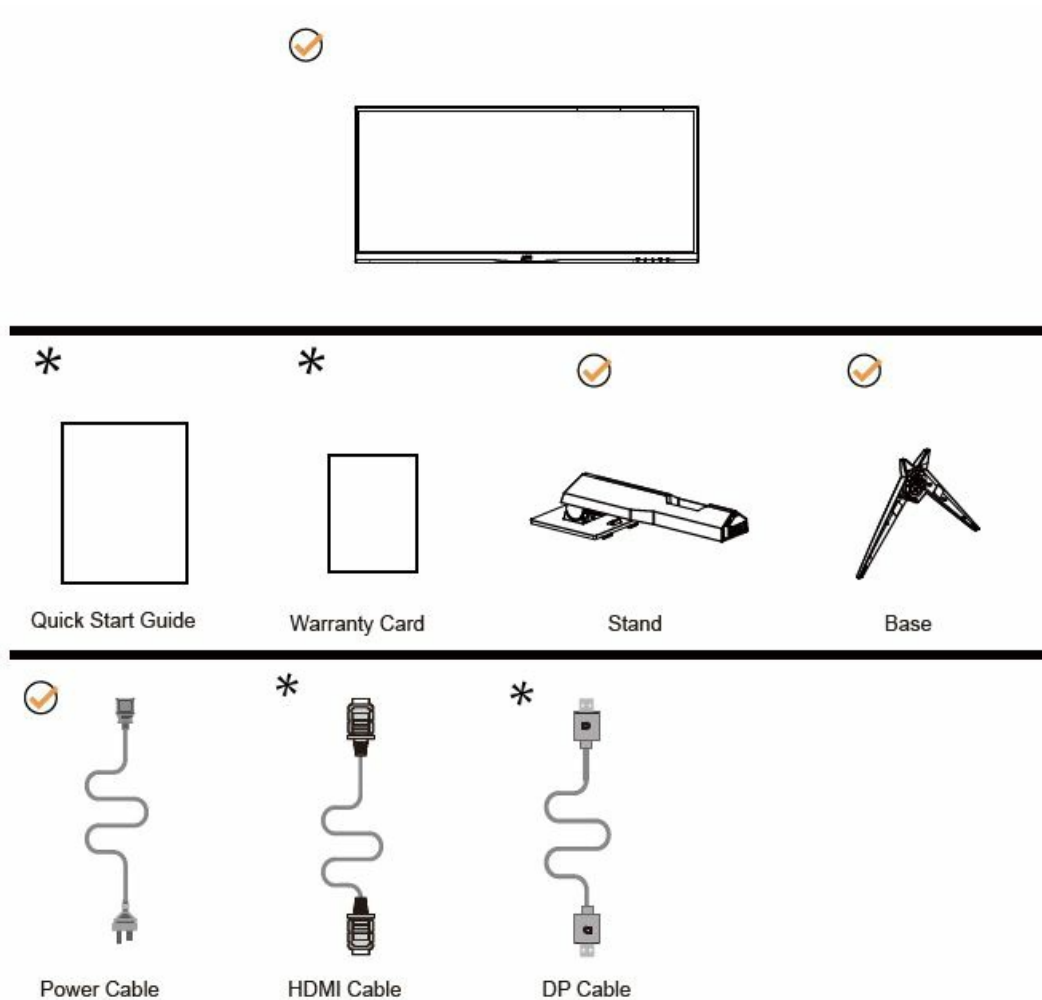


\* Not all signal cables (HDMI/DP cables) will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.


### Stand & Base Setup

- Please set or remove the base following the steps below.
- Please place the monitor on a soft and flat surface to prevent scratches.

**Setup:**

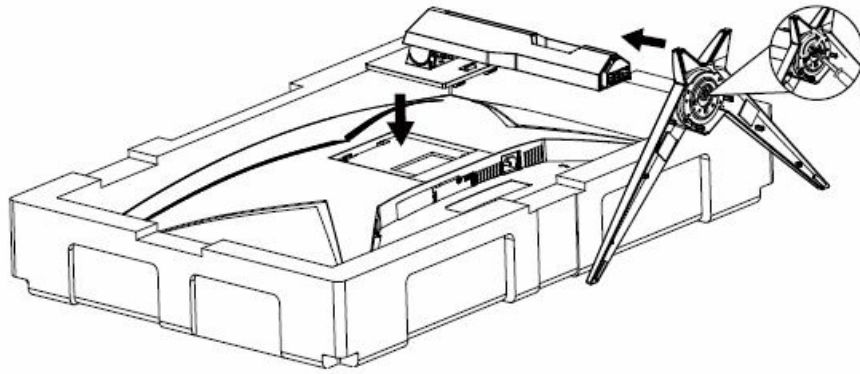

**Remove:**

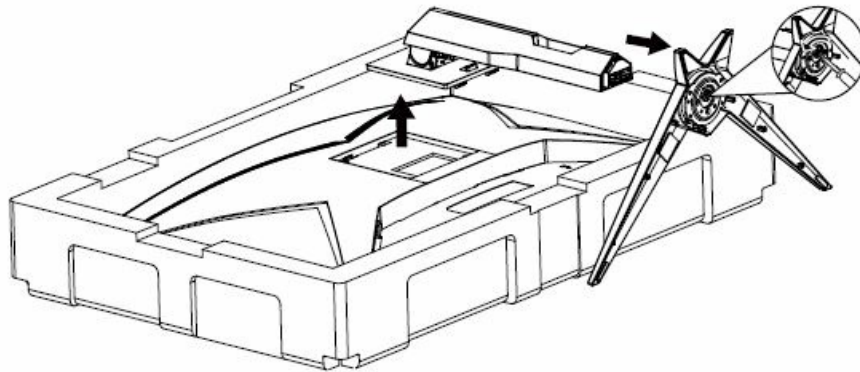


Specification for base screw: M6\*13 mm (effective thread 5.5 mm)



**Adjusting Viewing Angle**

- To achieve the best viewing experience, it is recommended that the user make sure they can look at their whole face on the screen, then adjust the monitor's angle based on personal preference.
- Hold the stand so you will not topple the monitor when you change the monitor's angle.

**You can adjust the monitor as below:**

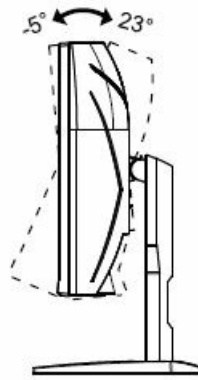

**NOTE:**


Do not touch the LCD screen when you change the angle. Touching the LCD screen may cause damage.

**WARNING:**

1. To avoid potential screen damage, such as panel peeling, ensure that the monitor does not tilt downward by more than -5 degrees.
2. Do not press the screen while adjusting the angle of the monitor. Grasp only the bezel.

**Connecting the Monitor**

**Cable Connections In Back of Monitor:**

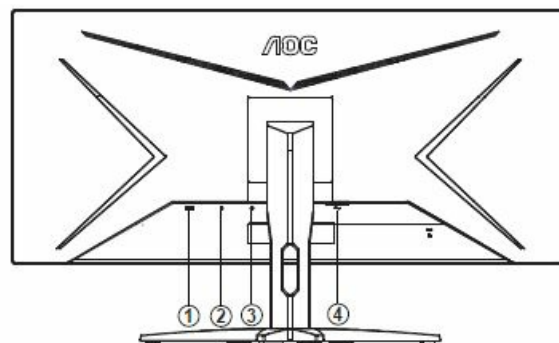

1. HDMI
2. DisplayPort
3. Earphone out
4. Power

**Connect to PC**


1. Connect the power cord to the back of the display firmly.
2. Turn off your computer and unplug its power cable.
3. Connect the display signal cable to the video connector on the back of your computer.
4. Plug the power cord of your computer and your display into a nearby outlet.
5. Turn on your computer and display.

If your monitor displays an image, installation is complete. If it does not display an image, please refer to

Troubleshoot. To protect equipment, always turn off the PC and LCD monitor before connecting.

## Wall Mounting


Preparing to Install An Optional Wall Mounting Arm.

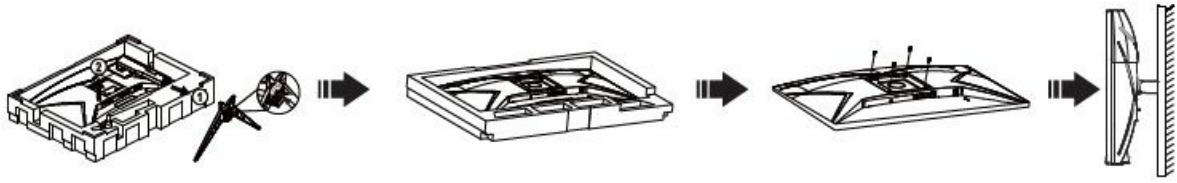


This monitor can be attached to a wall mounting arm you purchase separately. Disconnect power before this procedure.

### Follow these steps:

1. Remove the base.
2. Follow the manufacturer's instructions to assemble the wall mounting arm.
3. Place the wall mounting arm onto the back of the monitor. Line up the holes of the arm with the holes in the back of the monitor.
4. Insert the 4 screws into the holes and tighten.
5. Reconnect the cables. Refer to the user's manual that came with the optional wall mounting arm for instructions on attaching it to the wall.

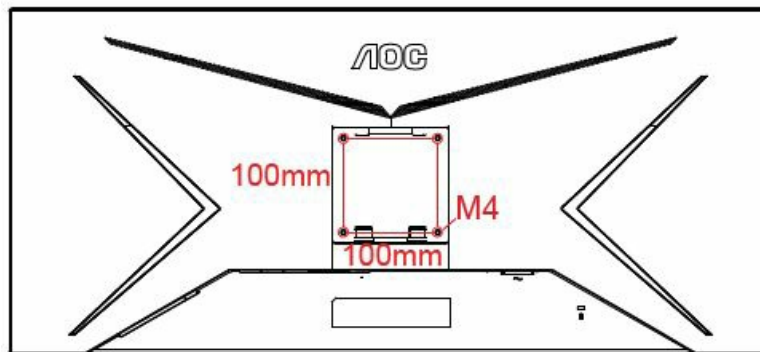


Specification of wall hanger screws  $M4*(10+X)mm$ , (  $X$ =Thickness of Wall mount bracket )

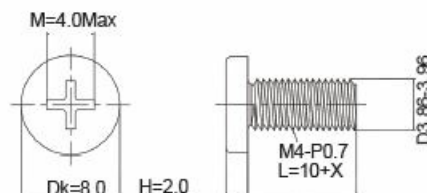

### Note:

VESA mounting screw holes are not available for all models, please check with the dealer or official department of AOC. Always contact the manufacturer for wall-mount installation.



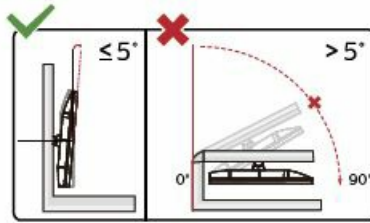

- Display design may differ from those illustrated.

#### **WARNING:**

1. To avoid potential screen damage, such as panel peeling, ensure that the monitor does not tilt downward by more than -5 degrees.
2. Do not press the screen while adjusting the angle of the monitor. Grasp only the bezel.

#### **Adaptive-Sync function**

1. The adaptive-Sync function works with DP/HDMI
2. Compatible Graphics Card: The recommended list is as below, also be checked by visiting [www.AMD.com](http://www.AMD.com).

#### **Graphics Cards**

- Radeon™ RX Vega series
- Radeon™ RX 500 series
- Radeon™ RX 400 series
- Radeon™ R9/R7 300 series (R9 370/X, R7 370/X, R7 265 except)
- Radeon™ Pro Duo (2016)
- Radeon™ R9 Nano series
- Radeon™ R9 Fury series
- Radeon™ R9/R7 200 series (R9 270/X, R9 280/X except)


#### **Processors**

- AMD Ryzen™ 7 2700U
- AMD Ryzen™ 5 2500U
- AMD Ryzen™ 5 2400G
- AMD Ryzen™ 3 2300U
- AMD Ryzen™ 3 2200G
- AMD PRO A12-9800
- AMD PRO A12-9800E
- AMD PRO A10-9700
- AMD PRO A10-9700E
- AMD PRO A8-9600
- AMD PRO A6-9500
- AMD PRO A6-9500E

- AMD PRO A12-8870
- AMD PRO A12-8870E
- AMD PRO A10-8770
- AMD PRO A10-8770E
- AMD PRO A10-8750B
- AMD PRO A8-8650B
- AMD PRO A6-8570
- AMD PRO A6-8570E
- AMD PRO A4-8350B
- AMD A10-7890K
- AMD A10-7870K
- AMD A10-7850K
- AMD A10-7800
- AMD A10-7700K
- AMD A8-7670K
- AMD A8-7650K
- AMD A8-7600
- AMD A6-7400K

## Adjusting

### Hotkeys

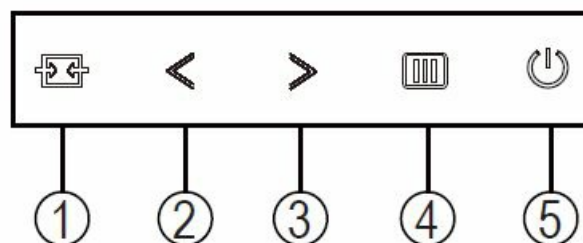

1	Source/Exit
2	Game Mode/<
3	Dial Point/>
4	Menu/Enter
5	Power

- **Source/Exit**

When the OSD is closed, press the Source/Exit button will be Source hot key function.

- **Game Mode/<**

When there is no OSD, press the "<" key to open the game mode function, then press the "<" or ">" key to select the game mode (FPS, RTS, Racing, Gamer 1, Gamer 2, or Gamer 3) based on the different game types.

- **Dial Point/>**

When there is no OSD, press the Dial Point button to activate the Dial Point menu, and then press "<" or ">" to

set Dial Point on or off.

- **Menu/Enter**

Press to display the OSD or confirm the selection.









- **Power**

Turn on/off the monitor.

## OSD Setting

Basic and simple instructions on the control keys.












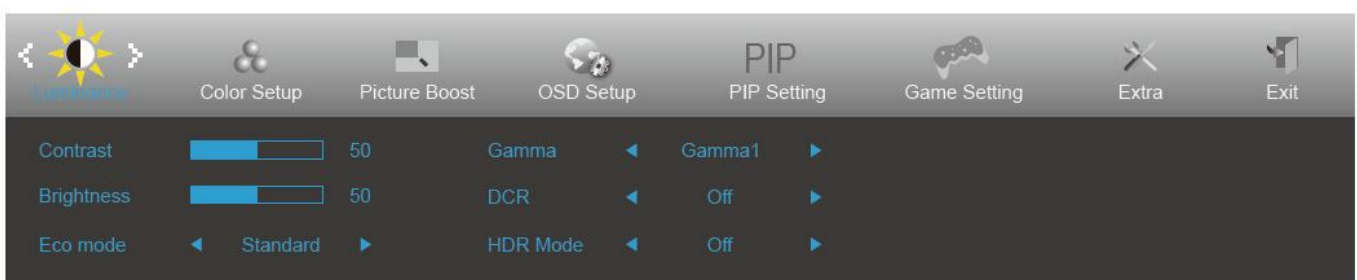

1. Press the  Menu button to activate the OSD window.
2. Press Left or Right to navigate through the functions. Once the desired function is highlighted, press the  Menu button to activate it, and press Left or Right to navigate through the sub-menu functions. Once the desired function is highlighted, press  the Menu button to activate it.
3. Press Left to change the settings of the selected function. Press  to exit. If you want to adjust any other function, repeat steps 2-3.
4. OSD Lock Function: To lock the OSD, press and hold the  Menu button while the monitor is off and then press the  power button to turn the monitor on. To unlock the OSD – press and hold the  Menu button while the monitor is off and then press the  power button to turn the monitor on.

## Notes:

1. If the product has only one signal input, the item “Input Select” the adjust option is disabled.
2. If the product screen size is 4:3 or the input signal resolution is native resolution, the item “Image Ratio” is disabled.
3. One of the, Color Boost and Picture Boost functions is activated, and the other two functions are turned off accordingly.

## Luminance




	Contrast	0-100		Contrast from Digital-register.
	Brightness	0-100		Backlight Adjustment
	Eco mode	Standard		Standard Mode
		Text		Text Mode
		Internet		Internet Mode
		Game		Game Mode
		Movie		Movie Mode
		Sports		Sports Mode
		Reading		Reading Mode
		Uniformity		Uniformity Mode
	Gamma	Gamma1		Adjust to Gamma 1
		Gamma2		Adjust to Gamma 2
		Gamma3		Adjust to Gamma 3
	DCR	Off		Disable dynamic contrast ratio
		On		Enable dynamic contrast ratio
	HDR	Off	Adjust HDR Mode Note: When HDR is detected, the HDR option is displayed for adjustment. When HDR is not detected, the HDR Mode option is displayed for adjustment.	
		DisplayHDR		
		HDR Picture		
		HDR Movie		
		HDR Game		
	HDR Mode	Off	Adjust HDR Mode	
		HDR Picture		
		HDR Movie		
		HDR Game		

**Note:**


The function MBR and Overdrive Boost are available only when Adaptive-Sync is off and the vertical frequency is up to 75 Hz.


**Color Setup**



	Color Temp.	Warm	Recall Warm Color Temperature from EEPROM.
		Normal	Recall Normal Color Temperature from EEPROM.
		Cool	Recall Cool Color Temperature from EEPROM.
		sRGB	Recall sRGB Color Temperature from EEPROM.
		User	Restore Color Temperature from EEPROM.
	DCB Mode	Full Enhance	Disable or Enable Full Enhance Mode
		Nature Skin	Disable or Enable Nature Skin Mode
		Green Field	Disable or Enable Green Field Mode
		Sky-blue	Disable or Enable Sky-blue Mode
		AutoDetect	Disable or Enable AutoDetect Mode
		Off	Disable DCB Mode
	DCB Demo	On or Off	Disable or Enable Demo
	Red	0-100	Red gain from Digital-register.
	Green	0-100	Green gain from Digital-register.
	Blue	0-100	Blue gain from Digital-register.

## Picture Boost

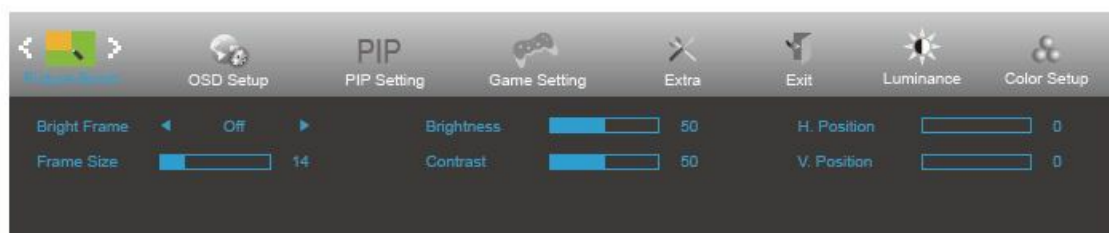


	Bright Frame	On or Off	Disable or Enable Bright Frame
	Frame Size	14-100	Adjust Frame Size
	Brightness	0-100	Adjust Frame Brightness
	Contrast	0-100	Adjust Frame Contrast
	H. position	0-100	Adjust Frame horizontal Position
	V. position	0-100	Adjust Frame vertical Position

### Note:

Adjust the brightness, contrast, and position of the Bright Frame for a better viewing experience.

## OSD Setup




	Language		Select the OSD language
	Timeout	5-120	Adjust the OSD Timeout
	DP Capability	1.1/1.2/1.4	Please be noted that only DP1.2 support Adaptive-Sync function
	H. Position	0-100	Adjust the horizontal position of OSD
	V. Position	0-100	Adjust the vertical position of OSD
	Volume	0-100	Volume Adjustment.
	Transparence	0-100	Adjust the transparence of OSD
	Break Reminder	On / Off	Break reminder if the user continuously works for more than 1hrs

### Notes:

If the DP video content supports DP1.2, please select DP1.2 for DP Capability; otherwise, please select DP1.1.


### PIP Setting




	PIP Setting	Off / PIP / PBP	Disable or Enable PIP or PBP.
	Main Source	Follow Input Select Content	Select main screen source.
	Sub Source	Follow Input Select Content	Select sub screen source.
	Size	Small, Middle, Large	Select screen size.
	Position	Right-Up / Right-Down / Left-Down / Left-Up	Set the screen location.
	Audio	On / Off	Disable or Enable Audio Setup.
	Swap		Swap the screen source.

Sub		
Main	HDMI	DP
HDMI	V	V
DP	V	V


### Game Setting

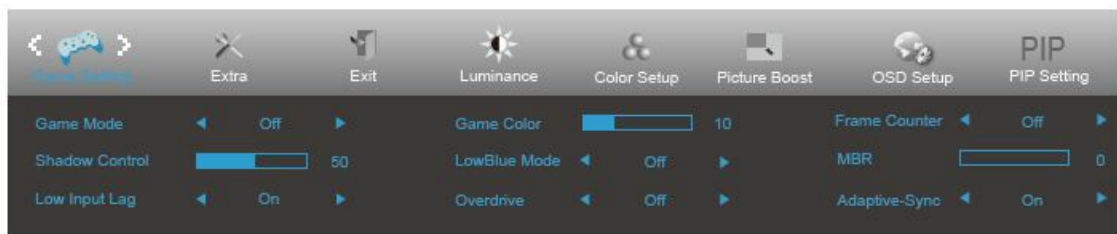


	Game Mode	Off	No optimization by the Smart Image game
		FPS	For playing FPS (First Person Shooters) games. Improves Improves black level in dark theme.
		RTS	For playing RTS (Real Time Strategy). Improves the image quality.
		Racing	For playing Racing games, Provides fastest response time and high color saturation.
		Gamer1	User's preference settings saved as Gamer 1.
		Gamer2	User's preference settings saved as Gamer 2.
		Gamer3	User's preference settings saved as Gamer 3.
	Shadow Control	0-100	Shadow Control Default is 50, then end-  Users can adjust from 50 to 100 or 0 to increase/decrease contrast for a clear picture.  1. If a picture is too dark to see the detail clearly, adjust from 50 to 100 for a clear picture.  2. If a picture is too white to see the detail clearly, adjust from 50 to 0 for a clear picture.
	Low input Lag	On/Off	Turn off the frame buffer to decrease the input lag

Game Color	0-20	Game Color will provide 0-20 level for adjusting saturation to get a better picture .
LowBlue Mode	Reading / Office / Internet / Multimedia / Off	Decrease blue light waves by controlling color temperature.
Overdrive	Weak	Adjust the response time.
	Medium	
	Strong	
	Boost	
	Off	
Frame Counter	Off / Right-Up / Right-Down / Left-Down / Left- Up	Display vertical scanning frequency
MBR	0-20	MBR (Motion Blur Reduction) will provide 0 – 20 levels for adjusting visible motion blur.
Adaptive-Sync	On/Off	Adjust the Adaptive-Sync


## Extra

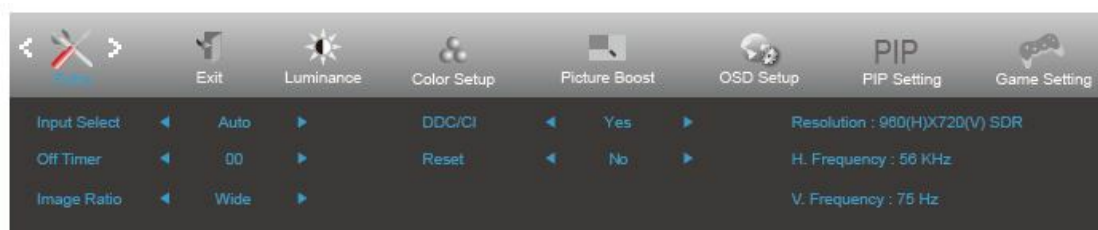

	Input Select		Select Input Signal Source
	Off timer	0-24hrs	Select DC off time
	Image Ratio	Wide / 4:3 / 1:1 / 17"(4:3) / 19"(4:3) / 19"(5:4) / 19"w(16:10) / 21.5"w(16:9) / 22"w(16:10) / 23"w(16:9) / 23.6"W (16:9) / 24"W (16:9) / 27"W (16:9)	Select image ratio for display.
	DDC/CI	Yes or No	Turn ON/OFF DDC/CI Support
	Reset	Yes or No	Reset the menu to default

## Exit



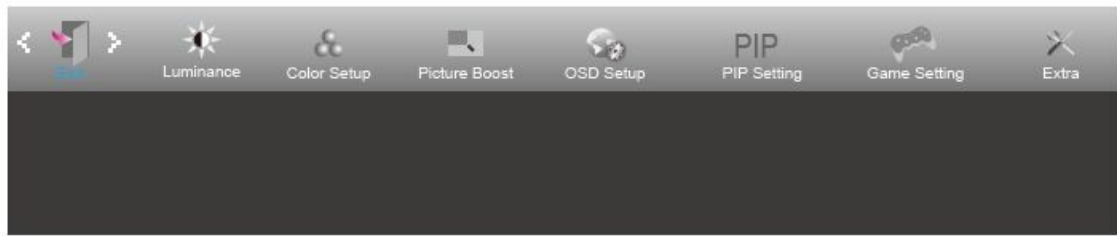

	Exit		Exit the main OSD
--	------	--	-------------------

## LED Indicator

Status	LED Color
Full Power Mode	White
Active-off Mode	Orange

## Troubleshoot

Problem & Question	Possible Solutions
<b>Power LED Is Not ON</b>	Make sure the power button is ON and the Power Cord is properly connected to a grounded power outlet and the monitor.

<p><b>No image on the screen</b></p>	<p>Is the power cord connected properly?</p> <p>Check the power cord connection and power supply. Is the video cable connected correctly?</p> <p>(Connected using the HDMI cable) Check the HDMI cable connection. (Connected using the DP cable) Check the DP cable connection.</p> <p>* HDMI/DP input is not available on every model.</p> <p>If the power is on, reboot the computer to see the initial screen (the login screen.)</p> <p>If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows 7/8/10) and then change the frequency of the video card.</p> <p>(Refer to the Setting the Optimal Resolution)</p> <p>If the initial screen (the login screen) does not appear, contact the Service Center or your dealer.</p> <p>Can you see "Input Not Supported" on the screen?</p> <p>You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly.</p> <p>Adjust the maximum resolution and frequency that the monitor can handle properly.</p> <p>Make sure the AOC Monitor Drivers are installed.</p>
<p><b>Picture Is Fuzzy &amp; Has Ghosting Shadowing Problem</b></p>	<p>Adjust the Contrast and Brightness Controls. Press hot-key (AUTO) to auto-adjust.</p> <p>Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly into the video card output connector on the back.</p>
<p><b>Picture Bounces, Flickers, Or Wave Patterns Appears In The Picture</b></p>	<p>Move electrical devices that may cause electrical interference as far away from the monitor as possible.</p> <p>Use the maximum refresh rate your monitor is capable of at the resolution you are using.</p>
<p><b>Monitor Is Stuck In Active Off-Mode"</b></p>	<p>The Computer Power Switch should be in the ON position.</p> <p>The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer.</p> <p>Inspect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.</p>


<b>Missing one of the primary colors (RED, GREEN, or BLUE)</b>	<p>Inspect the monitor's video cable and make sure that no pin is damaged.</p> <p>Make sure the monitor's video cable is properly connected to the computer.</p>
<b>The picture has color defects (white does not look white)</b>	Adjust the RGB color or select the desired color temperature.
<b>Horizontal or vertical disturbances on the screen</b>	Use Windows 7/8/10 shut-down mode to adjust CLOCK and FOCUS. Press hot-key (AUTO) to auto-adjust.
<b>Regulation &amp; Service</b>	Please refer to Regulation & Service Information which is in the CD manual or <a href="http://www.aoc.com">www.aoc.com</a> (to find the model you purchased in your country and to find Regulation & Service Information on the Support page.)

## Specification

### General Specification

Panel	Model name	CU34G2XE/BK
	Driving system	TFT Color LCD
	Viewable Image Size	86.36 cm diagonal
	Pixel pitch	0.23175mm(H) x 0.23175mm(V)
	Video	HDMI interface & DP Interface
	Display Color	16.7M Colors
Others	Horizontal scan range	30k-160kHz(HDMI) 30k-220kHz(DP)
	Horizontal scan Size(Maximum)	797.22mm
	Vertical scan range	48-100HZ(HDMI) 48-144HZ(DP)
	Vertical Scan Size(Maximum)	333.72mm
	Optimal preset resolution	3440×1440@60Hz
	Max resolution	3440×1440@100Hz(HDMI) 3440×1440@144Hz(DP)
	Plug & Play	VESA DDC2B/CI
	Input Connector	HDMI/DP
	Power Source	100-240V~, 50/60Hz, 1.5A

	Power Consumption	Typical (default brightness and contrast)	52W
		Max. (brightness = 100 , contrast =100)	≤84W
		Standby mode	≤0.5W
Physical Characteristics	Connector Type	HDMI/DP/USB/Earphone out	
	Signal Cable Type	Detachable	
Environmental	Temperature	Operating	0°C~ 40°C
		Non-Operating	-25°C~ 55°C
	Humidity	Operating	10% ~ 85% (non-condensing)
		Non-Operating	5% ~ 93% (non-condensing)
	Altitude	Operating	0m~5000m(0ft~16404ft )
		Non-Operating	0m~12192m(0ft~40000ft )

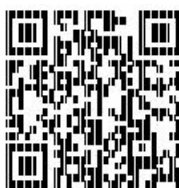

## Preset Display Modes

STANDARD	RESOLUTION(+/-1Hz)	HORIZONTAL FREQUENCY(kHz)	VERTICAL FREQUENCY(Hz)
VGA	640×480@60Hz	31.469	59.94
	640×480@72Hz	37.861	72.809
	640×480@75Hz	37.5	75
SVGA	800×600@60Hz	37.879	60.317
	800×600@72Hz	48.077	72.188
	800×600@75Hz	46.875	75
XGA	1024×768@60Hz	48.363	60.004
	1024×768@70Hz	56.476	70.069
	1024×768@75Hz	60.023	75.029
SXGA	1280×1024@60Hz	63.981	60.020
	1280×1024@75Hz	79.976	75.025
WXGA+	1440×900@60Hz	55.935	59.887
	1440×900@60Hz	55.469	59.901
WSXGA	1680×1050@60Hz	65.290	59.954
	1680×1050@60Hz	64.674	59.883
FHD	1920×1080@60Hz	67.5	60
WFHD	2560×1080@60HZ	66	60
	2560×1080@50HZ	56.25	50
WQHD	3440×1440@30HZ	44.408	29.985
	3440×1440@60HZ	89.819	59.973
	3440×1440@100HZ	150.972	99.982
	3440X1440@120(DP Only)	181.2	120
	3440X1440@144(DP Only)	214.56	144
<b>IBM MODES</b>			
DOS	720×400@70Hz	31.469	70.087
<b>MAC MODES</b>			
VGA	640×480@67Hz	35.000	66.667
SVGA	832×624@75Hz	49.725	74.551
XGA	1024×768@75Hz	60.241	74.927

**Note:**


According to the VESA standard, there may be a certain error (+/-1Hz) when calculating the refresh rate (field

frequency) of different operating systems and graphics cards. To improve compatibility, the nominal refresh rate of this product has been rounded off. Please refer to the actual product.

## Pin Assignments



Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1.	TMDS Data 2+	9.	TMDS Data 0-	17.	DDC/CEC Ground
2.	TMDS Data 2 Shield	10.	TMDS Clock +	18.	+5V Power
3.	TMDS Data 2-	11.	TMDS Clock Shield	19.	Hot Plug Detect
4.	TMDS Data 1+	12.	TMDS Clock-		
5.	TMDS Data 1Shield	13.	CEC		
6.	TMDS Data 1-	14.	Reserved (N.C. on device)		
7.	TMDS Data 0+	15.	SCL		
8.	TMDS Data 0 Shield	16.	SDA		

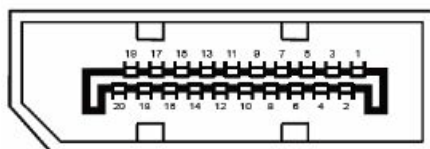

## 20-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	ML_Lane 3 (n)	11	GND
2	GND	12	ML_Lane 0 (p)
3	ML_Lane 3 (p)	13	CONFIG1
4	ML_Lane 2 (n)	14	CONFIG2
5	GND	15	AUX_CH(p)
6	ML_Lane 2 (p)	16	GND
7	ML_Lane 1 (n)	17	AUX_CH(n)
8	GND	18	Hot Plug Detect
9	ML_Lane 1 (p)	19	Return DP_PWR
10	ML_Lane 0 (n)	20	DP_PWR

## Plug and Play


### Plug & Play DDC2B Feature

- This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.
- The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

© 2023 AOC. All Rights Reserved. [www.aoc.com](http://www.aoc.com).

---

## Documents / Resources

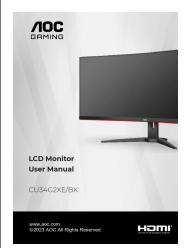	<p><a href="#">AOC GAMING CU34G2XE-BK LCD Monitor</a> [pdf] User Manual CU34G2XE-BK, CU34G2XE-BK LCD Monitor, LCD Monitor, Monitor</p>
--	--

## References

- [Homepage | AOC Monitors](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.