



AOC Q2790PQ LED Backlight LCD Monitor User Manual

[Home](#) » [AOC](#) » AOC Q2790PQ LED Backlight LCD Monitor User Manual 

Contents

- [1 AOC Q2790PQ LED Backlight LCD Monitor](#)
- [2 Safety](#)
- [3 Power](#)
- [4 Installation](#)
- [5 Cleaning](#)
- [6 Setup](#)
- [7 Adjusting Viewing Angle](#)
- [8 Adjusting](#)
- [9 OSD Setting](#)
- [10 LED Indicator](#)
- [11 Troubleshoot](#)
- [12 Specification](#)
 - [12.1 General Specification](#)
- [13 Preset Display Modes](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)



AOC Q2790PQ LED Backlight LCD Monitor



Safety

National Conventions

The following subsections describe the notational conventions used in this document.

Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:

NOTE:

A NOTE indicates important information that helps you make better use of your computer system.

CAUTION:

A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

WARNING:

A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

Power

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company. The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the


grounded plug. Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges. Do not overload power strips and extension cords. Overloading can result in fire or electric shock. To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100-240V AC, Min. 5A. The wall socket shall be installed near the equipment and shall be easily accessible. For use only with the attached power adapter

Installation

Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.

Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor. Do not place the front of the product on the floor. If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions. Leave some space around the monitor as shown below. Otherwise, air circulation may be inadequate hence overheating may cause a fire or damage to the monitor. See below the recommended ventilation areas around the monitor when the monitor is installed on the wall or on the stand:

Installed with stand

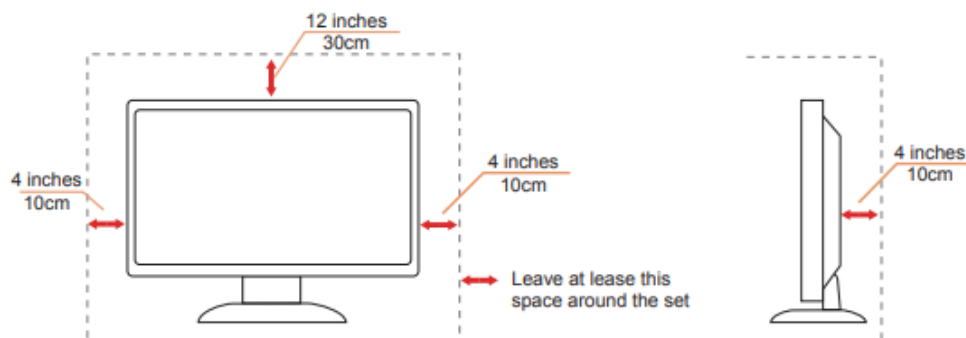

Cleaning



Clean the cabinet regularly with cloth. You can use soft detergent to wipe out the stain, instead of strong detergent which will cauterize the product cabinet. When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface. Please disconnect the power cord before cleaning the product.

Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center. Make sure that the ventilating openings are not blocked by a table or curtain. Do not engage the LCD monitor in severe vibration or high impact conditions during operation. Do not knock or drop the monitor during operation or transportation.


Setup




Quick Start



Warranty card



Stand

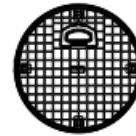

Base



Power Cable



HDMI Cable



DP Cable




VGA Cable

Contents in Box

Not all signal cables will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation


Setup Stand & Base

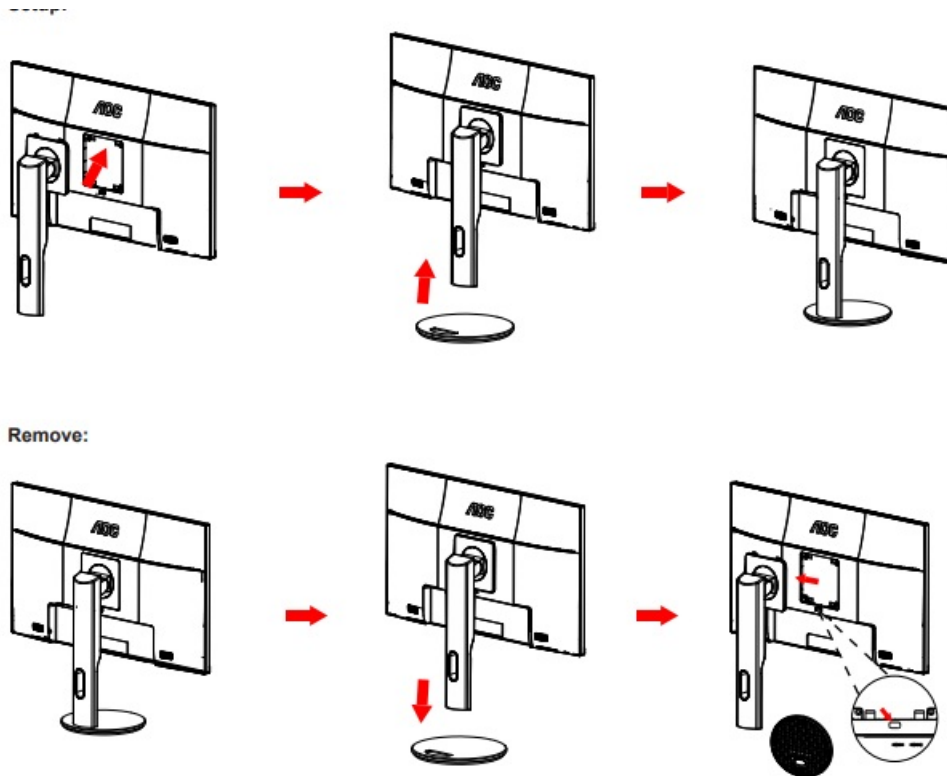

Please setup or remove the base following the steps as below.

Setup:

Adjusting Viewing Angle

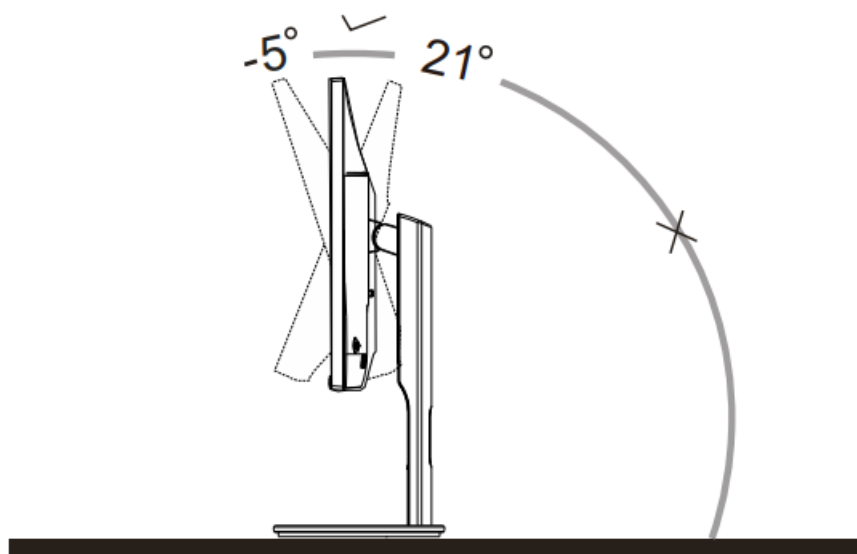


For optimal viewing it is recommended to look at the full face of the monitor, then adjust the monitor's angle to your own preference. Hold the stand so you will not topple the monitor when you change the monitor's angle. You are able to adjust the monitor as below:

NOTE:

Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.

Connecting the Monitor

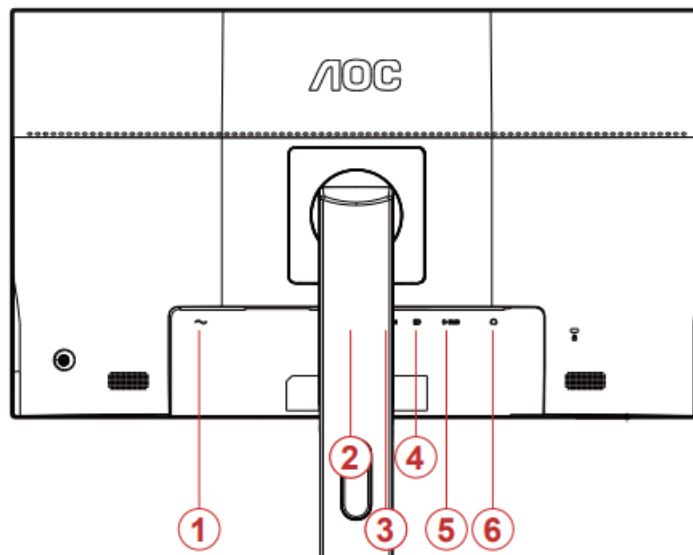


Cable Connections In Back of Monitor and Computer:

1. Power
2. HDMI 1
3. HDMI 2
4. DP
5. Analog (D-Sub 15-Pin VGA cable)
6. Earphone out

Connect to PC

1. Connect the power cord to the back of the display firmly.
2. Turn off your computer and unplug its power cable.
3. Connect the display signal cable to the video connector on the back of your computer.
4. Plug the power cord of your computer and your display into a nearby outlet.
5. Turn on your computer and display. If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting. To protect equipment, always turn off the PC and LCD monitor before connecting.

Adjusting

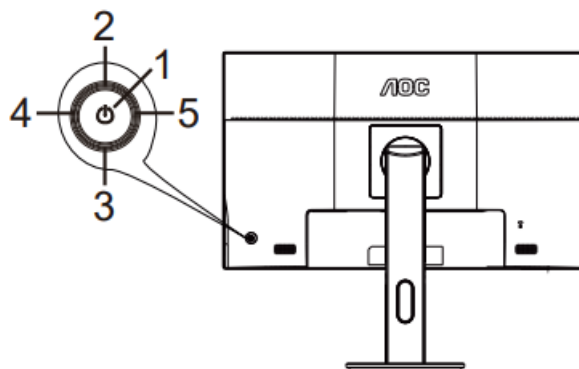

Hotkeys

1	Menu/Enter/ Power
2	Source/Auto/Exit
3	ECO
4	Volume
5	Clear Vision

Up/Source/Auto/Exit

When the OSD is closed, press “up” button will be Source hot key function. When the OSD is closed, press “up” button continuously about 2 second to do auto configure (Only for the models with D-Sub).

Image Ratio/Volume/Right

When there is no OSD, press the “right” key to open the volume adjustment bar, under the HDMI / DP source. When there is no OSD, press the “right” key to enter the image scale switching function, under the D-SUB signal source (If the product screen size is wide format, the hot key is disable to adjust).

Down/ECO


When there is no OSD, press “down” to active ECO adjustment bar, press left or right to adjust ECO mode.

Power/Menu/Enter


Press the Power button to turn on the monitor.

When there is no OSD, Press to display the OSD or confirm the selection. Press about 2 second to turn off the monitor

Clear Vision

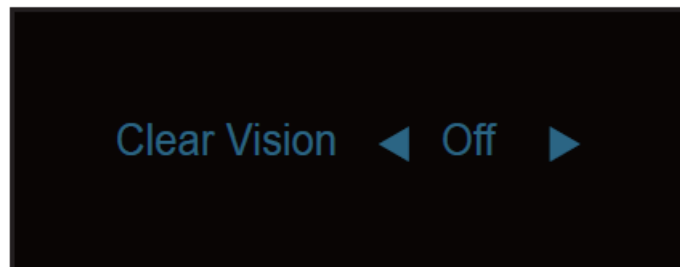


1. When there is no OSD, Press the “ ” button to activate Clear Vision.
2. Use the “ ” or “ ” buttons to select between weak, medium, strong, or off settings. Default setting is always “off”.

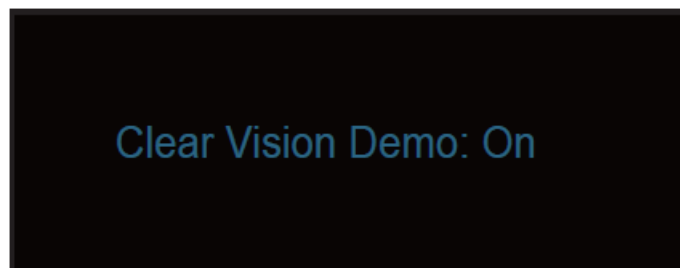

3. Press and hold “ ” button for 5 seconds to activate the Clear Vision Demo, and a message of “Clear Vision Demo: on” will be display on the screen for a duration of 5 seconds. Press Menu or Exit button, the message will disappear. Press and hold “ ” button for 5 seconds again, Clear Vision Demo will be off. Clear Vision function provides the best image viewing experience by converting low resolution and blurry images into clear and vivid images.


OSD Setting

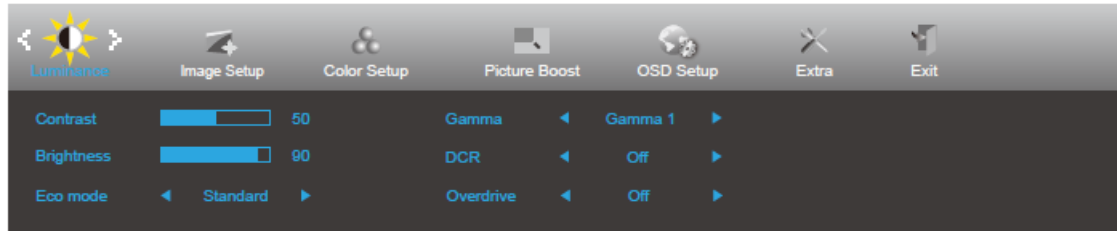


Basic and simple instruction on the control keys.

1. Press the MENU button to activate the OSD window.
2. Press Left or Right to navigate through the functions. Once the desired function is highlighted, press the MENU- button to activate it, press Left or Right to navigate through the sub-menu functions. Once the desired function is highlighted, press MENU button to activate it.
3. Press Left or Right to change the settings of the selected function. Press AUTO–button to exit. If you want to adjust any other function, repeat steps 2-3.
4. OSD Lock/Unlock Function: OSD Lock Function: To lock the OSD, press and hold the MENU button while the monitor is off and then press power button to turn the monitor on. To un-lock the OSD – press and hold the MENU button while the monitor is off and then press power button to turn the monitor on.

Luminance

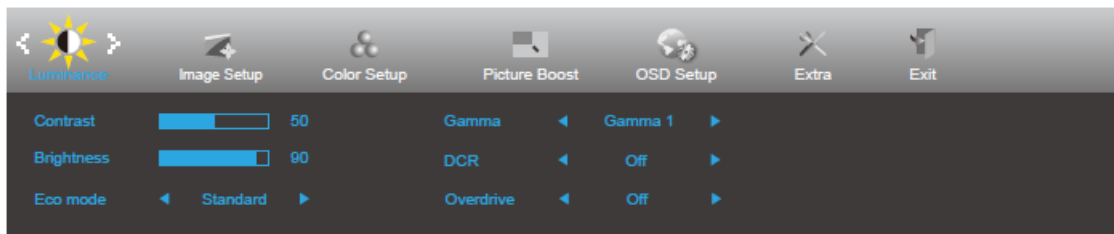













Contrast	0-100		Contrast from Digital-register.
Brightness	0-100		Backlight Adjustment
Eco mode	Standard		Standard Mode
	Text		Text Mode
	Internet		Internet Mode
	Game		Game Mode
	Movie		Movie Mode
	Sports		Sports Mode
	Reading		Reading Mode
Gamma	Gamma1		Adjust to Gamma 1
	Gamma2		Adjust to Gamma 2
	Gamma3		Adjust to Gamma 3
DCR	Off		Disable dynamic contrast ratio
	On		Enable dynamic contrast ratio
OverDrive	Weak		Adjust the response time.
	Medium		
	Strong		
	Off		

Image Setup




	Clock	0-100	Adjust picture Clock to reduce Vertical-Line noise.
	Phase	0-100	Adjust Picture Phase to reduce Horizontal-Line noise.
	Sharpness	0-100	Adjust picture sharpness.
	H.Position	0-100	Adjust the horizontal position of the picture.
	V.Position	0-100	Adjust the vertical position of the picture.

Color Setup

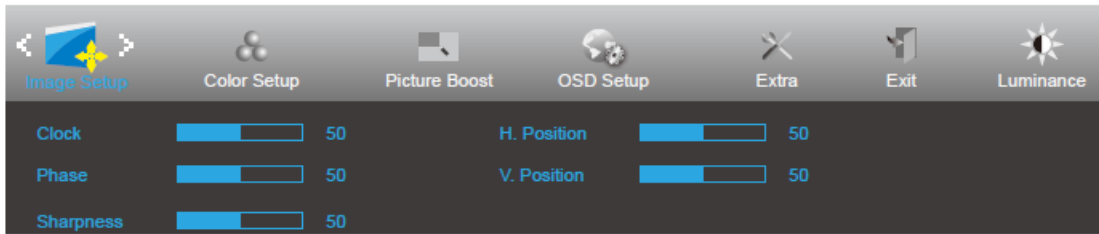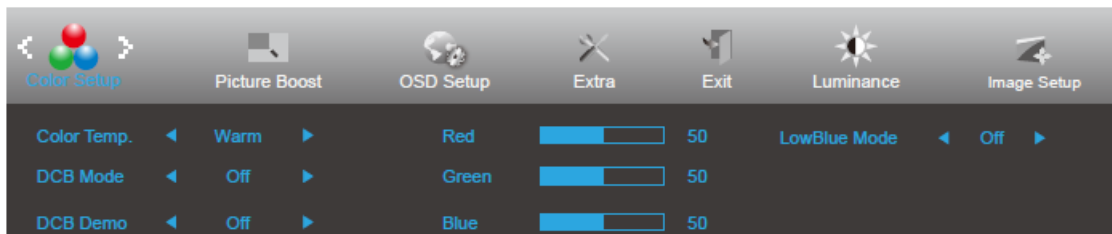

	Color Temp.	Warm		Recall Warm Color Temperature from EEPROM.
		Normal		Recall Normal Color Temperature from EEPROM.
		Cool		Recall Cool Color Temperature from EEPROM.
		sRGB		Recall SRGB Color Temperature from EEPROM.
		User	Red	Red Gain from Digital-register
			Green	Green Gain Digital-register.
			Blue	Blue Gain from Digital-register
	DCB Mode	Full Enhance	on or off	Disable or Enable Full Enhance Mode
		Nature Skin	on or off	Disable or Enable Nature Skin Mode
		Green Field	on or off	Disable or Enable Green Field Mode
		Sky-blue	on or off	Disable or Enable Sky-blue Mode
		AutoDetect	on or off	Disable or Enable AutoDetect Mode
		OFF	on or off	Disable or Enable OFF Mode
	DCB Demo		On or off	Disable or Enable Demo
	Red		0-100	Red gain from Digital-register.
	Green		0-100	Green gain from Digital-register.
	Blue		0-100	Blue gain from Digital-register.
	LowBlue Mode	Multimedia		Decrease blue light wave by controlling color temperature.
		Internet		
		Office		
		Reading		
		Off		

Picture Boost

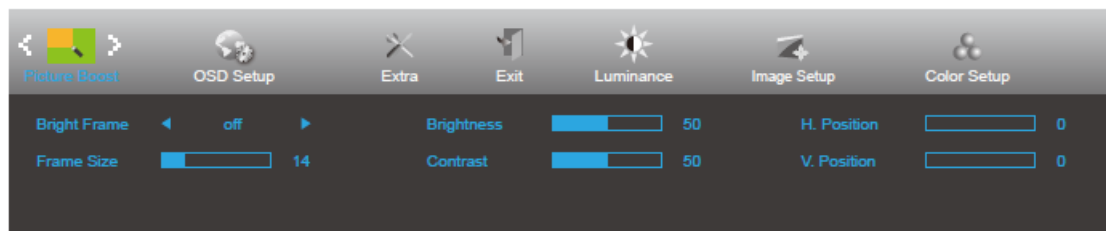


	Bright Frame	on or off	Disable or Enable Bright Frame
	Frame Size	14-100	Adjust Frame Size
	Brightness	0-100	Adjust Frame Brightness
	Contrast	0-100	Adjust Frame Contrast
	H. position	0-100	Adjust Frame horizontal Position
	V. position	0-100	Adjust Frame vertical Position

Note:


Adjust the brightness, contrast, and position of the Bright Frame for better viewing experience.

OSD Setup

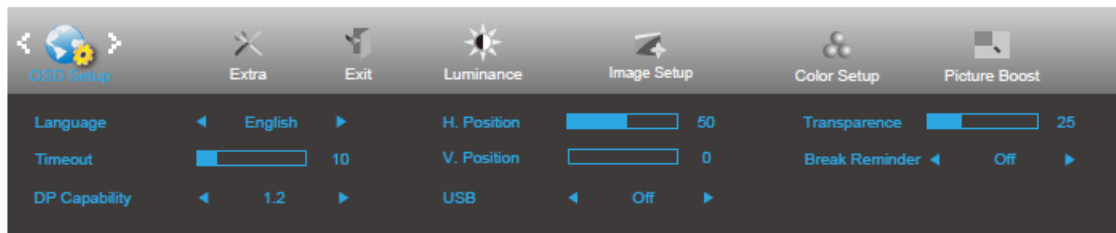


	Language		Select the OSD language
	Timeout	5-120	Adjust the OSD Timeout
	DP Capability	1.1/1.2	Please be noted that only DP1.2 support FreeSync function
	H. Position	0-100	Adjust the horizontal position of OSD
	V. Position	0-100	Adjust the vertical position of OSD
	USB	on or off	For model need to turn on/off USB power during power saving
	Transparency	0-100	Adjust the transparency of OSD
	Break Reminder	on or off	Break reminder if the user continuously work for more than 1hrs

Extra

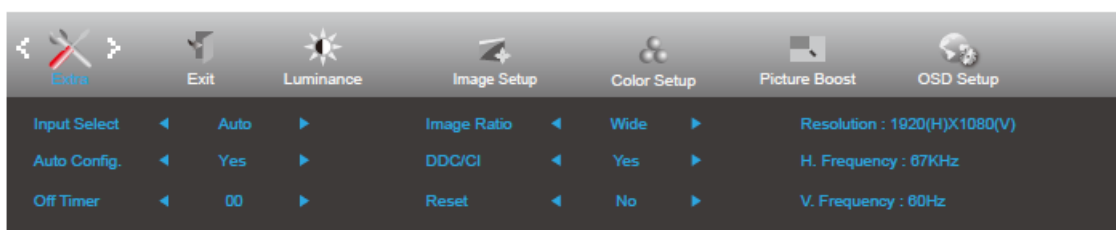

	Input Select	Auto/D-SUB/HDMI1/HDMI2/ DP	Select input signal source.
	Auto Config.	Yes / No	Auto adjust.the picture to default.
	Off Timer	0-24 hrs	Select DC off time.
	Image Ratio	Wide / 4:3 / 1:1 / Movie1/ Movie2	Select Wide / 4:3 / 1:1 / Movie1/ Movie2 format for display.
	DDC/CI	Yes / No	Turn on or off DDC/CI Support.
	Reset	yes or no	Reset the menu to default.
		ENERGY STAR® or no	(ENERGY STAR® available for selective models.)

Exit

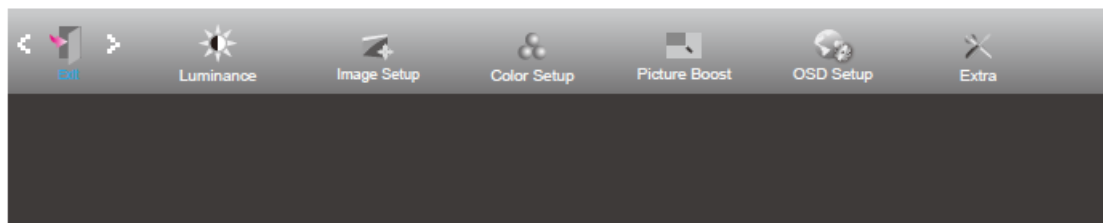

LED Indicator

Status	LED Color
Full Power Mode	White
Active-off Mode	Orange

Troubleshoot

Problem & Question	Possible Solutions
Power LED Is Not ON	Make sure the power button is ON and the Power Cord is properly connecte d to a grounded power outlet and to the monitor.

<p>No images on the screen</p>	<p>Is the power cord connected properly?</p> <p>Check the power cord connection and power supply. Is the cable connected correctly?</p> <p>(Connected using the VGA cable) Check the VGA cable connection. (Connected using the HDMI cable) Check the HDMI cable connection. (Connected using the DP cable) Check the DP cable connection.</p> <p>* VGA/HDMI/DP input is not available on every model.</p> <p>If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen.</p> <p>If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows 7/8/10) and then change the frequency of the video card.</p> <p>(Refer to the Setting the Optimal Resolution)</p> <p>If the initial screen (the login screen) does not appear, contact the Service Center or your dealer.</p> <p>Can you see "Input Not Supported" on the screen?</p> <p>You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly.</p> <p>Adjust the maximum resolution and frequency that the monitor can handle properly.</p> <p>Make sure the AOC Monitor Drivers are installed.</p>
<p>Picture Is Fuzzy & Has Ghosting Shadowing Problem</p>	<p>Adjust the Contrast and Brightness Controls. Press to auto adjust.</p> <p>Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly to the video card output connector on the back.</p>
<p>Picture Bounces, Flickers Or Wave Pattern Appears In The Picture</p>	<p>Move electrical devices that may cause electrical interference as far away from the monitor as possible.</p> <p>Use the maximum refresh rate your monitor is capable of at the resolution you are using.</p>
<p>Monitor Is Stuck In Active Off-Mode"</p>	<p>The Computer Power Switch should be in the ON position.</p> <p>The Computer Video Card should be snugly fitted in its slot.</p> <p>Make sure the monitor's video cable is properly connected to the computer. Inspect the monitor's video cable and make sure no pin is bent.</p> <p>Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.</p>

Missing one of the primary colors (RED, GREEN, or BLUE)	Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer.
Screen image is not centered or sized properly	Adjust H-Position and V-Position or press hot-key (AUTO).
Picture has color defects (white does not look white)	Adjust RGB color or select desired color temperature.
Horizontal or vertical disturbances on the screen	Use Windows 7/8/10 shut-down mode to adjust CLOCK and FOCUS. Press to auto-adjust.
Regulation & Service	Please refer to Regulation & Service Information which is in the CD manual or www.aoc.com (to find the model you purchase in your country and to find Regulation & Service Information in Support page).

Specification

General Specification

Panel	Model name	Q2790PQ	
	Driving system	TFT Color LCD	
	Viewable Image Size	68.6cm diagonal	
	Pixel pitch	0.2331mm(H) x 0.2331mm(V)	
	Separate Sync.	H/V TTL	
	Display Color	16.7M Colors	
Others	Horizontal scan range	30~99KHz	
	Horizontal scan Size(Maximum)	596.736mm	
	Vertical scan range	50Hz~76Hz	
	Vertical Scan Size(M aximum)	335.664mm	
	Optimal preset resolution	1920×1080@60Hz(VGA)	
	Max resolution	2560×1440@60Hz(HDMI, DP)	
	Plug & Play	VESA DDC2B/CI	
	Power Source	100-240V~,50/60Hz	
	Power Consumption	Typical(default brightness and contrast)	33W
		Max. (brightness = 100, contrast =100)	≤ 48W
		Standby mode	<0.5W
Physical Characteristics	Connector Type	D-Sub/ HDMI/DP/Earphone out	
	Signal Cable Type	Detachable	
Environmental	Temperature	Operating	0°~ 40°
		Non-Operating	-25°~ 55°
	Humidity	Operating	10% ~ 85% (non-condensing)
		Non-Operating	5% ~ 93% (non-condensing)
	Altitude	Operating	0~ 5000 m (0~ 16404ft)
		Non-Operating	0~ 12192m (0~ 40000ft)

Preset Display Modes


STANDARD	RESOLUTION	HORIZONTAL FREQUENCY(kHz)	VERTICAL FREQUENCY(Hz)
VGA	640×480@60Hz	31.469	59.94
	640×480@72Hz	37.861	72.809
	640×480@75Hz	37.5	75
MAC MODES VGA	640×480@67Hz	35	66.667
IBM MODE	720×400@70Hz	31.469	70.087
SVGA	800×600@56Hz	35.156	56.25
	800×600@60Hz	37.879	60.317
	800×600@72Hz	48.077	72.188
	800×600@75Hz	46.875	75
MAC MIDE SVGA	835 x 624@75Hz	49.725	74.5
XGA	1024×768@60Hz	48.363	60.004
	1024×768@70Hz	56.476	70.069
	1024×768@75Hz	60.023	75.029
SXGA	1280×1024@60Hz	63.981	60.02
	1280×1024@75Hz	79.976	75.025
WSXG	1280×720@60HZ	45	60
	1280×960@60HZ	60	60
WXGA+	1440×900@60Hz	55.935	59.876
WSXGA+	1680×1050@60Hz	65.29	59.954
FHD	1920×1080@60Hz	67.5	60
QHD	2560*1440@60Hz	88.787	59.951

Pin Assignments




Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1.	TMDS Data 2+	9.	TMDS Data 0-	17.	DDC/CEC Ground
2.	TMDS Data 2 Shield	10.	TMDS Clock +	18.	+5V Power
3.	TMDS Data 2-	11.	TMDS Clock Shield	19.	Hot Plug Detect
4.	TMDS Data 1+	12.	TMDS Clock-		
5.	TMDS Data 1Shield	13.	CEC		
6.	TMDS Data 1-	14.	Reserved (N.C. on device)		
7.	TMDS Data 0+	15.	SCL		
8.	TMDS Data 0 Shield	16.	SDA		

Pin Color Display Signal Cable

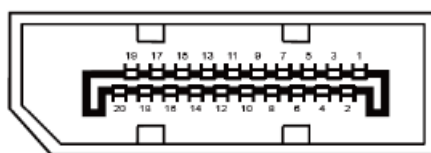

Pin No.	Signal Name	Pin No.	Signal Name
1	ML_Lane 3 (n)	11	GND
2	GND	12	ML_Lane 0 (p)
3	ML_Lane 3 (p)	13	CONFIG1
4	ML_Lane 2 (n)	14	CONFIG2
5	GND	15	AUX_CH(p)
6	ML_Lane 2 (p)	16	GND
7	ML_Lane 1 (n)	17	AUX_CH(n)
8	GND	18	Hot Plug Detect
9	ML_Lane 1 (p)	19	Return DP_PWR
10	ML_Lane 0 (n)	20	DP_PWR

Pin Color Display Signal Cable

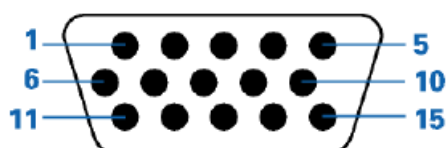

Pin Number	15-Pin Side of the Signal Cable	Pin Number	15-Pin Side of the Signal Cable
1	Video-Red	9	+5V
2	Video-Green	10	Ground
3	Video-Blue	11	N.C.
4	N.C.	12	DDC-Serial data
5	Detect Cable	13	H-sync
6	GND-R	14	V-sync
7	GND-G	15	DDC-Serial clock
8	GND-B		


Plug and Play

Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

Documents / Resources

	<p>AOC Q2790PQ LED Backlight LCD Monitor [pdf] User Manual Q2790PQ, LED Backlight LCD Monitor, Q2790PQ LED Backlight LCD Monitor</p>
---	--

References

- [AOC](#)