



APG MPI-T Series Magneto Strictive Level Sensor Instruction Manual

[Home](#) » [APG](#) » APG MPI-T Series Magneto Strictive Level Sensor Instruction Manual 

Contents

- 1 APG MPI-T Series Magneto Strictive Level Sensor
- 2 Product Usage Instructions
- 3 Description
- 4 How To Read Your Label
- 5 Warranty
- 6 Dimensions
- 7 Installation Guidelines & Instructions
- 8 Sensor and System Wiring Diagrams
- 9 General Care
- 10 Repair Information
- 11 Specific Conditions of Use
- 12 Hazardous Location
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts



APG MPI-T Series Magneto Strictive Level Sensor



Product Specifications

- Model: MPI-T Series
- Measurement Type: Magnetostrictive Level Sensor
- Accuracy: Highly accurate and repeatable
- Applications: Liquid level measurement
- Certifications: Class I, Division 1, Class I, Zone 0 hazardous areas (US & Canada by CSA, ATEX, IECEX for Europe and rest of the world)

Product Usage Instructions

Description

The MPI series magnetostrictive level sensor provides highly accurate and repeatable level readings in various liquid level measurement applications. It is suitable for hazardous areas and holds certifications for safe installations.

How To Read Your Label

The label contains the model number, part number, and serial number. The model number indicates configurable options. Compare it with the datasheet to identify your configuration. Contact support for assistance.

Warranty

The product is covered by a 24-month warranty against defects. Visit the warranty page on our website for details. Contact Technical Support for Return Material Authorization before returning products.

Dimensions

Refer to drawing 9005491 for correct installation to meet safety approvals. Ensure floats are oriented correctly on the stem for accurate readings. Remove any stickers on untapered floats before use.

FAQ

- **Q: How can I ensure accurate readings with the MPI-T level sensor?**

A: Properly install the sensor according to the provided instructions and ensure correct orientation of the floats on the stem to avoid inaccurate readings.

• **Q: What should I do if I need assistance with my model number or configuration?**

A: Contact our customer support team with your model, part, or serial number for personalized assistance in identifying your exact configuration.

• **Q: Is the MPI-T series sensor suitable for hazardous areas outside the US and Canada?**

A: Yes, the MPI-T series sensor holds certifications for hazardous areas in Europe and the rest of the world, in addition to the US and Canada.

Thank You

Thanks for purchasing an MPI-T series magnetostrictive level sensor from us! We appreciate your business and your trust. Please take a moment to familiarize yourself with the product and this manual before installation. If you have any questions, at any time, don't hesitate to call us at 888-525-

7300. You can also find a full list of our product manuals at: www.apgsensors.com/resources-user-manuals/

Description

The MPI series magnetostrictive level sensor provides highly accurate and repeatable level readings in a wide variety of liquid level measurement applications. It is certified for installation in Class I, Division 1, and Class I, Zone 0 hazardous areas in the US and Canada by CSA, and ATEX and IECEx for Europe and the rest of the world.

How To Read Your Label

Each label comes with a full model number, a part number, and a serial number. The model number for the MPI-T will look something like this:

Ã SAMPLE: MPI-R5 -XW-P2ST-120-4D-N

The model number correlates with all the configurable options and tells you exactly what you have. Compare the model number to the options on the datasheet to identify your exact configuration.

You can also call us with the model, part, or the serial number and we can help you.

You'll also find all hazardous certification information on the label.


Warranty

This product is covered by APG's warranty to be free from defects in material and workmanship under normal use and service of the product for 24 months. For a full explanation of our Warranty,

please visit www.apgsensors.com/resources/warranty-certifications/warranty-returns/. Contact Technical Support to receive a Return Material Authorization before shipping your product back.

Dimensions

MPI-T Housing Dimensions

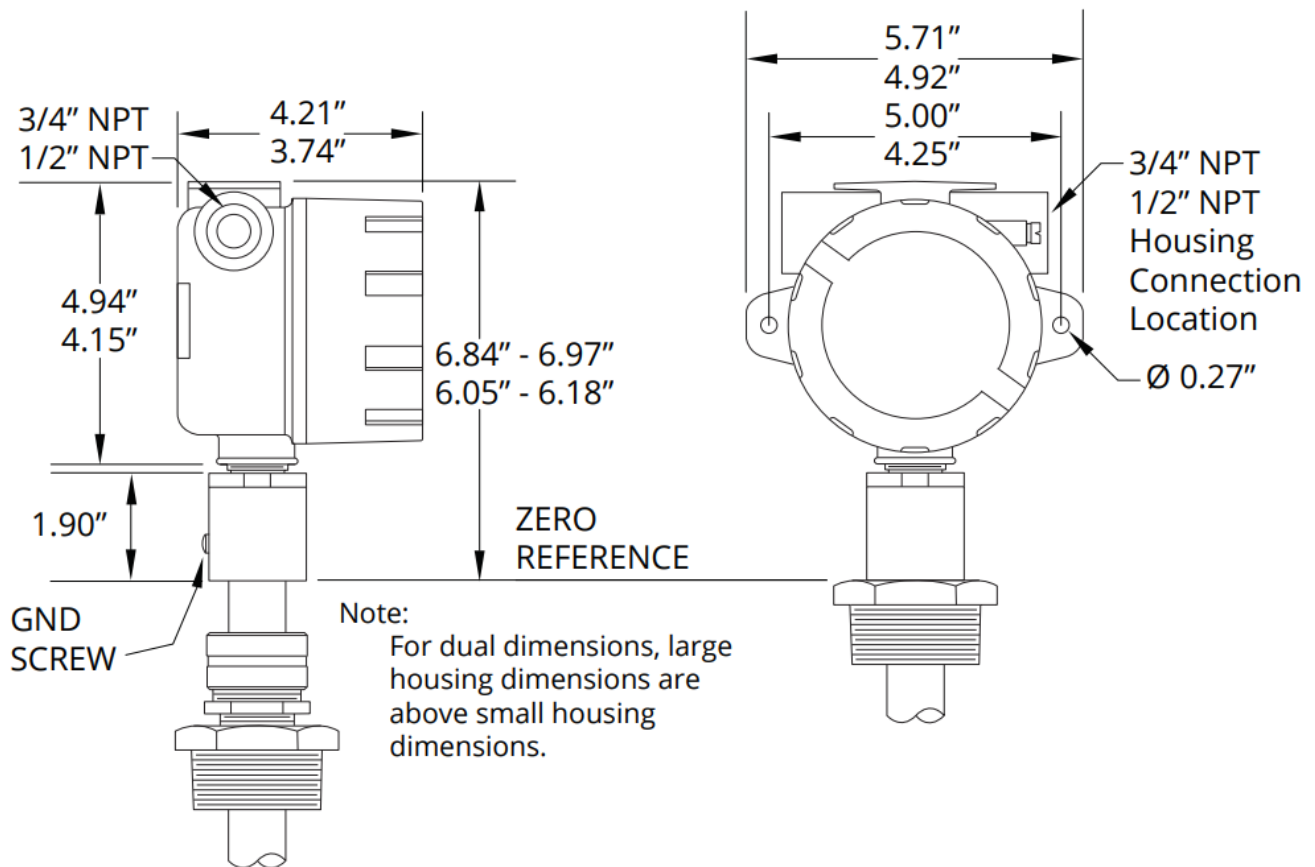

DANGER: OPEN CIRCUIT BEFORE REMOVING COVER or KEEP COVER TIGHT WHILE CIRCUITS ARE ALIVE;

DANGER: WARNING—EXPLOSION HAZARD—SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY;

Warning:—The model MPI-T contains titanium in excess of 7.5% for Group II and care needs to be taken to avoid ignition hazards due to impact or friction

Installation Guidelines & Instructions

The MPI should be installed in an area—indoors or outdoors—which meets the following conditions:

- Ambient temperature between -40°C and 85°C (-40°F to +185°F)
- Relative humidity up to 100%
- Altitude up to 2000 meters (6560 feet)
- IEC-664-1 Conductive Pollution Degree 1 or 2
- IEC 61010-1 Measurement Category II
- No chemicals incompatible with Titanium Grade 2
- No chemicals corrosive to stainless steel (such as NH₃, SO₂, Cl₂, etc.) (Not applicable to plastic-type stem options)
- Ample space for maintenance and inspection

Additional care must be taken to ensure

- The probe is located away from strong magnetic fields, such as those produced by motors, transformers, solenoid valves, etc.
- The medium is free from metallic substances and other foreign matter.

- No ignition hazards exist due to impact or friction with the titanium stem.
- The probe is not exposed to excessive vibration.
- The float(s) fit through the mounting hole. If the float(s) does/do not fit, it/they must be mounted on the stem from inside the vessel being monitored.
- The float(s) is/are oriented properly on the stem (See Figure 5.1 below). MPI-T floats are typically installed by customer.

IMPORTANT: MPI-T level sensor MUST be installed according to drawing 9005491 (Intrinsically Safe Installation Drawing For Hazardous Areas) in section 9 to meet listed approvals. Faulty installation will invalidate all safety approvals and ratings.

IMPORTANT: Floats must be oriented properly on the stem, or sensor readings will be inaccurate and unreliable. Untapered floats will have a sticker or etching indicating the top of the float. Remove sticker prior to use.

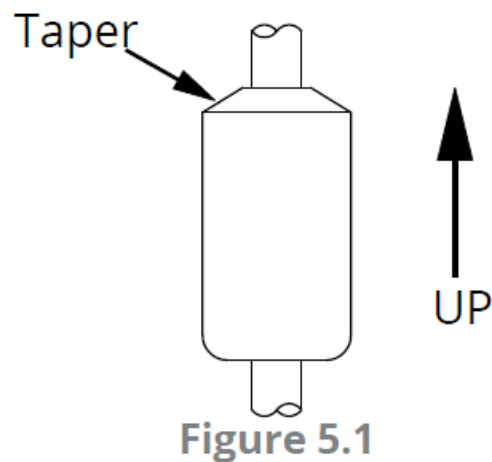



Figure 5.1

IMPORTANT: Only the combustion gas detection performance of the instrument has been tested.

DANGER: WARNING— EXPLOSION HAZARD—DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS;


Sensor and System Wiring Diagrams

MPI-T Intrinsically Safe Modbus System Wiring

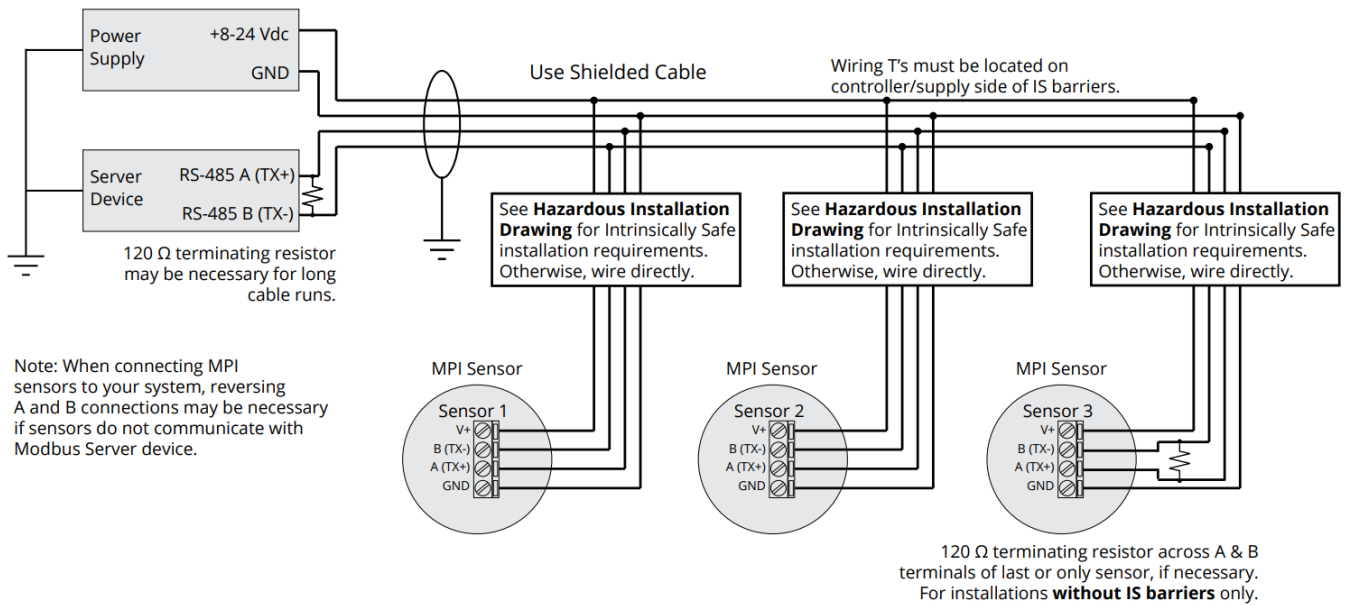

IMPORTANT: MPI-T level sensor MUST be installed according to drawing 9005491 (Intrinsically Safe Installation Drawing For Hazardous Areas) in section 9 to meet listed approvals. Faulty installation will invalidate all safety approvals and ratings.

MPI – MDI Use Case Diagram

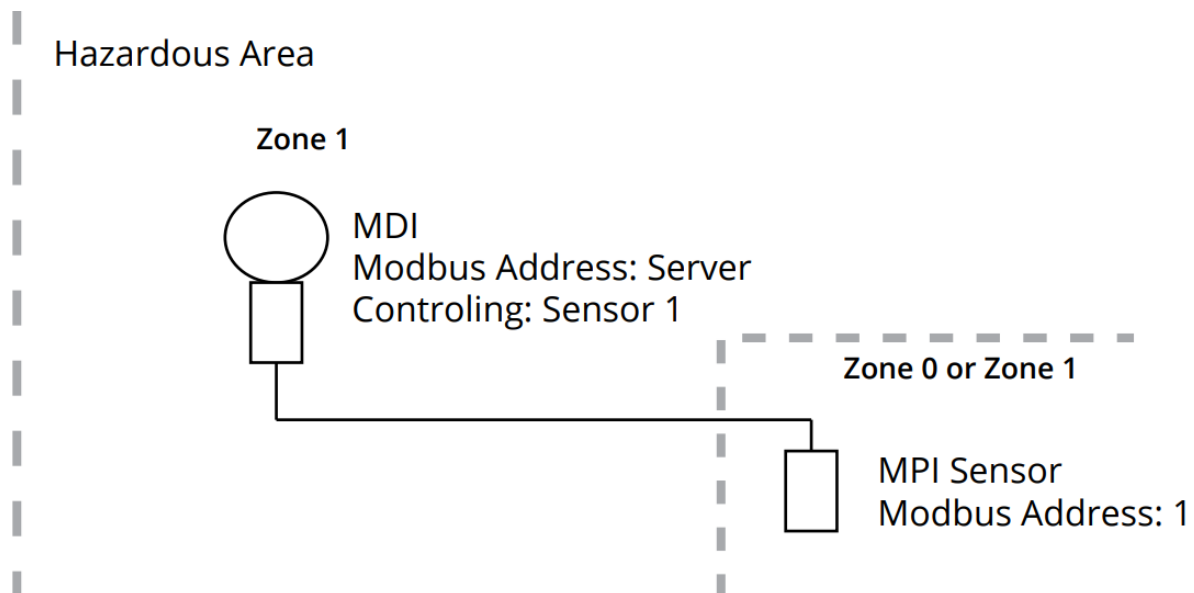

General Care

Your MPI sensor is very low maintenance and will need little care as long as it was installed correctly. However, in general, you should periodically inspect your MPI-T unit to ensure the stem is free of any heavy buildup that might impede the movement of the float(s). If sediment or other foreign matter becomes trapped between the stem and float(s), detection errors can occur.

If you need to remove the floats(s) from the stem of your MPI, be sure to note the orientation of the float(s) prior to removal. This will help ensure proper re-installation of the float(s).

Also, ensure that the housing cover is secured snugly. If the cover becomes damaged or is misplaced, order a replacement immediately.

IMPORTANT: All repairs and adjustments of the MPI-T level sensor must be made by the factory. Modifying, disassembling, or altering the MPI-T is strictly prohibited.

Repair Information


If your MPI-T level sensor needs repair, contact us via email, phone, or online chat on our website. We will issue you a Return Material Authorization (RMA) number with instructions.

- Phone: [888-525-7300](tel:888-525-7300)
- Email: sales@apgsensors.com
- Online chat at www.apgsensors.com

Specific Conditions of Use

1. Under certain extreme circumstances, the non-metallic parts incorporated in the enclosure of this equipment may generate an ignition-capable level of electrostatic charge. Therefore the equipment shall not be installed in a location where the external conditions are conducive to the build-up of electrostatic charge on such surfaces. In addition, the equipment shall only be cleaned with a damp cloth.
2. The enclosure is manufactured from Aluminium. In rare cases, ignition sources due to impact and friction sparks could occur. This shall be considered during installation.
3. Model MPXI shall be installed as per drawing 9006113.
4. Unused entries of model MPXI shall be closed with blanking elements maintaining explosion proof properties and ingress protection rating of the enclosure.
5. For information on the dimensions of the flameproof joints the manufacturer shall be contacted.
6. For model MPXI only, the Stem Assembly shall not be subject to vibrations or exposed to chemicals which might adversely affect the partition wall.


MPI-T Intrinsically Safe Modbus System Wiring with RST-6001

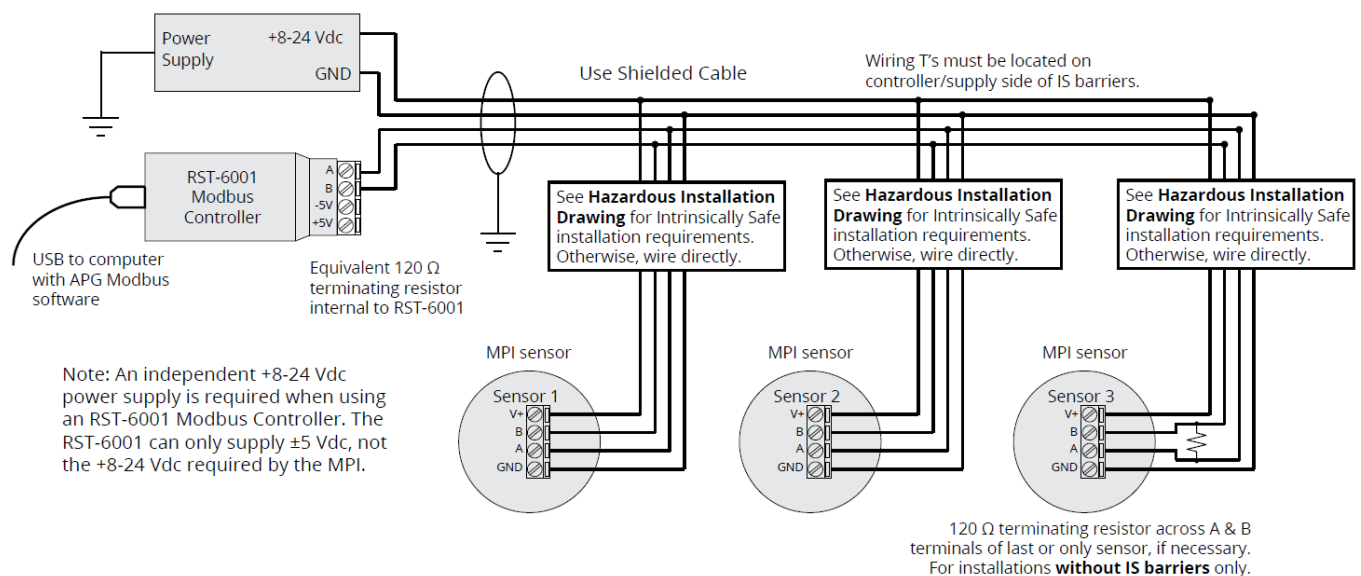

NOTE: For APG Modbus programming instructions, please see MPI user manual. APG Modbus software can be downloaded from www.apgsensors.com/support.

IMPORTANT: Refer to section 9 for Hazardous Location Wiring.

MPI – MDI with Passive Controller Use Case Diagram

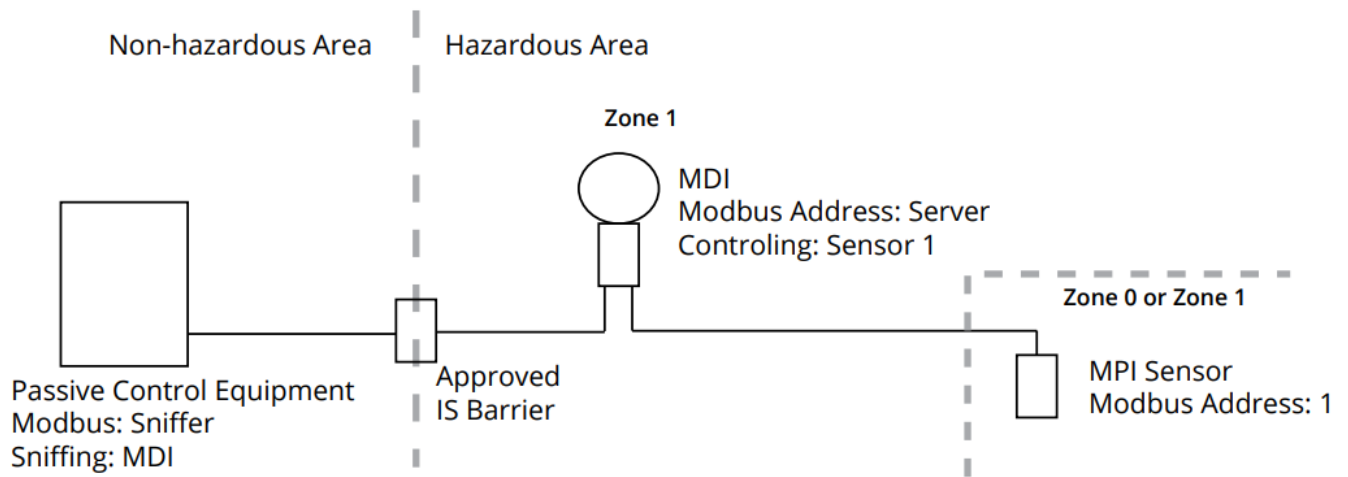

Hazardous Location

REVISIONS						
Z O N E	R E V	D E S C R I P T I O N	C H A N G E O R D E R	D A T E	A P P R O V E D	
—	B	See Change Order	CO-3982	06/01/2020	A. Fullmer	

Unclassified Location		Hazardous Location Class I, Division 1, Groups C,D T4 Class I, Zone 0, AEx ia IIB T4 Ga Ex ia IIB T4 Ga, Ta -40°C to 85°C	
<p>Associated Apparatus with Entity Parameters</p> <p> $V_{oc} \text{ (or } U_o) \leq V_{max} \text{ (or } U_i)$ $I_{sc} \text{ (or } I_o) \leq I_{max} \text{ (or } I_i)$ $P_o \leq P_i$ $C_a \text{ (or } C_o) \geq C_i + C_{cable}$ $L_a \text{ (or } L_o) \geq L_i + L_{cable}$ </p>		<p>MPI - RS485 RTU</p> <p> $V_{max} \text{ (or } U_i) = 28V$ $I_{max} \text{ (or } I_i) = 280mA$ $P_i = 850mW$ $C_i = 0.374\mu F$ $L_i = 3.50\mu H$ </p>	
RS485+	A		
RS485-	B		
V+	VIN		
V-	GND		
- Installation must be in accordance with NEC Articles 504 and 505.			
AP PR OV AL S		DA TE	



Automation Products Group, Inc.

1025 West 1700 North Logan, Utah USA

888.525.7300

PROPR
IETARY
AND C
ONFID
ENTIAL

THIS D
RAWIN
G IS TH
E PRO
PERTY
OF AUT
OMATI
ON PR
ODUCT
S GRO
UP, INC
.

LOGAN
, UTAH
AND M
AY NOT
BE
USED,
REPRO
DUCED
, PUBLI
SHED,
OR

DISCL
OSED
TO OT
HERS
WITHO
UT WRI
TTEN C
ONSEN
T OF T
HE CO
MPANY
.


IF LOA
NED, IT
IS SUB
JECT T
O RET
URN U
PON D
EMAND
AND M

DR WN	6/5/ 201 8					
C. Chi des ter						
CH KD	8/2 9/2 018					
S. Hut chin s						
AP VD	8/2 9/2 018					
R. Bar son						
CONTRA CT						
MATL						
		S I Z E A	CAG E C ODE 5279 7	PART NO VARIOUS	DOCUMENT NO 9005491	R E V B

	AY NOT BE USED I N ANY WAY DI RECTL Y OR I NDIRE CTLY DETRI MENTA L TO T HE CO MPANY .	FINISH		SHEET 1 OF 2	
--	--	--------	--	--------------	--

IMPORTANT: Drawing 9005491 is specific to MPI.

Documents / Resources

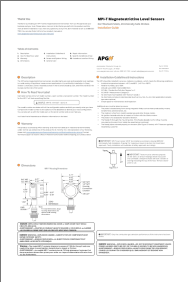	<p>APG MPI-T Series Magneto Strictive Level Sensor [pdf] Instruction Manual MPI-T Series Magneto Strictive Level Sensor, MPI-T Series, Magneto Strictive Level Sensor, Str ictive Level Sensor, Level Sensor, Sensor</p>
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.